## SIGNATURE URETHANE PLINTH BLOCK

### SAFETY INSTRUCTIONS

Make sure to use the correct tools recommended.

Wear proper protective gear.

Follow fixture, power tools, paint manufacturers' instructions, and users manuals. Use common sense and follow good construction practices.

### TOOL & MATERIAL CHECKLIST

- $\hfill\square$  construction adhesive
- $\Box$  caulk
- caulking gun
- 🗆 nail gun
- finishing nails
- $\Box$  extra fine sandpaper
- □ paint


# STEP BY STEP

- Apply adhesive to the back of the plinth block and press firmly against the installation surface. Caulk can be used to fill in any gaps around the edges if needed.
- 2. Wipe off any excess caulk with a damp rag.
- 3. Complete installation with small finishing nails.
- 4. Fill nail holes with caulk.
- 5. Apply any necessary touch up paint.

### SPECIAL INSTRUCTIONS AND NOTES

- It is highly recommended that you paint/finish the plinth block with 100% acrylic latex paint before installation. Once installed, you can apply any necessary touchup paint/finish.
- Clean installation surface and back of plinth block of all dirt and dust with a clean dry cloth.
- Measure and mark the location where it is going to be installed.

### EXAMPLE INSTALLATION DIAGRAM

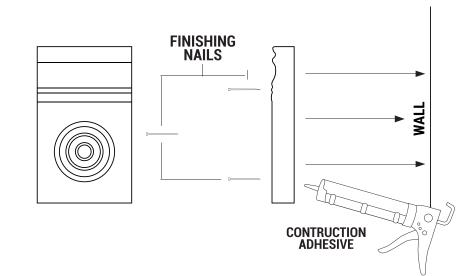

#### We Can Help. Call (866) 607-0453



Industry leading manufacturer of urethane, PVC, wood, rustic, and metal millwork