



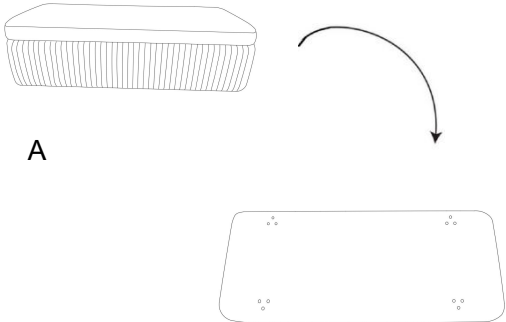
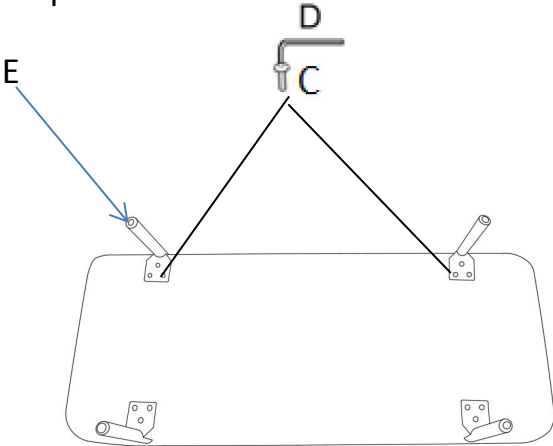
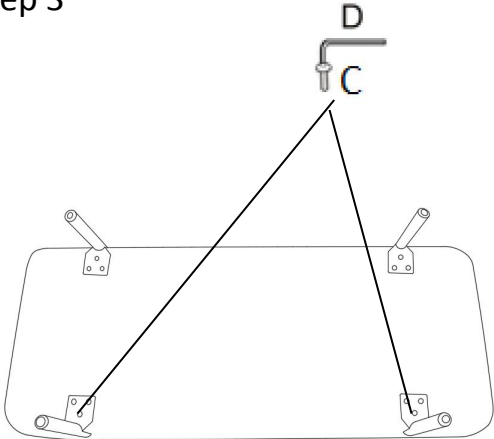


ASSEMBLY INSTRUCTION

<<Before assembling,read all the instruction>>

 A	 B	 M6x20 12pcs C	 M6 D
--	--	---	--

Note: Put all the screws into the hole site,And then tighten them. Do not tighten one by one

<p>Step 1</p>  A	<p>Step 2</p>  E
<p>Step 3</p> 	<p>Step 4</p> 