

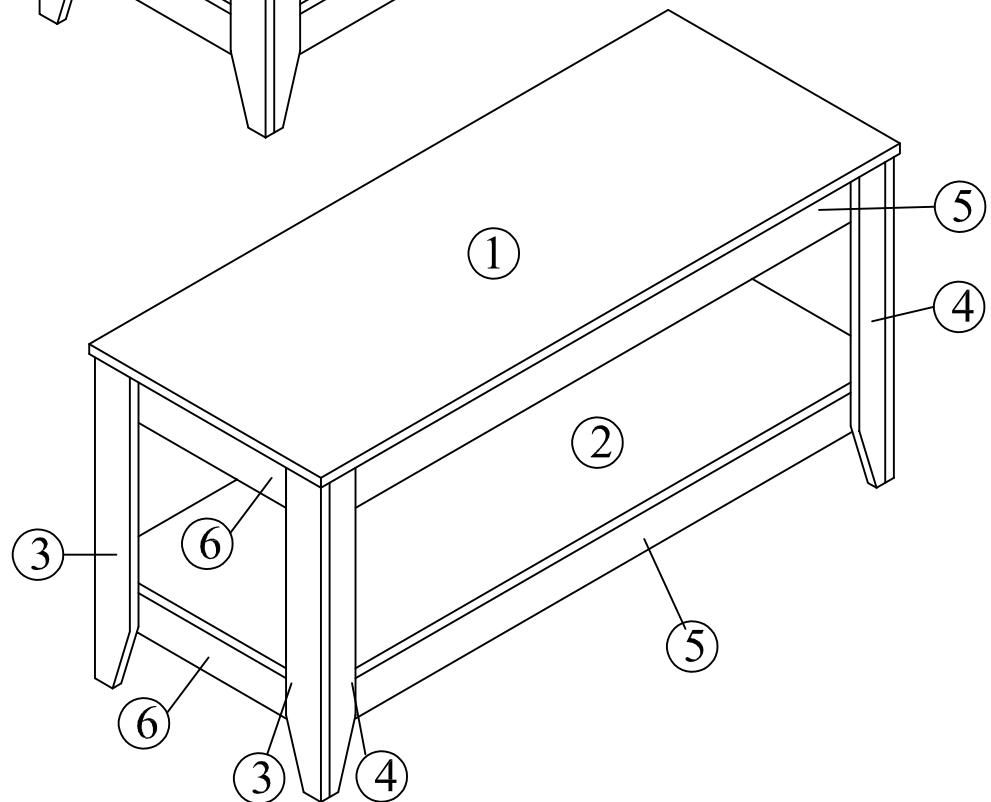


Assembly Instructions

Part List		QTY	Hardware		QTY
1	Top Panel	1	A	Allen Key M4	1
2	Middle Panel	1	B	Mini Fix Bolt	28
3	Leg Panel (L)	4	C	Mini Fix Housing	28
4	Leg Panel (R)	4	D	Mini Fix Cap	28
5	Large Vertical Panel	4	E	CSK Screw M4x30mm	16
6	Small Vertical Panel	4	F	White Nail	8

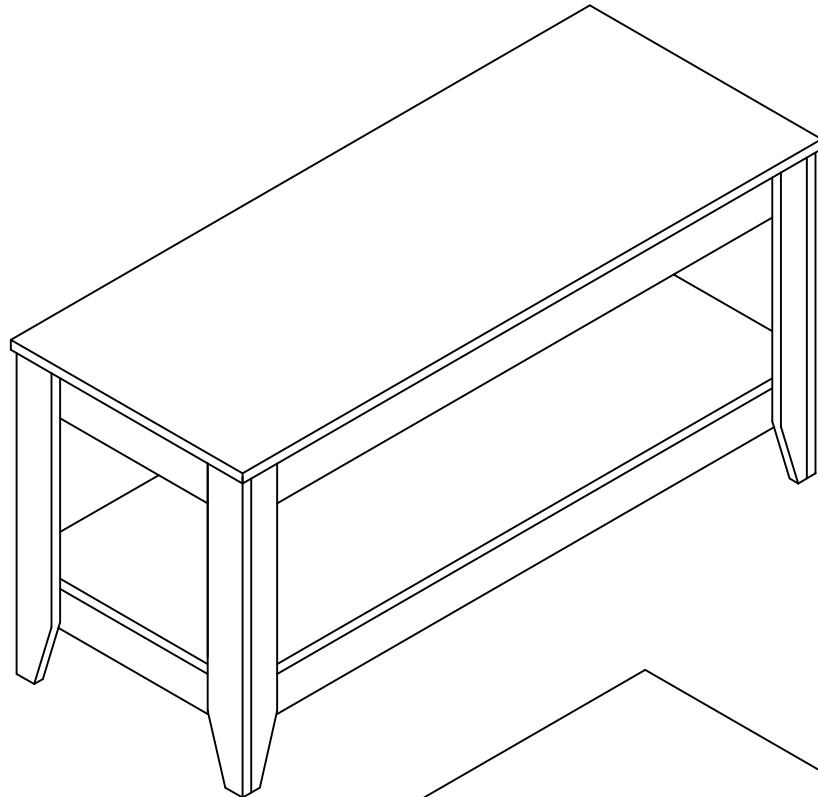


Step 1

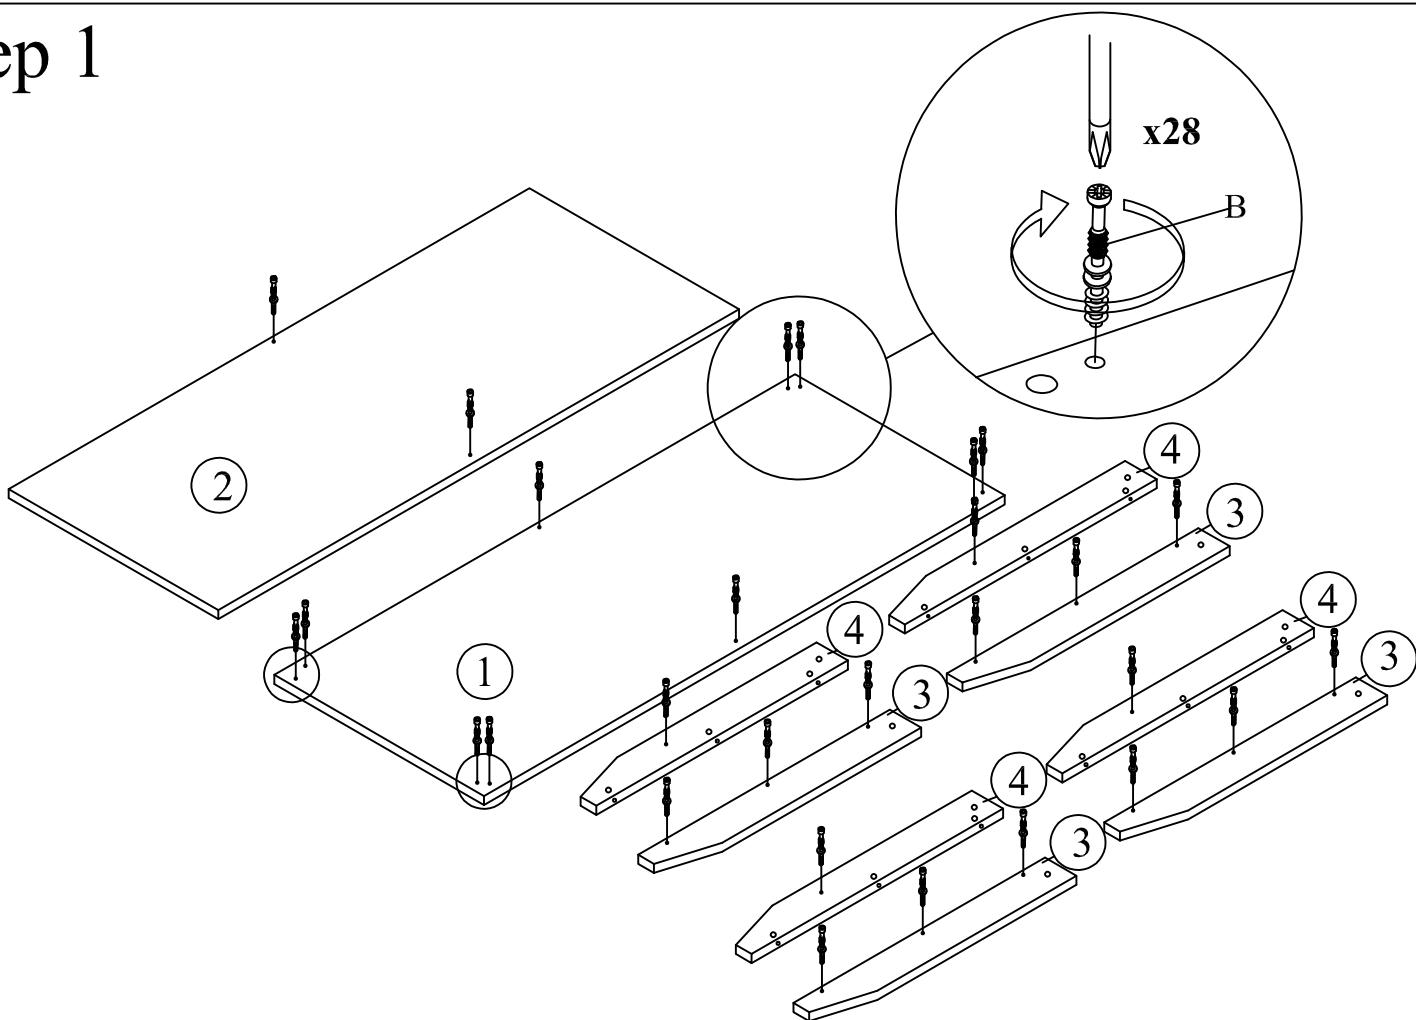


Step 2

X4


This is how a mini fix works...

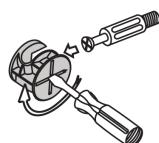

The head of the mini fix housing goes into the open mouth of the mini fix bolt. You then turn the mini fix housing so it tightens over the mini fix bolt.

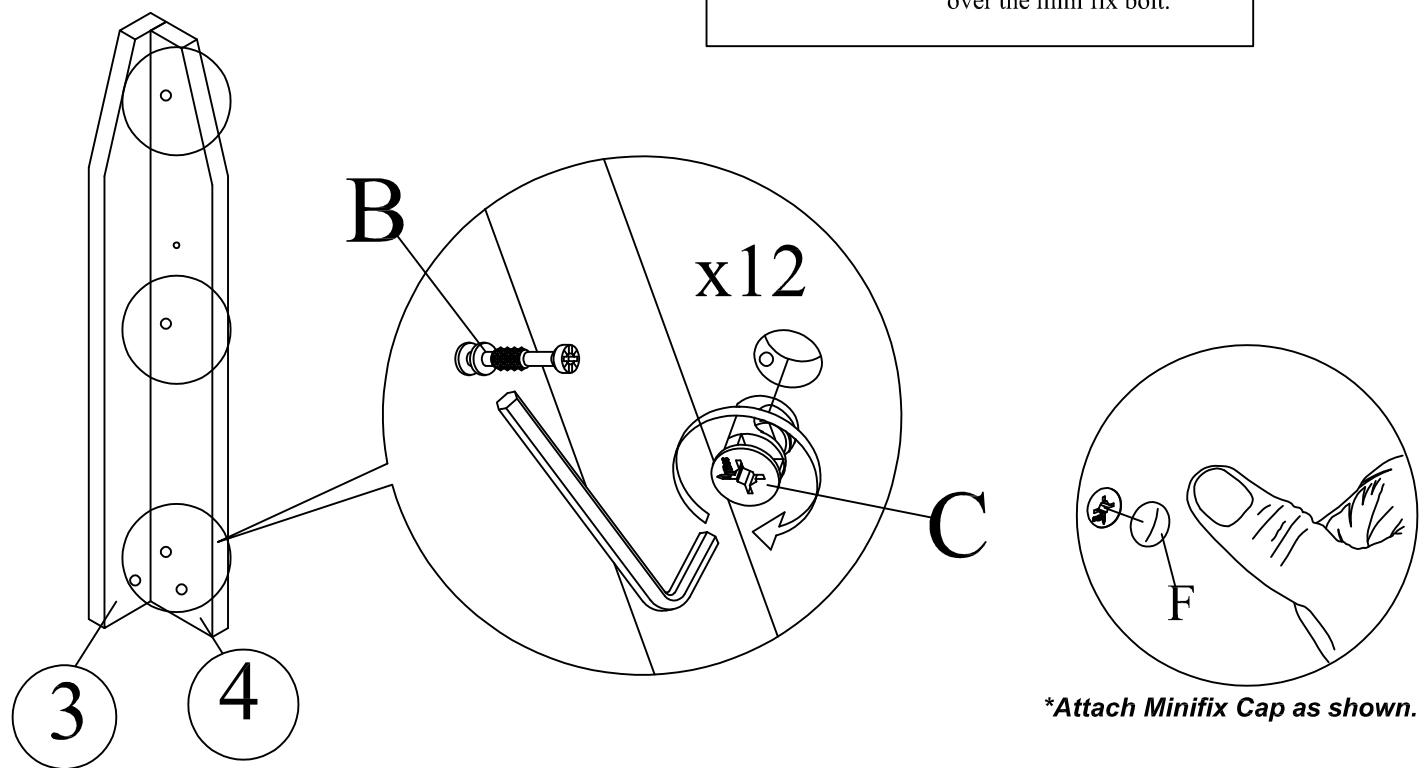


Step 3

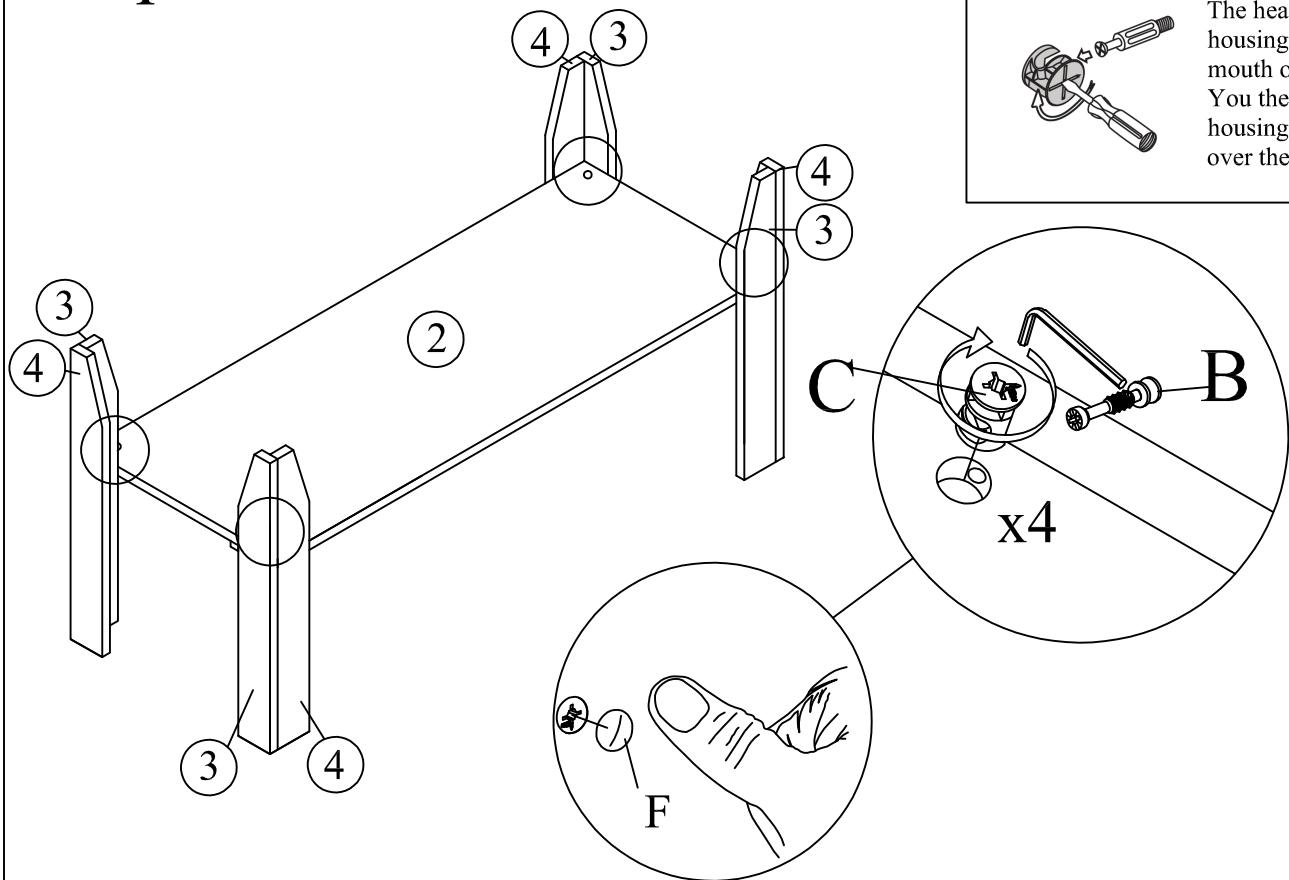

This is how a mini fix works...

The head of the mini fix housing goes into the open mouth of the mini fix bolt. You then turn the mini fix housing so it tightens over the mini fix bolt.

Step 4

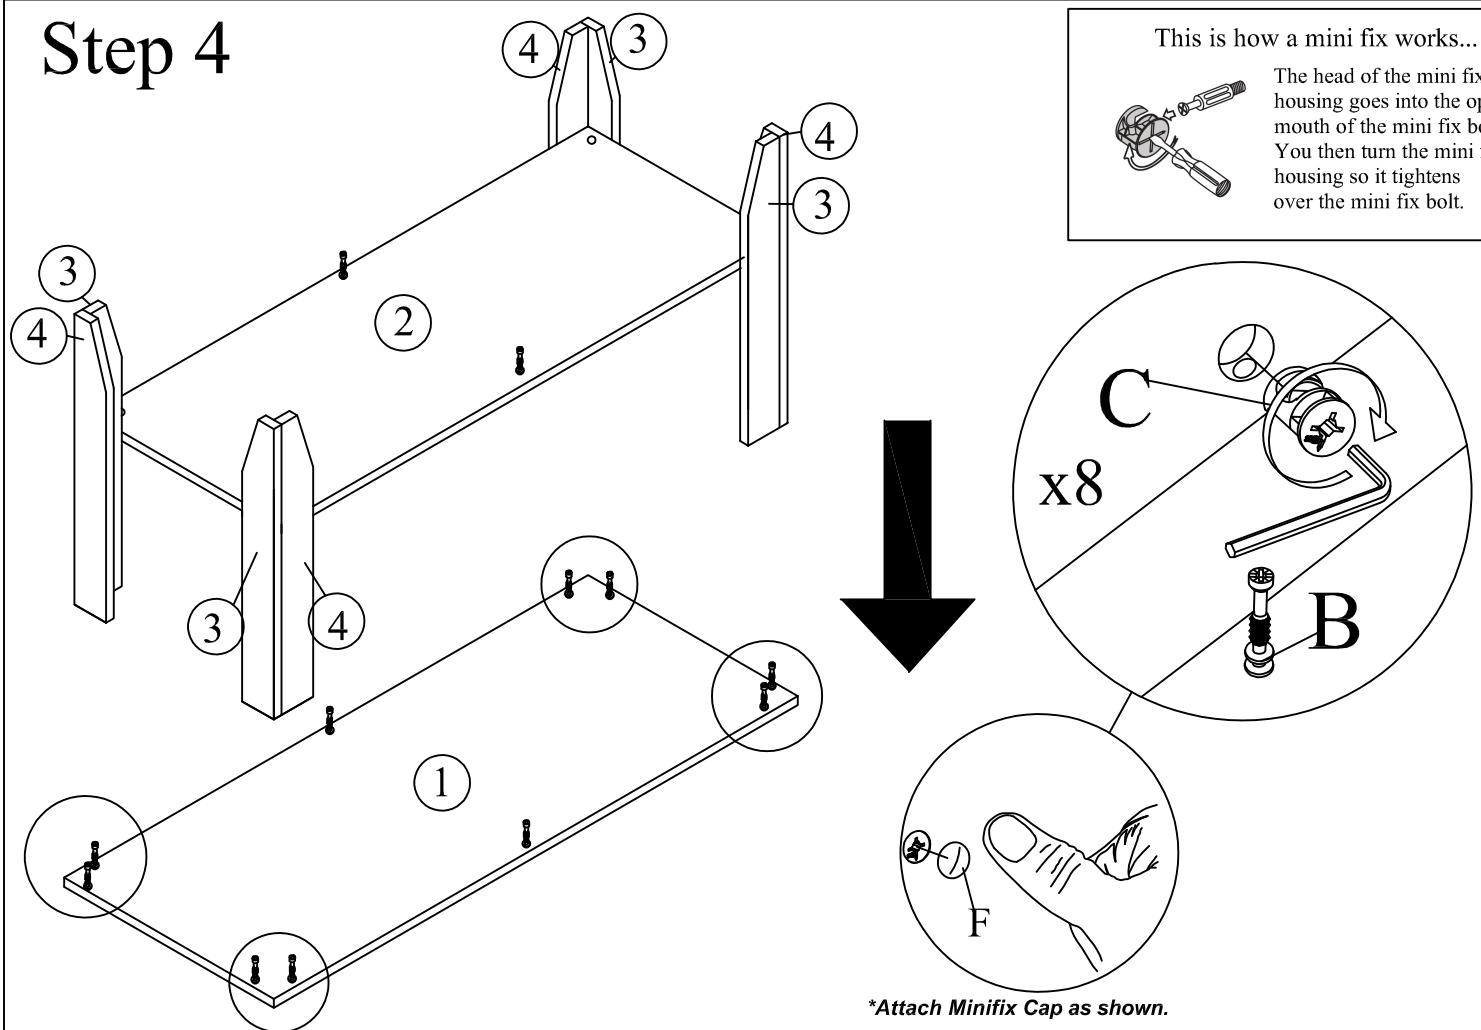


This is how a mini fix works...


The head of the mini fix housing goes into the open mouth of the mini fix bolt. You then turn the mini fix housing so it tightens over the mini fix bolt.

*Attach Minifix Cap as shown.


Step 5

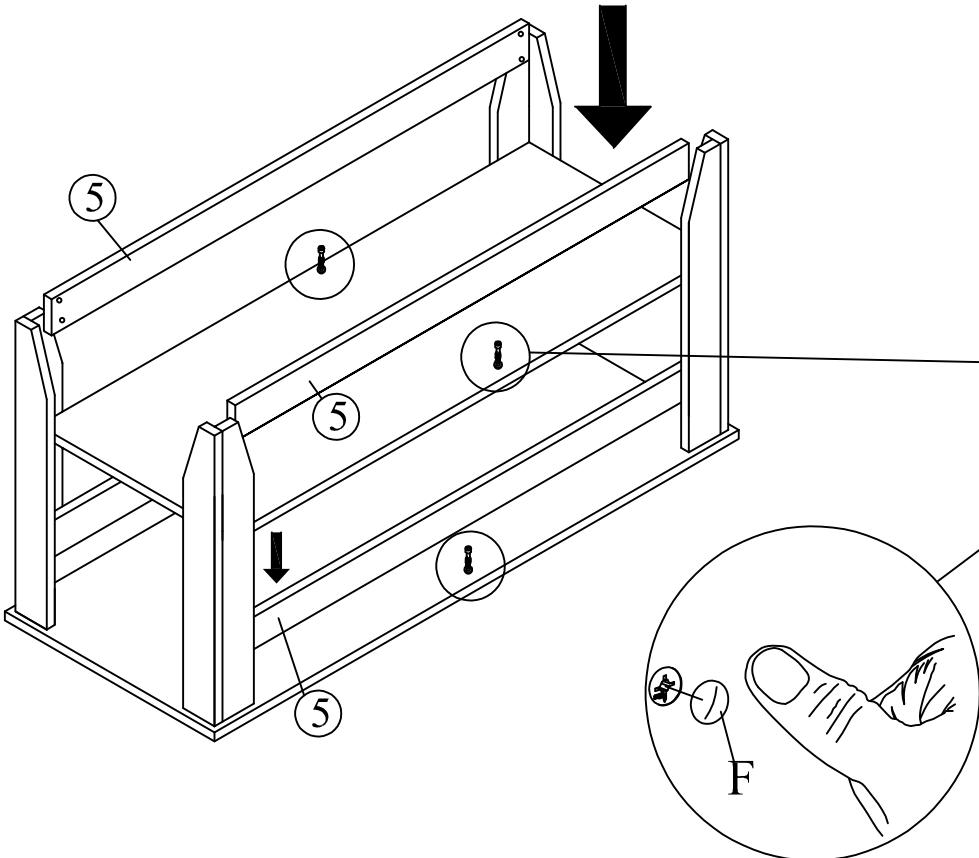

This is how a mini fix works...

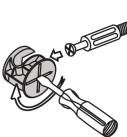


The head of the mini fix housing goes into the open mouth of the mini fix bolt. You then turn the mini fix housing so it tightens over the mini fix bolt.

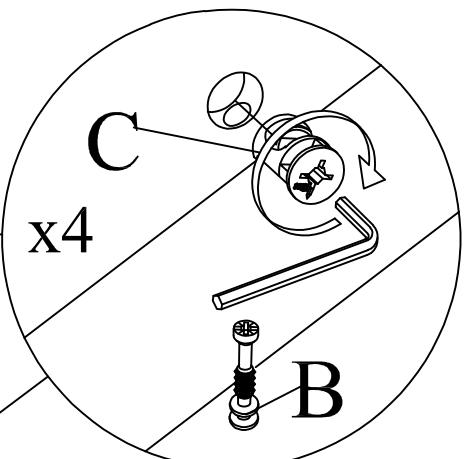

*Attach Minifix Cap as shown.

Step 6

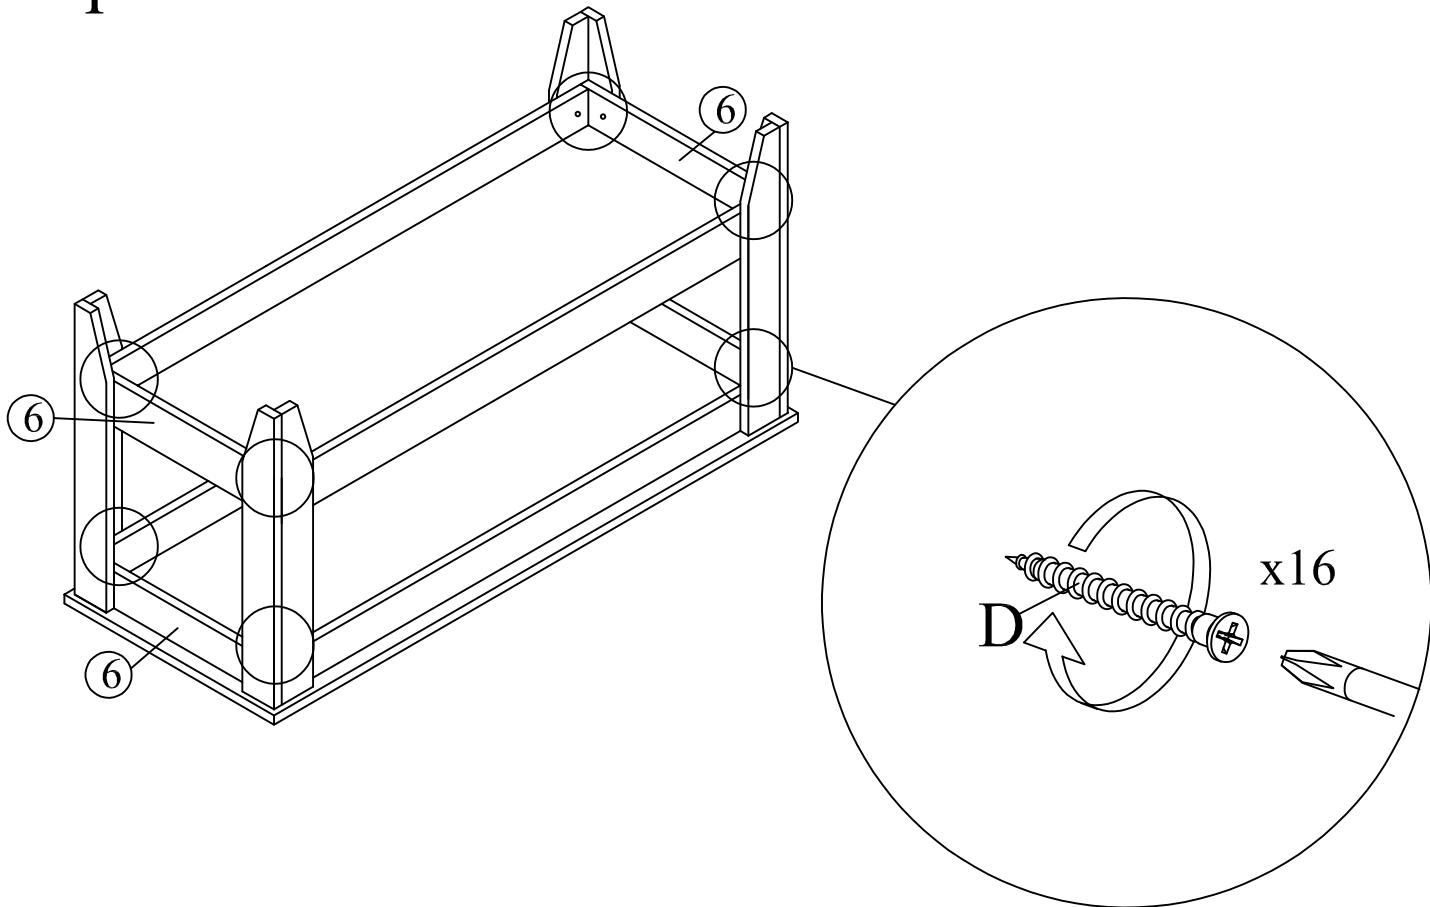

Step 7

