


Computer Desk

Instruction Manual

D-F01-31IN

D-F01-40IN

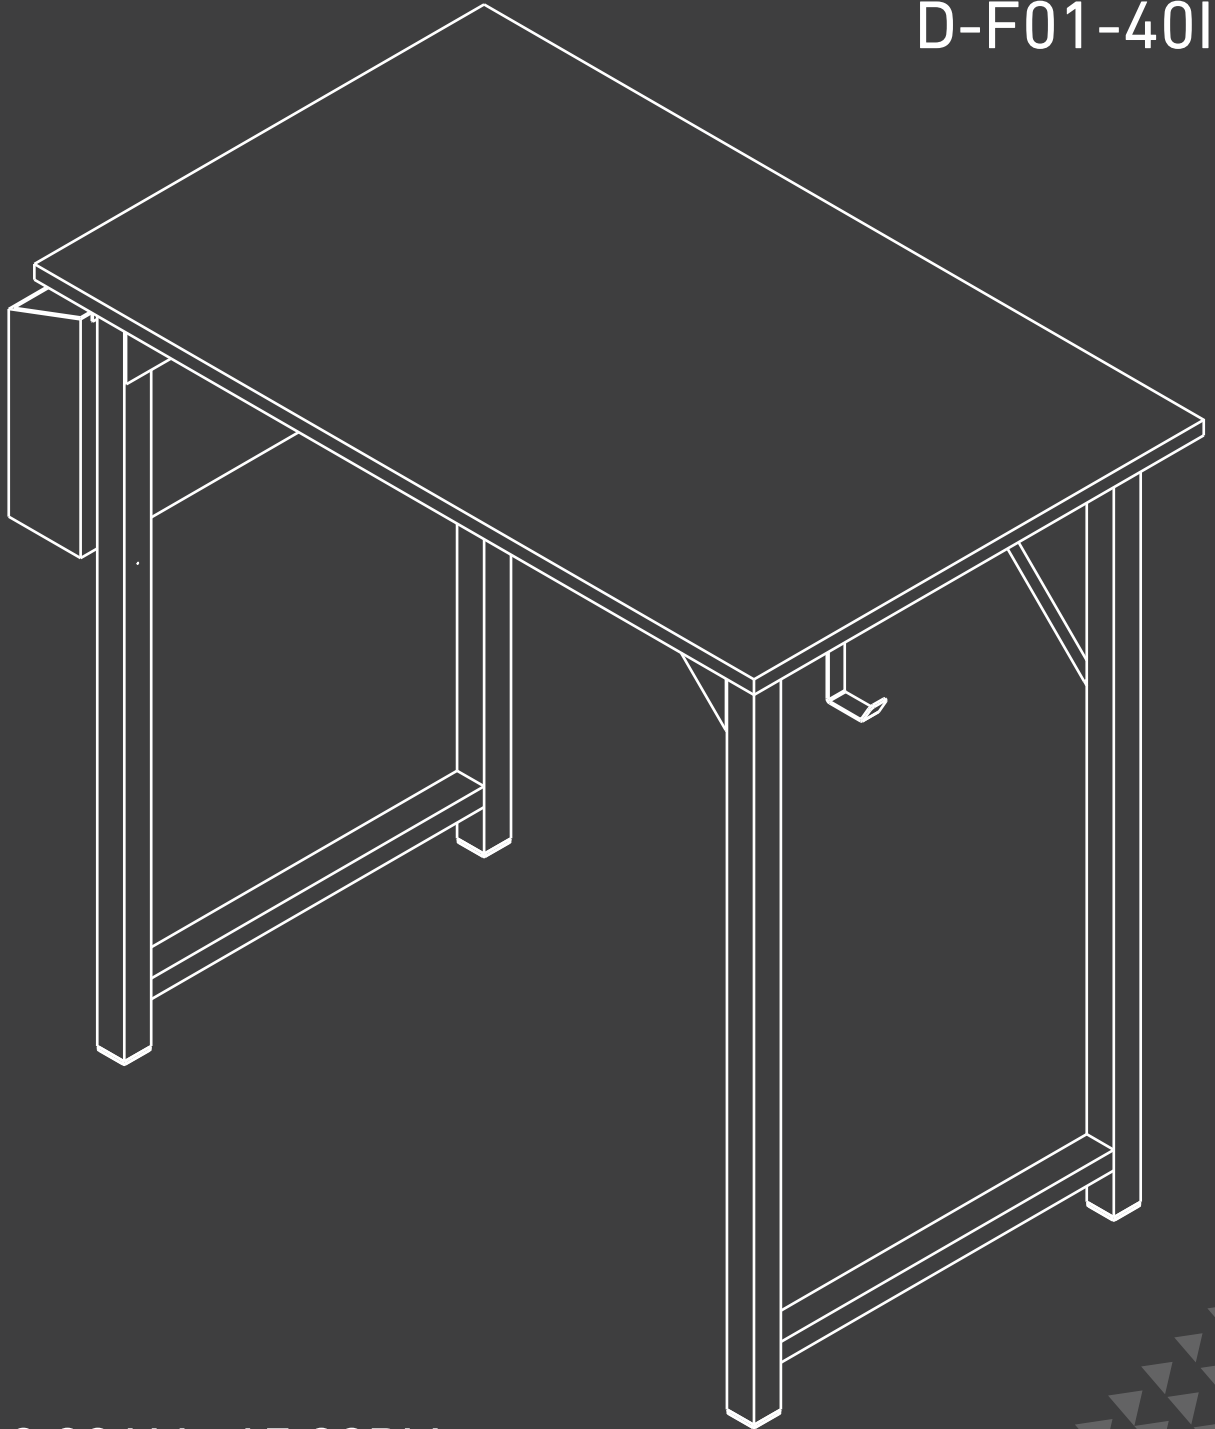


🕒 EST 9:00AM--17:00PM

✉️ HJ-Customer-Service@outlook.com

☎️ (909)637-7665 | (909)637-7593


1 Component List

A X2

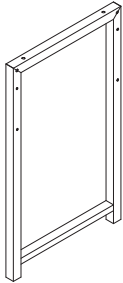


Leg

B X2

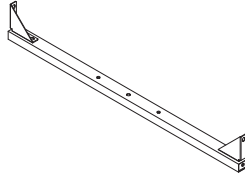


Crossbar

C X1

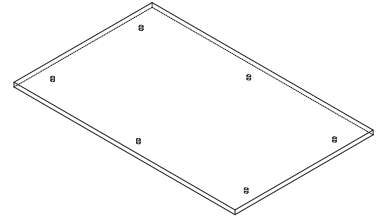


Board

D X2

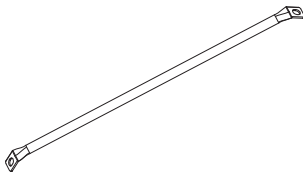


Slant support

E X1



Hook


F X1

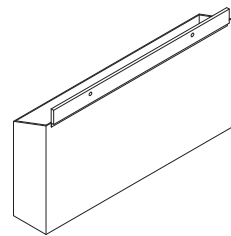

Storage bag

2 Supplied Parts and Hardware


1 X11



M6x16mm

Screws


2 X10

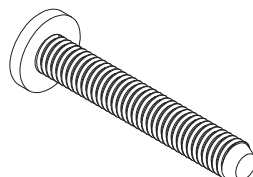


M6x30mm

Screws

3 X1




Wrench

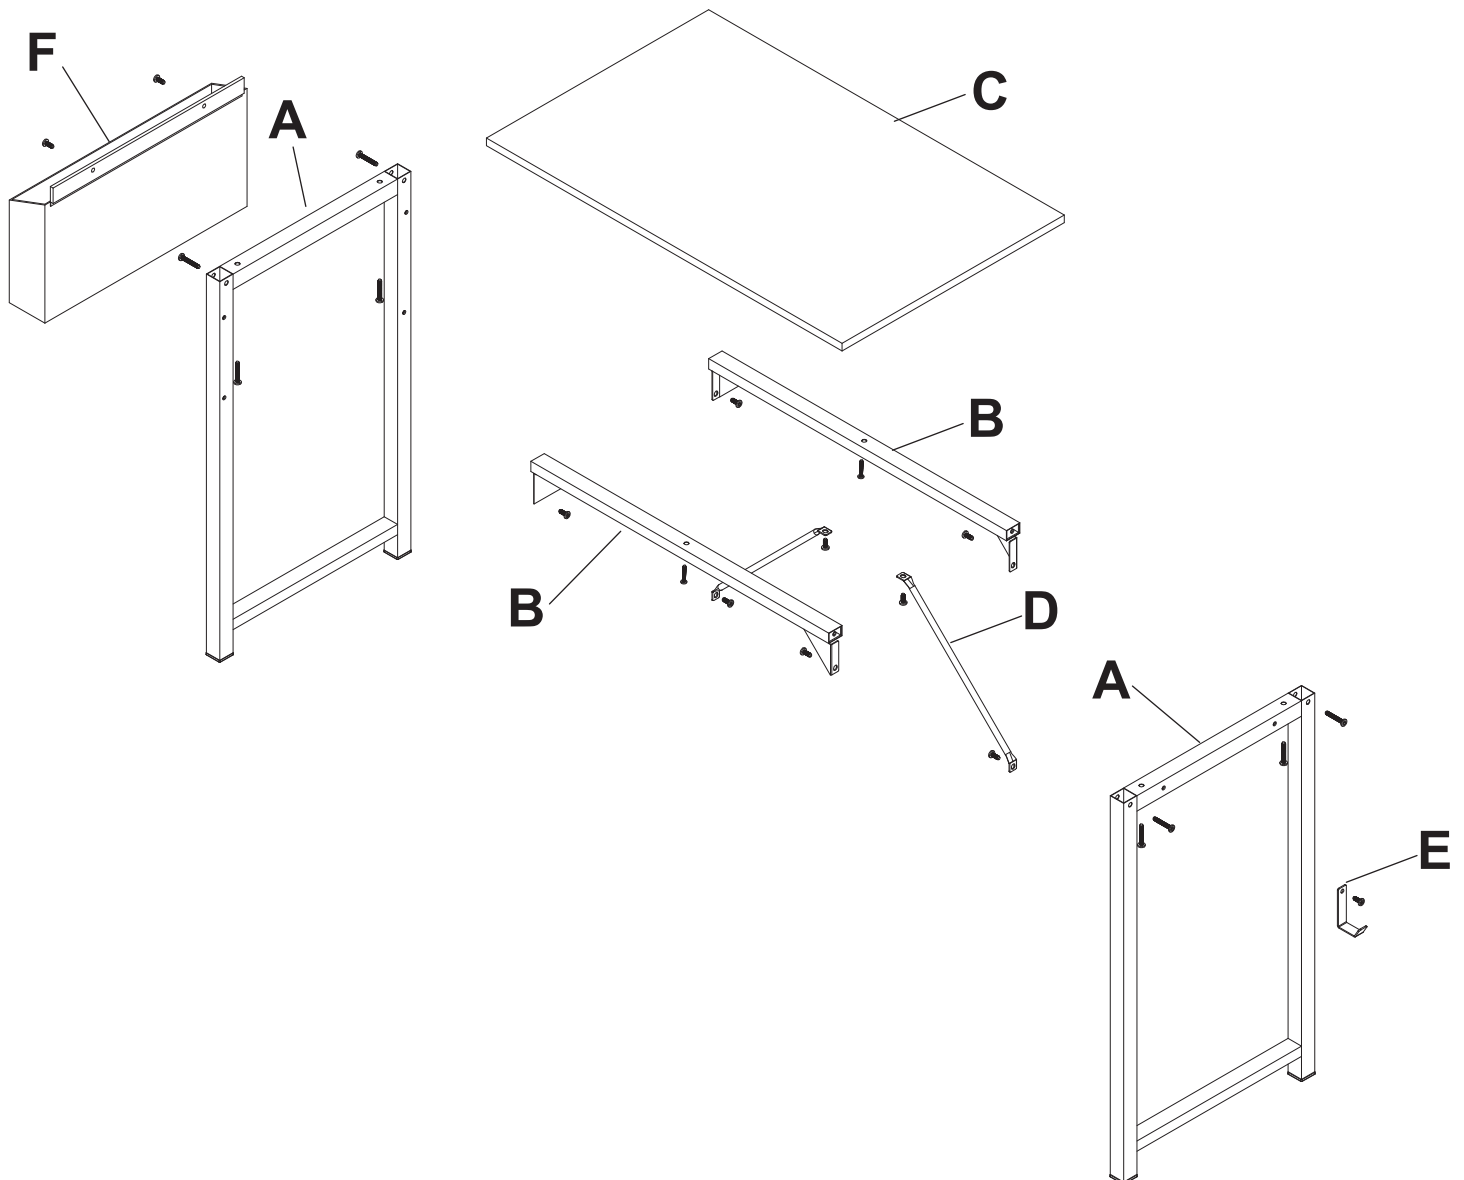

ATTENTION:

1. Please do not wipe the desk with corrosive liquids.
2. Please take good care of the parts to avoid children's contact and accidental eat in.
3. Please do not place overheated kitchenware and tableware to avoid damaging the desk.

Step 1

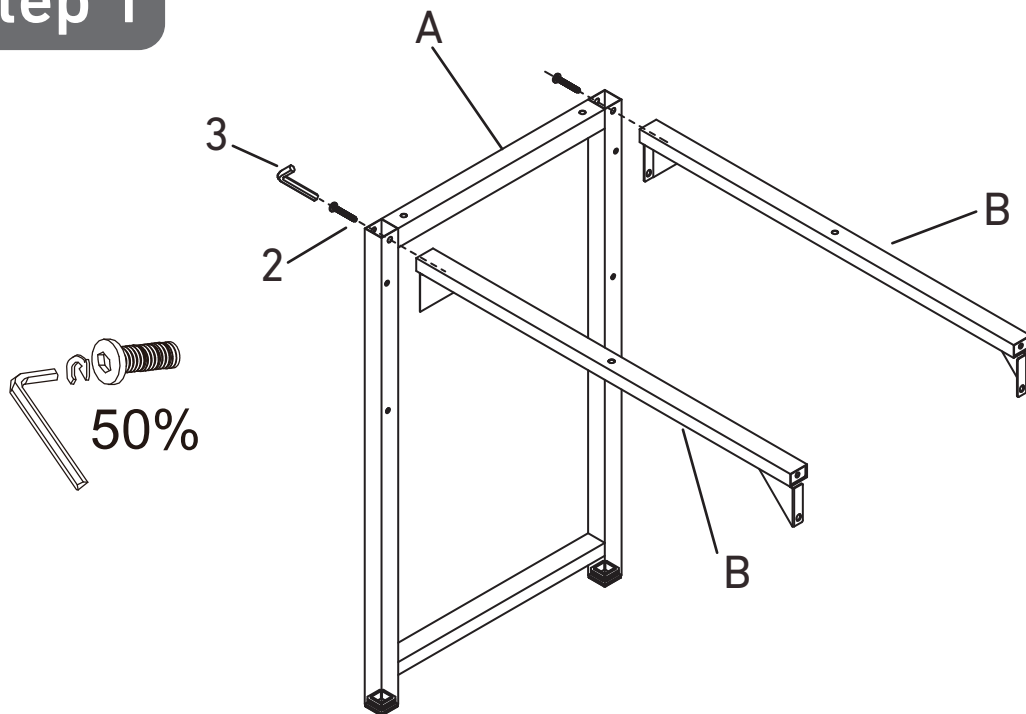


	
M6X30mm	
2x2	3

Connect the crossbar **(B)* 2** to the front side of the support leg **(A)** using a wrench **(3)** and screws **(2)* 2**.

NOTE: The screws are tightened by 50% first.

Step 2


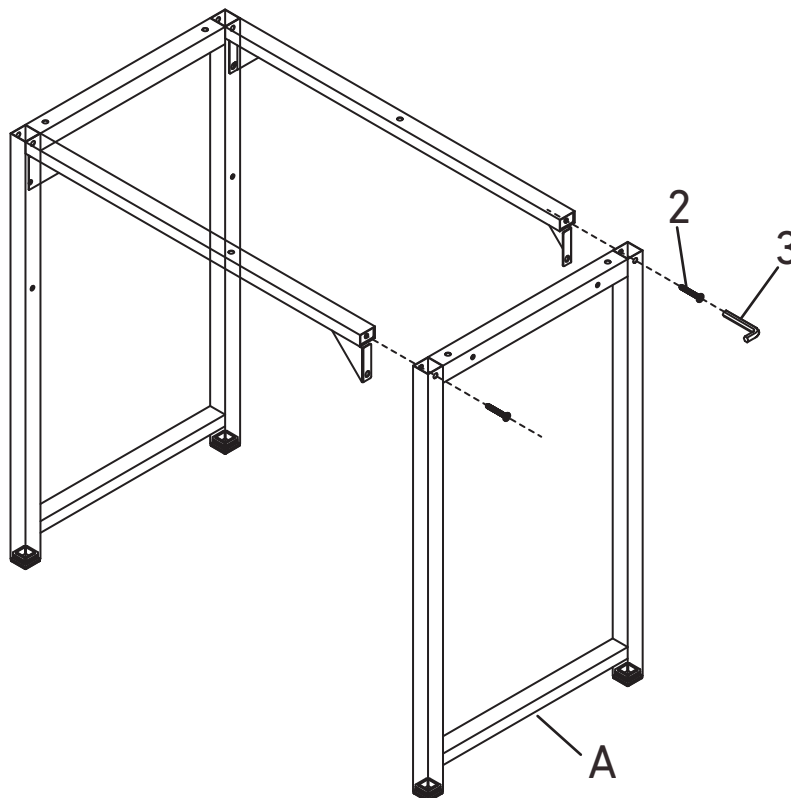


	
M6X30mm	
2x2	3

Connect the support leg **(A)** to the installed desktop frame using a wrench **(3)** and screws **(2) * 2**.

NOTE: The screws are tightened by 50% first.

Step 3

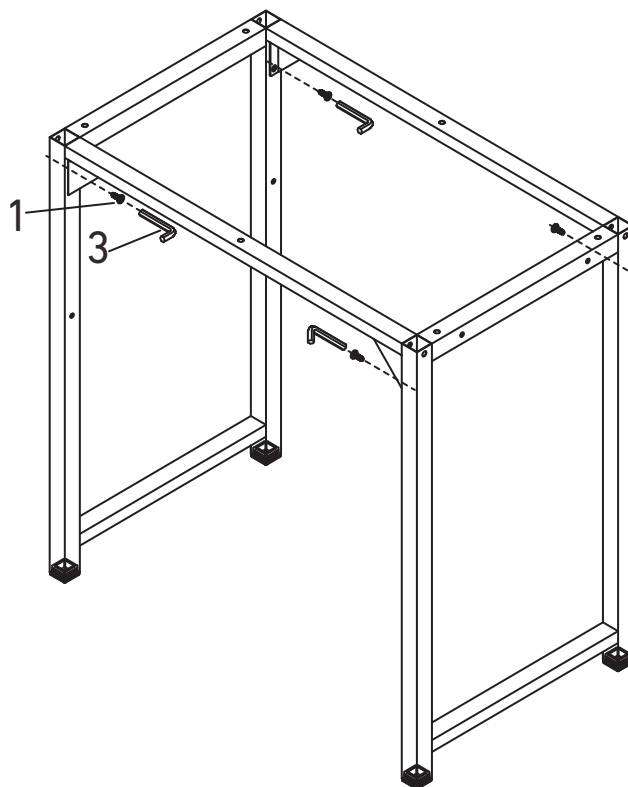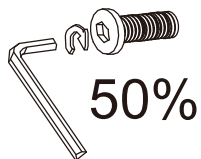


	
M6X16mm	
1x4	3


Use a wrench **(3)** and screws **(1)* 4** to secure the remaining four screw holes of the crossbar **(B)*2** to the installed desktop frame.

NOTE: The screws are tightened by 50% first.

Step 4

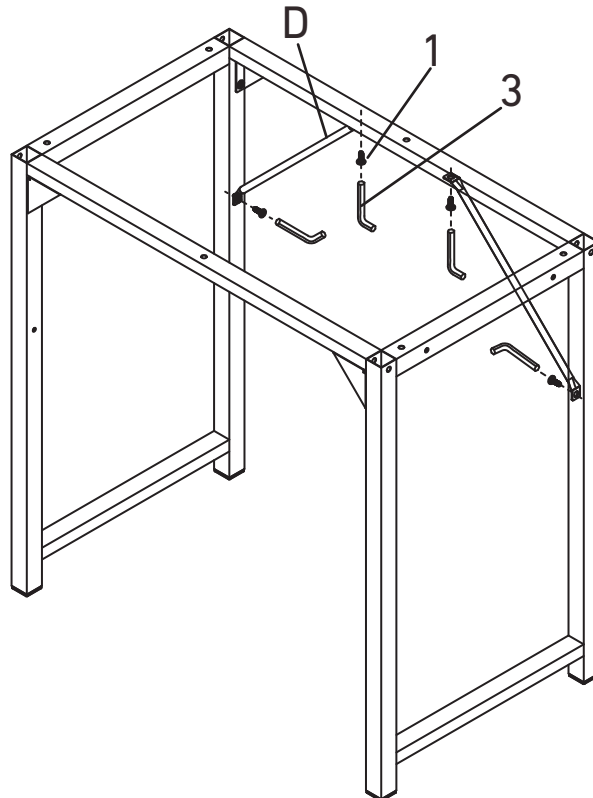


	
M6X16mm	
1x4	3

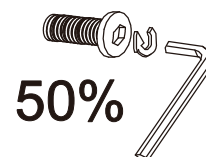


Use wrench **(3)** and screws **(1) * 4** to connect slant support **(D) * 2** to the support legs **(A) * 2** and crossbar **(B)**.

NOTE: The screws are tightened by 50% first.

Step 5

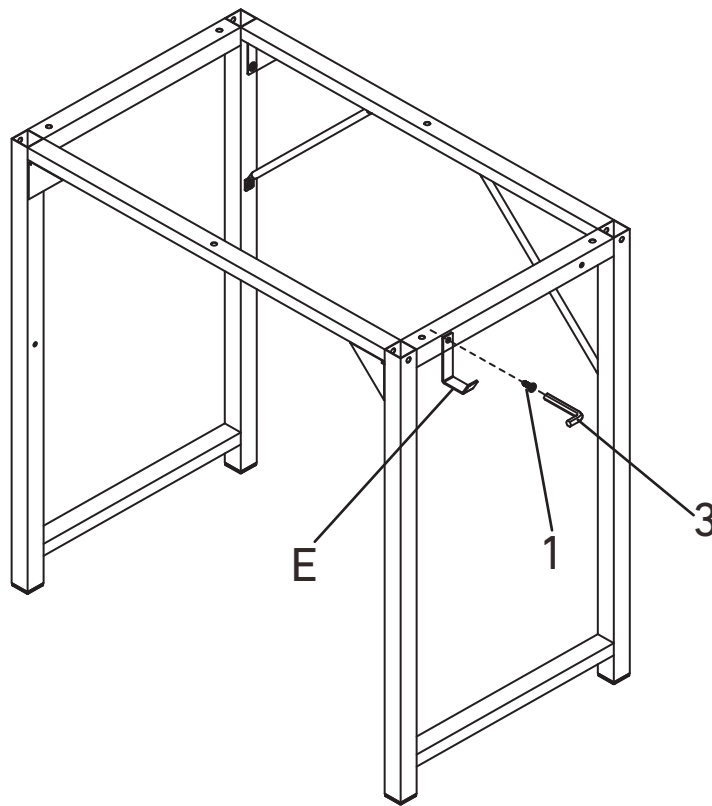


	
M6X16mm	
1x1	3

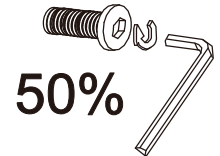


Connect the hook **(E)** to the support leg **(A)** using a wrench **(3)** and a screw **(1)** * 1.

NOTE: The screws are tightened by 50% first.

Step 6

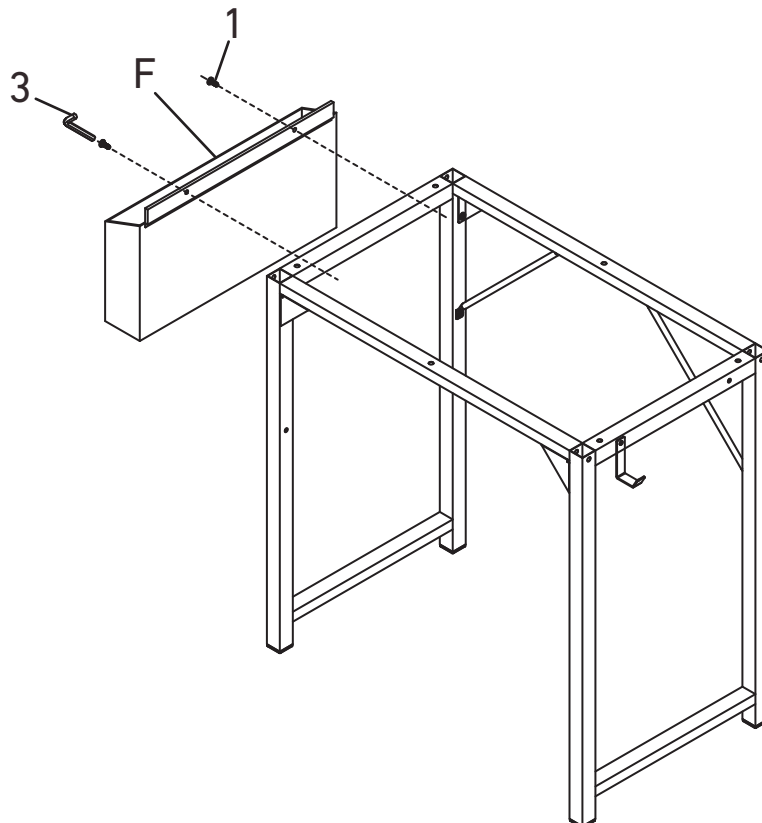

	
M6X16mm	
1x2	3

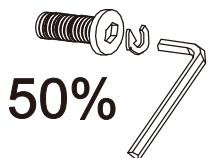


Secure the storage bag **(F)** to the support leg **(A)** using a wrench **(3)** and screws **(1)** * 2.

NOTE: The screws are tightened by 50% first.

Step 7


	
M6X30mm	
2x6	3

100% 

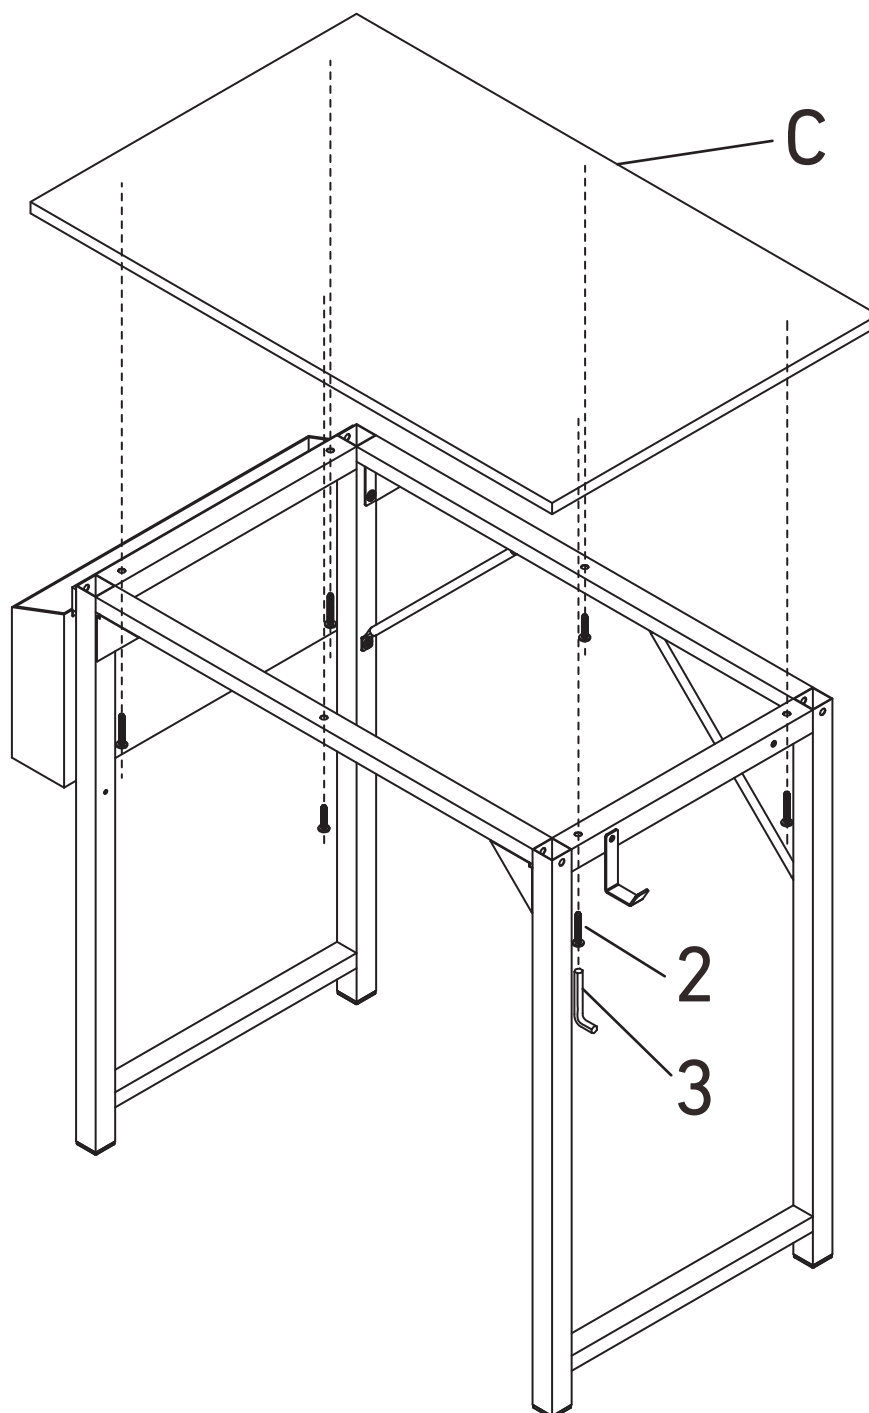

Connect the board **(C)** to the support legs **(A)*2** and crossbar **(B)*2** using a wrench **(3)** and screws **(2) * 6**.

NOTE: Ensure that the frame structure is flush when installing the desktop board.
Once installation is complete, tighten all screws 100%.

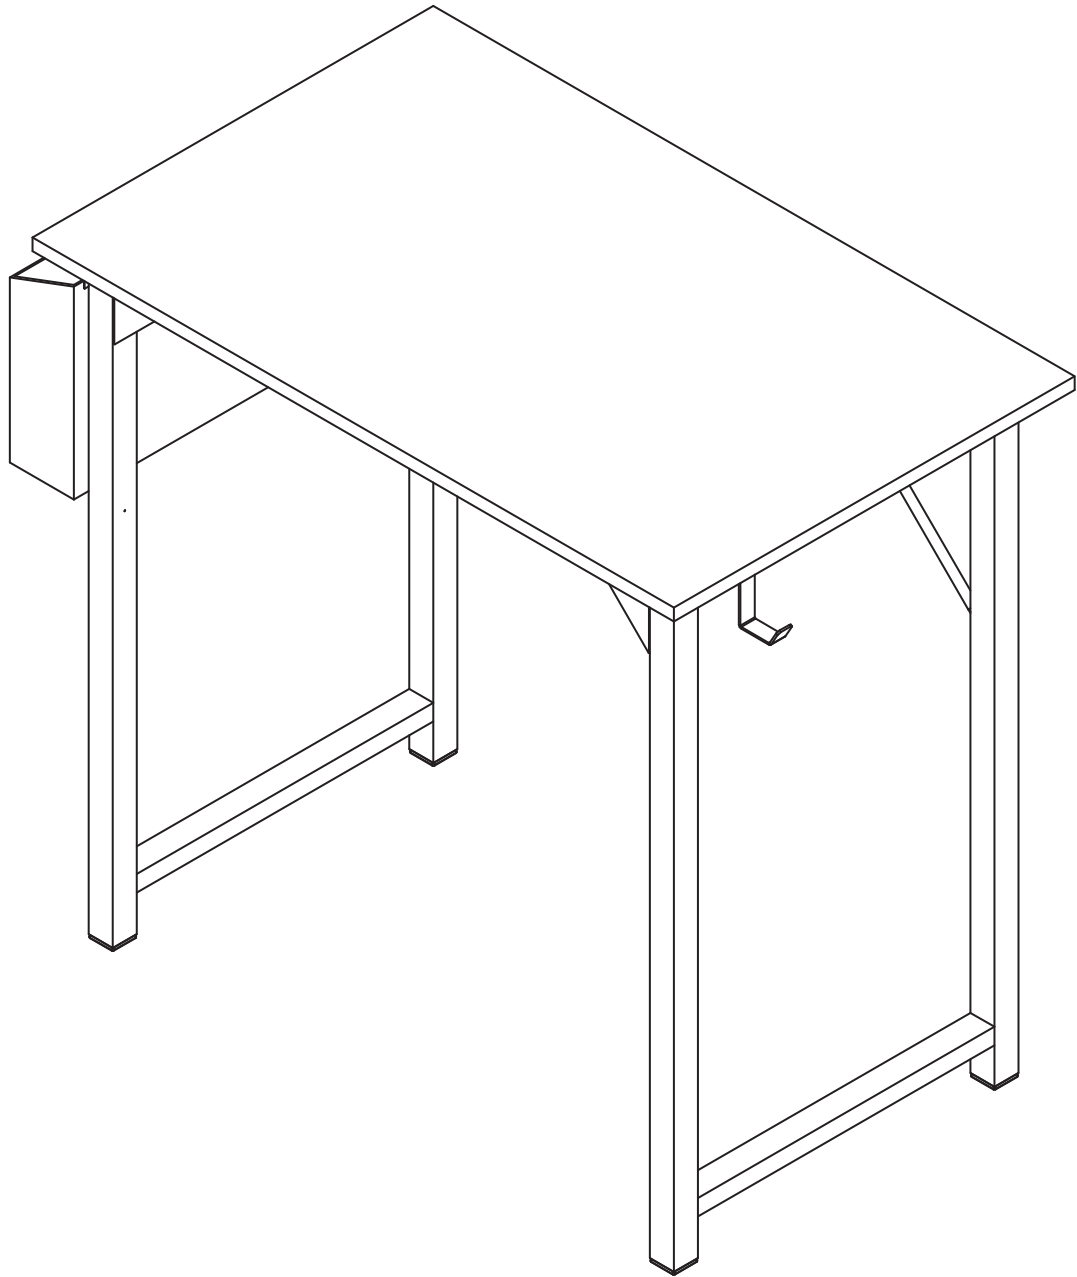

Technical Support

(909)637-7665 | (909)637-7593

Other Info

HJ-Customer-Service@outlook.com

Thank you for choosing this product. We strive to provide you with the best quality products and service in the industry. Should you have any issues, please don't hesitate to contact us.