

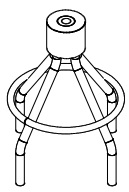







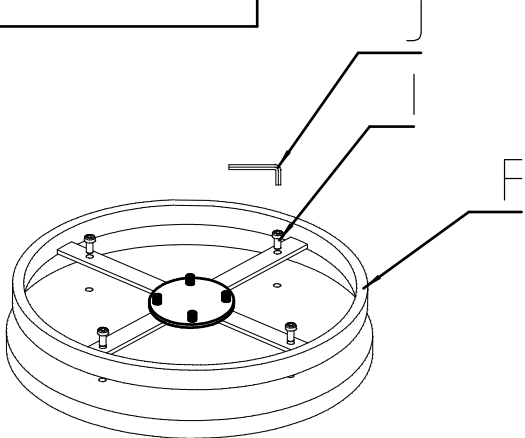


<b>Ax1</b> 	<b>Bx1</b> 	<b>Cx1</b> 	<b>Dx1</b> 	<b>Ex4</b> 
<b>Fx1</b> 	<b>Gx4</b>  M8	<b>Hx1</b>  12mm	<b>Ix4</b>  M6*20mm	<b>Jx1</b>  5mm

**Kx1**



M30



The 4 screws under the seat need to be screwed at the same time, then locked with a wrench.

