




INSTRUCTION

NFIOSCBOAK

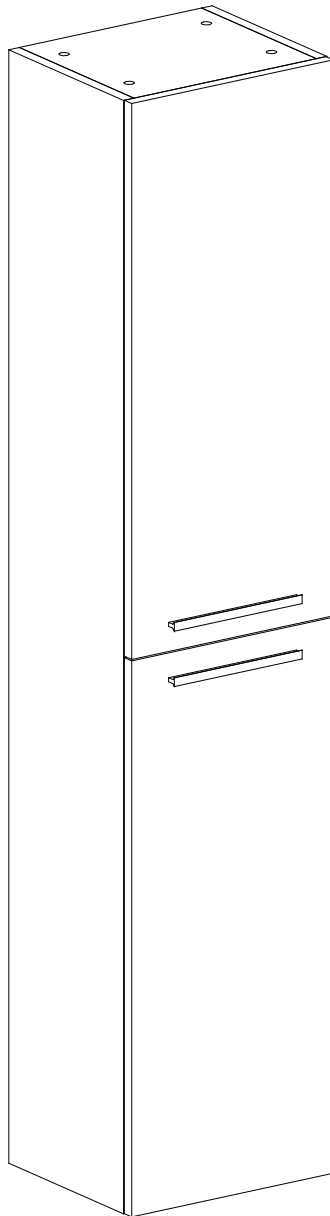


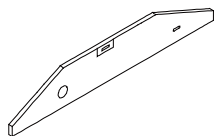


Spirit level




Tape measure
(3m~5m)

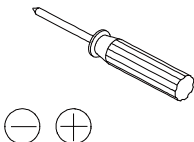

Screwdriver

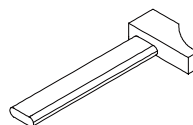

Hammer

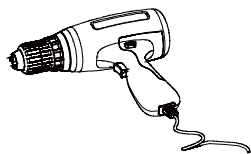


Electric drill





Drill bit
(Ø8)




Pencil

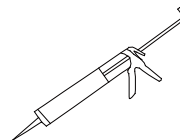


Silicone

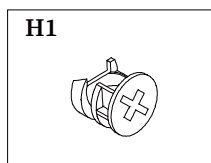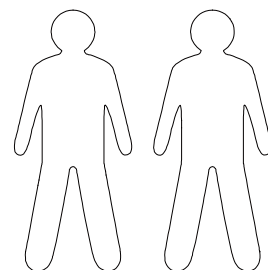


16*

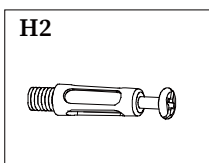


16*

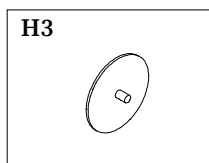


16*

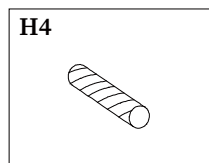


28*φ8*30

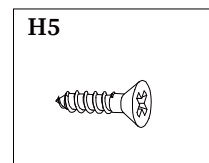


16*φ4*16

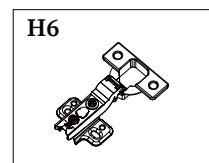


4*

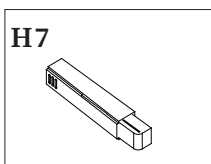


2*

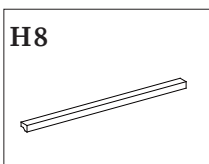


2*

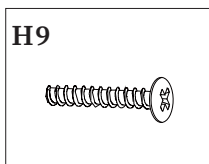


4*φ4*24

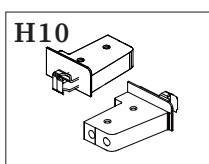


2*

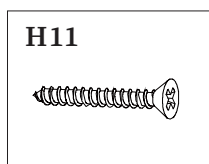


8*Ø4x28

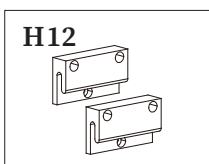



1*

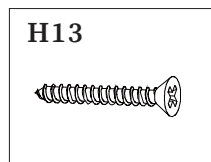



6*Ø4x50

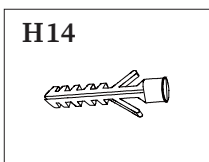


6*Ø8x40

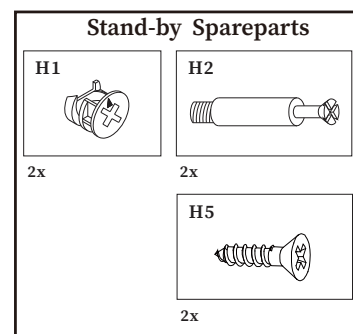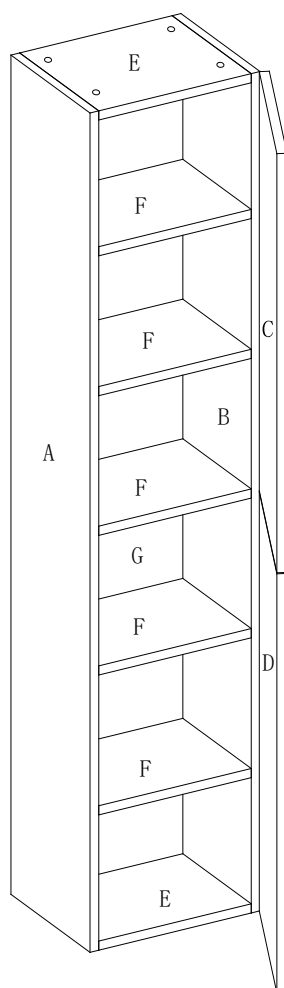

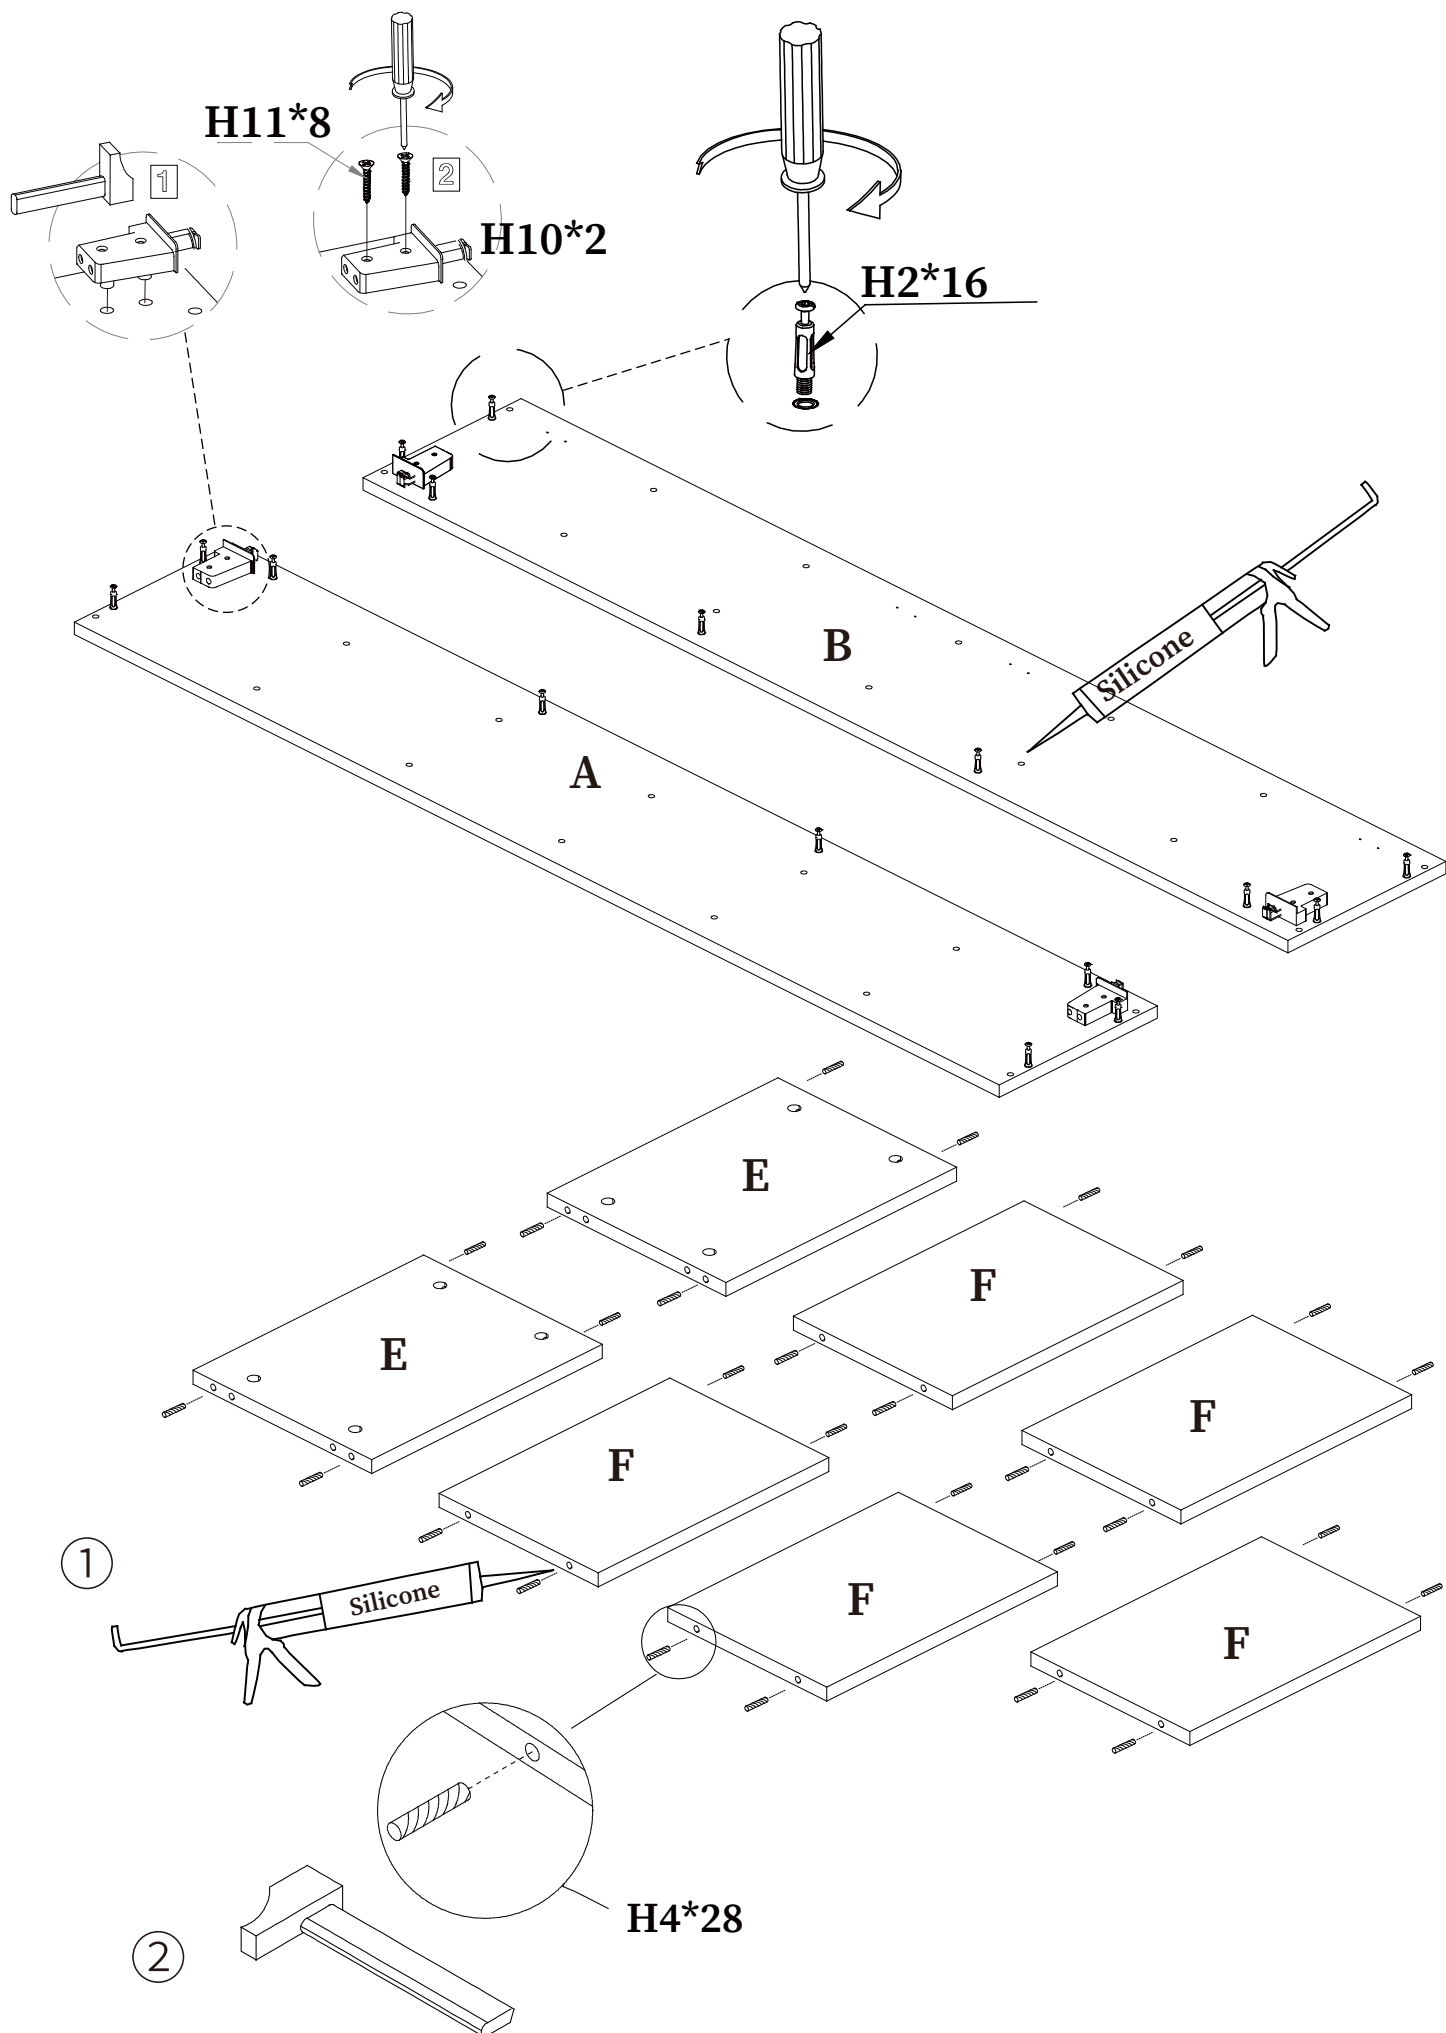

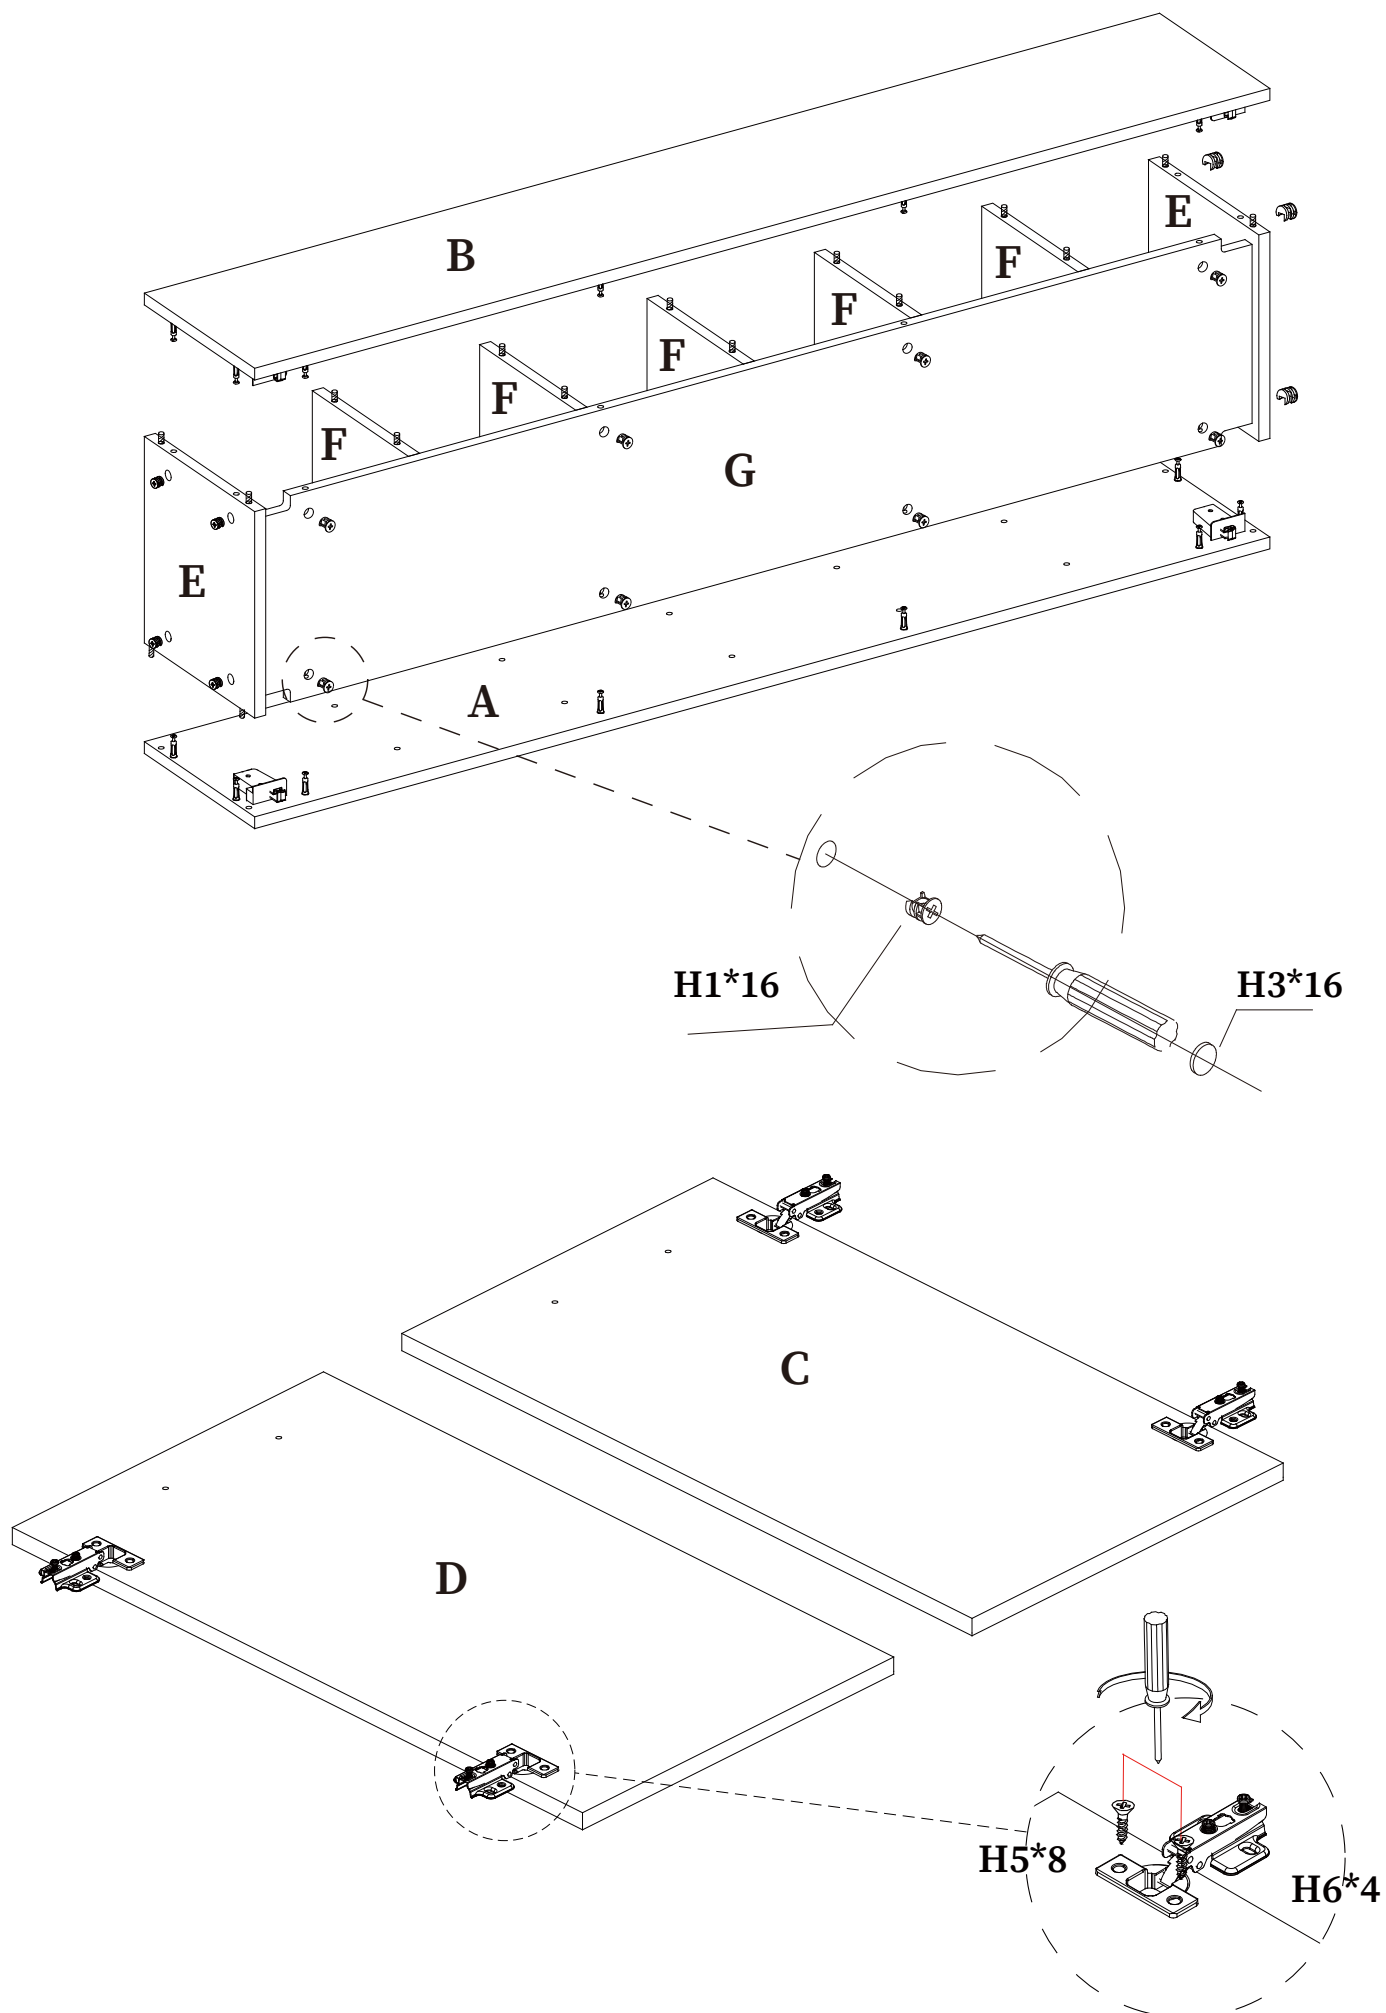

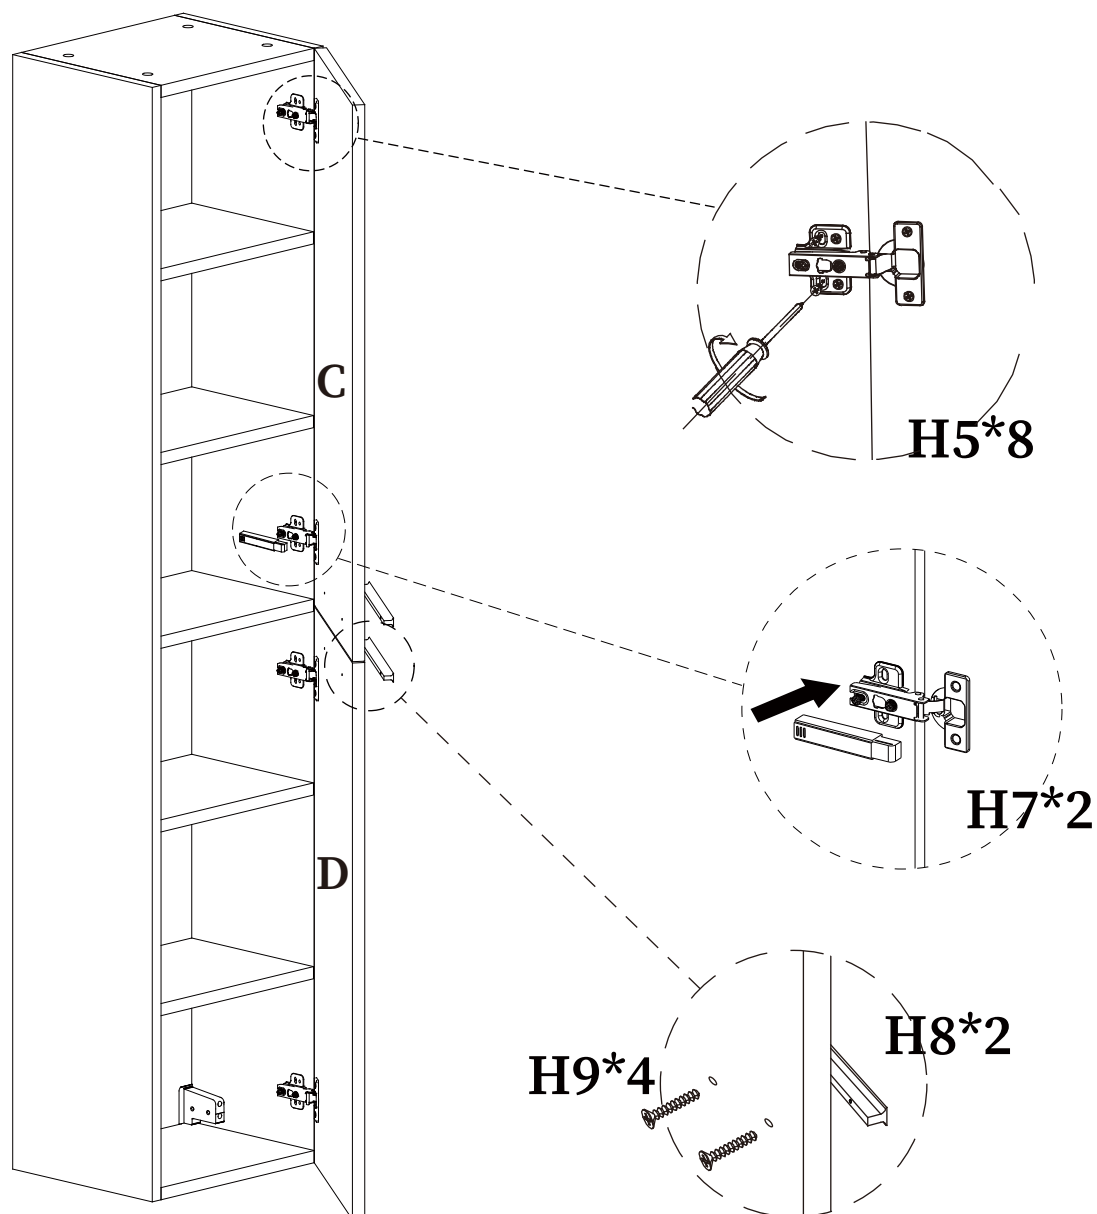

REGLAGES DES PORTES

