

# INSTALLATION & ASSEMBLY


| | | | |
|---|---|---|---|
| | A | 1 | 4mm |
| | B | 8 | M6*50*12 |
| | C | 8 | M6 |
| | D | 8 | M6*16*1 |
| | E | 4 | φ20*3 |

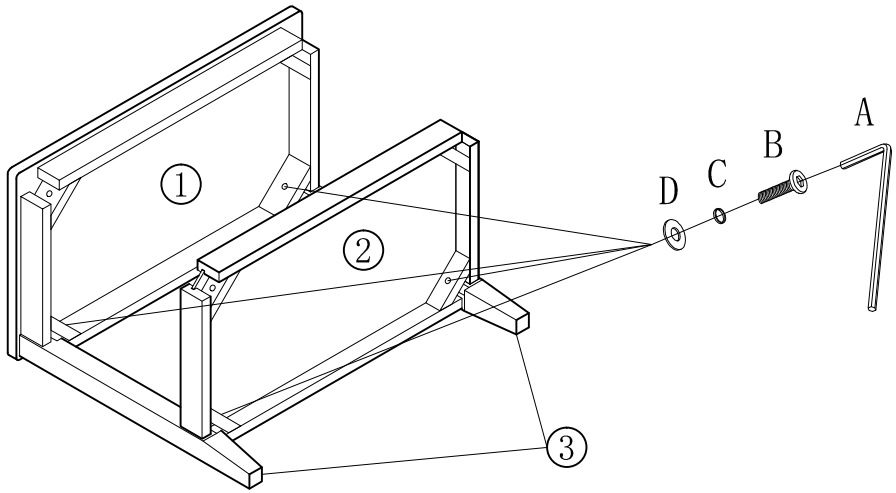


Step 1: Install the panel / bottom frame and legs.
(Place a soft cloth or padding underneath to avoid scratches.)

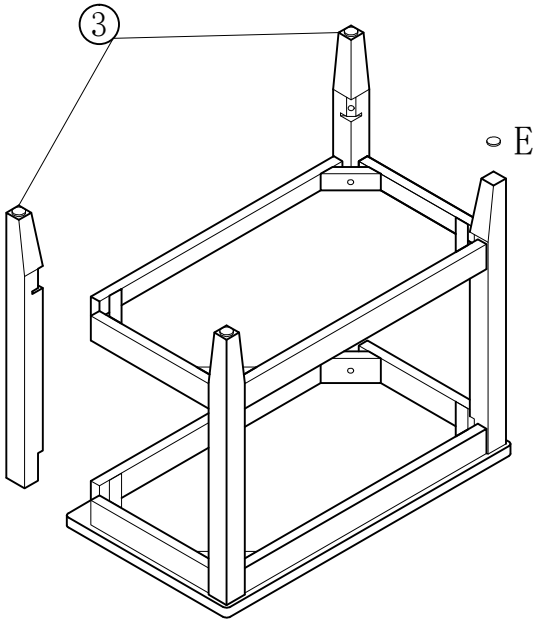


Step 2: Attach the legs and stick on the foot pads.

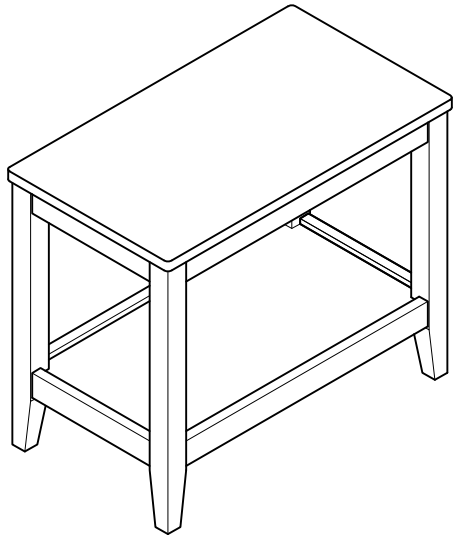

Step 3: Installation completed.