

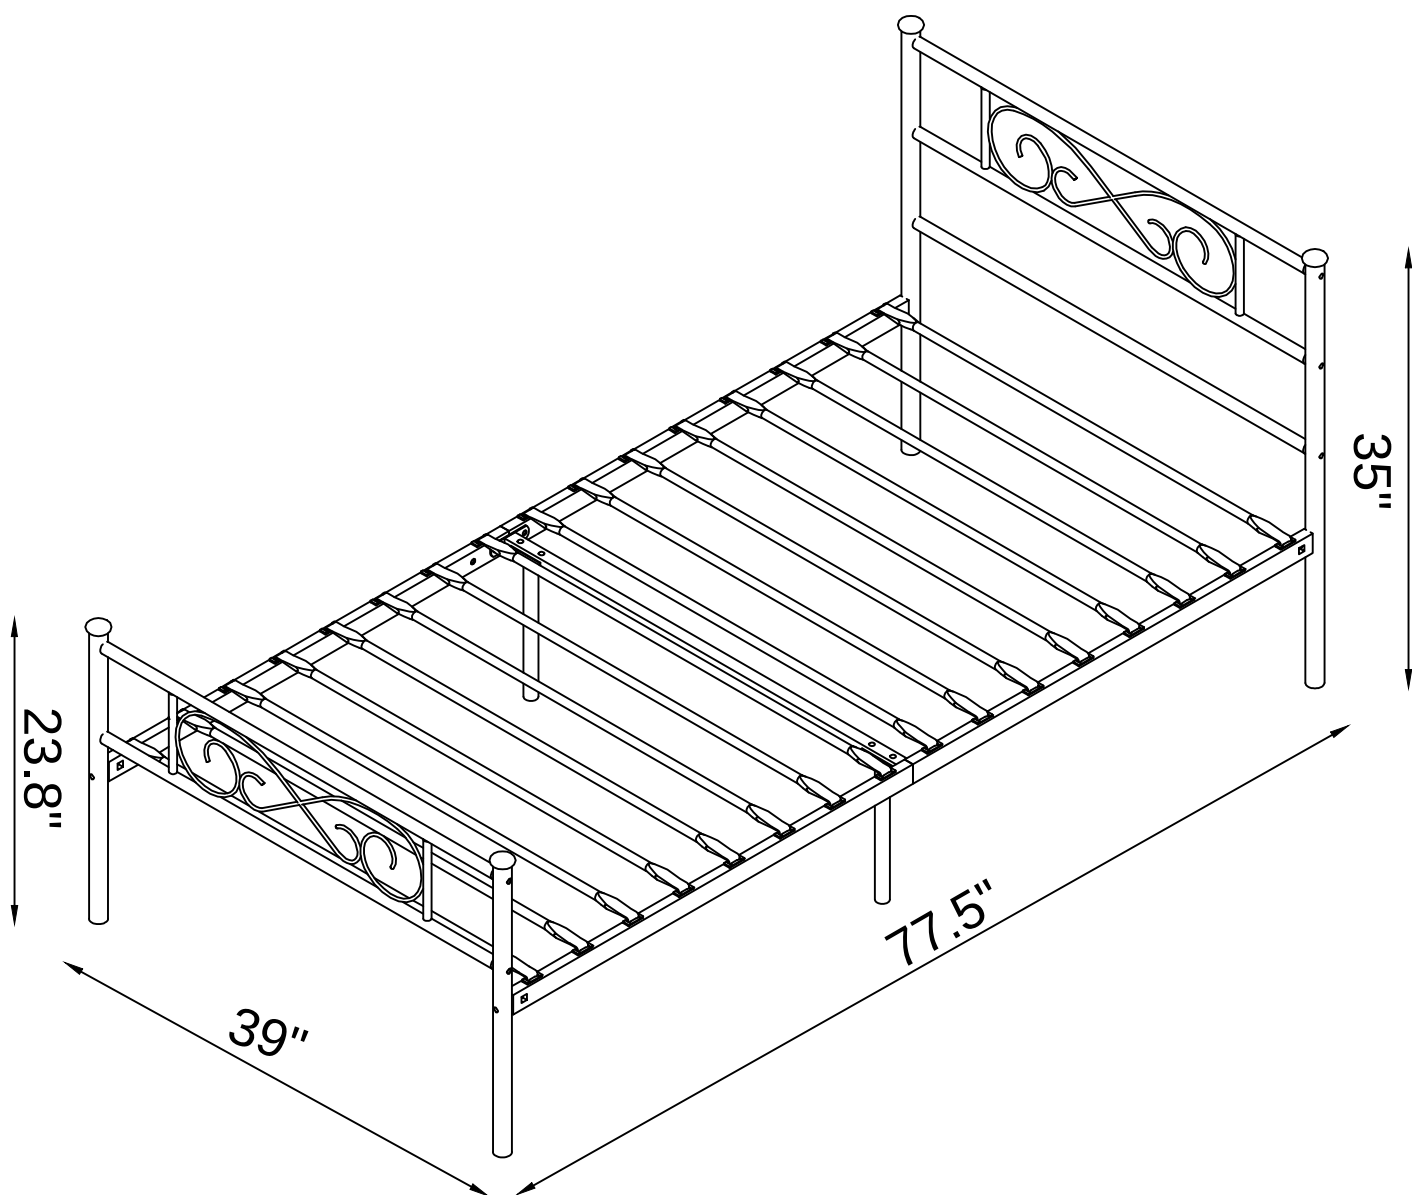
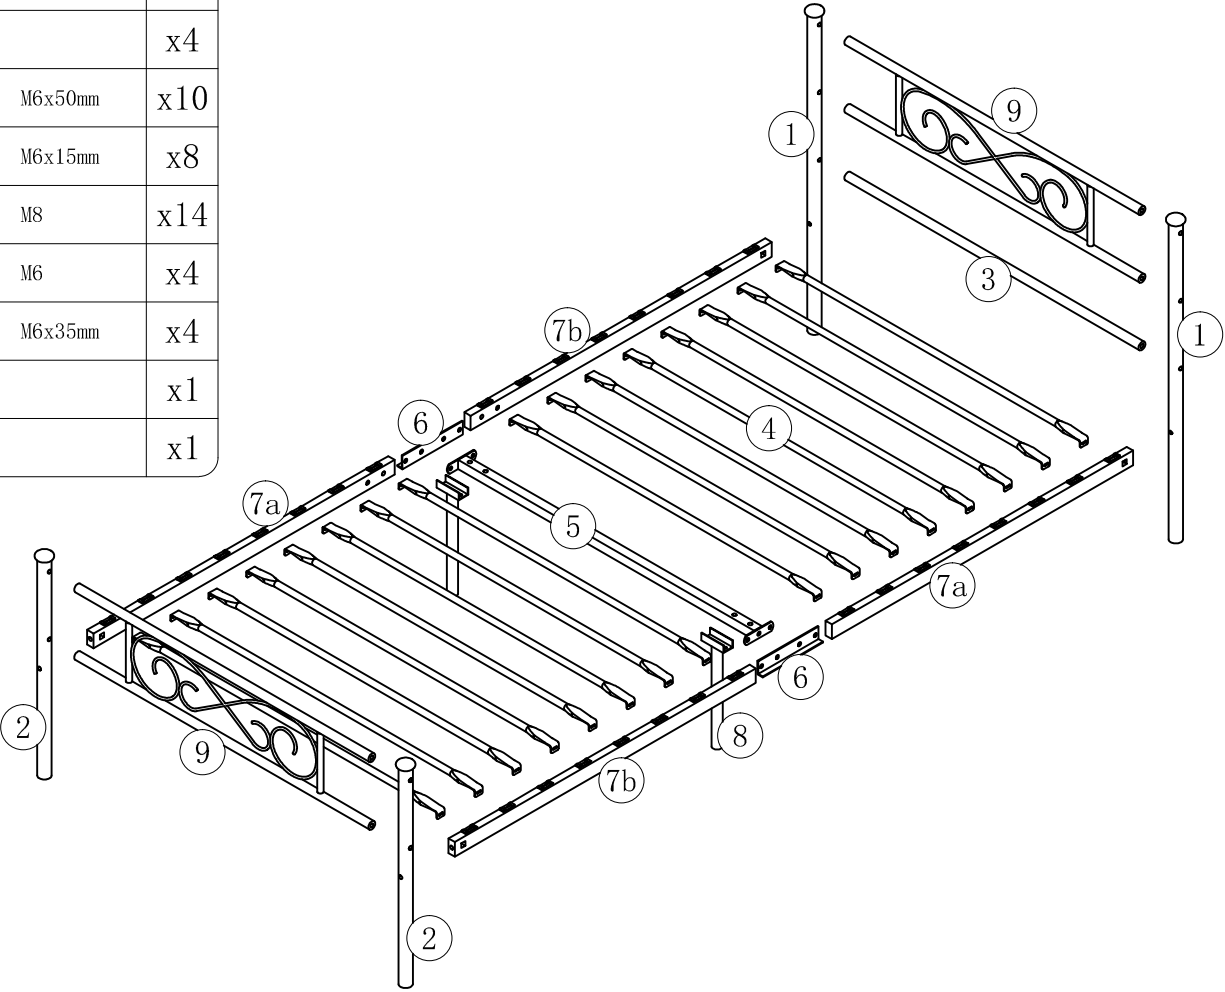
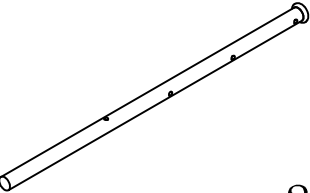
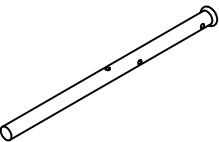
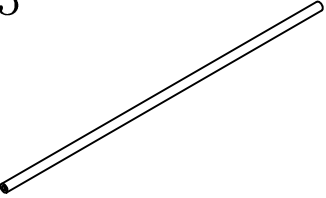
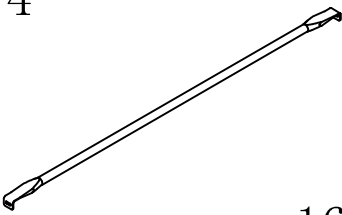
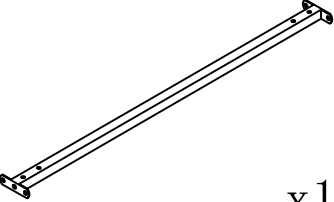
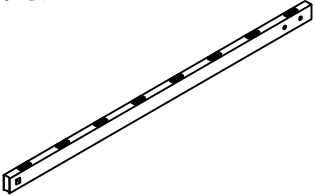
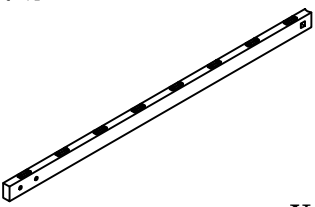






Note: Before completing the installation,
do not tighten the screws.

A		M8x65mm	x4
B			x4
C		M6x50mm	x10
D		M6x15mm	x8
E		M8	x14
F		M6	x4
G		M6x35mm	x4
H			x1
I			x1

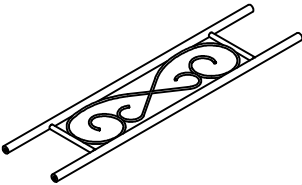


1  x2	2  x2	3  x1	4  x16
5  x1	6  x2	7a  x2	7b  x2
8  x2	9  x2		

STEP 1

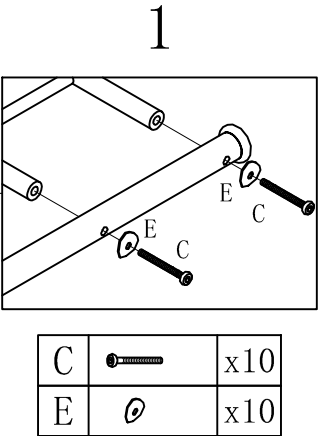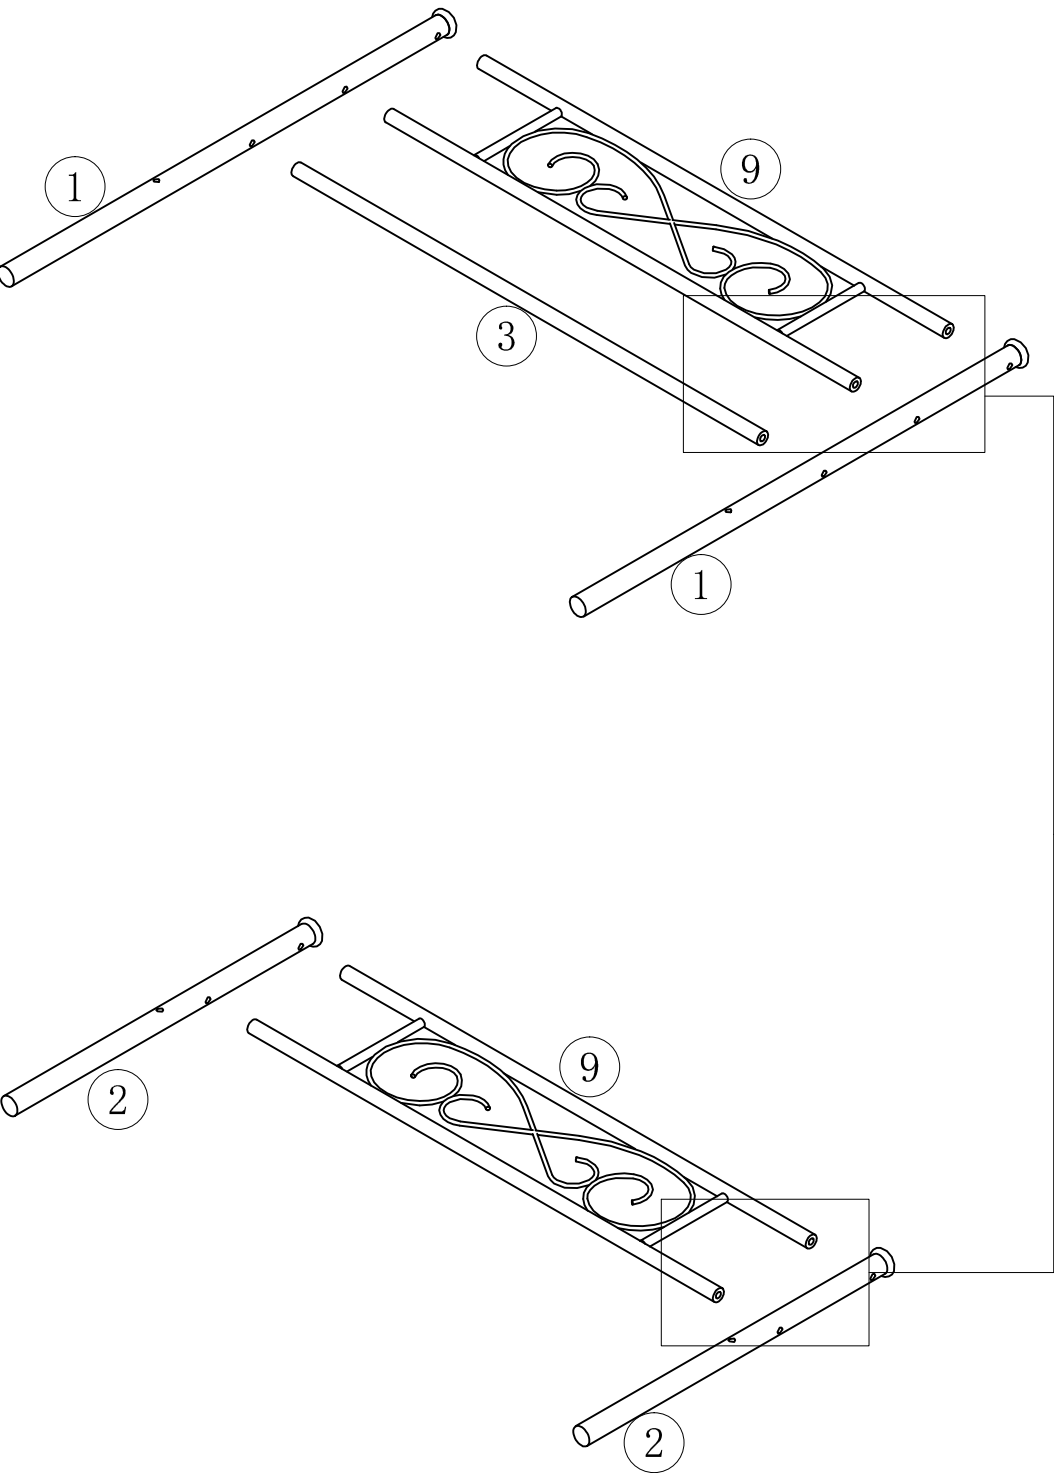


STEP 2

Please separate the parts 7a and 7b before beginning the assembly.

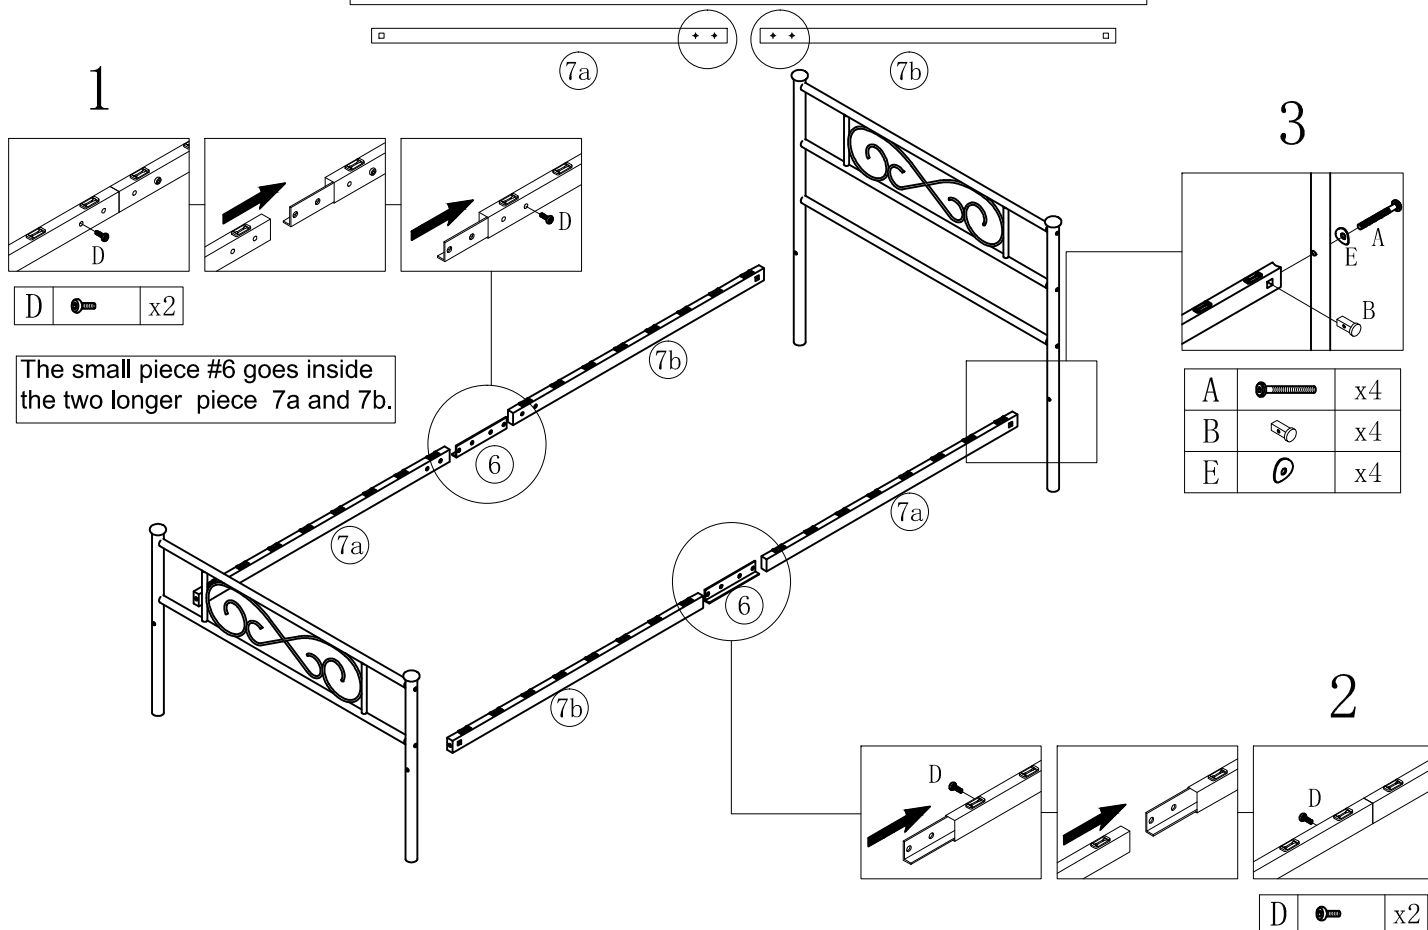

STEP 3

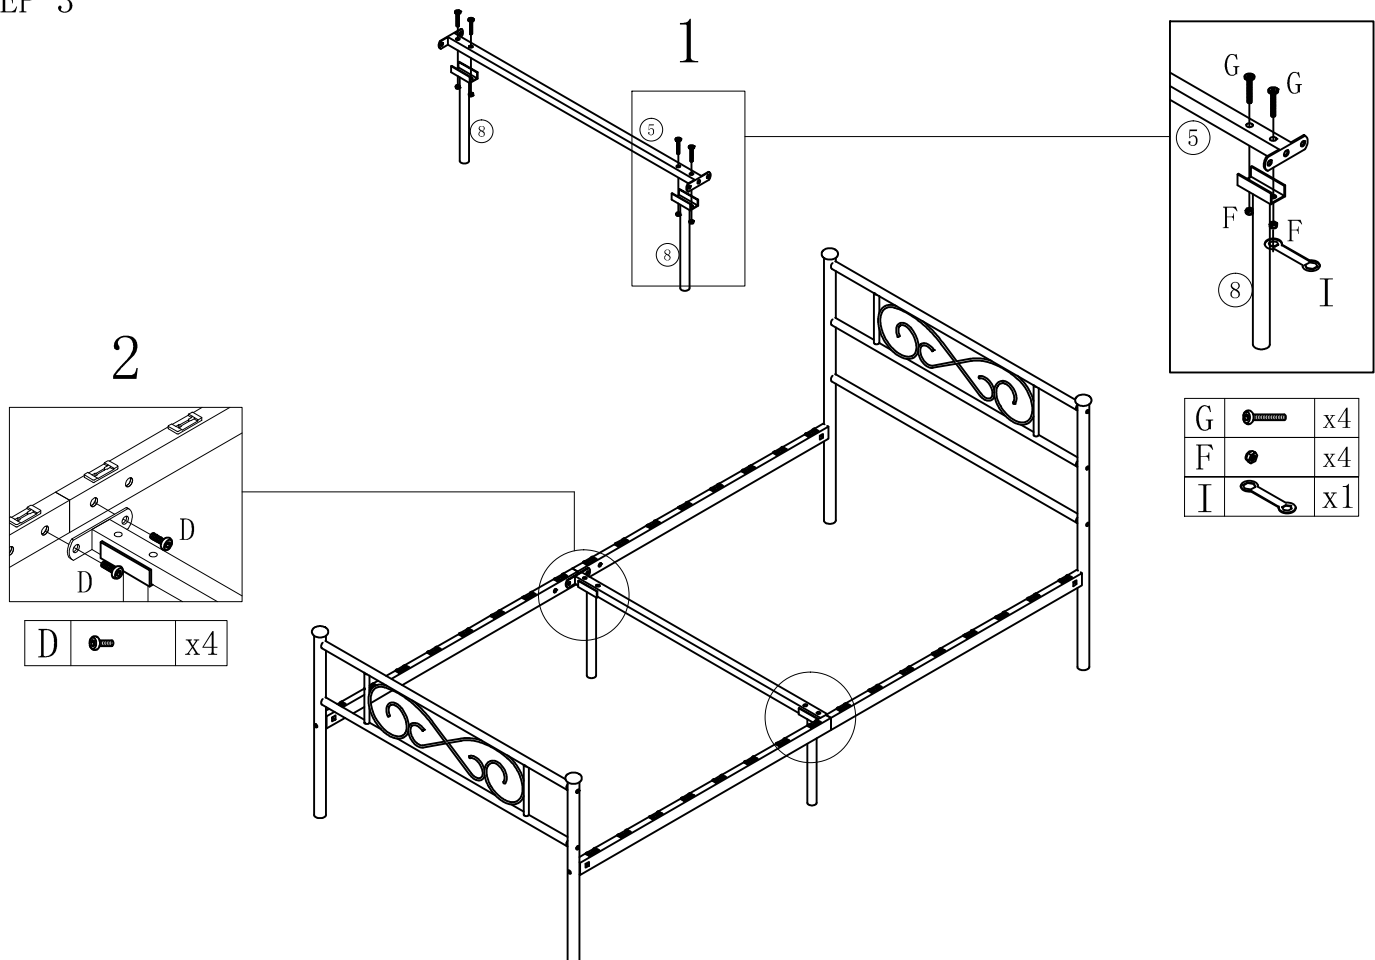

STEP 4

