


A	B	C	D	E
				
1pc	4pcs	2pcs	1pc	1pc

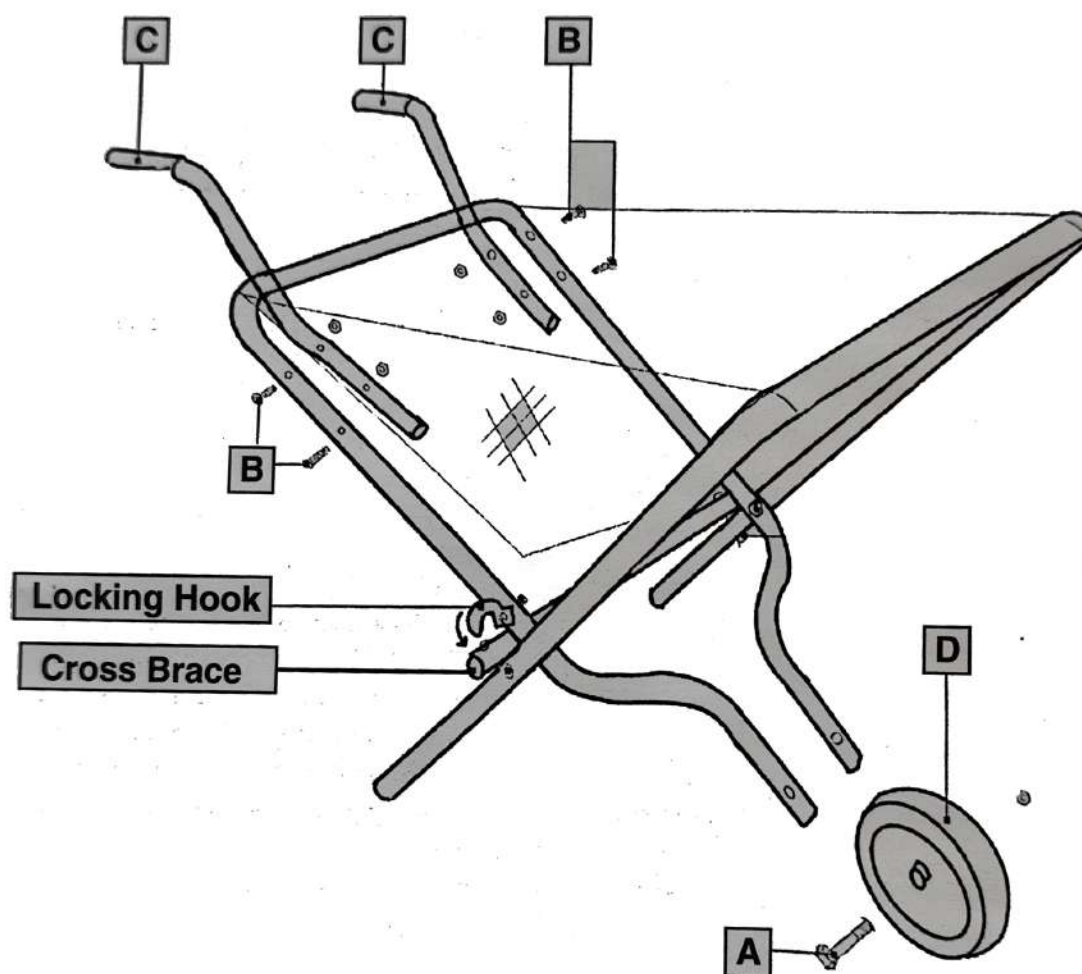

1. Fix the hand bar C to the frame E by inserting the connection screws B from the outside into the openings for them on the frame E and the hand bar C. Secure the connection screws B from the inside with the self-locking nuts
 2. Click the locking hook into the cross brace.
 3. Tilt the product backwards to attach the rubber tire D. To attach the rubber tire D put the axle bolt A through the openings for it on the forked frame and the rubber tire D. Secure the axle bolt A with the self-locking nut.
- Note:** Do not screw on the axle bolt A too tightly.
The rubber tire D should turn easily.