
60 mins


Dual-person

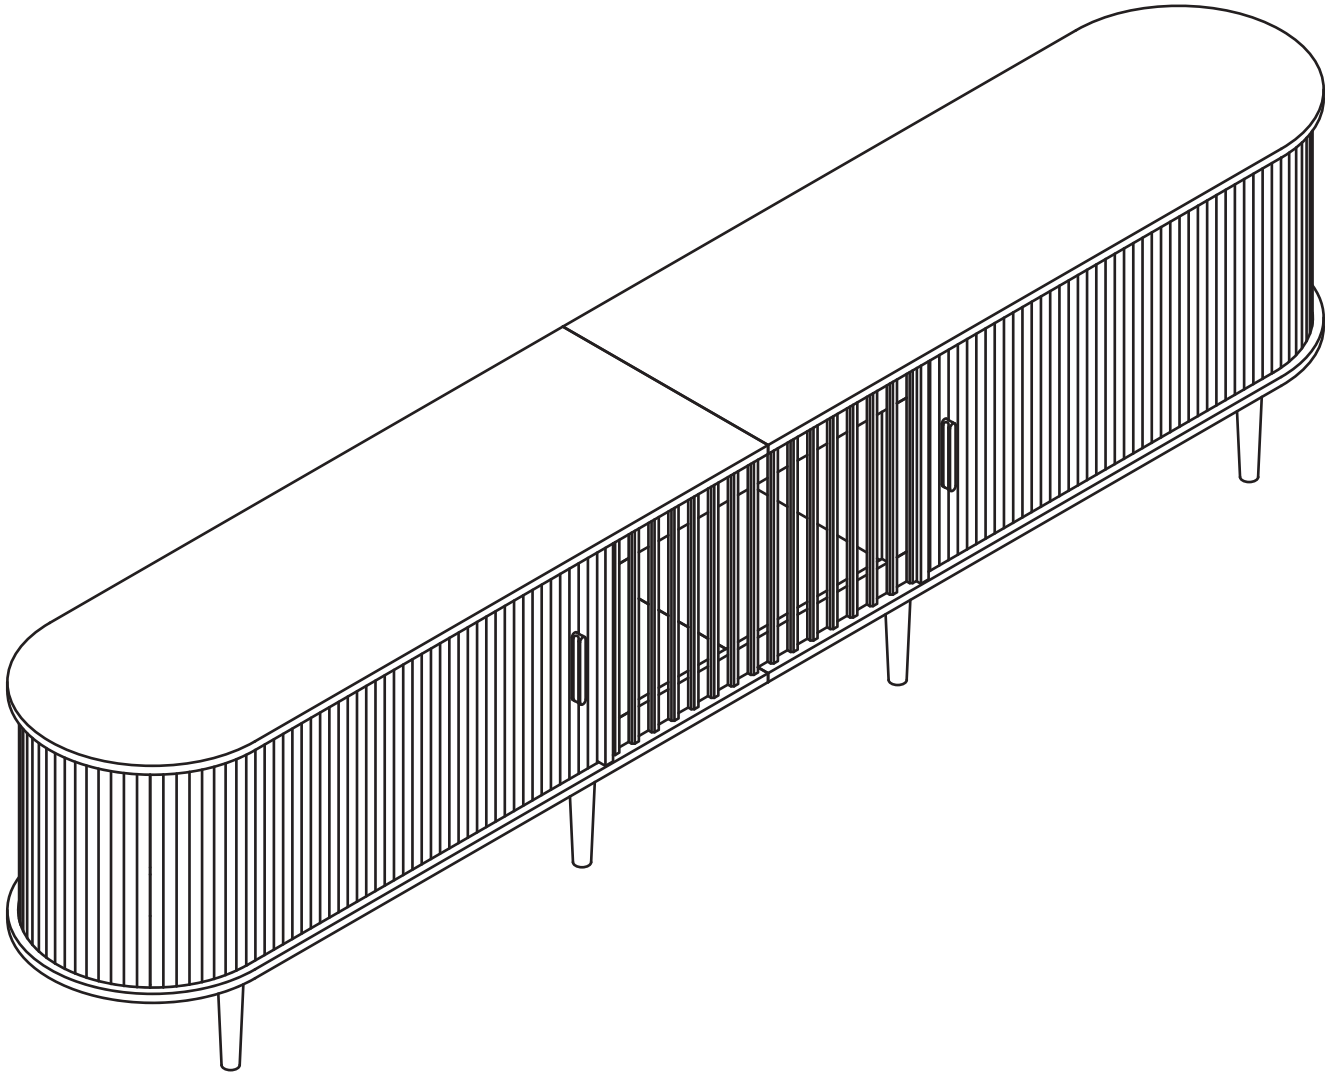

95" TV Stand & Sliding Door

MW004


Assembly Instructions - Please keep for future reference
Important - Please read these instructions before assembly

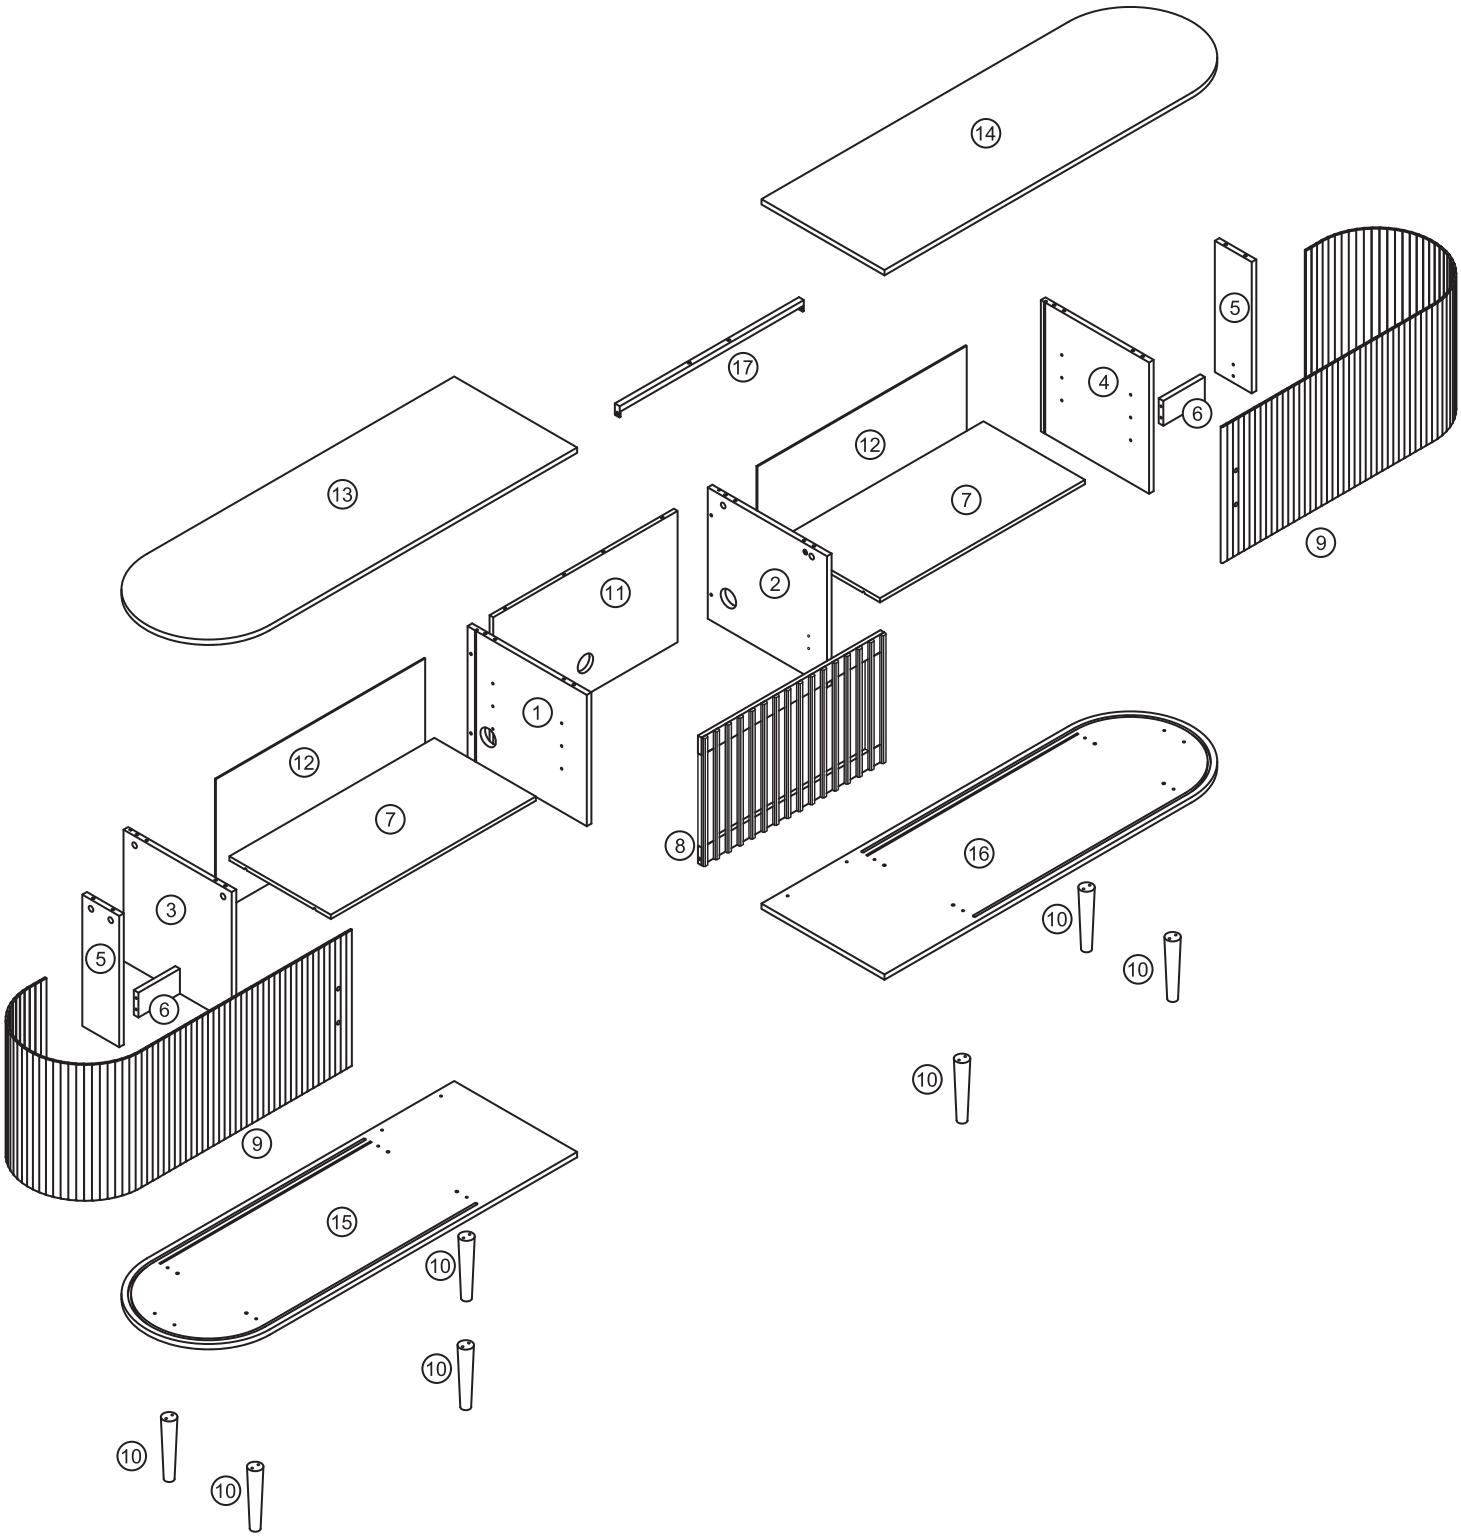
14
17
13
12
7
4
6
5
9
2
11
1
12
7
8
16
10
10
3
5
6
9
10
15
10
10
10


Components

Please check if all the pieces listed below are received.


1 x1




2 x1



3 x1



4 x1




5 x2



6 x2




7 x2



8 x1




9 x2

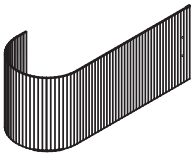


10 x7



11 x1

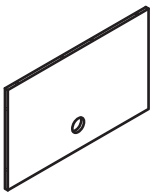


12 x2

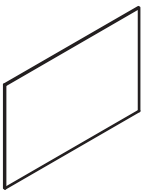


13 x1




14 x1



15 x1



16 x1




17 x1



Components

Please check if all the pieces listed below are received.

A x24+2




φ6x 33.5 mm

B x24+2



φ15 x 9.5 mm

C x16+1




φ6 x 30 mm

D x24+2



φ 20mm

E x7



60x60x2.5 mm

F x2



M6x 25 mm

G x38+2



M6 x 12 mm

H x1



M4 mm

I x34+2



M5x 48mm

J x8+2



φ5x17 mm

K x2



L x1



M x1



N x4




M4x 10mm

O x2



114x11x16 mm

P x9+1




φ3.5 x 12 mm

Q x8




15 x 15 x 10 mm

R x8



φ3x 16 mm

S x1

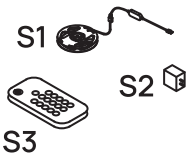

T x6+1



20x6x4 mm

U x12+2




φ3x 12 mm

V x1



W x1



45x16x 14 mm

X x1




34x12x 12 mm

Y x2




φ3.5 x 16mm

Z x2




60x60x2.5 mm


Step 1

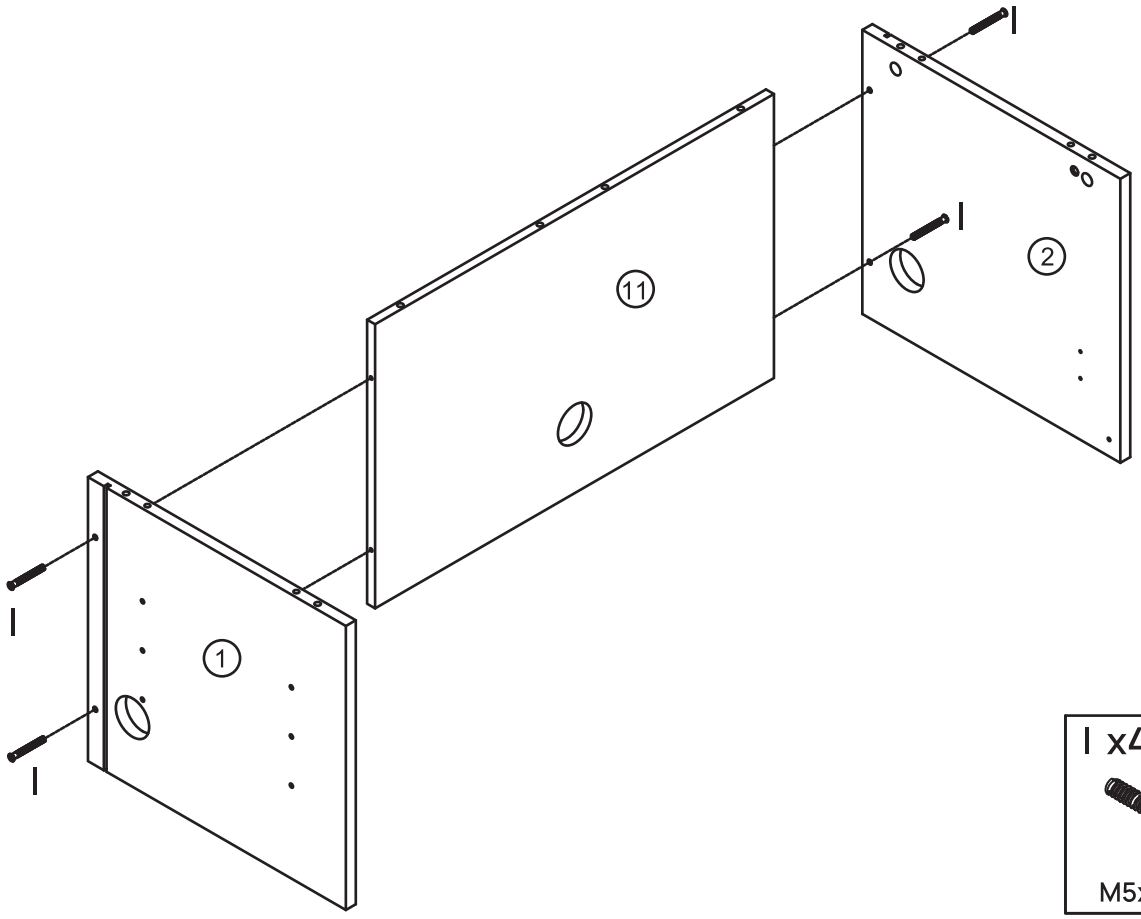




Step 2

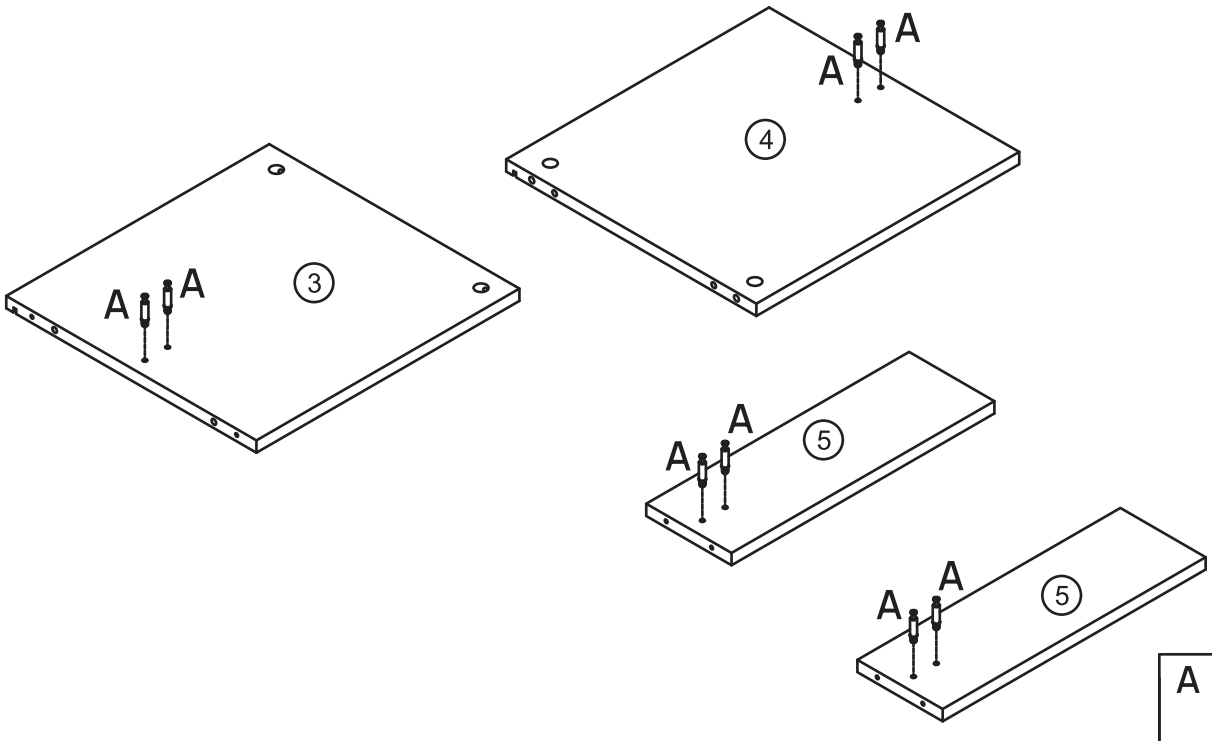

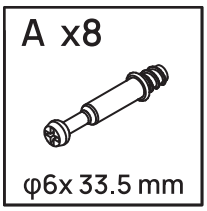


Step 3

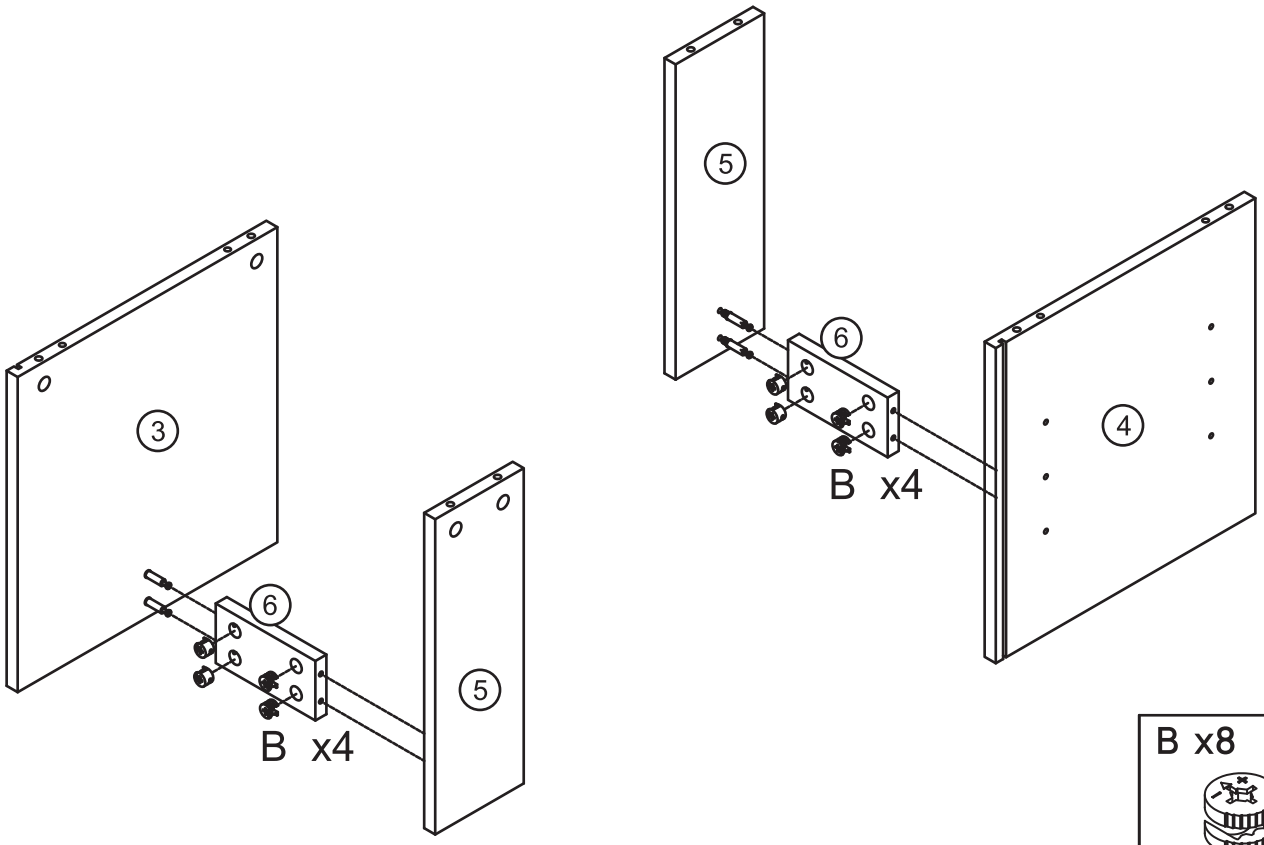


B x8

φ15 x 9.5 mm

Step 4

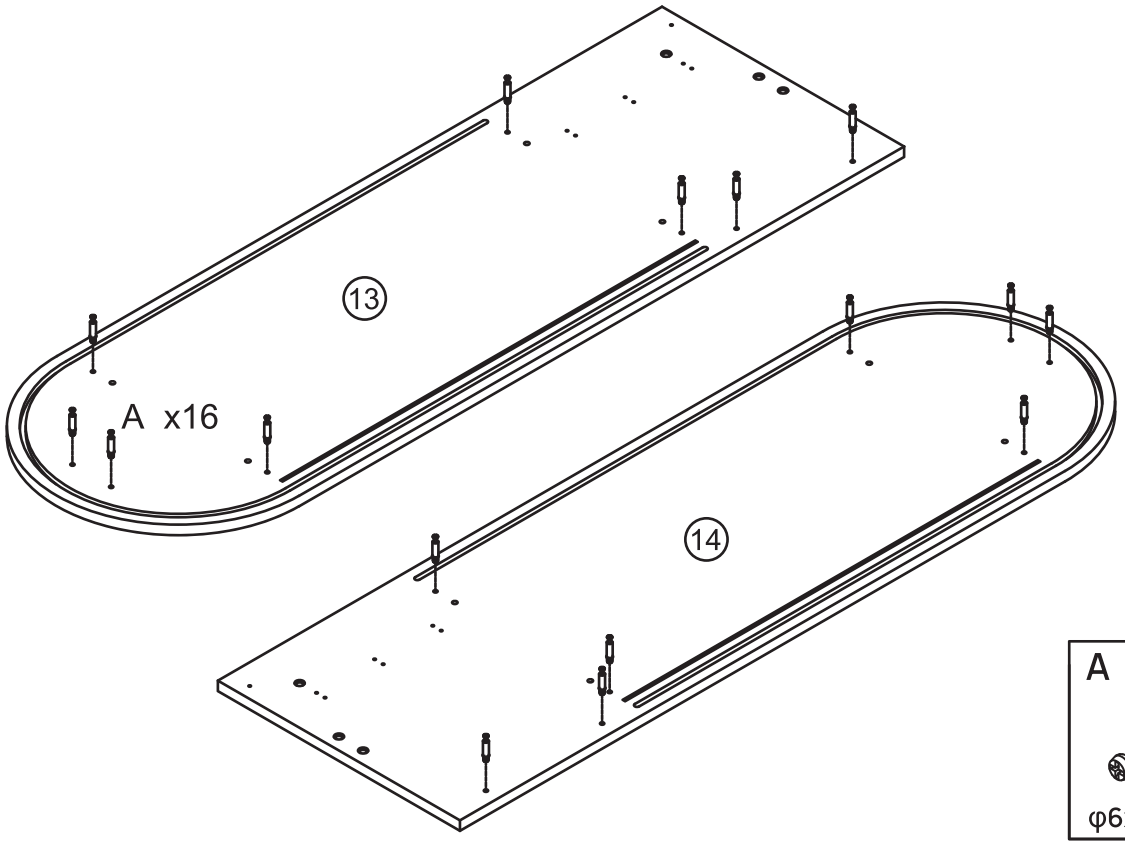


A x16



φ6x 33.5 mm

Step 5

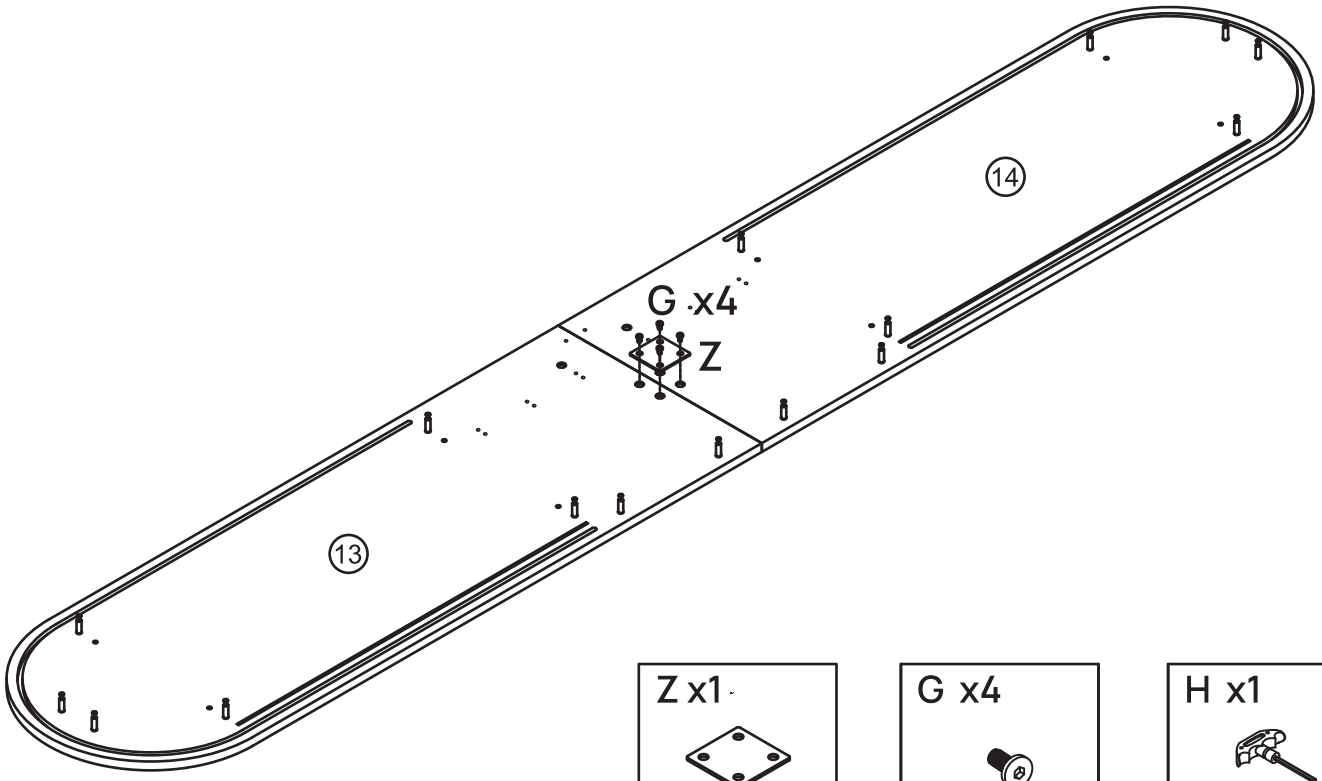

Z x1

60x60x2.5 mm

G x4


M6 x 12 mm

H x1

M4 mm

Step 6


Tighten All bolt #F to 80% first.
After completing Step11, tighten All bolt completely.

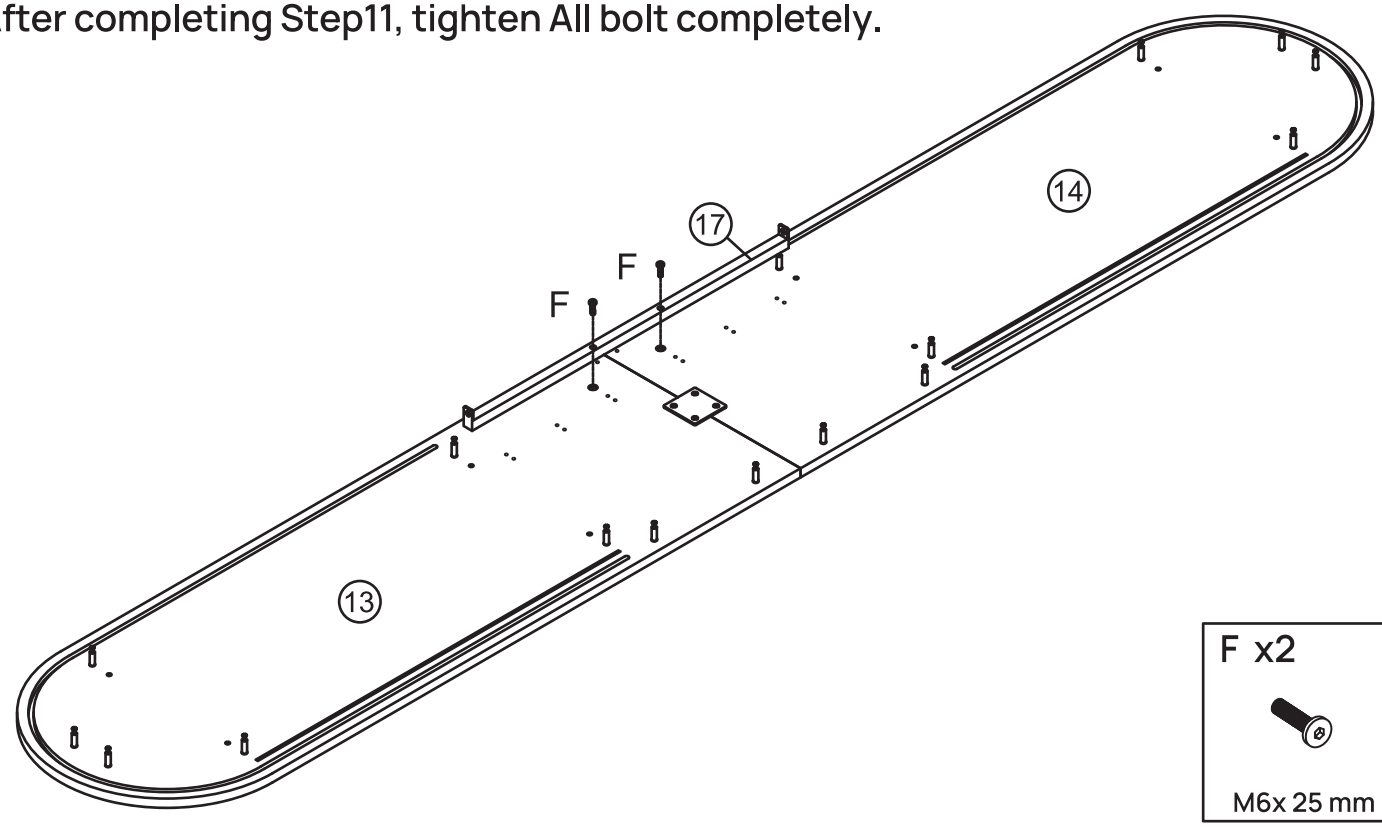

F x2


M6x 25 mm

Step 7

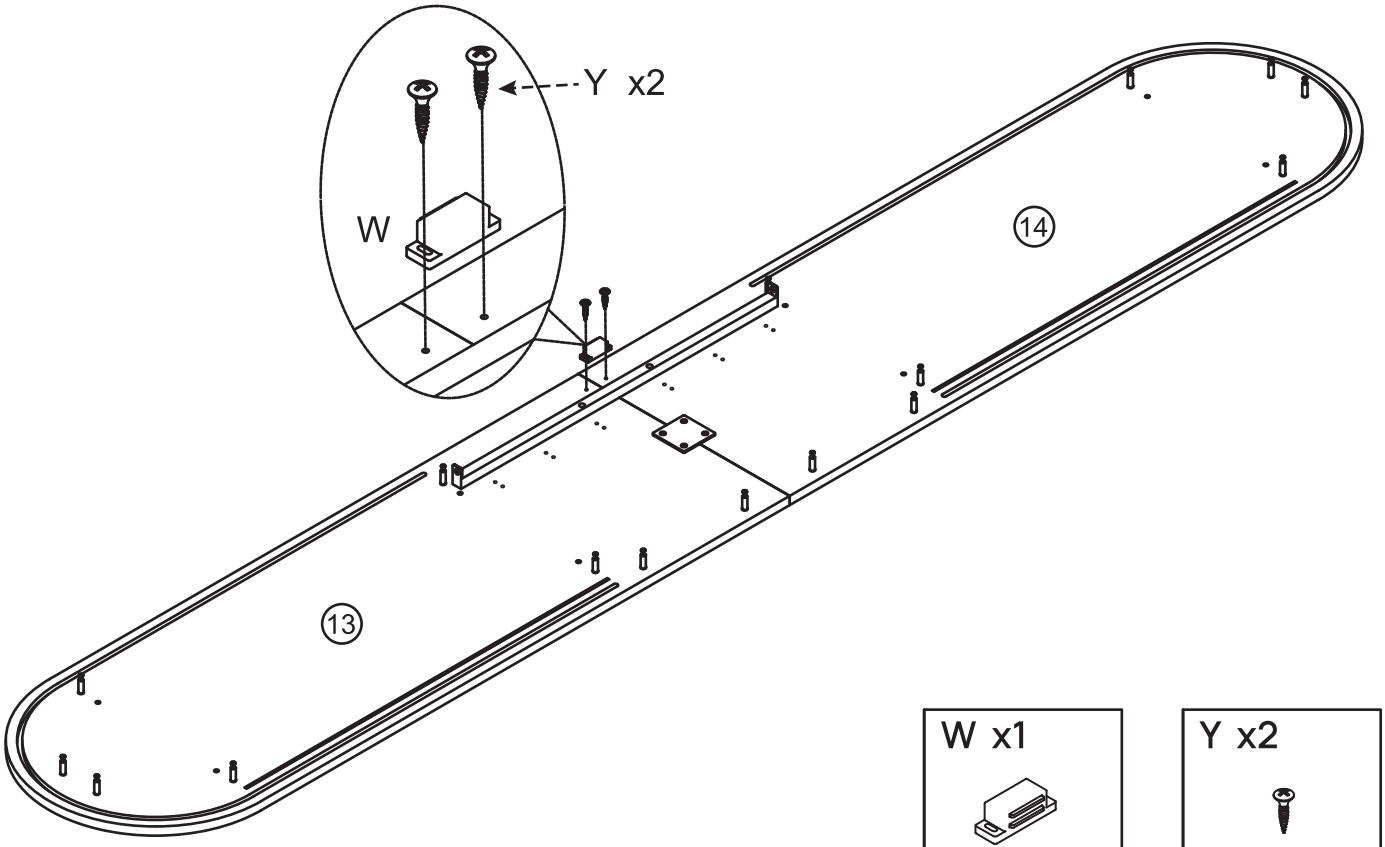


W x1	Y x2
45x16x 14 mm	φ3.5 x 16mm


Step 8

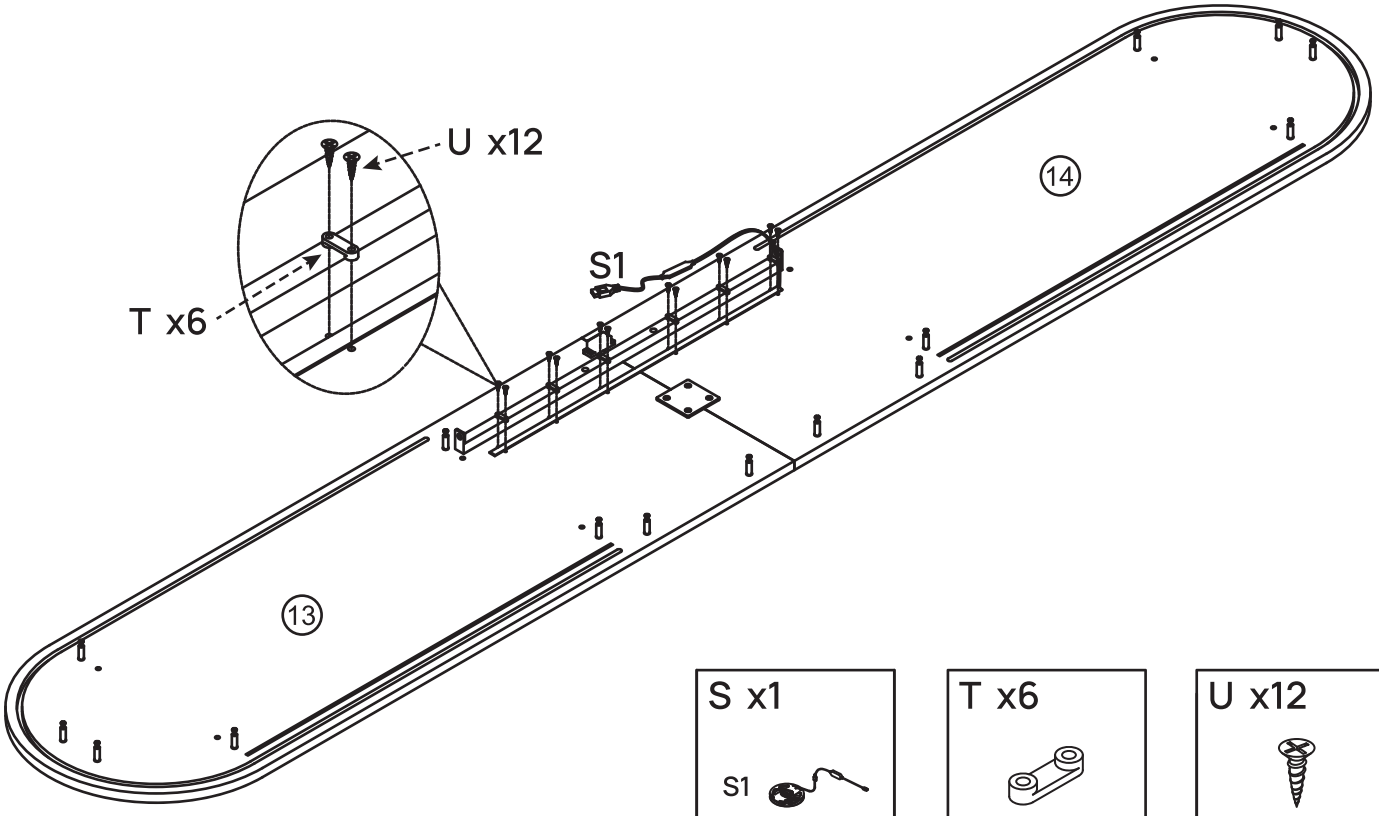


S x1	T x6	U x12
S1	20x6x4 mm	φ3x 12 mm


Step 9

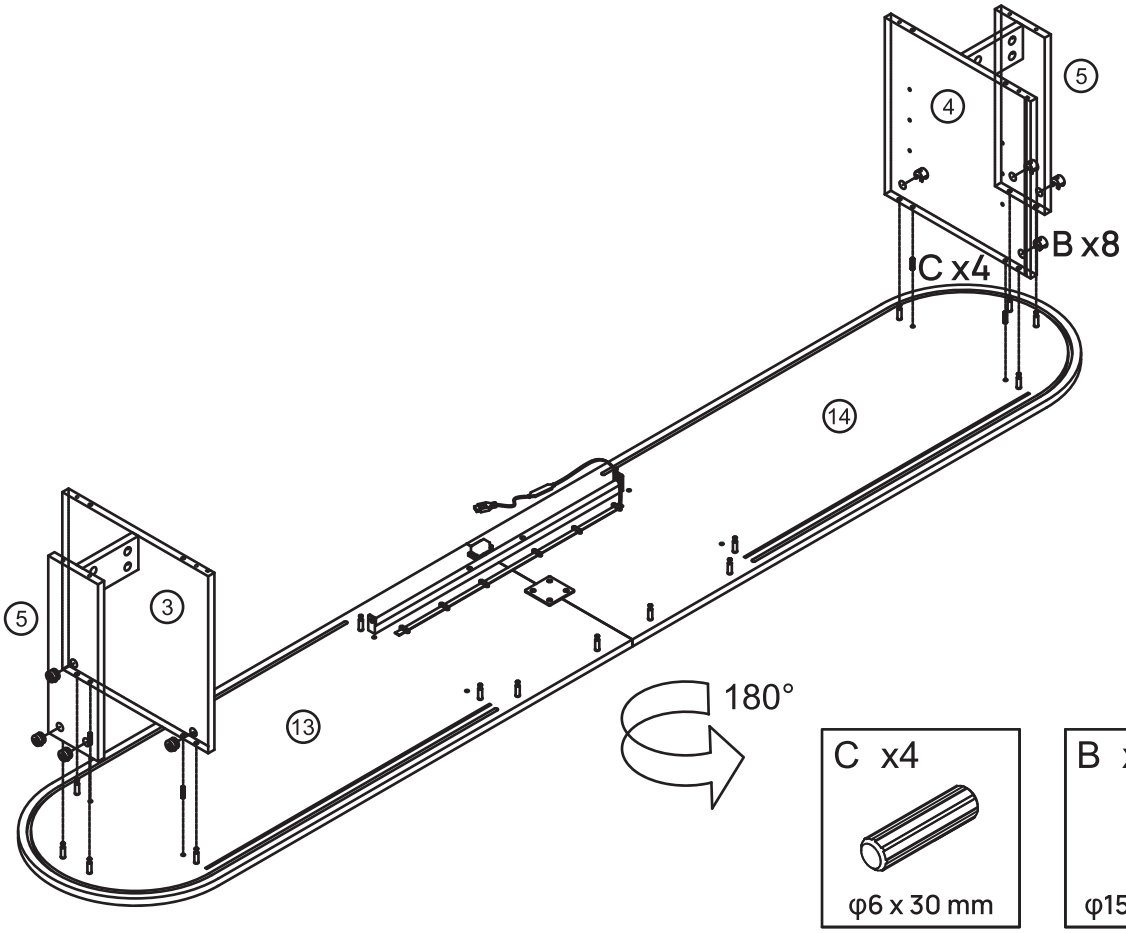

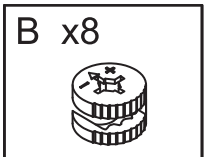


Step 10

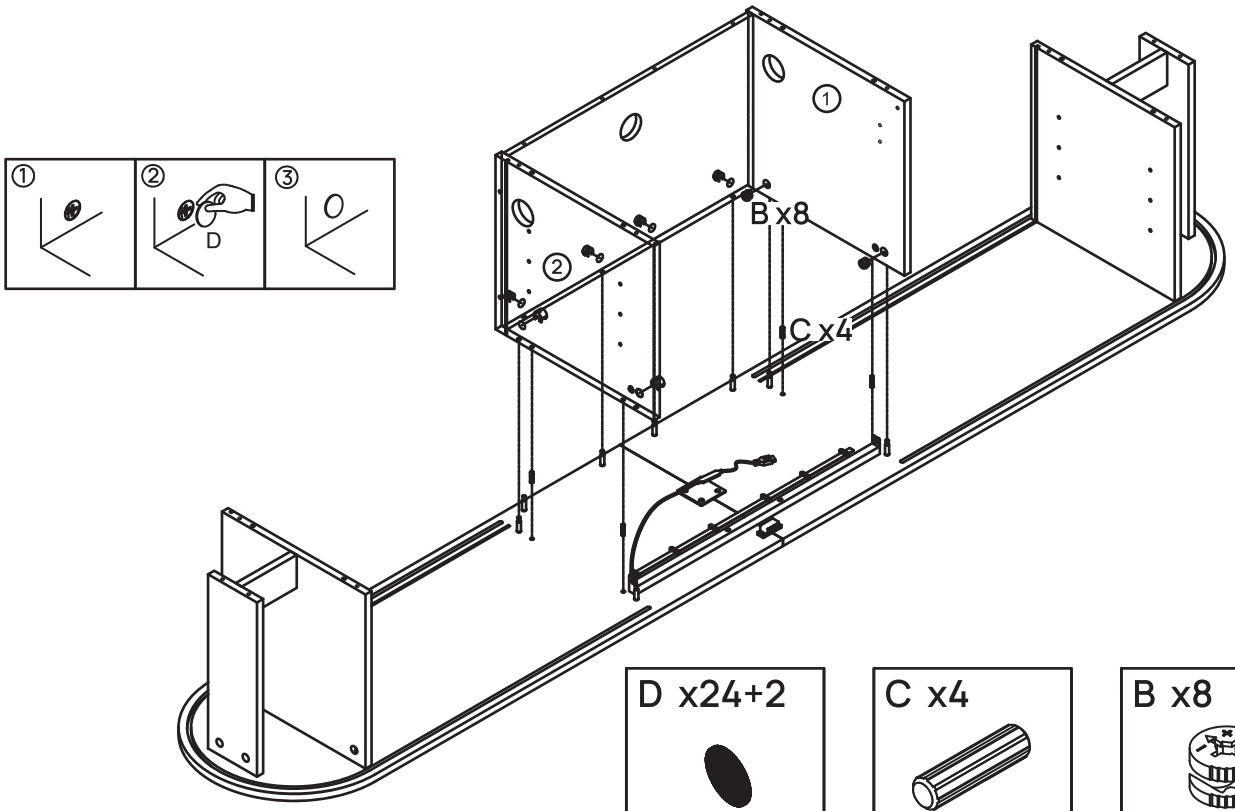

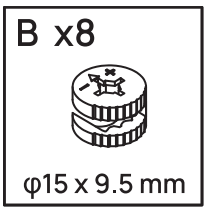


Step 11


NOTE:
Tighten all Bolt (F and G) In the #17

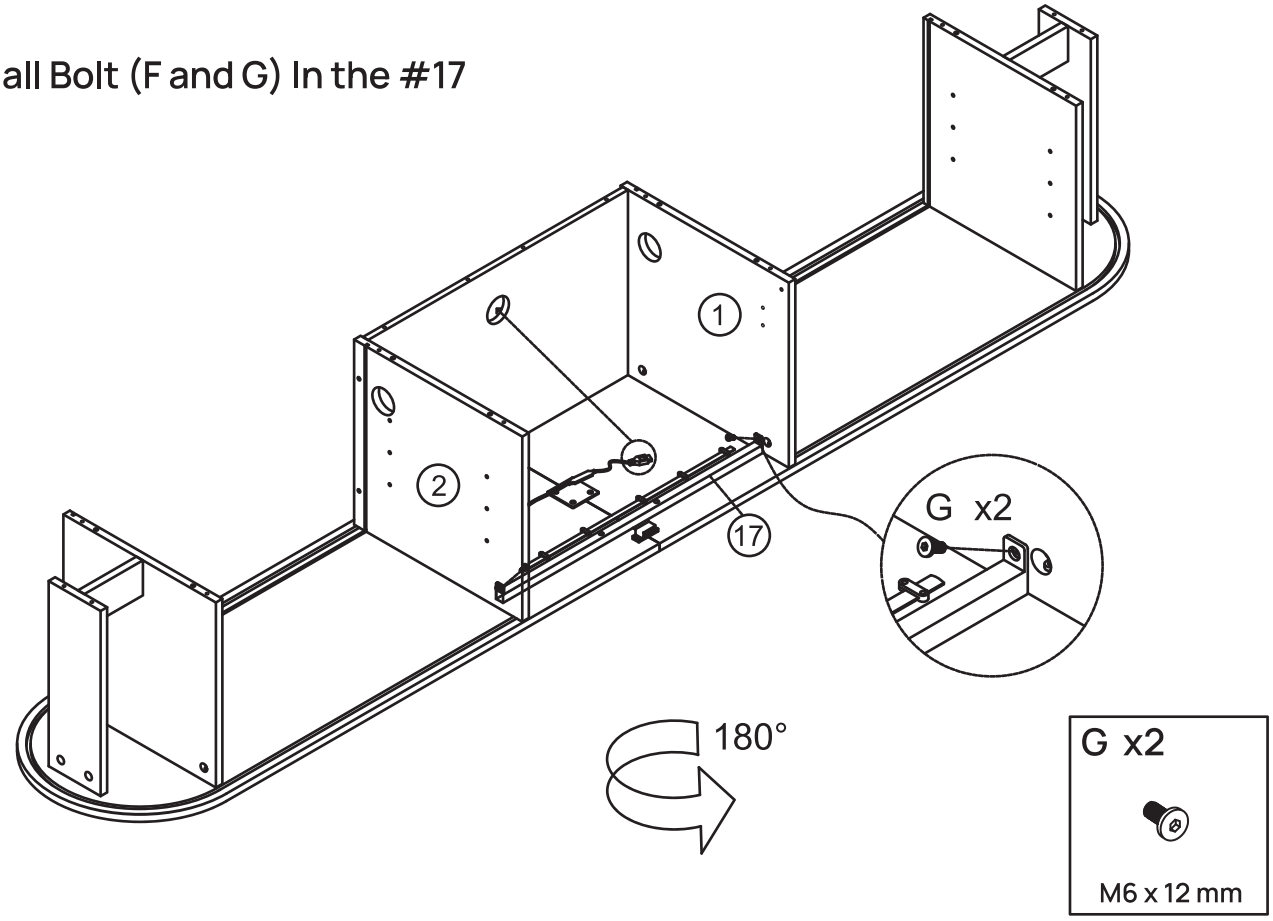

Step 12

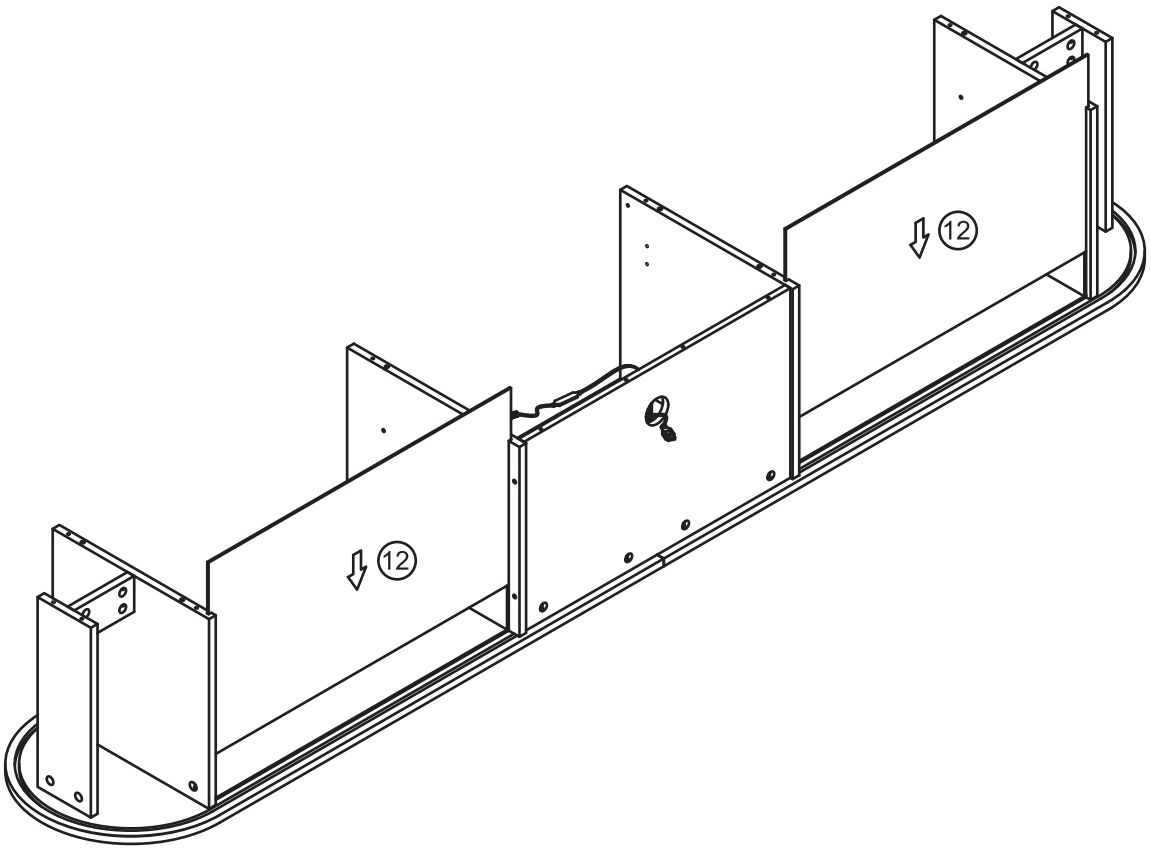


Step 13

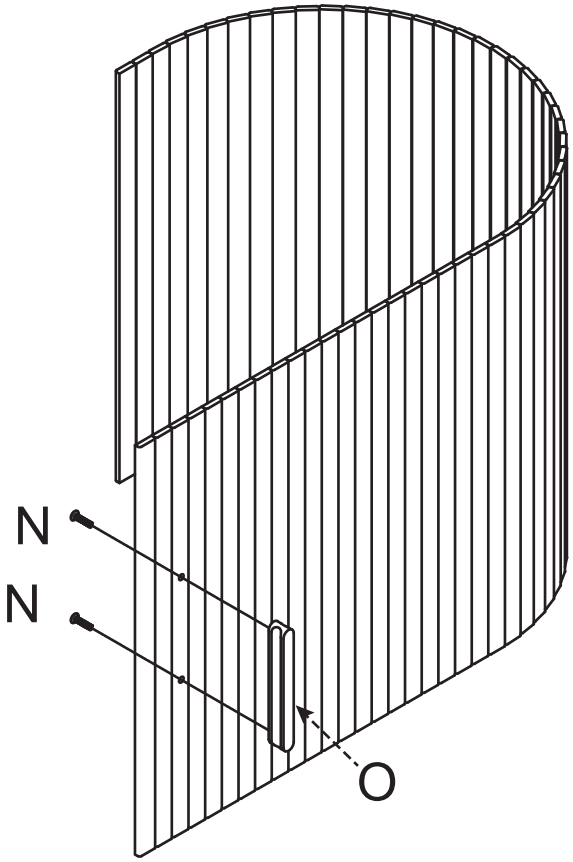


N x4	O x2
M4x 10mm	114x11x16 mm

Step 14

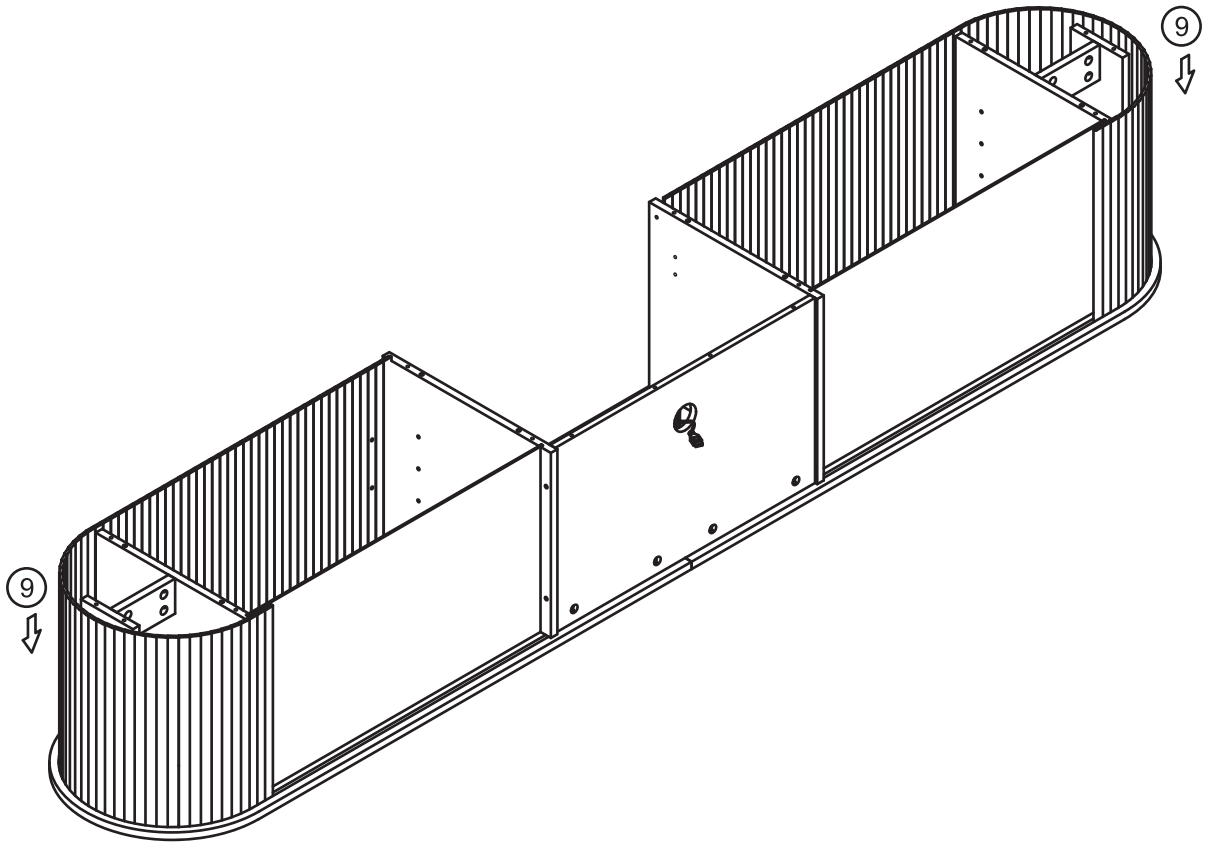

Step 15

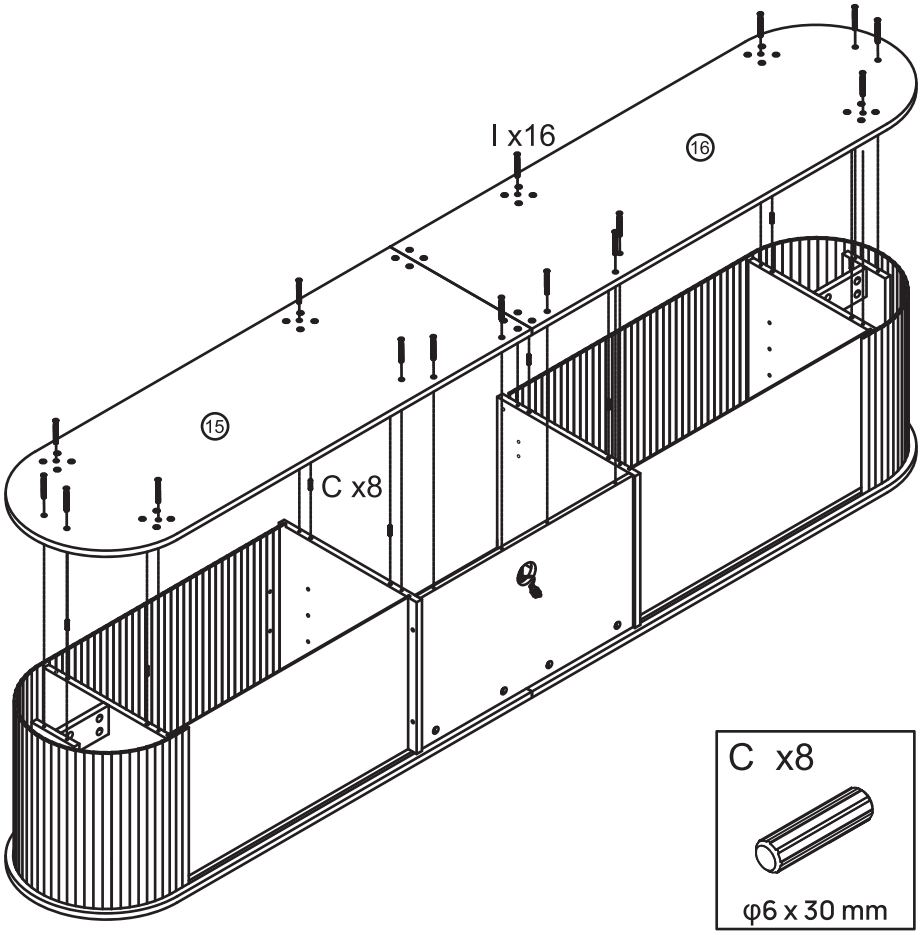

C x8


φ6 x 30 mm

I x16



M5x 48mm

Step 16

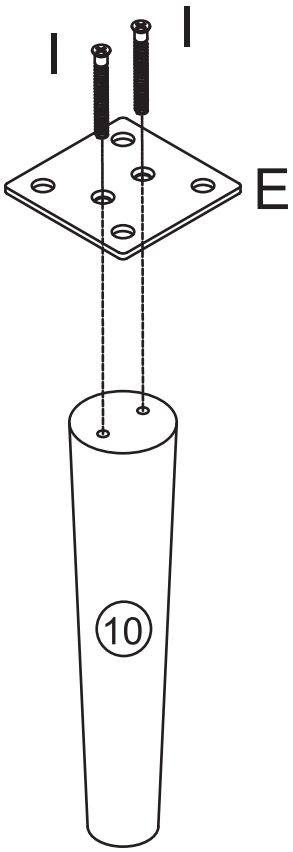

x7

E x7




60x60x2.5 mm

I x14




M5x 48mm

Step 17

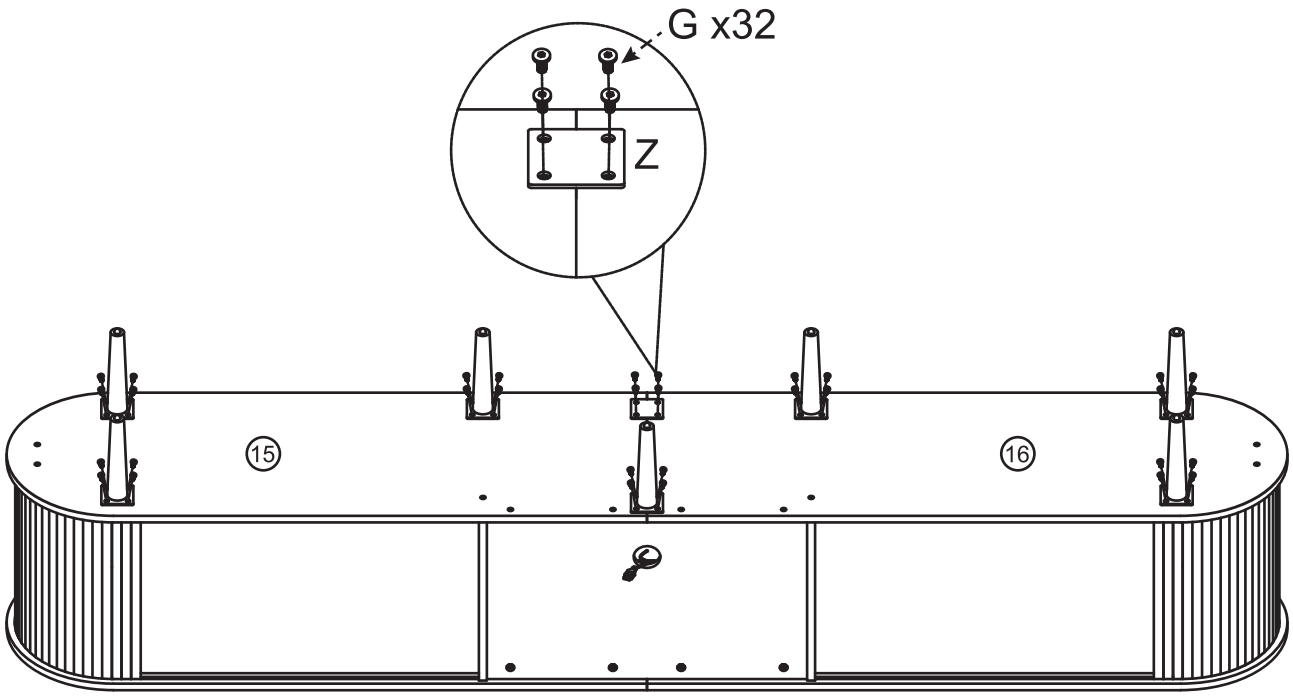


Z x1	G x32
60x60x2.5 mm	M6 x 12 mm

Step 18

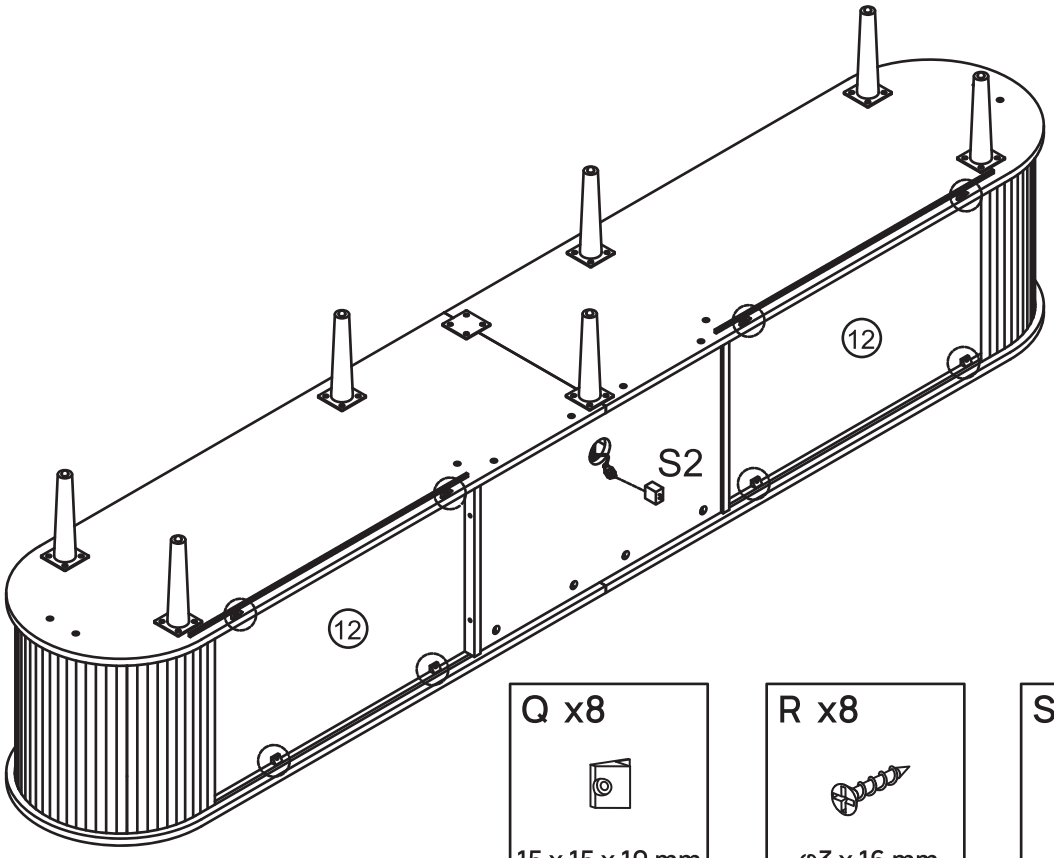


Q x8	R x8	S x1
15 x 15 x 10 mm	φ3 x 16 mm	S2


Step 19

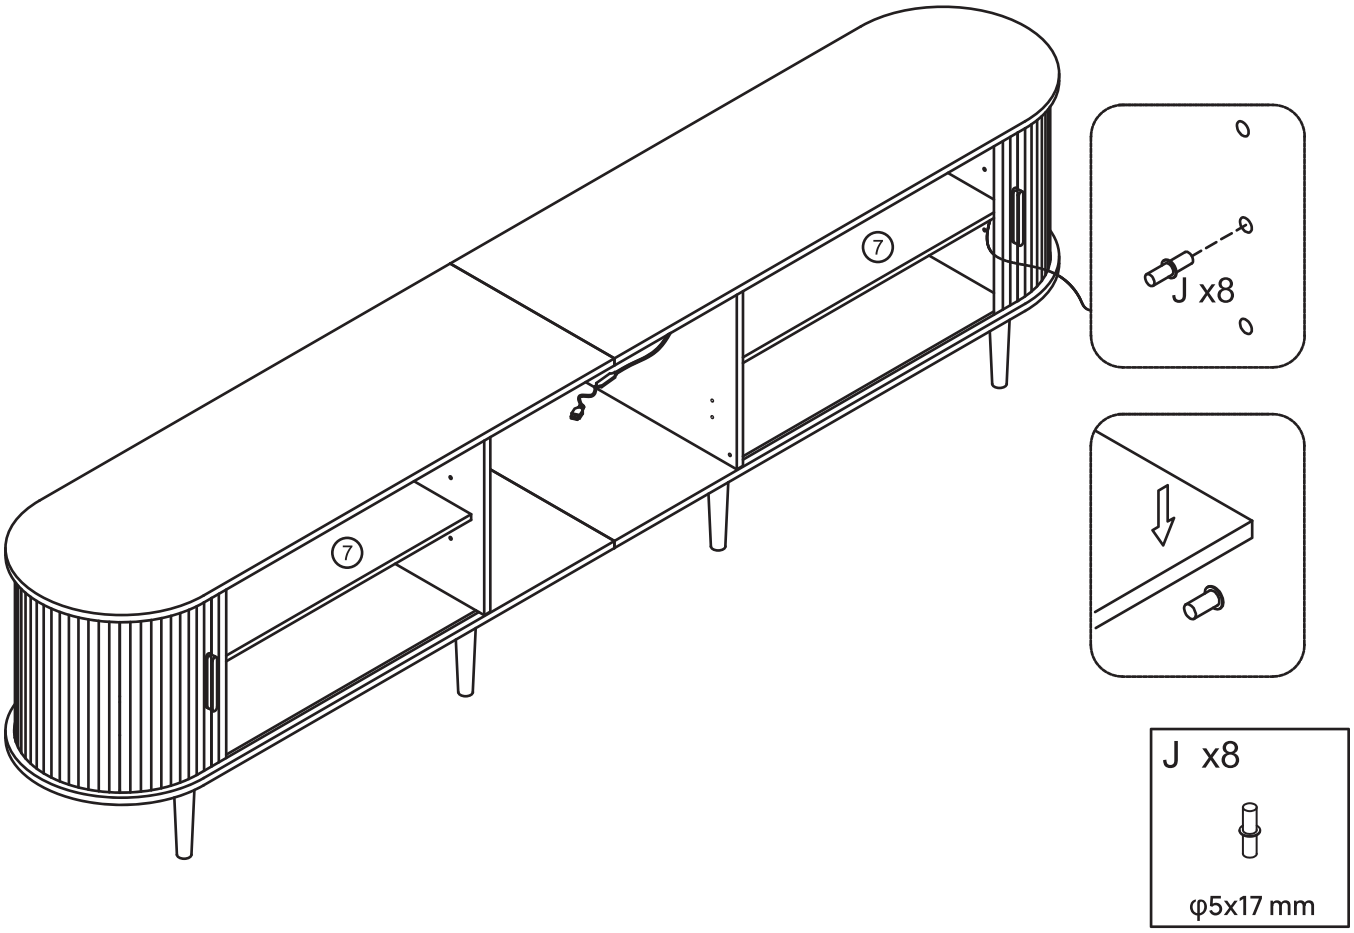


Step 20

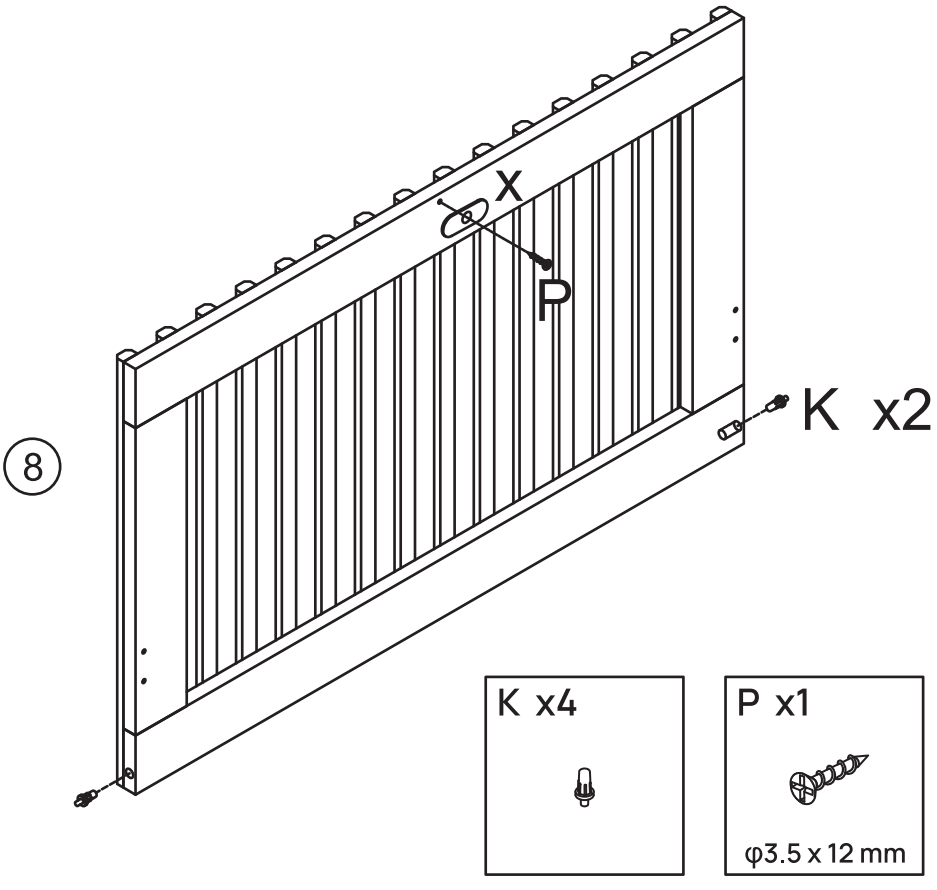


Step 21

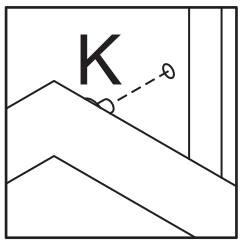


Step 1:
Insert hinge pin into bottom hole.

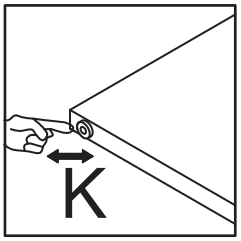


Step 2:
Press down the hinge pinsand keep it in a non ejected state.

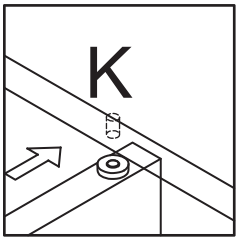

Step 3:
Move horizontally to slide the hinge pin into the center hole.

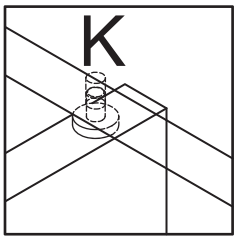

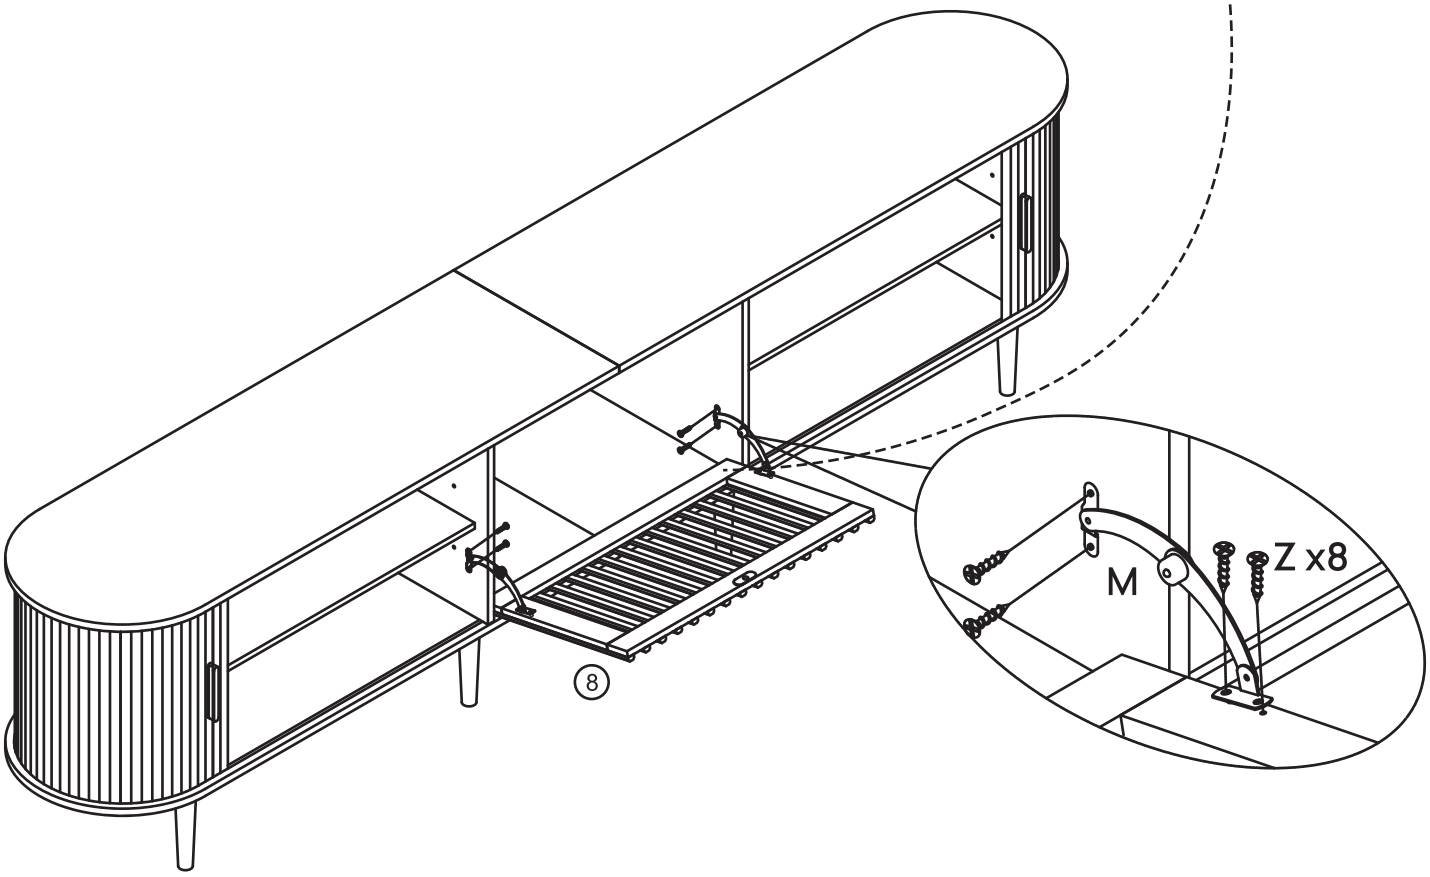

L x1



M x1



P x8



φ3.5 x 12 mm