



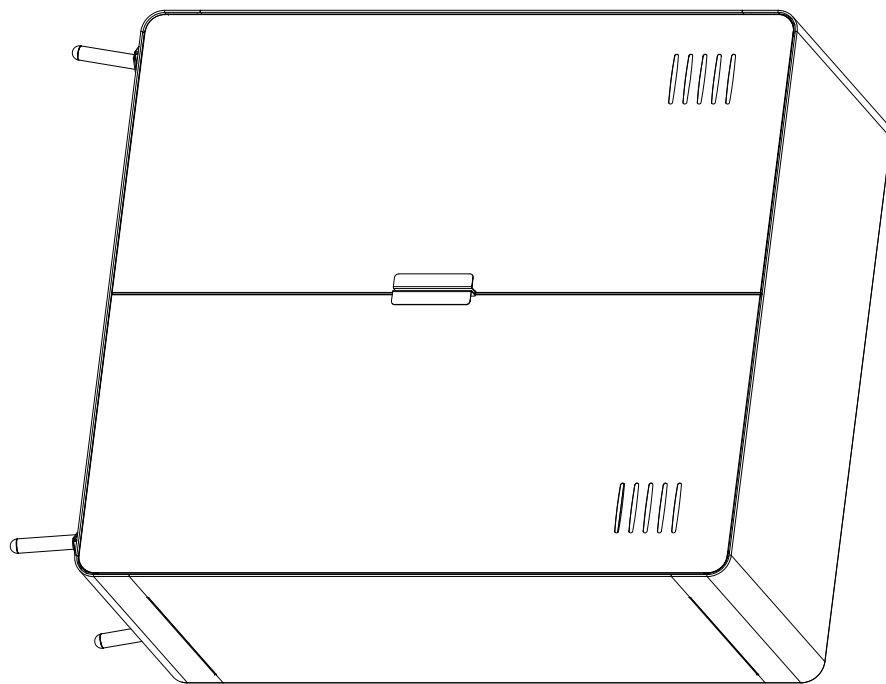
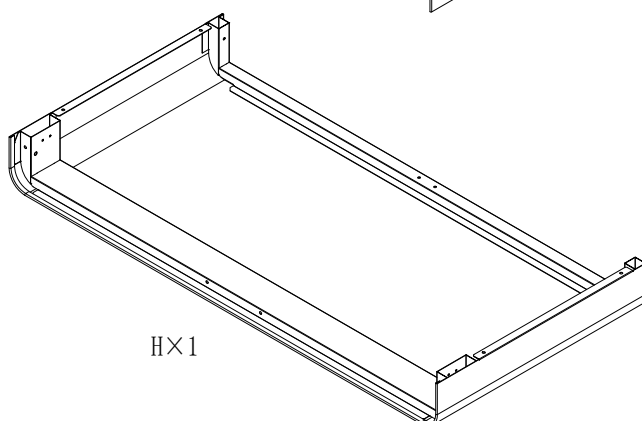
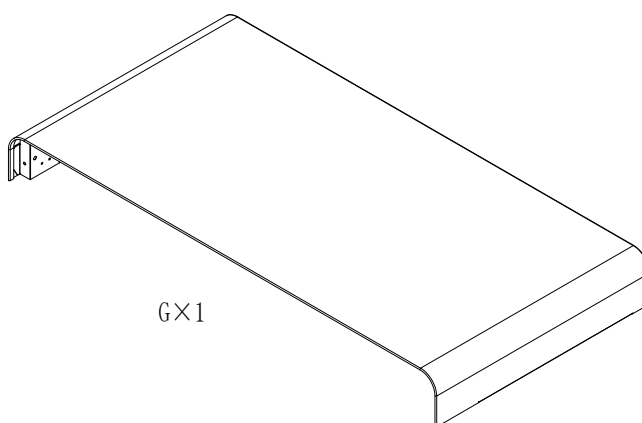
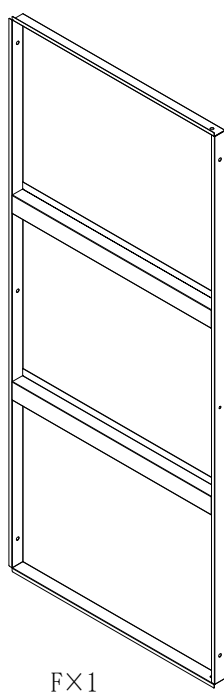
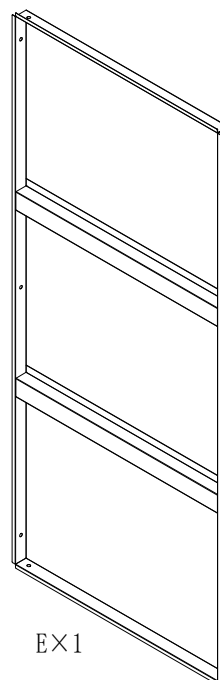
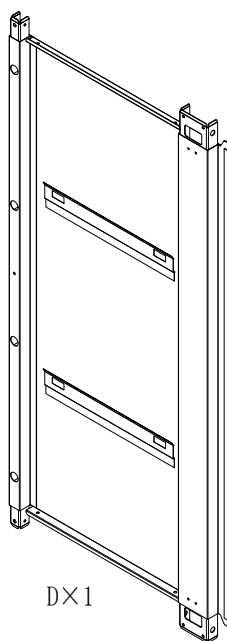
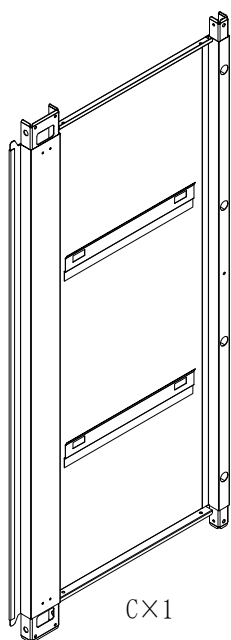


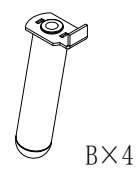

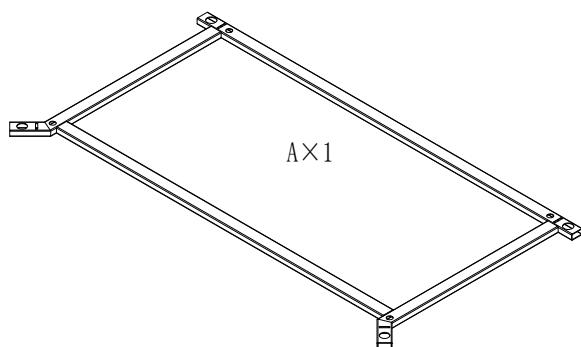


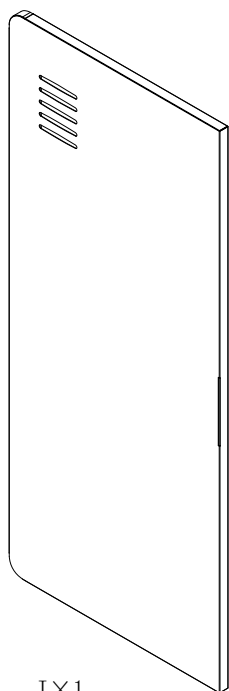


I×1

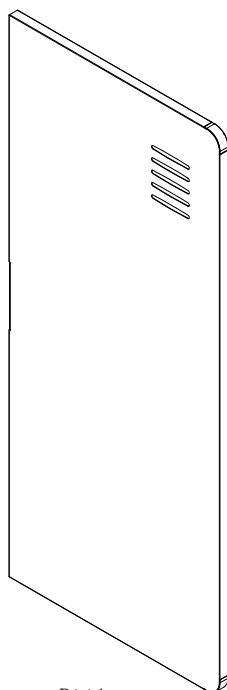


R×1

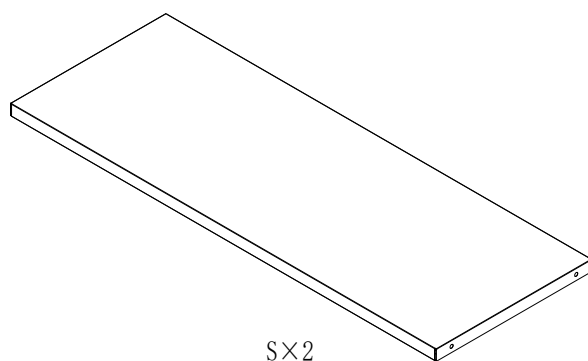


S×2

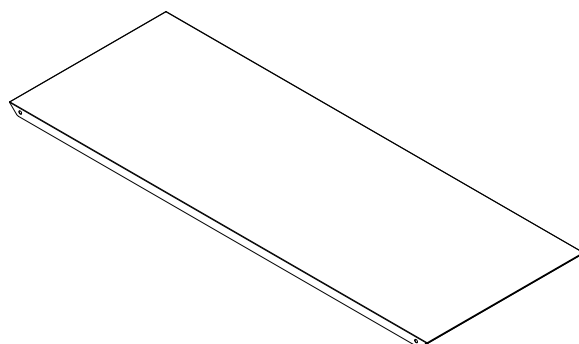


T×1

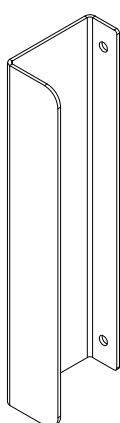


U×2

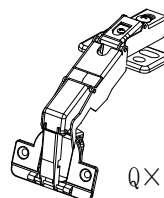

Q×6

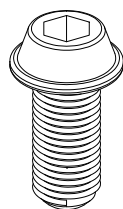


O×4
M8×20MM



M×4
M6×10MM



J×4
M4×10MM




K×37
M4×10MM




P×1
4#




L×1
6#

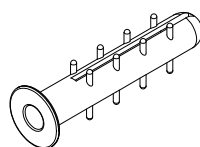


Y×2

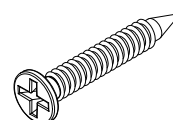


Z×2
M4×40MM

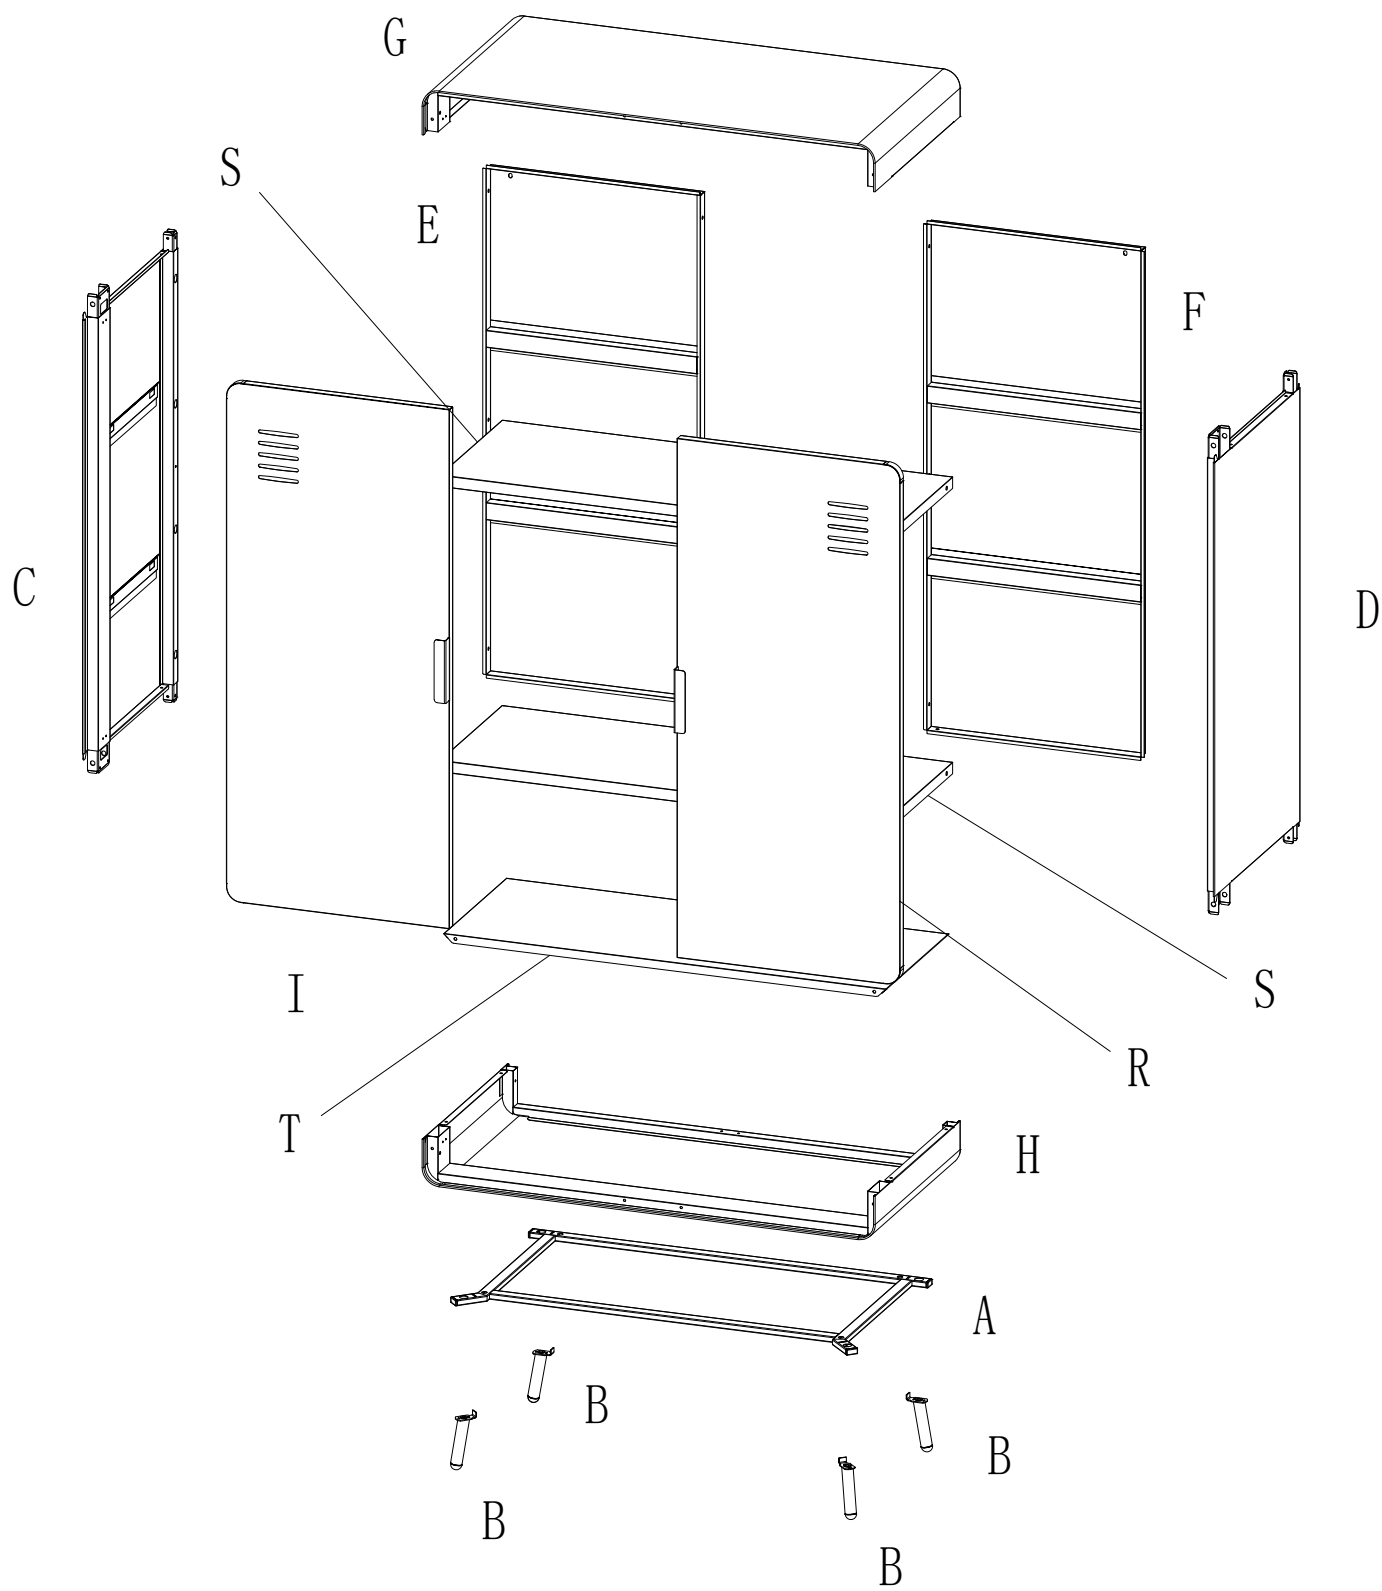


1

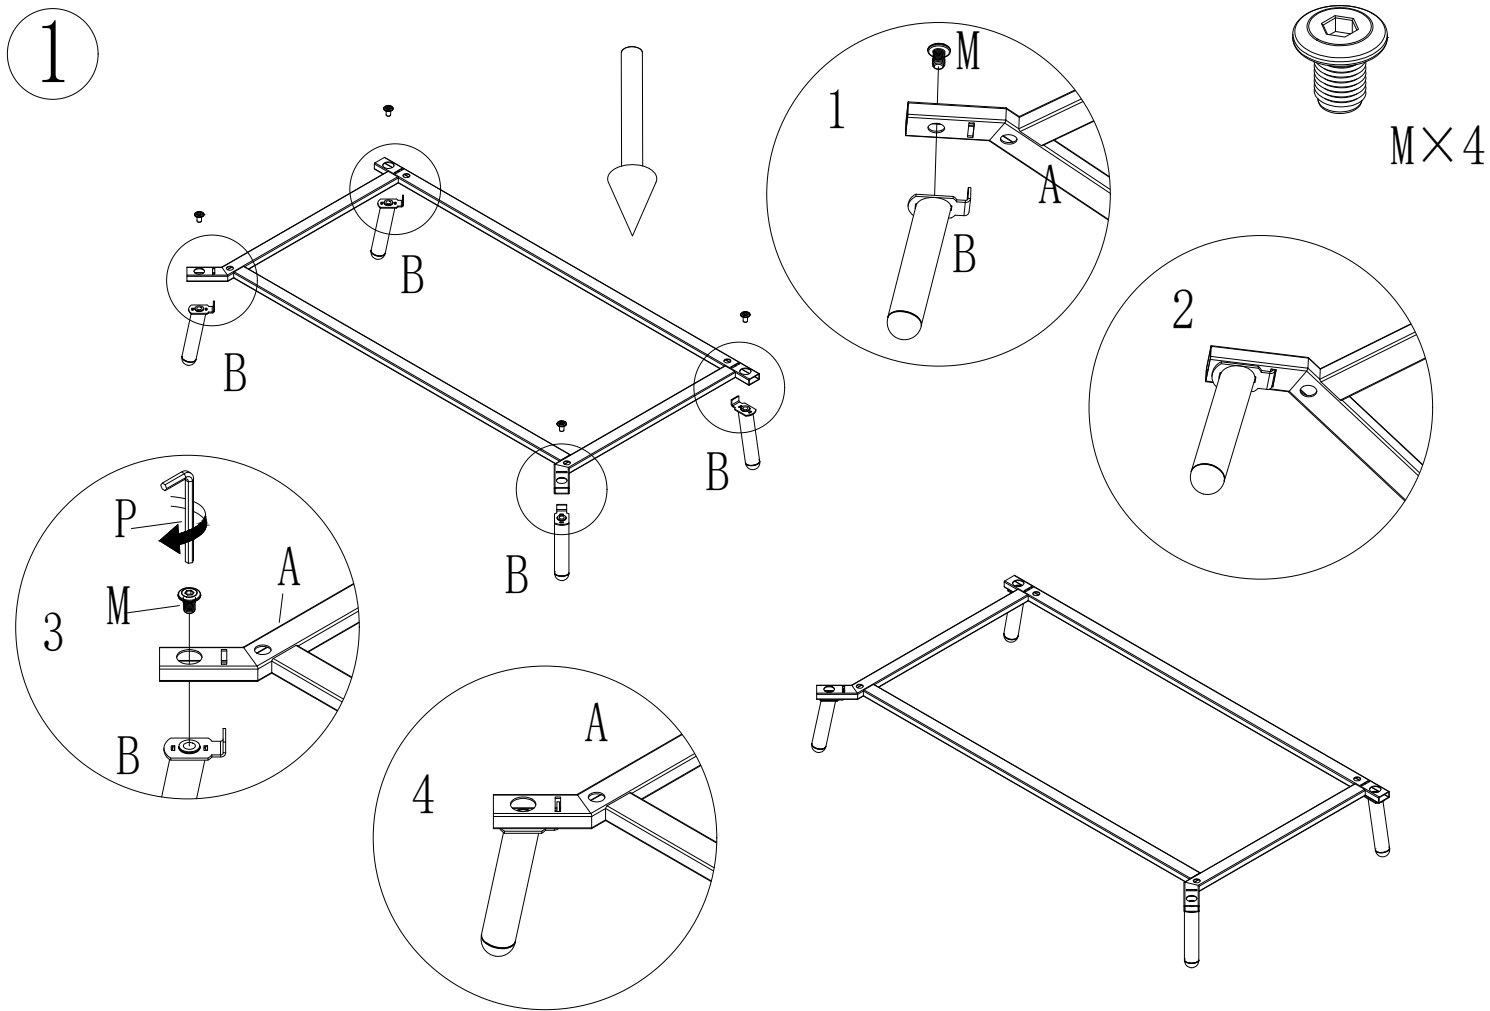


2

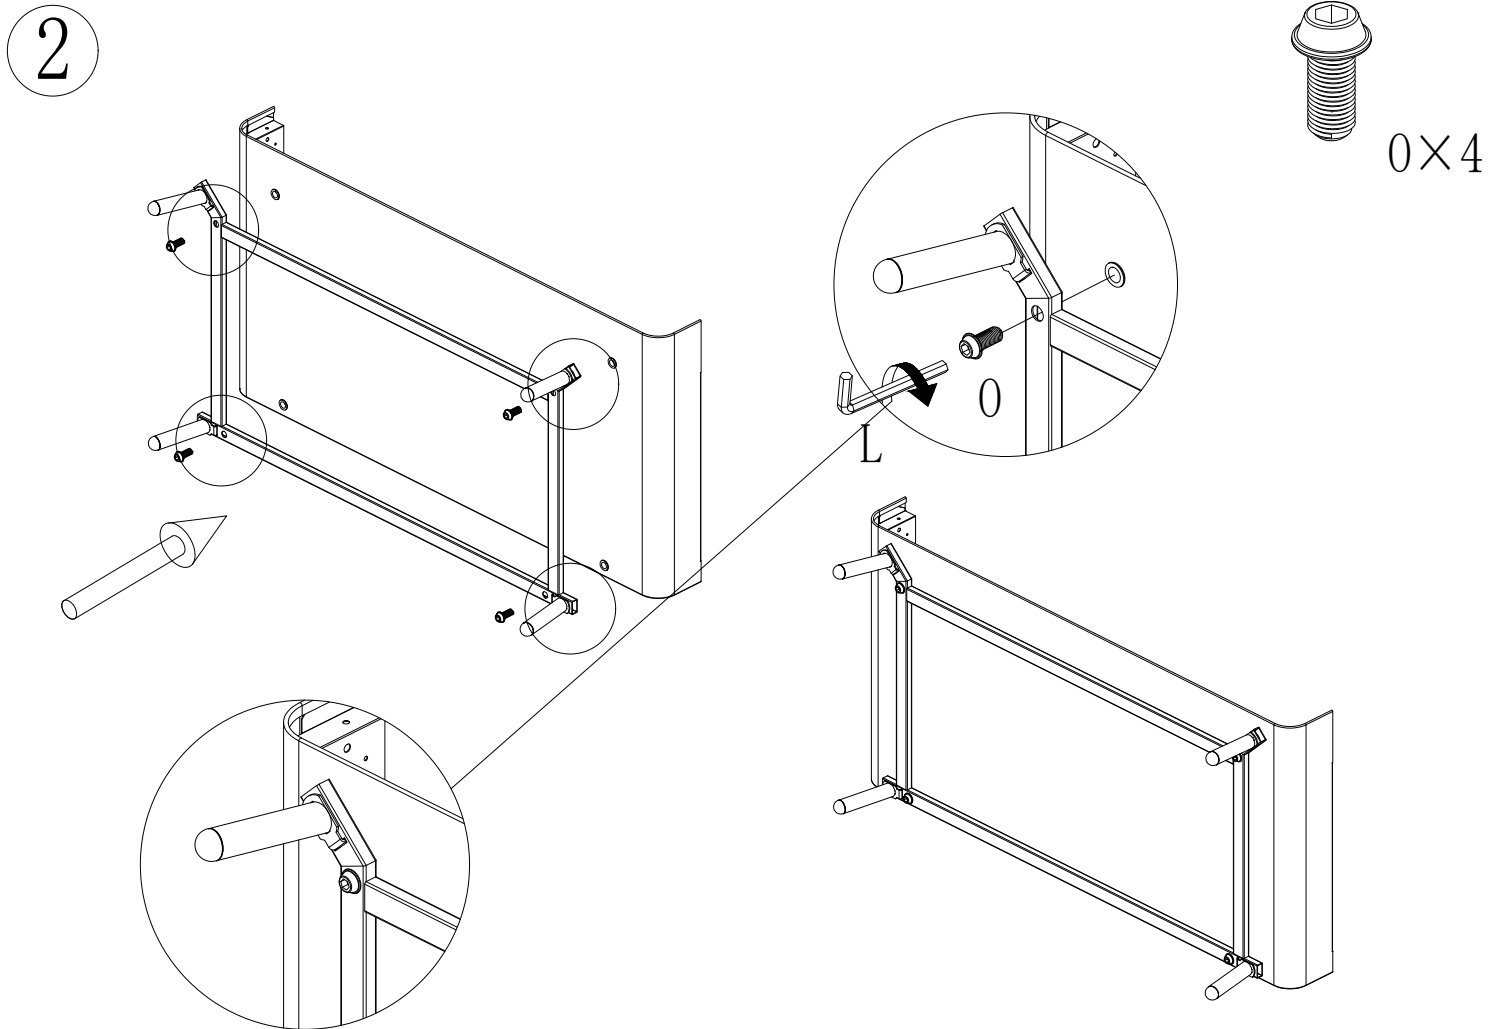


3

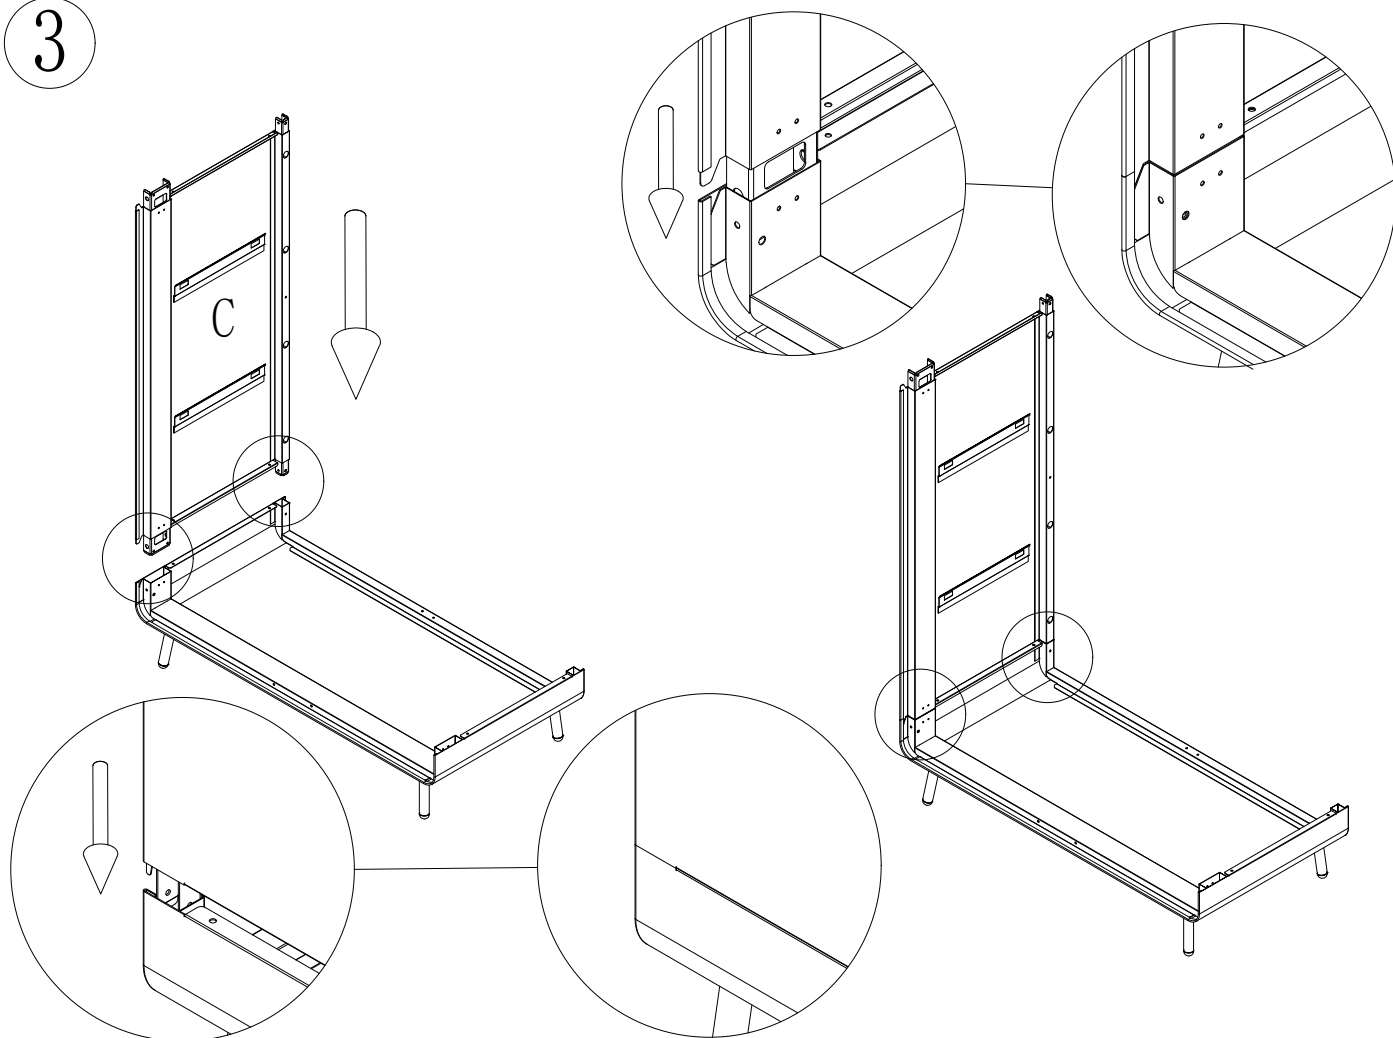


4

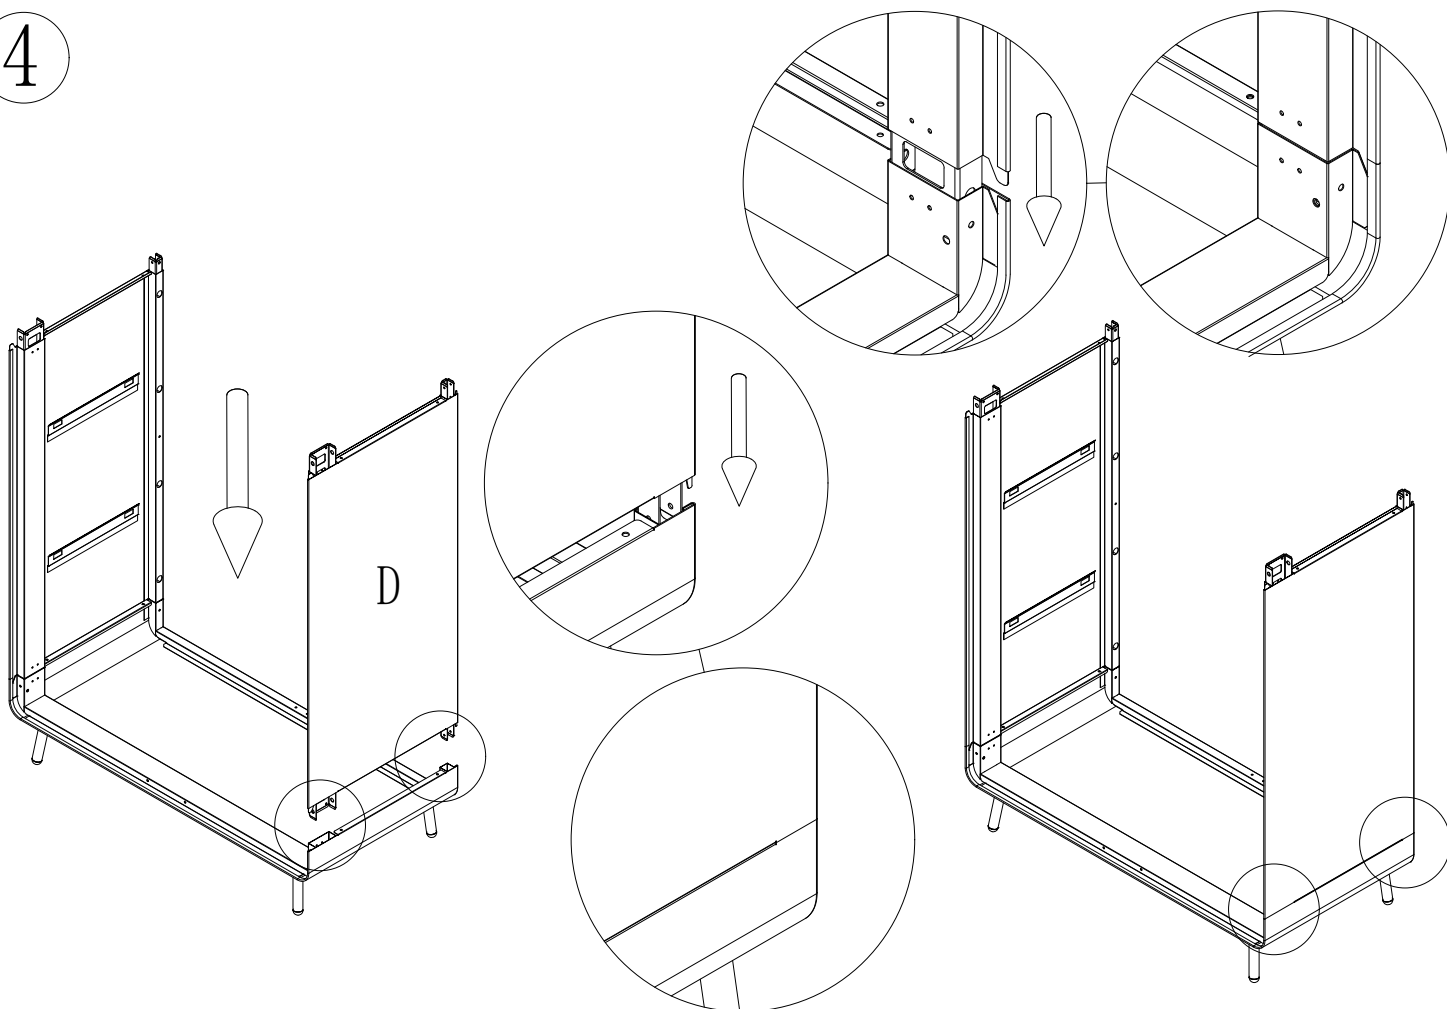



5

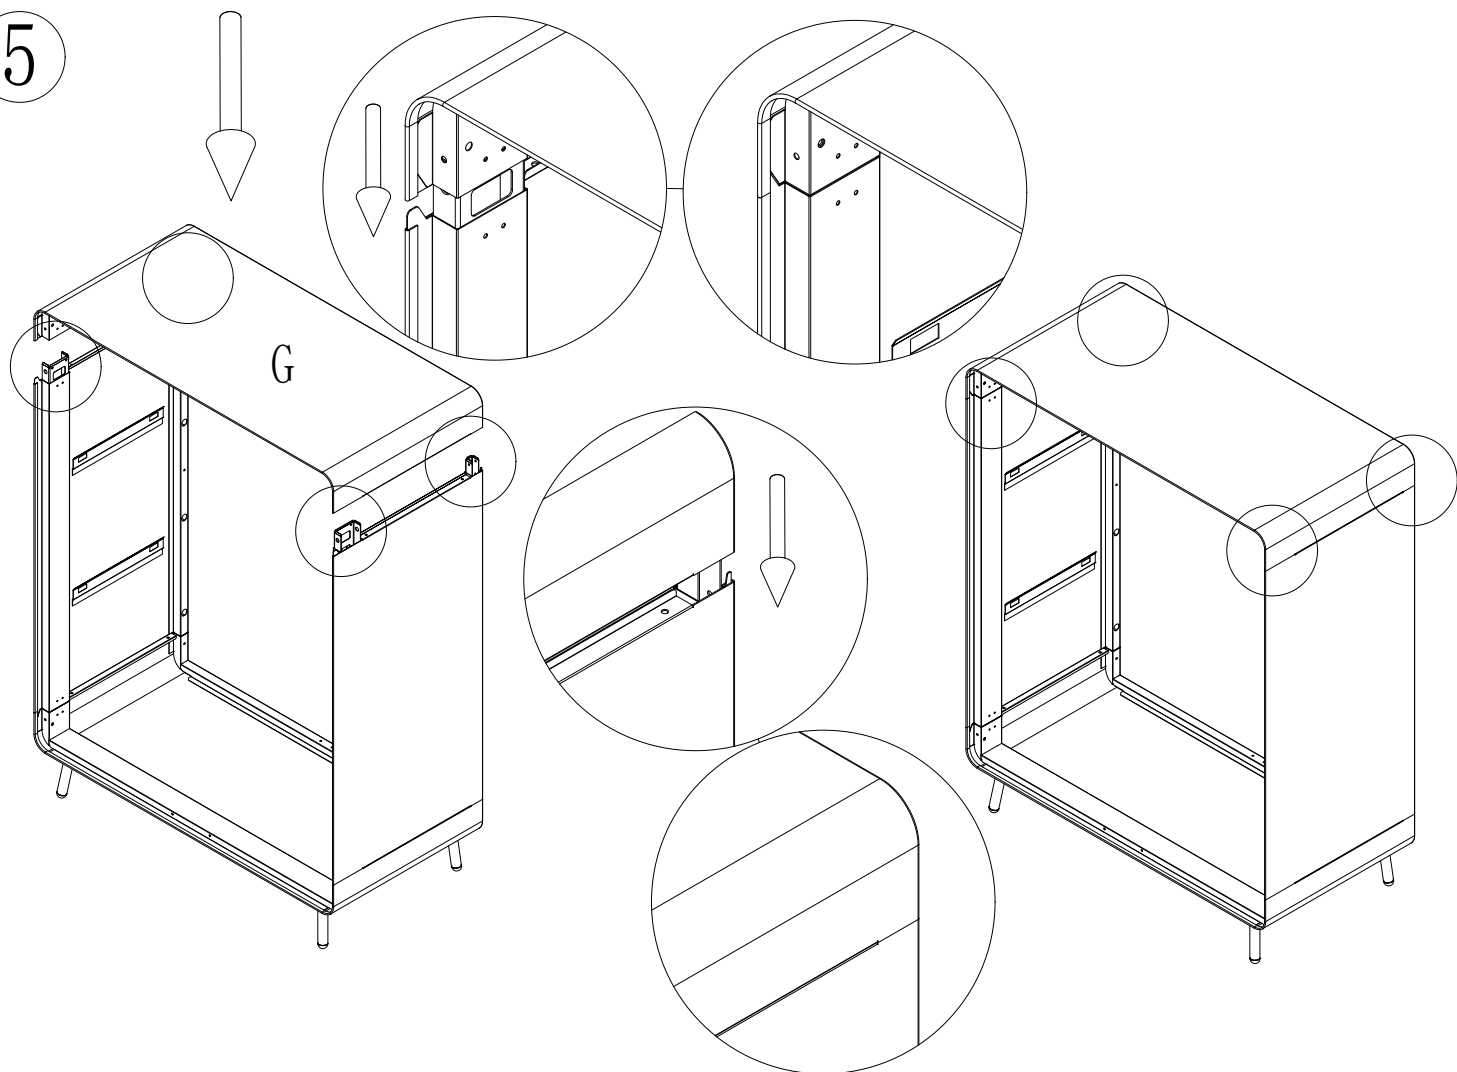



6

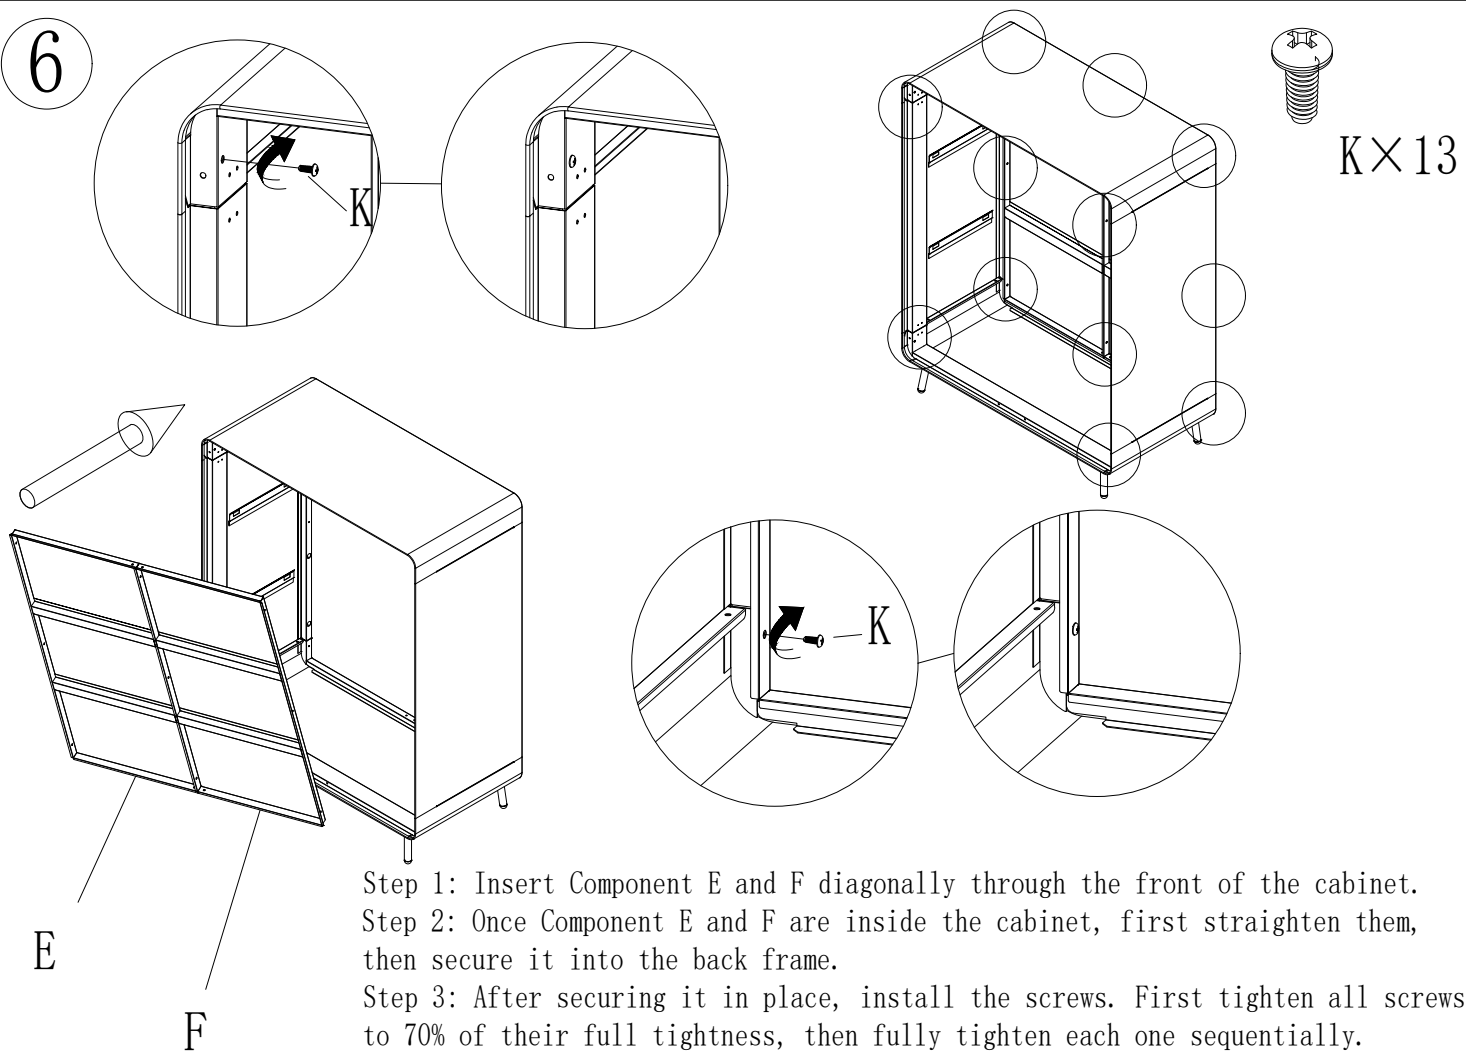



7

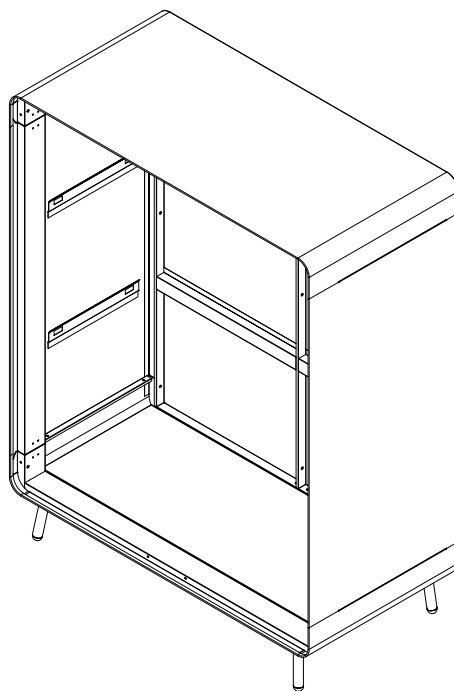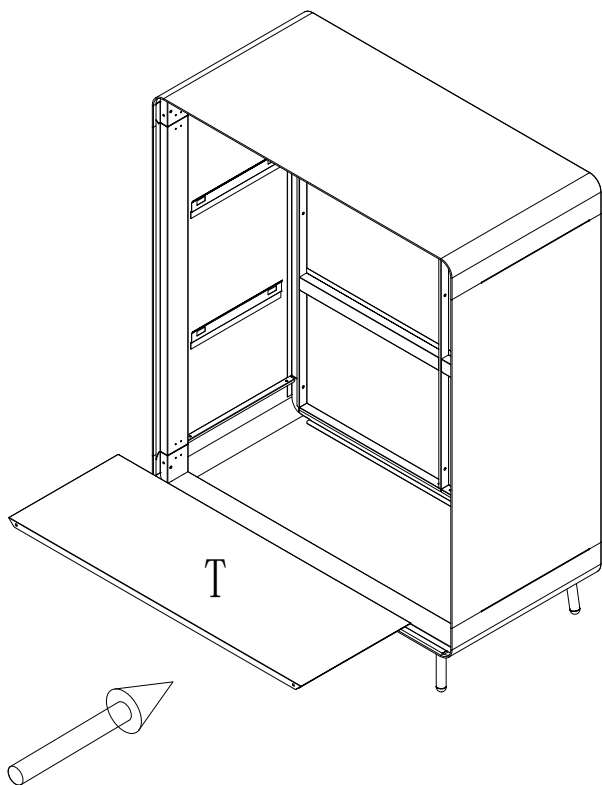

8



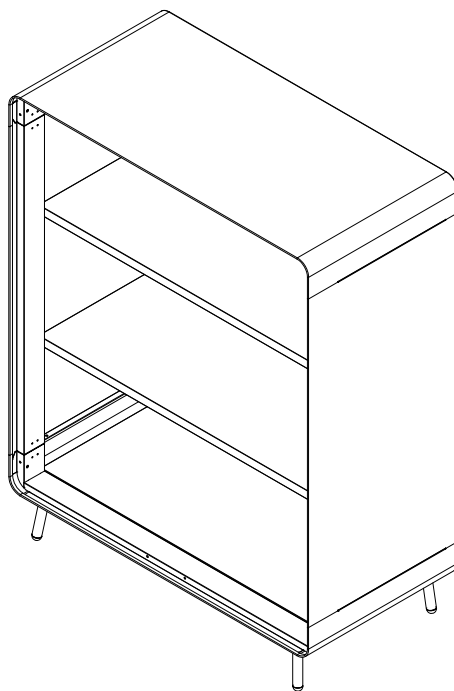
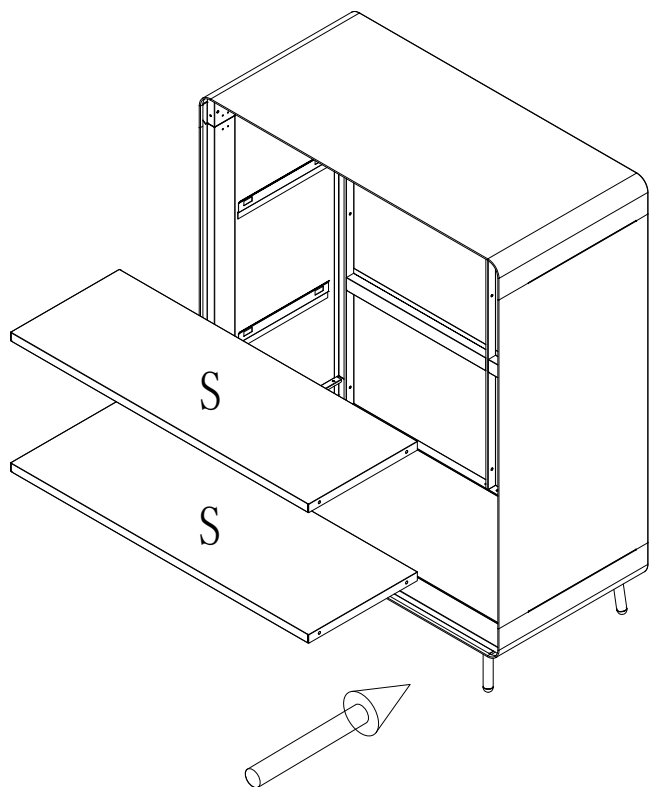


9

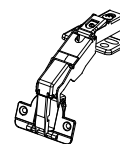

Q×2





K×4

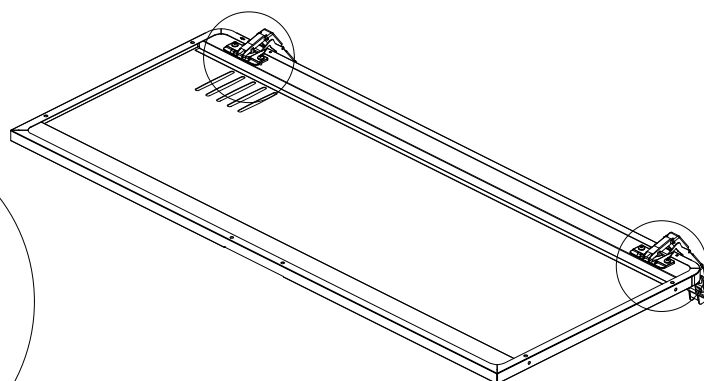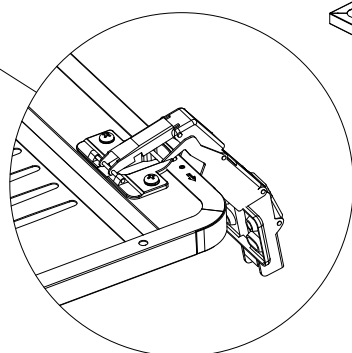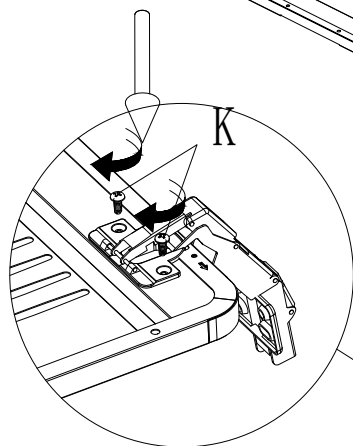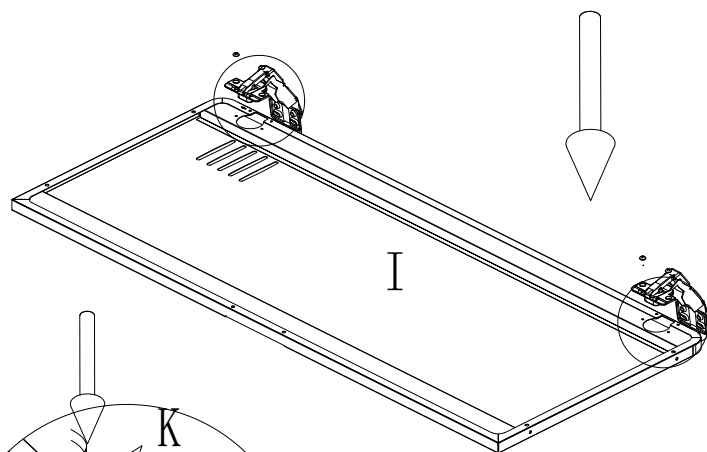


10




J×2

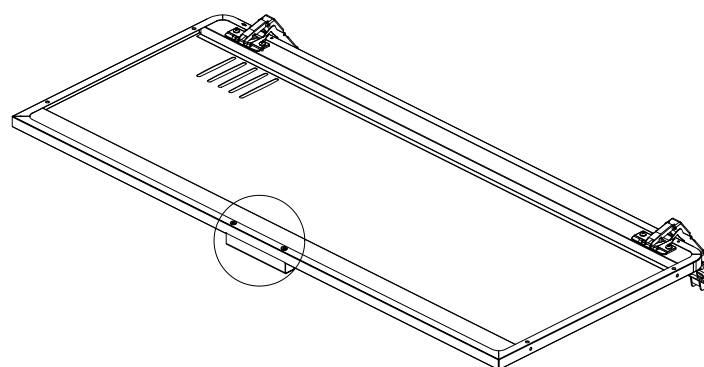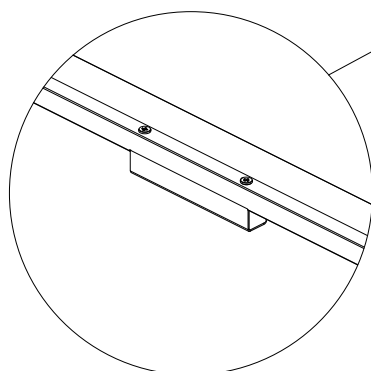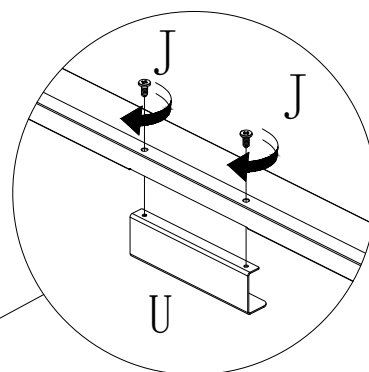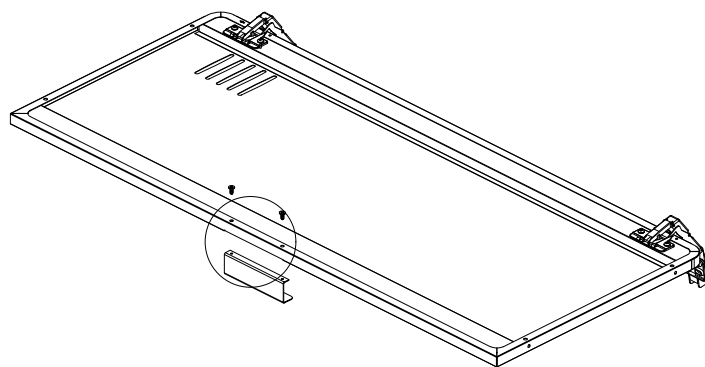


11

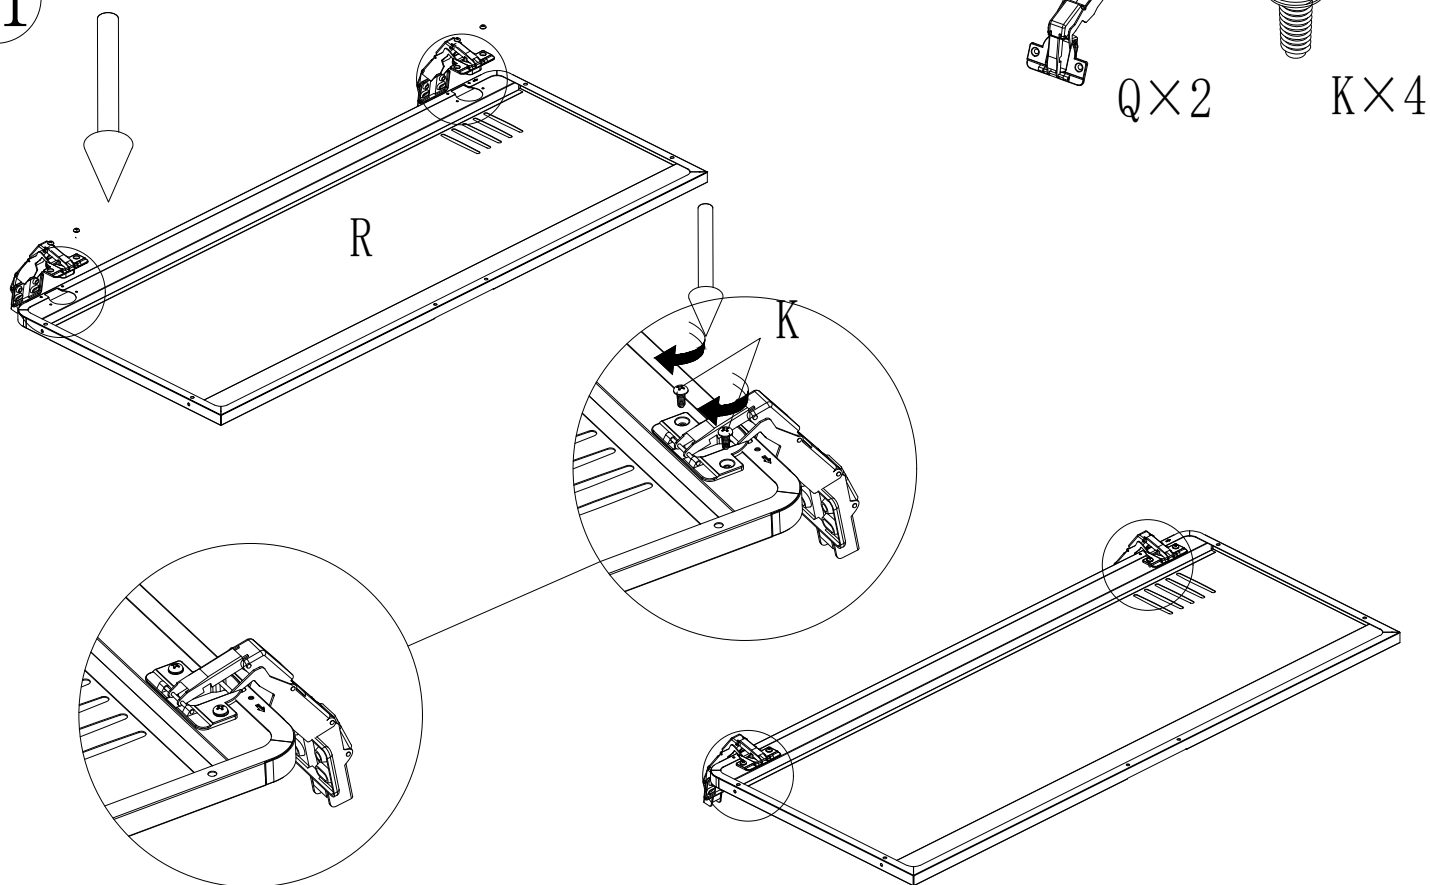


12

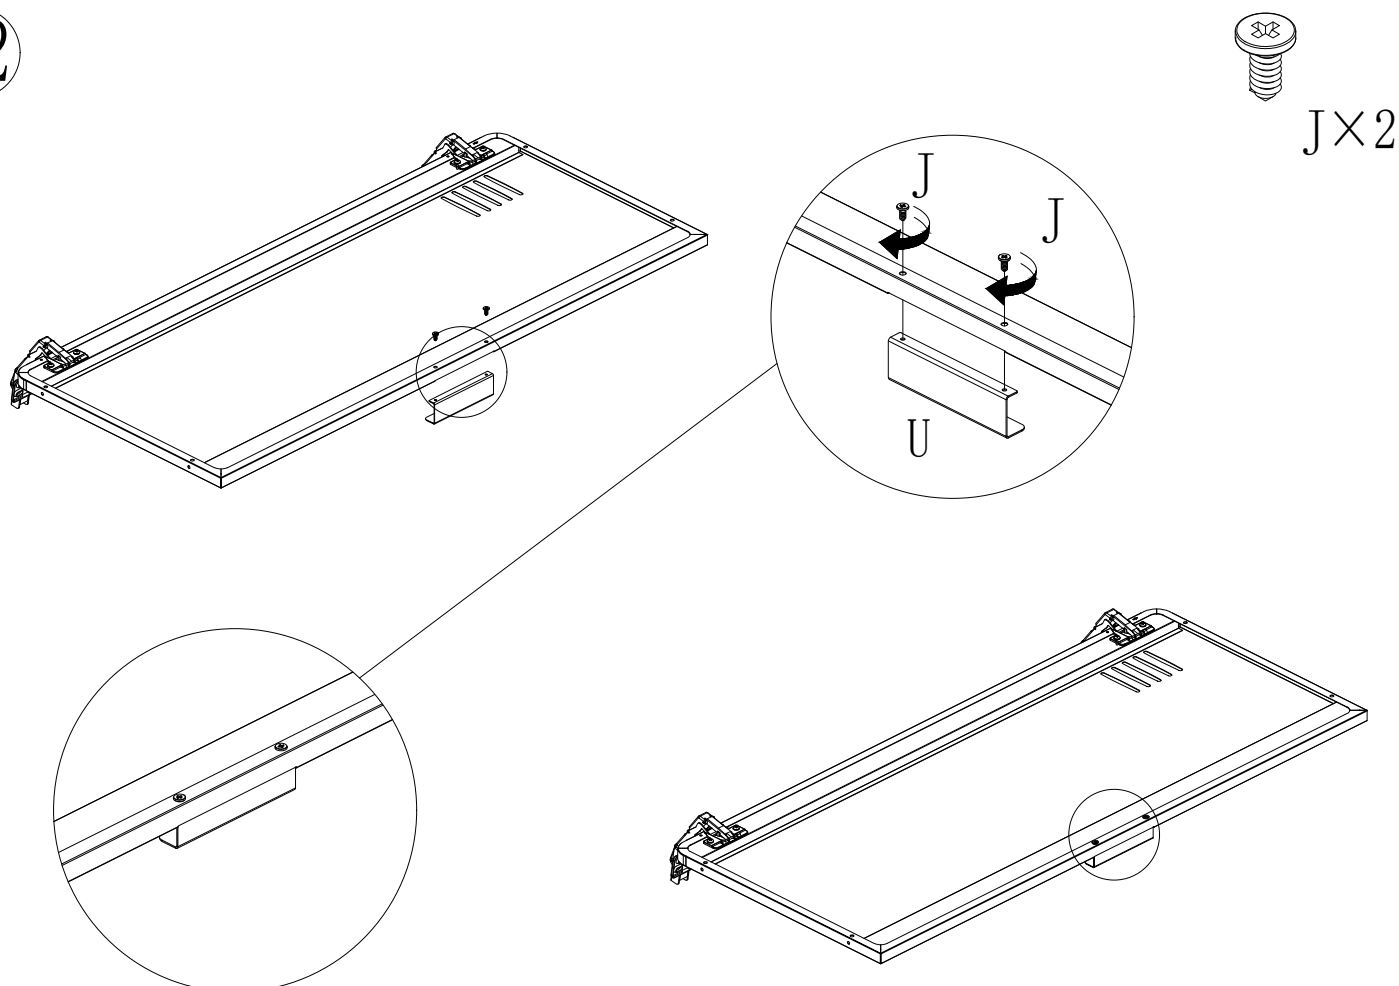


13

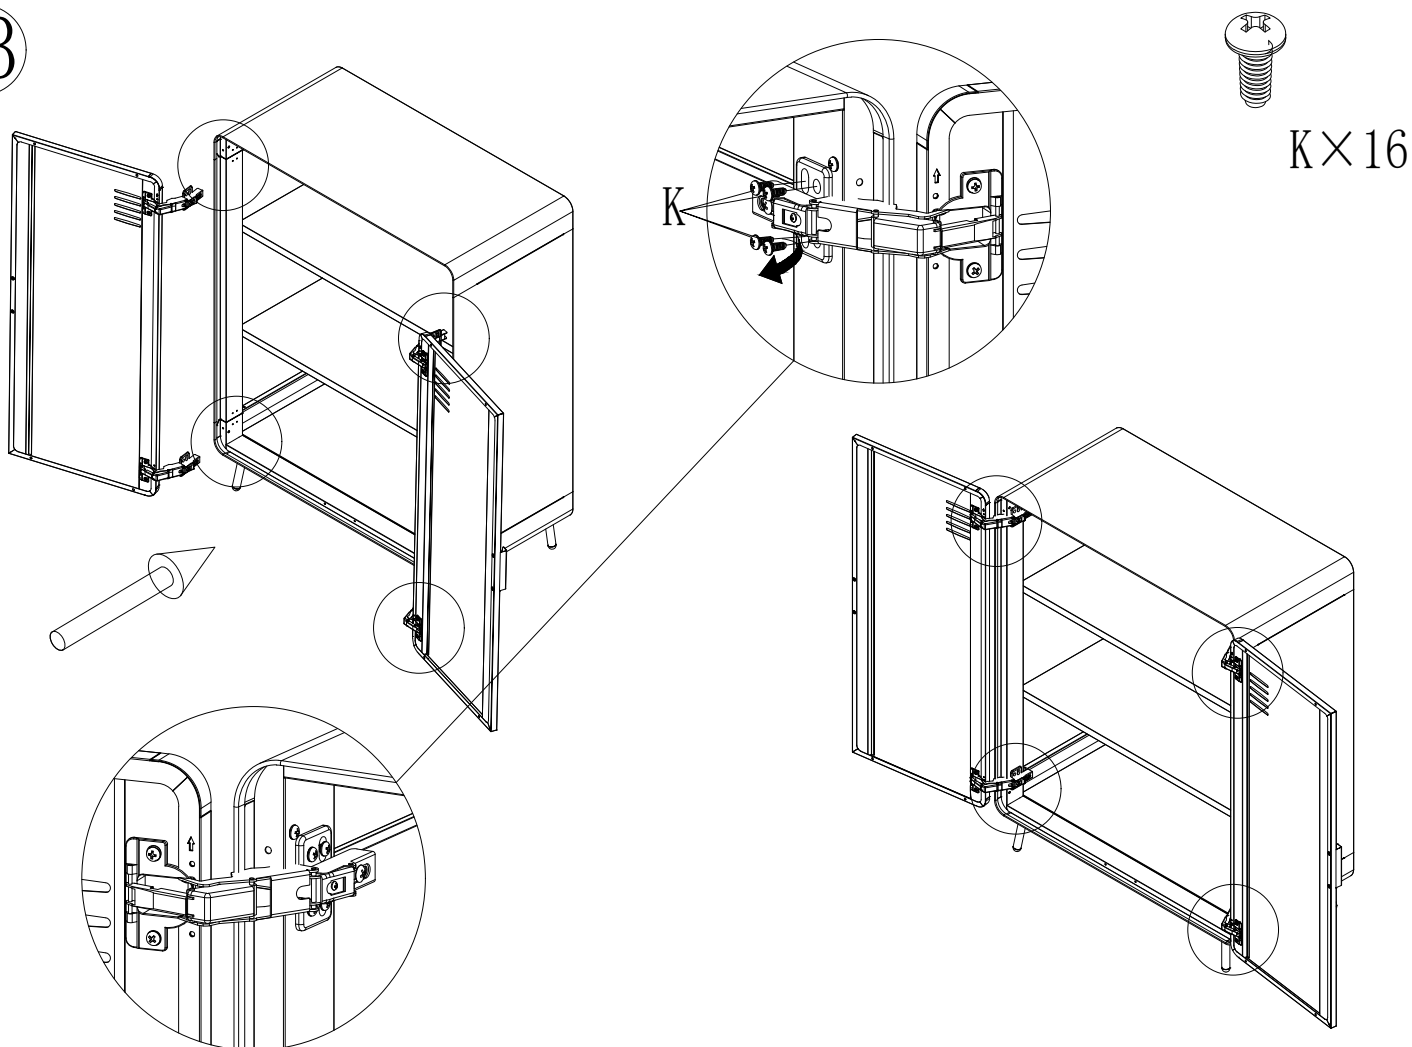

14

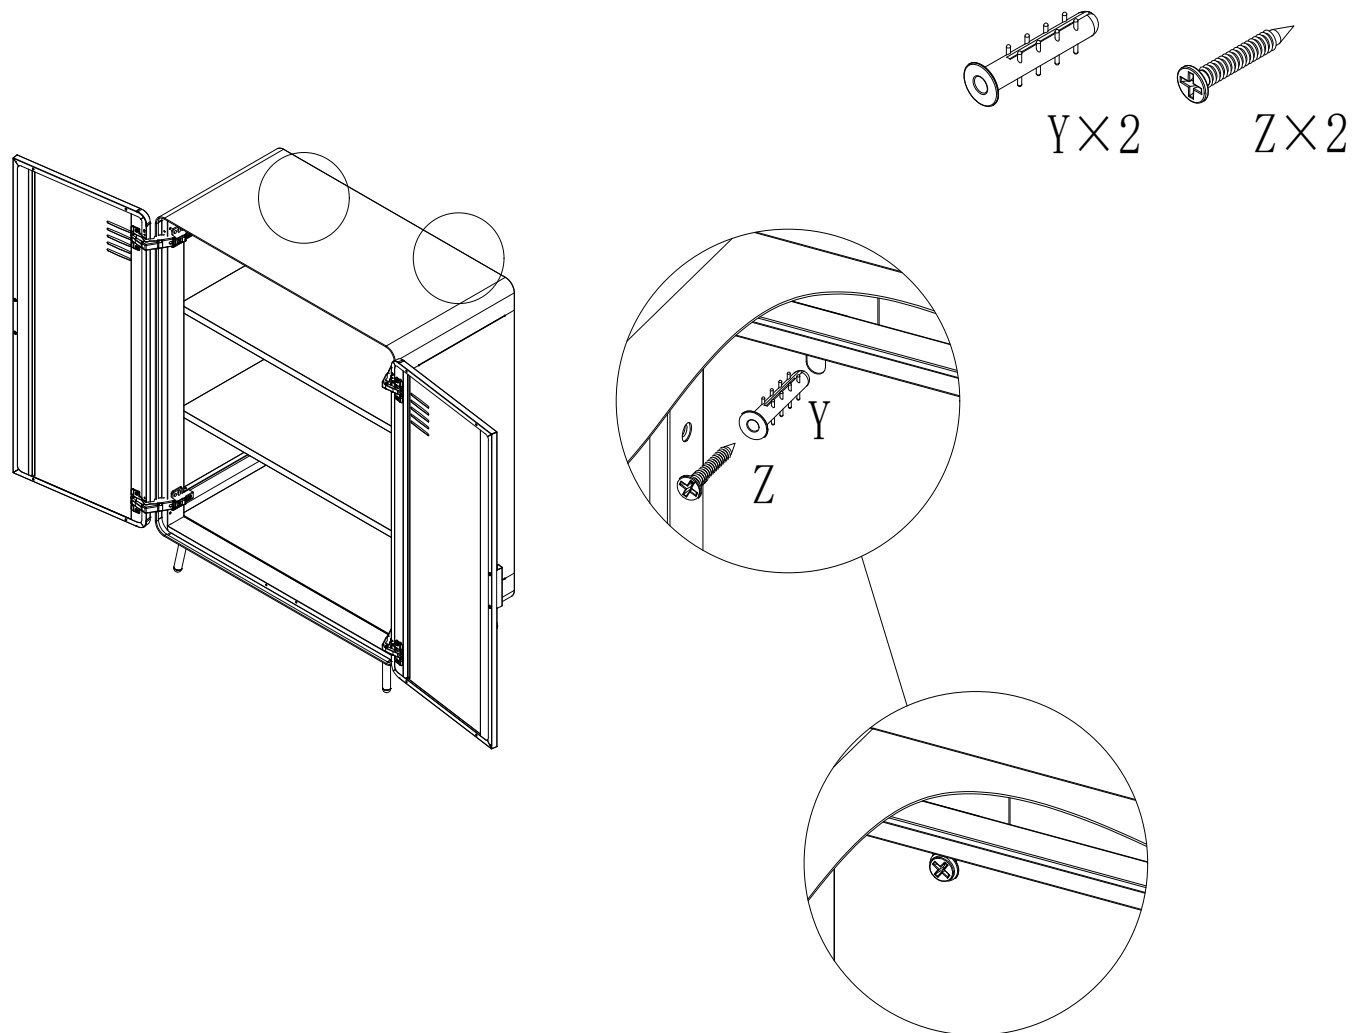

15

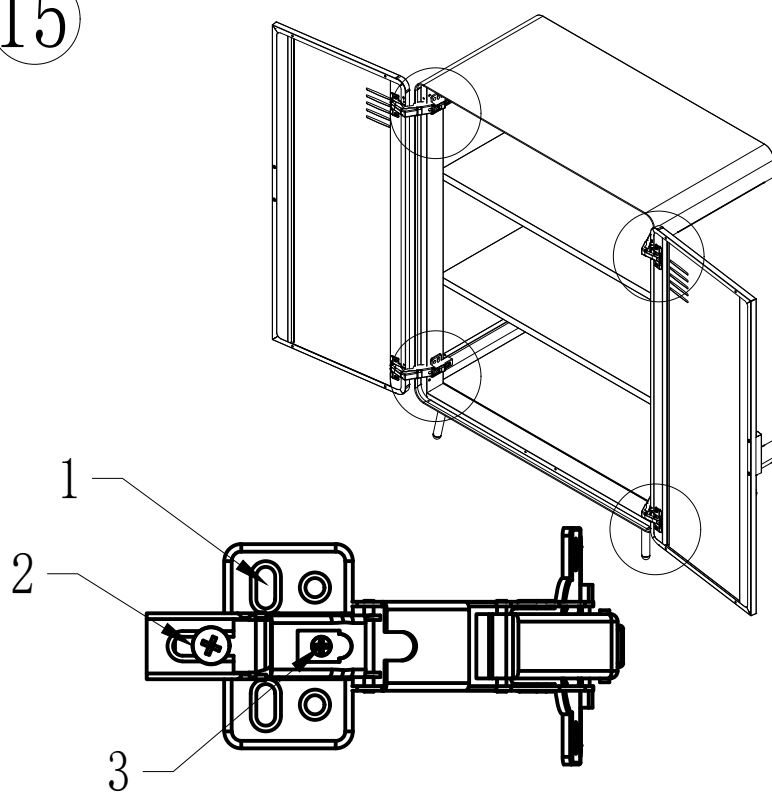

1. Adjust the uneven up-and-down position of the cabinet door.
2. Regulate the gap between the cabinet door and the frame.
3. Adjust the left-right height imbalance of the cabinet door.

