



Installation & Assembly

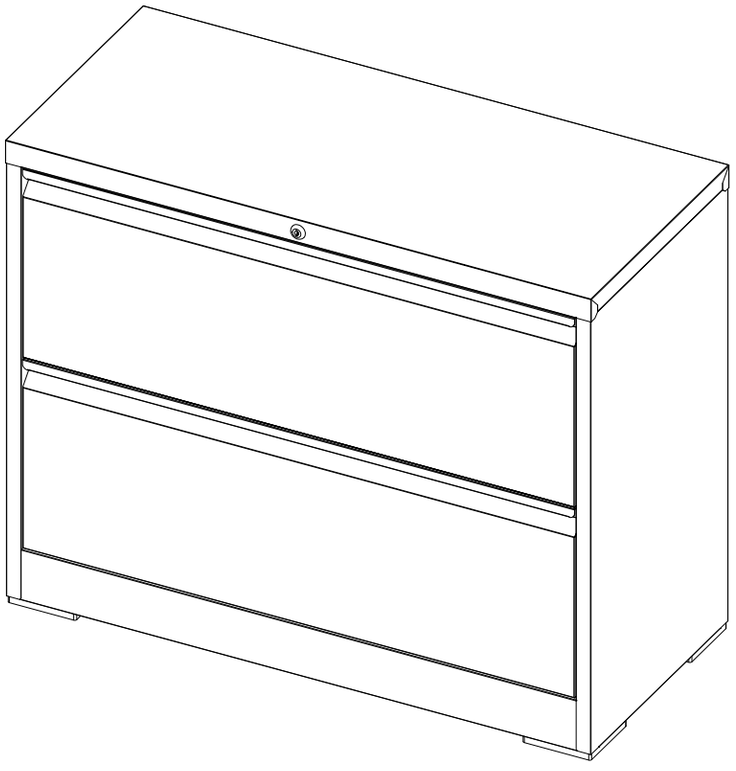

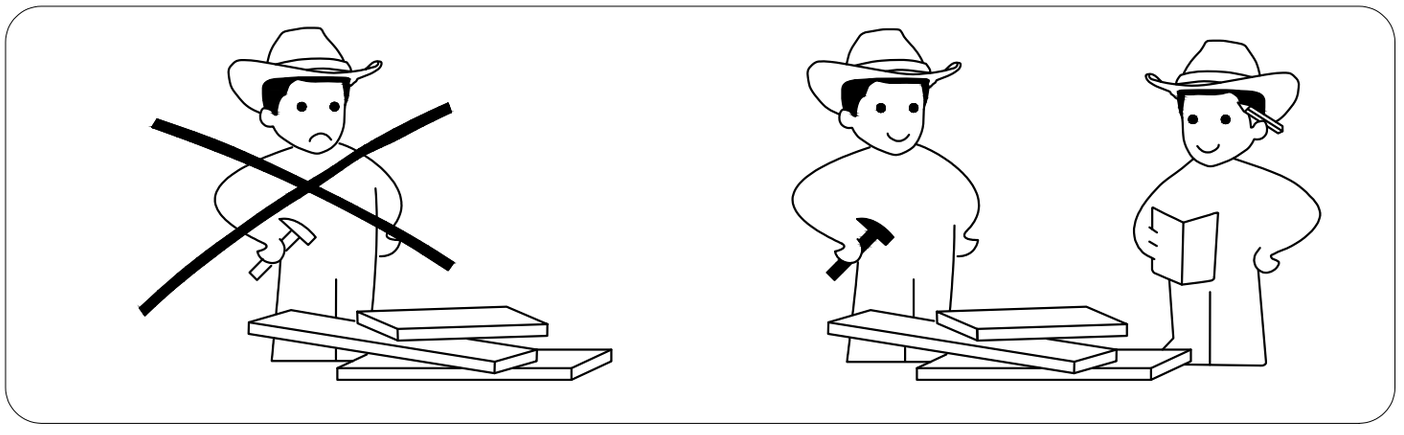


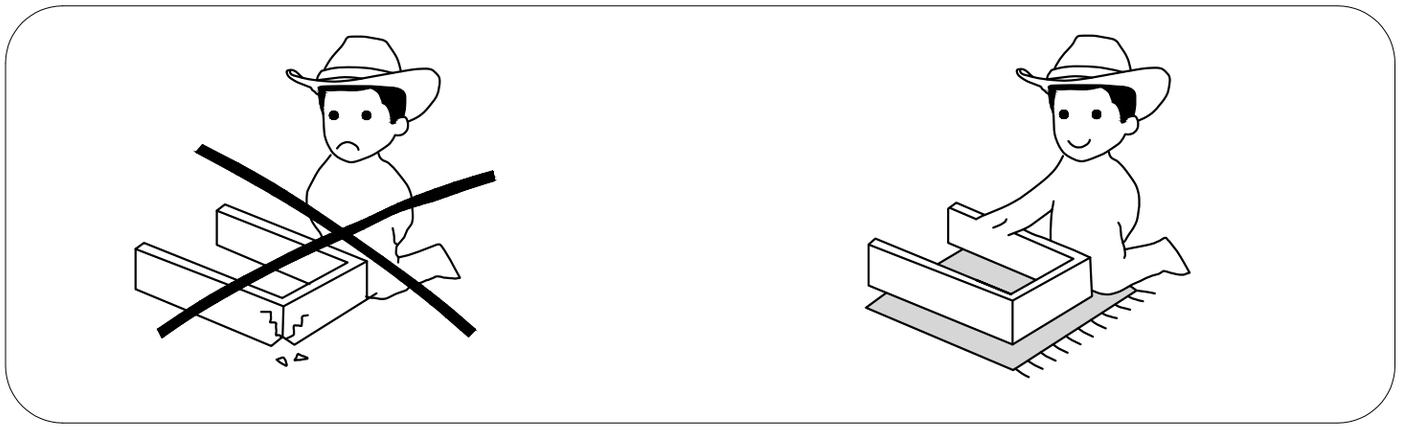

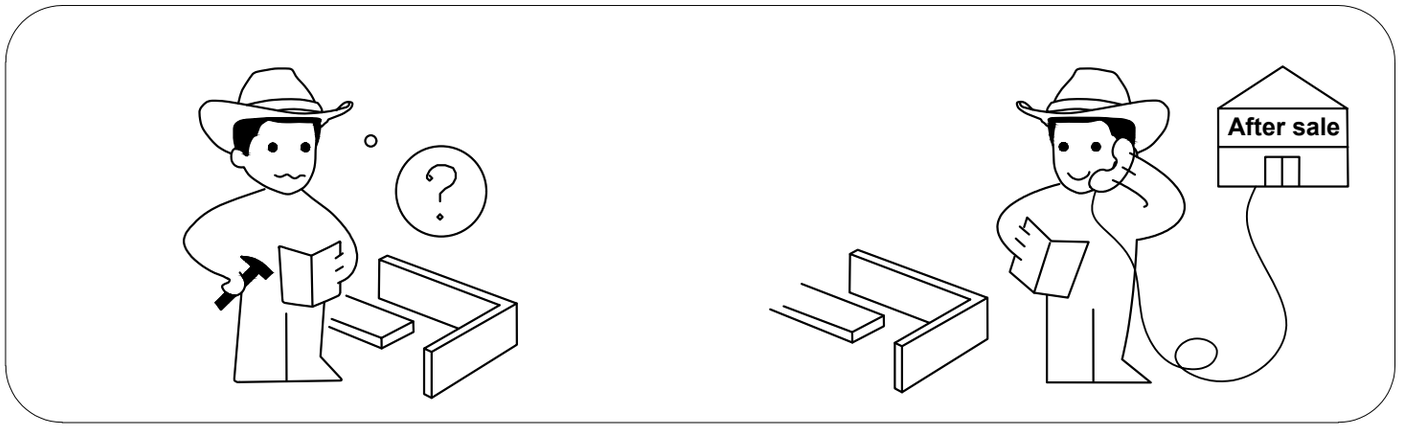



After sale


1×2

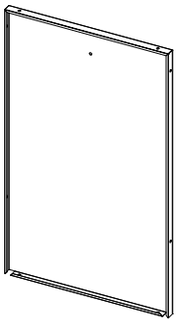


2×1

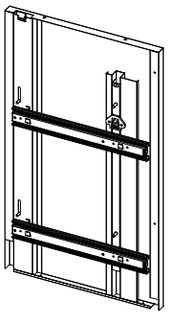


3×1

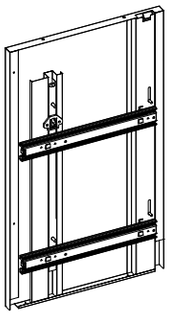


4×1

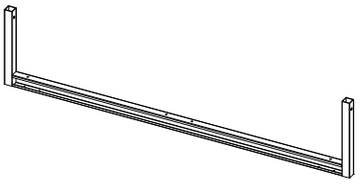


5×1

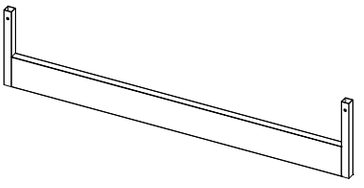


6×1

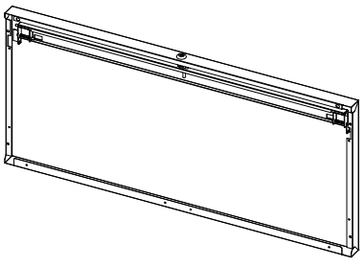


7×2

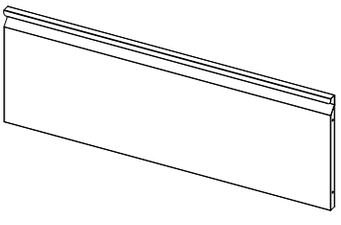

8×2

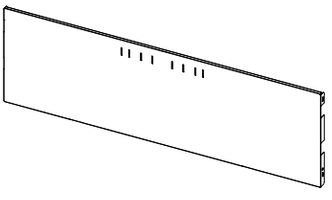


9×2

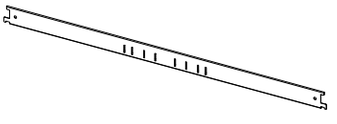

10×4



11×2

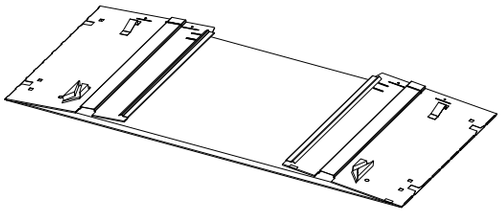

A×24



M4×8mm / 0.3inch

B×16



M4×16mm / 0.6inch


C×2



D×2



E×4

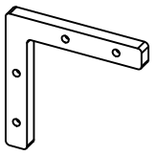

G×2




M8



M5×30mm / 1.18inch





M5






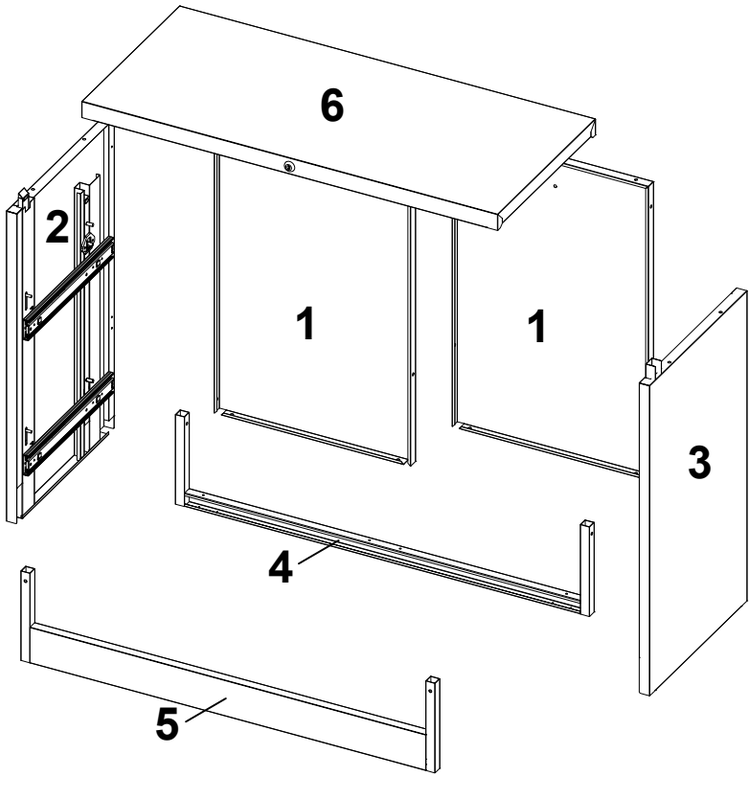



6
2
1
1
3
4
5

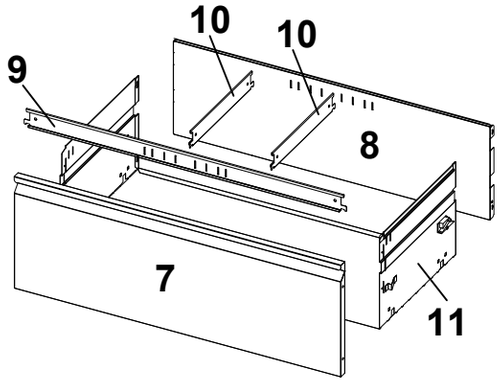

10
10
9
8
7
11

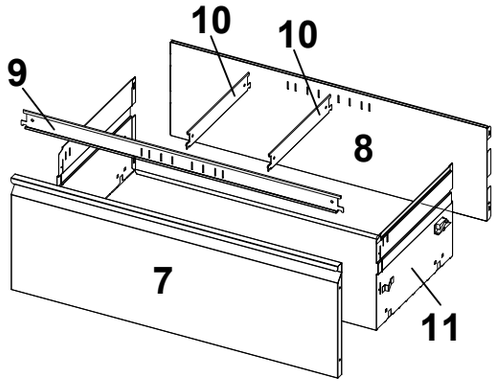
10
10
9
8
7
11

1


Inser part 4 into the channels of the two side panels

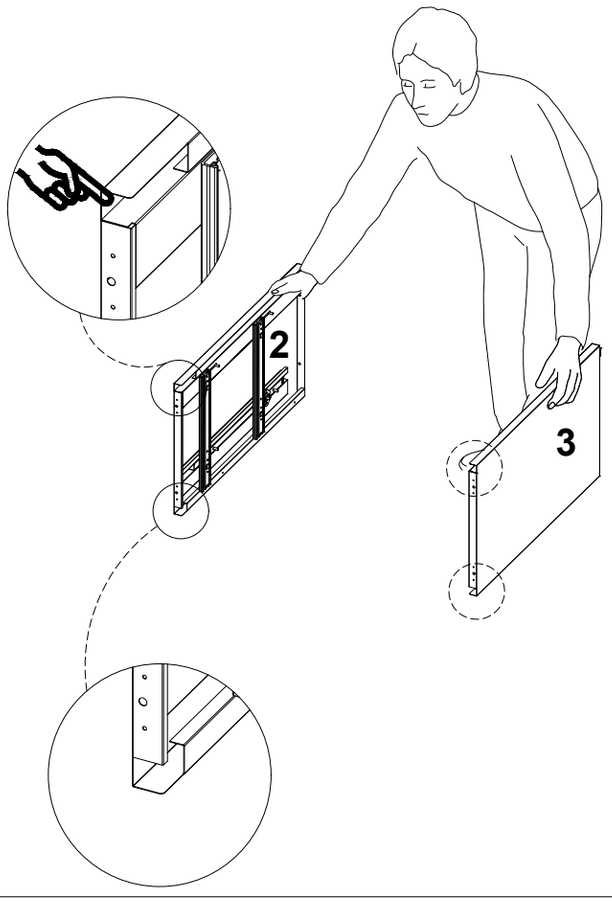


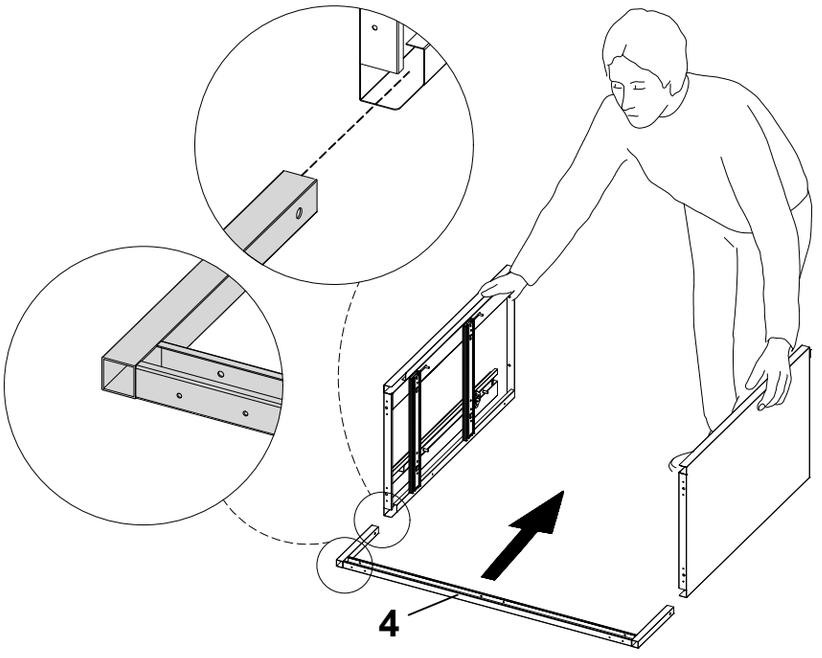


2

Inser part 5 into the channels of the two side panels

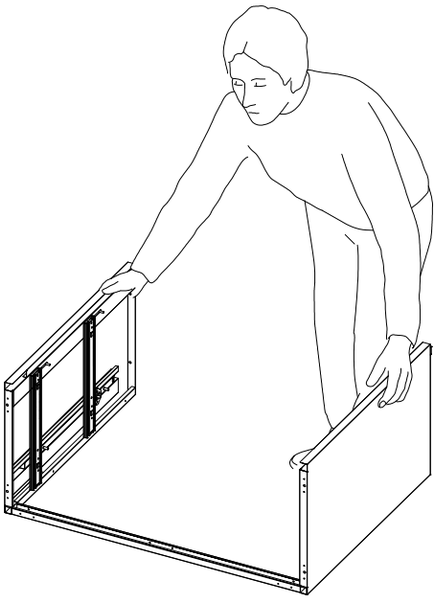


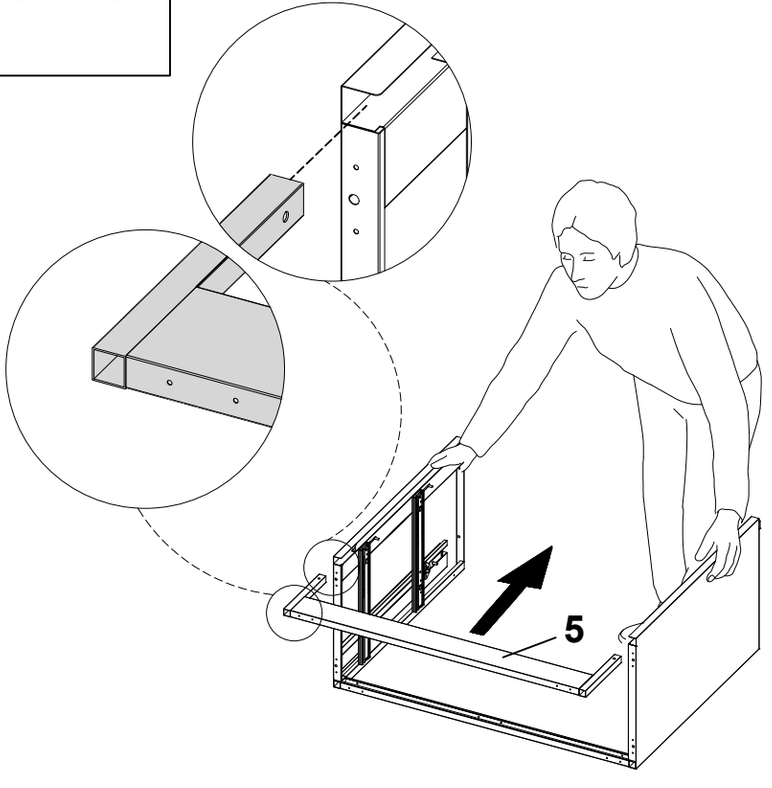


3

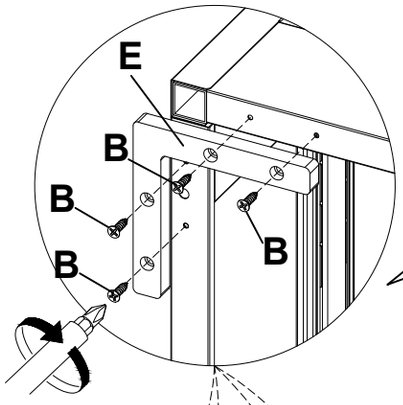


put sixteen screws to hold part E into place.

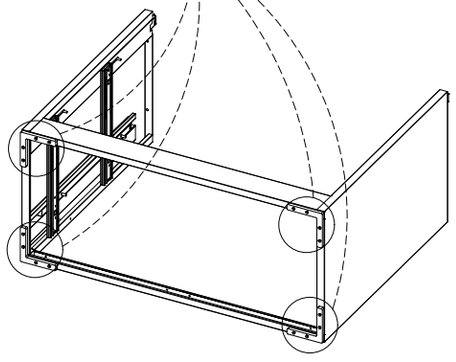

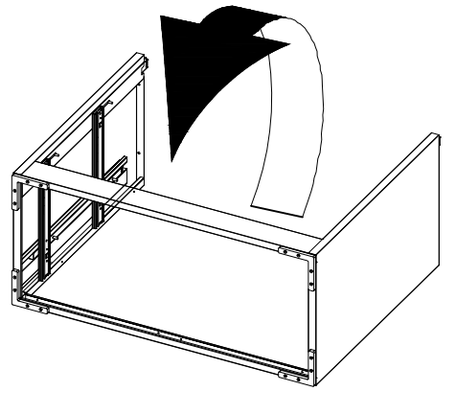


E×4 B×16

4

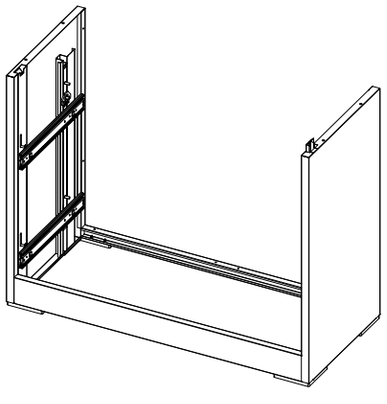


Place part 1 in position as shown in the diagram

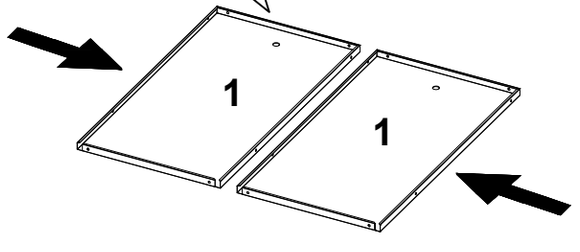

5


put two bolts and nuts to hold them in place

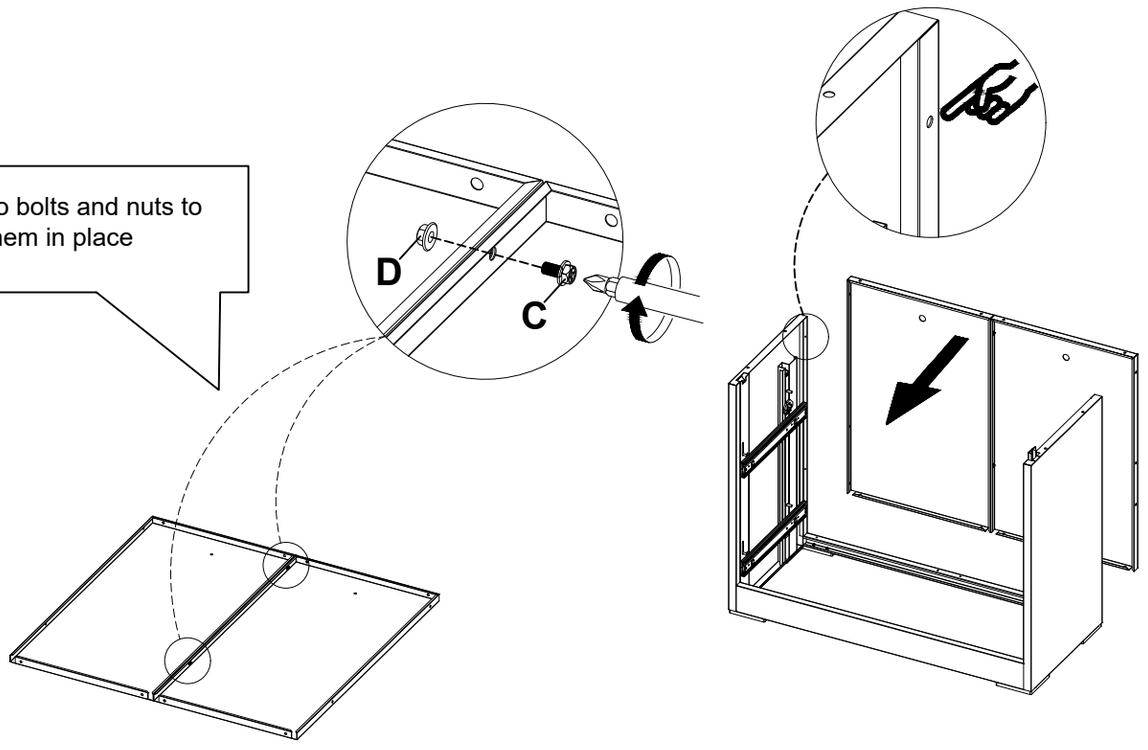

C×2	D×2


6


Put eight screws in the holes to make them in place.

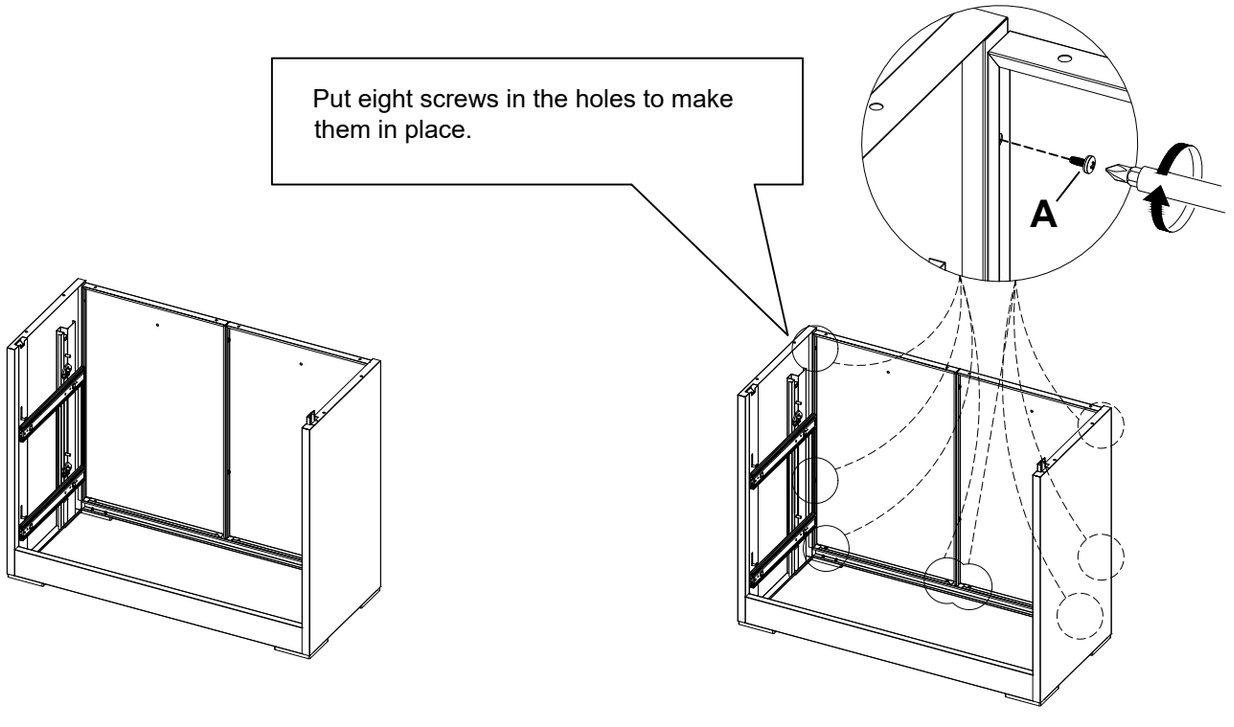

A×8


7

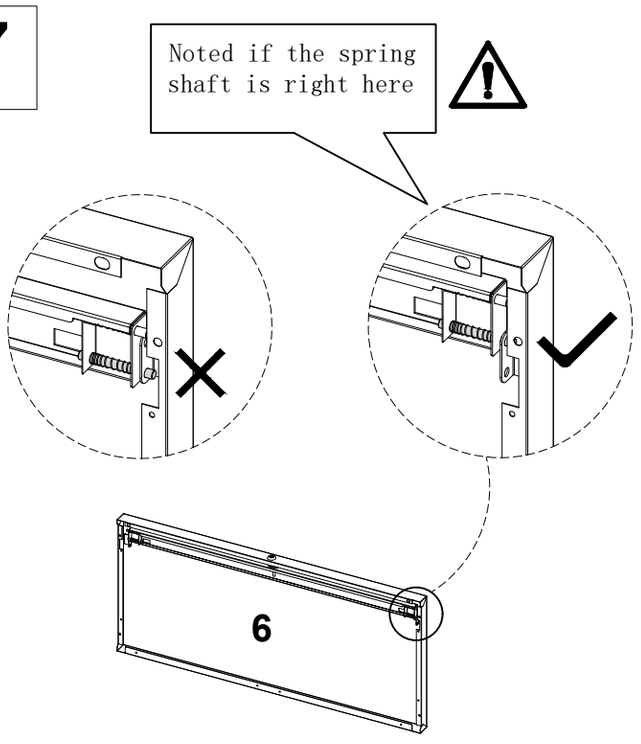

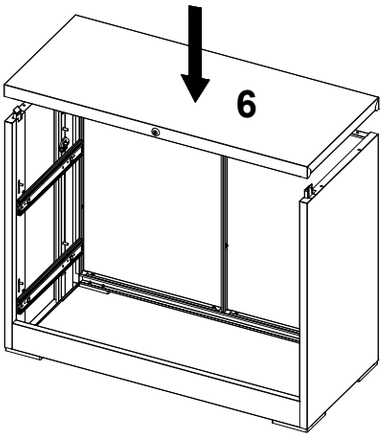


8


put eight screws to hold part 6 into place.

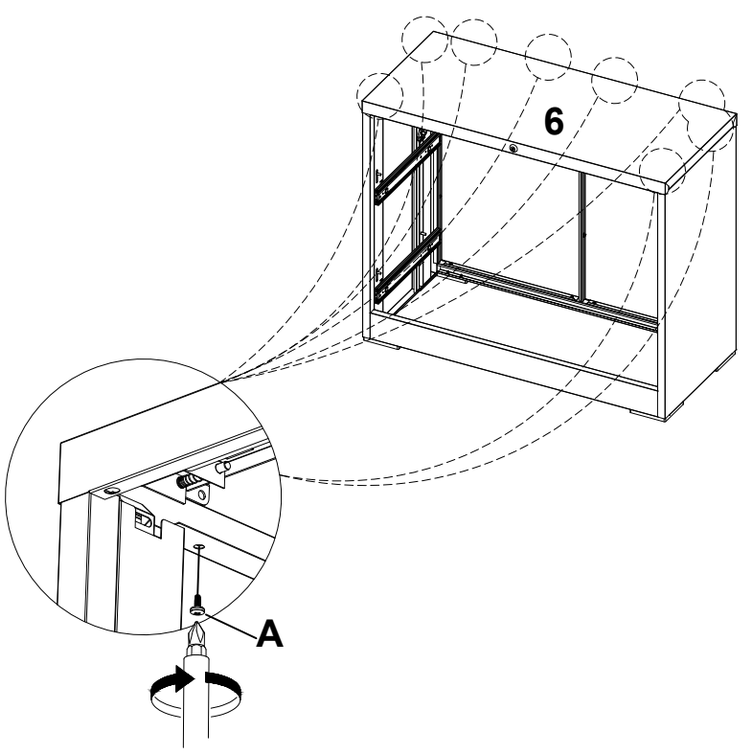

A×8


9

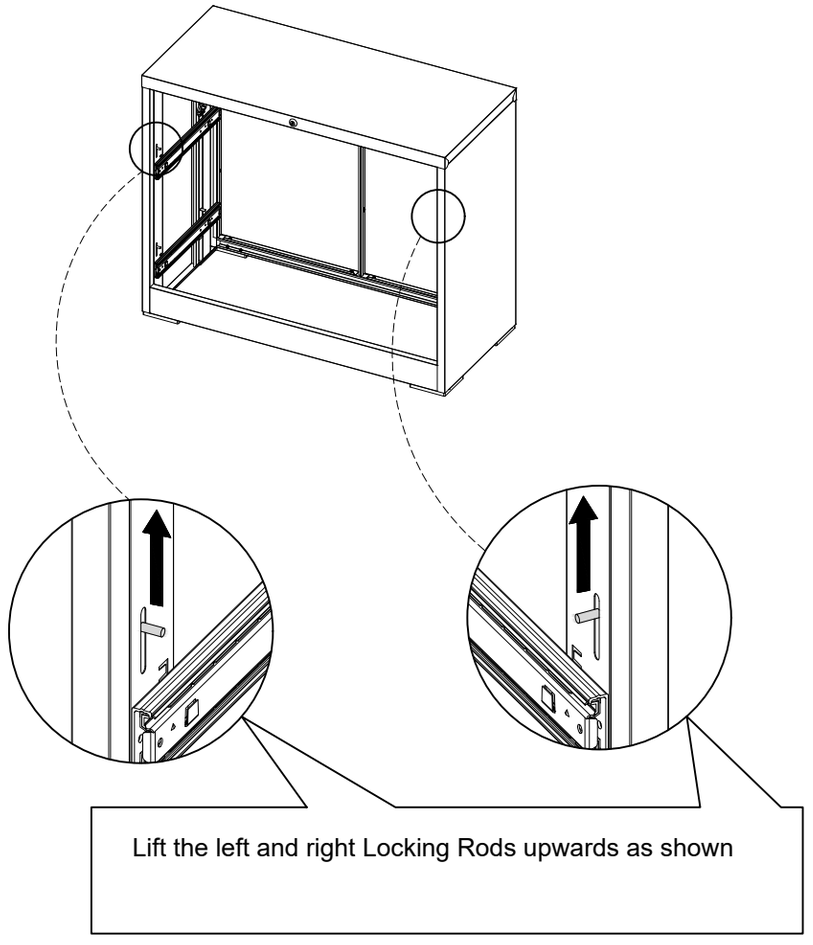

Lift the left and right Locking Rods upwards as shown

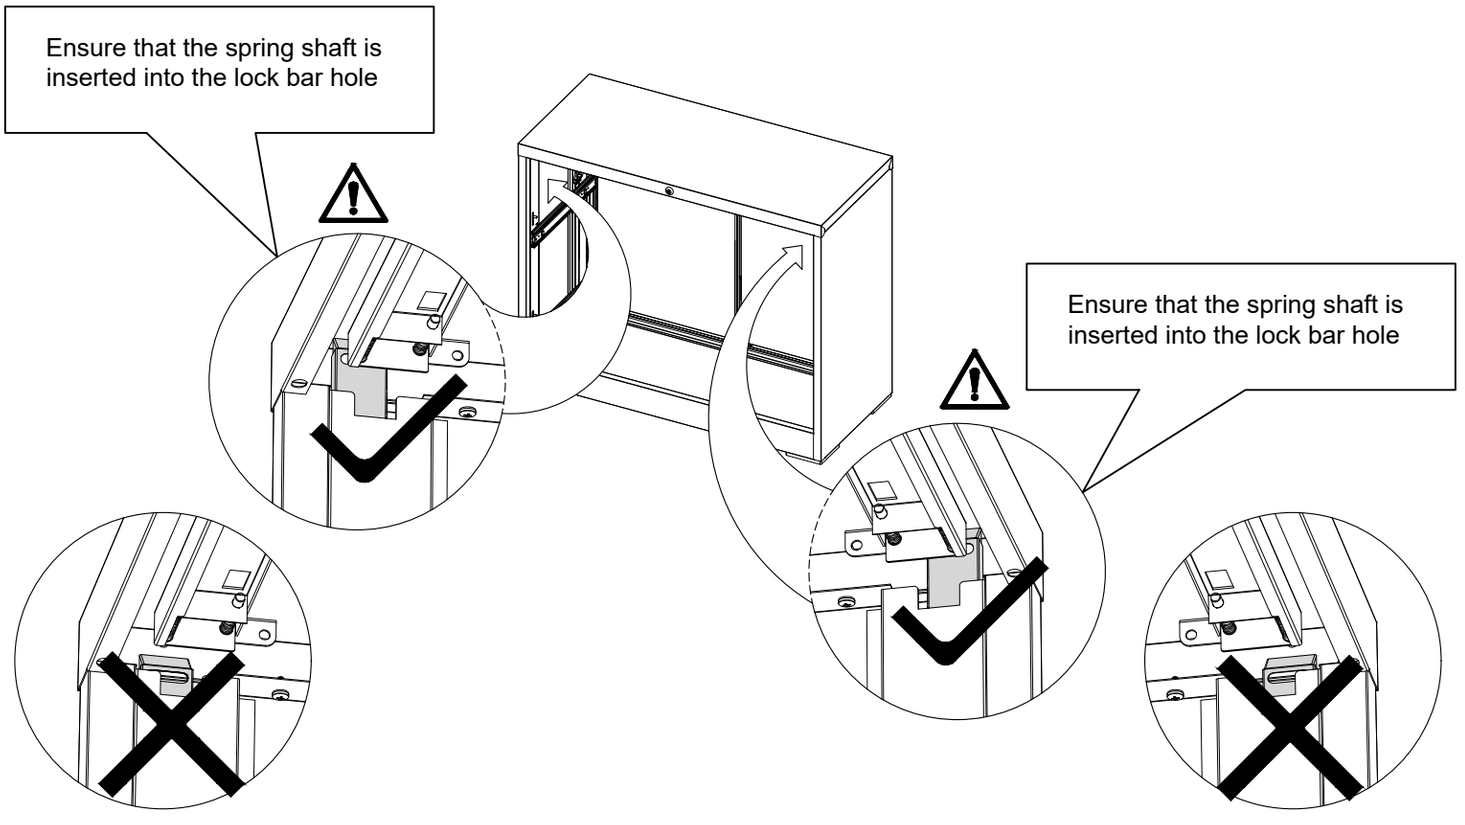
Ensure that the spring shaft is inserted into the lock bar hole
Ensure that the spring shaft is inserted into the lock bar hole

10


This step is to connect the cabinet to the wall, if you do not need to ignore it

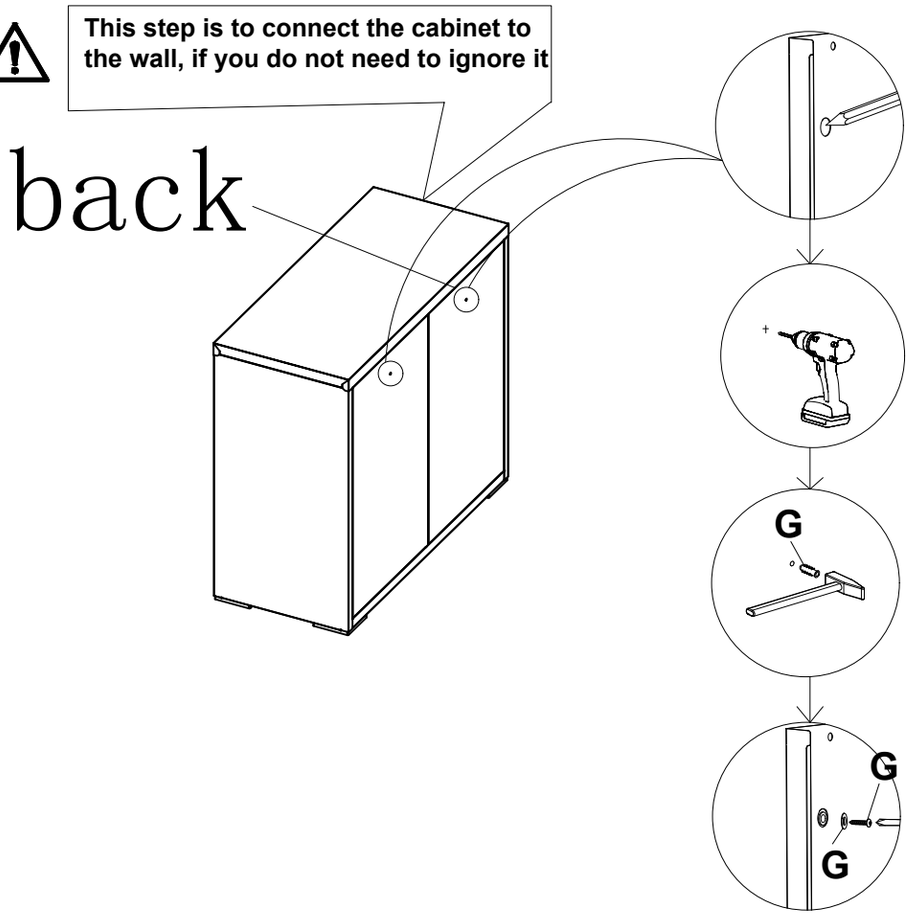





11

Insert the tabs at the bottom of the drawer faces 7 into the drawer body 11 and bend the tabs

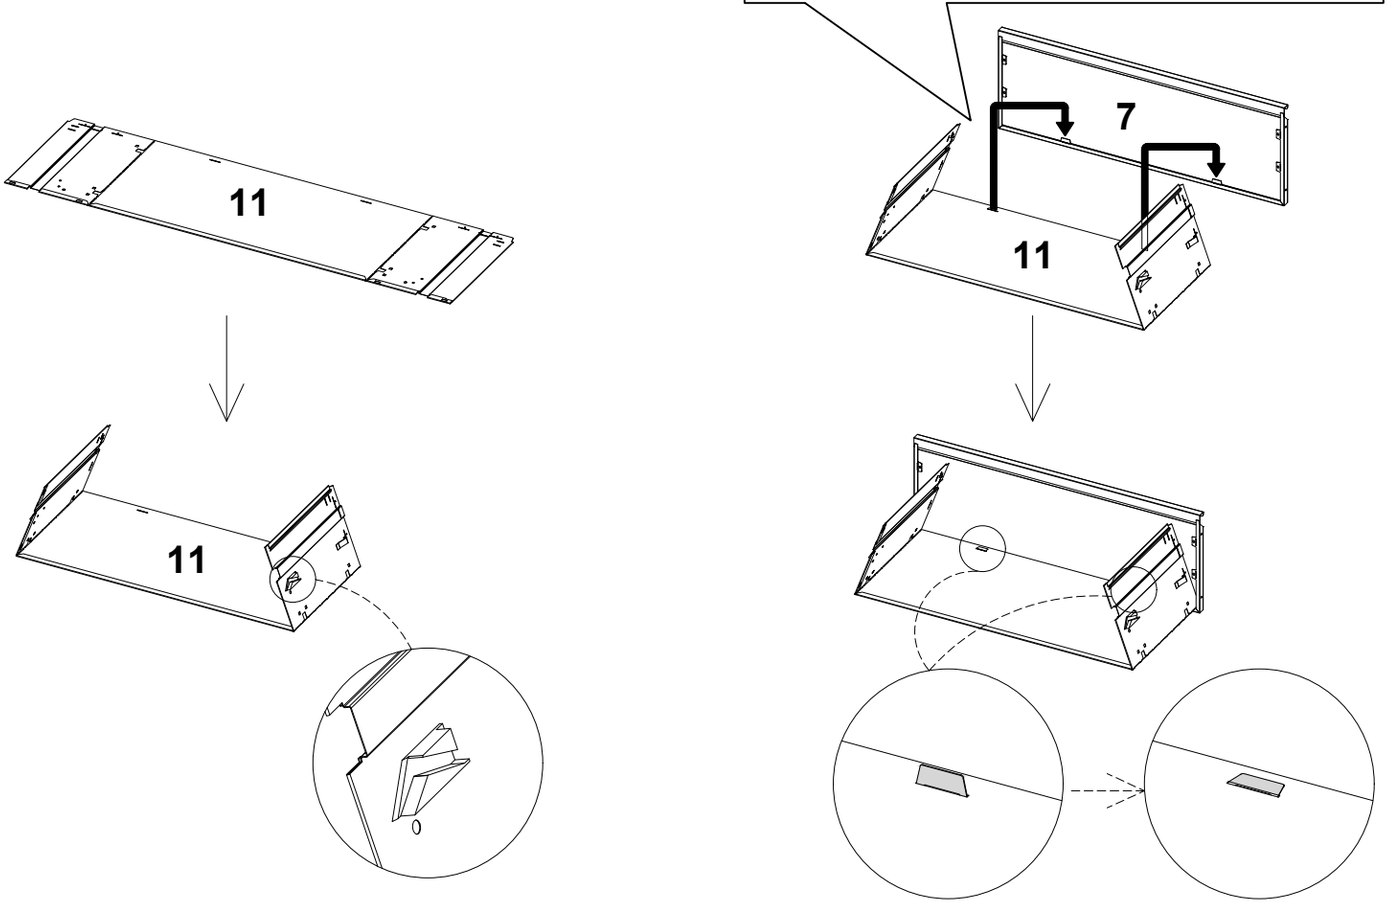

12

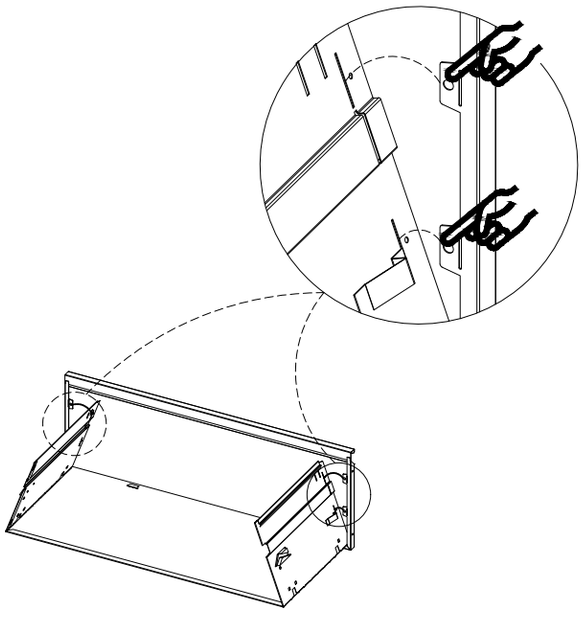


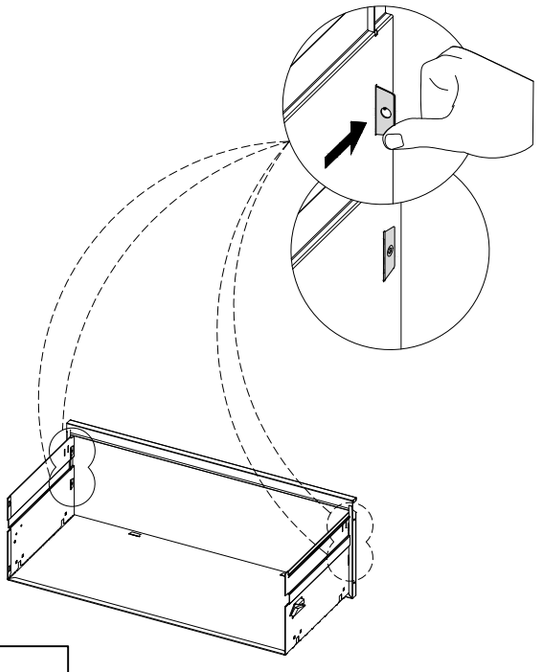


Bend the tabs on the drawer faces.

13

Put four screws to hold them in place

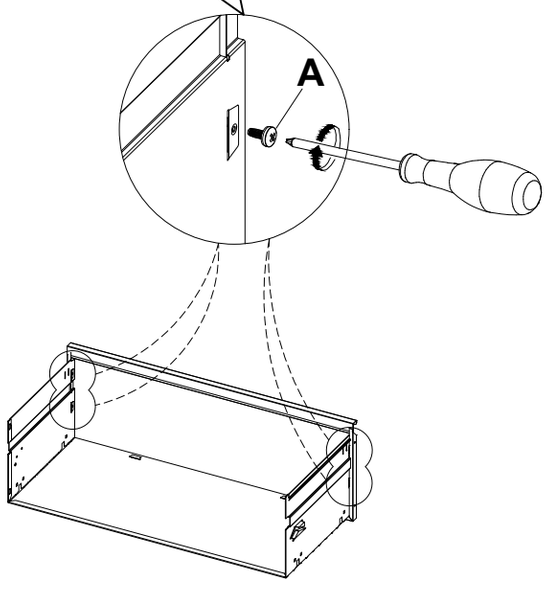



Make sure that the little bits protruding from part 8 are all inserted.
Note that the slots on the back wall of the drawer should face up.

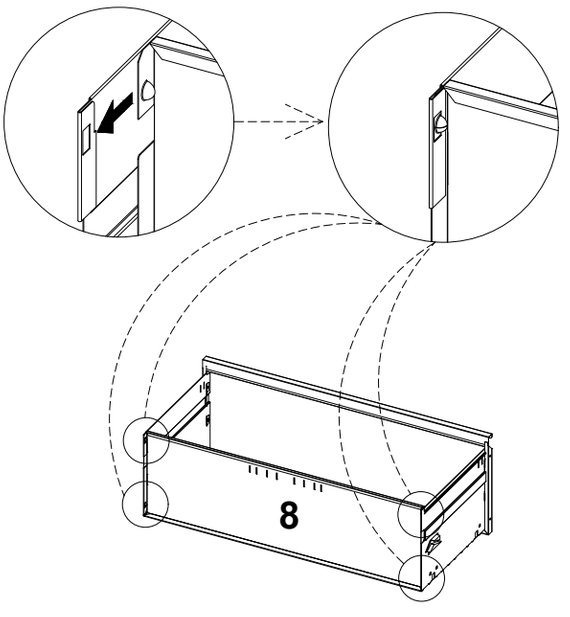

A×8


14

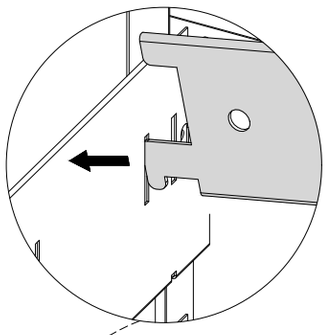


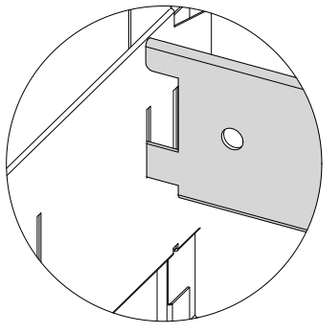



the file hanging bar can be put inside.


Choose the suitable hole according to the size of the folder

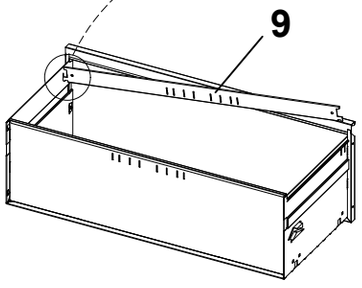


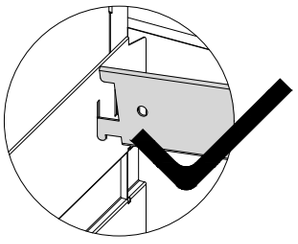

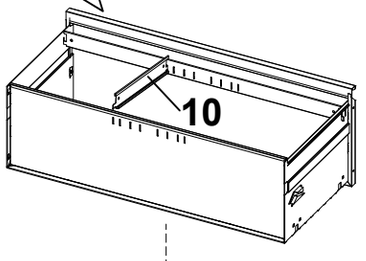


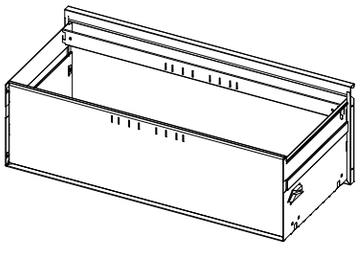


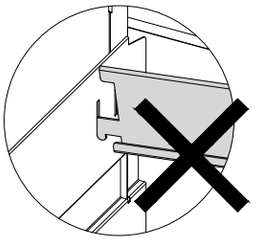


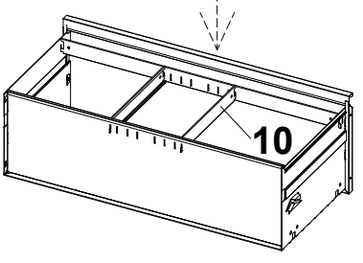


15

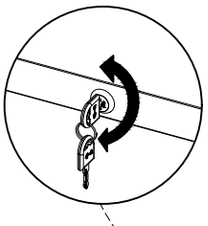

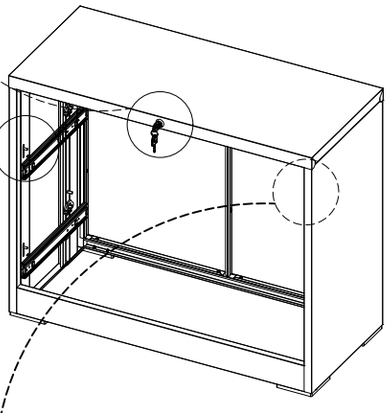

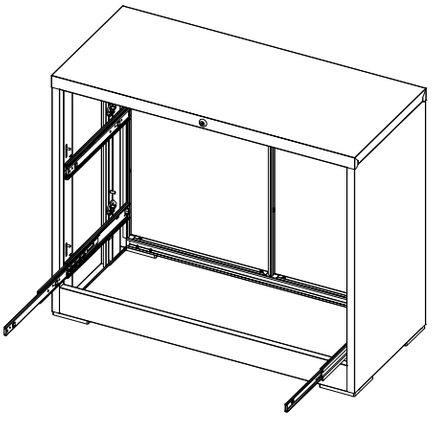


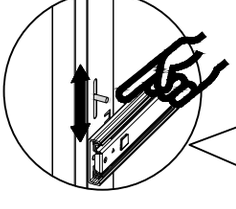


Note: Whether the lock can be moved up and down while rotating the lock. If not, please follow step 9 again.

16

1.pill out the small rails in the slide rails on the side walls completely.
with two people lifing each side of the drawer, align the four divots on the bottom with the two rail clips on the rails on each side and insert them into the rail clips.

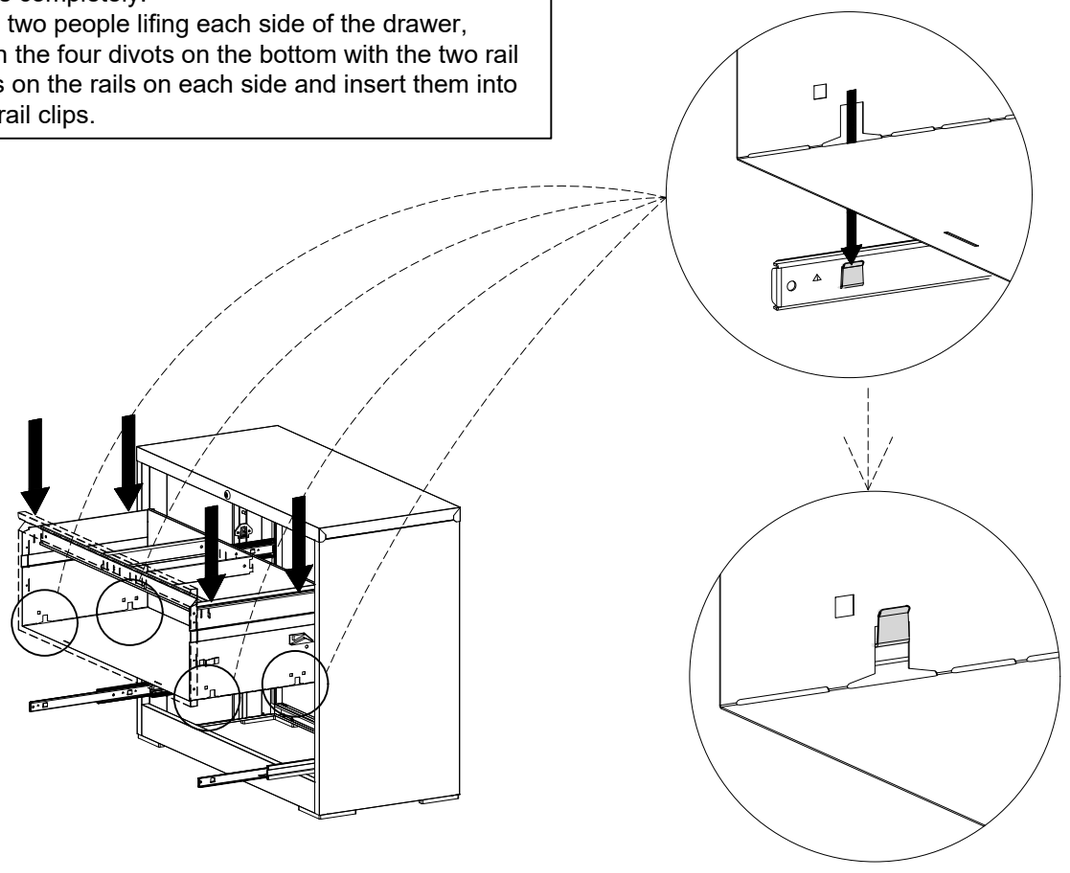

2.After placing the drawer on the rail ,press the drawer base down hard enough, paying attention to check the position of the four clips inside until you hear a click four times, which means the drawer is in place

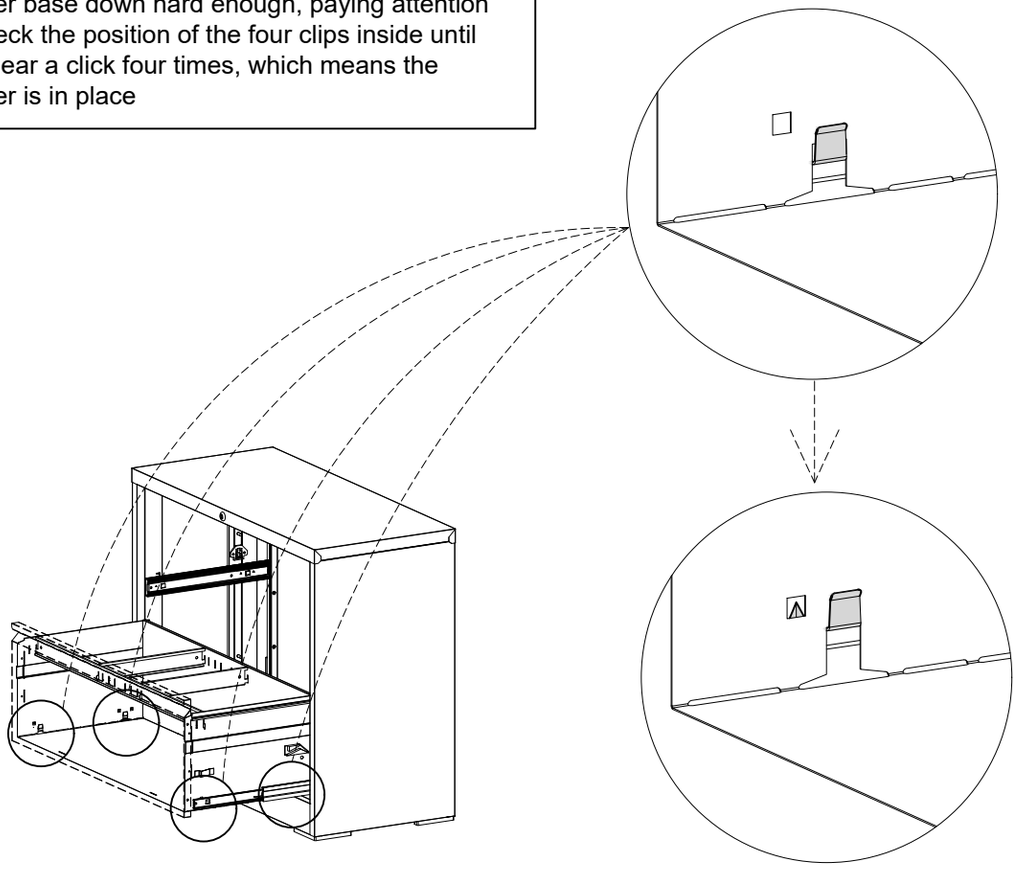

17

