
Installation Instruction

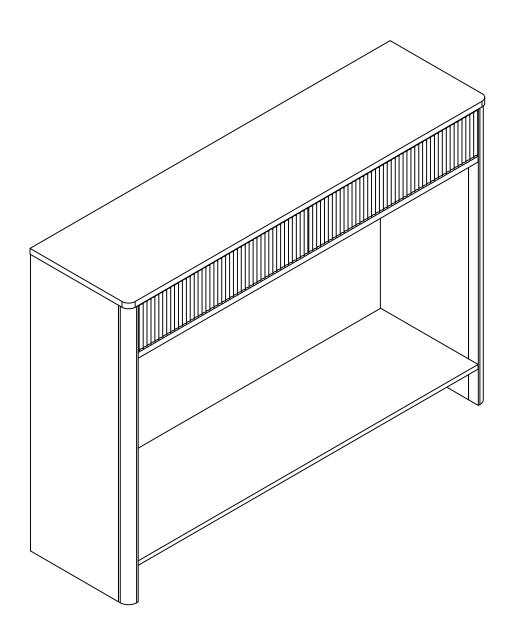

Assembling


Estimated time for assembly



45:00

What you need


- Use the packaging carton as a working surface to prevent product damage during assembly
- Phillips head screwdriver



Weight Limitation




100 I 35
lbs table top lbs per



What' included

Code Description	
A Cam Bolt M6X35MM	40
B Cam Lock 15X9MM	40
C Wooden Dowel M6X30MM	9
D Screw M4X40MM	16
E Screw M3.5X14MM	2
F Door Rebound Device	2
G Door Rebound Device Holder	2
H Screw M3.0X12MM	20
l Nylon Strap	2
J Foot nail	7
K Anchor	2
CL Left mother extended orbit	2
CR Right mother extended orbit	2
OL Left public extension track	2
OR Right public extends track	2

The Hardwares

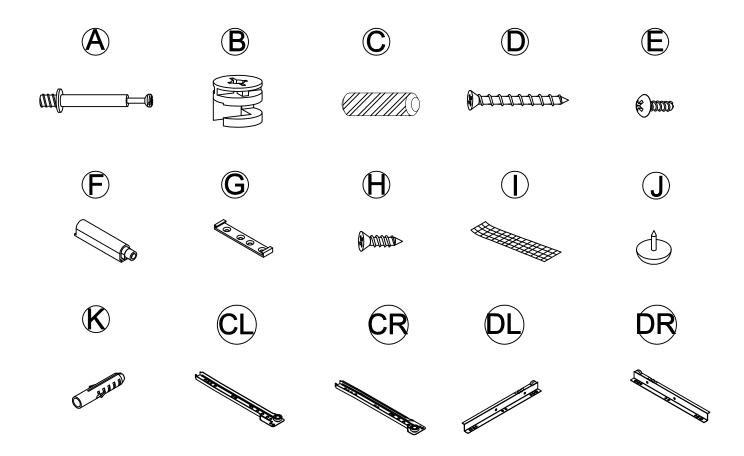


IMPORTANT:


- 1.Do not tighten bolts / screws completely until all bolts / screws are lined up and inserted into holes.
- 2.Do not over tighten screws and bolts to avoid stripping
- 3.Please use hand tools to assemble this product. Do not use power tools.


Included Accessories

Code	Description	Qty
1	Cabinet Top	1
2	Bottom Panel	1
3	Left Side Panel	1
4	Right Side Panel	1
5	Neutral plate	1
6	Drawer left panel	2
7	Drawer right side panel	2
8	The drawer bottom	2
9	After the drawer board	2
10	Reinforcing strip	2
11	Left-hand drawn noodles	1
12	Right-hand side drawn noodles	1
13	Laminate	1
14	Backboard	1
15	Reinforcing plate	1


The Accessoriess

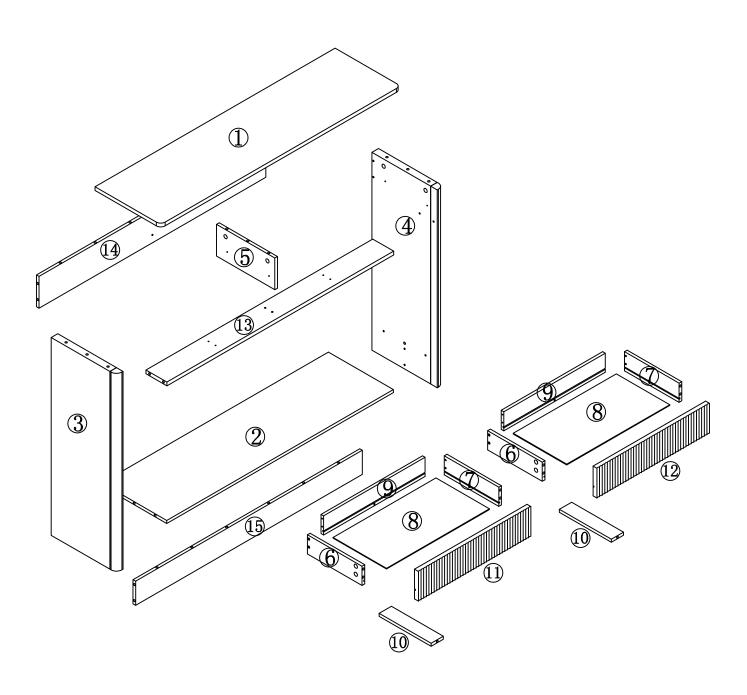


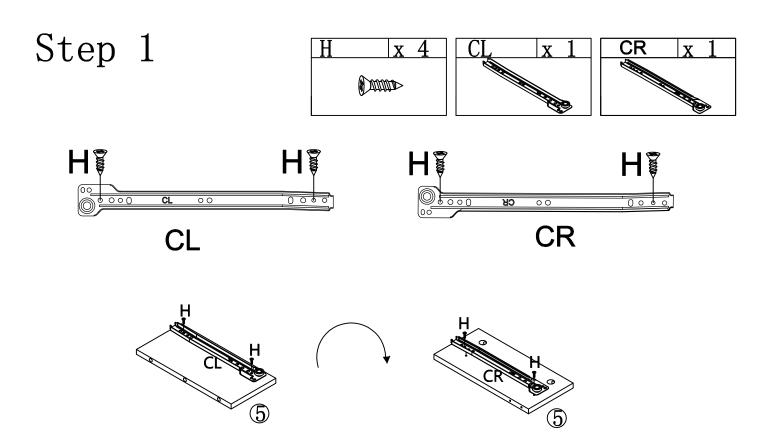


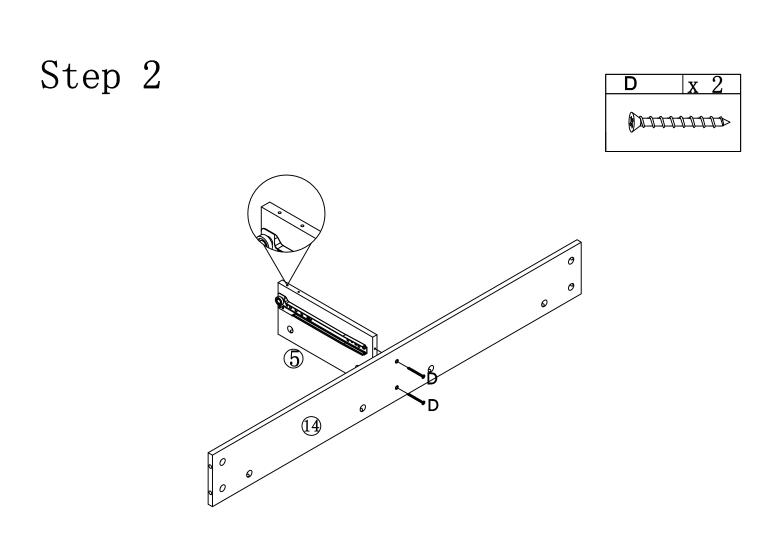












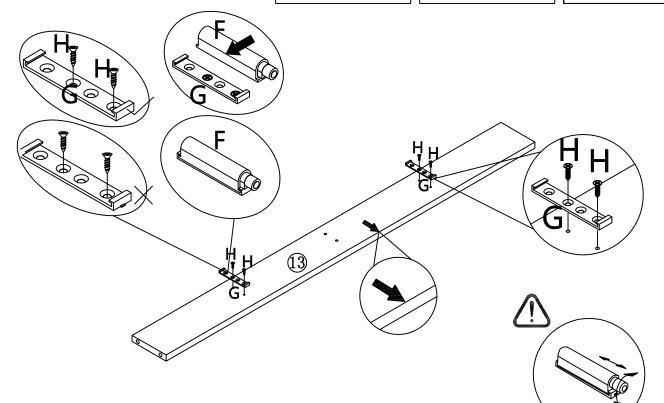



Step 4



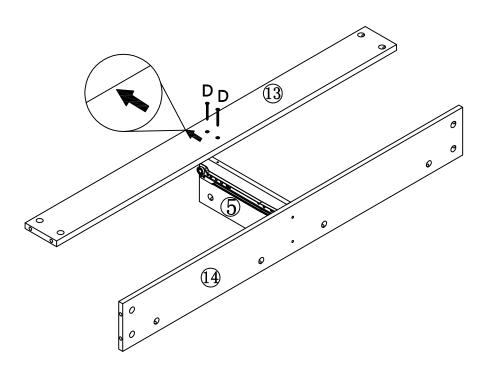



Step 5



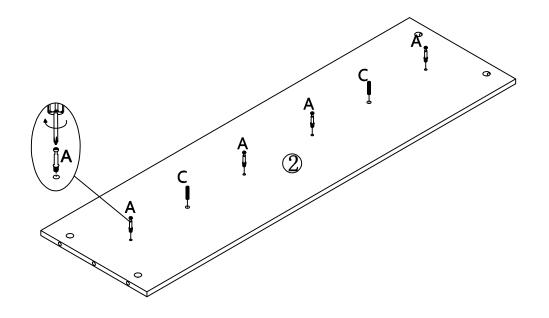


Step 6

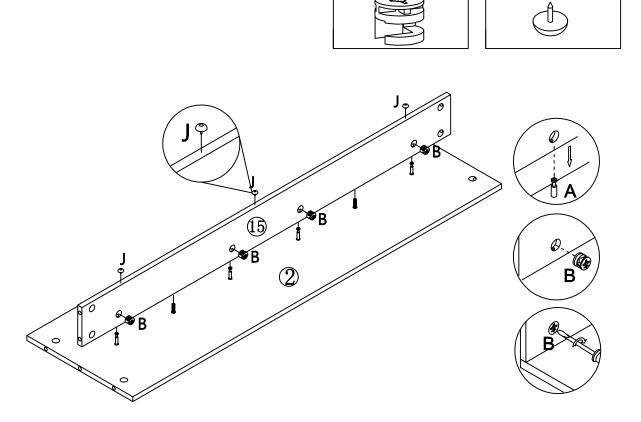


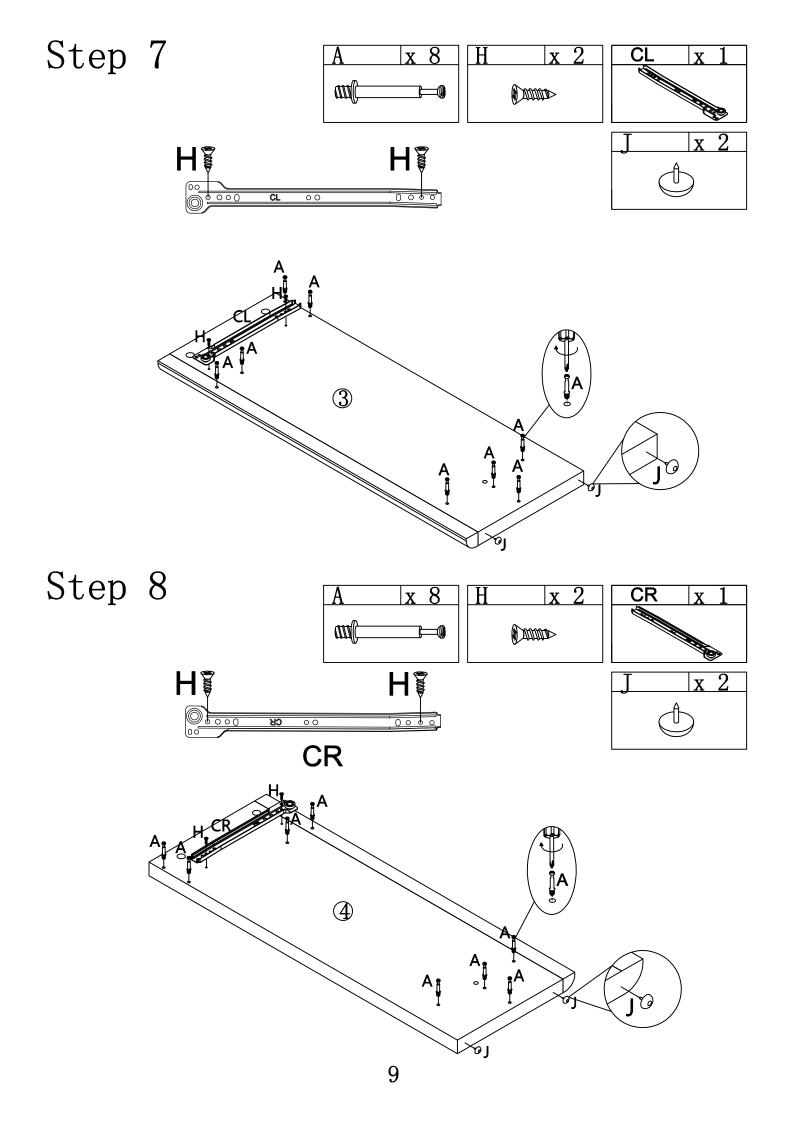


Step 9

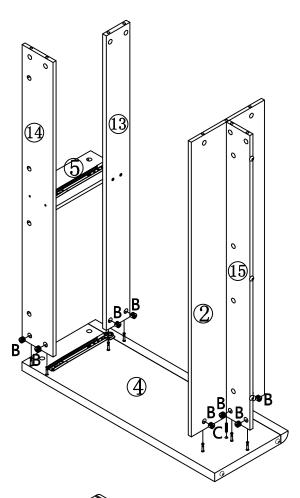



Step 10

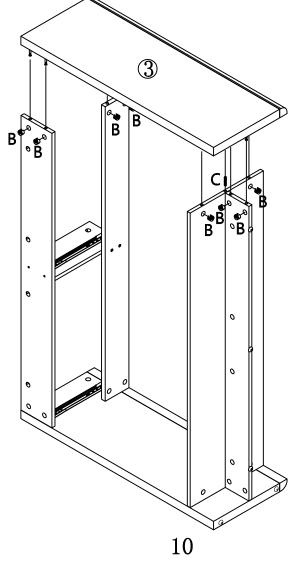

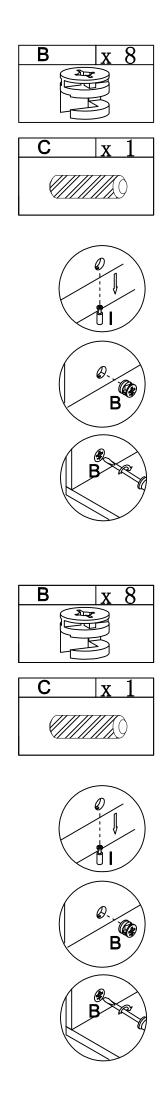



Step 11



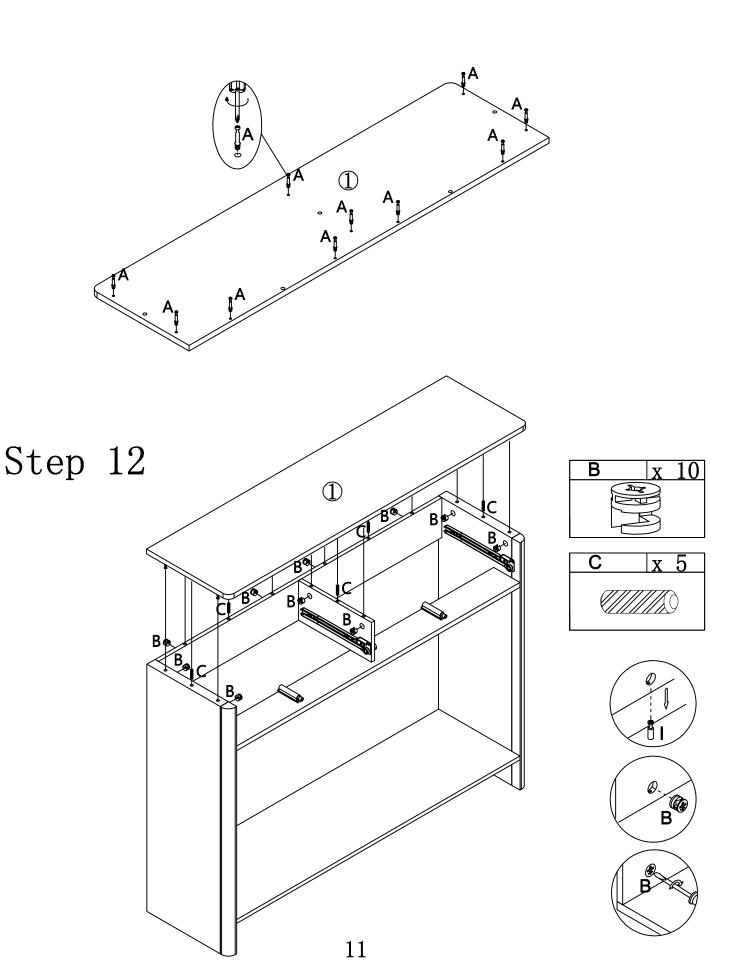


Step 13




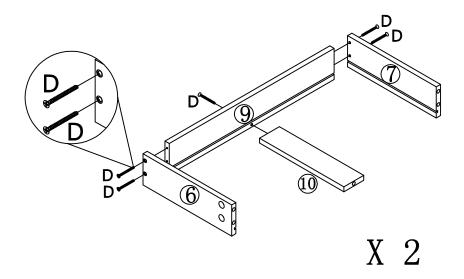



Step 14

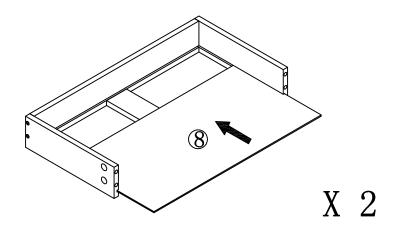


Step 15




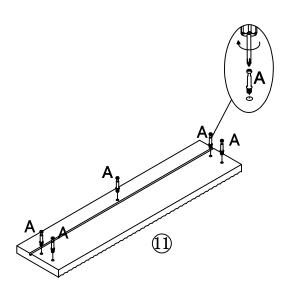


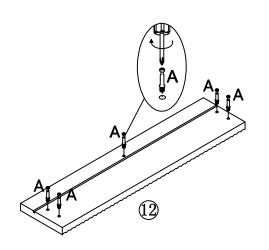


Step 16



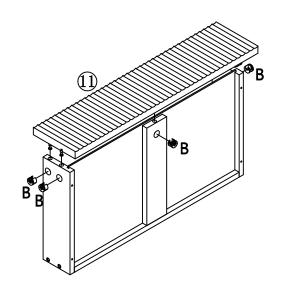

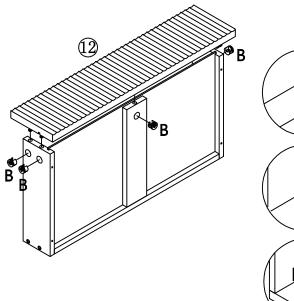



Step 17

