



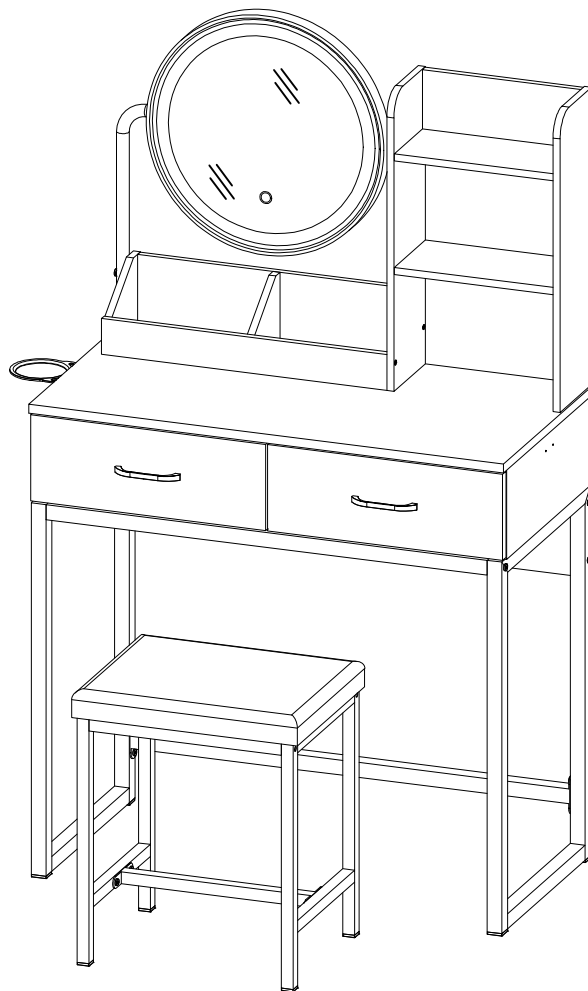

As this item contains many parts, please read the installation instruction carefully before installation and complete the installation with the cooperation of your partner. Please use tools properly and carefully. If you have any questions about the product and installation, please contact us.

Our professional after-sales team will serve you online all day.

Before You Start

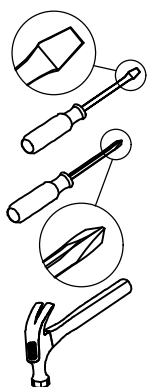

- ✓ Read through each step carefully and follow the proper order
- ✓ Separate and count all your parts and hardware
- ✓ Give yourself enough room for the assembly process
- ✓ Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer
- ✓ Caution: If using a power drill or power screwdriver for screwing, please be aware of to slow down and stop when screw is tight. Failure to do so may result in stripping the screw.

Helpful Hints


PEOPLE NEEDED FOR ASSEMBLY: 1-2

- Open your item in the area you plan to keep it to avoid excessive heavy lifting.
- Identify, sort and count the parts before attempting assembly.
- Compression dowels are lightly tapped in with a hammer.
- Slides are labeled with an **R** (right) and **L** (left) for proper placement.
- Make sure to always face the point on the top of the Cam Lock towards the outer edge.
- Use all the nails provided for the back panel and spread them out equally.
- Back panel must be used to make sure your unit is sturdy.
- Do NOT use harsh chemicals or abrasive cleaners on this item.
- Never push, pull, or drag your furniture.




Board Identification

Not actual size

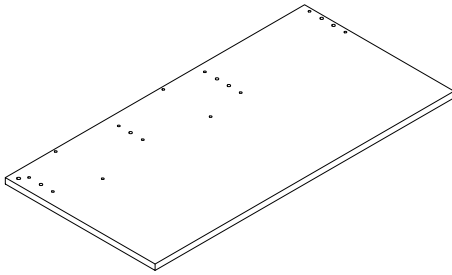


Ⓐ

TOP
Qty:1

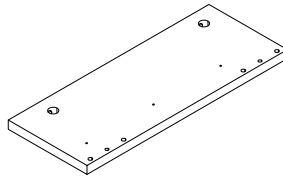


Ⓑ

LEFT SIDE PANEL
Qty:1

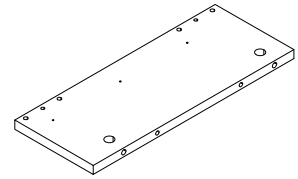


Ⓒ

RIGHT SIDE PANEL
Qty:1

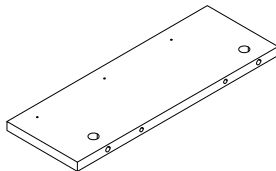


Ⓓ

PARTITION
Qty:1

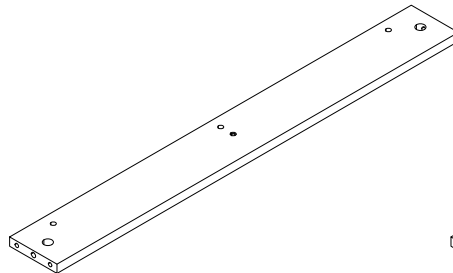


Ⓔ

FRONT SLAT
Qty:1

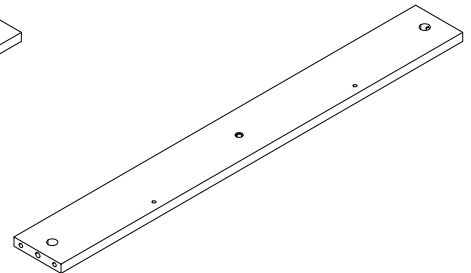


Ⓕ

BACK SLAT
Qty:1

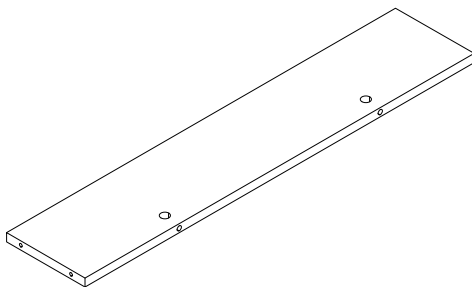


Ⓖ

REAR LOWER PANEL
Qty:1

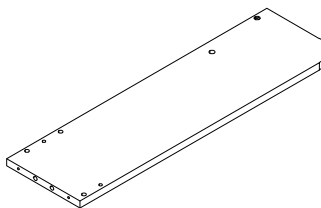

Ⓗ

UPPER LEFT PANEL
Qty:1

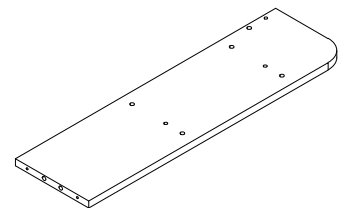


Ⓘ

UPPER RIGHT PANEL
Qty:1


Board Identification

Not actual size

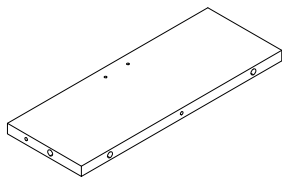


ⓐ

TOP BACK PANEL
Qty:1

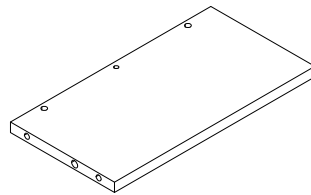


ⓑ

FIXED SHELF
Qty:1

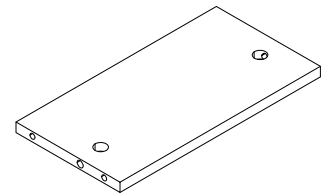


ⓒ

FIXED SHELF
Qty:1




ⓓ

LEFT PARTITION
Qty:1

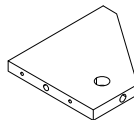


ⓔ

RIGHT PARTITION
Qty:1

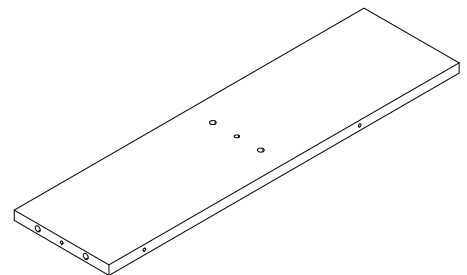


ⓕ

REAR BAFFLE
Qty:1

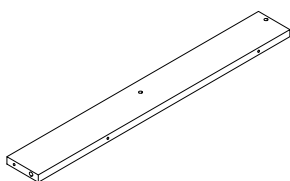


ⓖ

FRONT BAFFLE
Qty:1

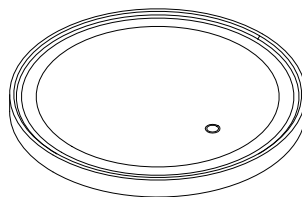

ⓗ

COSMETIC MIRROR
Qty:1

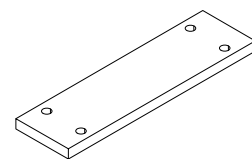


ⓓ

SUPPORT PLATE
Qty:1


Board Identification

Not actual size

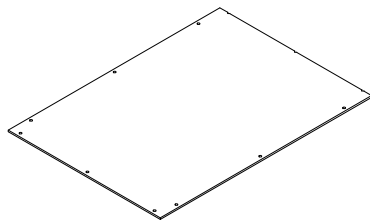


Ⓢ

UPPER RIGHT BACK PANEL
Qty:1

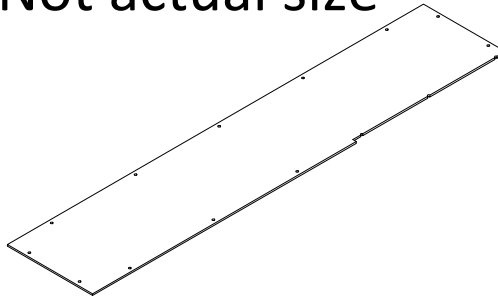


Ⓣ

TABLE REAR PANEL
Qty:1

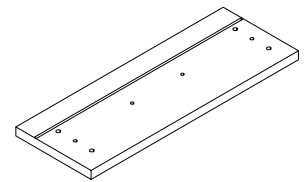


Ⓤ

LEFT DRAWER FRONT
Qty:1

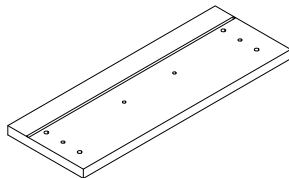


Ⓥ

DRAWER FRONT
Qty:1

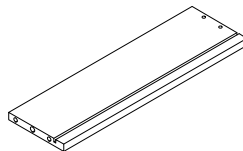


Ⓦ

DRAWER LEFT PANEL
Qty:2

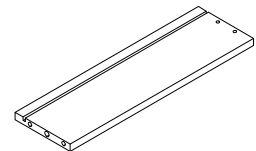


ⓧ

DRAWER RIGHT PANEL
Qty:2

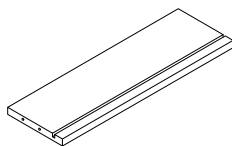


Ⓨ

DRAWER BACK PANEL
Qty:2

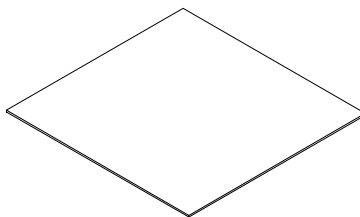

Ⓩ

DRAWER BOTTOM
Qty:2

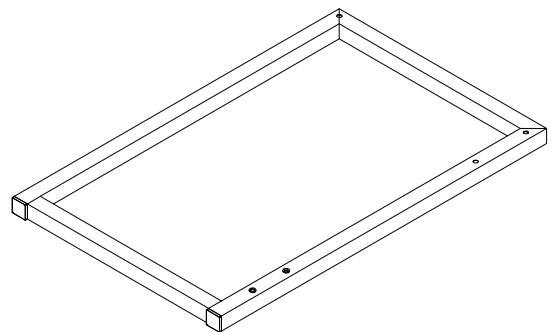


ⒶⒶ

LEFT LOWER FRAME
Qty:1


Board Identification

Not actual size

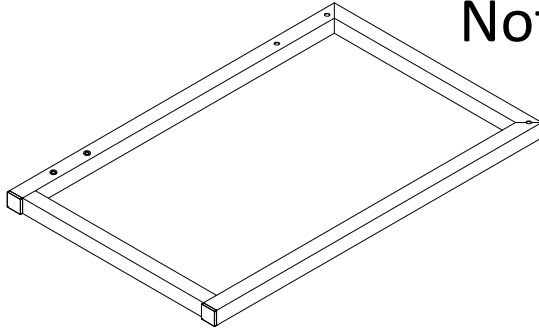


ⓑ

RIGHT LOWER FRAME
Qty:1

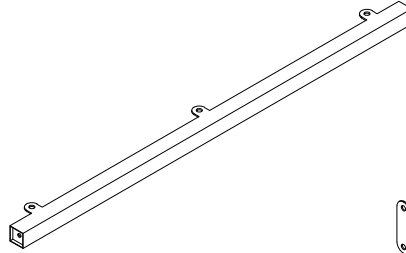


ⓒ

RAIL
Qty:1

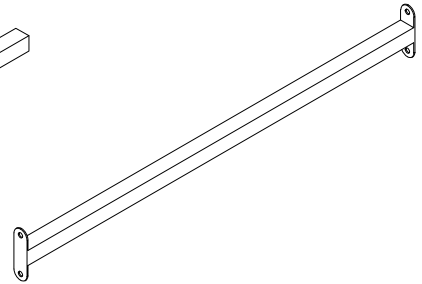


ⓓ

RAIL
Qty:1

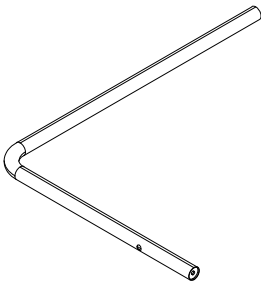


ⓔ

MIRROR SUPPORT TUBE
Qty:1

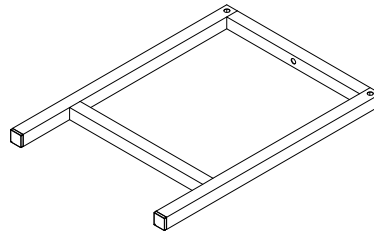


ⓕ

SIDE FRAME OF STOOL
Qty:2

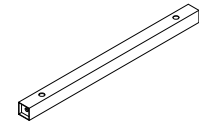


ⓖ

RAIL
Qty:2

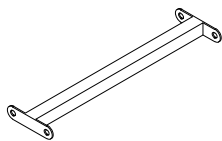

ⓗ

RAIL
Qty:1

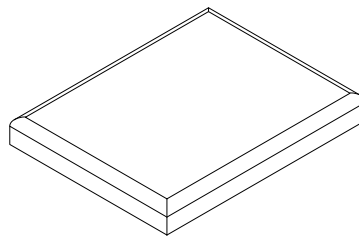


Ⓢ


SPONGE CUSHION
Qty:1

Board Identification


Not actual size

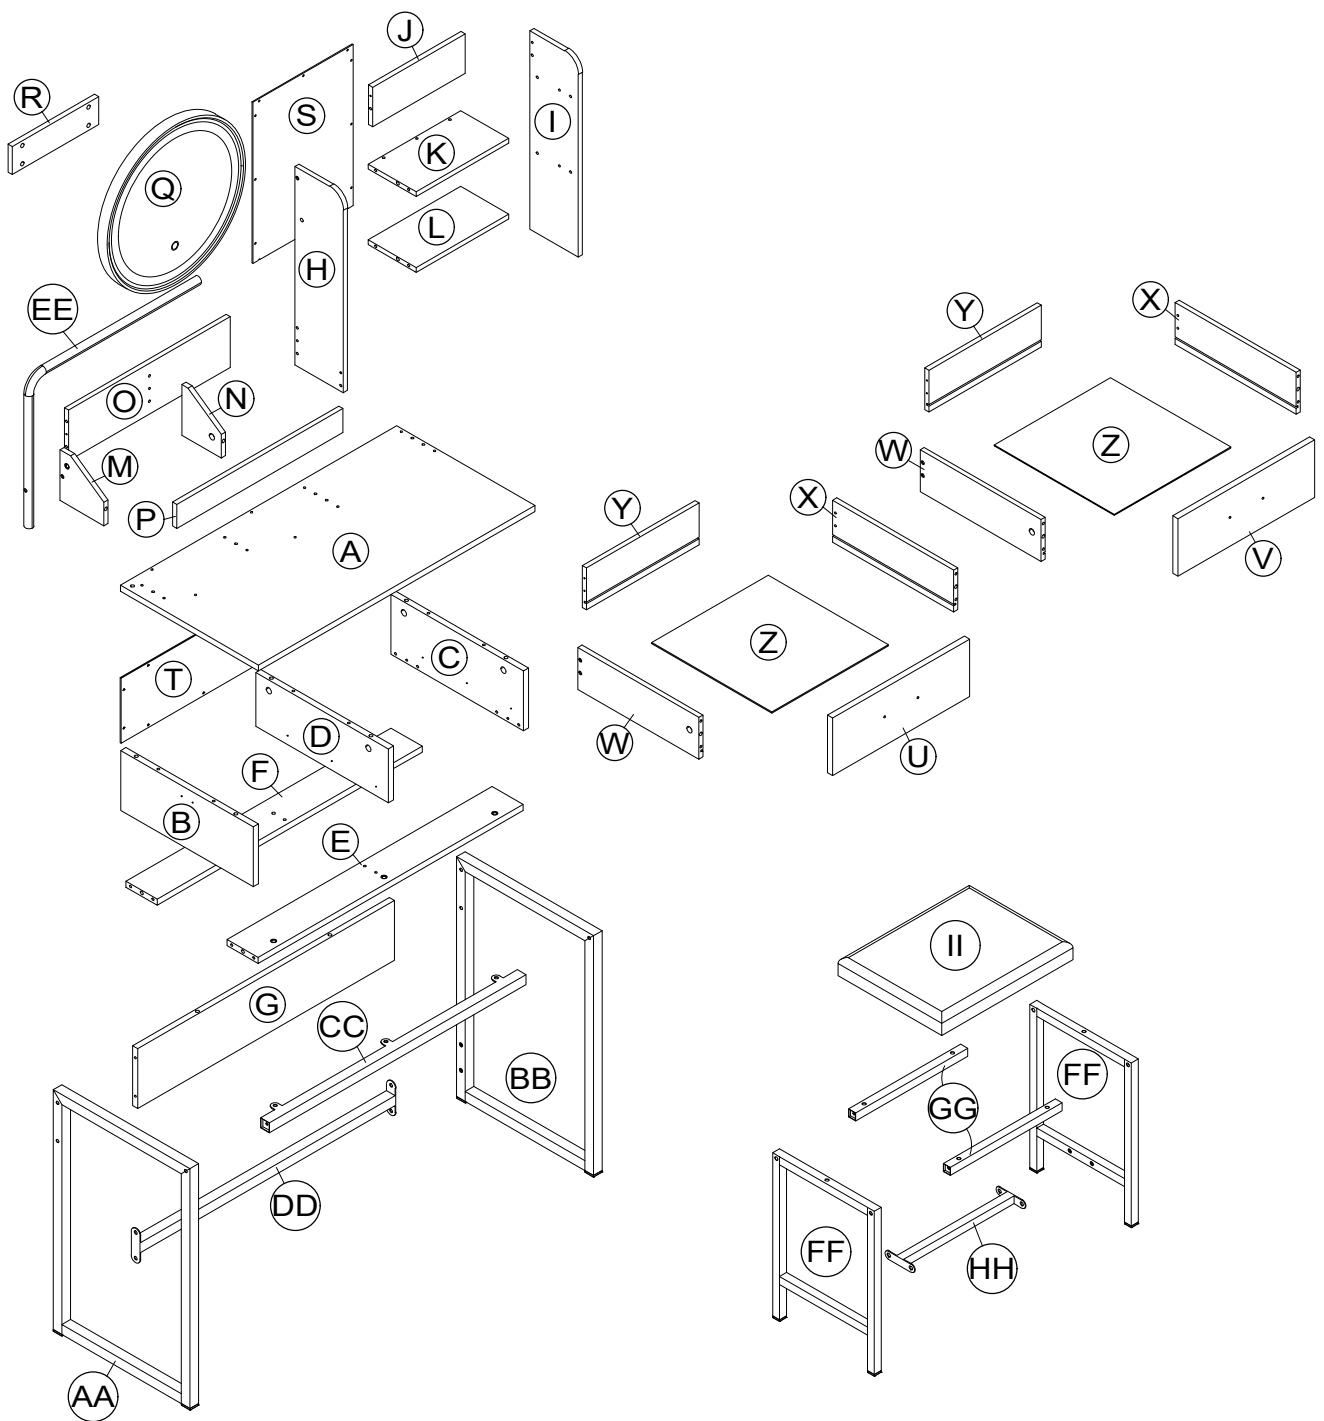


Part List

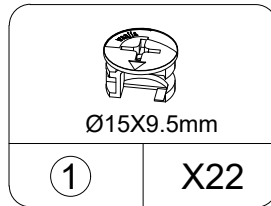


CAM LOCK
spare:3

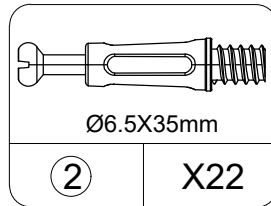


CAM BOLT
spare:3

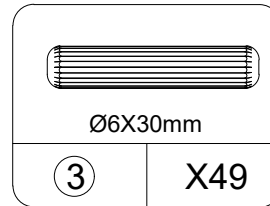


WOOD DOWEL
spare:3

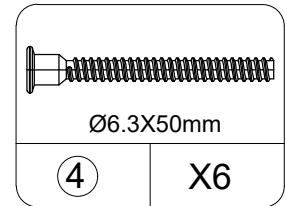


SCREW
spare:1

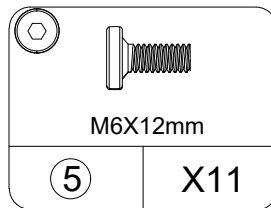


SCREW
spare:2

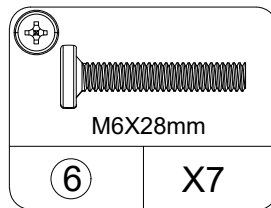


SCREW
spare:1

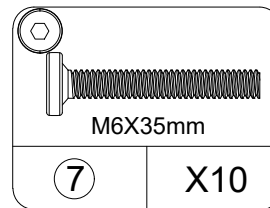


SCREW
spare:1

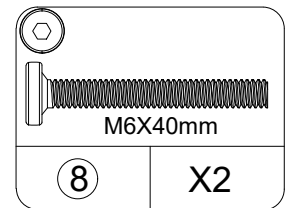


SCREW
spare:1

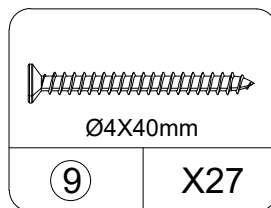


SCREW
spare:3

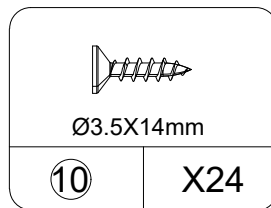


SCREW
spare:3

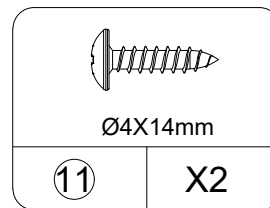


SCREW
spare:1

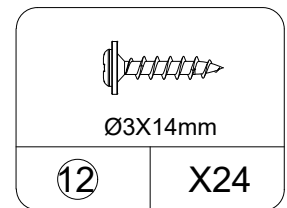


SCREW
spare:3

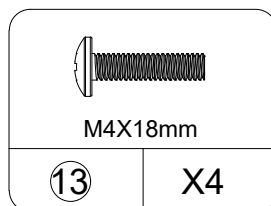


SCREW
spare:1

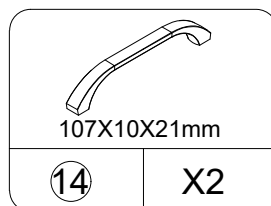

HANDLE

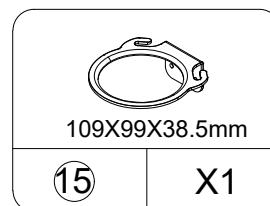


HAIR DRYER RACK

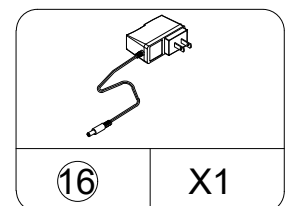


THE POWER PLUG


Part List

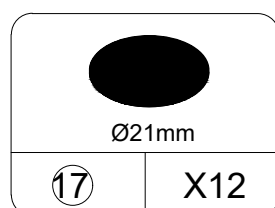


PERFECT STICKERS
spare:2

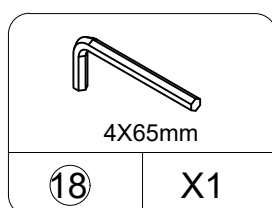


HEX KEY

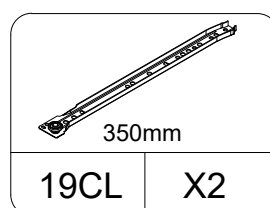


LEFT CABINET MEMBER

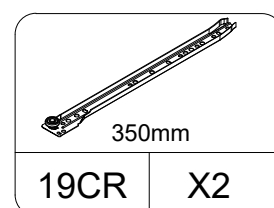


RIGHT CABINET MEMBER

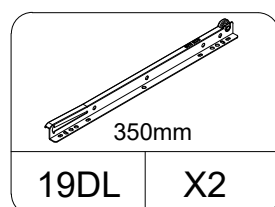


LEFT DRAWER RUNNER

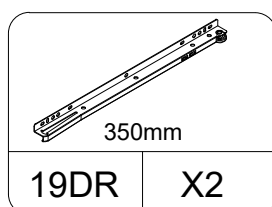


RIGHT DRAWER RUNNER

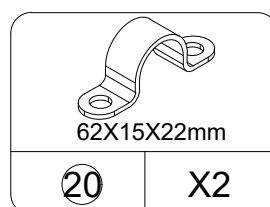

METAL FIXING RING

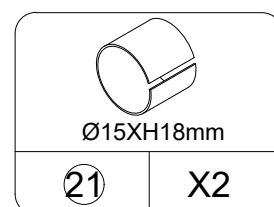


PLASTIC SHEATH

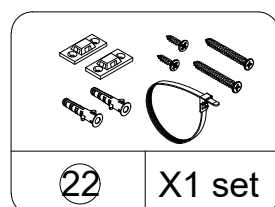

TIPPING RESTRAINT
HARDWARE KIT










Cam Lock Fastening System

Insert the cam bolt into the hole first, then insert the cam lock and lock it.

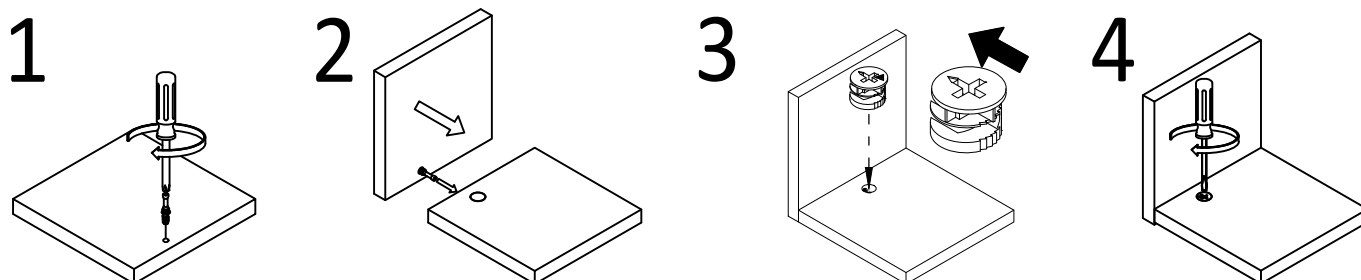


The opening must point toward the edge of the board


STEP1

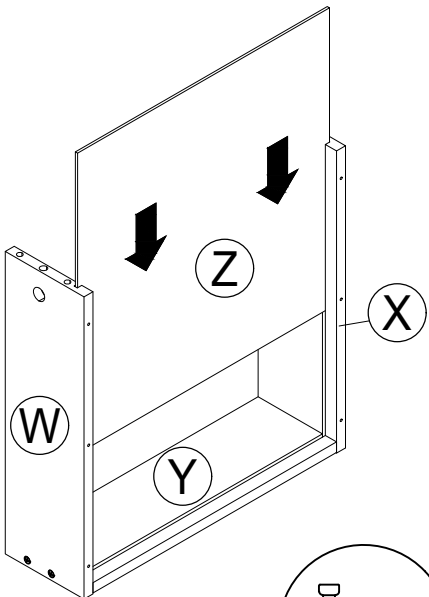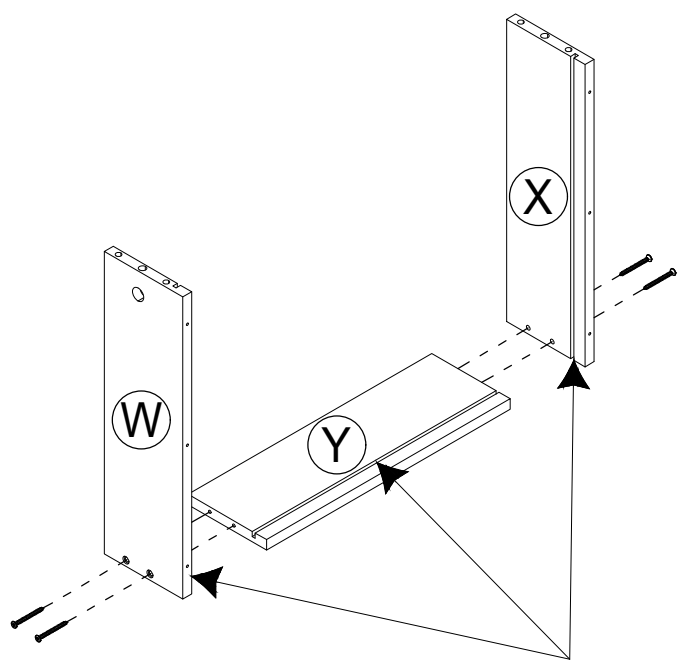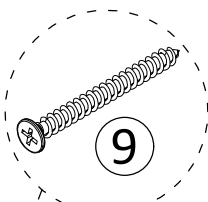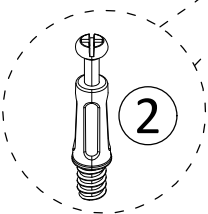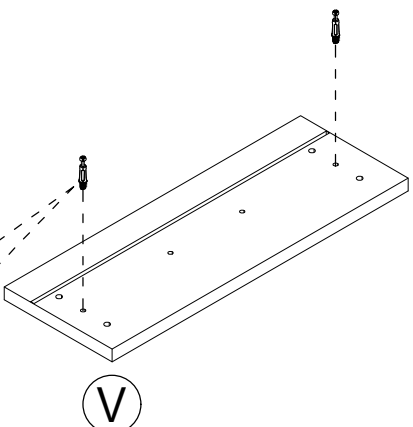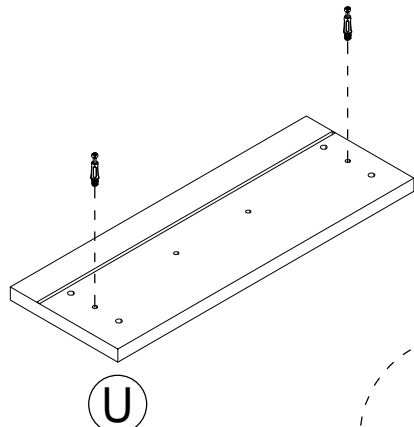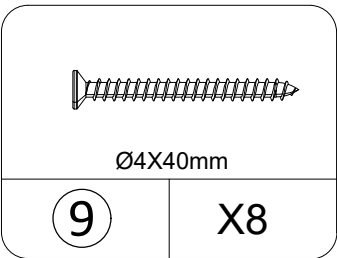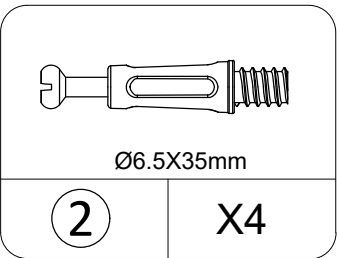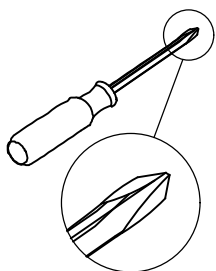






GROOVE X2

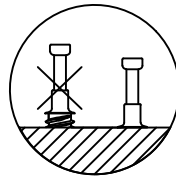

STEP2










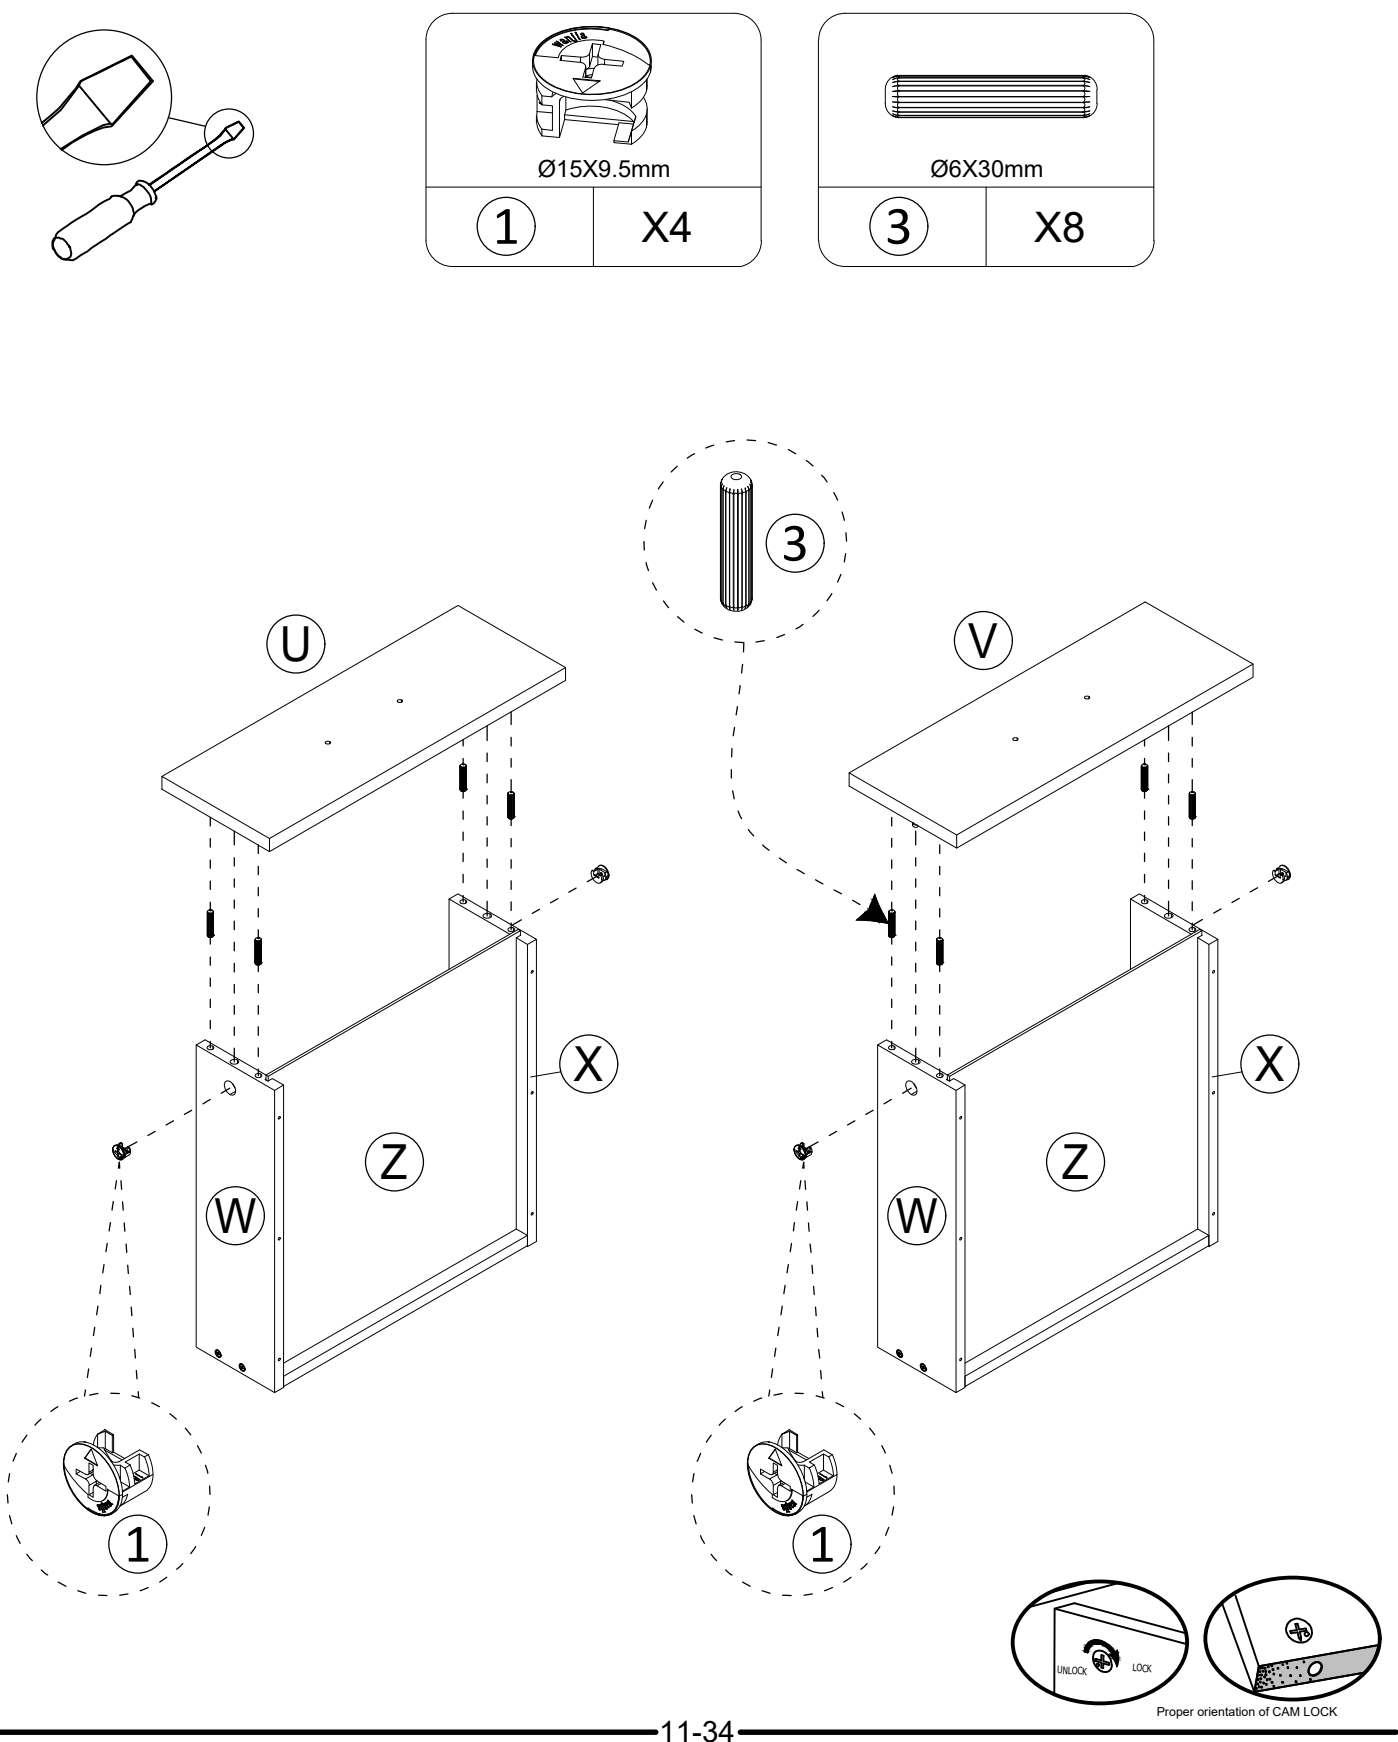


STEP3

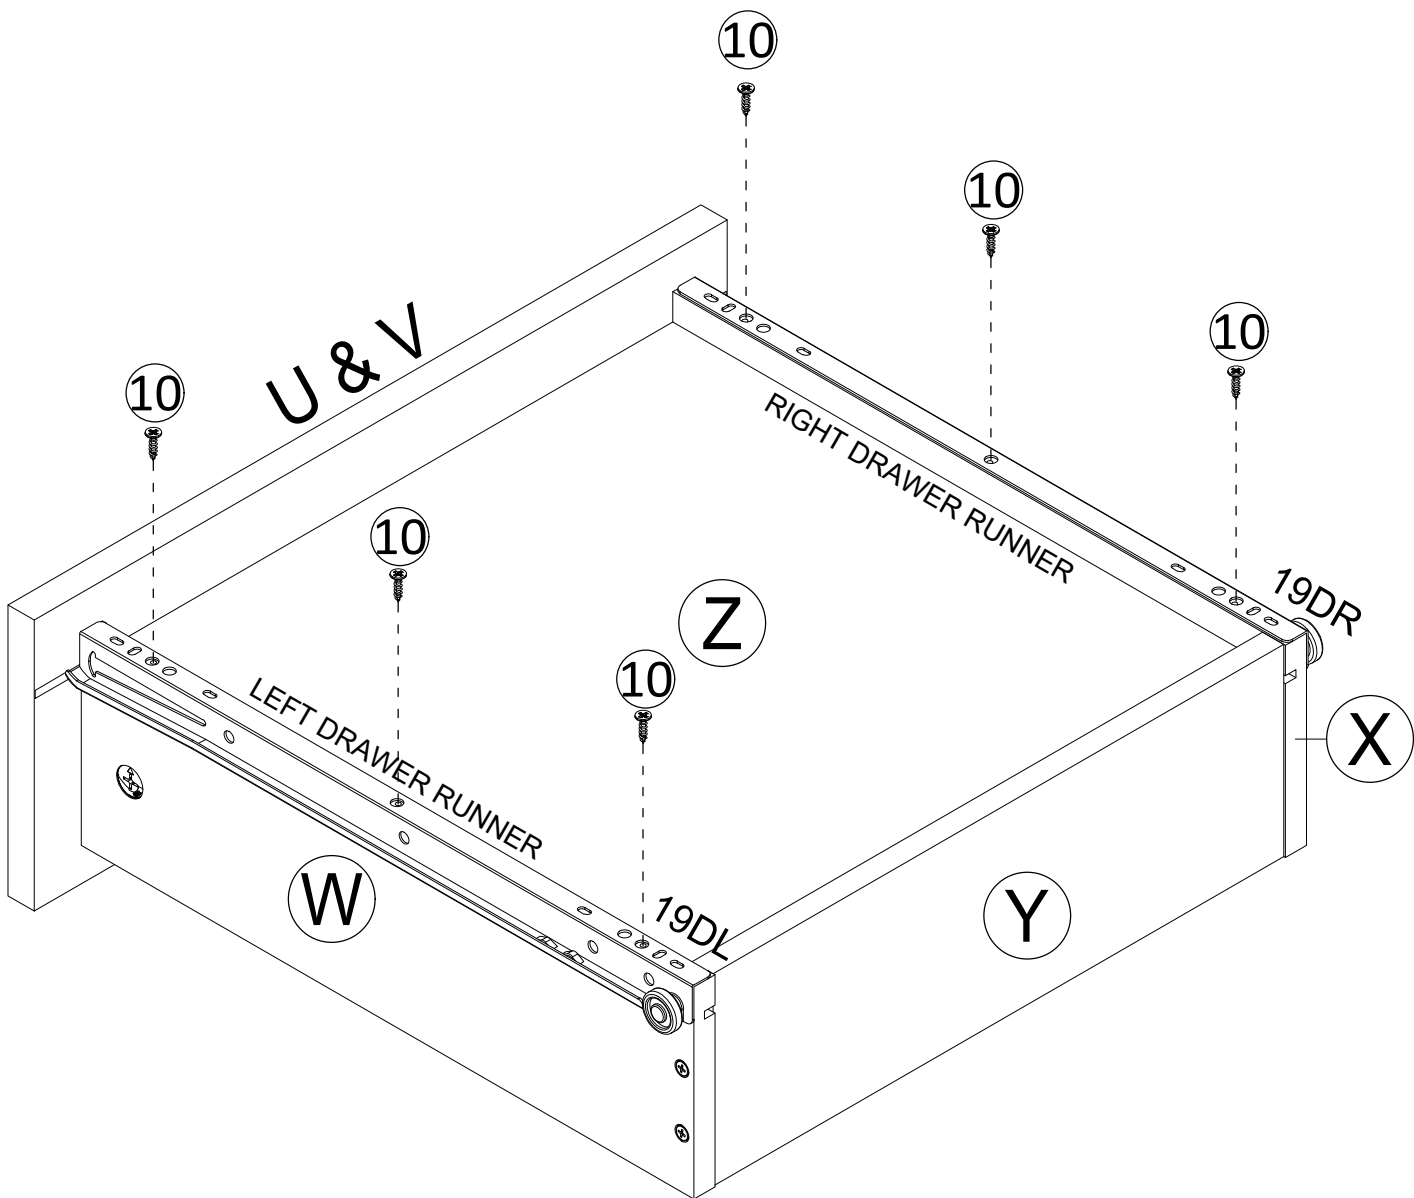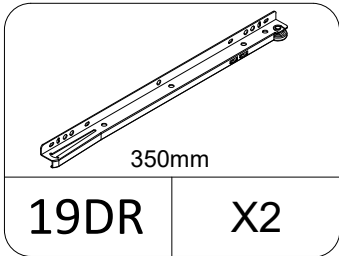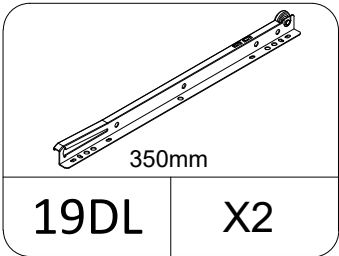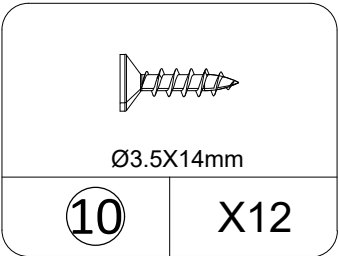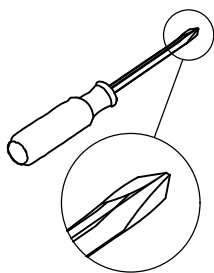

U & V

STEP4

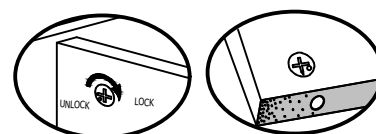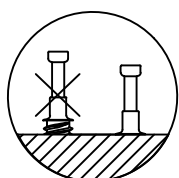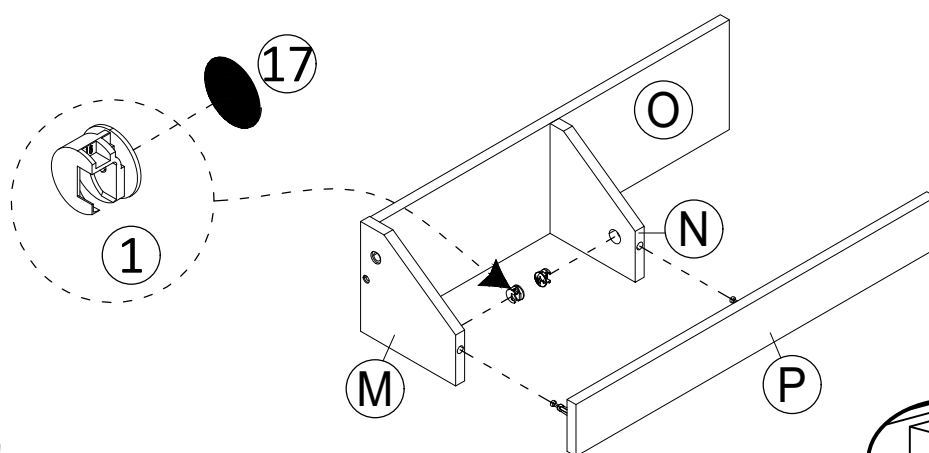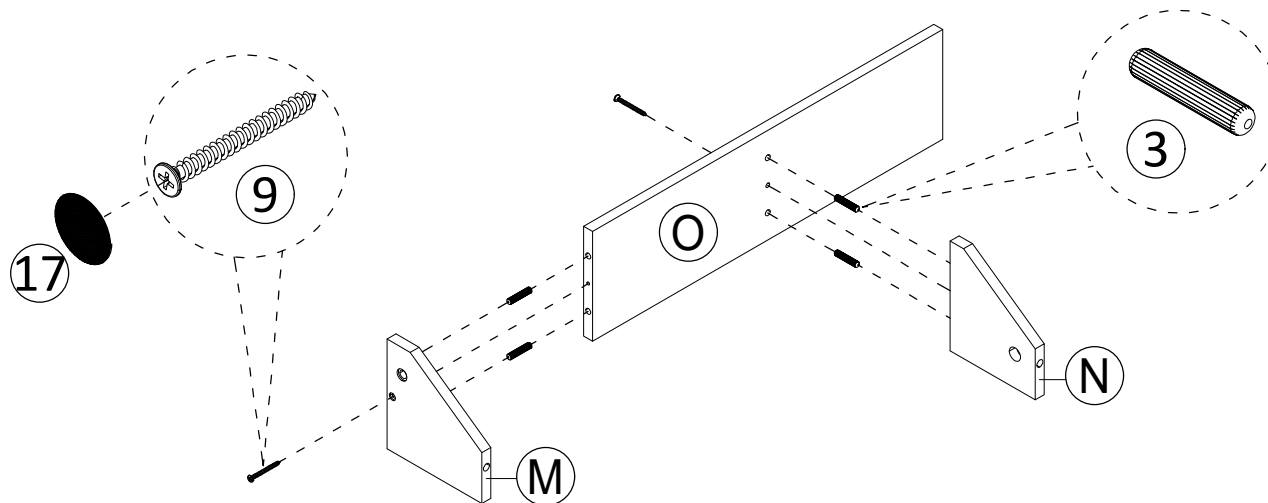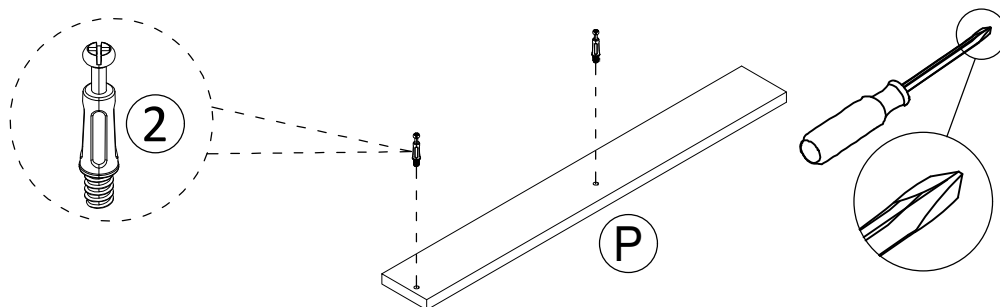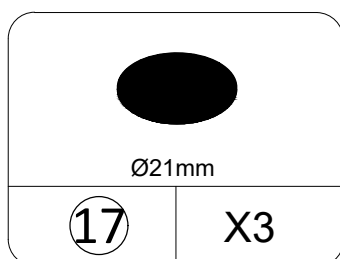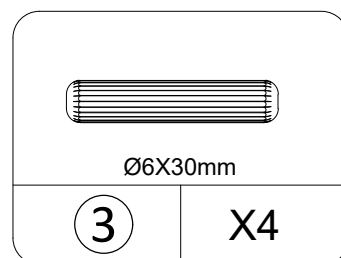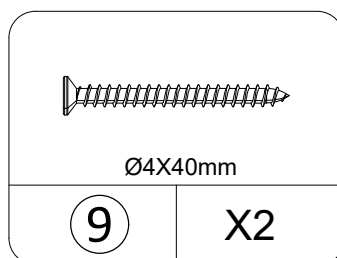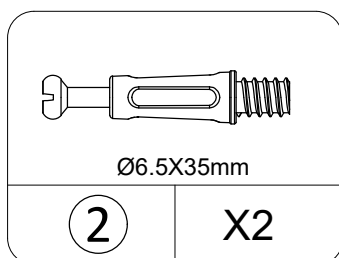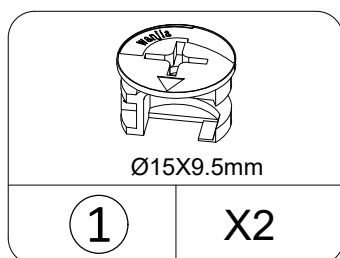


Proper orientation of CAM LOCK


STEP5

 Ø6.5X35mm	
2	X2





 Ø6X30mm	
3	X3

 Ø4X40mm	
9	X2



 Ø21mm	
17	X2

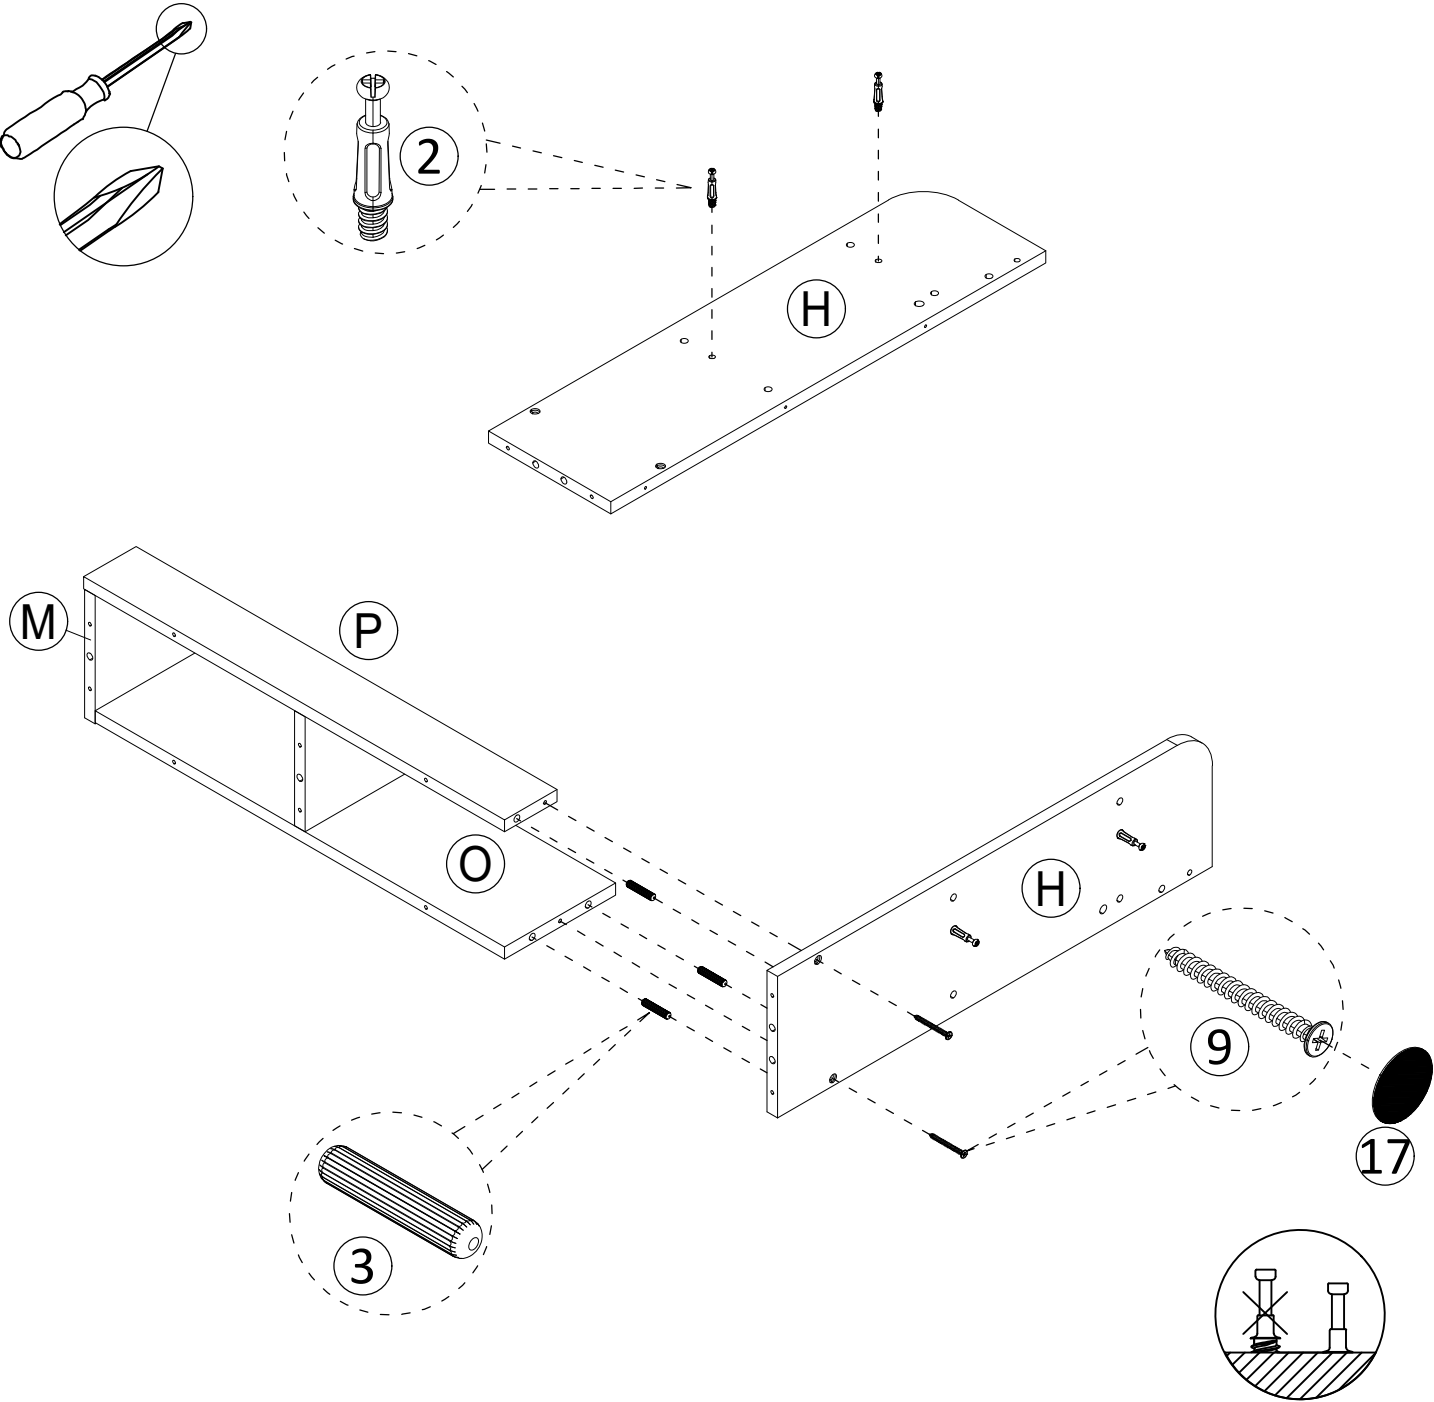



STEP6

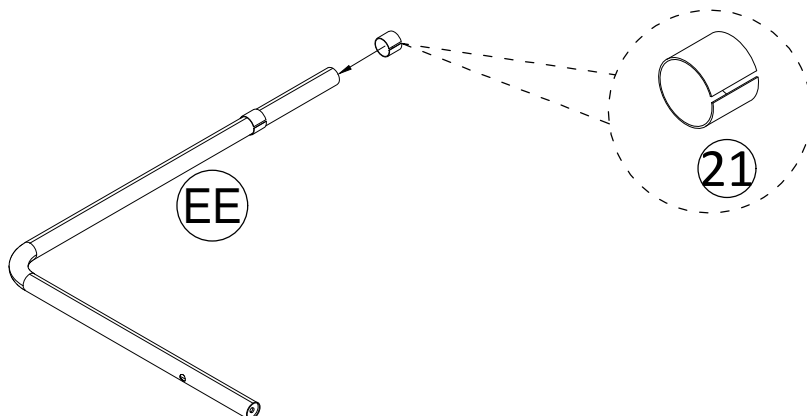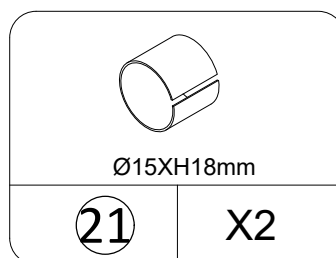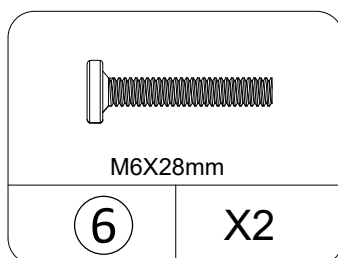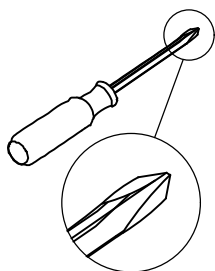











Before you install this screw, please
make sure the screw size is M6*28mm

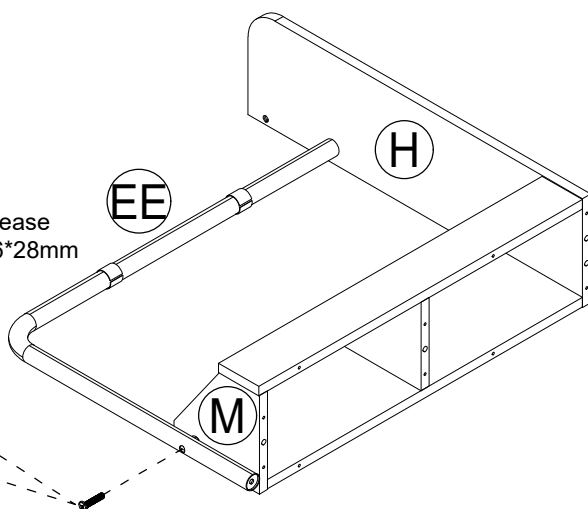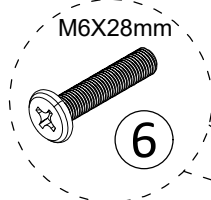



Before you install this screw, please
make sure the screw size is M6*28mm

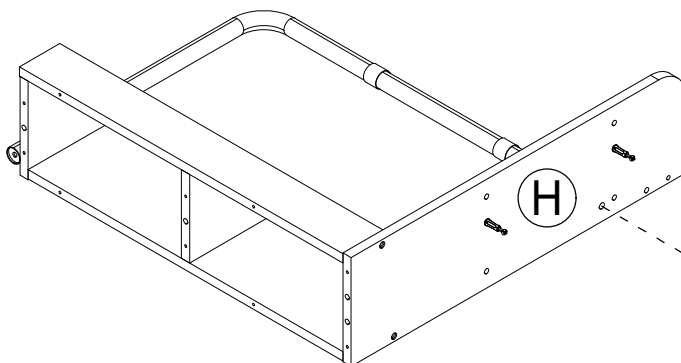
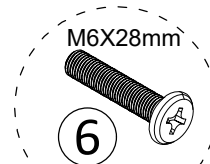


STEP7

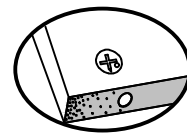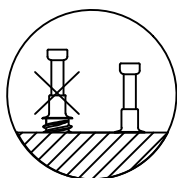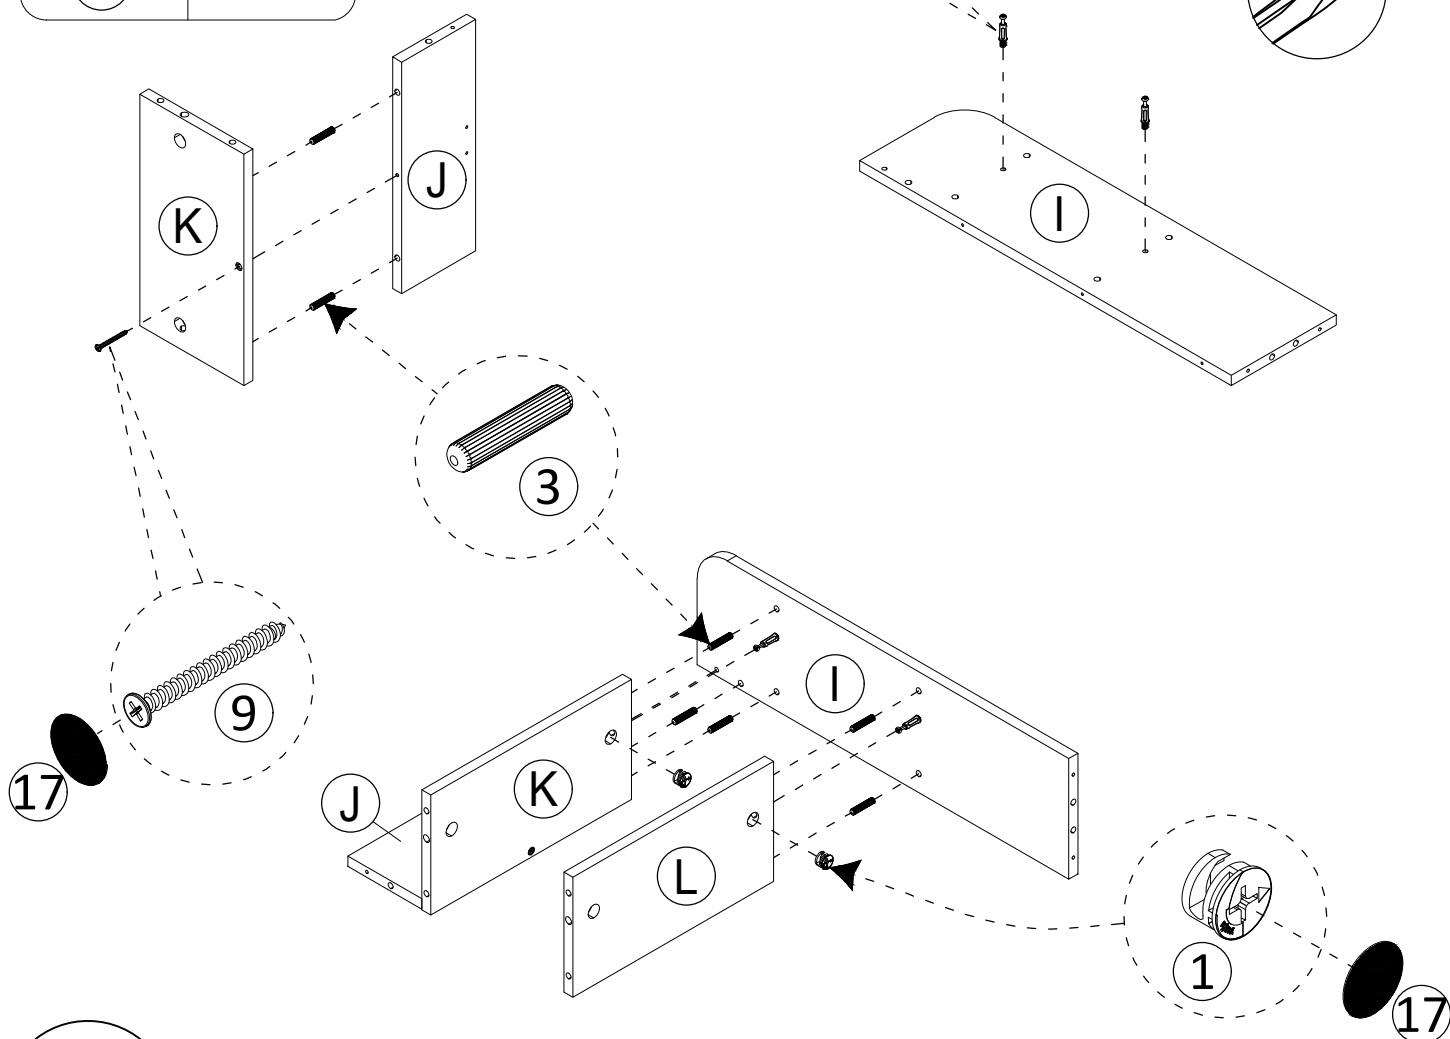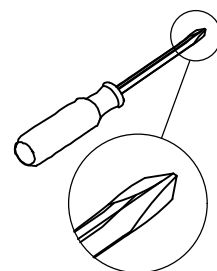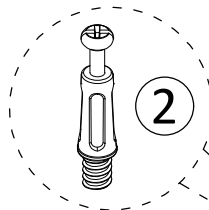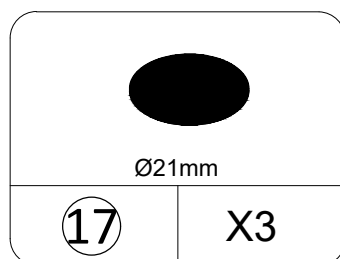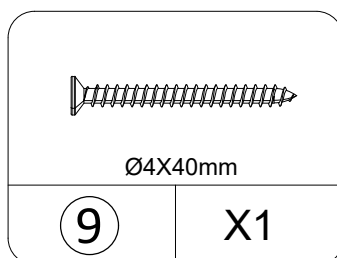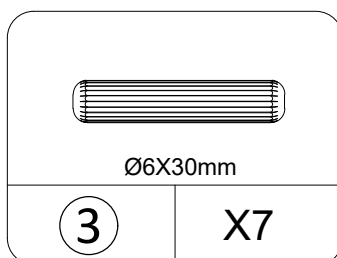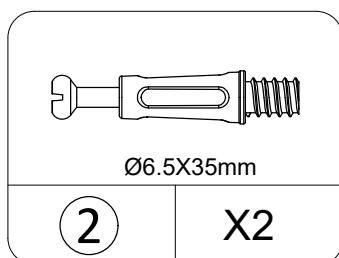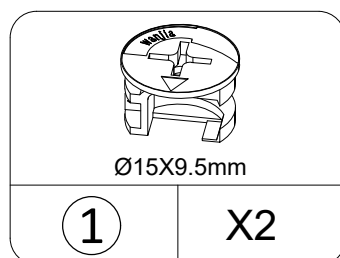





STEP8

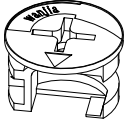 Ø15X9.5mm		 Ø6X30mm		 Ø4X40mm		 Ø21mm	
1	X2	3	X5	9	X1	17	X3




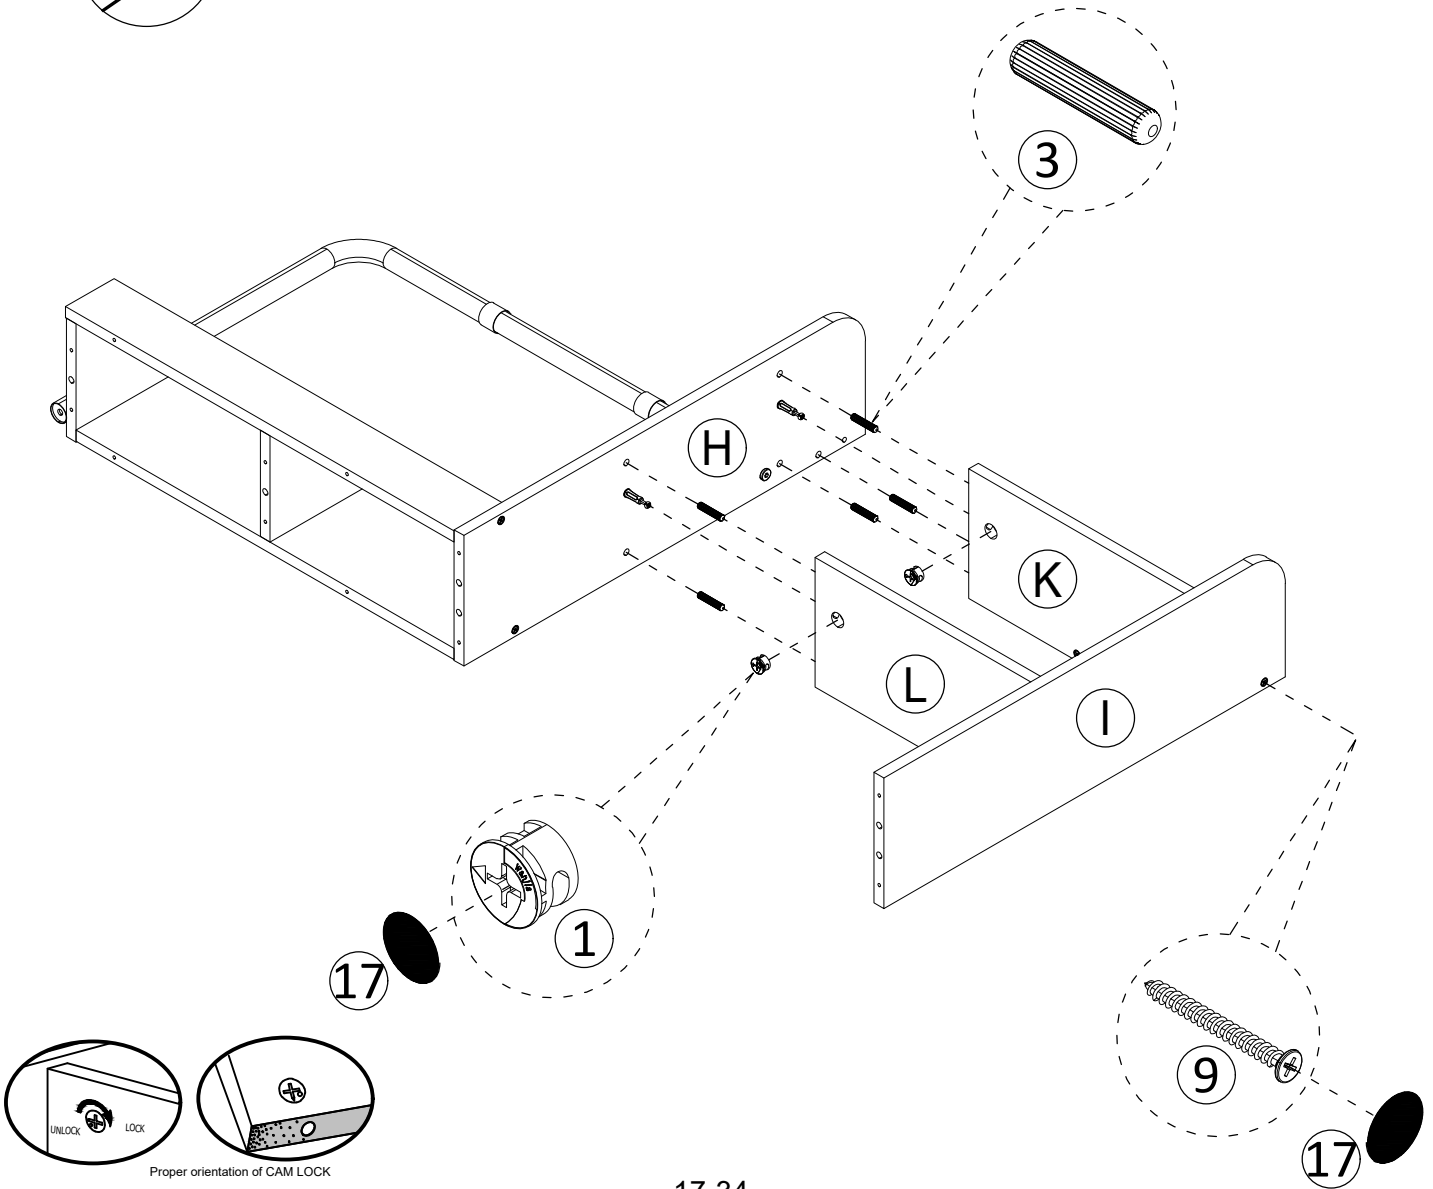
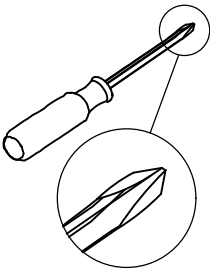


Proper orientation of CAM LOCK





STEP9

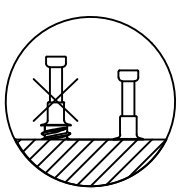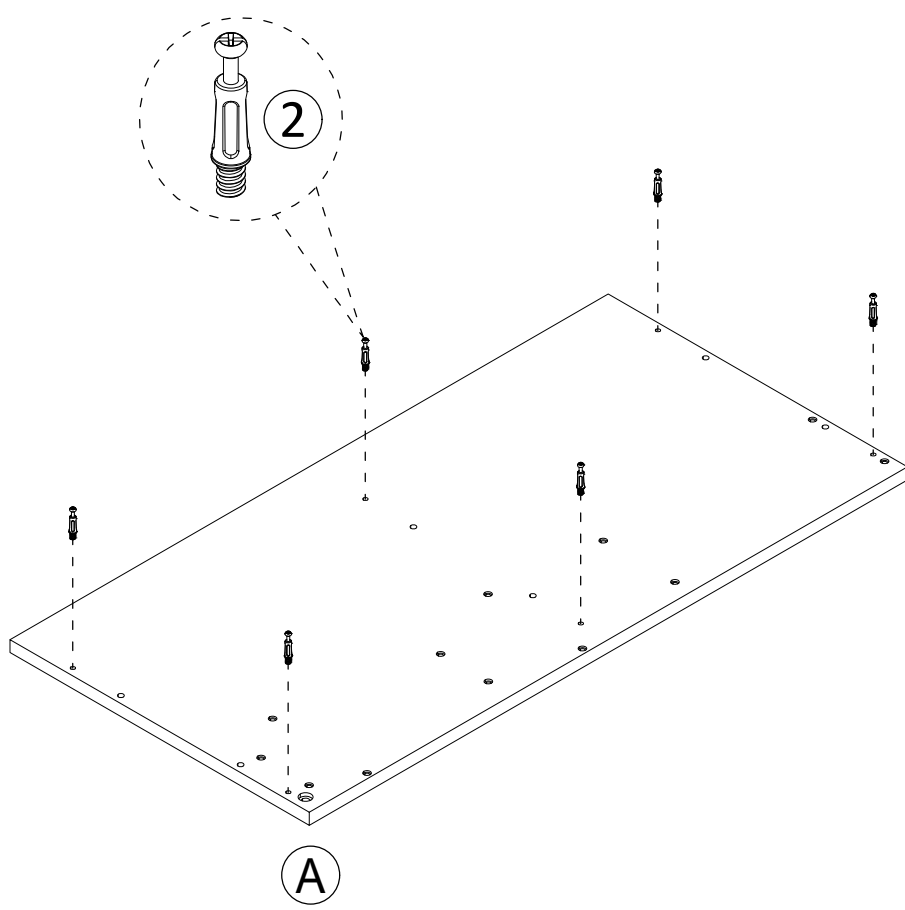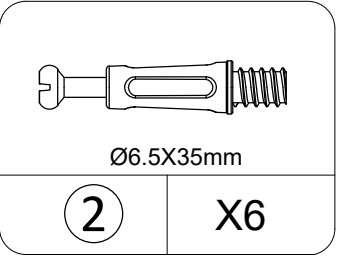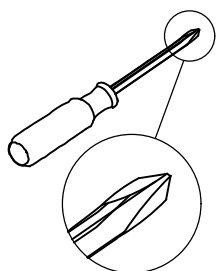

STEP10




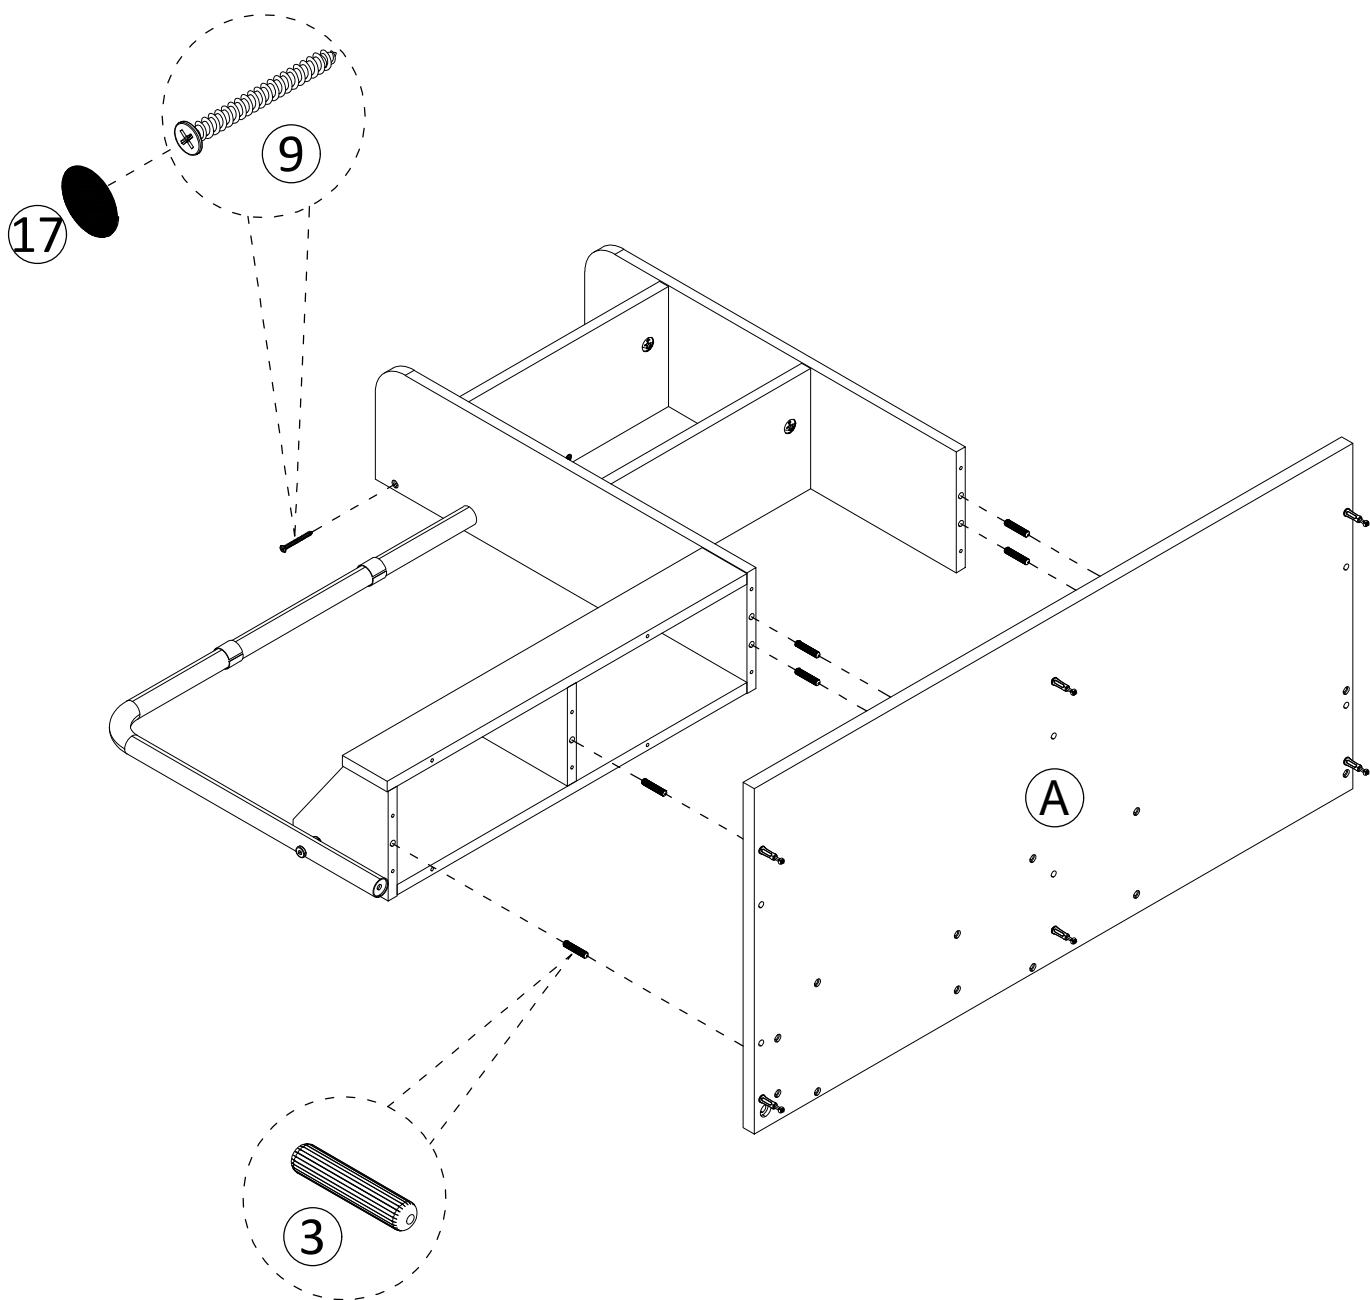
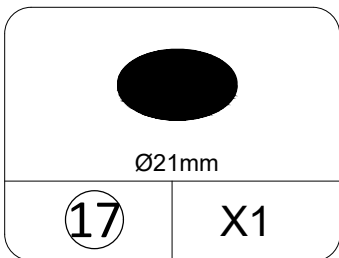
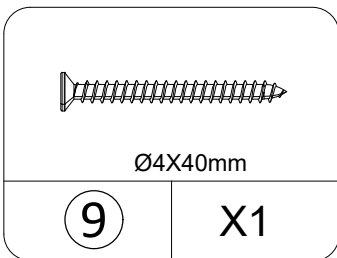
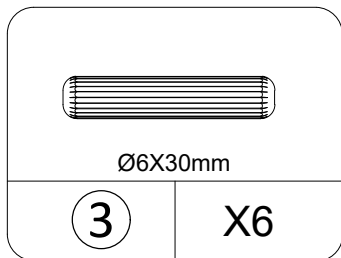
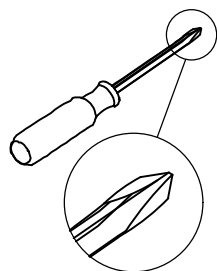


STEP11

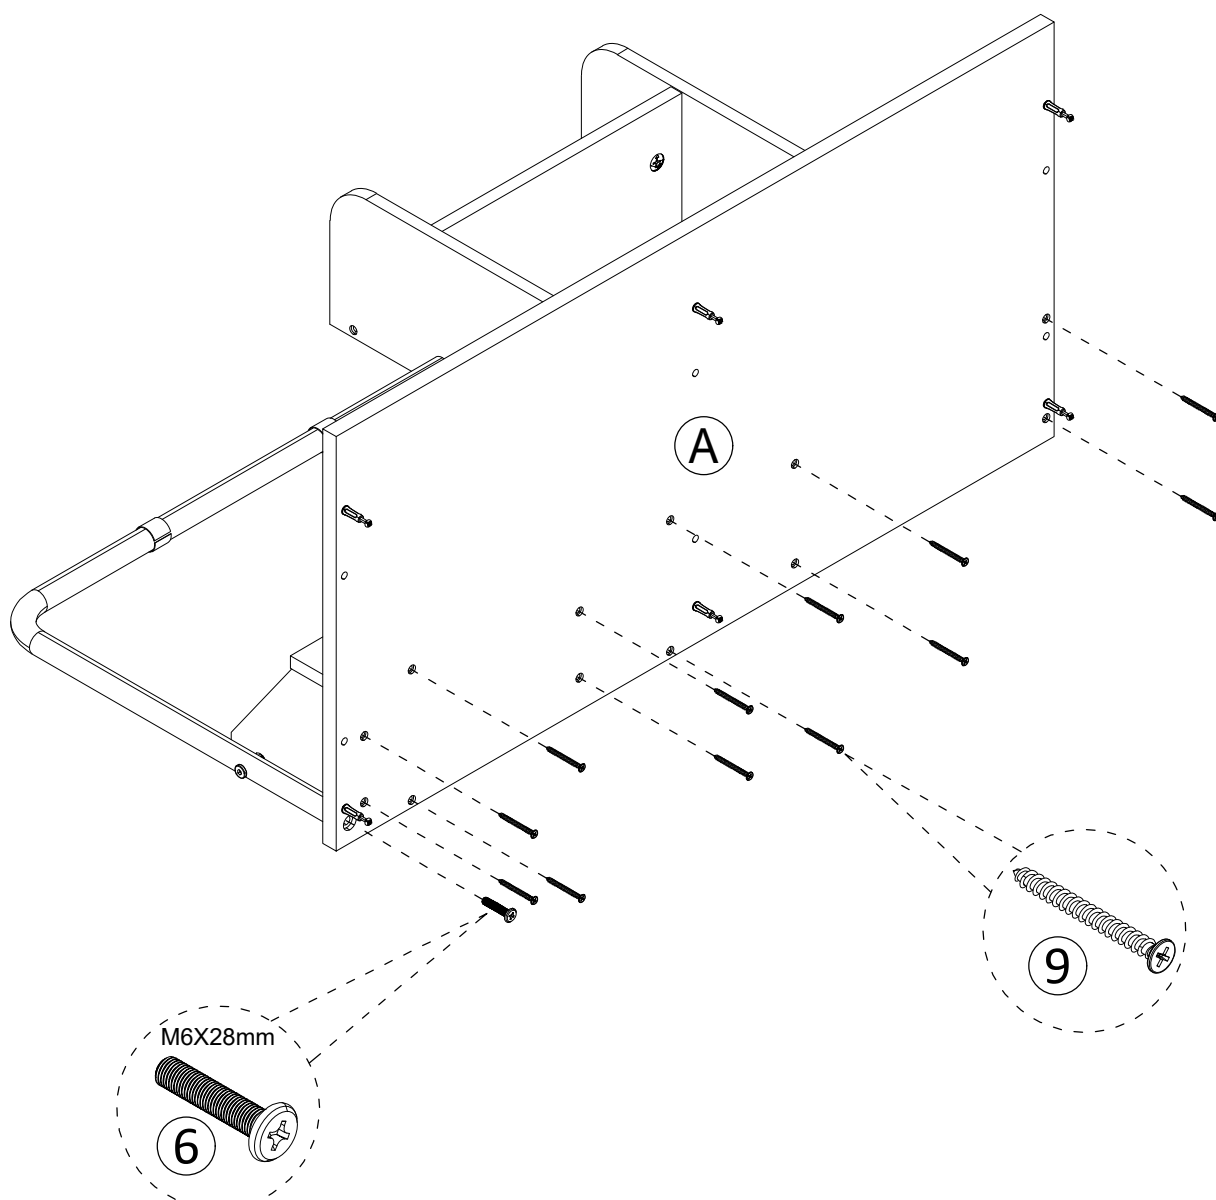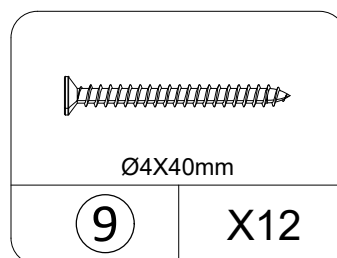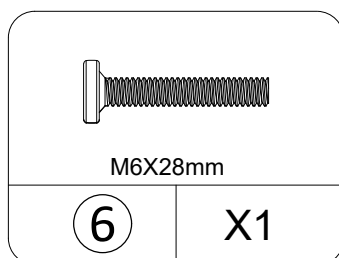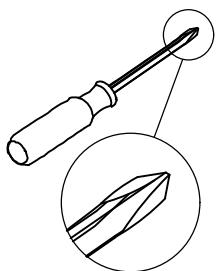


Before you install this screw, please
make sure the screw size is M6*28mm

STEP12

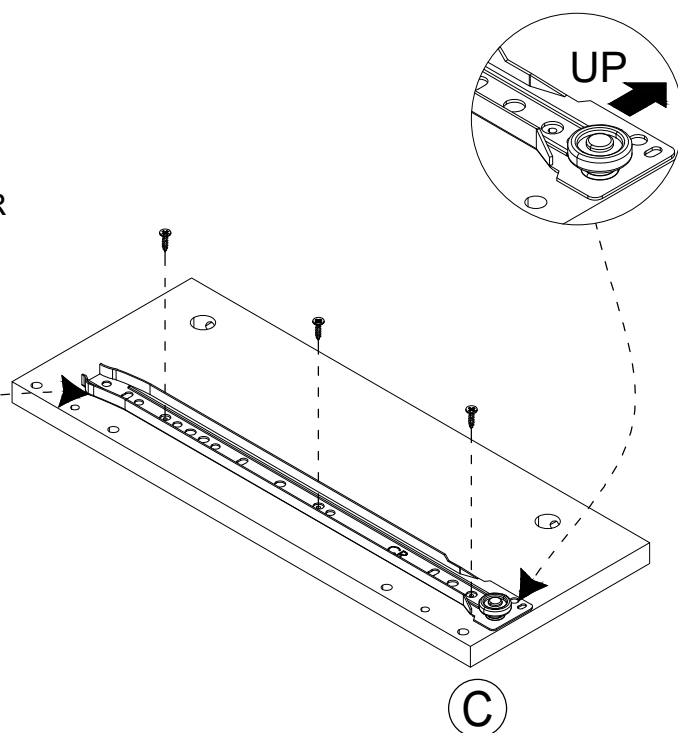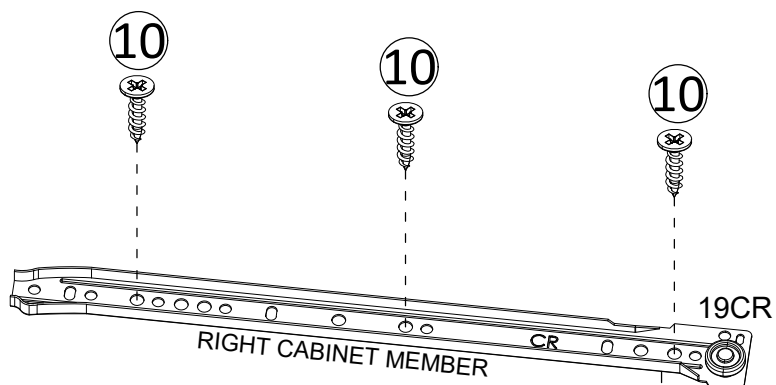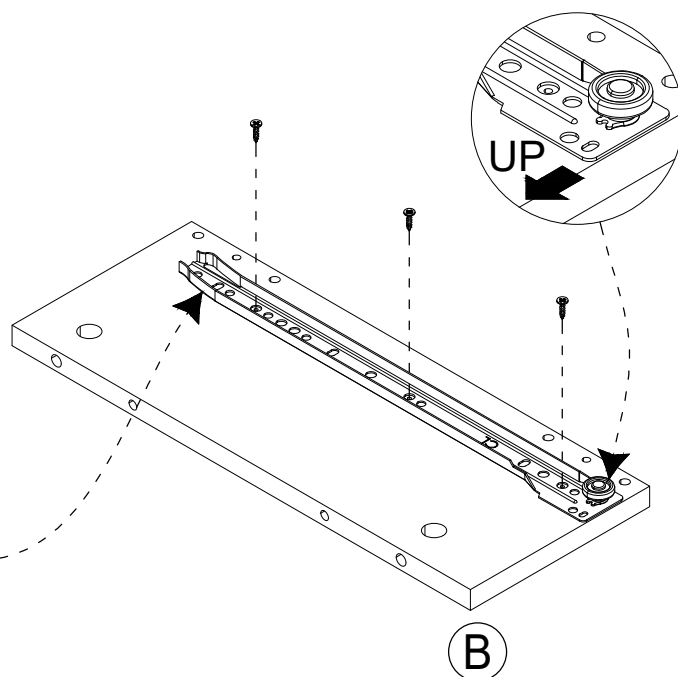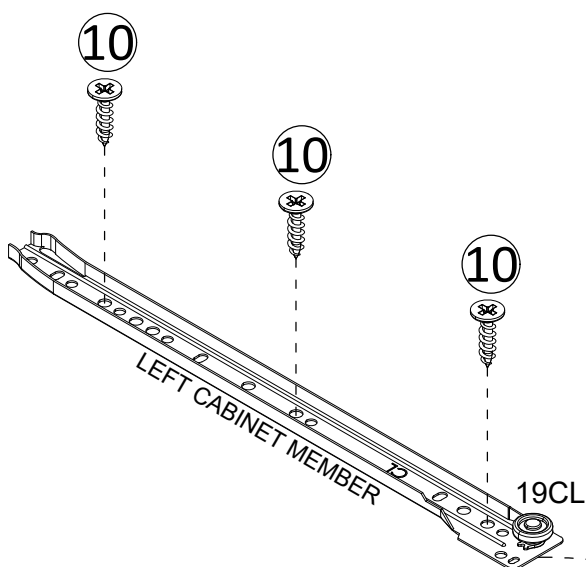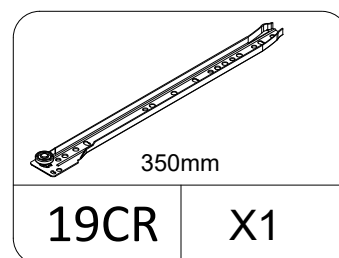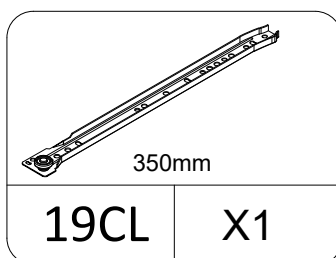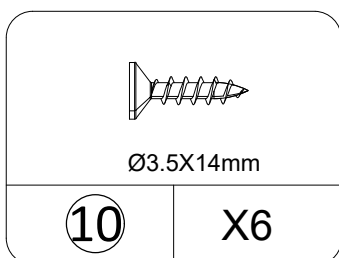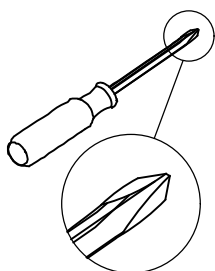


STEP13







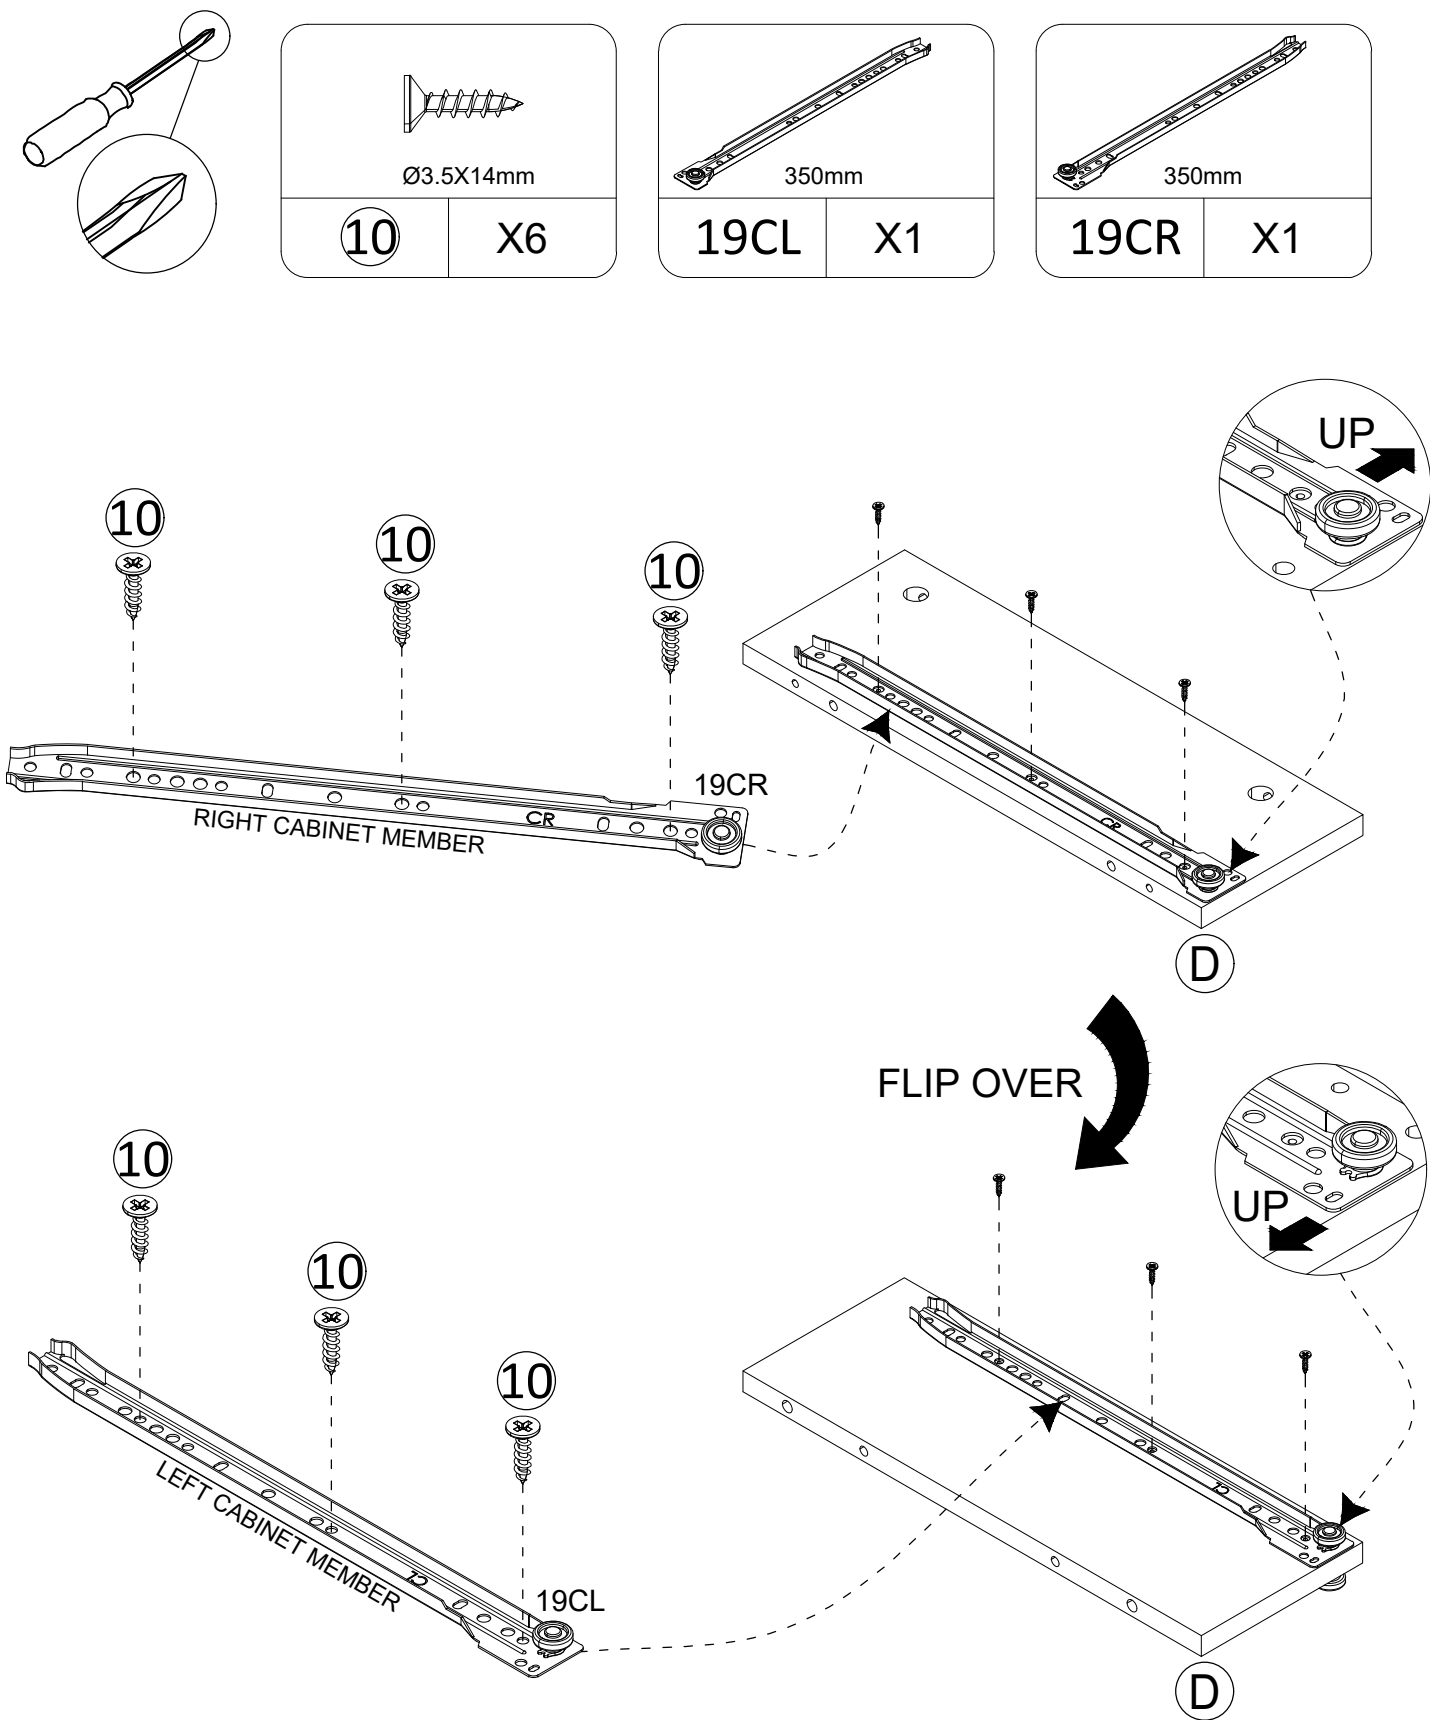


STEP14

 Ø6.5X35mm	
2	X4
 Ø6X30mm	
3	X2
 Ø6.3X50mm	
4	X2
 4X65mm	
18	X1





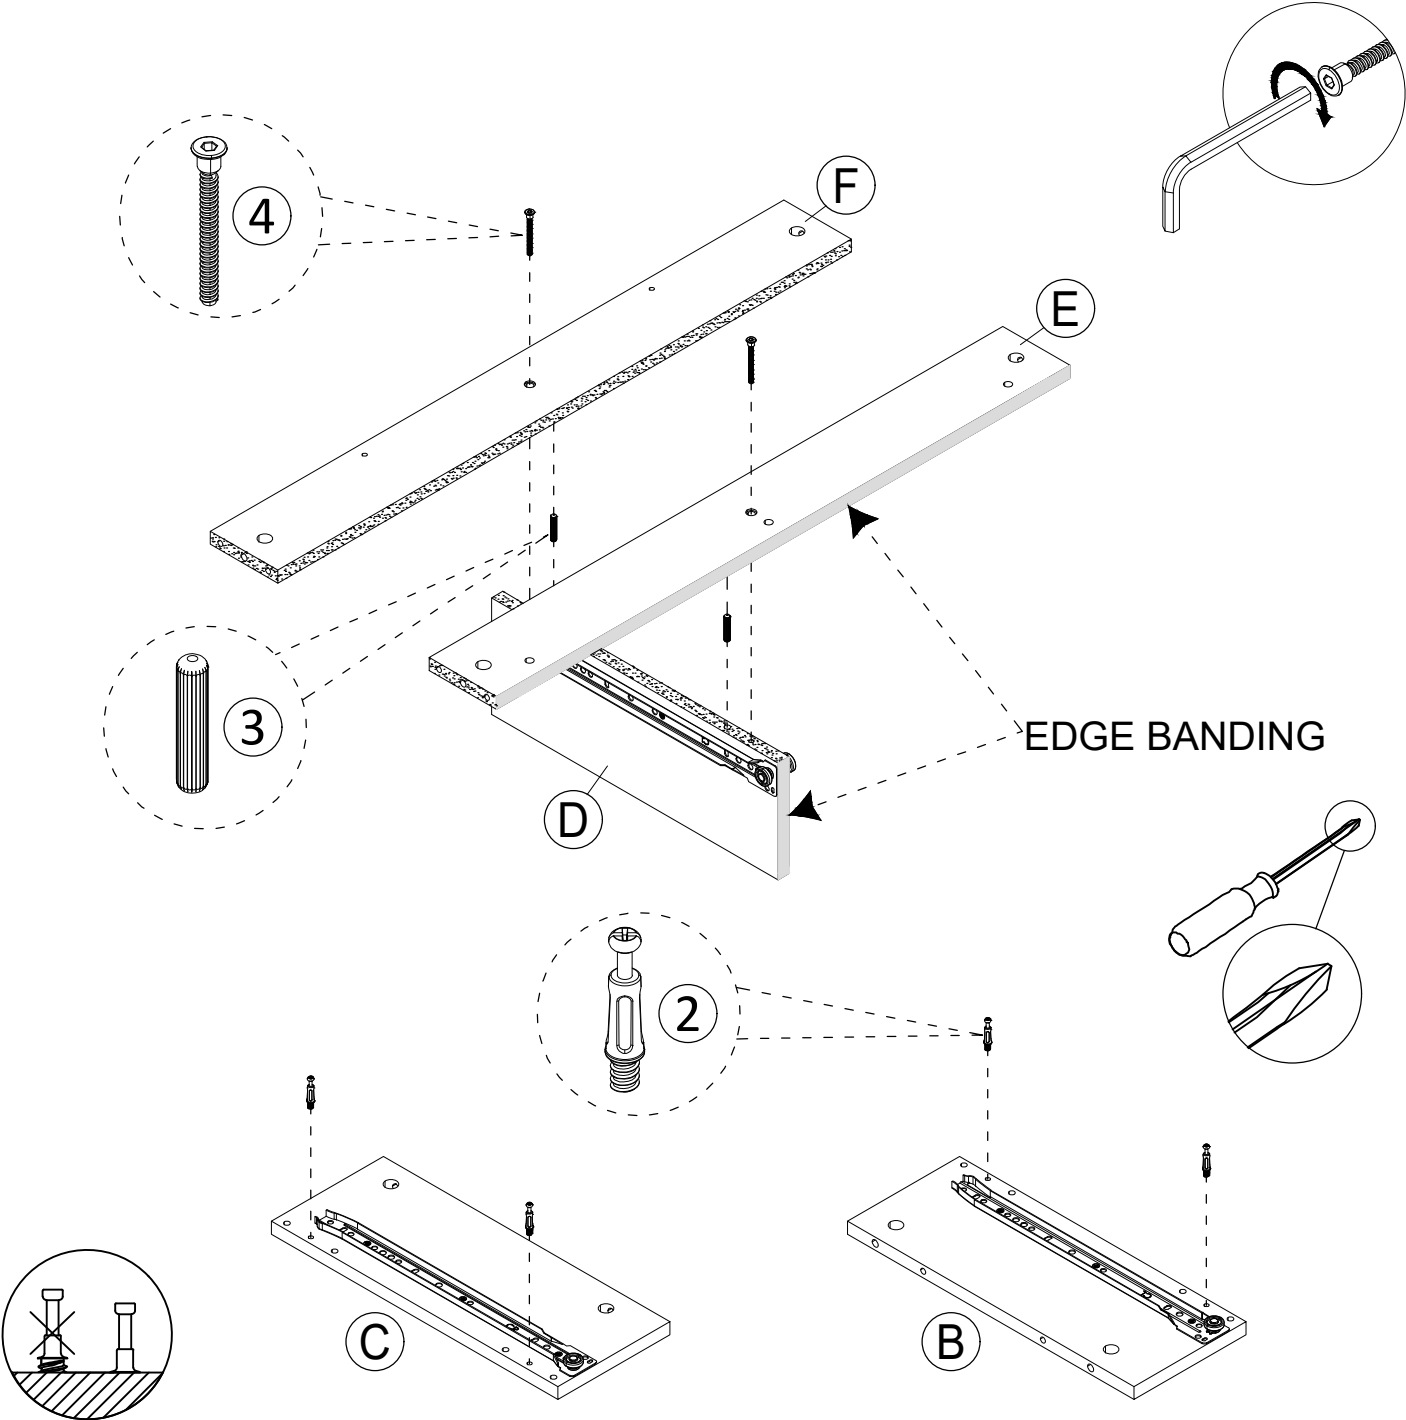


STEP15

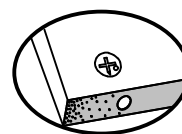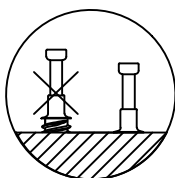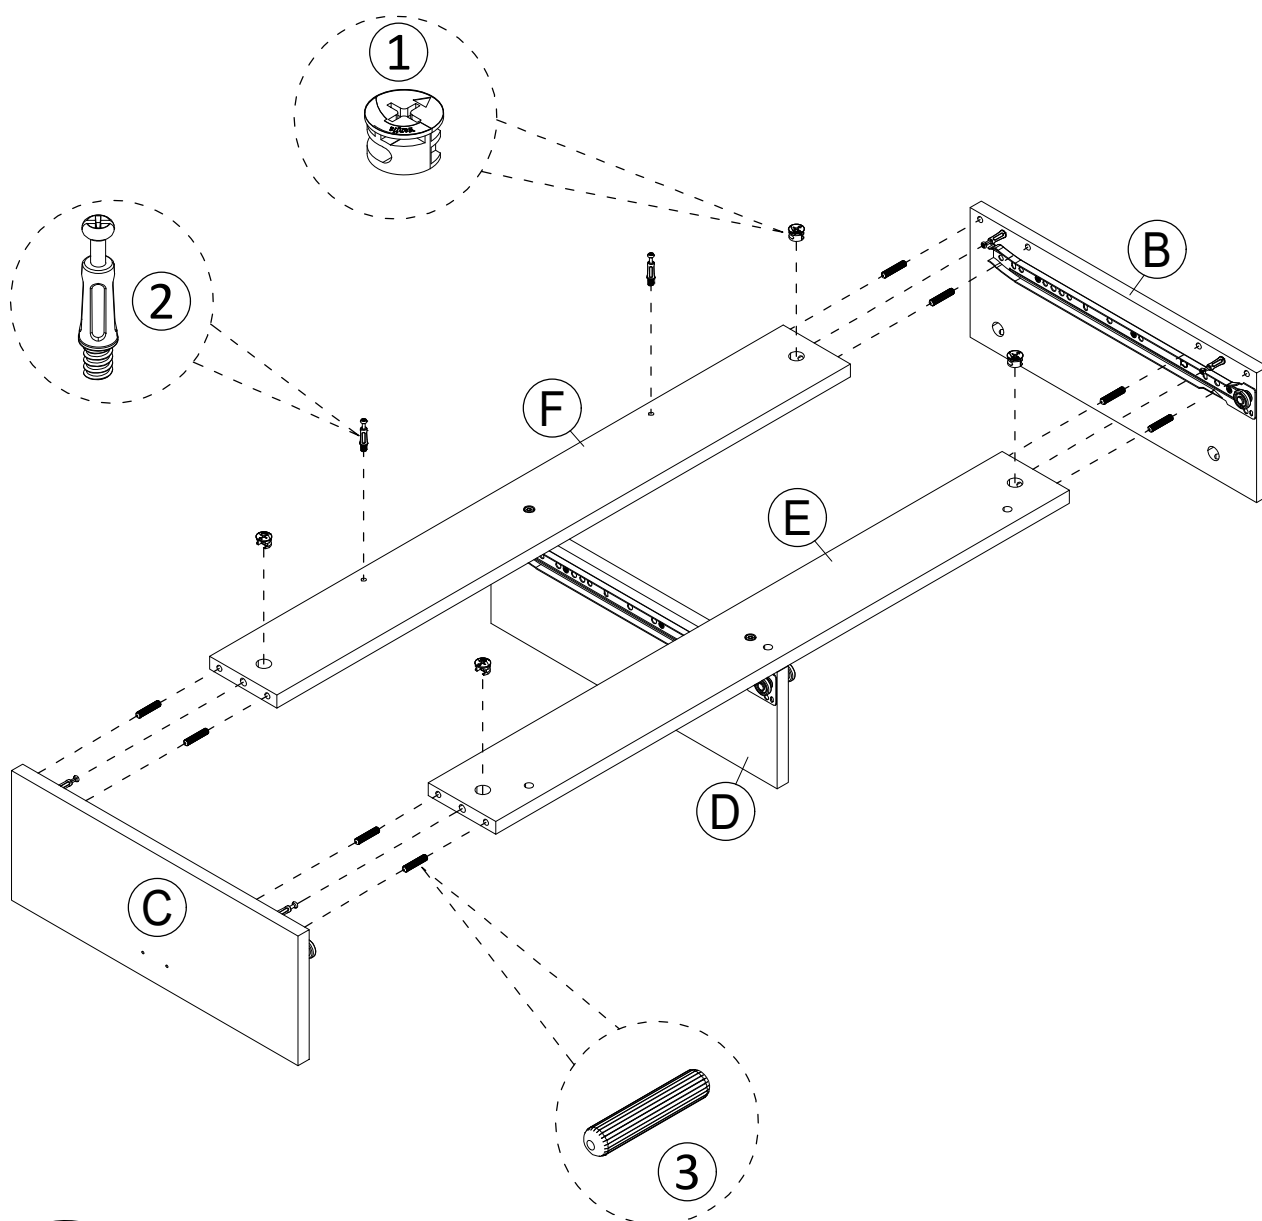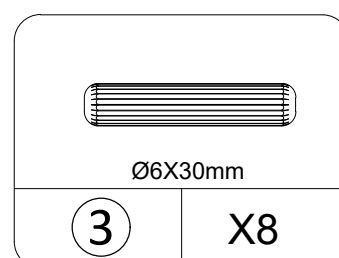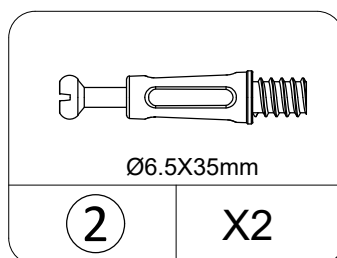
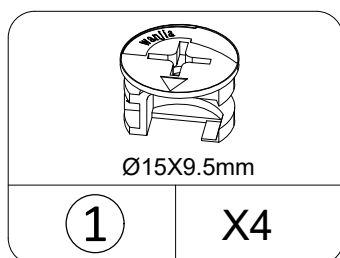
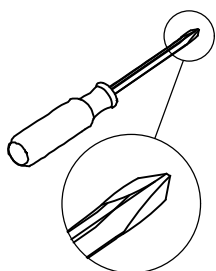


Proper orientation of CAM LOCK


STEP16

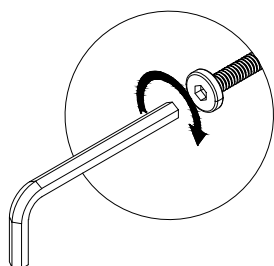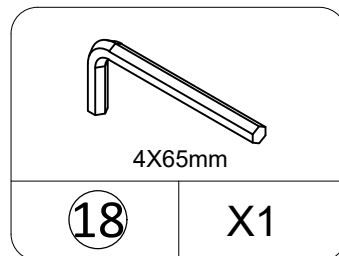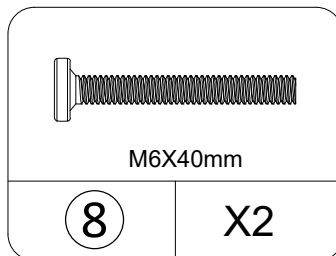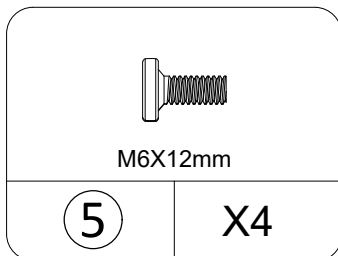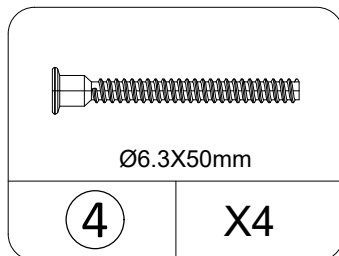




Before you install this screw, please make sure the screw size is M6*40mm

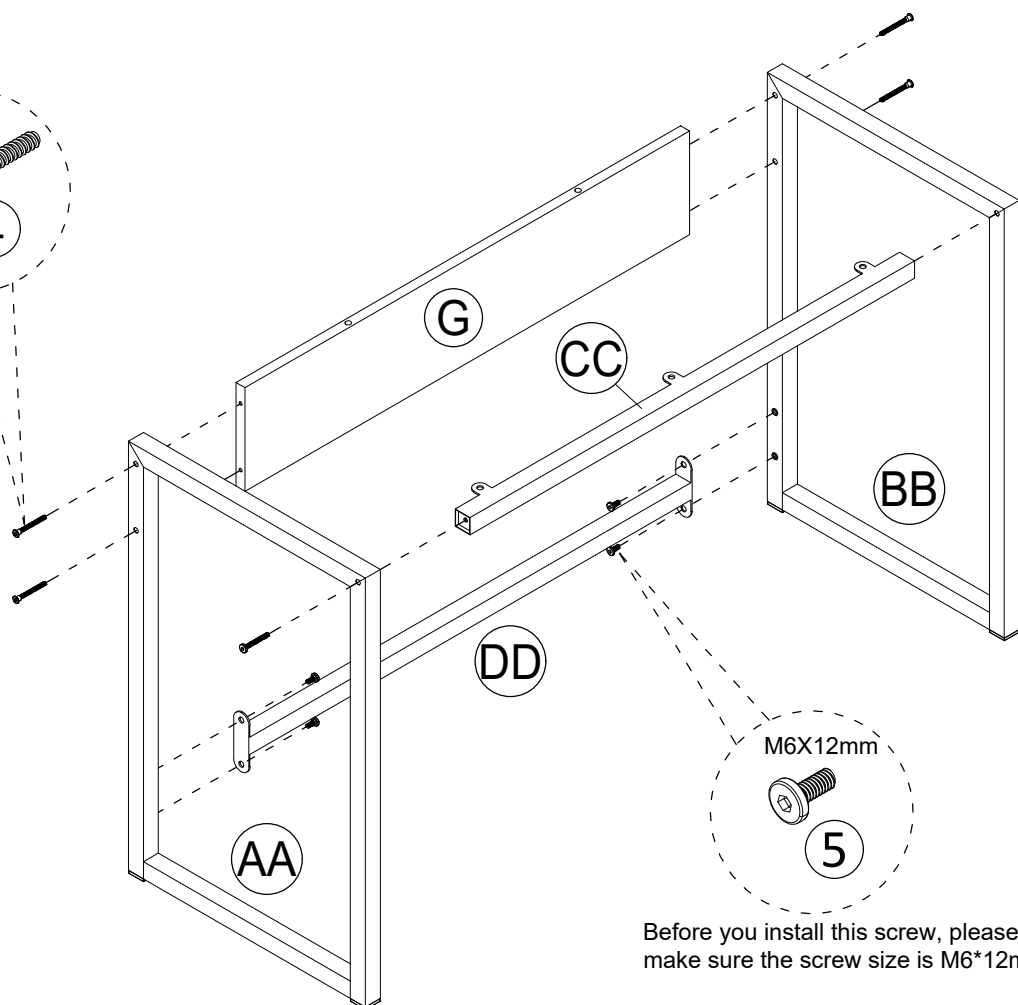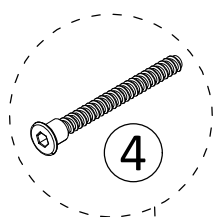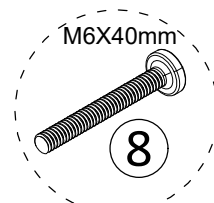




Before you install this screw, please make sure the screw size is M6*12mm

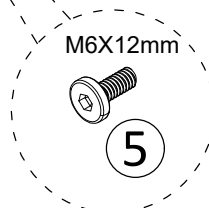

STEP17



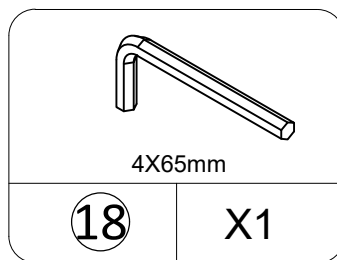
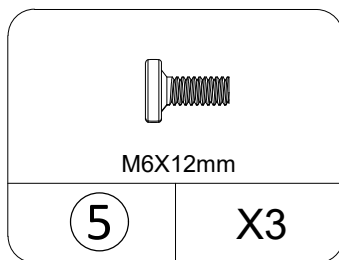
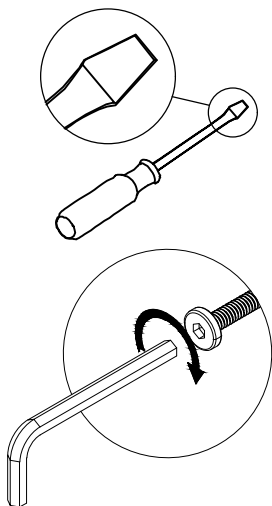


Before you install this screw, please make sure the screw size is M6*12mm

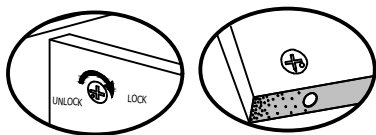
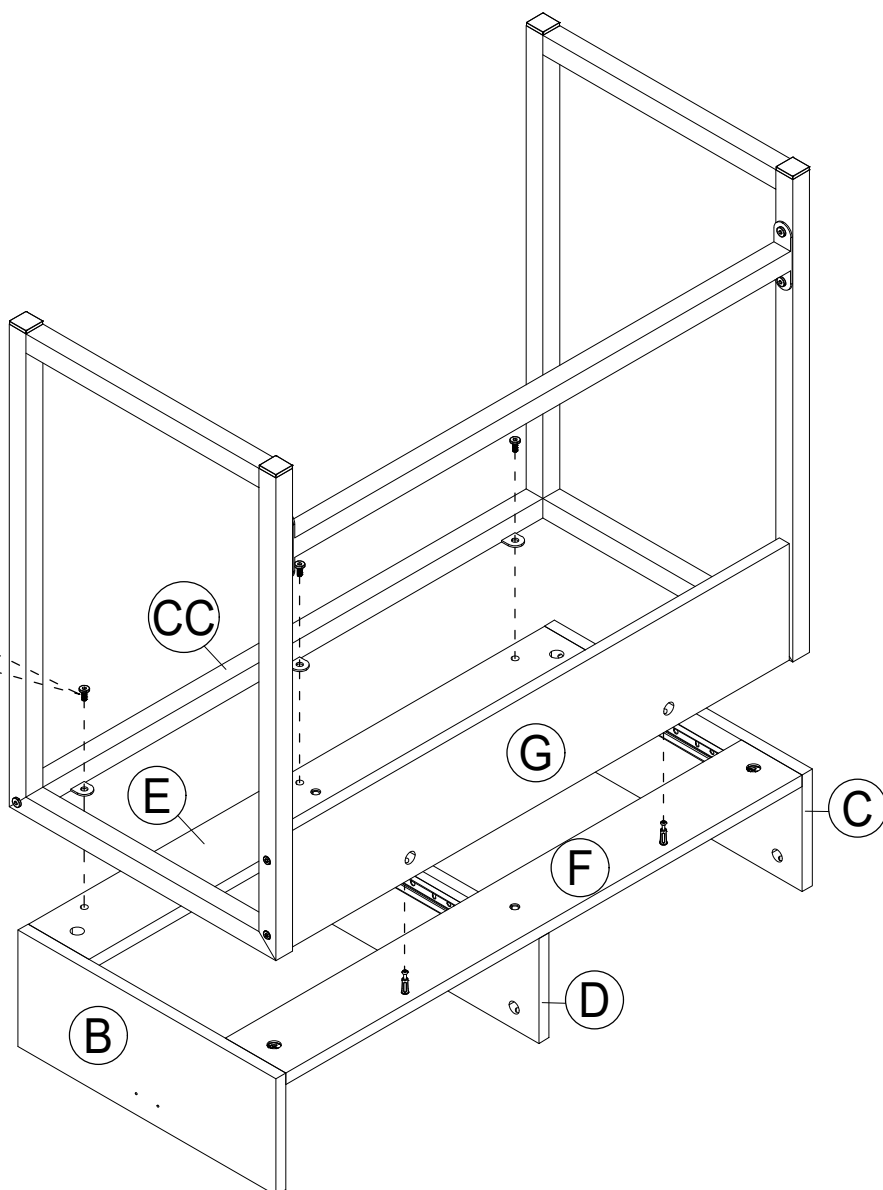
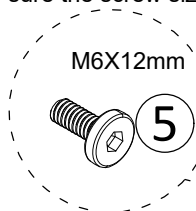


Proper orientation of CAM LOCK



STEP18

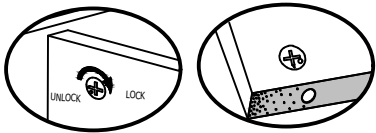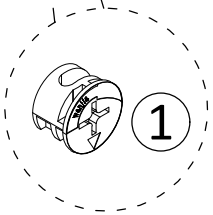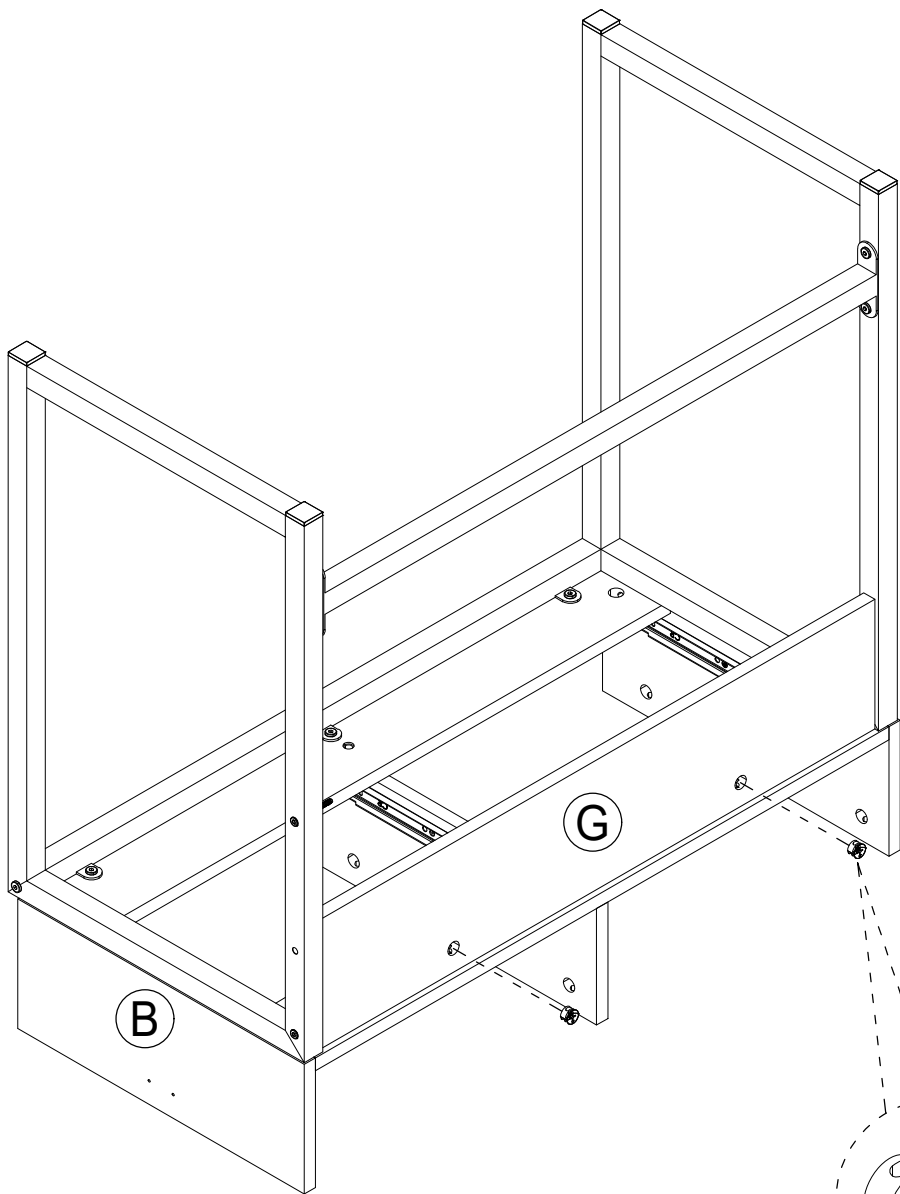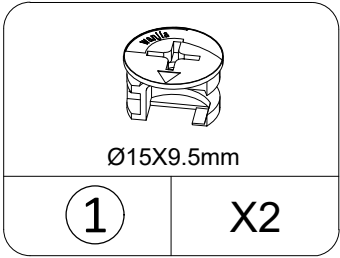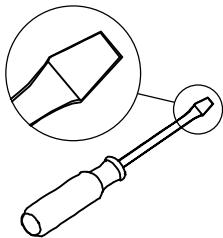

STEP19





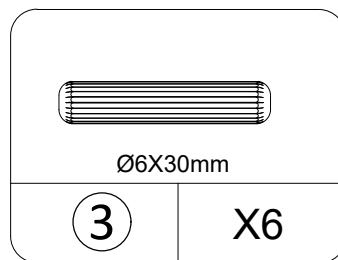
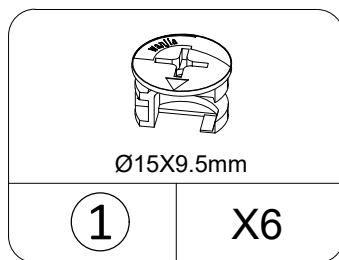
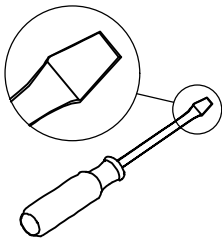


THIS STEP REQUIRES 2 PEOPLE

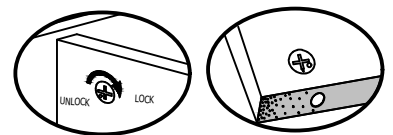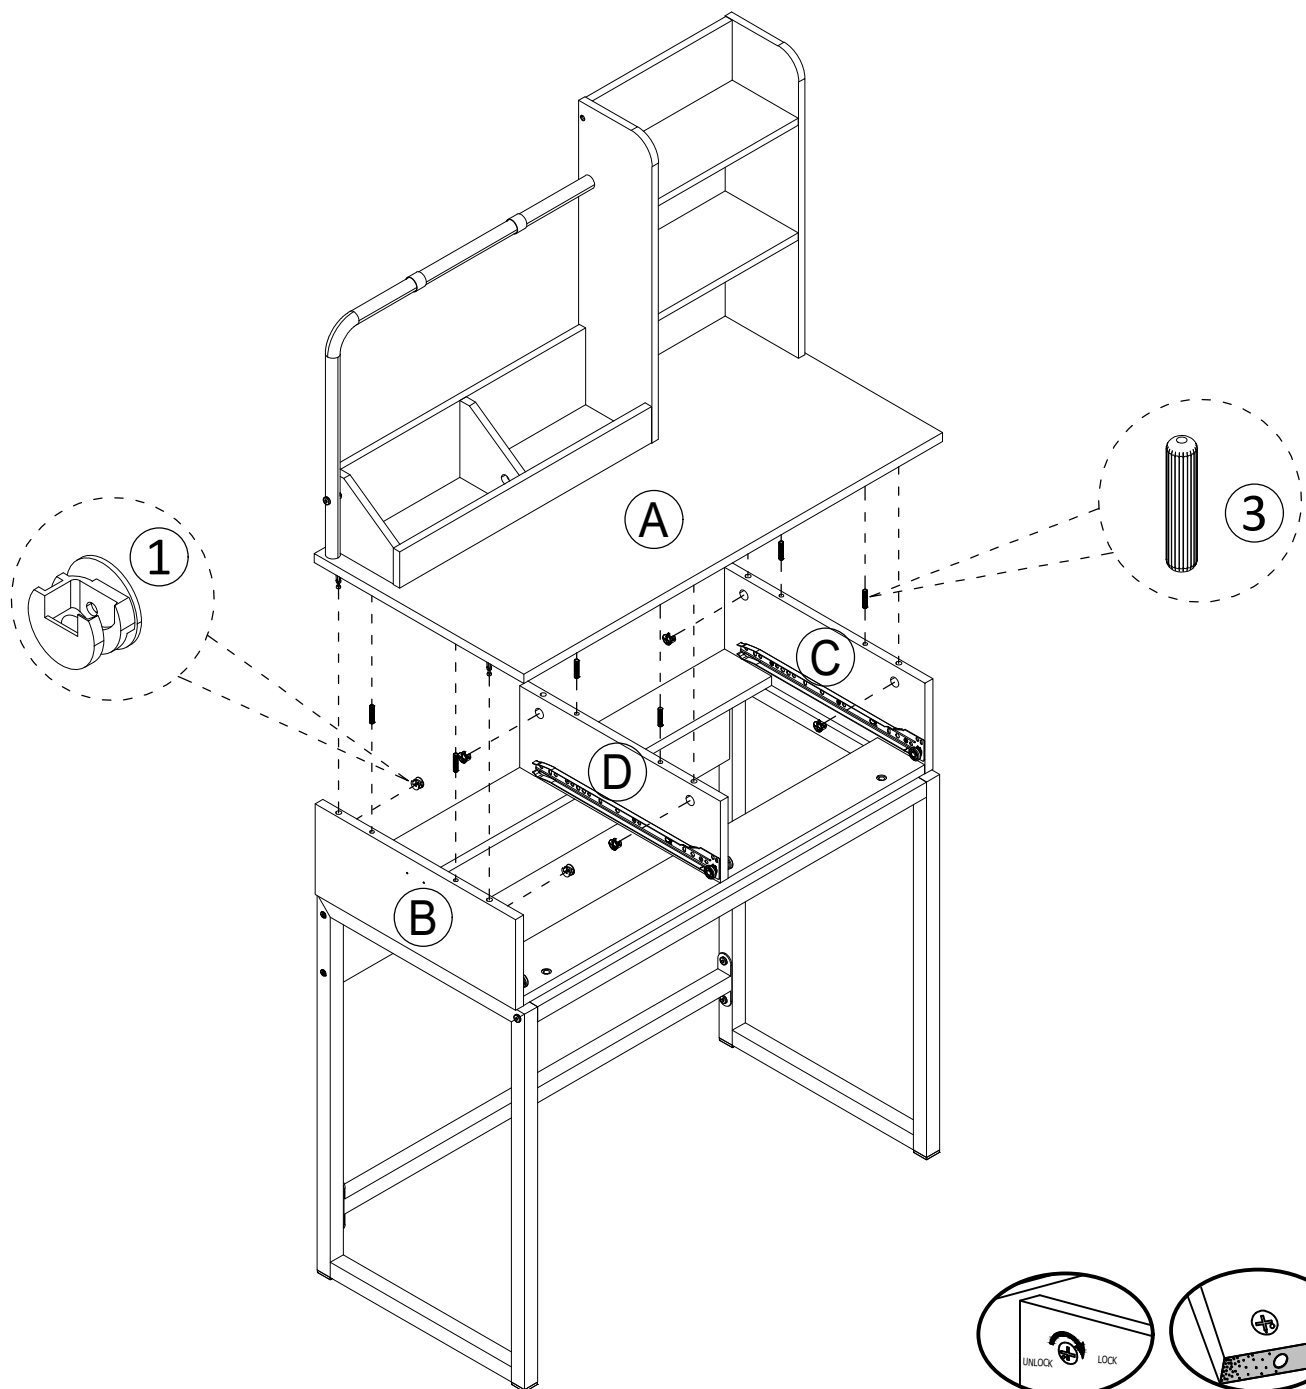




Proper orientation of CAM LOCK

STEP20

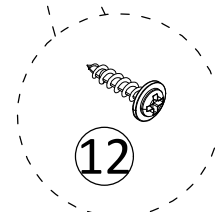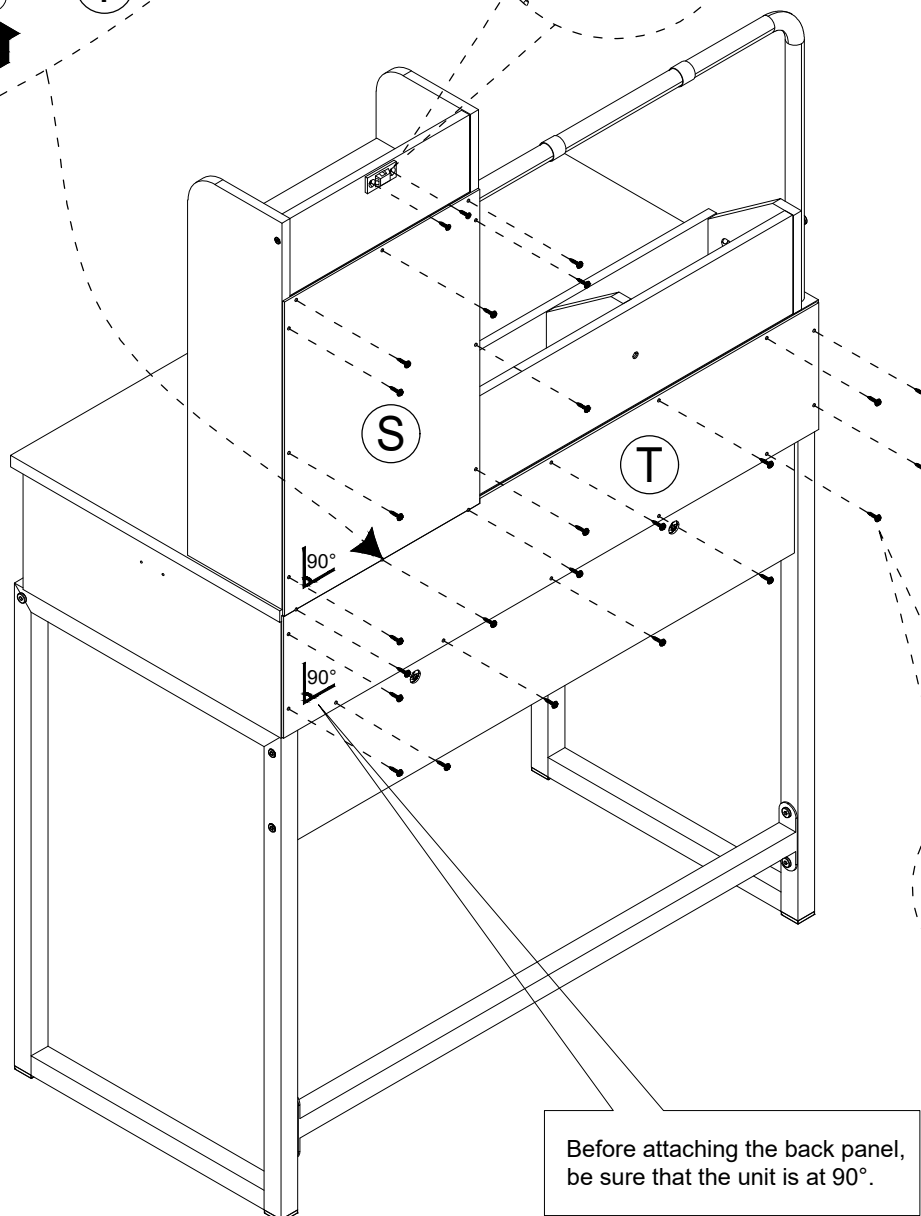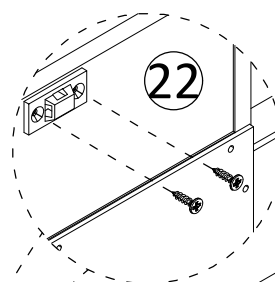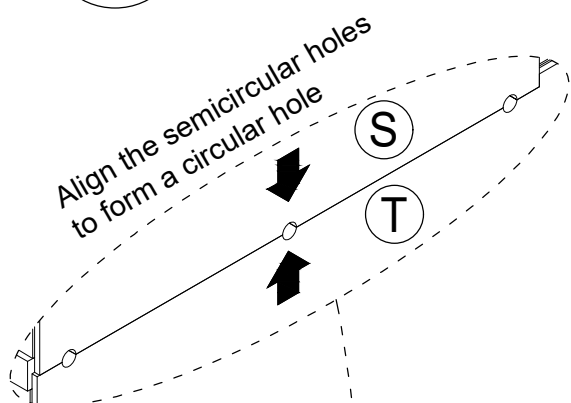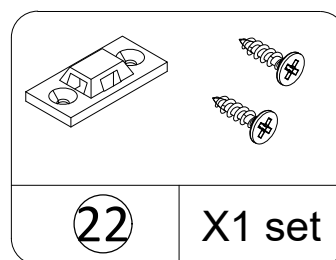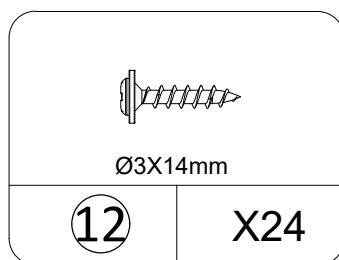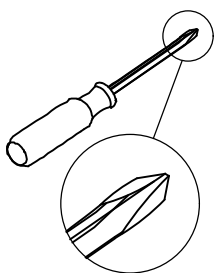


Before attaching the back panel,
be sure that the unit is at 90°.

STEP21

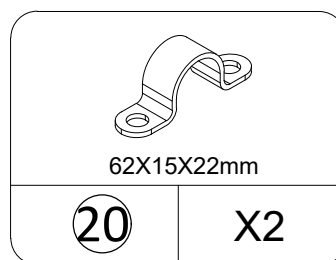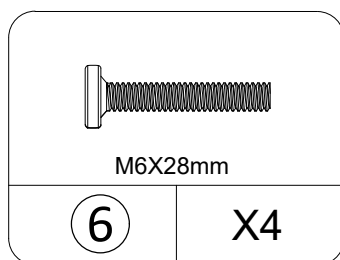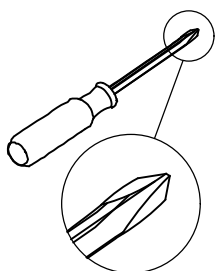


THIS STEP REQUIRES 2 PEOPLE






NOTES: The metal ring covers the plastic sheath. The opening of the plastic sheath faces forward.

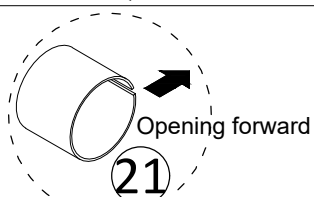






Before you install this screw, please make sure the screw size is M6*28mm

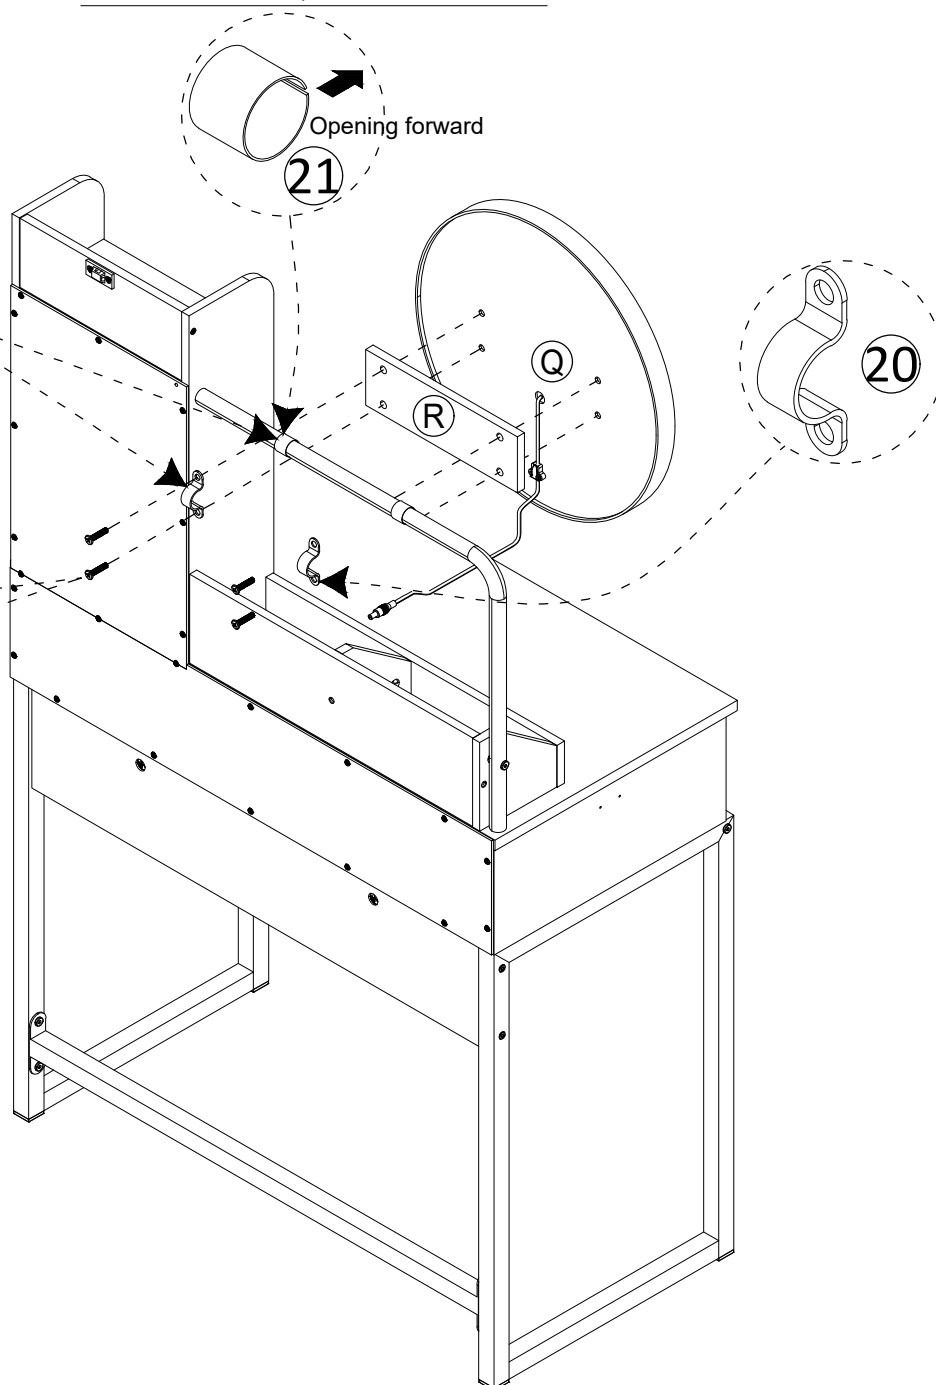


STEP22

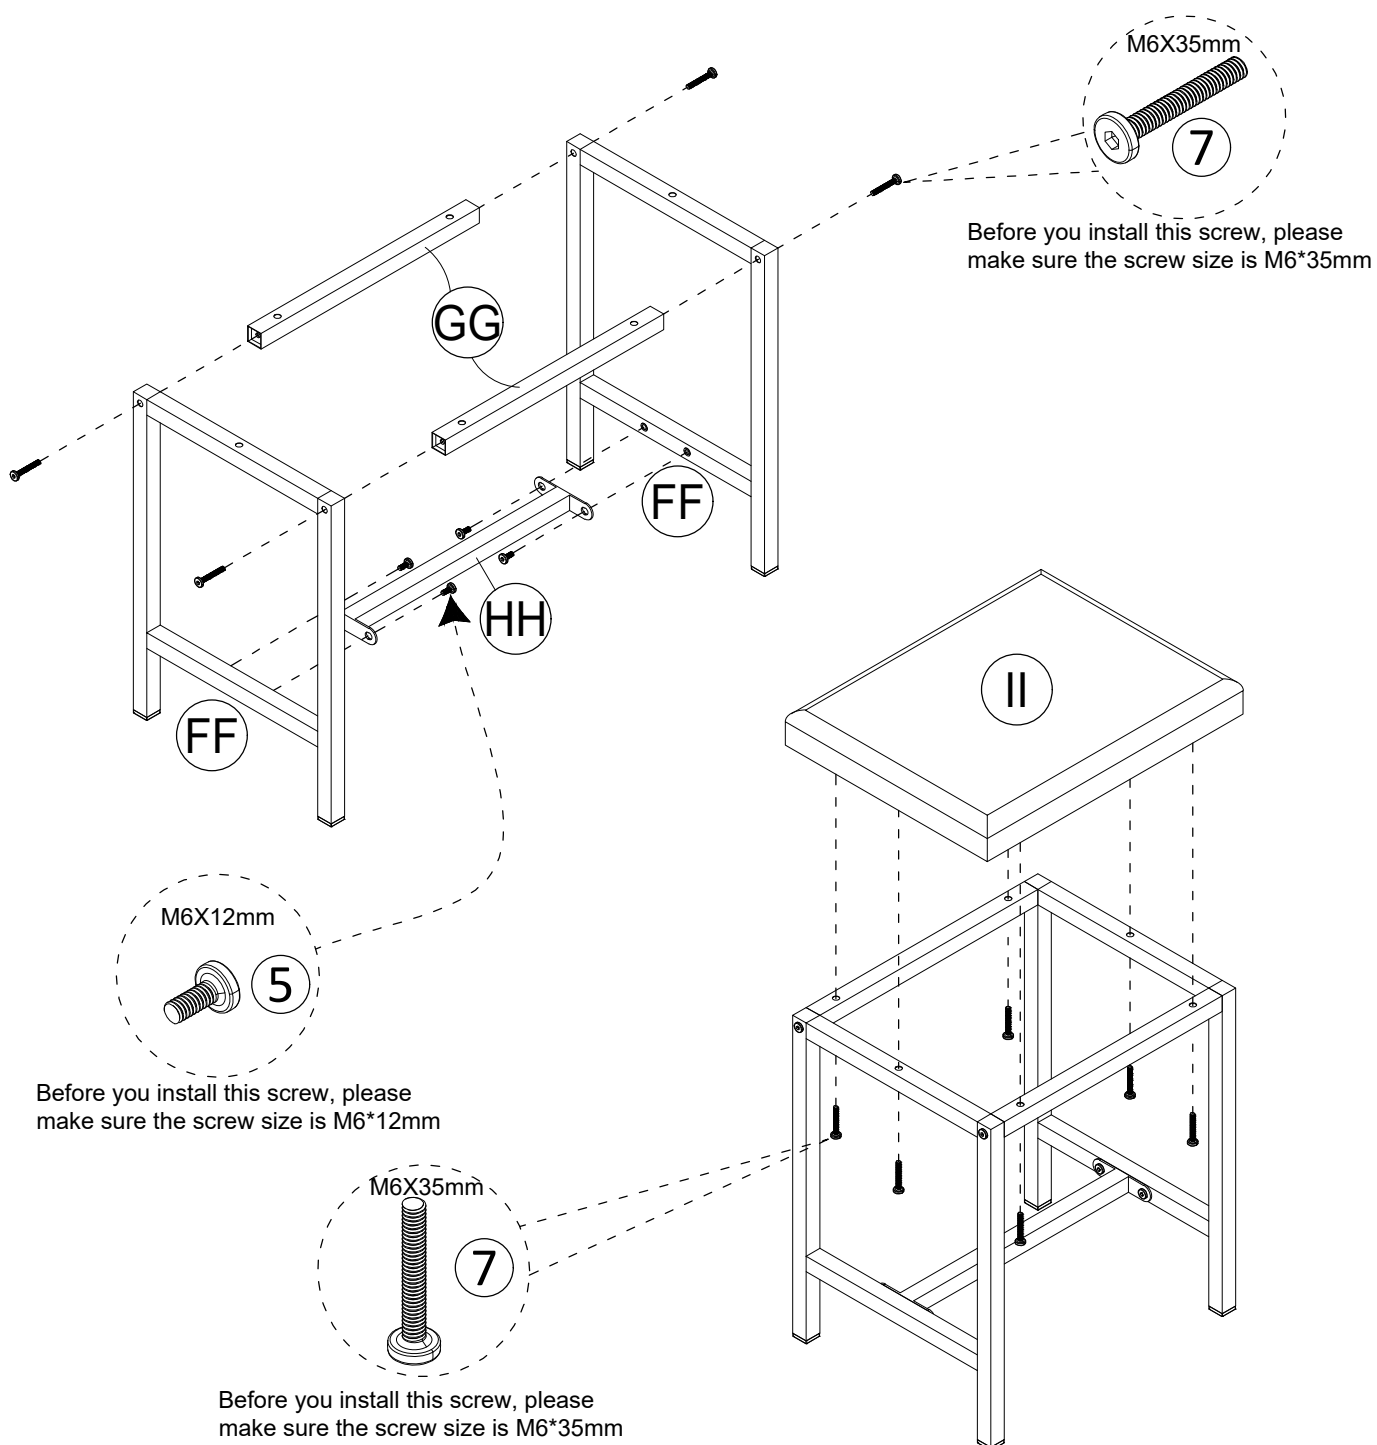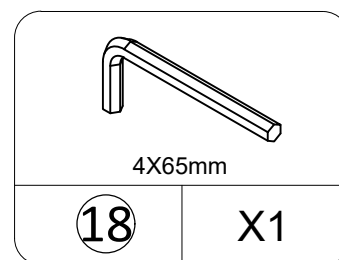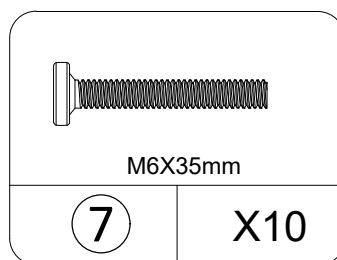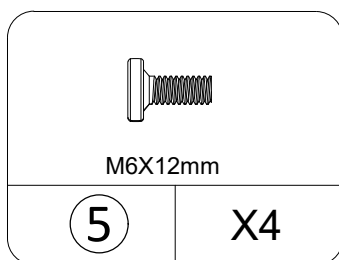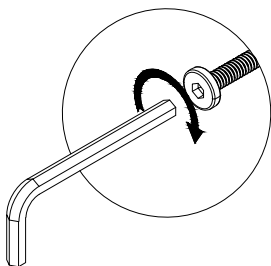


STEP23

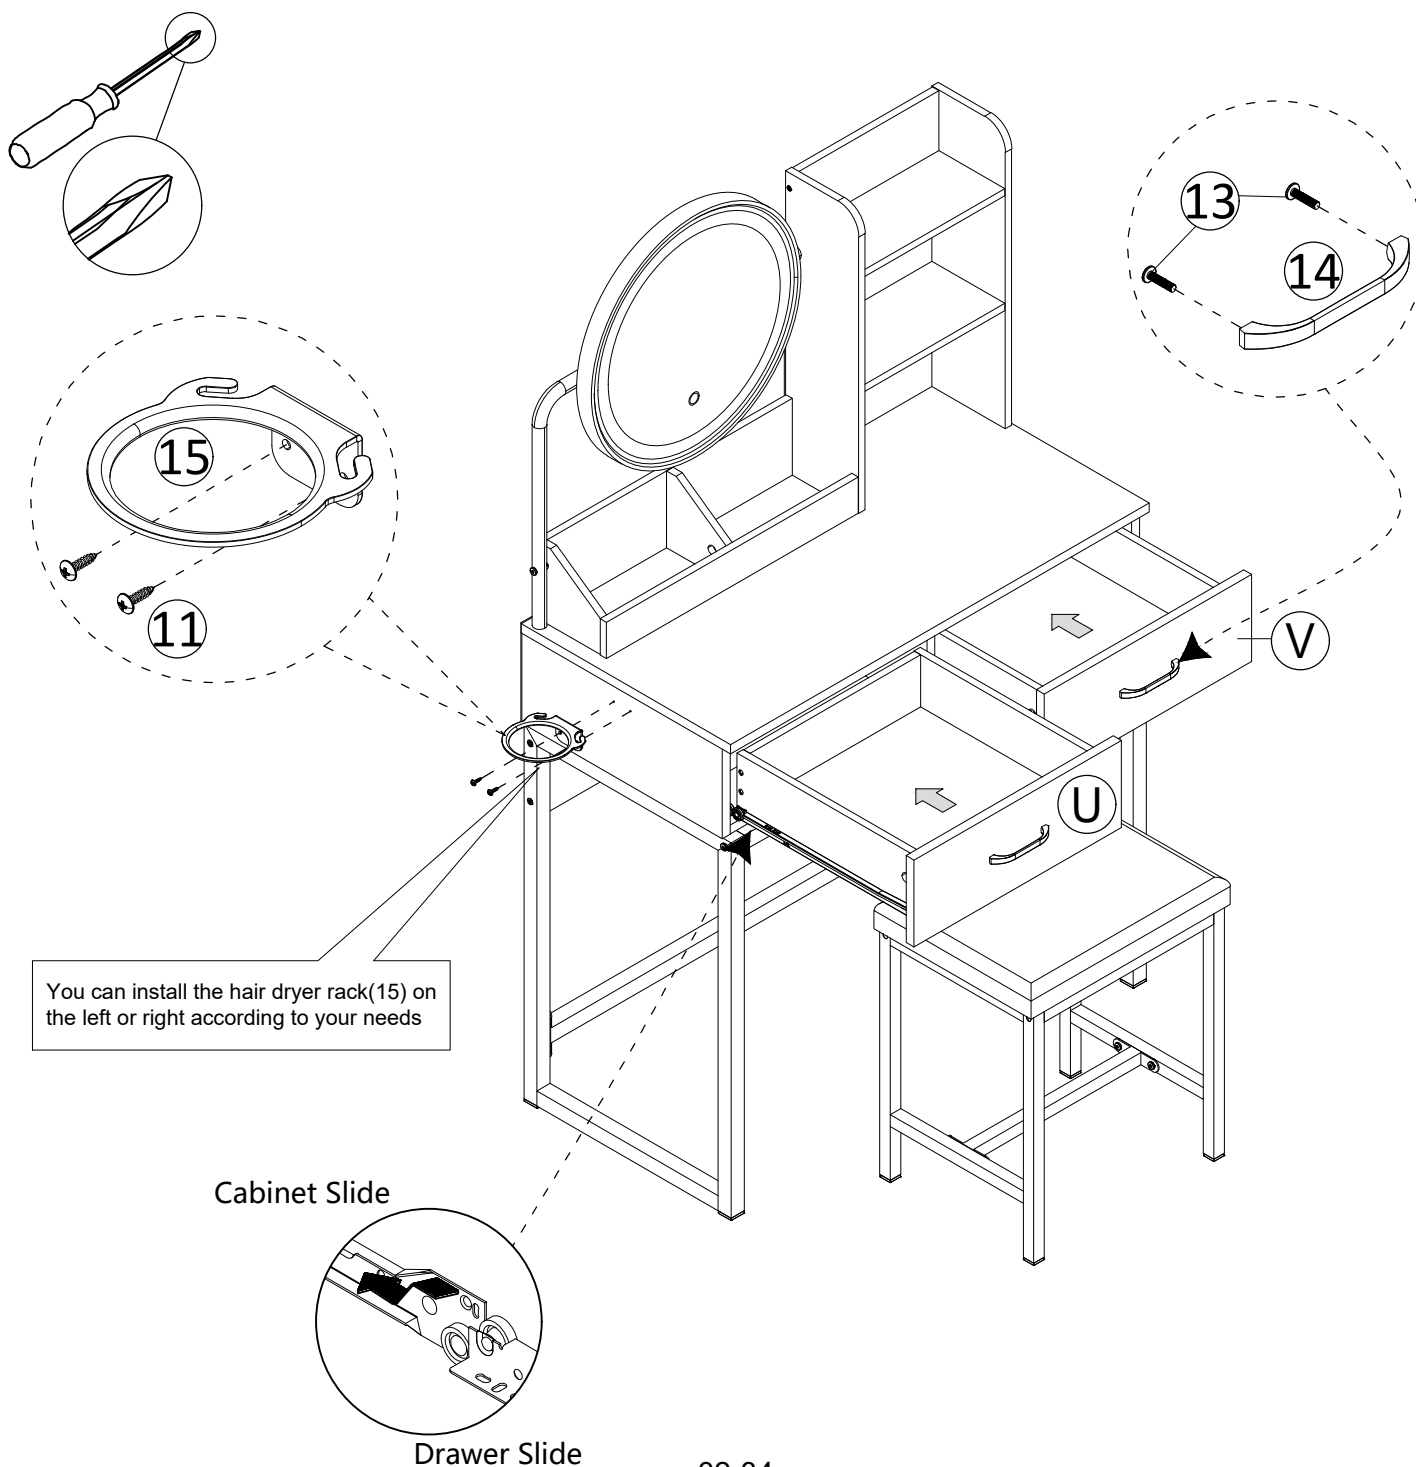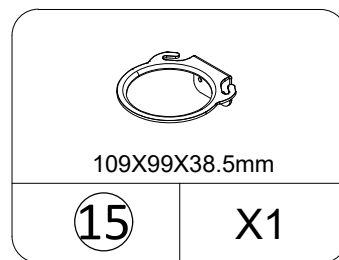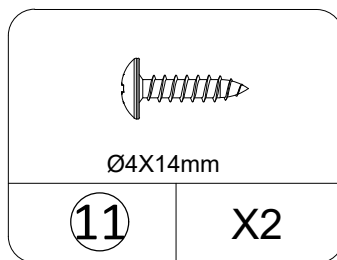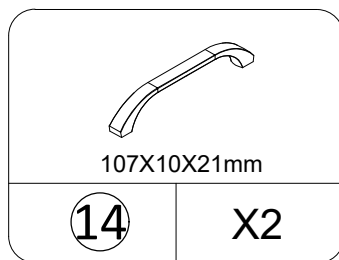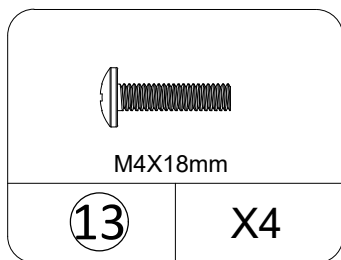


STEP24

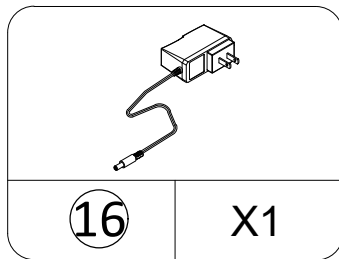

When making up can use the switch to turn on or off the light. the dressing table brings you 3temperature light modes, touch the button you can easy light up the mirror and changeet your different needs, long press to adjust the brightness

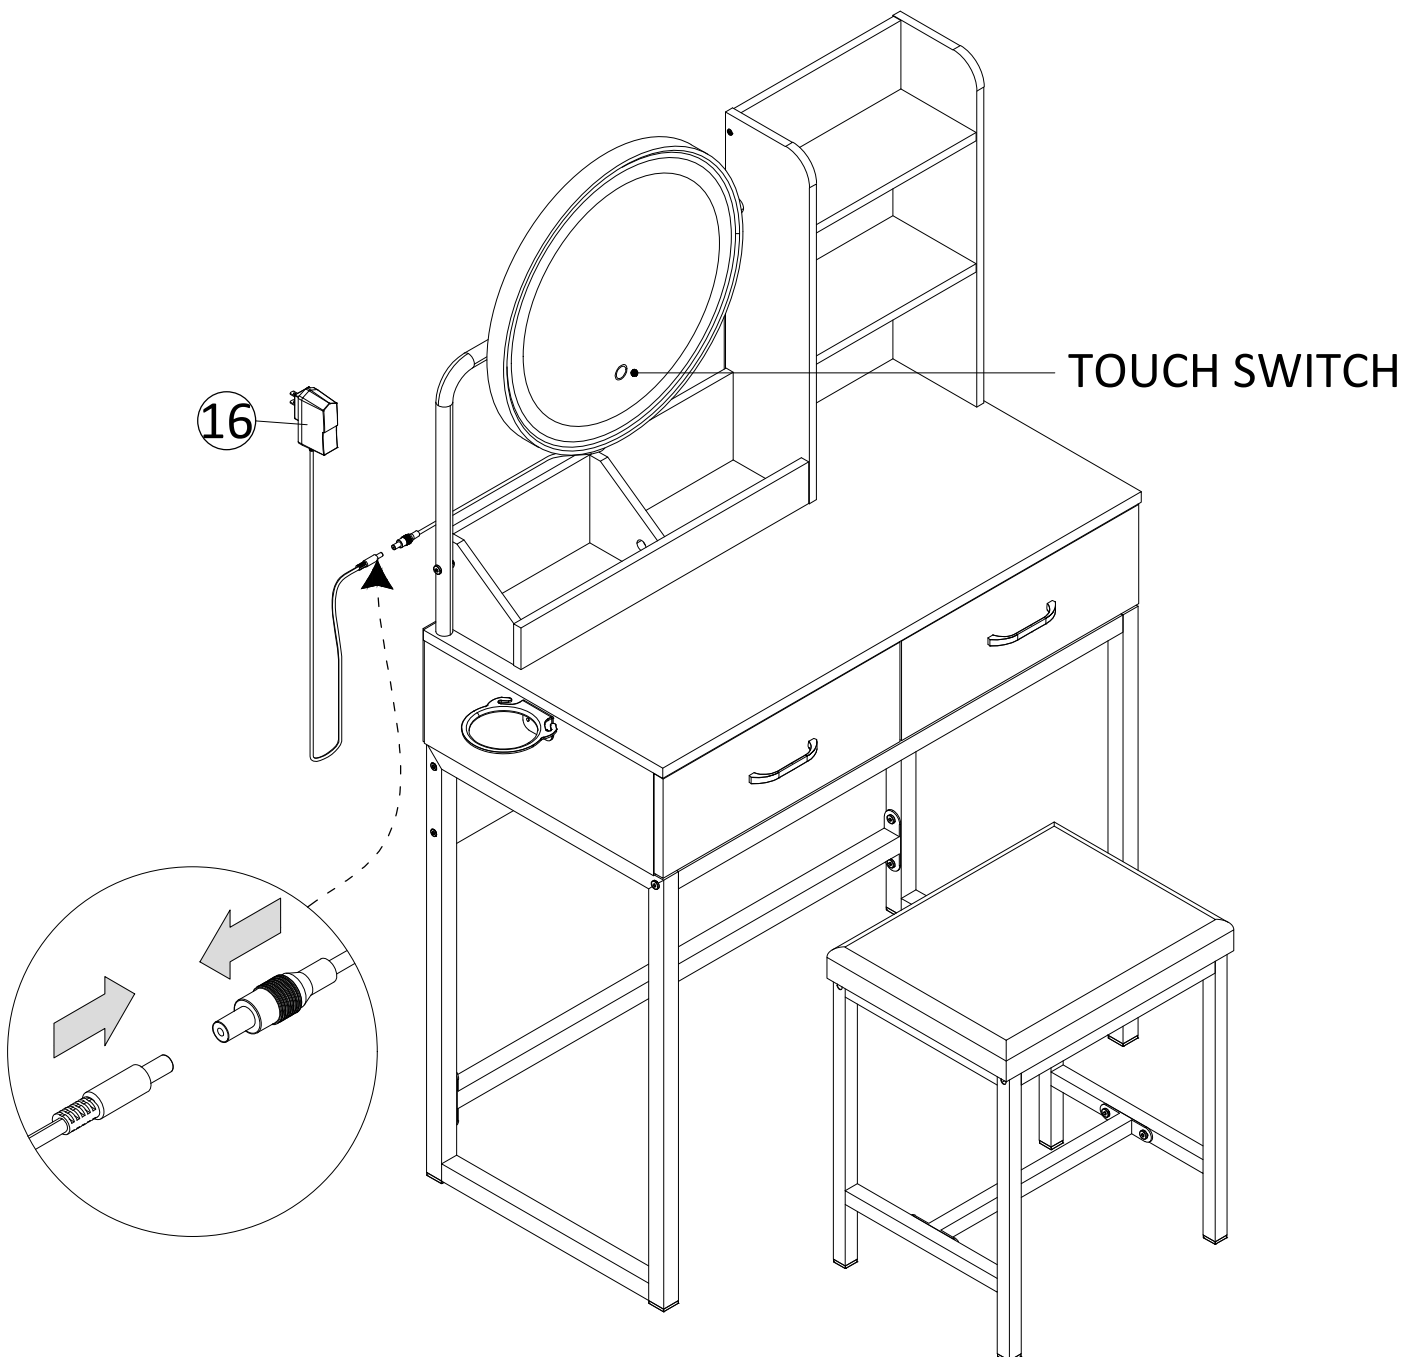

STEP25

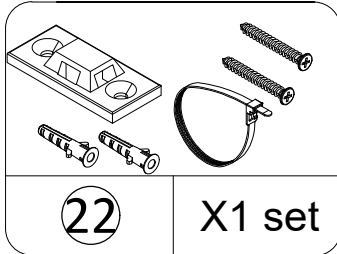


We have included a set of tipping restraint hardware for this unit. You must install this hardware to prevent accidents or injuries that can result from the unit falling. When properly installed, this restraint can provide protection against the unexpected tipping of the unit due to small tremors, bumps or climbing. We strongly recommend mounting this hardware to a wall stud and your unit.




NOTE: The tipping restraint hardware included is for wooden stud wall construction. It must be attached to a wall stud. Depending upon your wall construction different anchor hardware may be required. Please contact your local hardware store for assistance. Young children can be seriously injured by tipping furniture. You must install the tipping restraint hardware with the unit to prevent the unit from tipping, causing any accidents or damage. The tipping restraints are intended only as a deterrent and are not a substitute for proper adult supervision. The tipping restraints are not earthquake restraints. If you wish to add the extra security of earthquake restraints, they must be purchased and installed separately.




Install the tipping restraint hardware

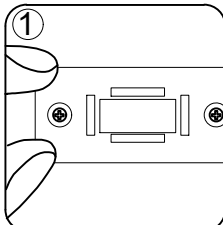


1. make mark on the wall

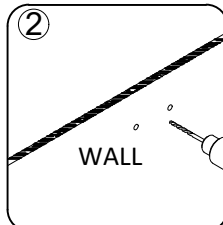


2. drill two Ø6 holes on the wall

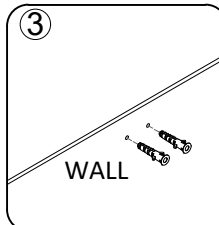

3. put two anchors in the holes

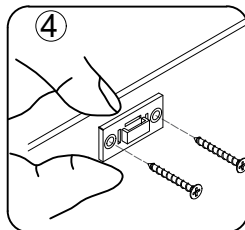

4. fix the device on the wall by the long screws

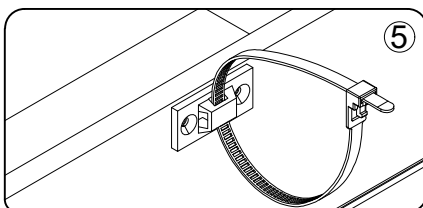

5. Push the cabinet close to the wall so that the two bases are close to each other, and then put on nylon tie to tighten it.

