

# BLINDIFY DIFFERENT KINDS OF LIGHT BLOCKERS


Blindify U Channel Aluminium Alloy Light Blockers

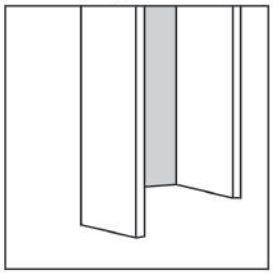


Blindify Light Blockers White with BLack Lining

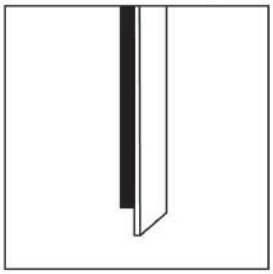


Blindify Light Blockers Whole Black

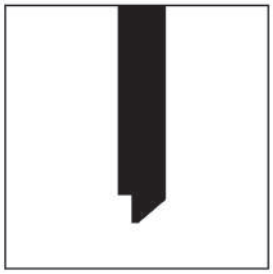

Blindify Light Blockers Whole White

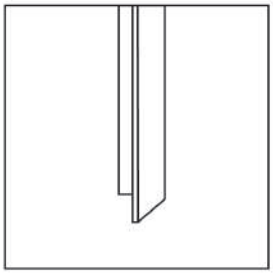


## THREE INSTALLATION METHODS

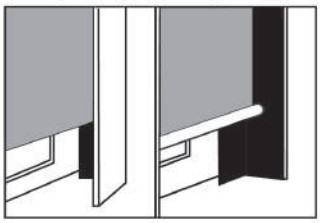


## HOW TO INSTALL BLINDIFY LIGHT BLOCKERS

1

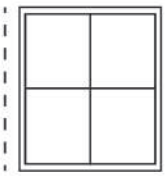


Measure the height of window

2

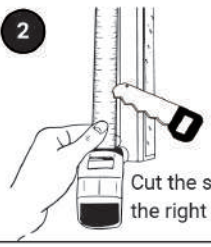

Cut the strips to the right size

3

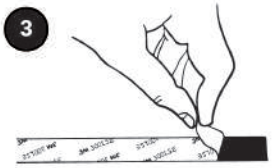

Peel of the 3M tape film

4



Install the strips as close to the blinds as possible

5

Press hard (screws can be used to keep it tight for fear of loosening)

