


ASSEMBLY INSTRUCTIONS

2630K1





Weight Capacity Max to 700LBS





Mattress Size :

80\"L x 76\"W x (6\"-10\")H

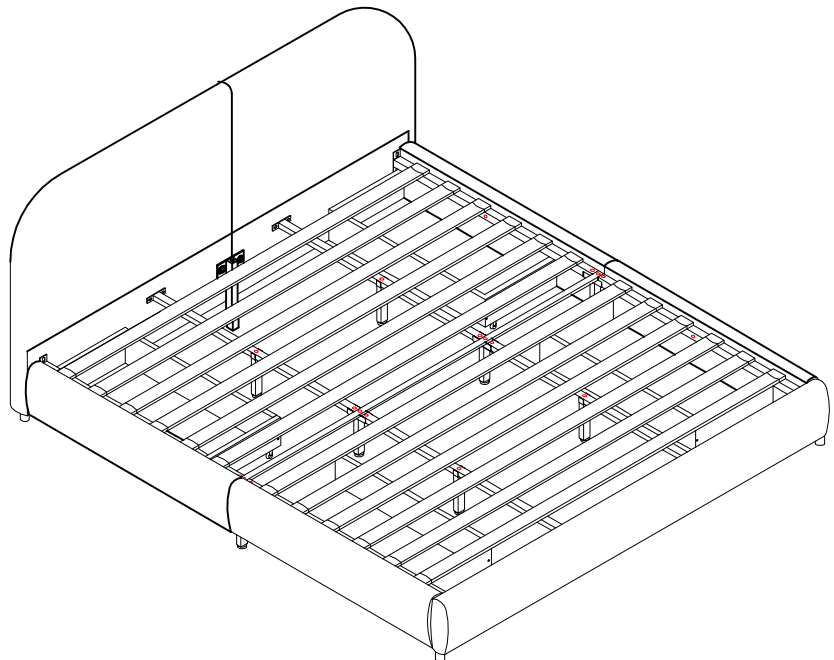
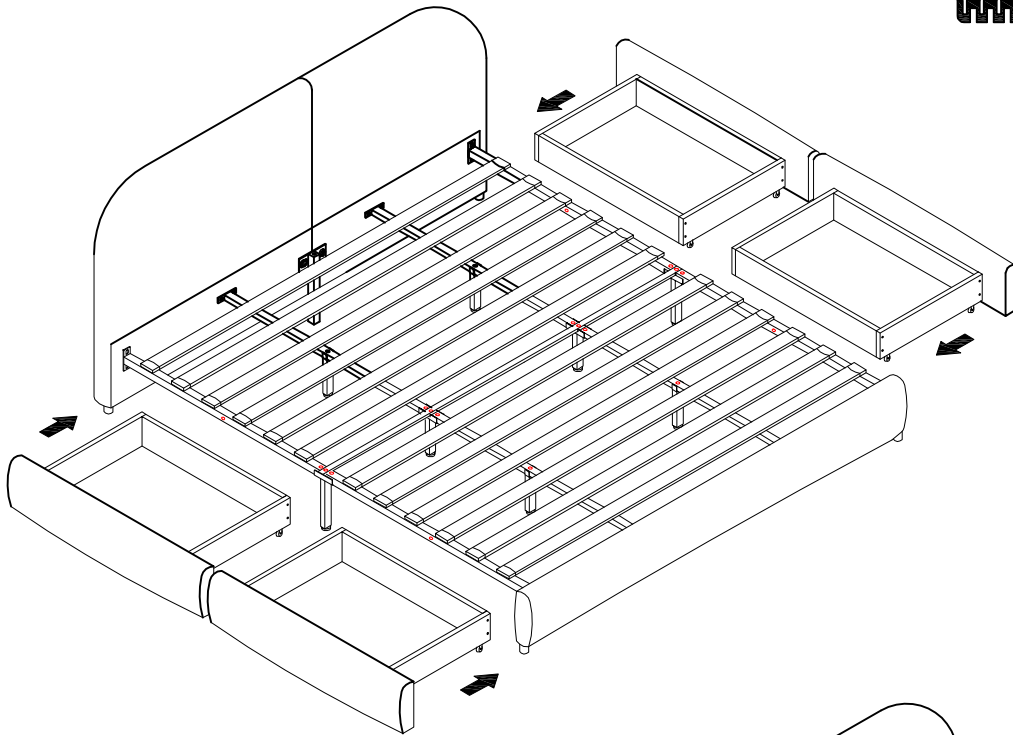





Install all screws according to the instructions, and then tighten them completely.

PACKING DETAILS:TOTAL 2 BOXES


2630K1-A	
	1-(1pc)
	2-(1pc)
	6-(2pcs)
	7-(2pcs)
	8-(4pcs)
	9-(4pcs)
	10-(24pcs)
	12-(16pcs)

2630K1-A	
(Hardware Packet)	
	M8 x 30mm A-(18pcs +1)
	M8 x 45mm B-(19pcs +1)
	M6 x 30mm C-(20pcs +1)
	M8 D-(37pcs +2)
	M8 x19mm E-(37pcs +2)
	M8 F-(1pc)
	M6 x 40mm G-(80pcs +2)
	M8 x15mm H-(64pcs +2)
	I-(1pc)
	M6 x 14mm J-(16pcs +1)
	M6 K-(1pc)

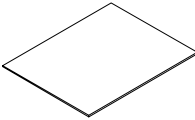
2630K1-A	
	14-(8pcs)
	15-(4pcs)
	16-(8pcs)
	17-(4pcs)
	18-(4pcs)
	19-(4pcs)
	21-(1pc)

2630K1-B	
	3-(4pcs)
	4-(4pcs)
	5-(1pc)
	11-(12pcs)
	13-(4pcs)
	20-(1pc)


STEP 1

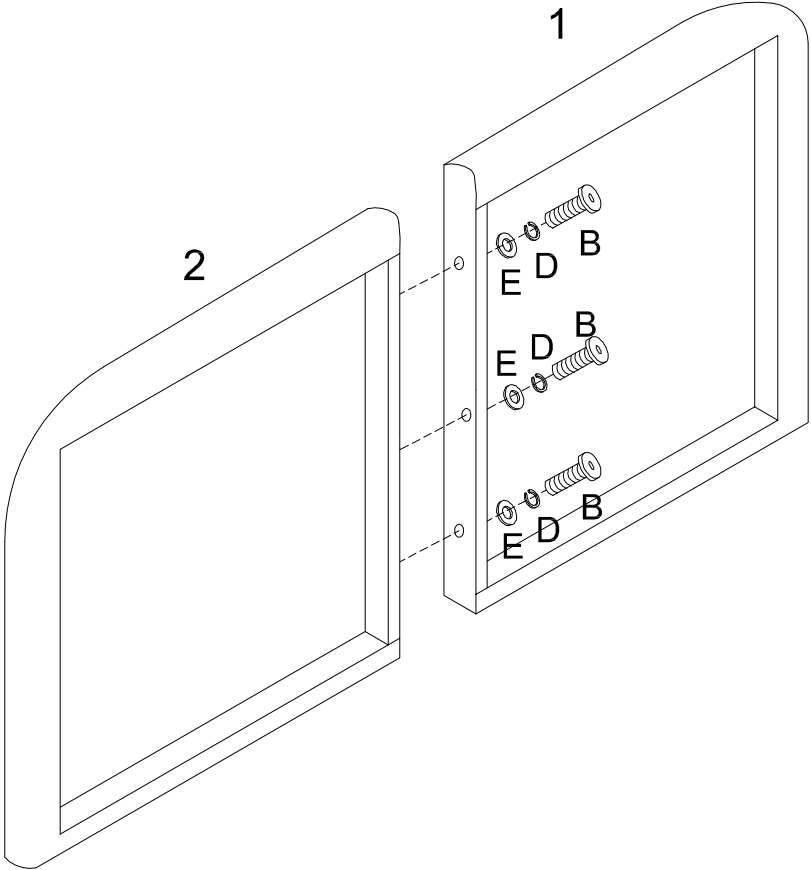


STEP 2

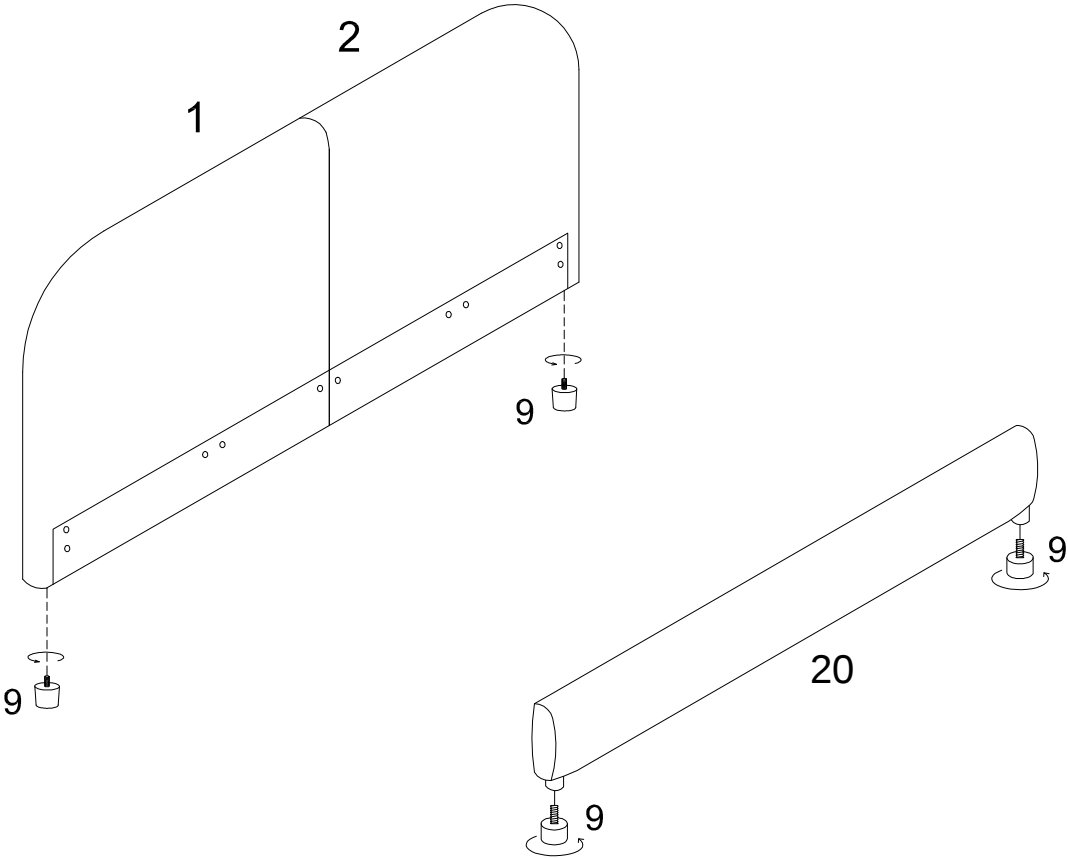


STEP 3

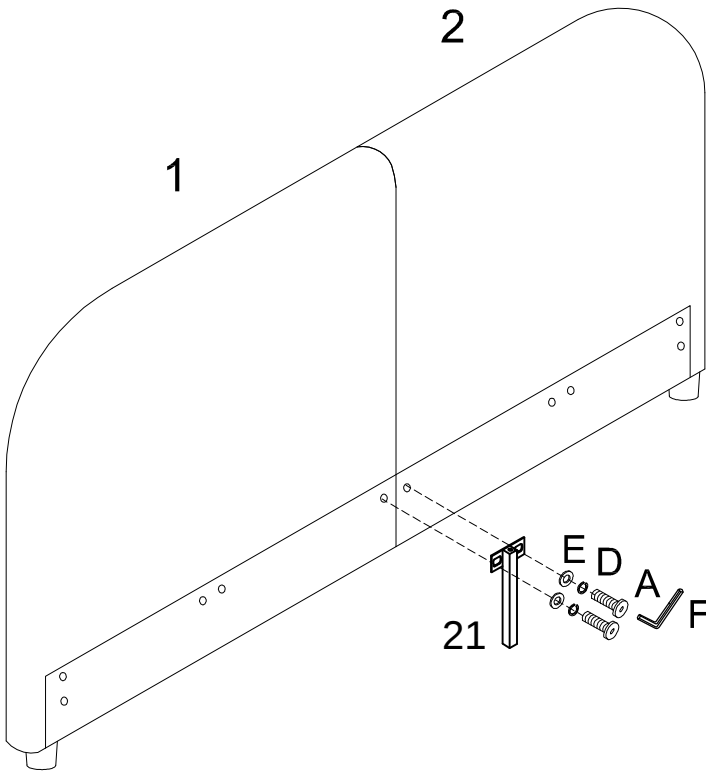


STEP 4

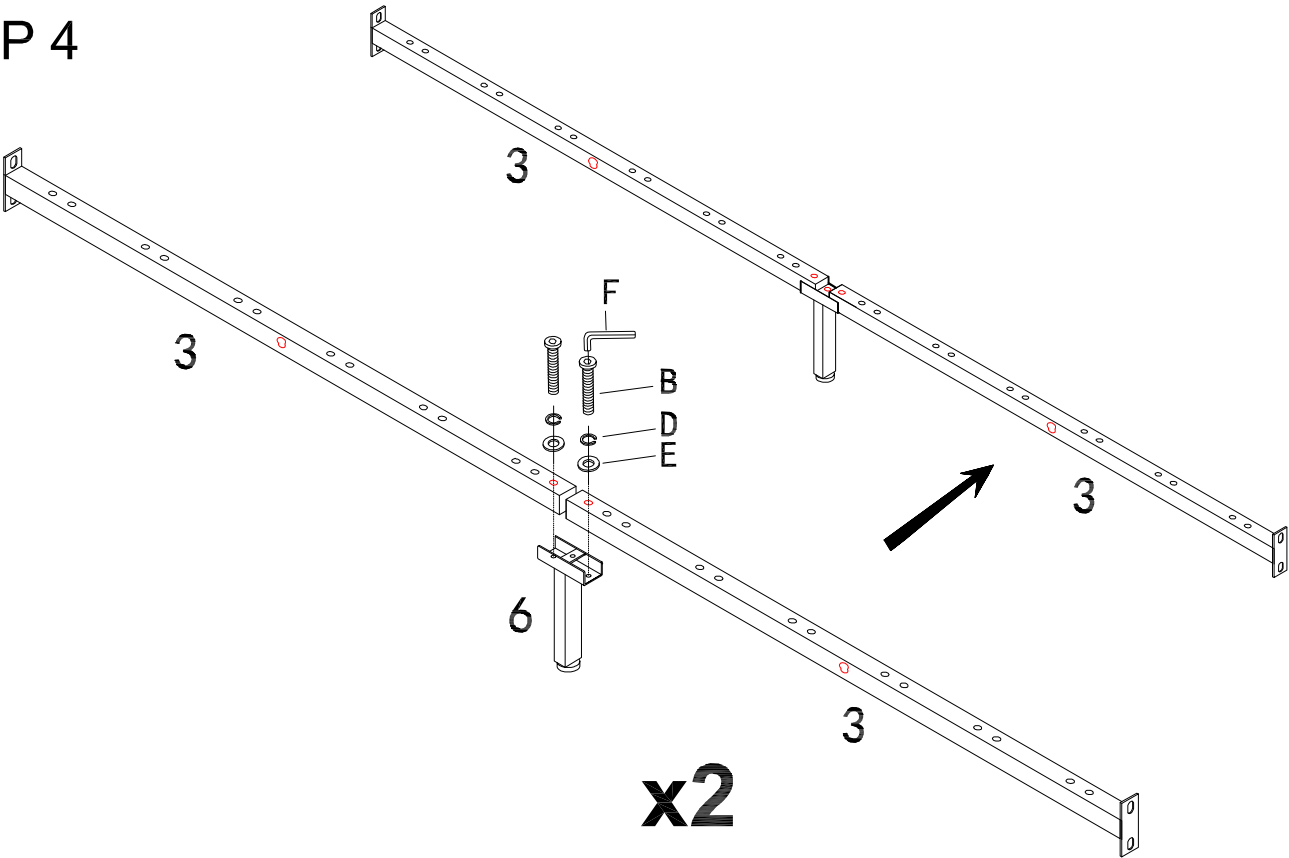


STEP 5

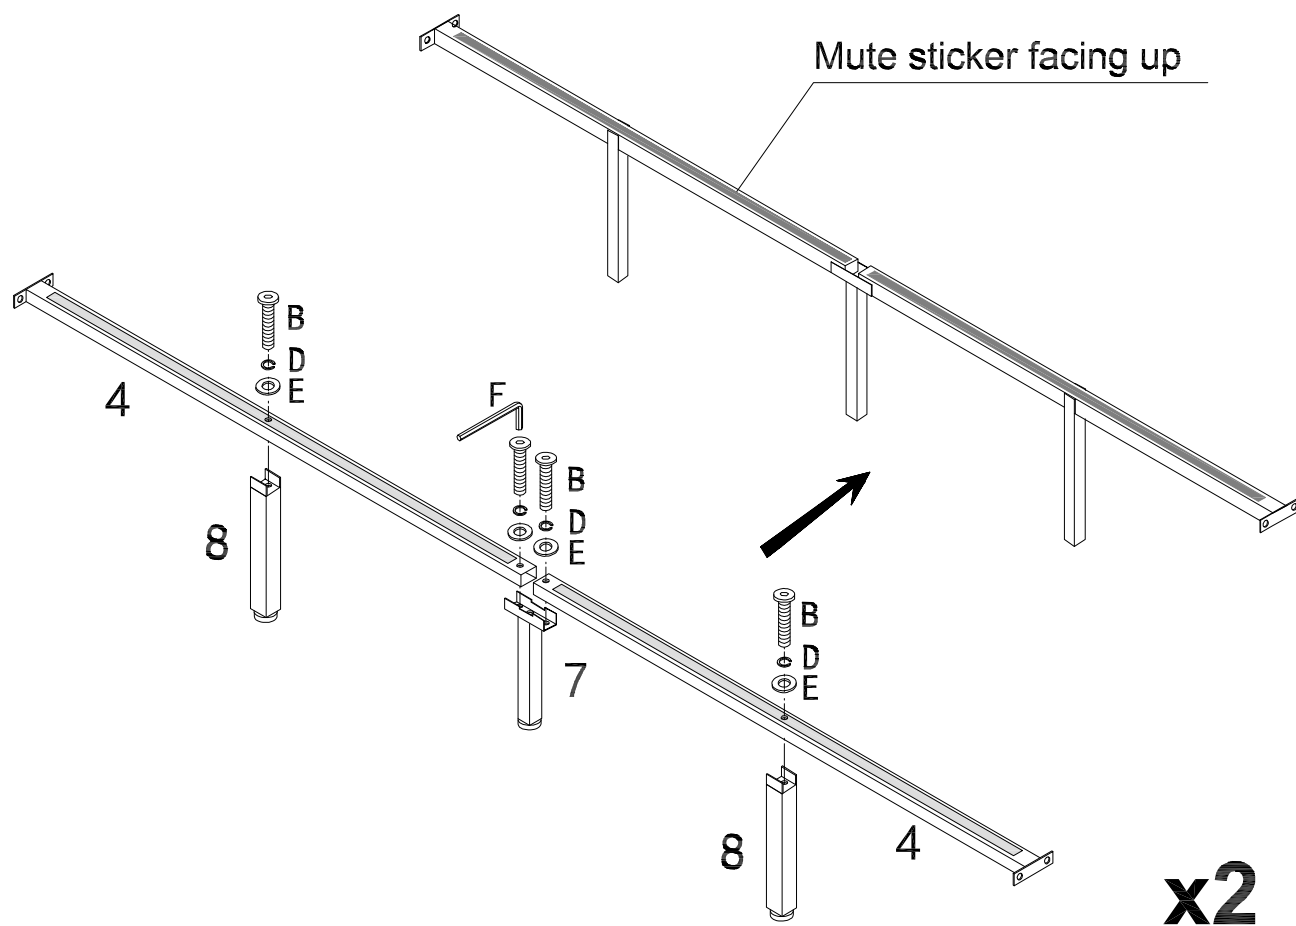


STEP 6

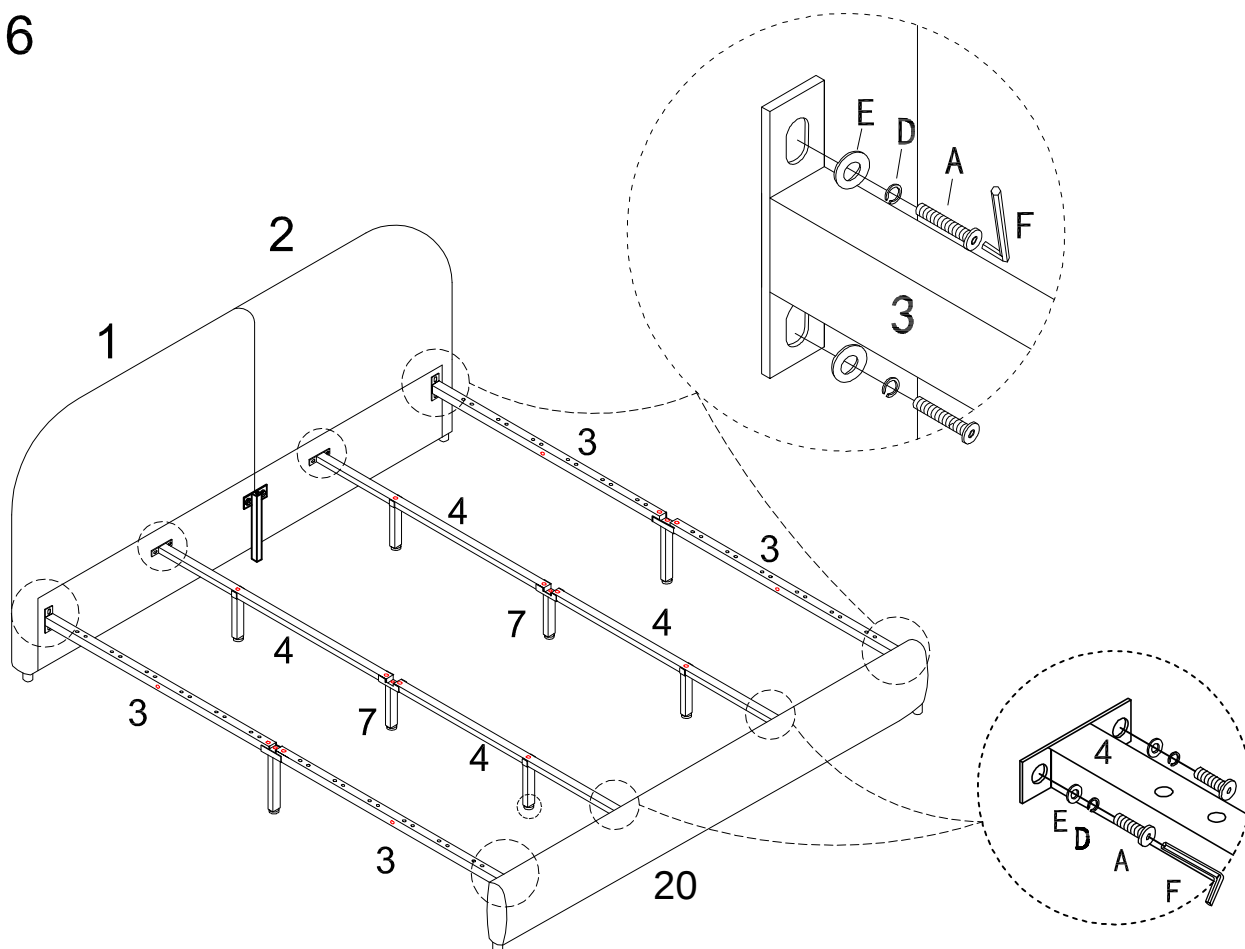


STEP 7

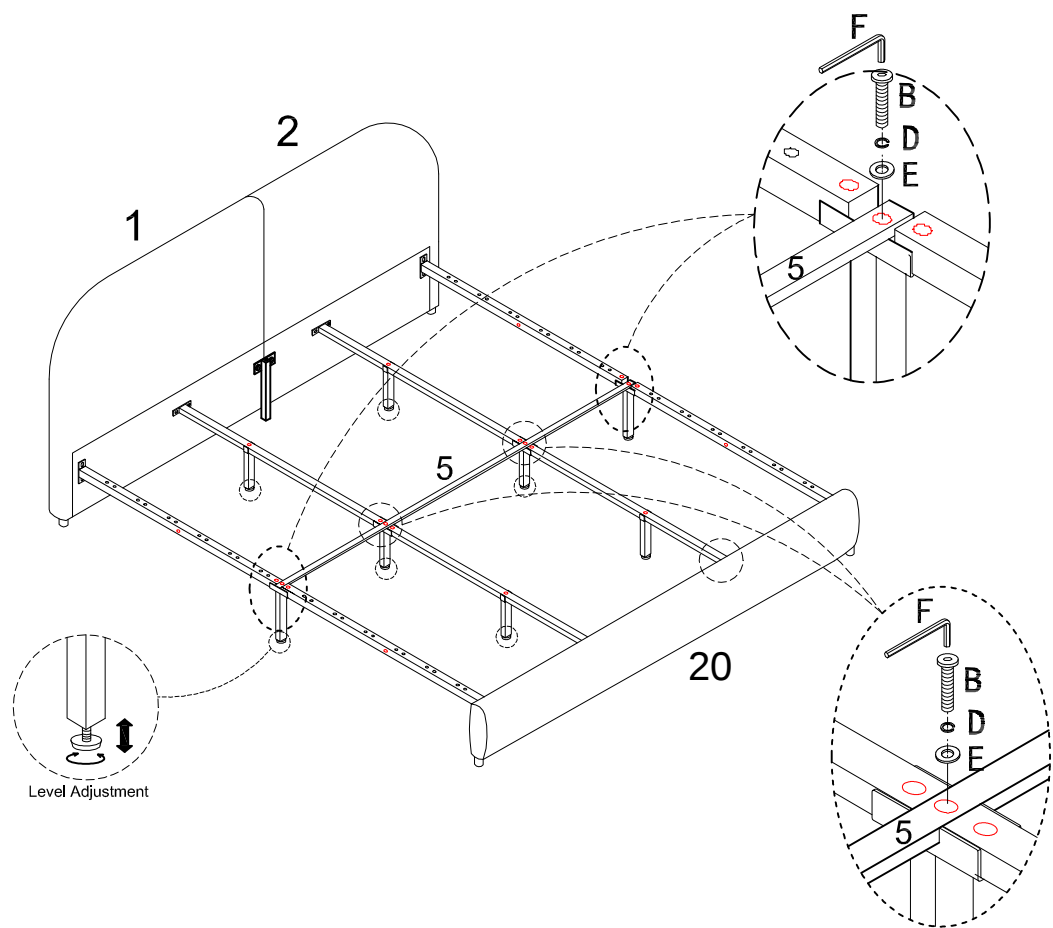


STEP 8

11 Slat  12PCS	10 Single Sided Plastic cap  24PCS
--	--

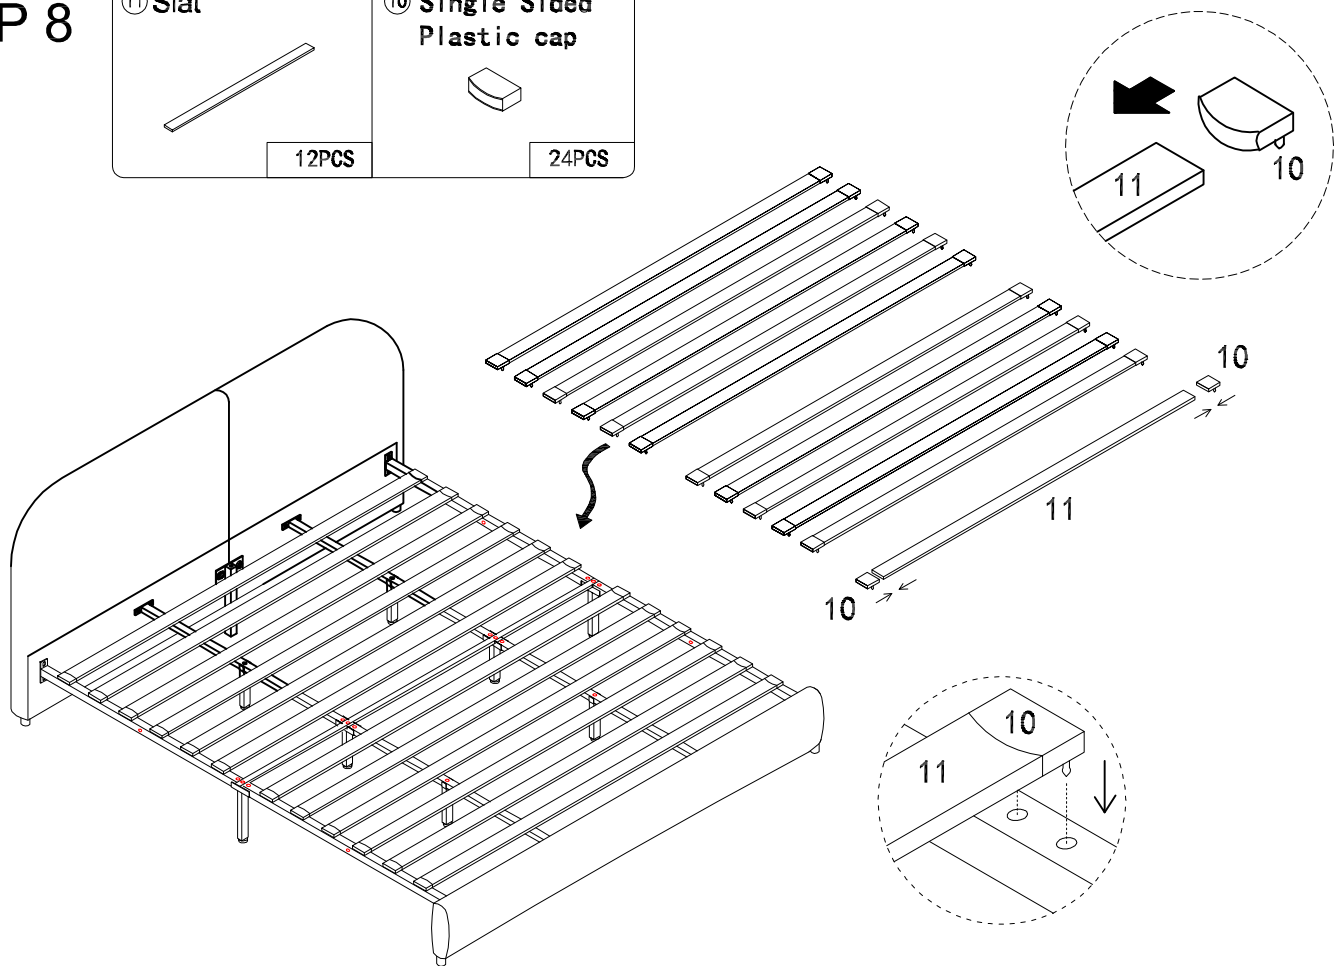


STEP 9

ASSEMBLE DRAWER

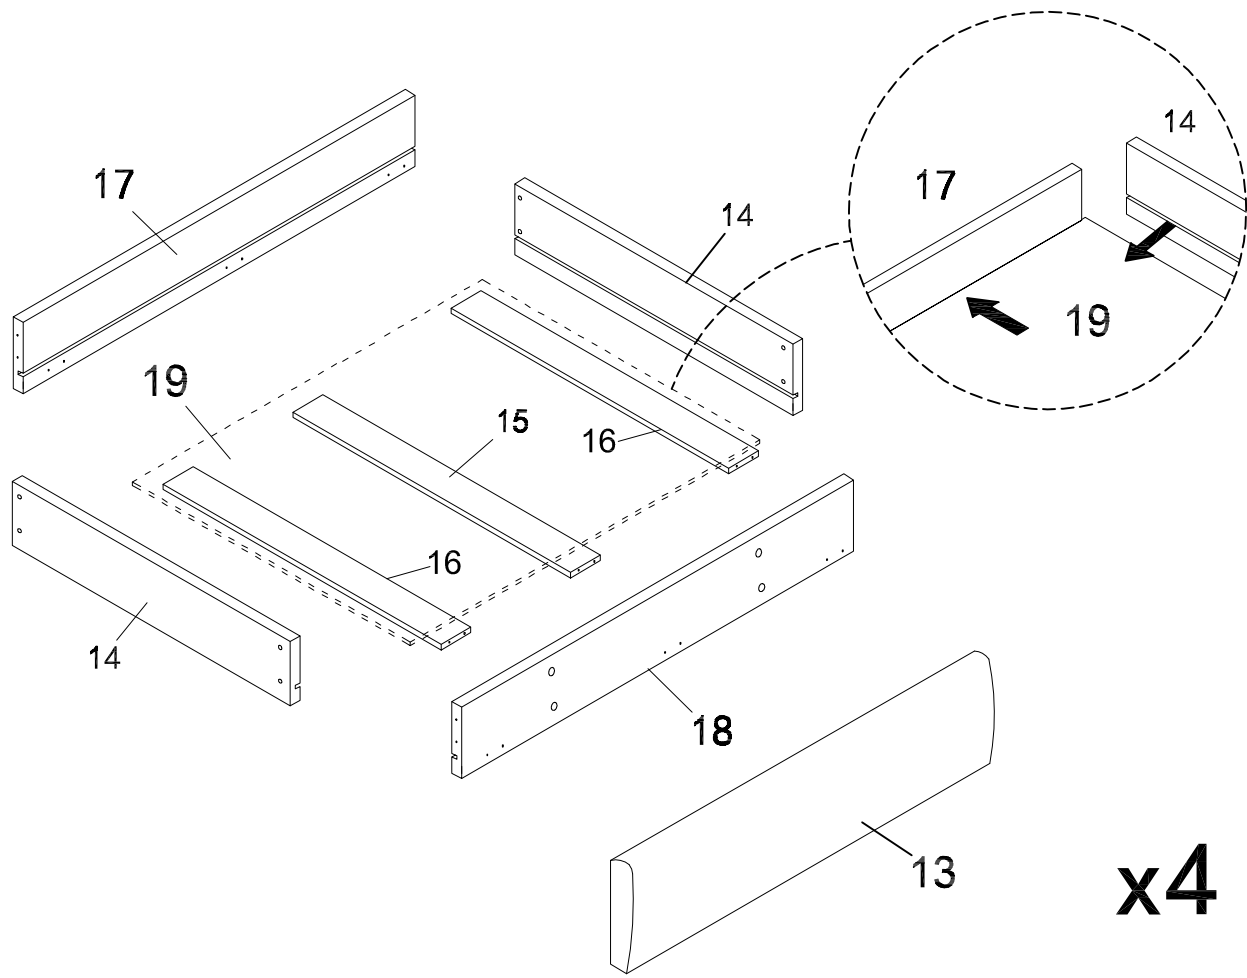


x4

STEP 10

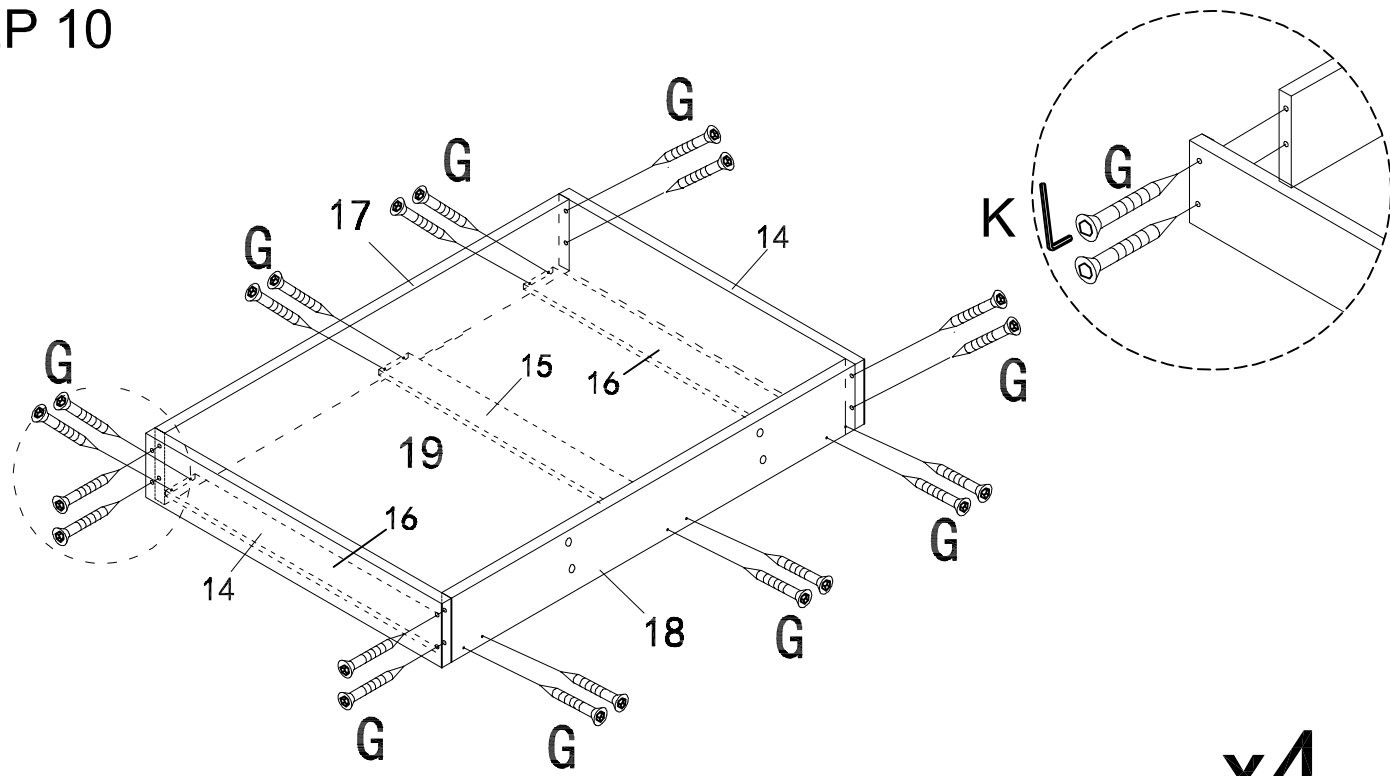


x4

STEP 11

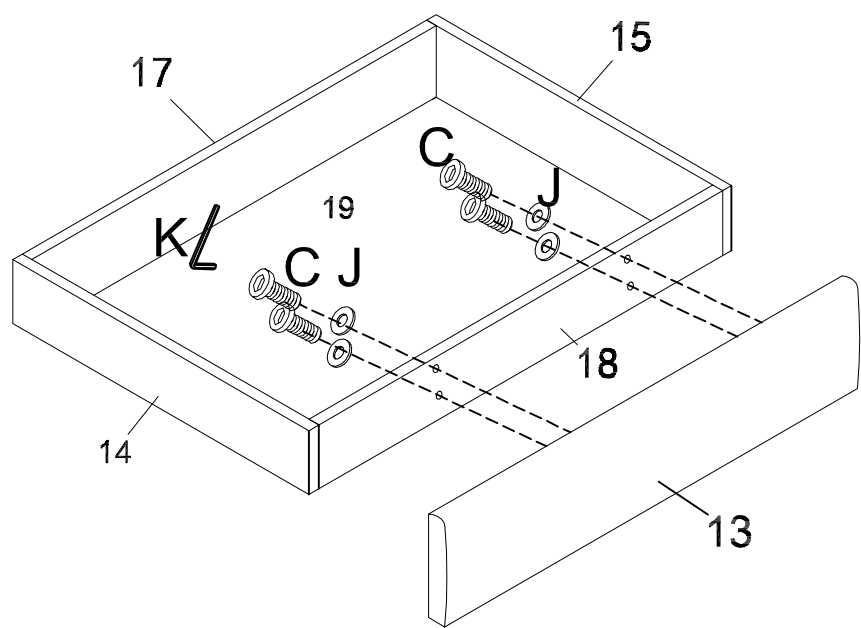


x4

STEP 12

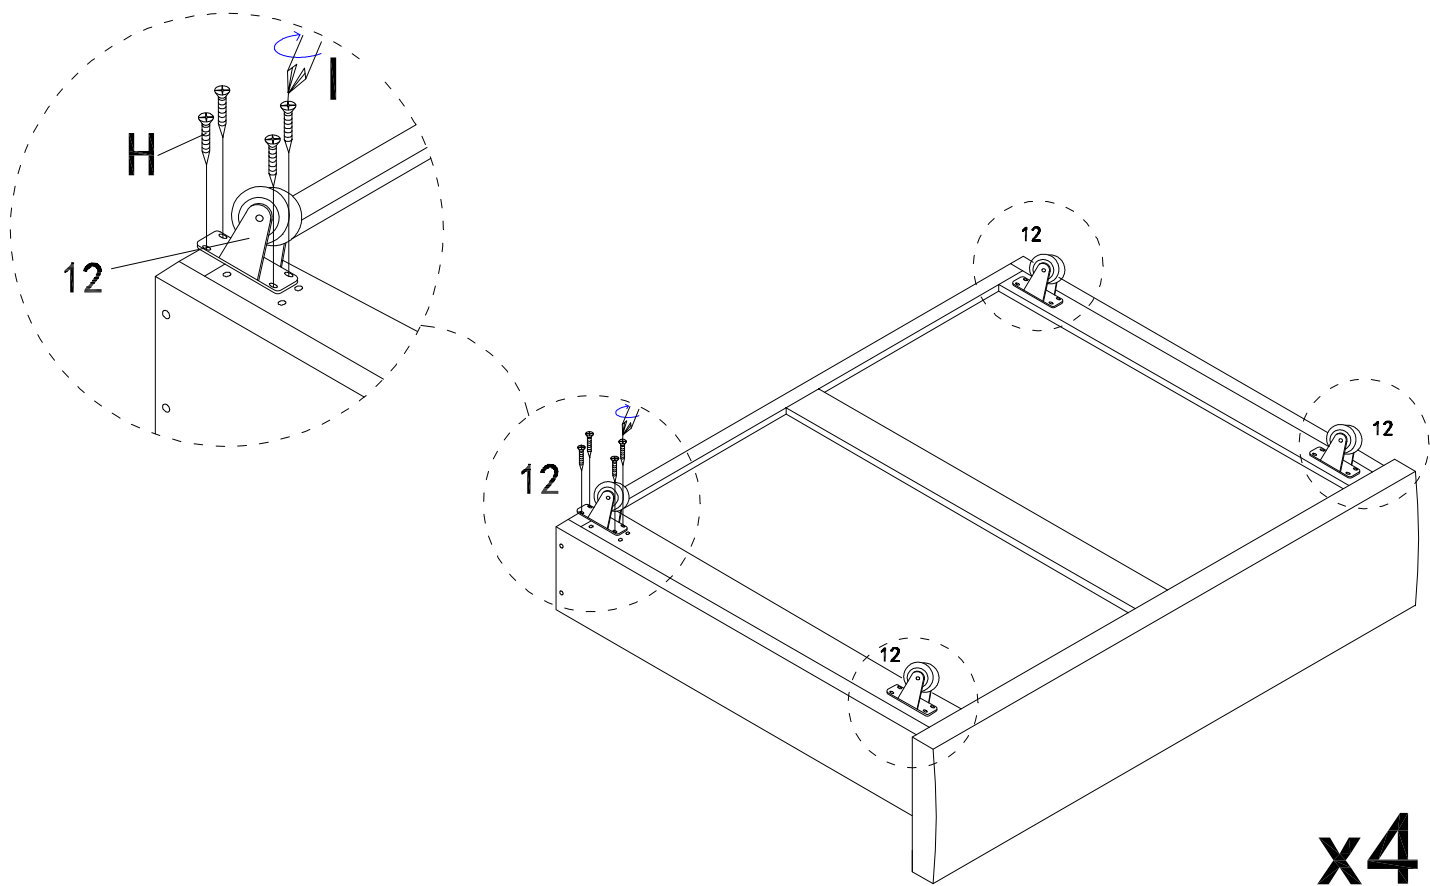

x4


STEP 13

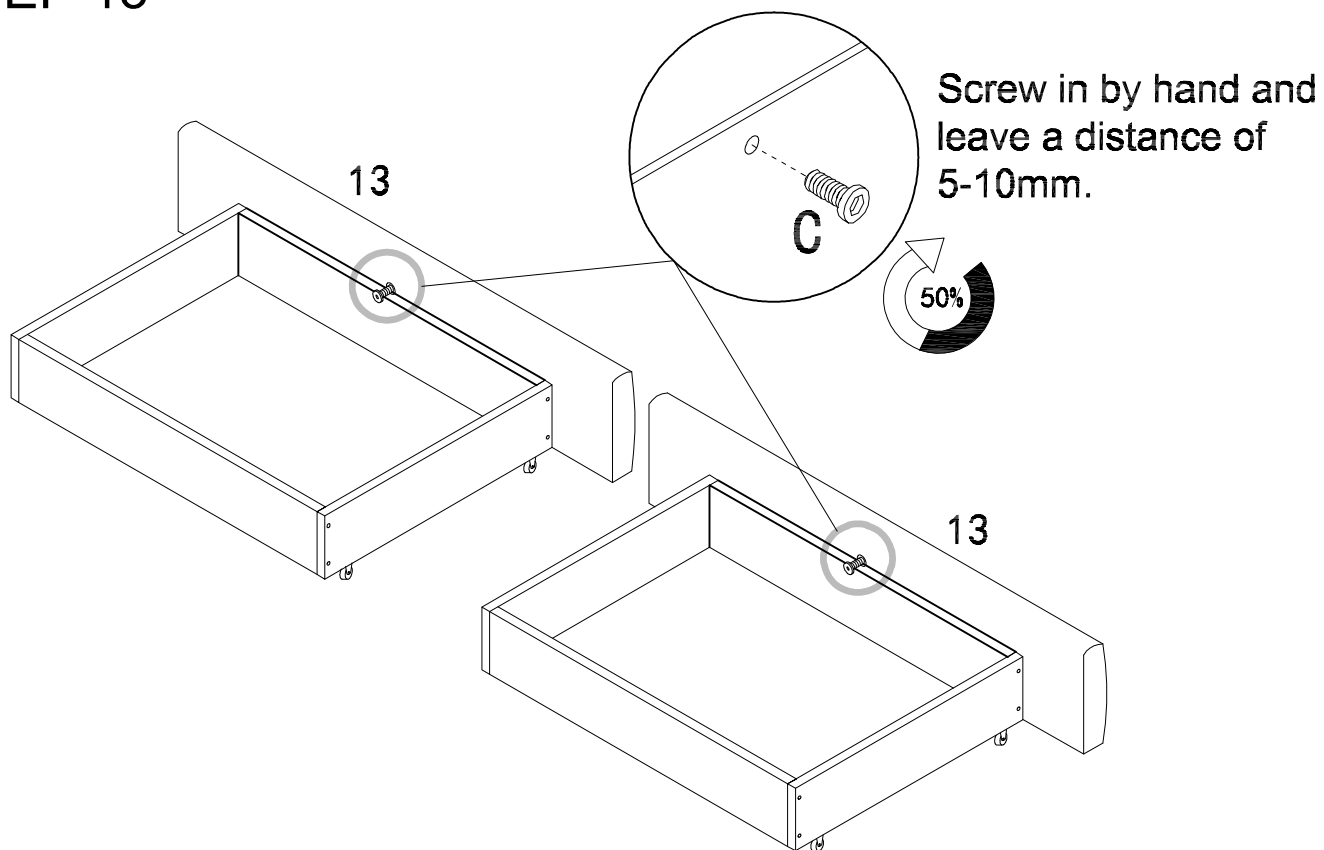

x2

STEP 14


DRAWER ASSEMBLE COMPLETE

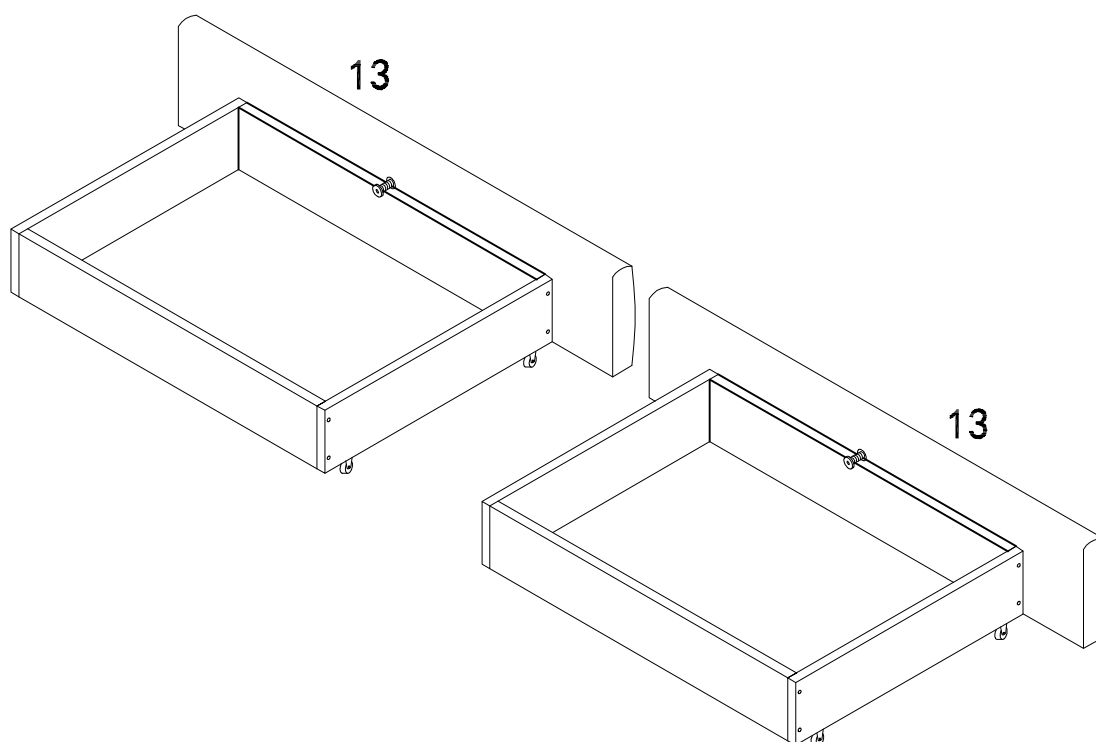

x2

STEP 15

Drawer panel screw hang into side cross beam hole.

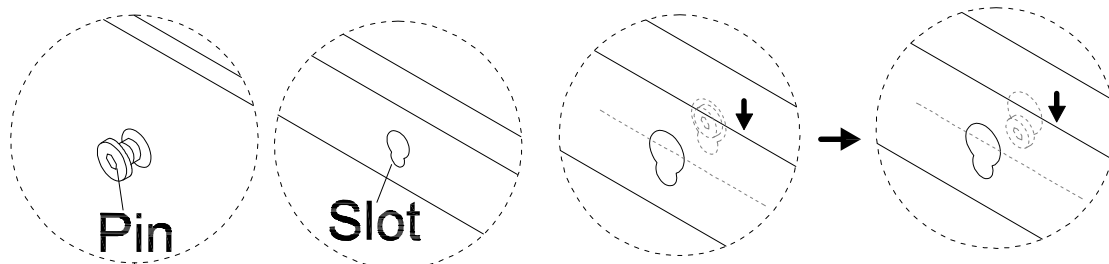

There is a screw head on the drawer board. Hang them in the hole as shown in the figure.

