

JY9862

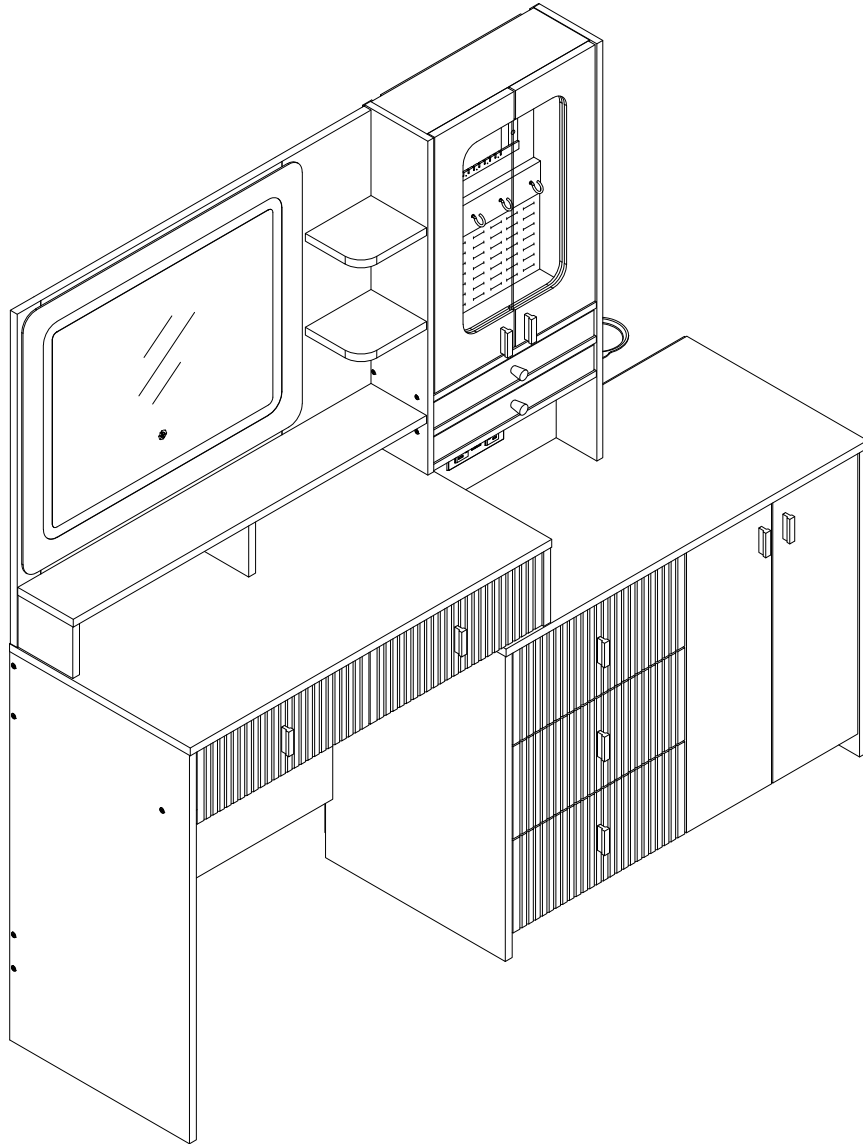


As this item contains many parts, please read the installation instruction carefully before installation . Please use tools properly and carefully. If you have any questions about the product and installation, please contact us.

hosoteservice@gmail.com

Our professional after-sales team will serve you online all day.

Before You Start


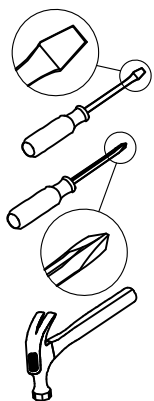


- ✓ Read through each step carefully and follow the proper order
- ✓ Separate and count all your parts and hardware
- ✓ Give yourself enough room for the assembly process
- ✓ Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer
- ✓ Caution: If using a power drill or power screwdriver for screwing, please be aware of to slow down and stop when screw is tight. Failure to do so may result in stripping the screw. (Assembly speed can be increased by using electric screwdriver)

Helpful Hints


PEOPLE NEEDED FOR ASSEMBLY: 1-2

- Open your item in the area you plan to keep it to avoid excessive heavy lifting.
- Identify, sort and count the parts before attempting assembly.
- Compression dowels are lightly tapped in with a hammer.
- Slides are labeled with an **R** (right) and **L** (left) for proper placement.
- Make sure to always face the point on the top of the Cam Lock towards the outer edge.
- If there is a back panel in the package, please install it to make sure your unit is complete and sturdy.
- Please fix all the screws provided for the back panel which can enhance product stability. If it is difficult to fix it when tightening, it can be fixed with the help of a hammer and then tightened.
- Do NOT use harsh chemicals or abrasive cleaners on this item.
- Never push, pull, or drag your furniture.

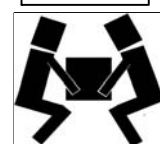


Board Identification


Not actual size

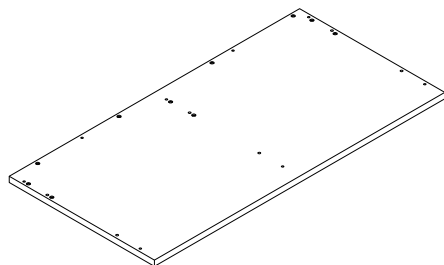


(A)
DESK TOP
Qty:1

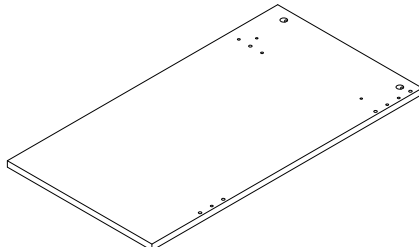


(B)
DESK LEFT SIDE PANEL
Qty:1

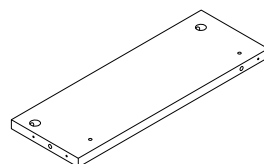


(C)
PARTITION
Qty:1

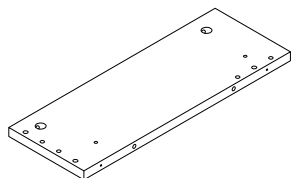


(D)
RIGHT SIDE PANEL
Qty:1

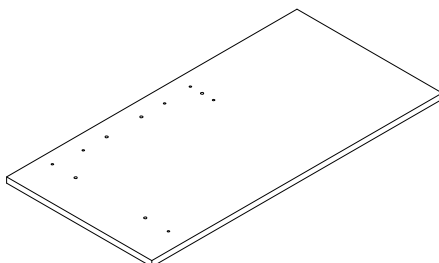


(E)
CABINET TOP
Qty:1

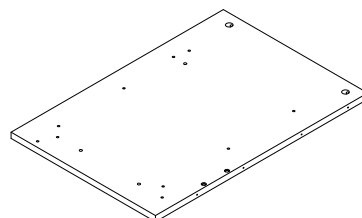


(F)
CABINET LEFT SIDE PANEL
Qty:1

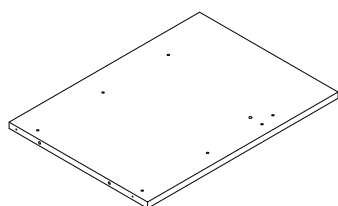


(G)
CABINET PARTITION
Qty:1

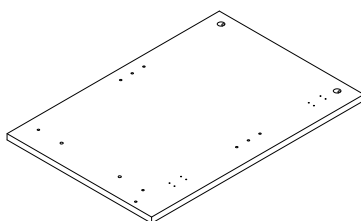


(H)
CABINET RIGHT SIDE PANEL
Qty:1

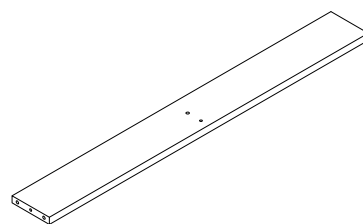


(I)
DESK FRONT SLAT
Qty:1

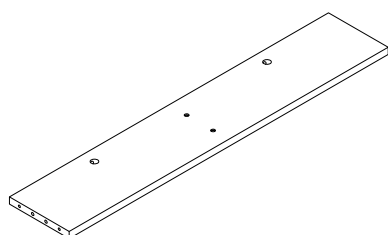

(J)
DESK REAR PANEL
Qty:1

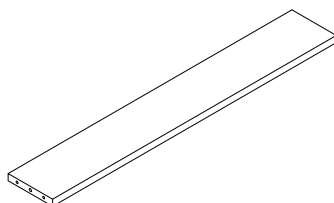


(K)
BACK SLAT
Qty:1

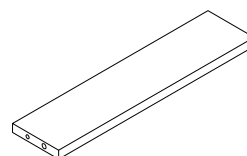

(L)
CABINET CROSS RAIL
Qty:1

Board Identification


Not actual size

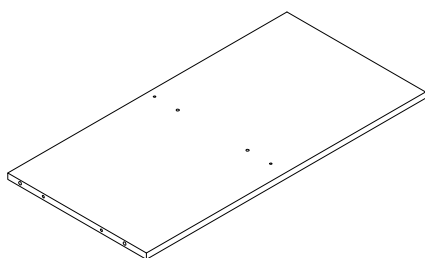

(M)

CABINET BOTTOM


Qty:1

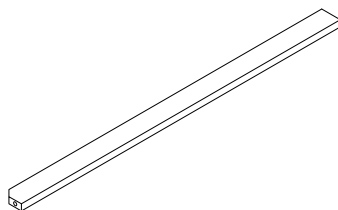

(N)

CABINET BOTTOM RAIL


Qty:1

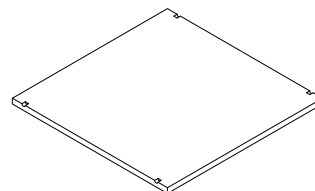

(O)

ADJUSTABLE SHELF


Qty:1

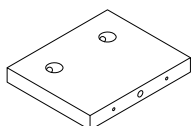

(P)

PARTITION


Qty:2

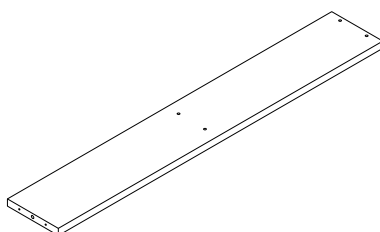

(Q)

UPPER DESK TOP


Qty:1

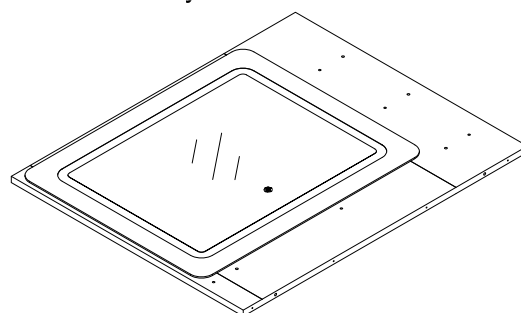

(R)

DRESSING MIRROR


Qty:1

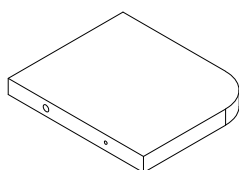

(S)

FIXED SHELF


Qty:2

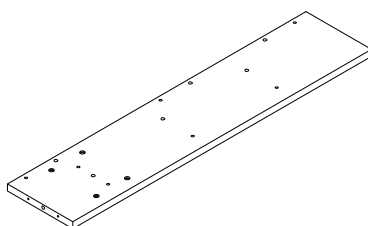

(T)

HUTCH PARTITION


Qty:1

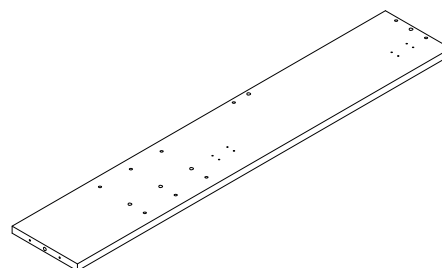

(U)

HUTCH RIGHT SIDE PANEL


Qty:1

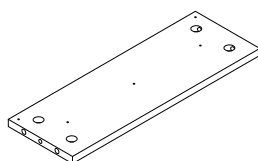

(V)

UPPER FIXED SHELF


Qty:1

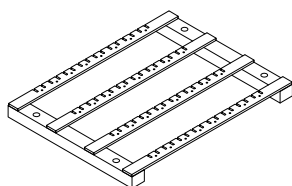

(W)

JEWELRY PENDANTS

Qty:1

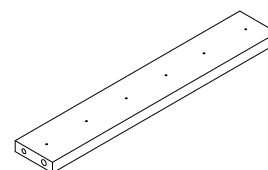


(X)

FIXED SHELF

Qty:1


Board Identification

Not actual size

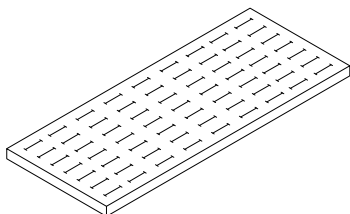


Y

RING SPONGE
Qty:1

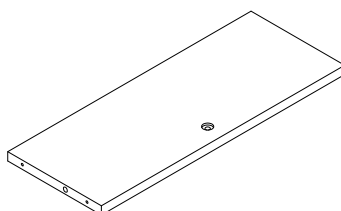


Z

FIXED SHELF
Qty:2

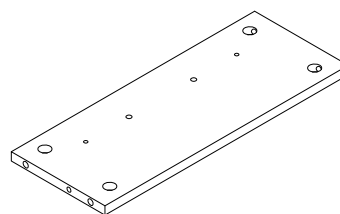


AA

LOWER FIXED SHELF
Qty:1

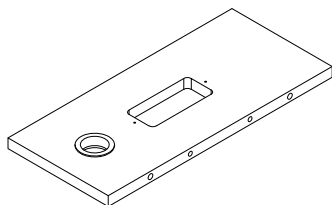


BB

SOCKET PANEL
Qty:1

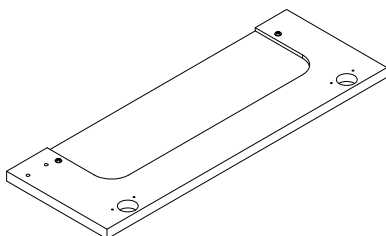


CC

LEFT UPPER DOOR
Qty:1

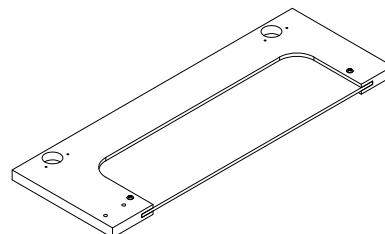


DD

RIGHT UPPER DOOR
Qty:1

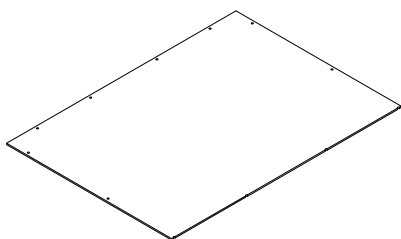


EE

LOWER BACK PANEL
Qty:2

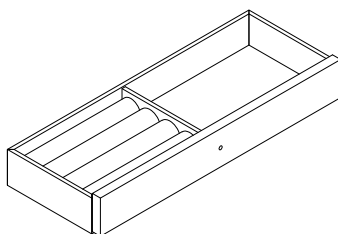


FF

FLANNELETTE DRAWER
Qty:1

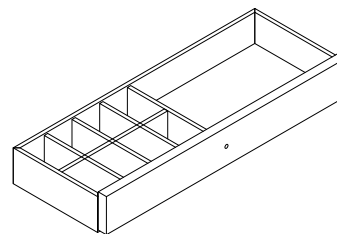


GG

FLANNELETTE DRAWER
Qty:1

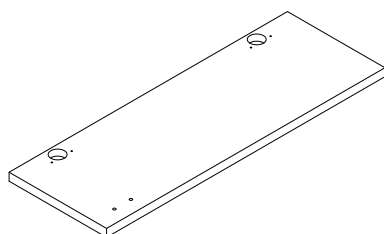


HH

LEFT LOWER DOOR
Qty:1

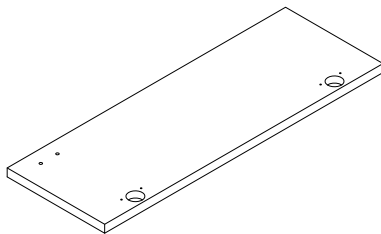

II

RIGHT LOWER DOOR
Qty:1

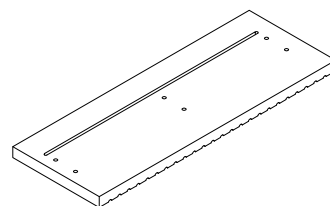


JJ

DESK LEFT DRAWER FRONT
Qty:1


Board Identification

Not actual size

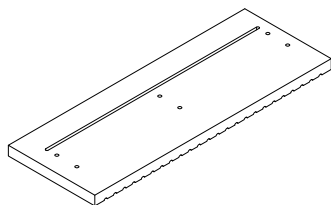


(KK)

DESK RIGHT DRAWER FRONT
Qty:1

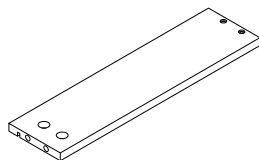


(LL)

DESK DRAWER LEFT PANEL
Qty:2

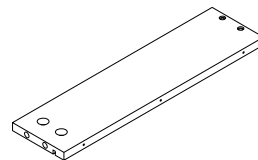


(MM)

DESK DRAWER RIGHT PANEL
Qty:2

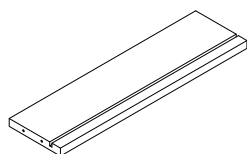


(NN)

DESK DRAWER BACK PANEL
Qty:2

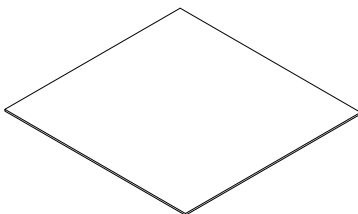


(OO)

DRAWER BOTTOM
Qty:5

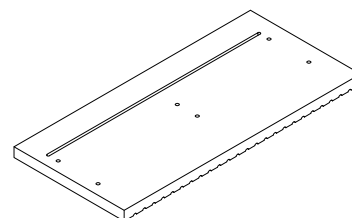


(PP)

CABINET DRAWER FRONT
Qty:3

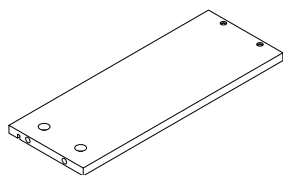


(QQ)

CABINET DRAWER LEFT PANEL
Qty:3

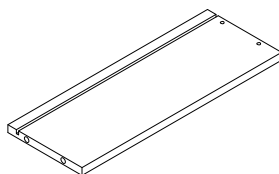


(RR)

CABINET DRAWER RIGHT PANEL
Qty:3

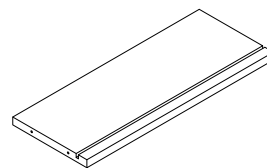

(SS)


CABINET DRAWER BACK PANEL
Qty:3

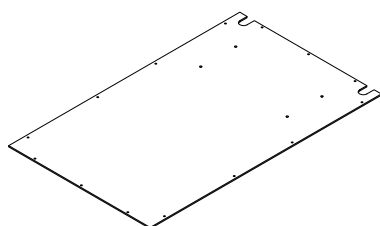


(TT)

UPPER BACK PANEL
Qty:1


Part List

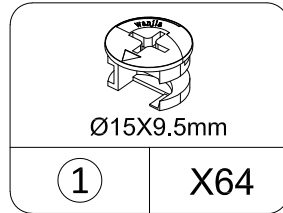


CAM LOCK
spare:3

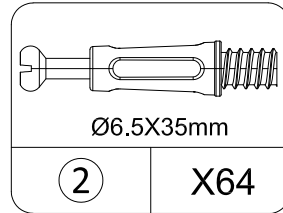


CAM BOLT
spare:3

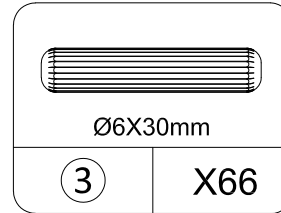


WOODEN DOWEL
spare:3

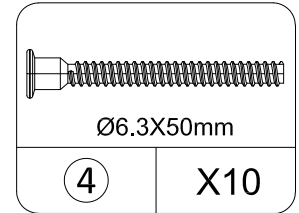


SCREW
spare:1

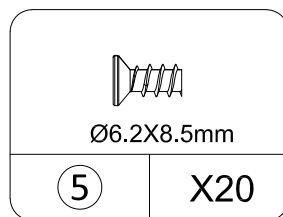


SCREW
spare:2

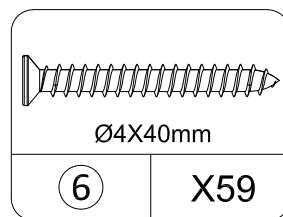


SCREW
spare:3

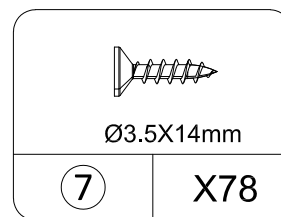


SCREW
spare:3

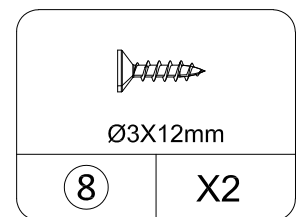


SCREW
spare:1

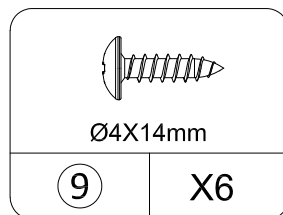


SCREW
spare:1

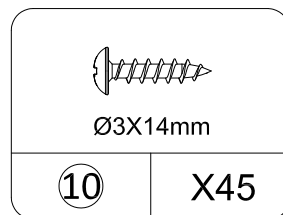


SCREW
spare:3

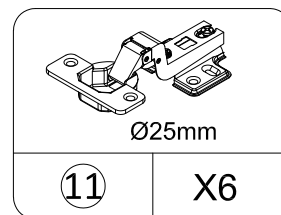


HINGE

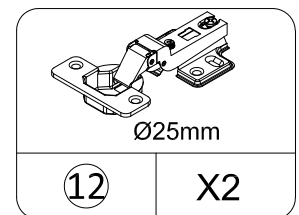


HINGE

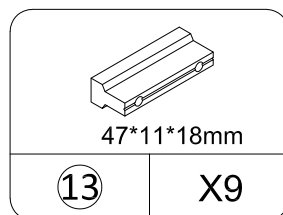


HANDLE

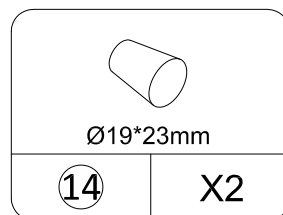


HANDLE

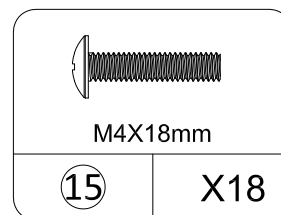


SCREW
spare:2

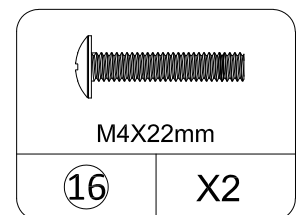


SCREW
spare:1

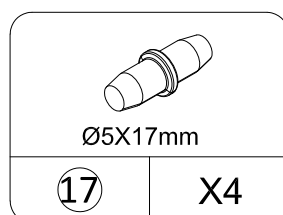


SHELF SUPPORT
spare:1

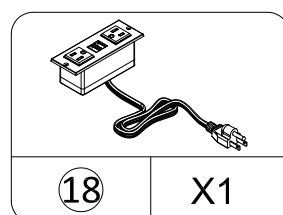

PLUG BOARD

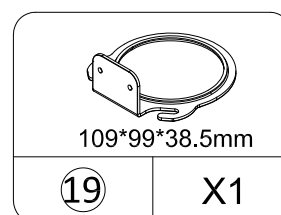


HAIR DRYER RACK

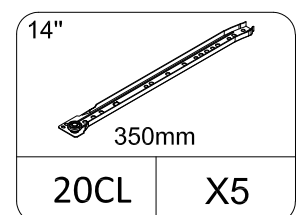


LEFT CABINET MEMBER


Part List

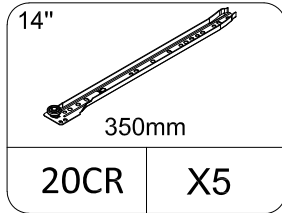


RIGHT CABINET MEMBER

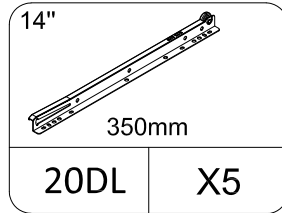


LEFT DRAWER RUNNER

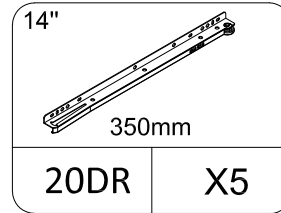


RIGHT DRAWER RUNNER

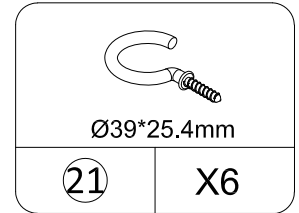


HOOK
spare:1

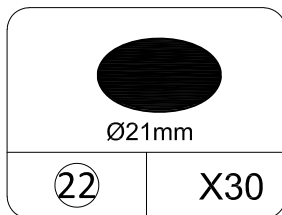


PERFECT STICKERS
spare:3

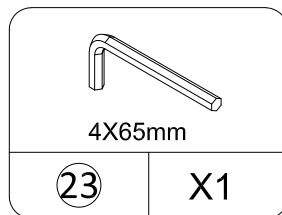


HEX KEY

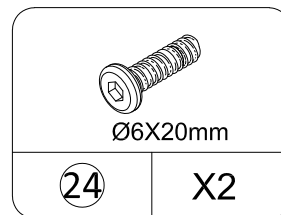


SCREW

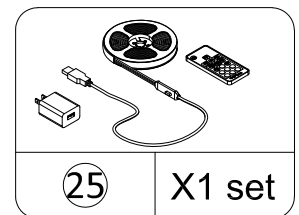


LIGHT STRIP

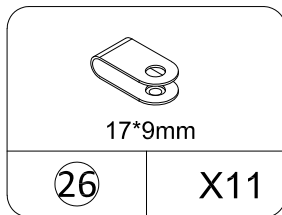


LAMP BELT BUCKLE
spare:1

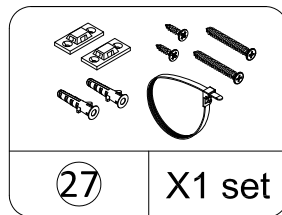


ANTI-TIPPING HARDWARE

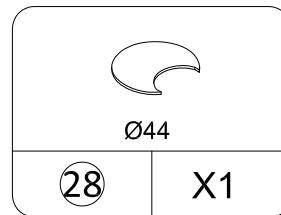

GROMMET

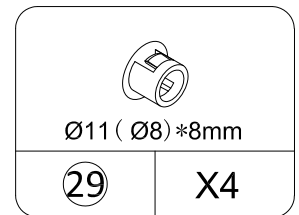

HOLE COVER

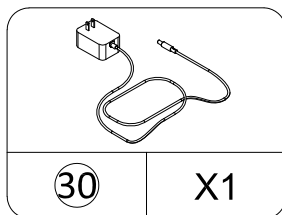


LIGHT STRIP ADAPTER

Part List


Cam Lock Fastening System

Insert the cam bolt into the hole first, then insert the cam lock and lock it.



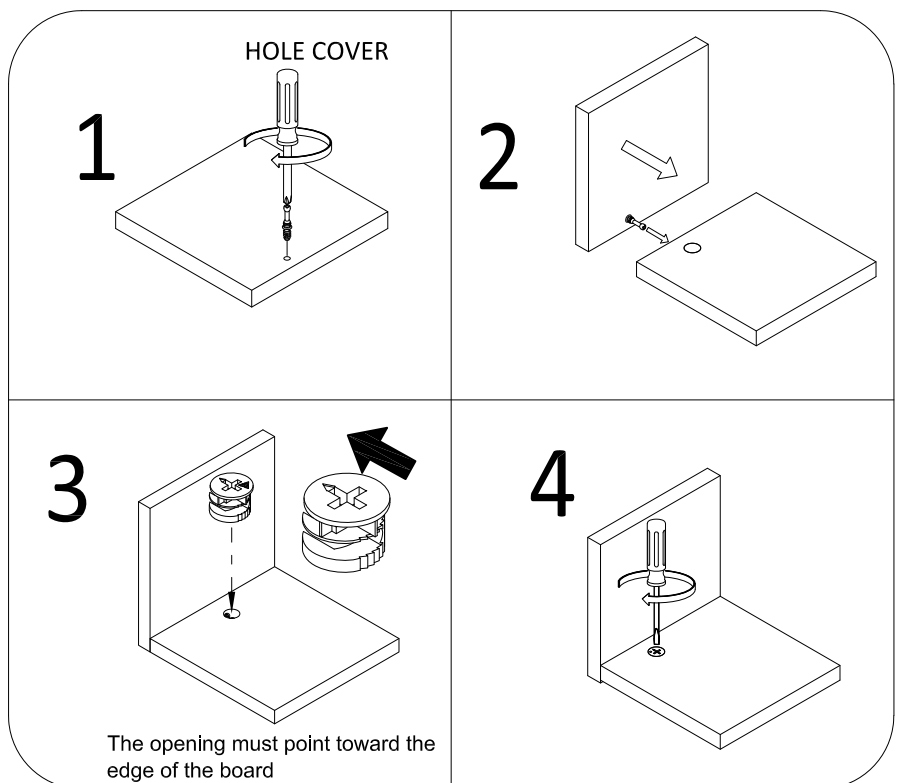


Board Identification

Not actual size



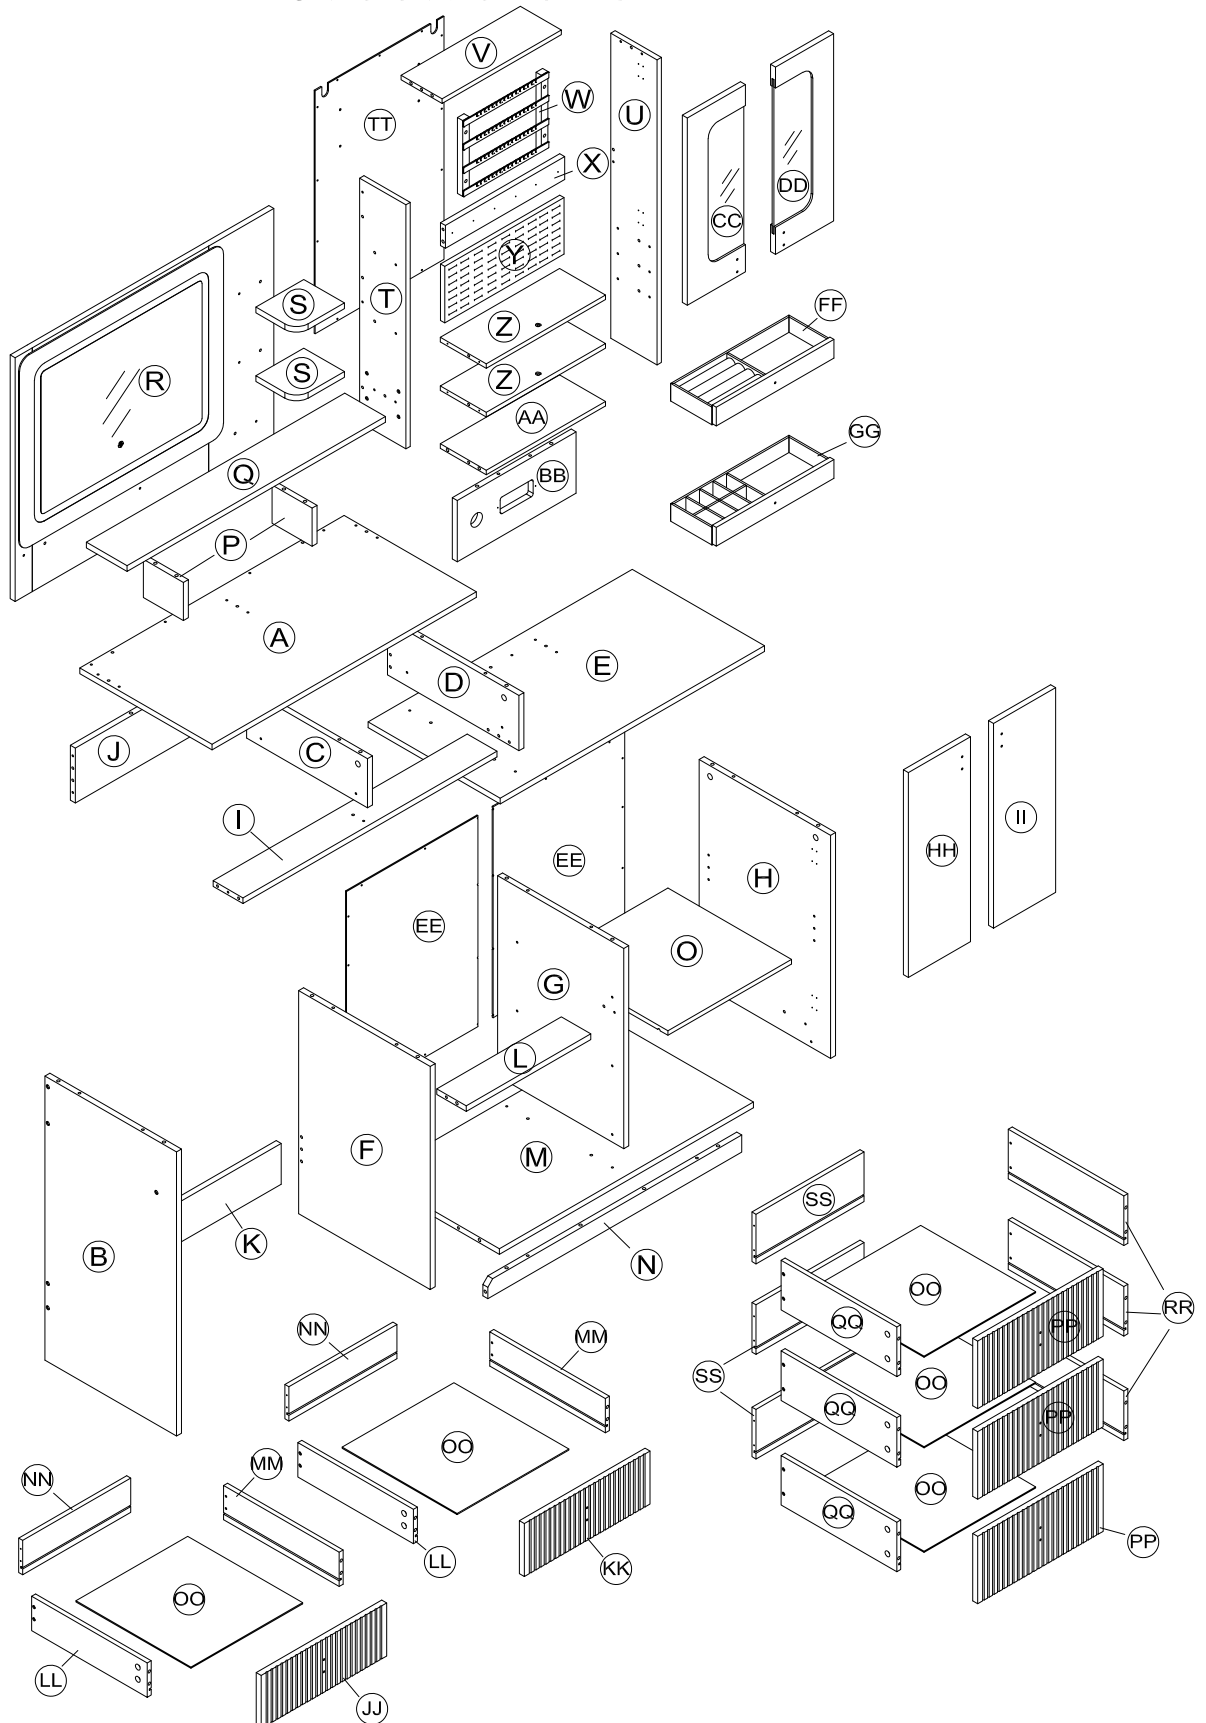


STEP1

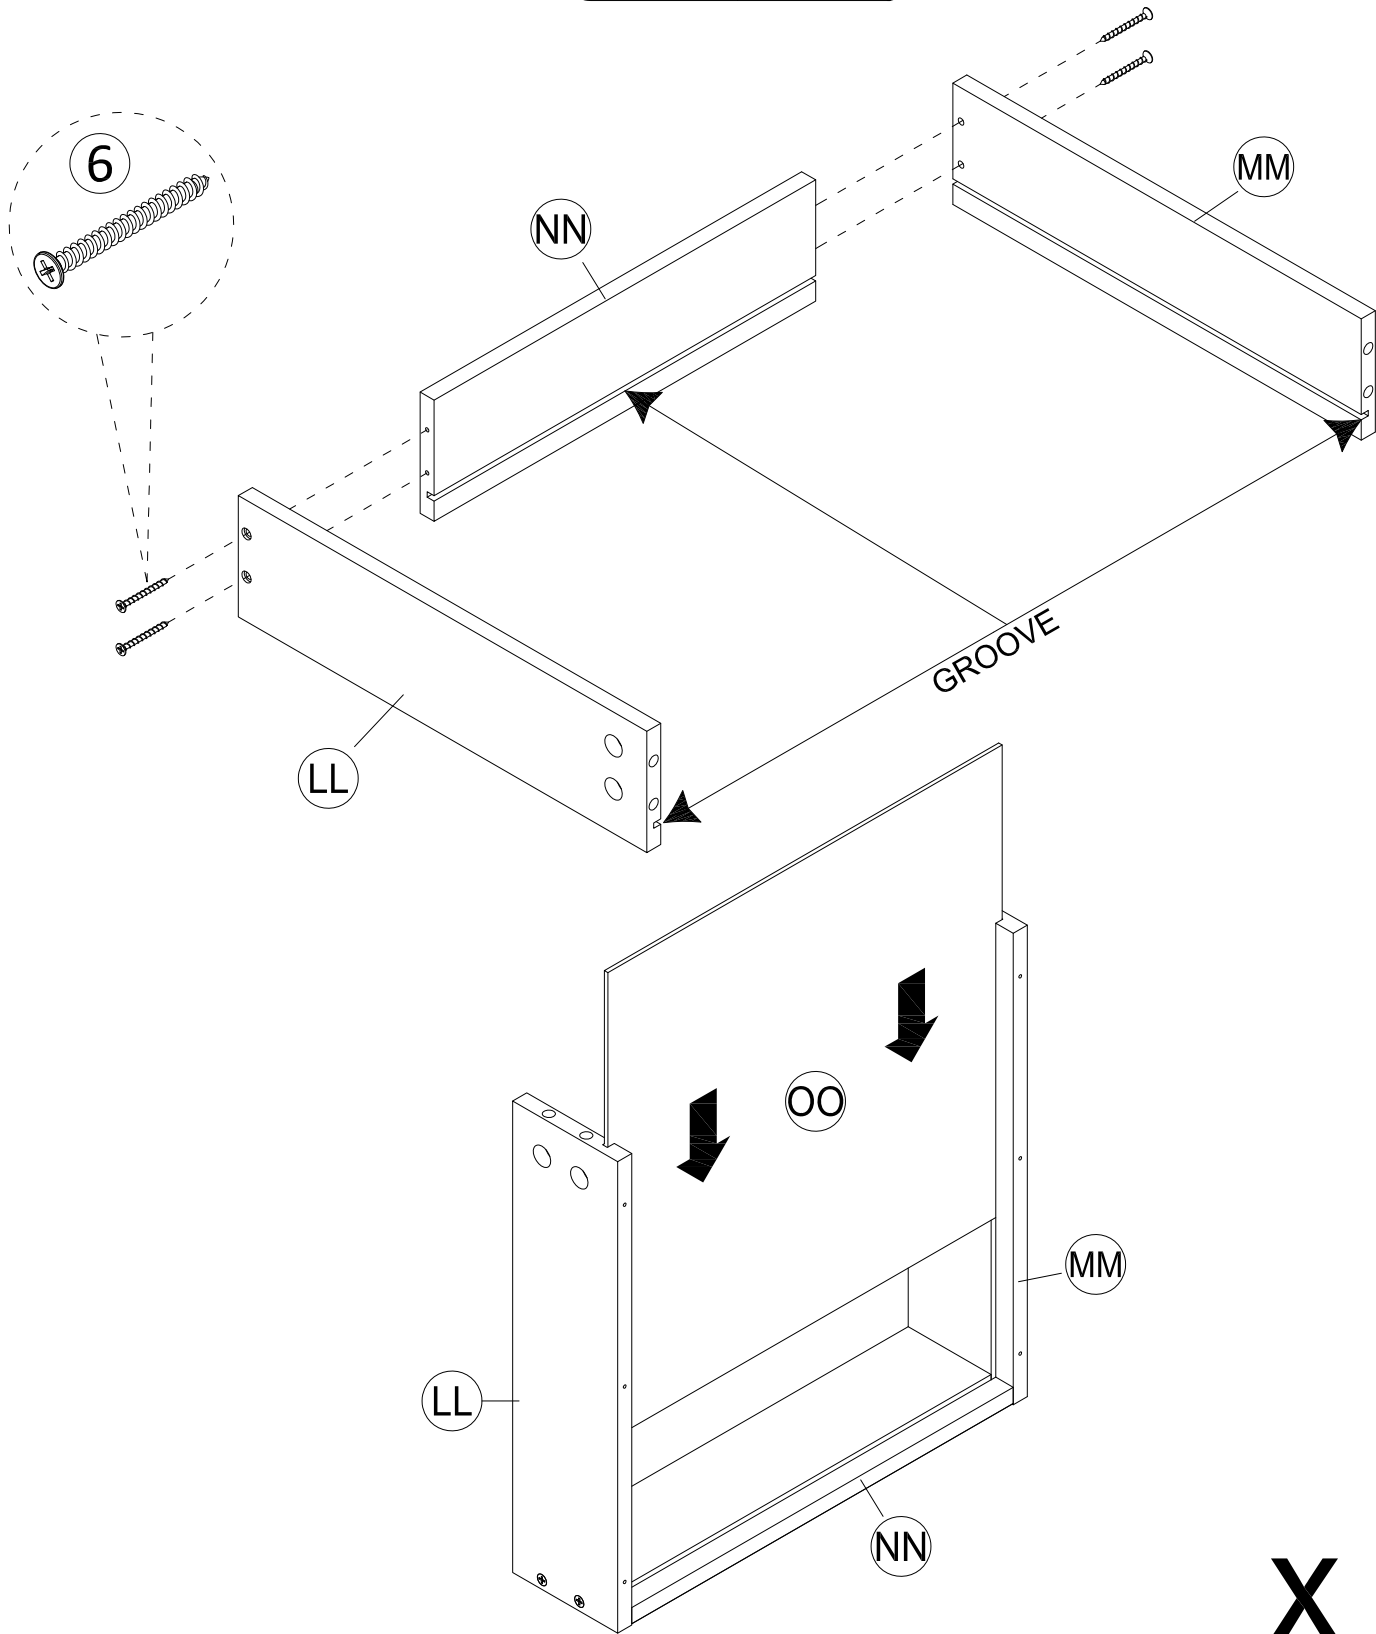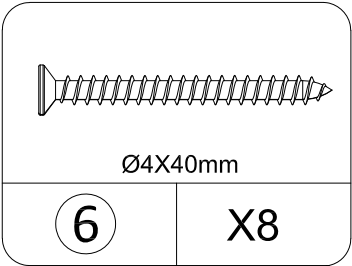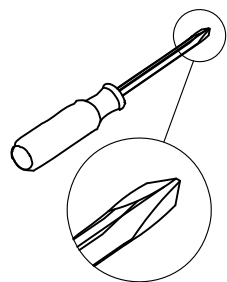




x 2


STEP2

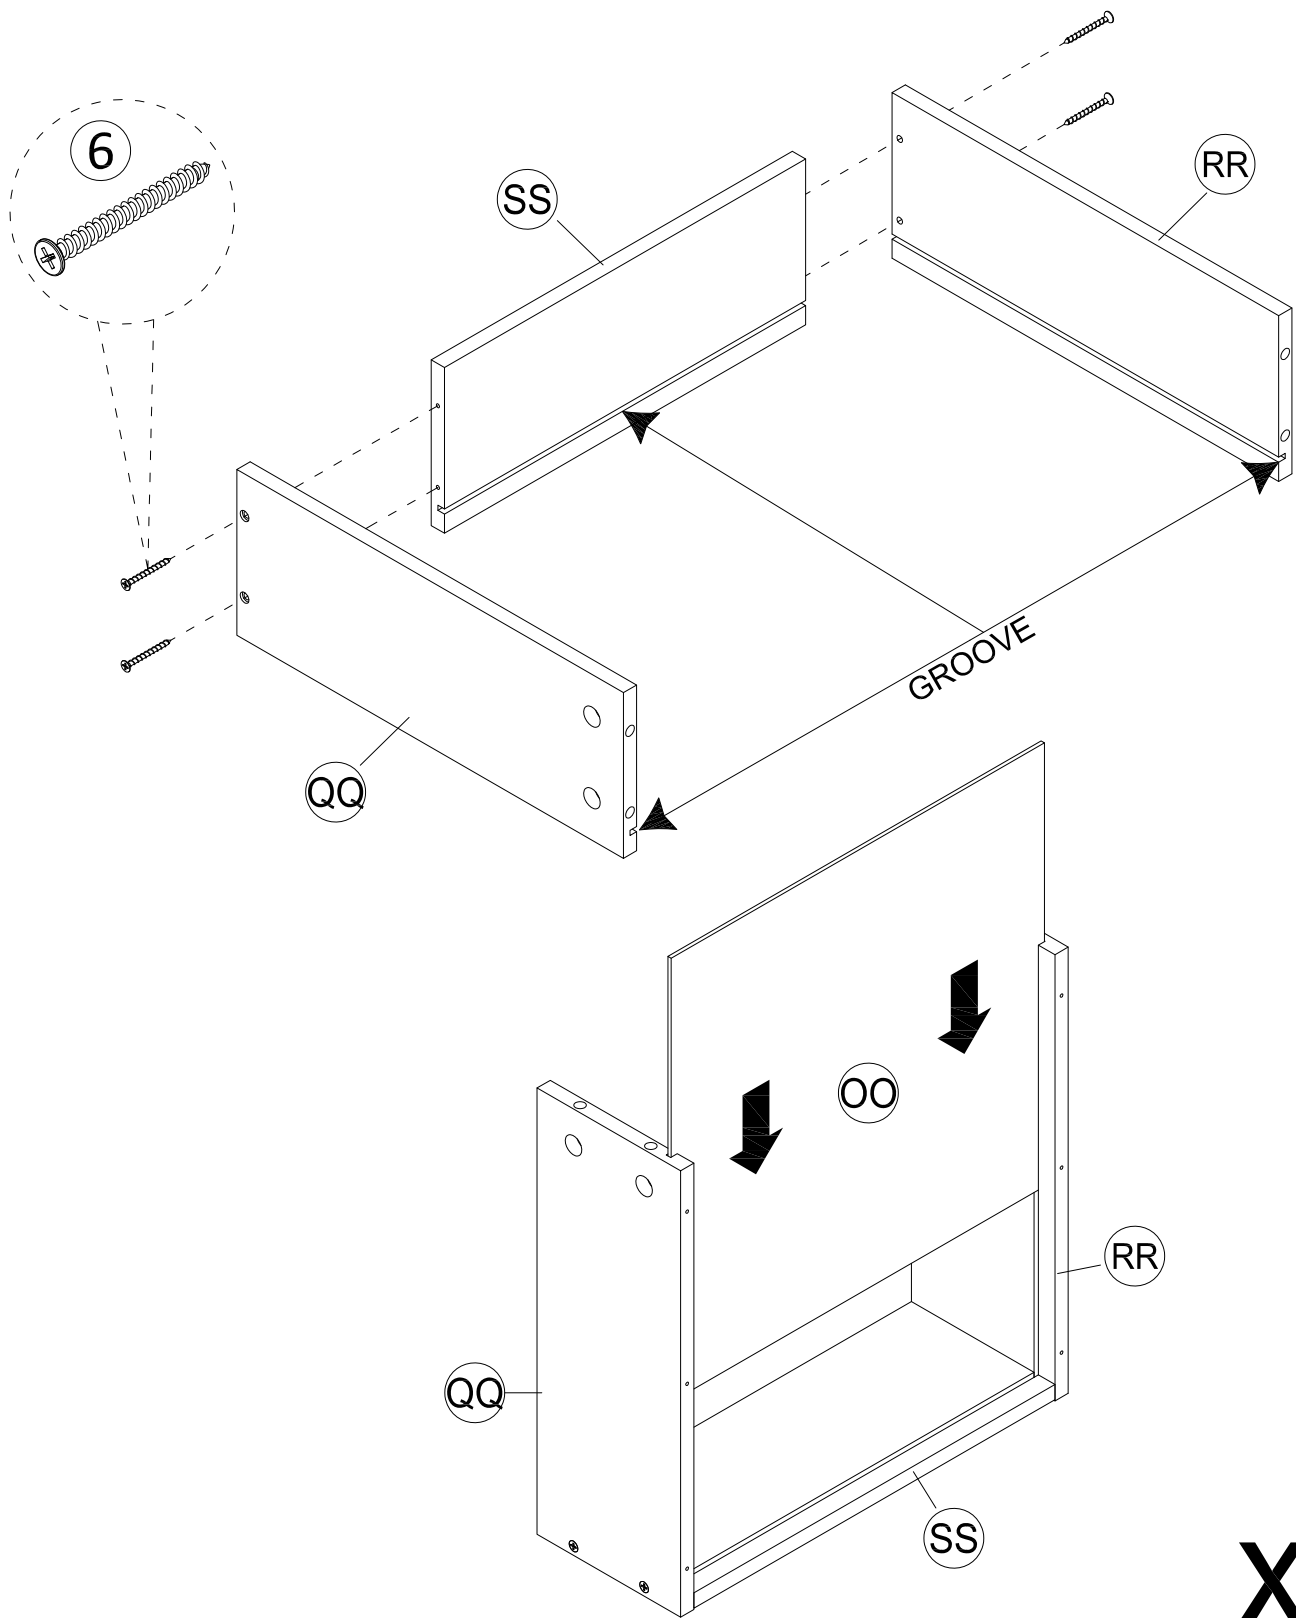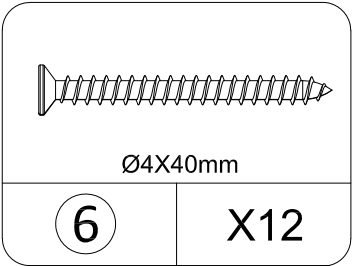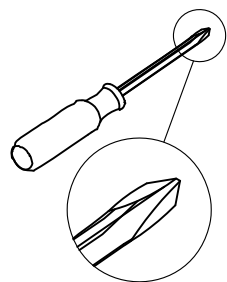






x 3

STEP3

 Ø15X9.5mm	 Ø6.5X35mm	 47*11*18mm	 M4X18mm
1 X20	2 X20	13 X5	15 X10

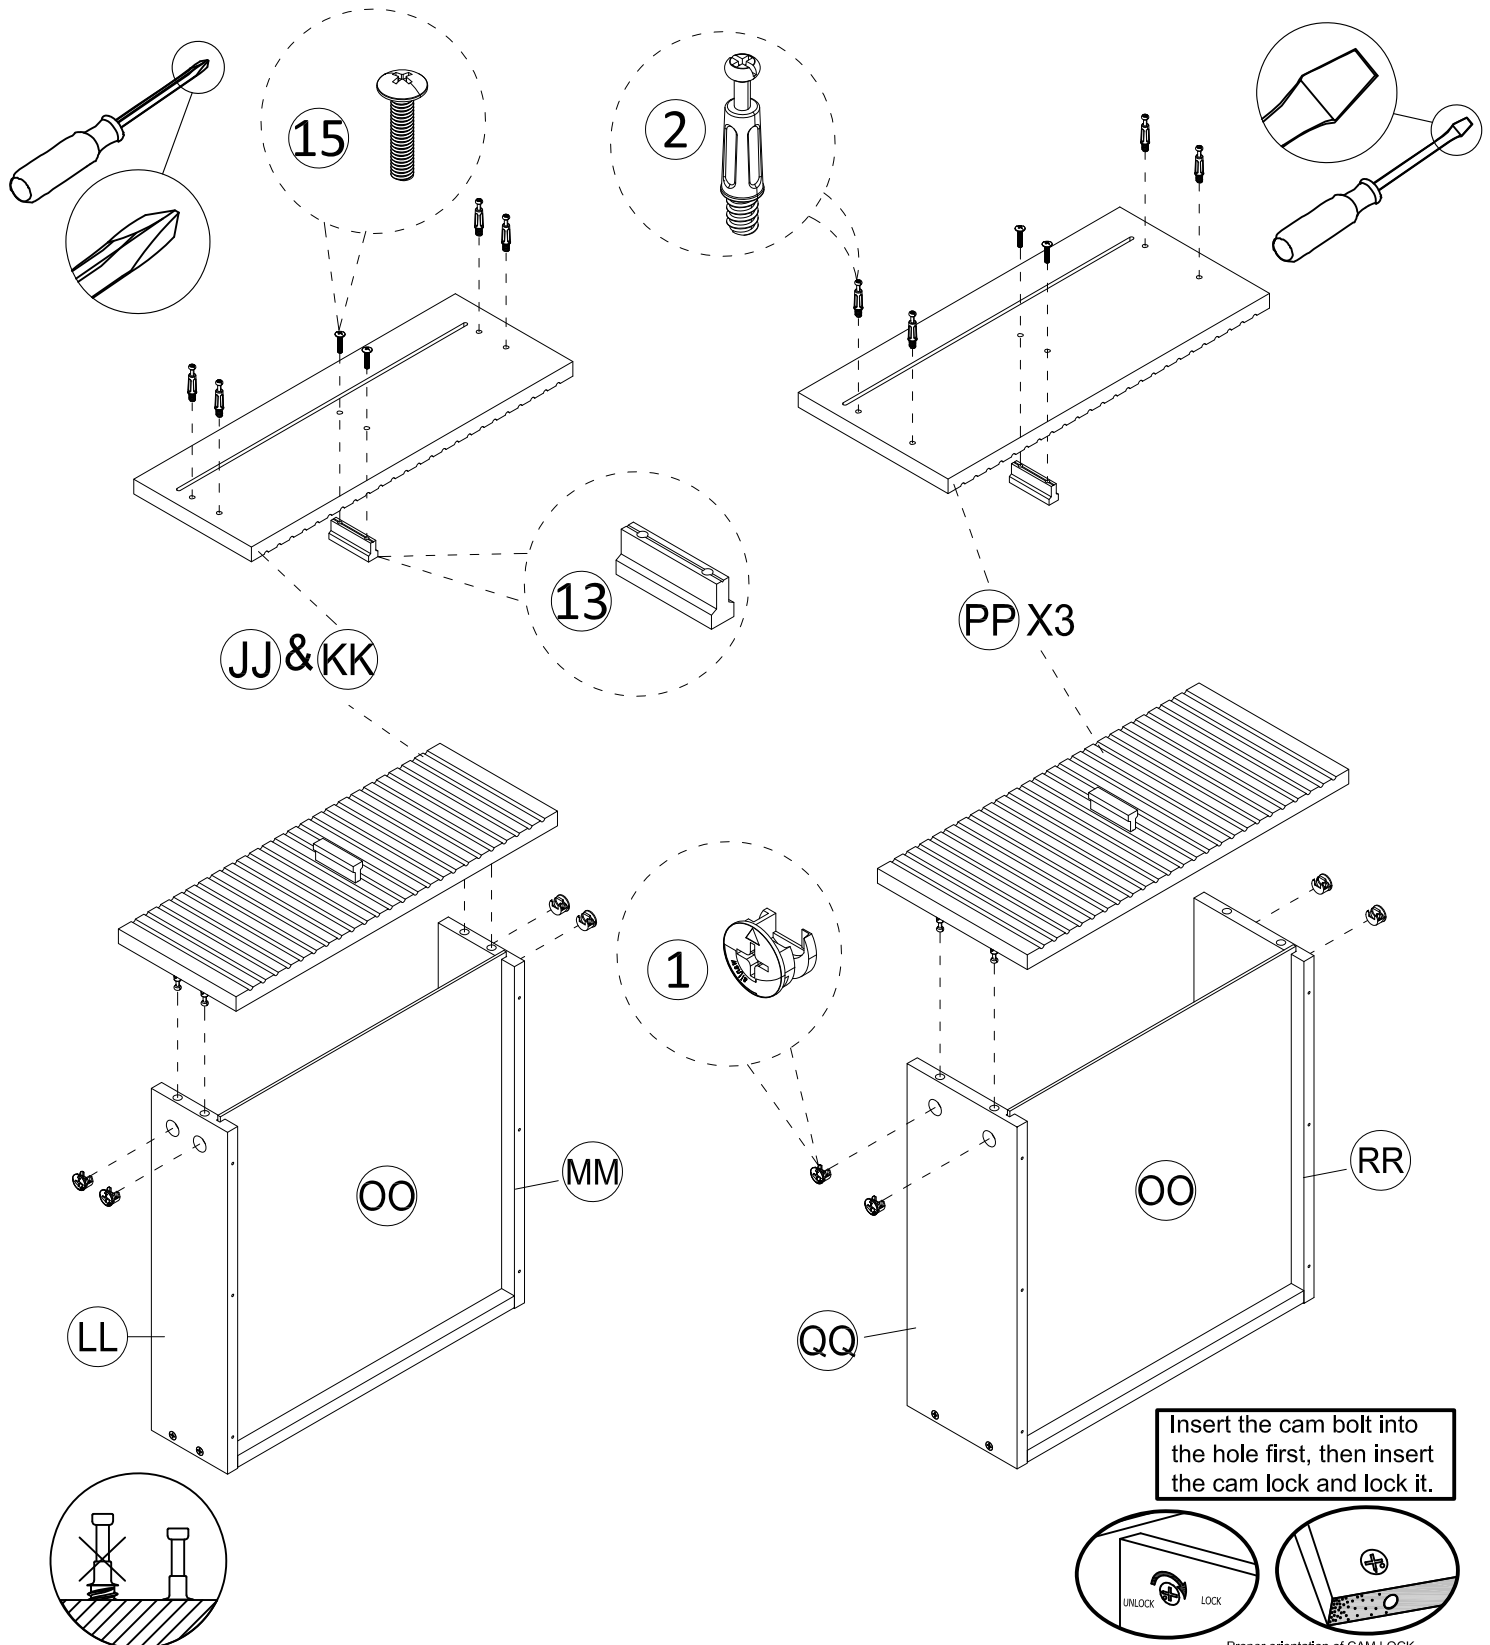


STEP4

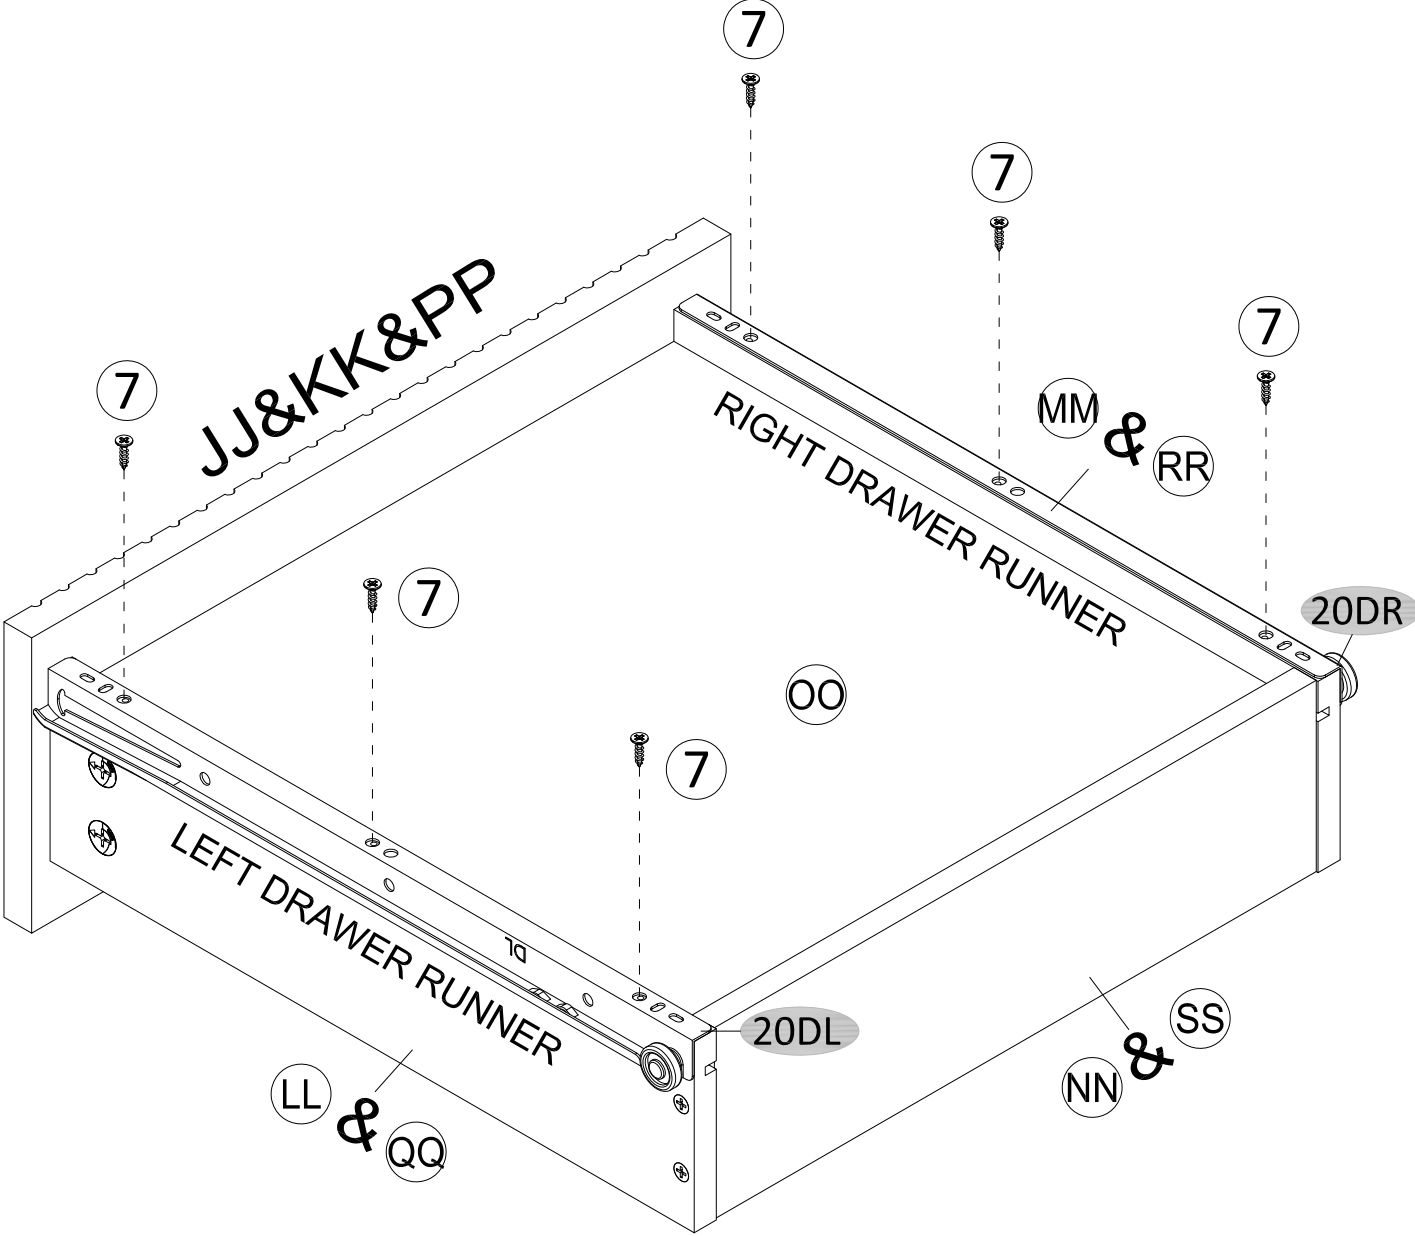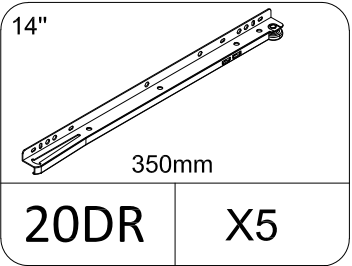
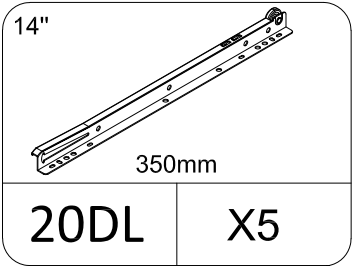
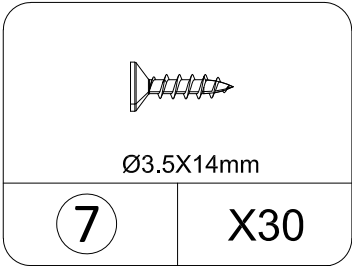
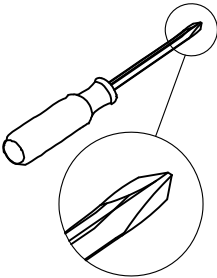


JJ & KK & PP X3


STEP5

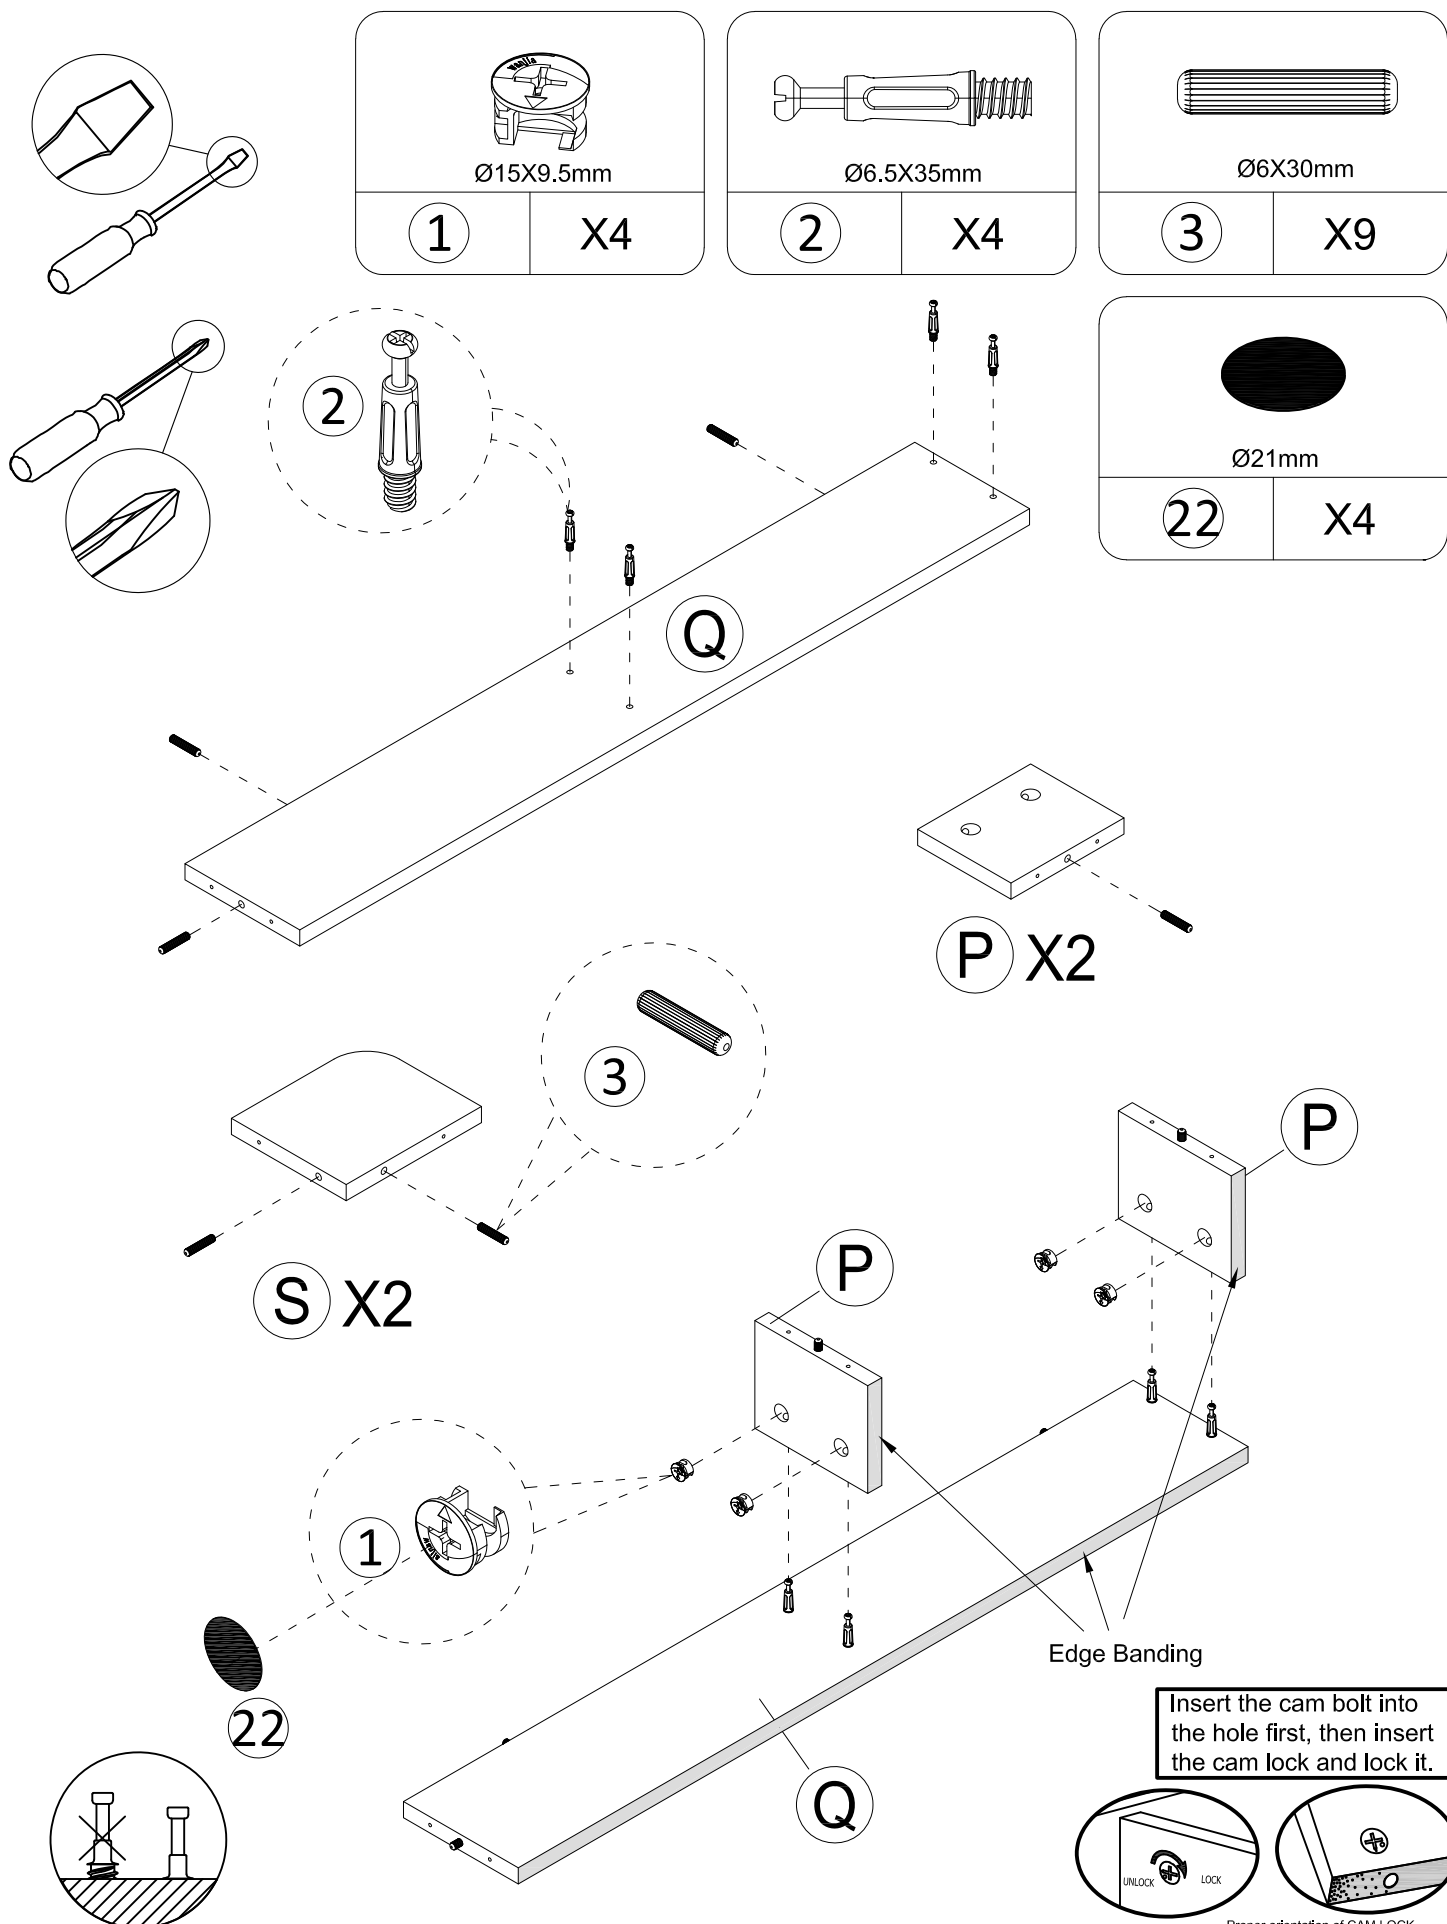





STEP6

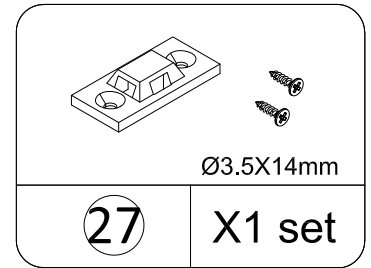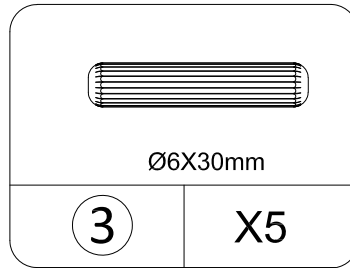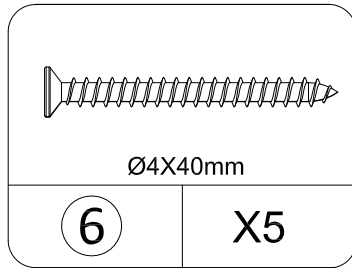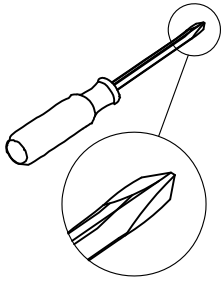


THIS STEP REQUIRES 2 PEOPLE

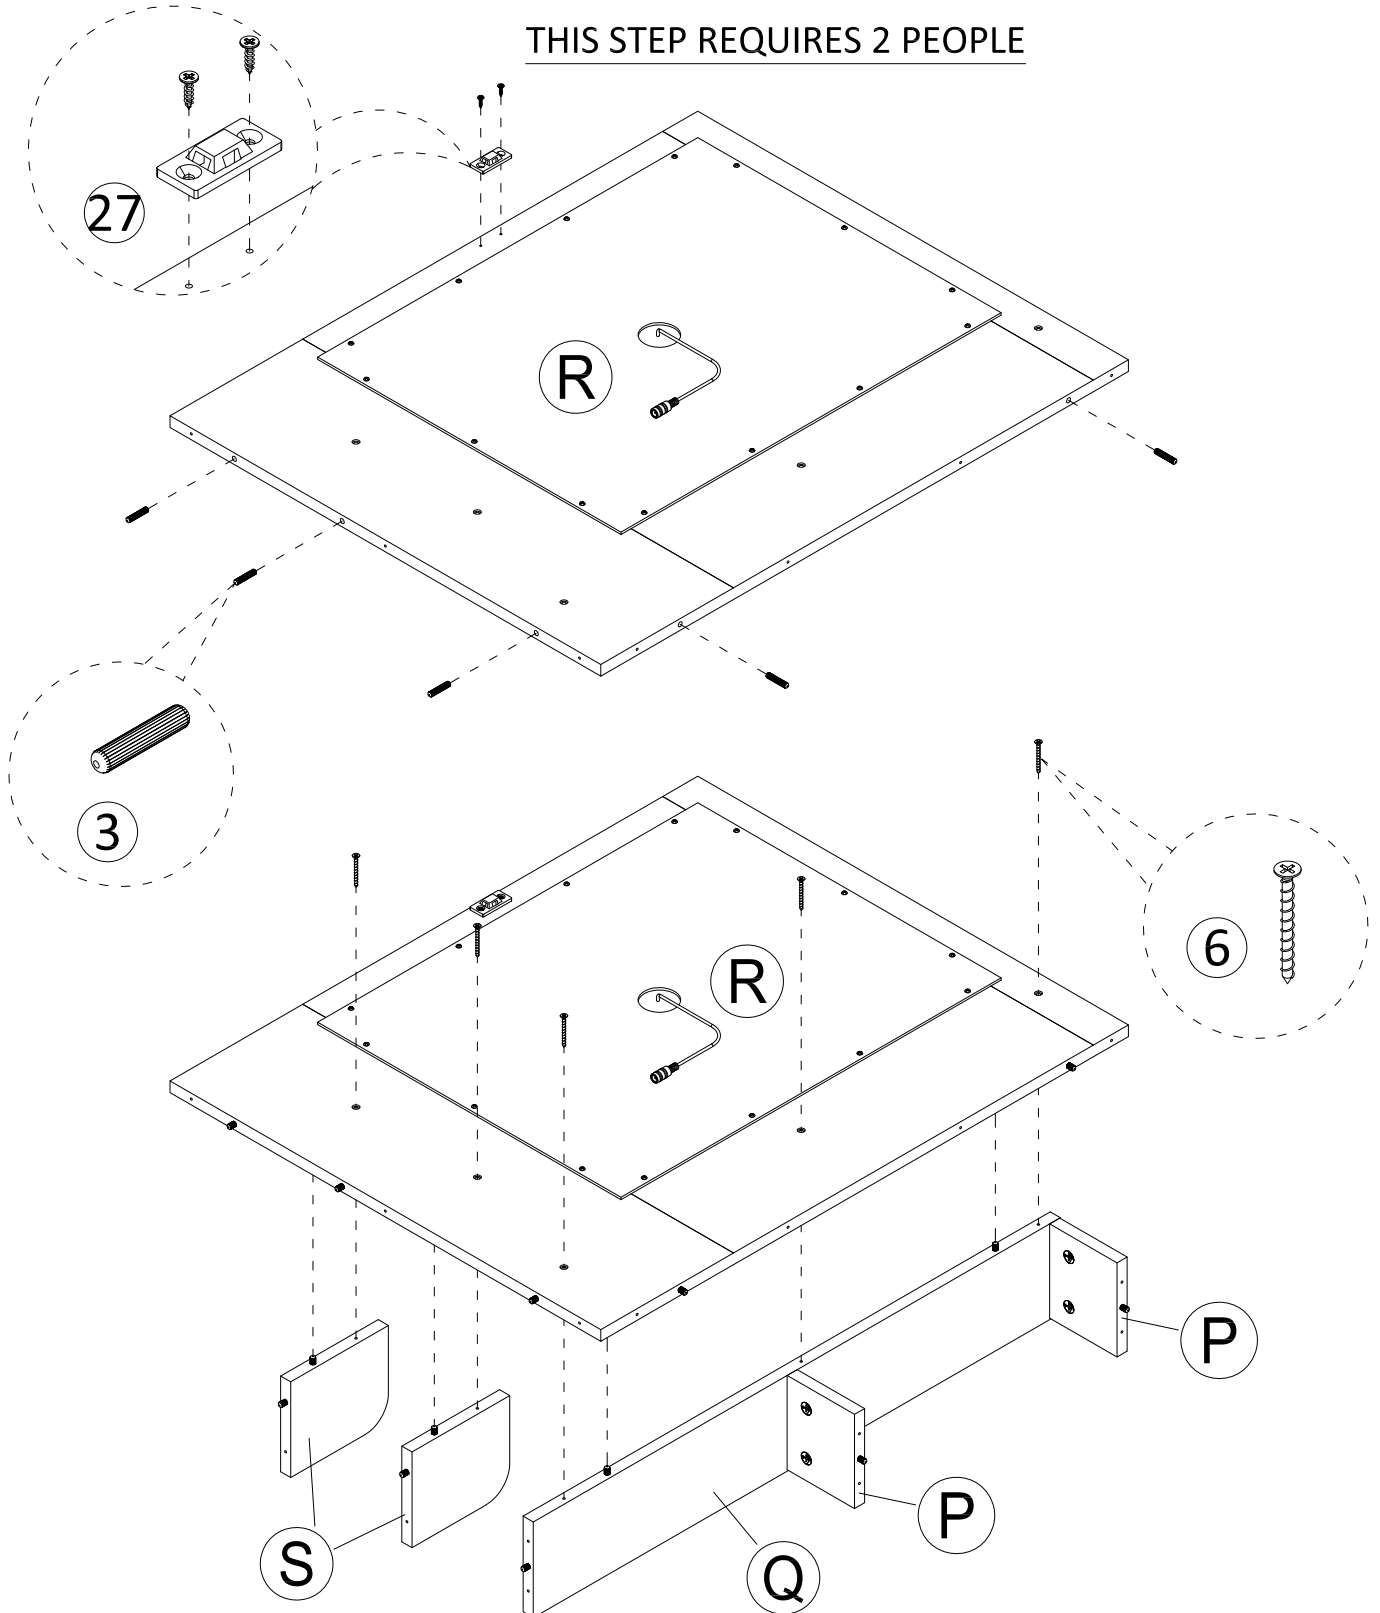






STEP7

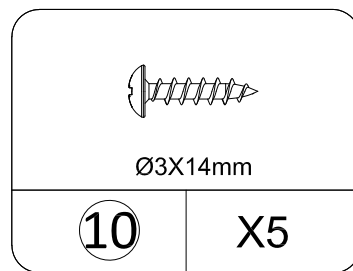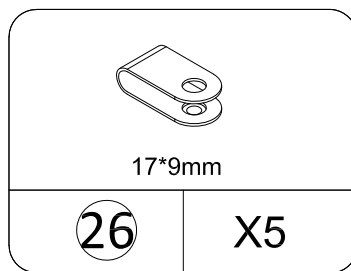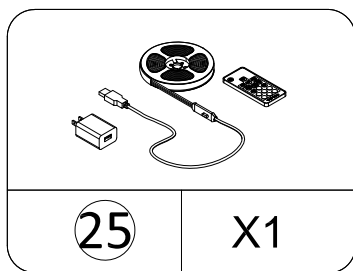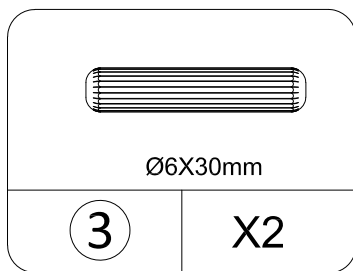




1. Prepare a marker and ruler. Firstly, use a ruler to measure the distance between the back edges of the top plate to be 50mm, and draw an auxiliary line for pasting the light strip.
2. Tear off the 3M adhesive tape on the back of the light strip and stick it inward along the previously marked line.
3. Clamp the light strip buckle (26) onto the light strip, align it with the corresponding hole, and then screw in the screw (10)

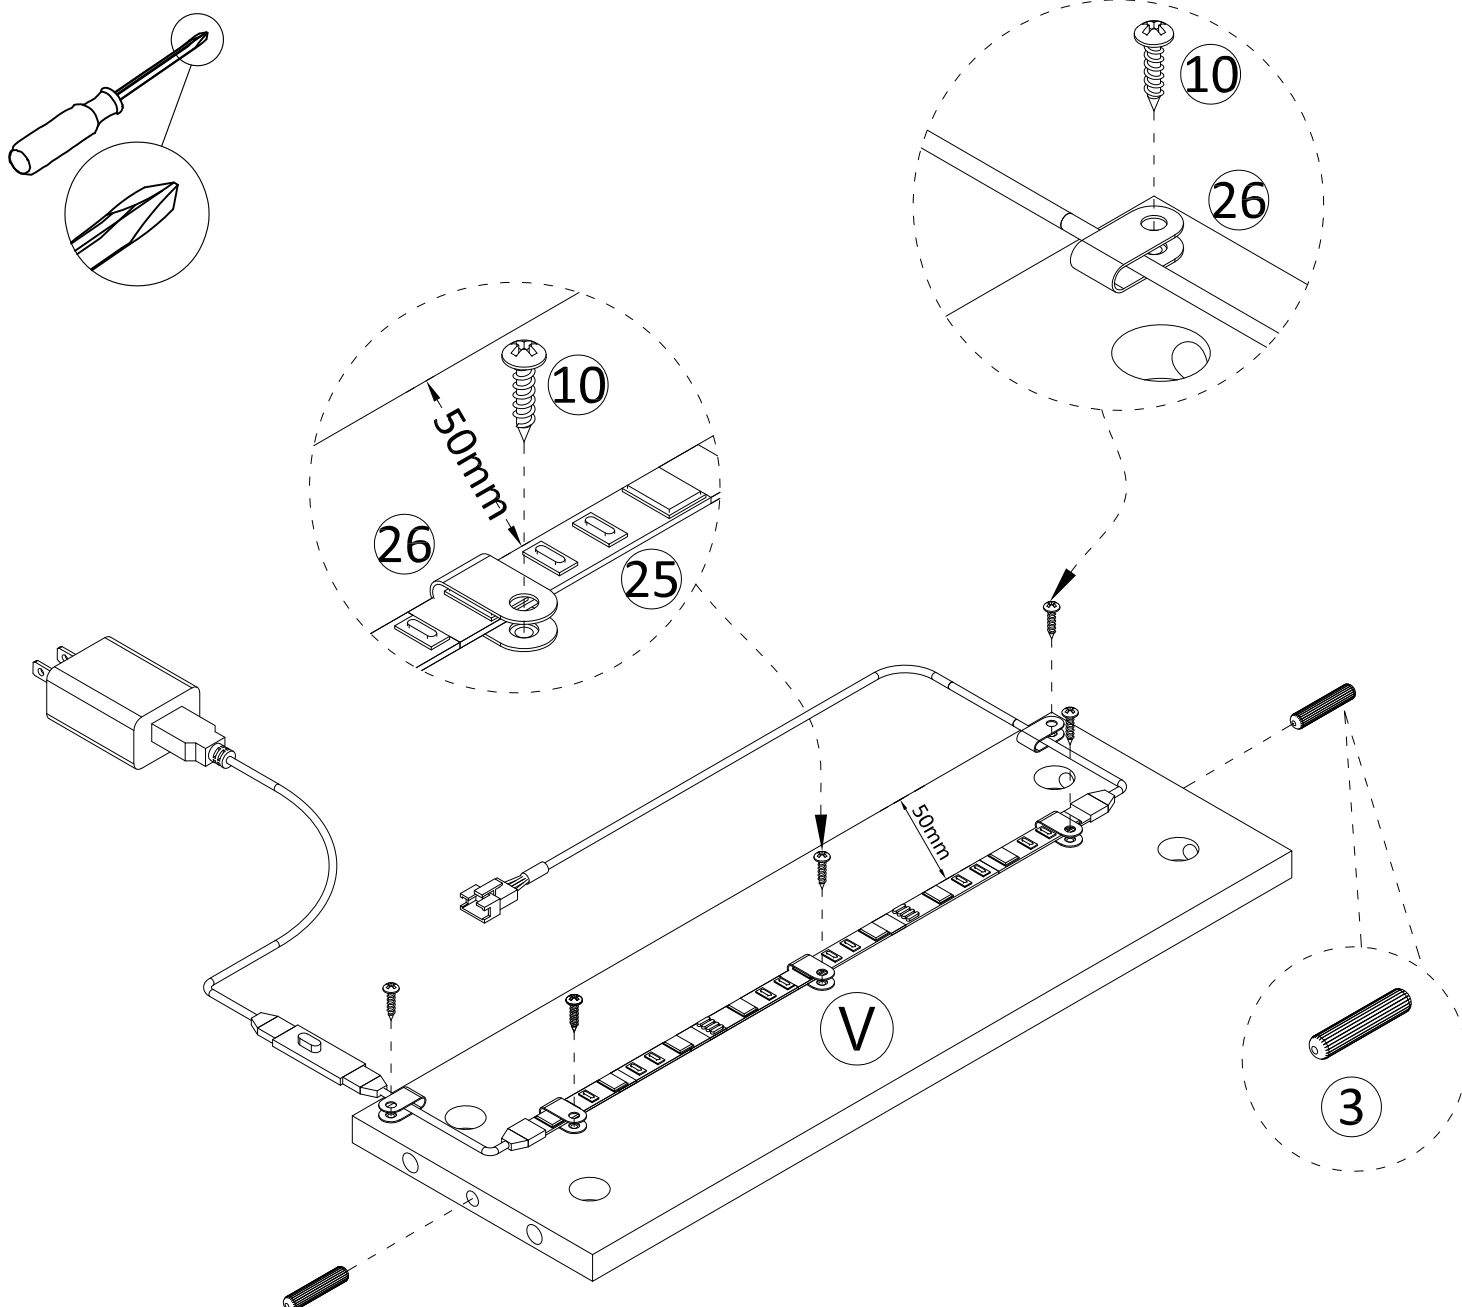


STEP8

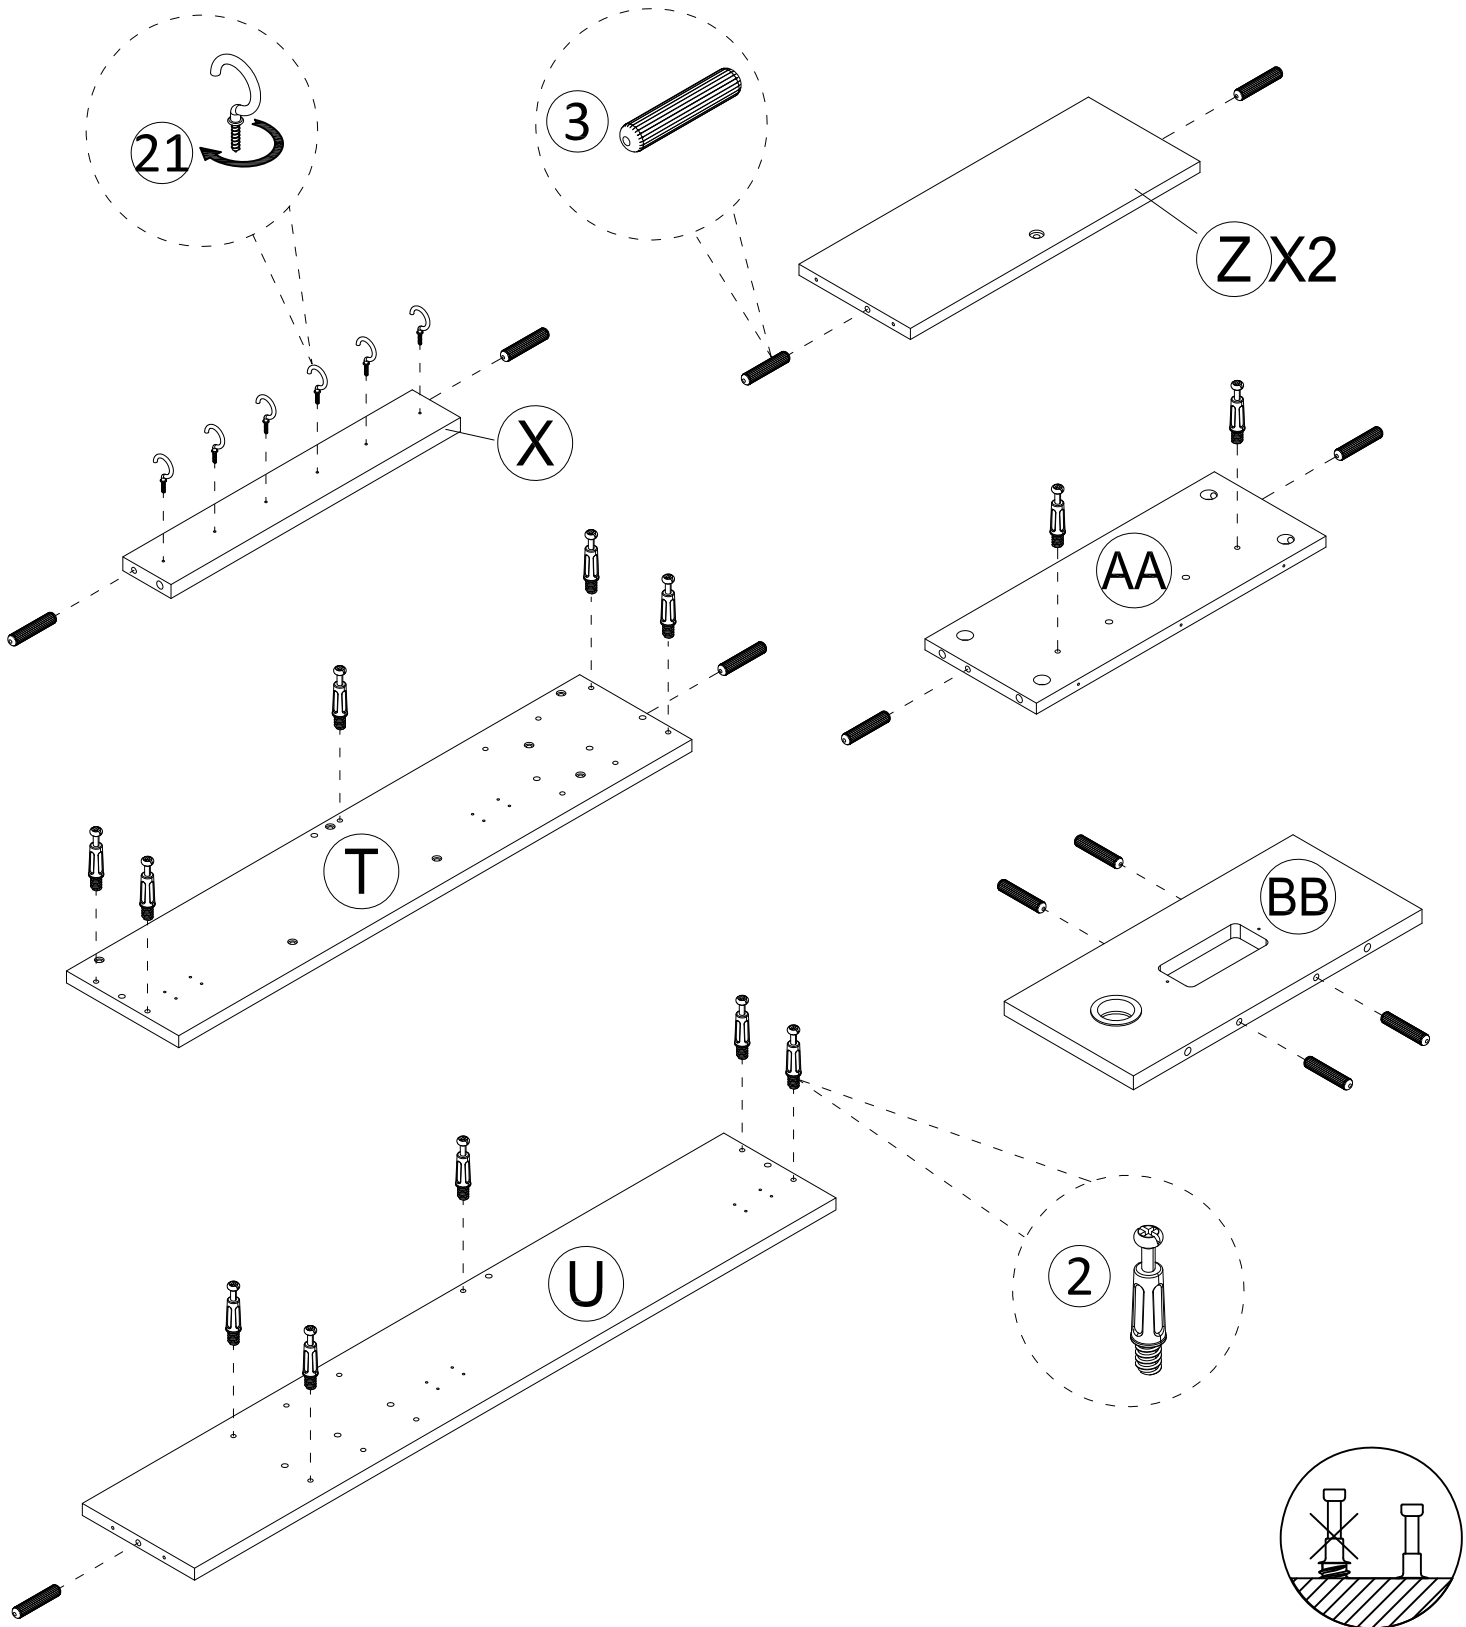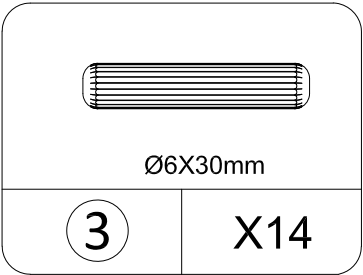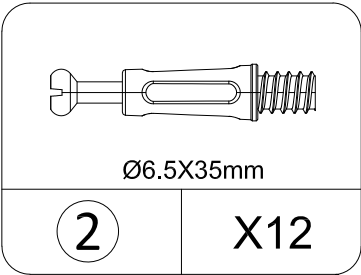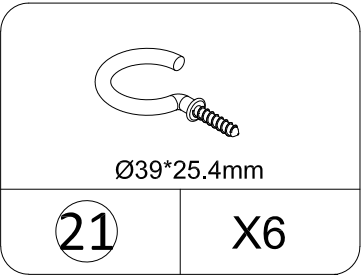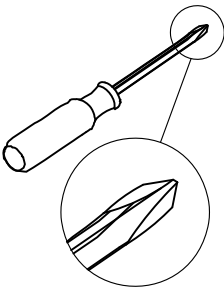


STEP9

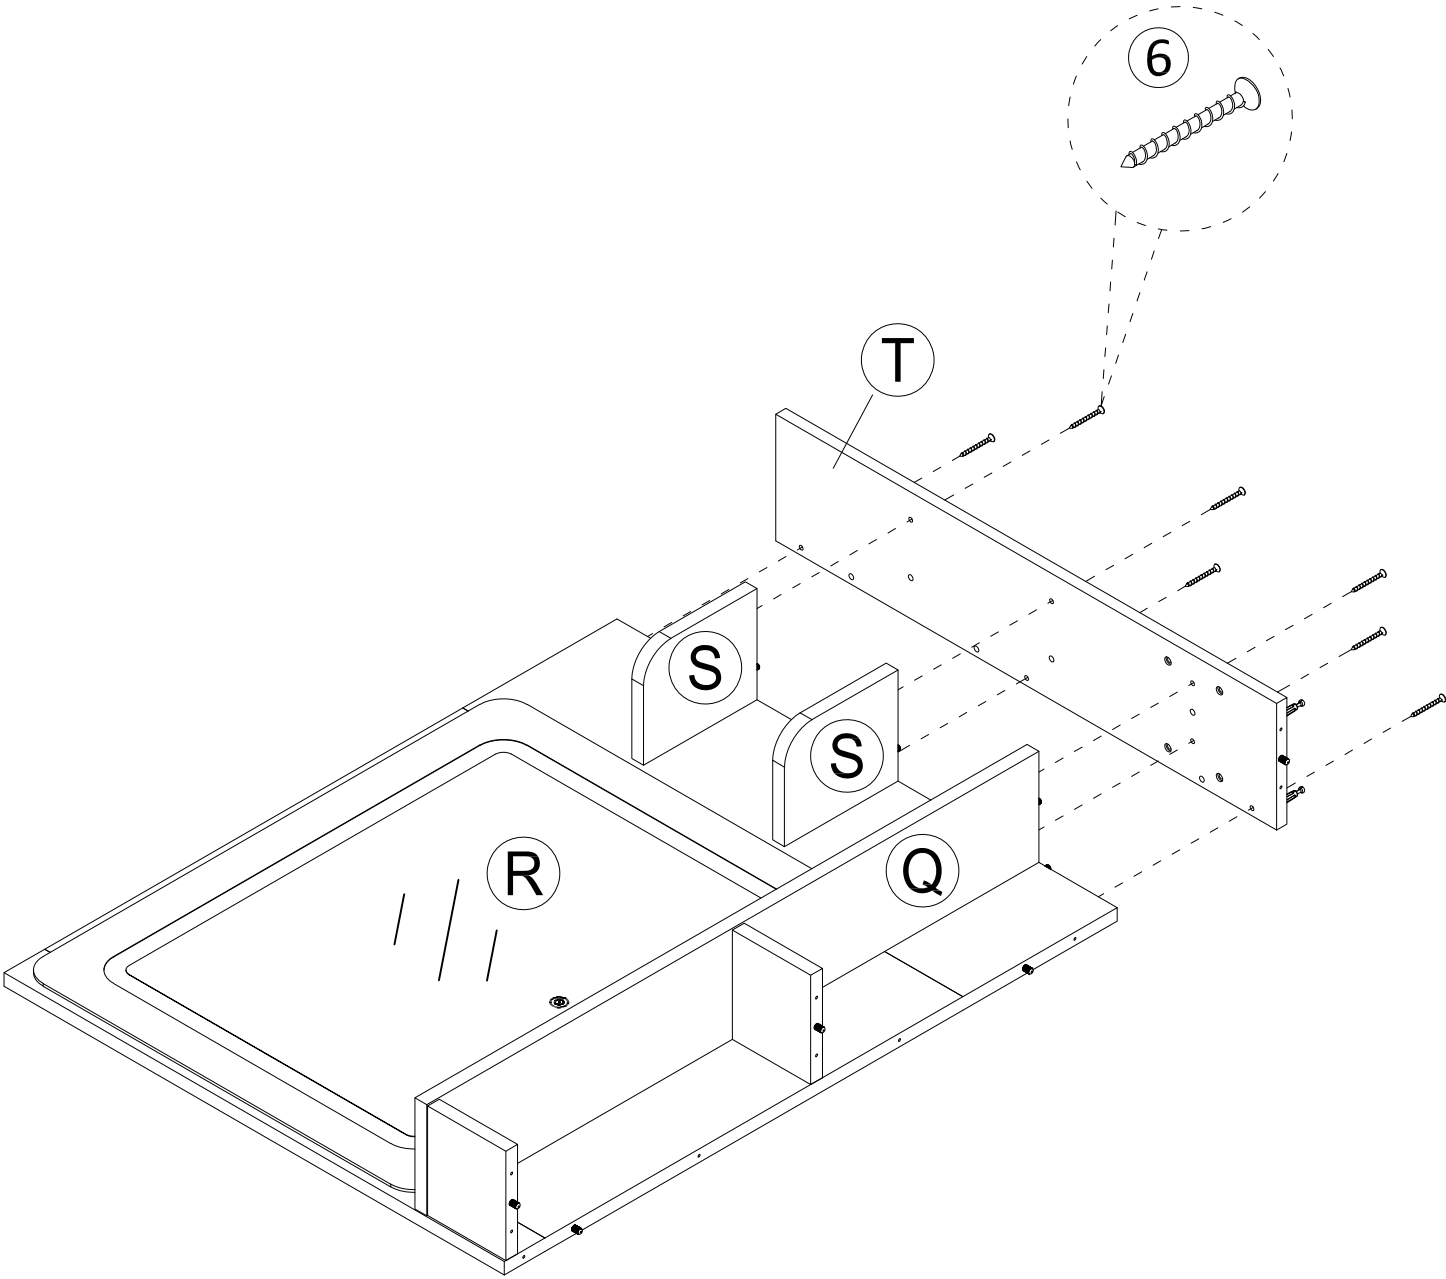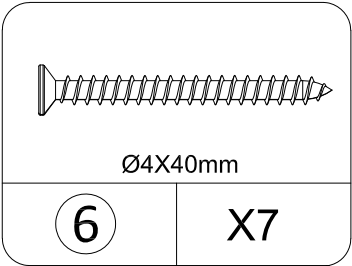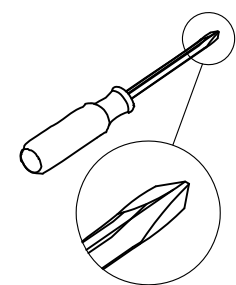

STEP10




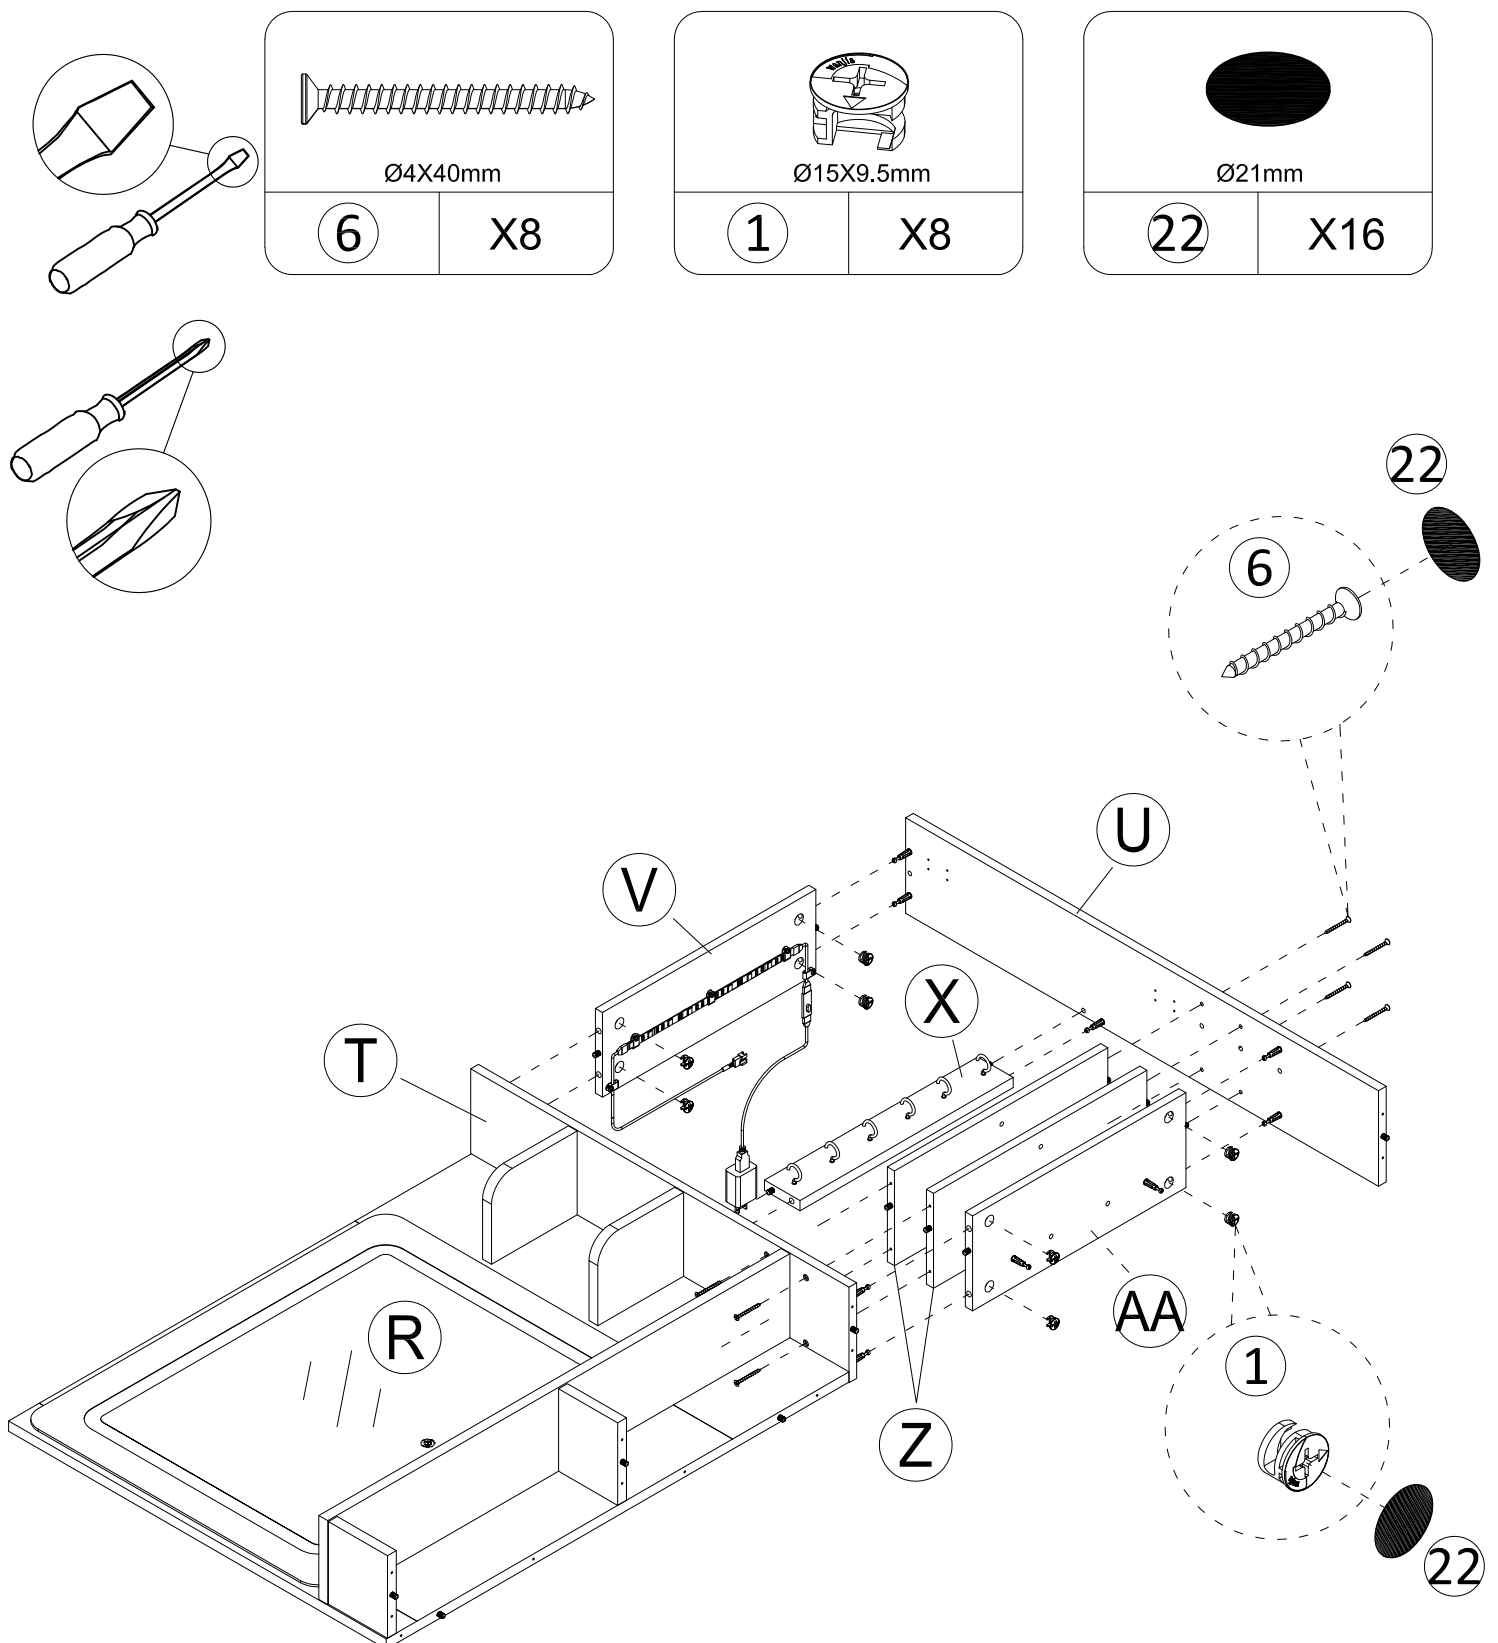


Insert the cam bolt into the hole first, then insert the cam lock and lock it.





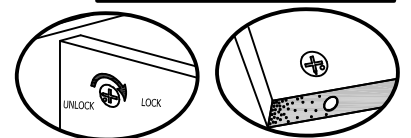


Proper orientation of CAM LOCK




STEP11

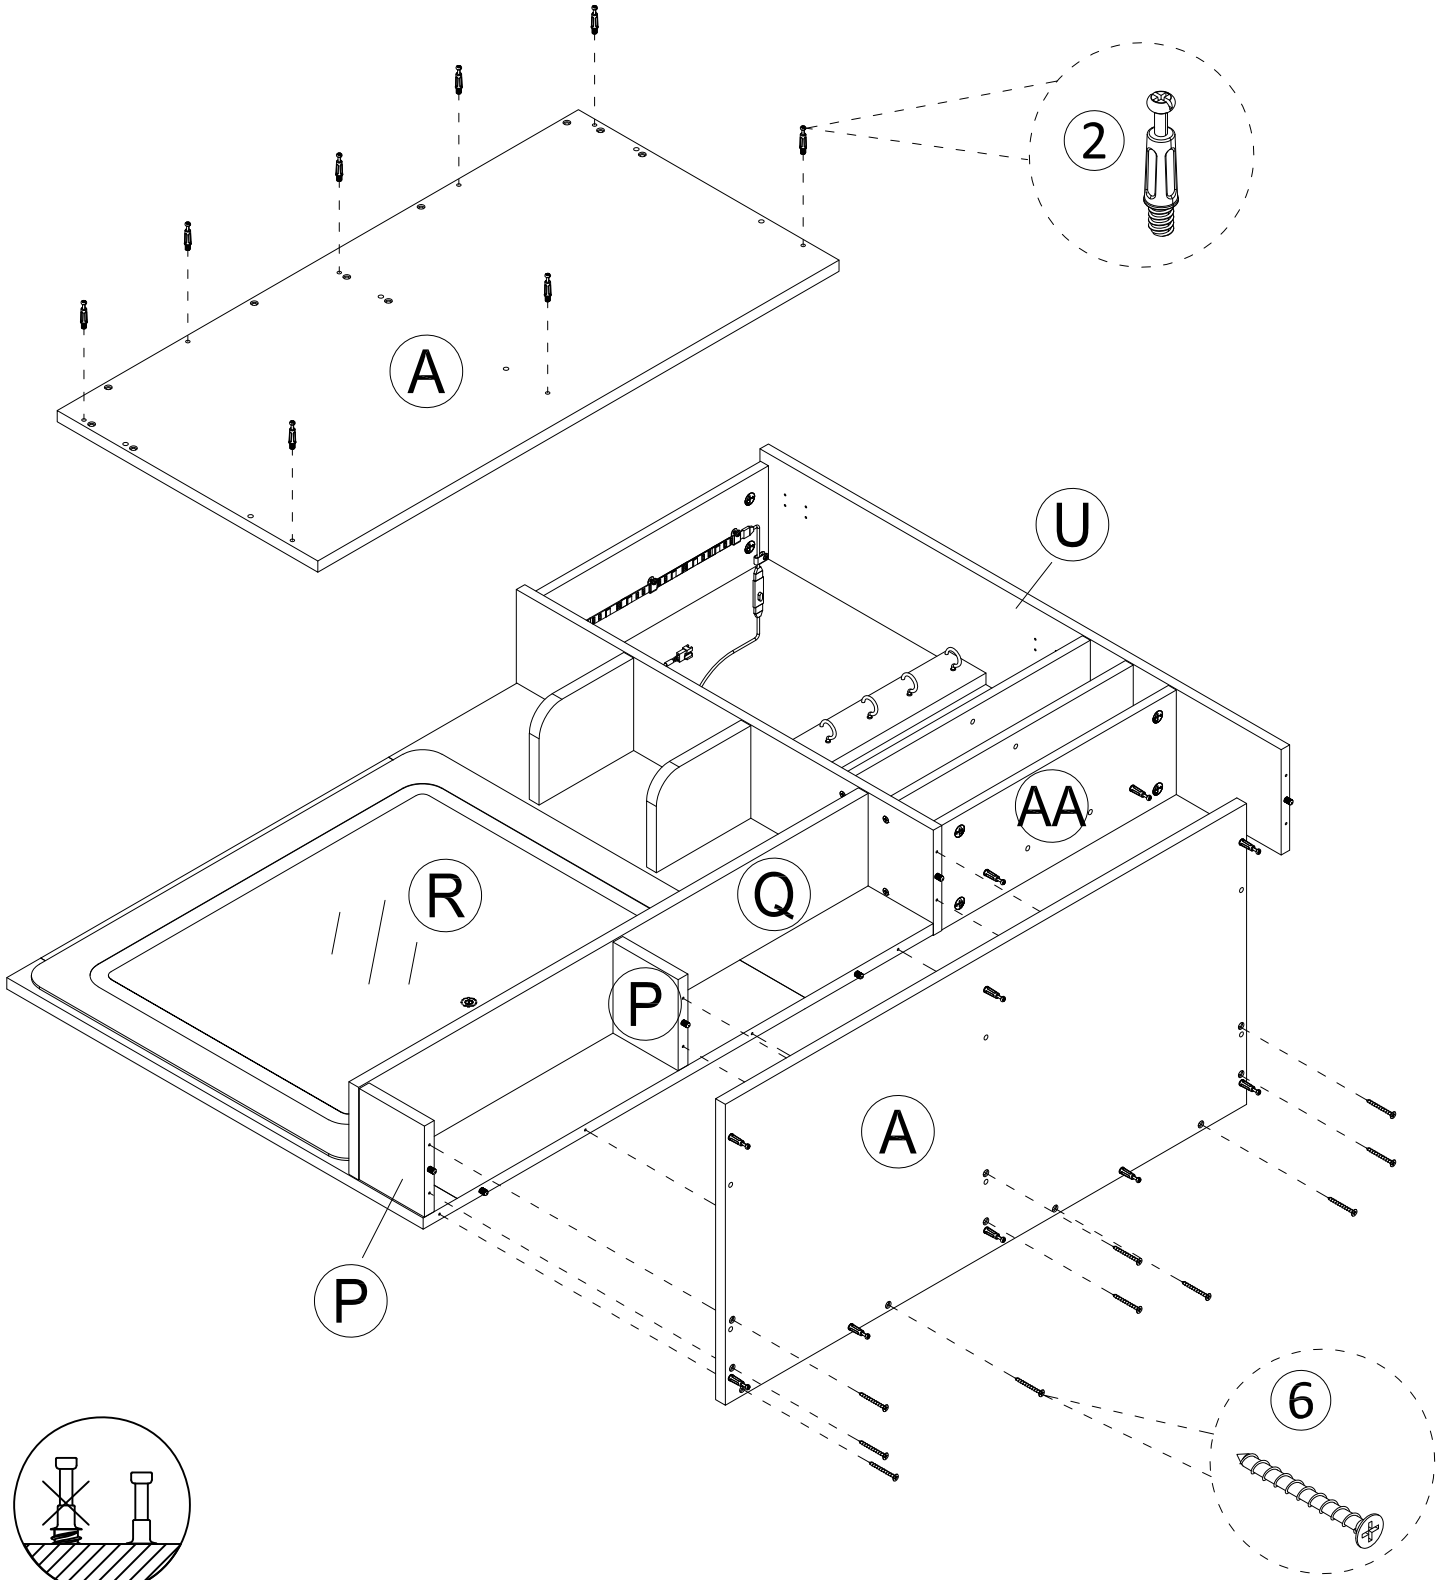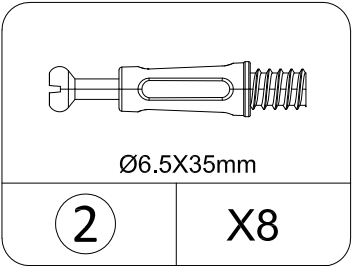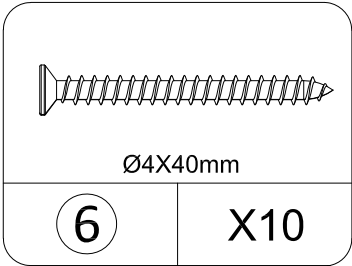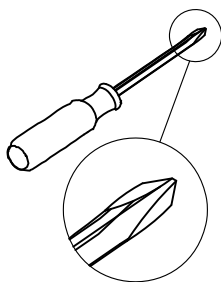


STEP12

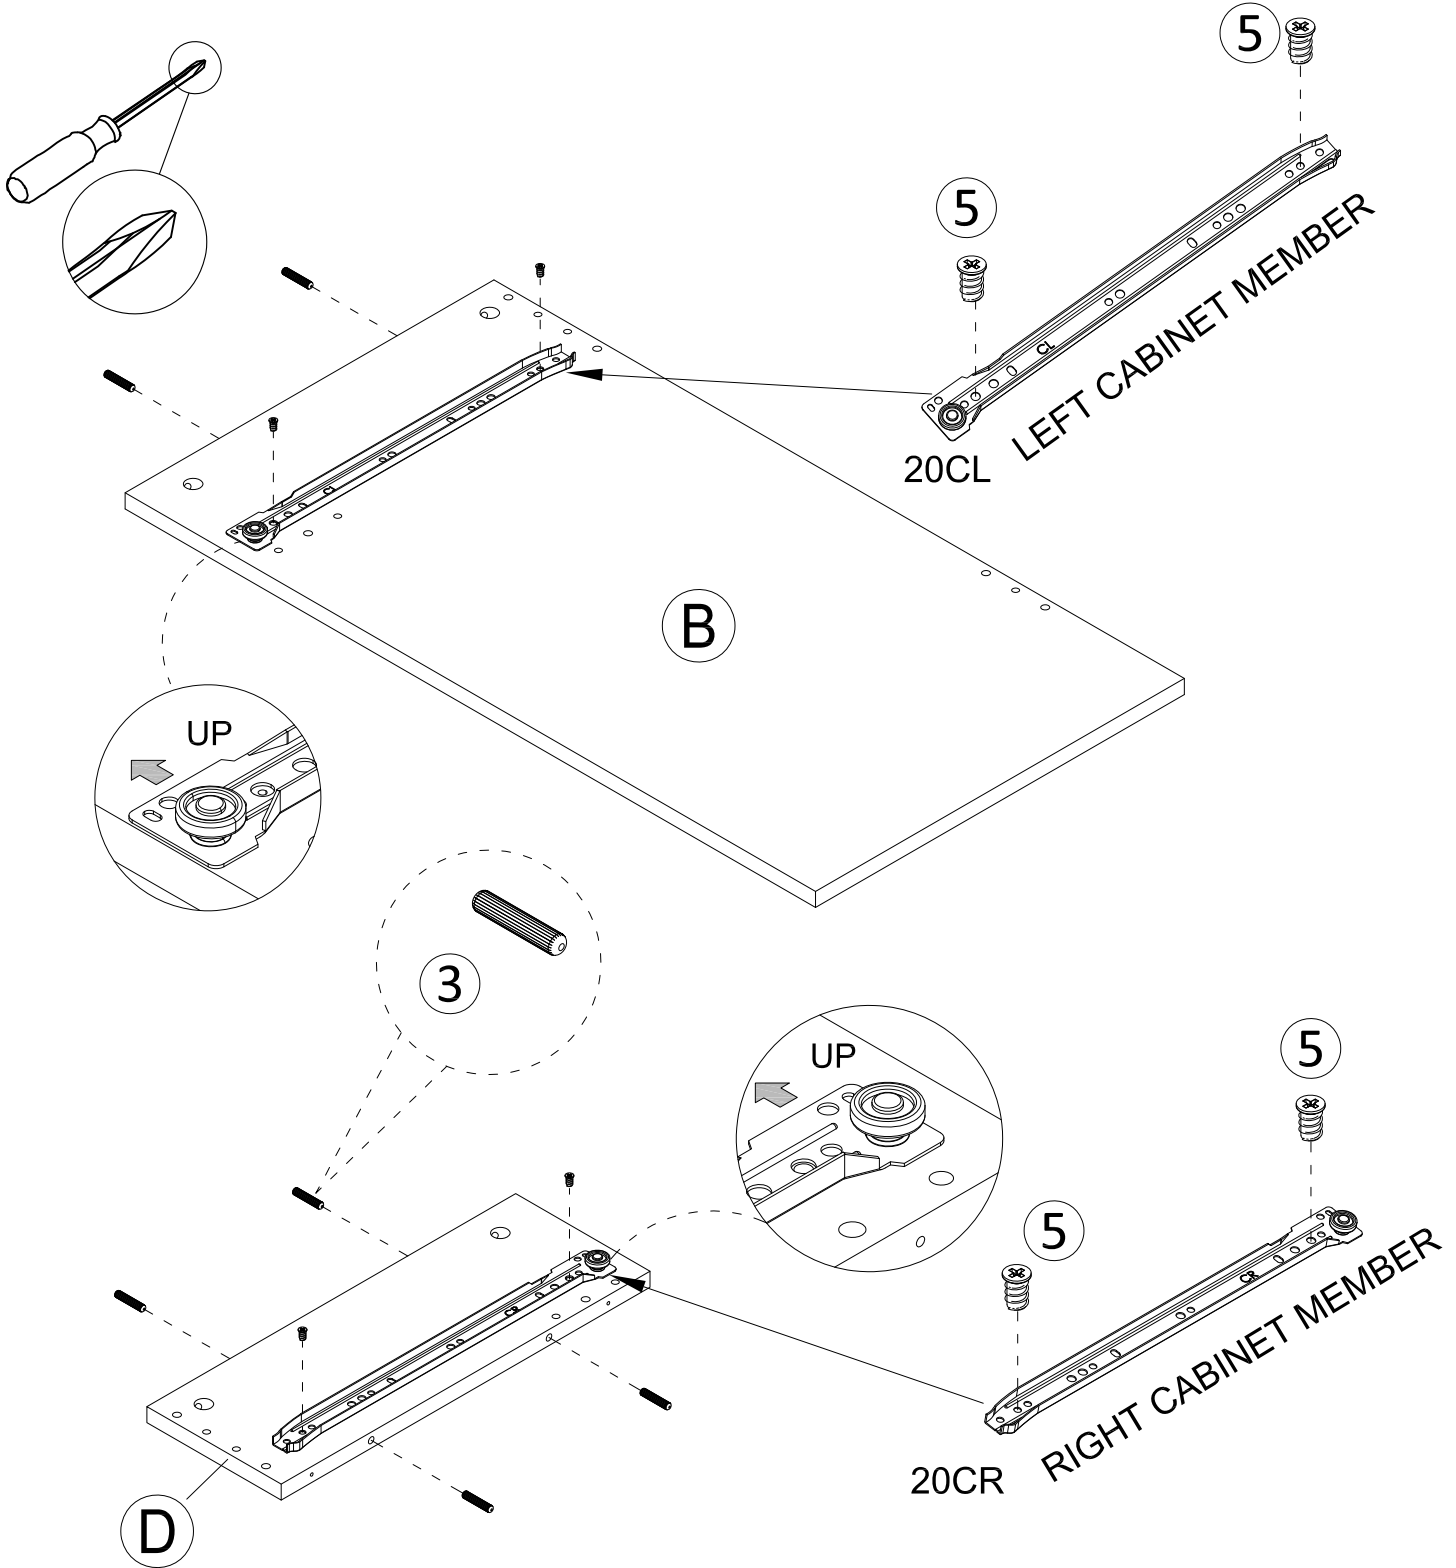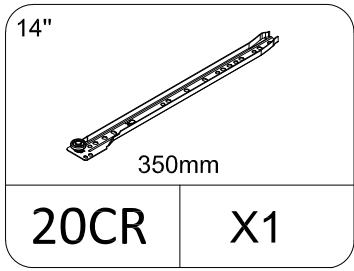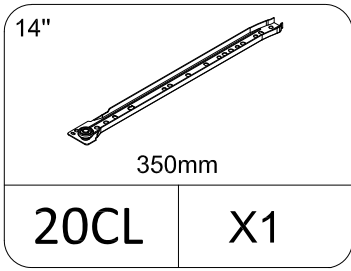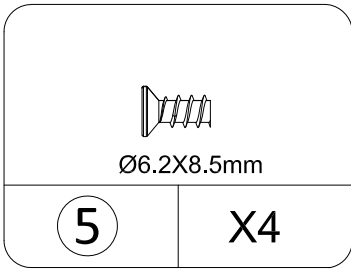
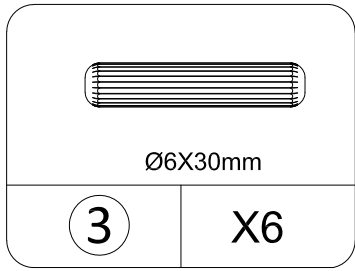


STEP13

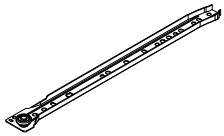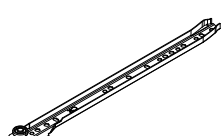
 Ø6X30mm		 Ø6.2X8.5mm		14"  350mm 20CL		14"  350mm 20CR	
3	X4	5	X4	X1	X1		

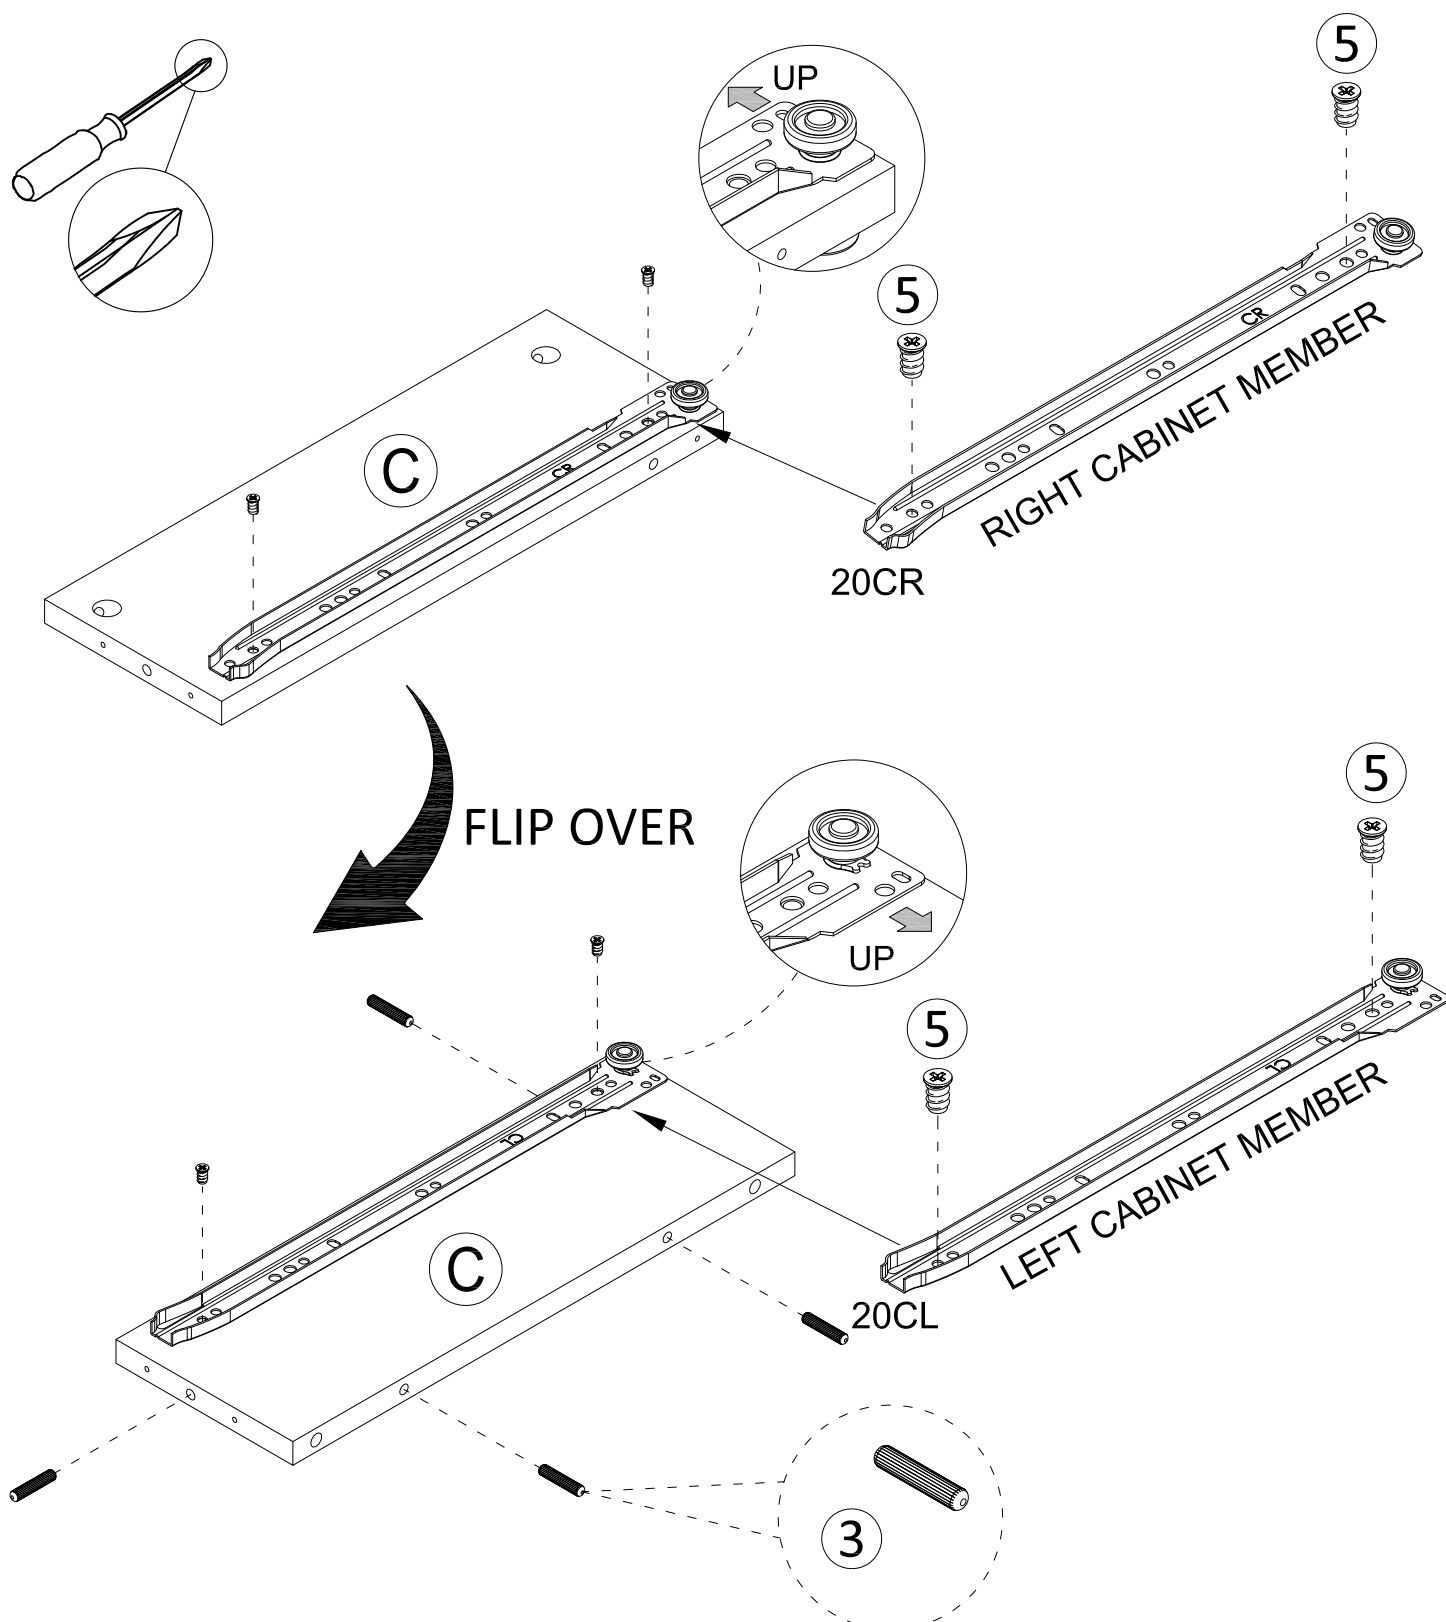



STEP14

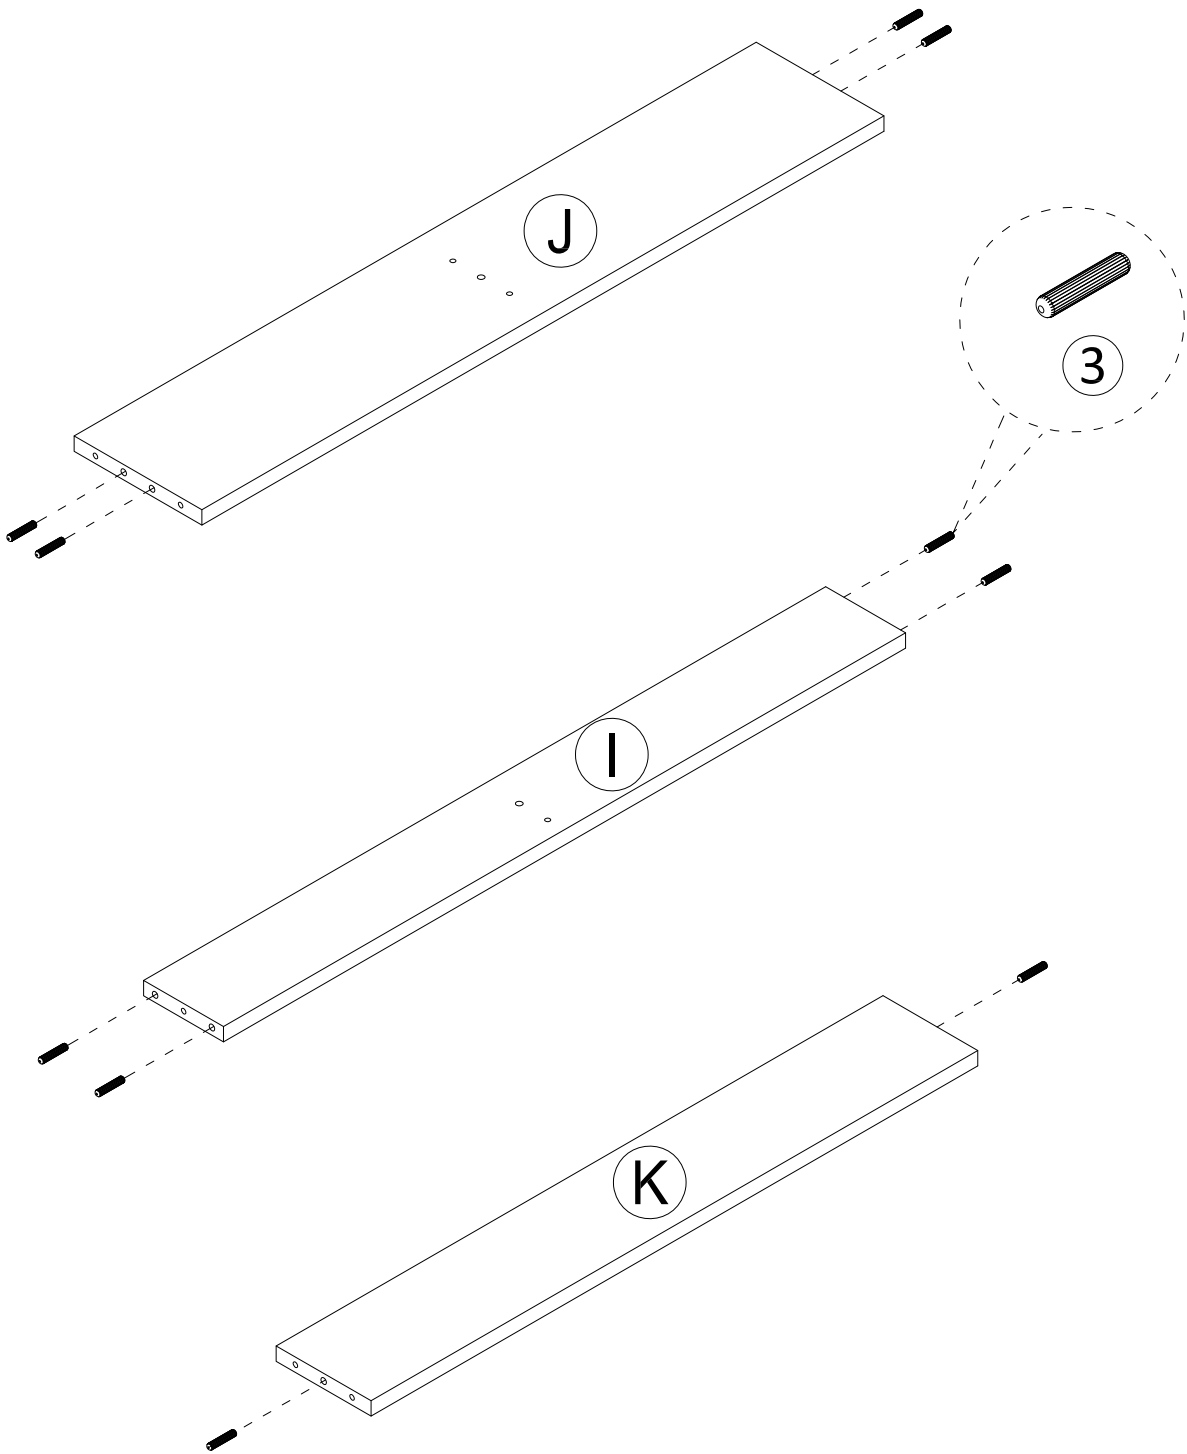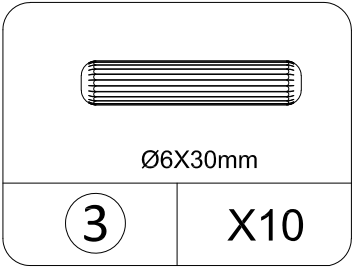



STEP15

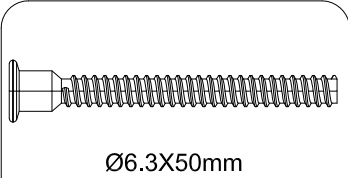	
4	X5






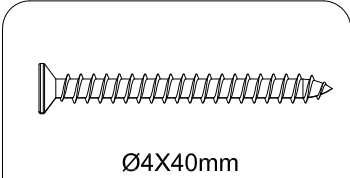
	
6	X3

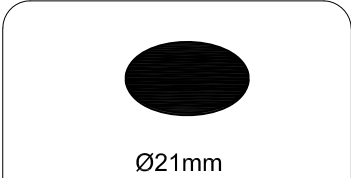	
22	X5








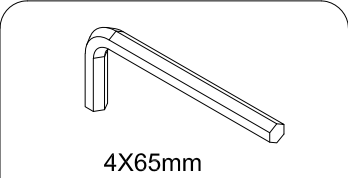
	
23	X1

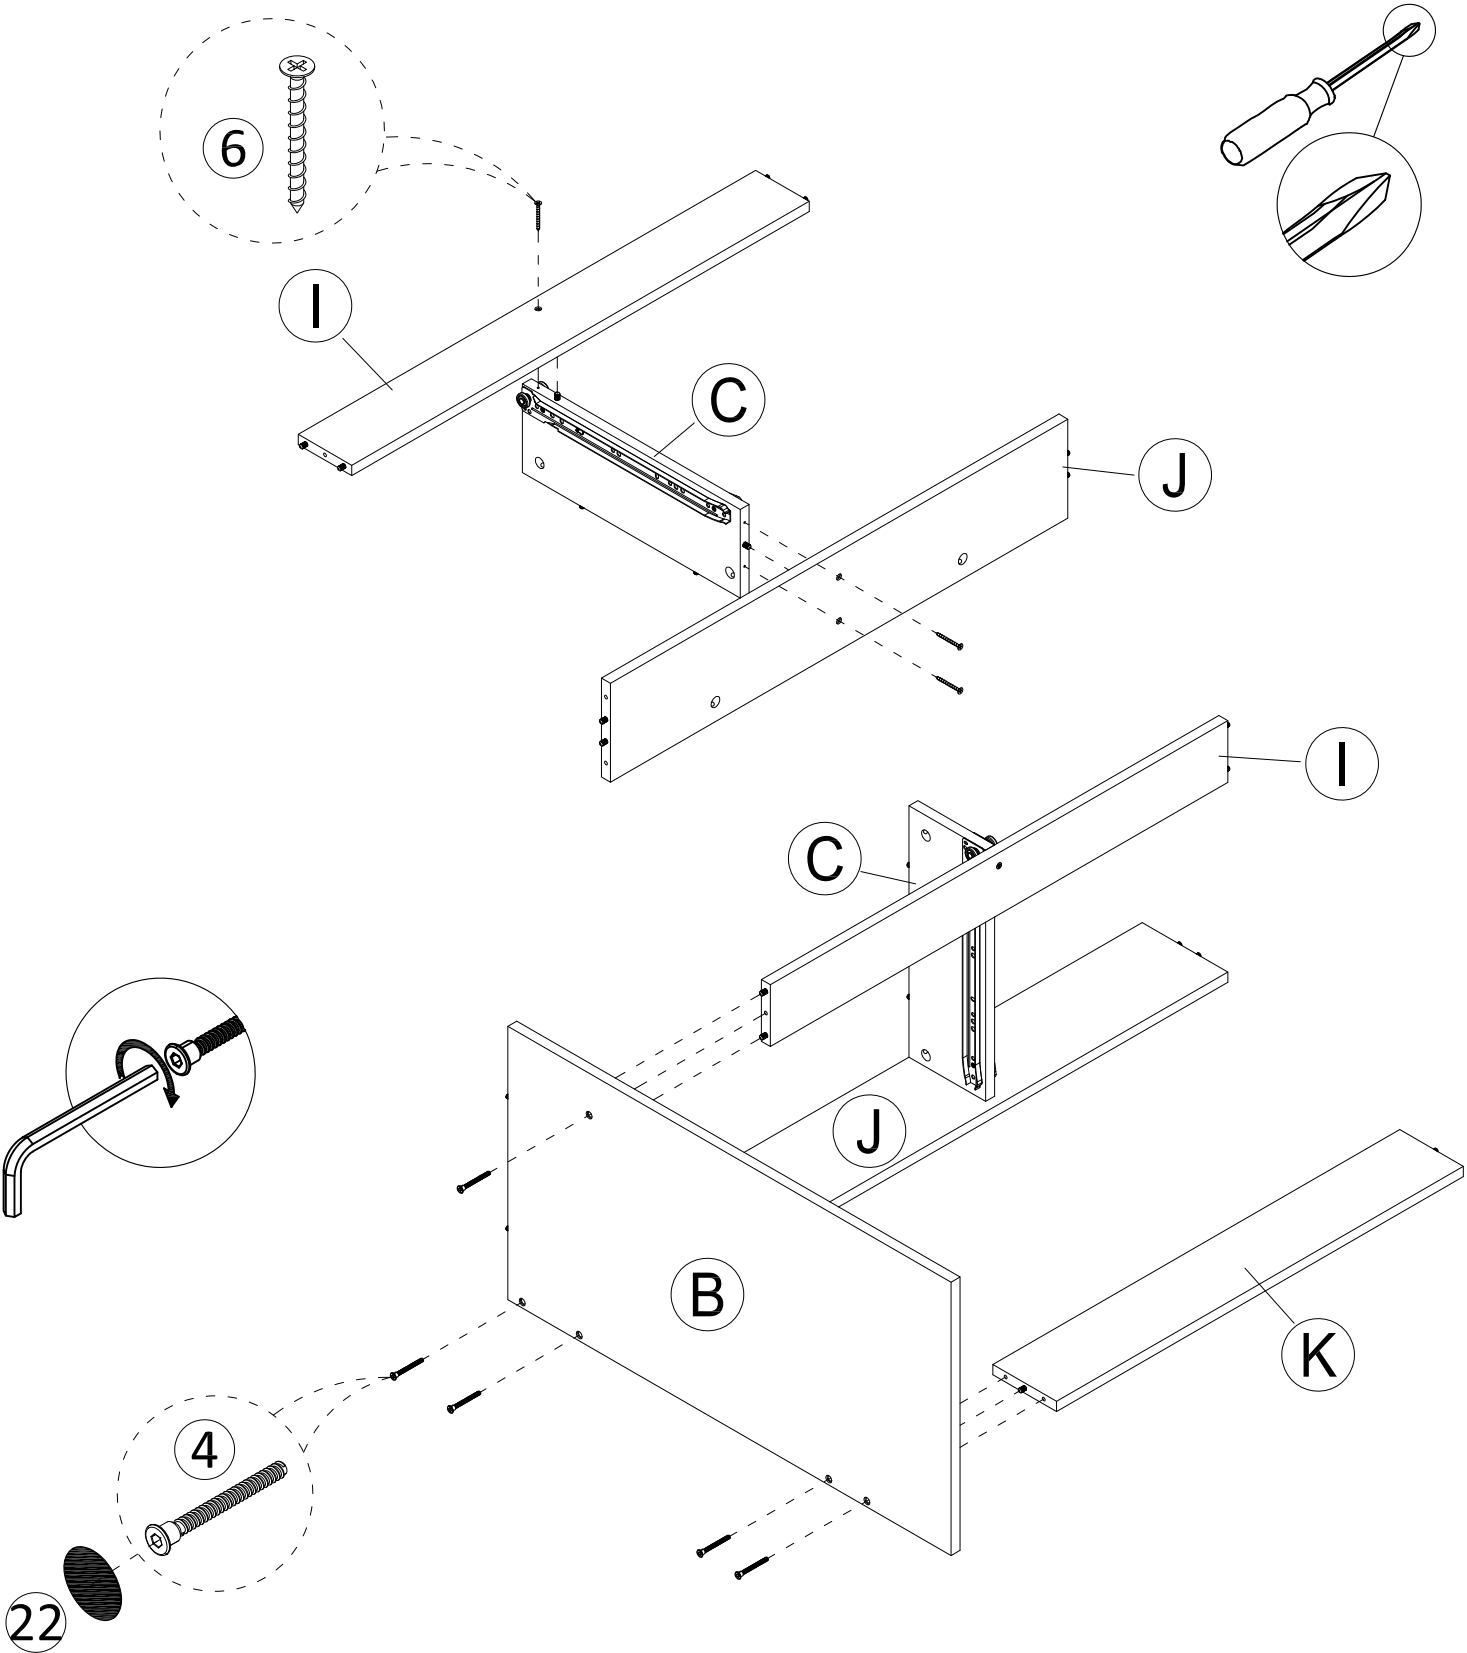






STEP16

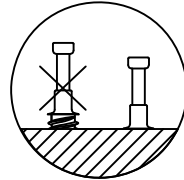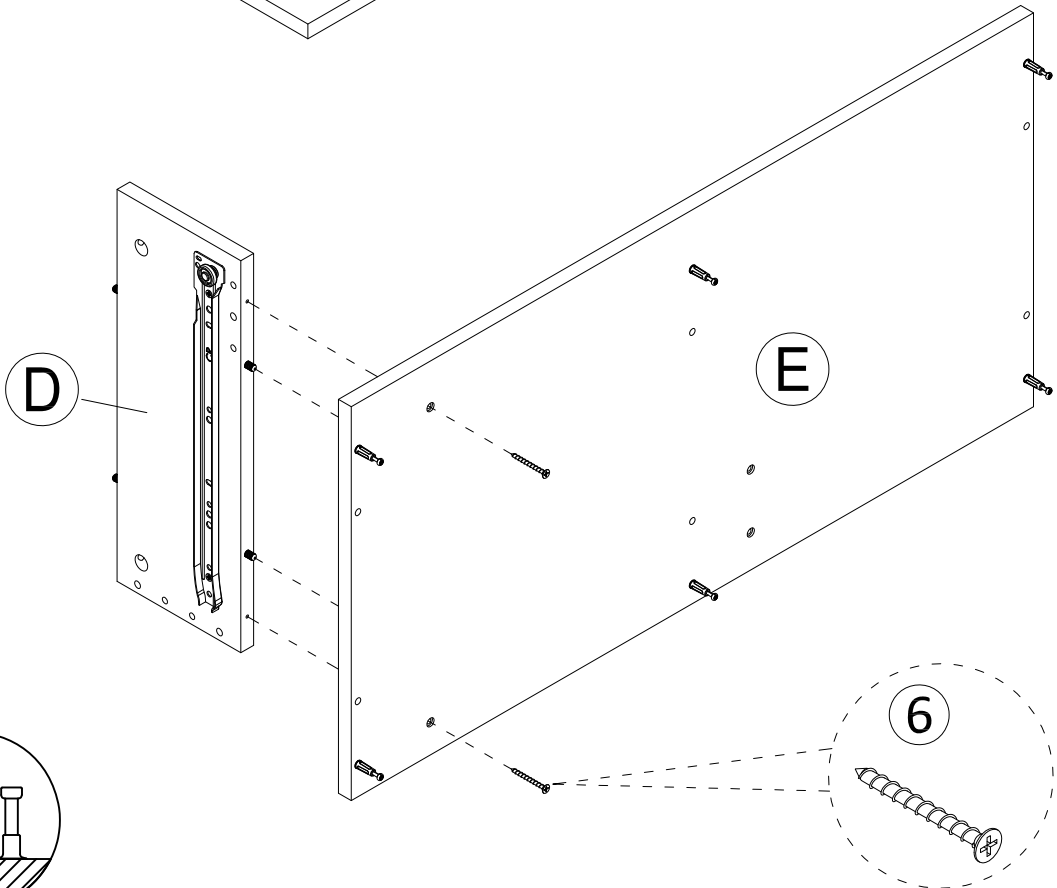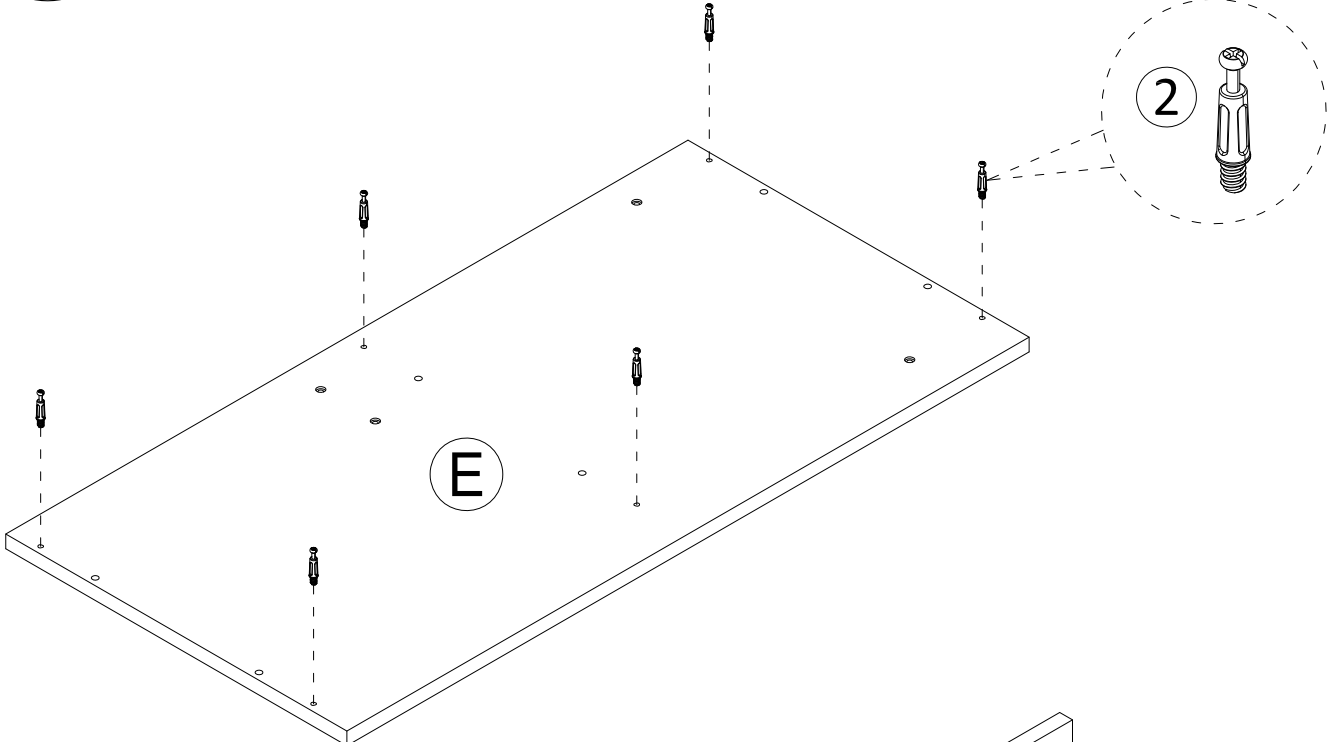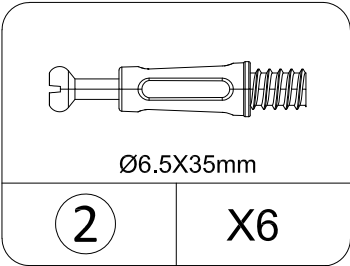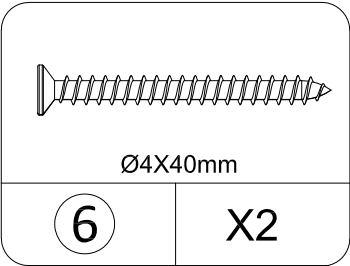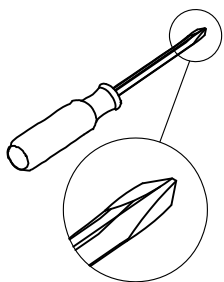


STEP17

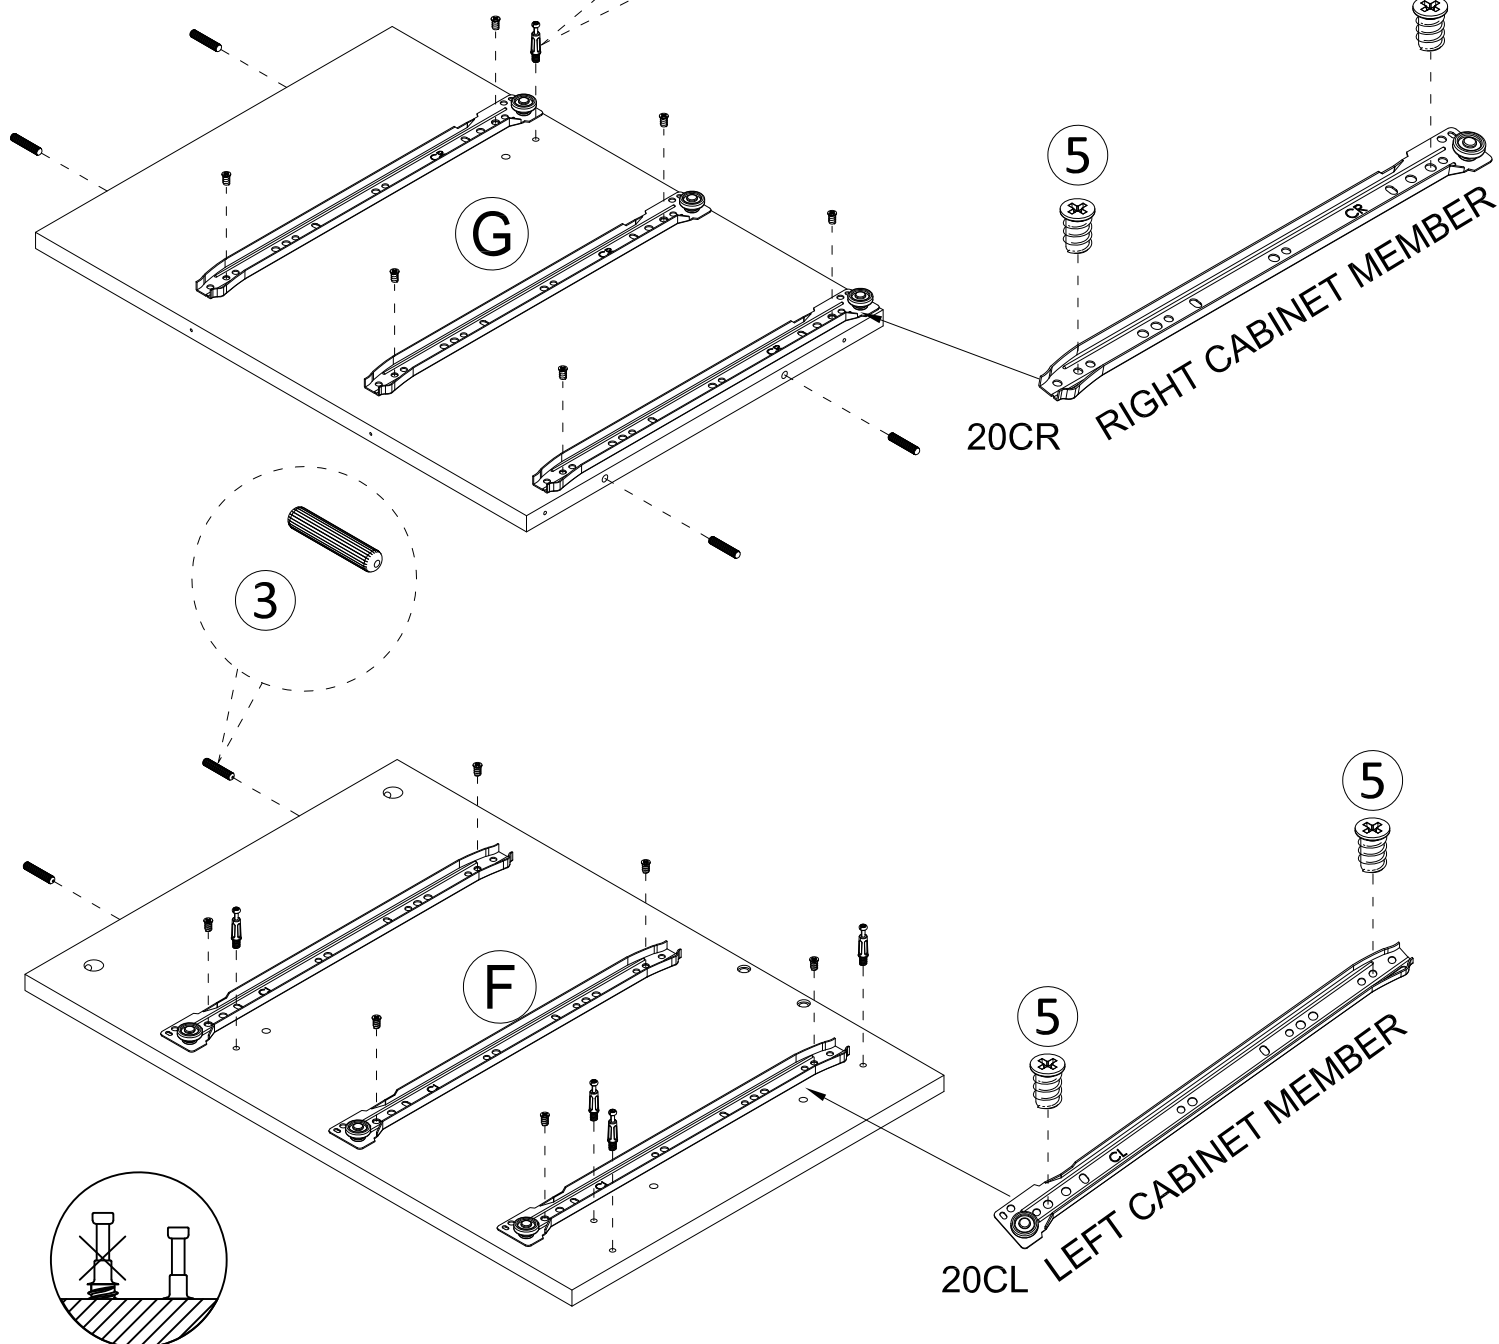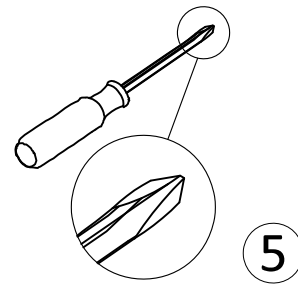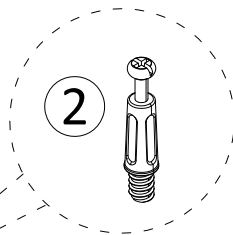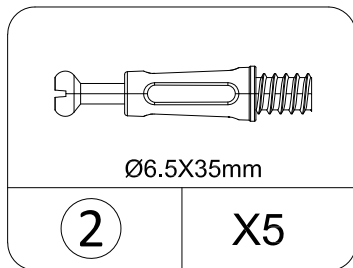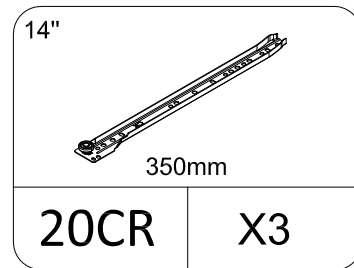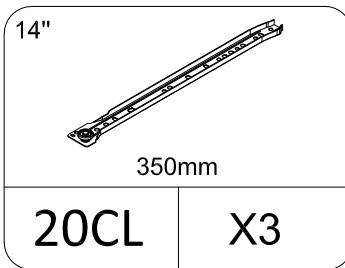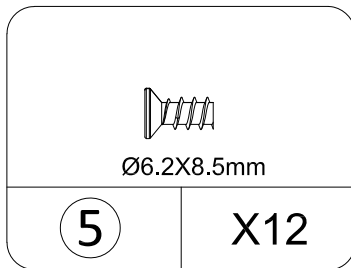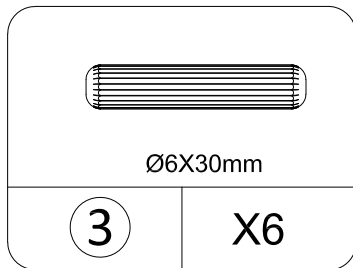

STEP18

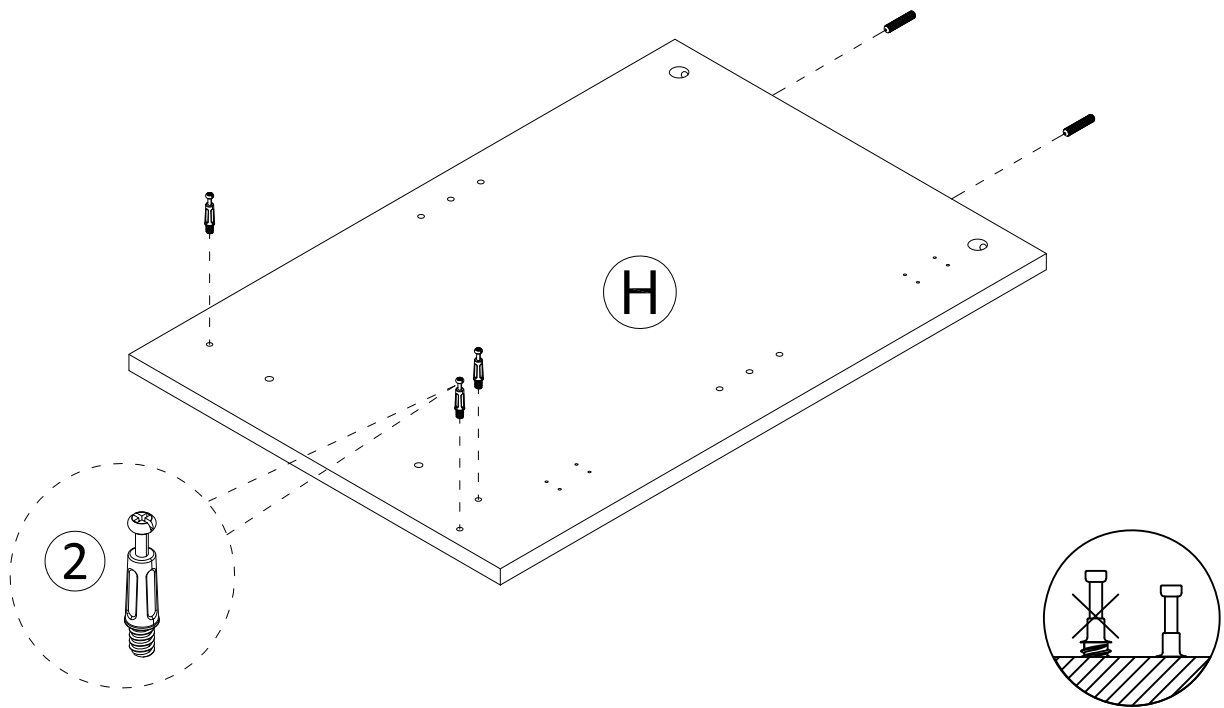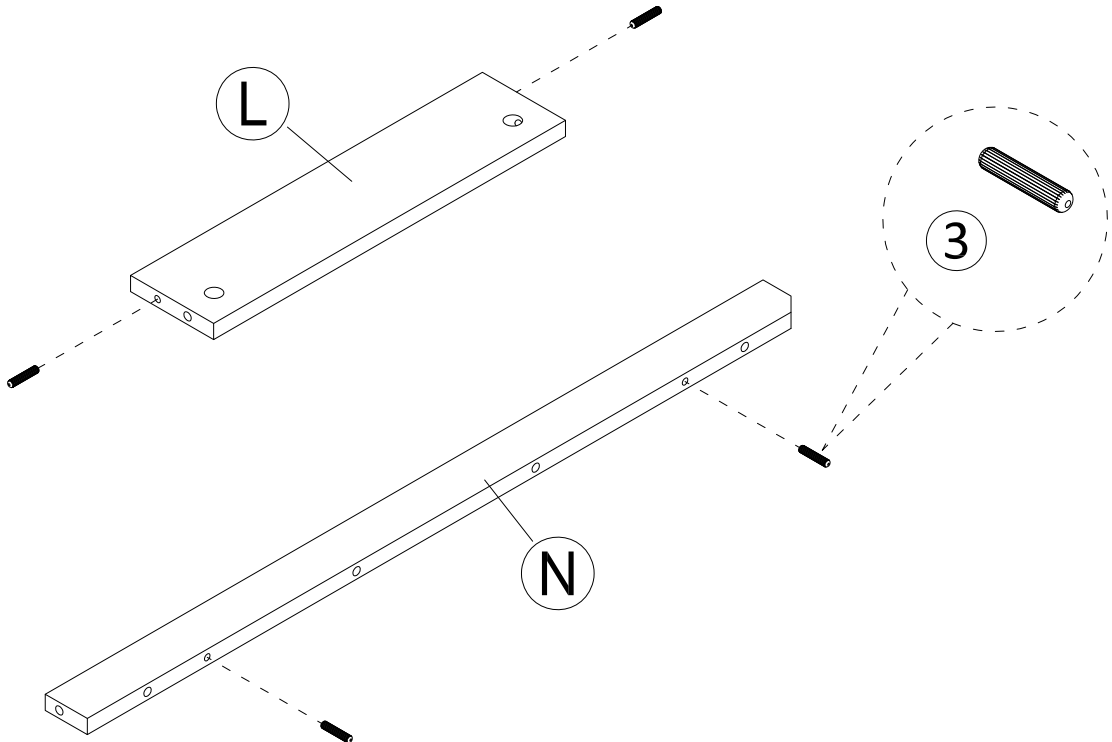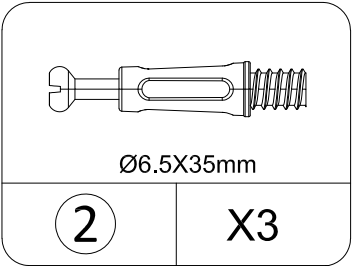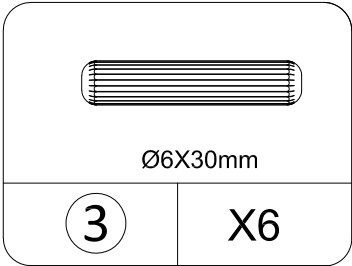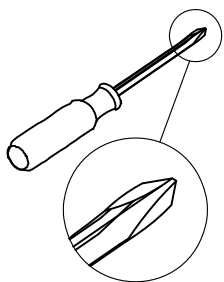


STEP19

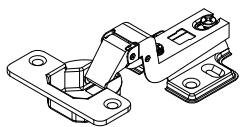

Ø25mm

11


X4



Ø3.5X14mm

7


X8

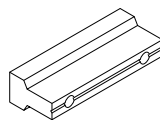

47*11*18mm

13



X2







M4X18mm

15


X4

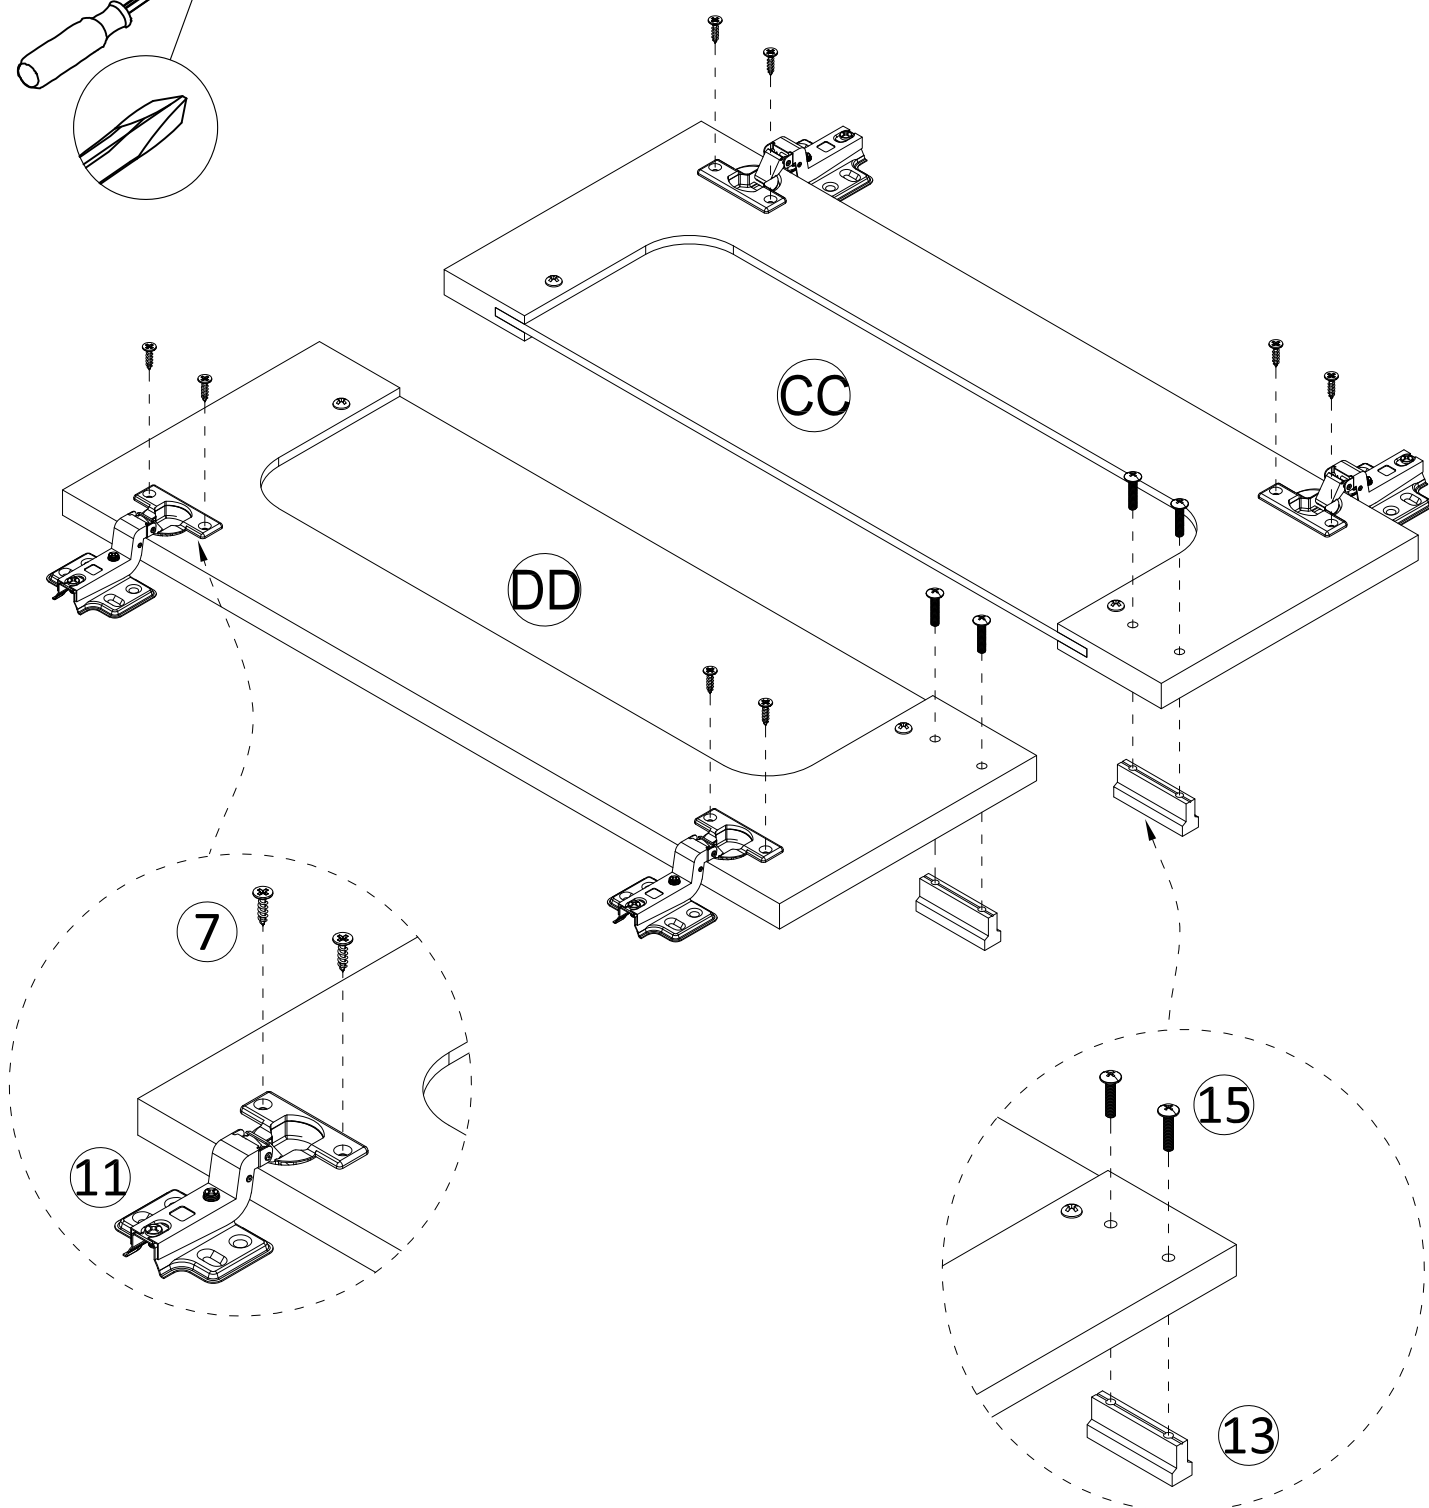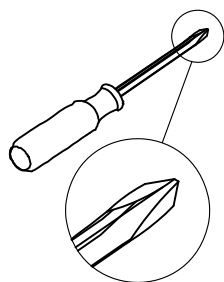

STEP20

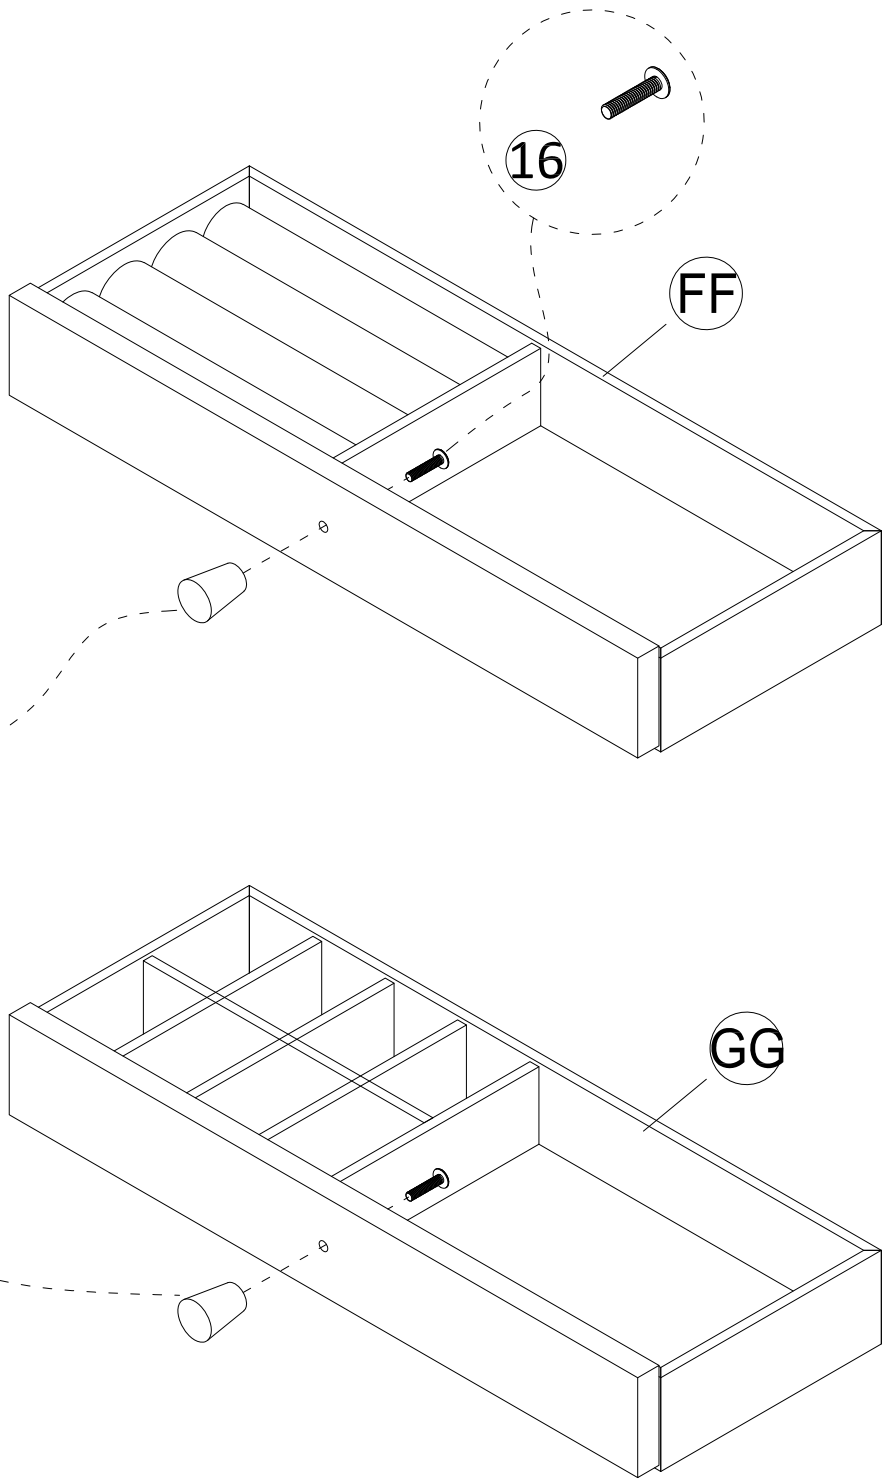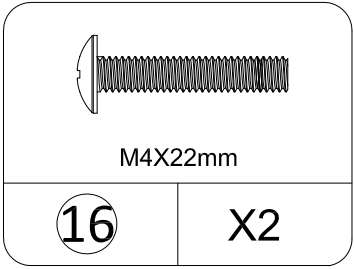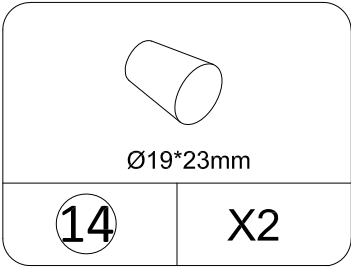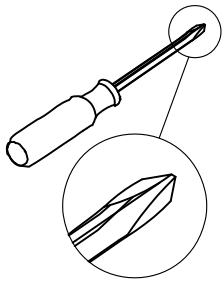


STEP21

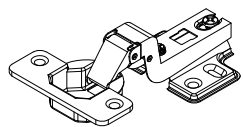

Ø25mm

11


X2



Ø3.5X14mm

7


X8

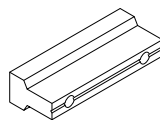

47*11*18mm

13


X2



M4X18mm

15



X4

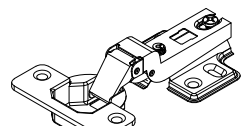

Ø25mm





12

X2

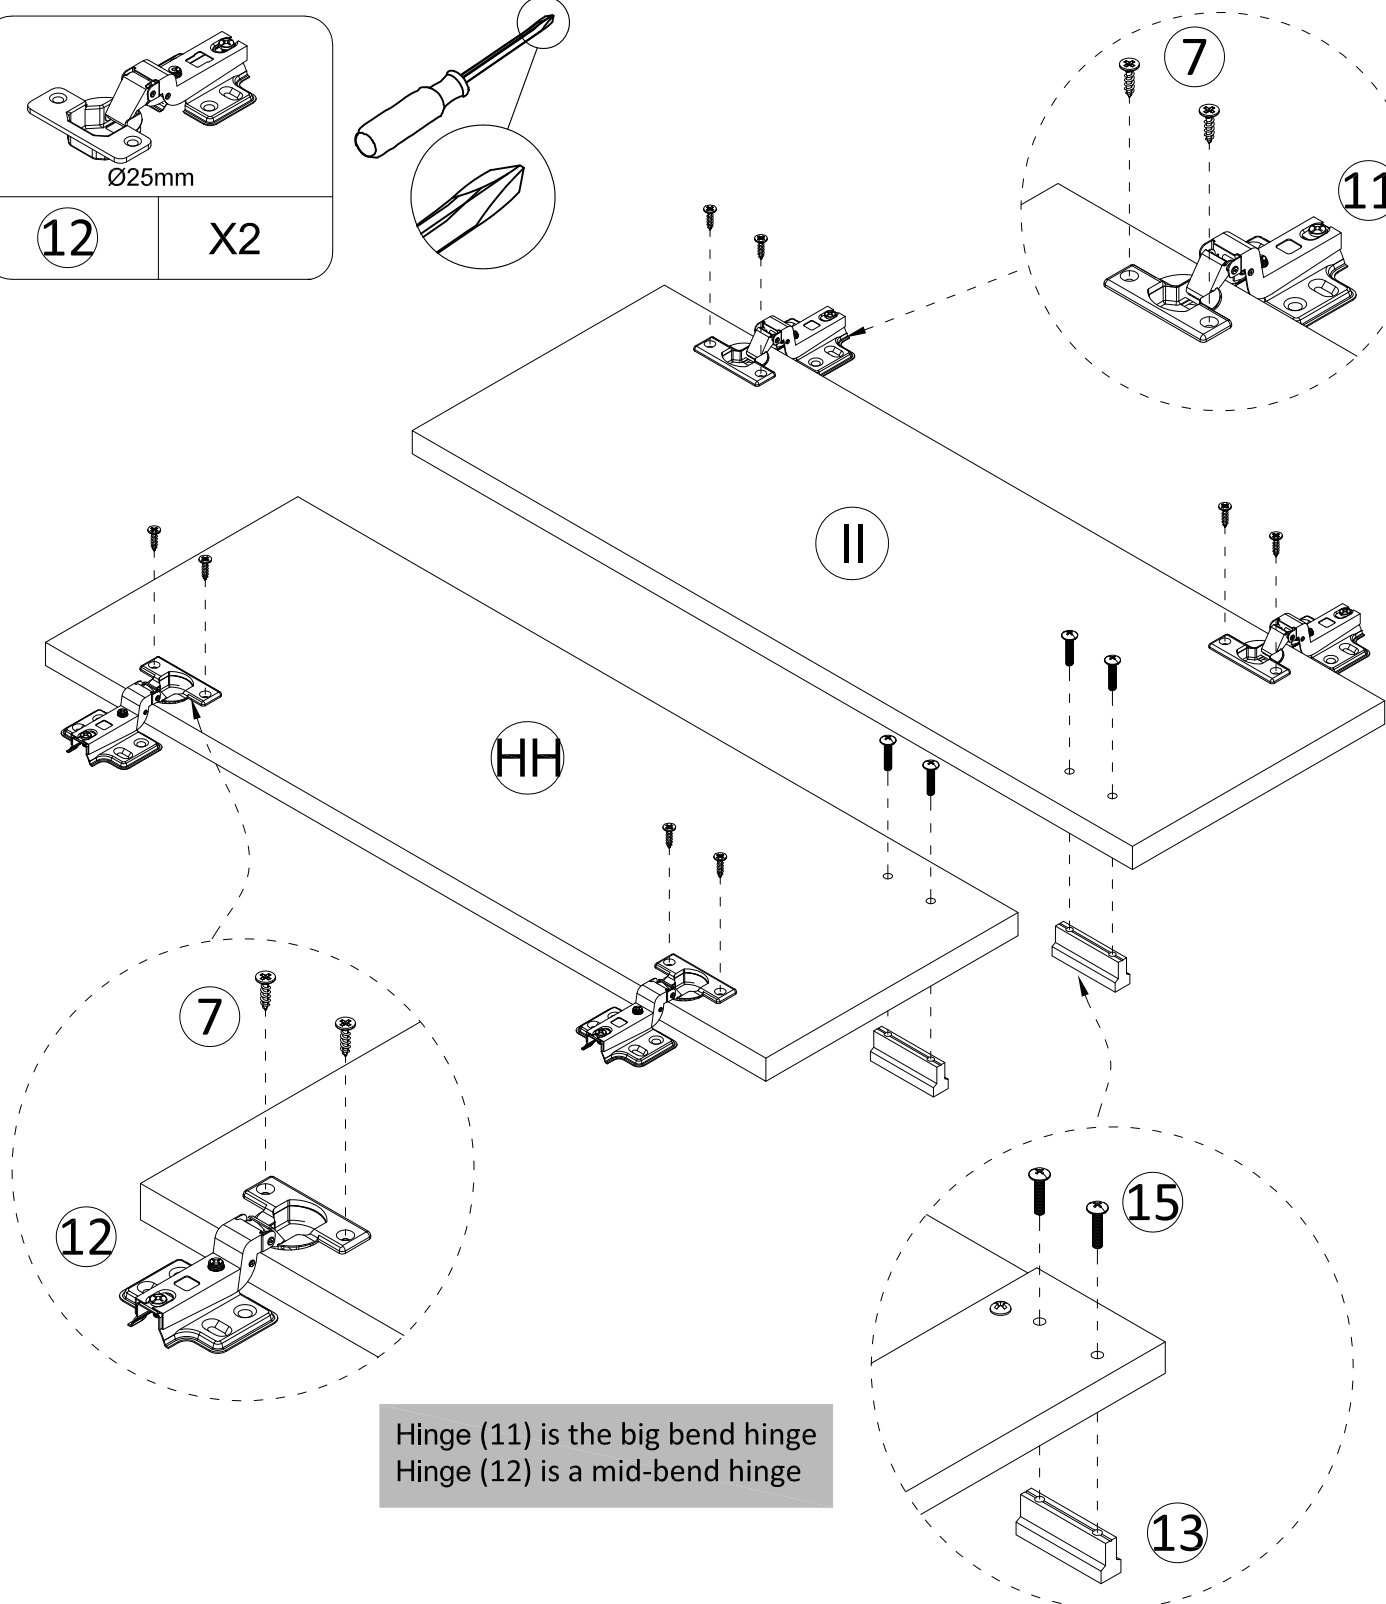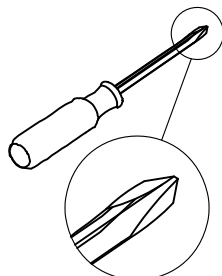


Hinge (11) is the big bend hinge
Hinge (12) is a mid-bend hinge






STEP22

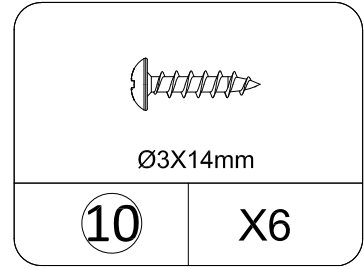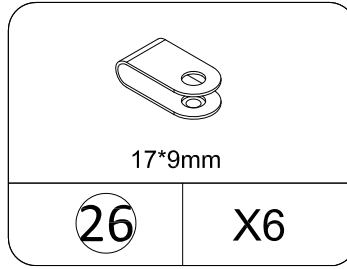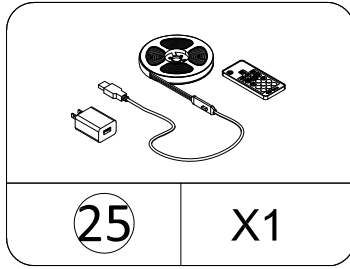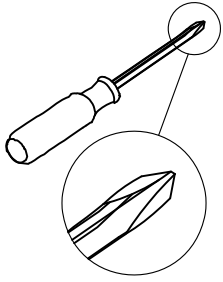






1. Prepare a marker and ruler. Firstly, use a ruler to measure the distance between the back edges of the top plate to be 10mm, and draw an auxiliary line for pasting the light strip.
2. Tear off the 3M adhesive tape on the back of the light strip and stick it inward along the previously marked line.
3. Clamp the light strip buckle (26) onto the light strip, align it with the corresponding hole, and then screw in the screw (10)

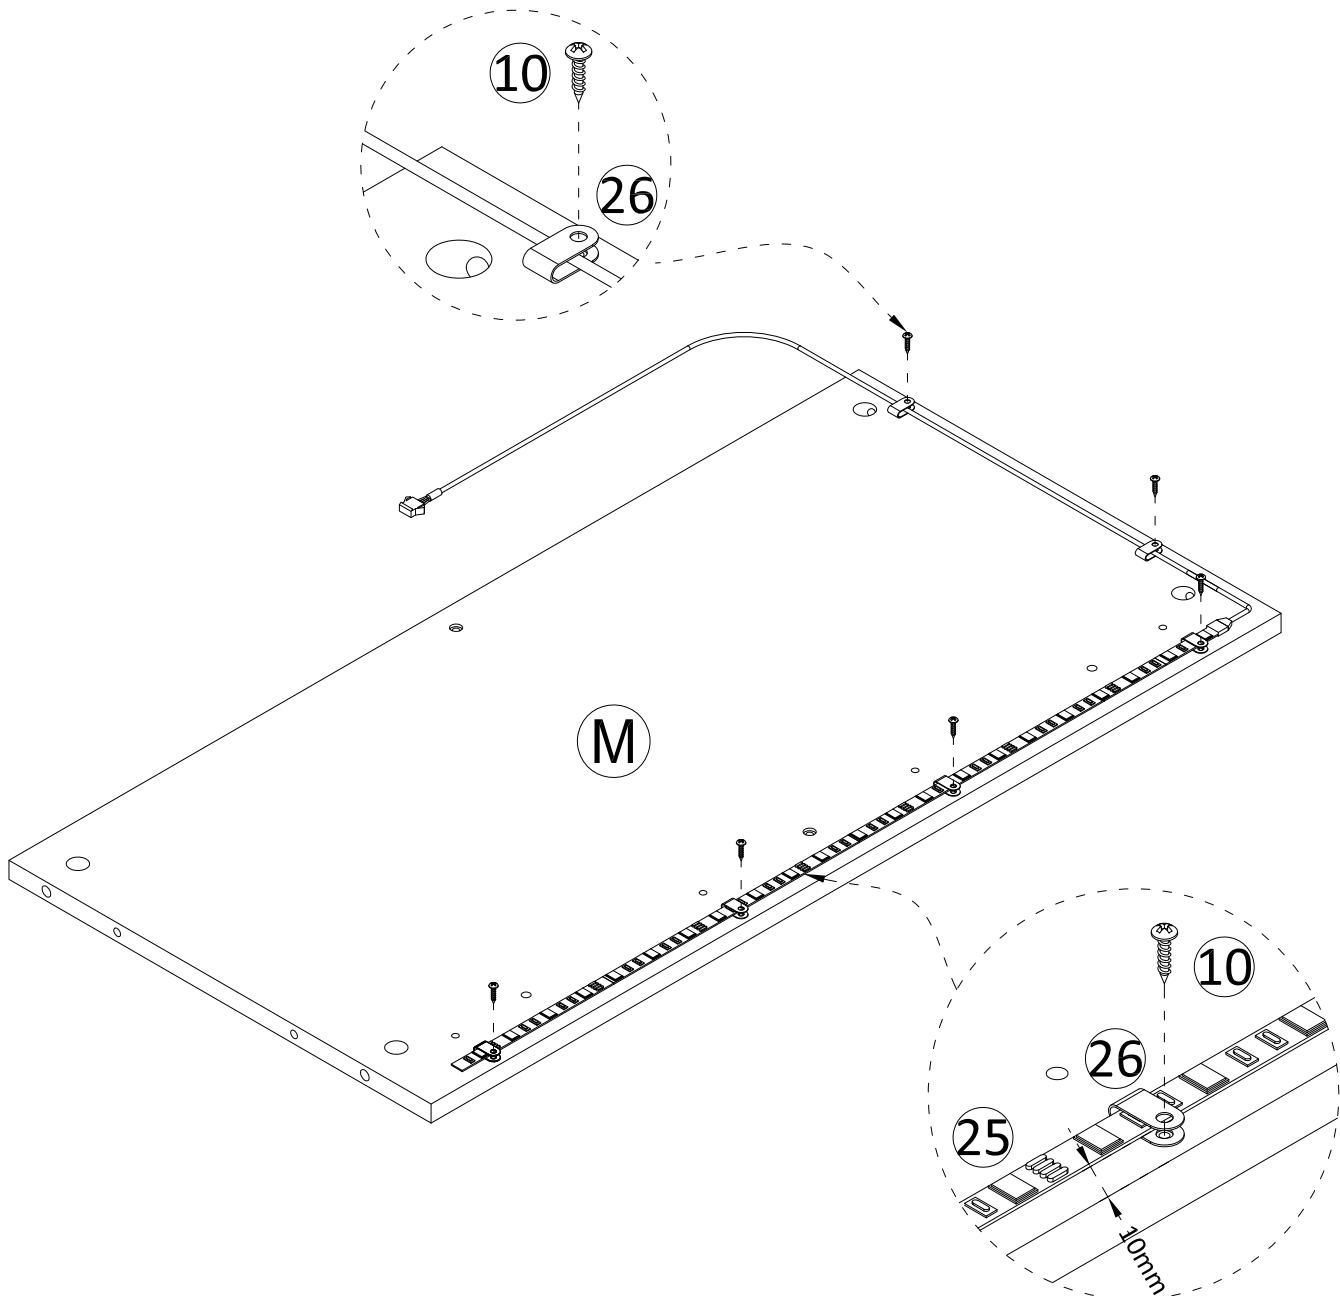


STEP23

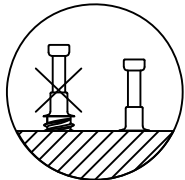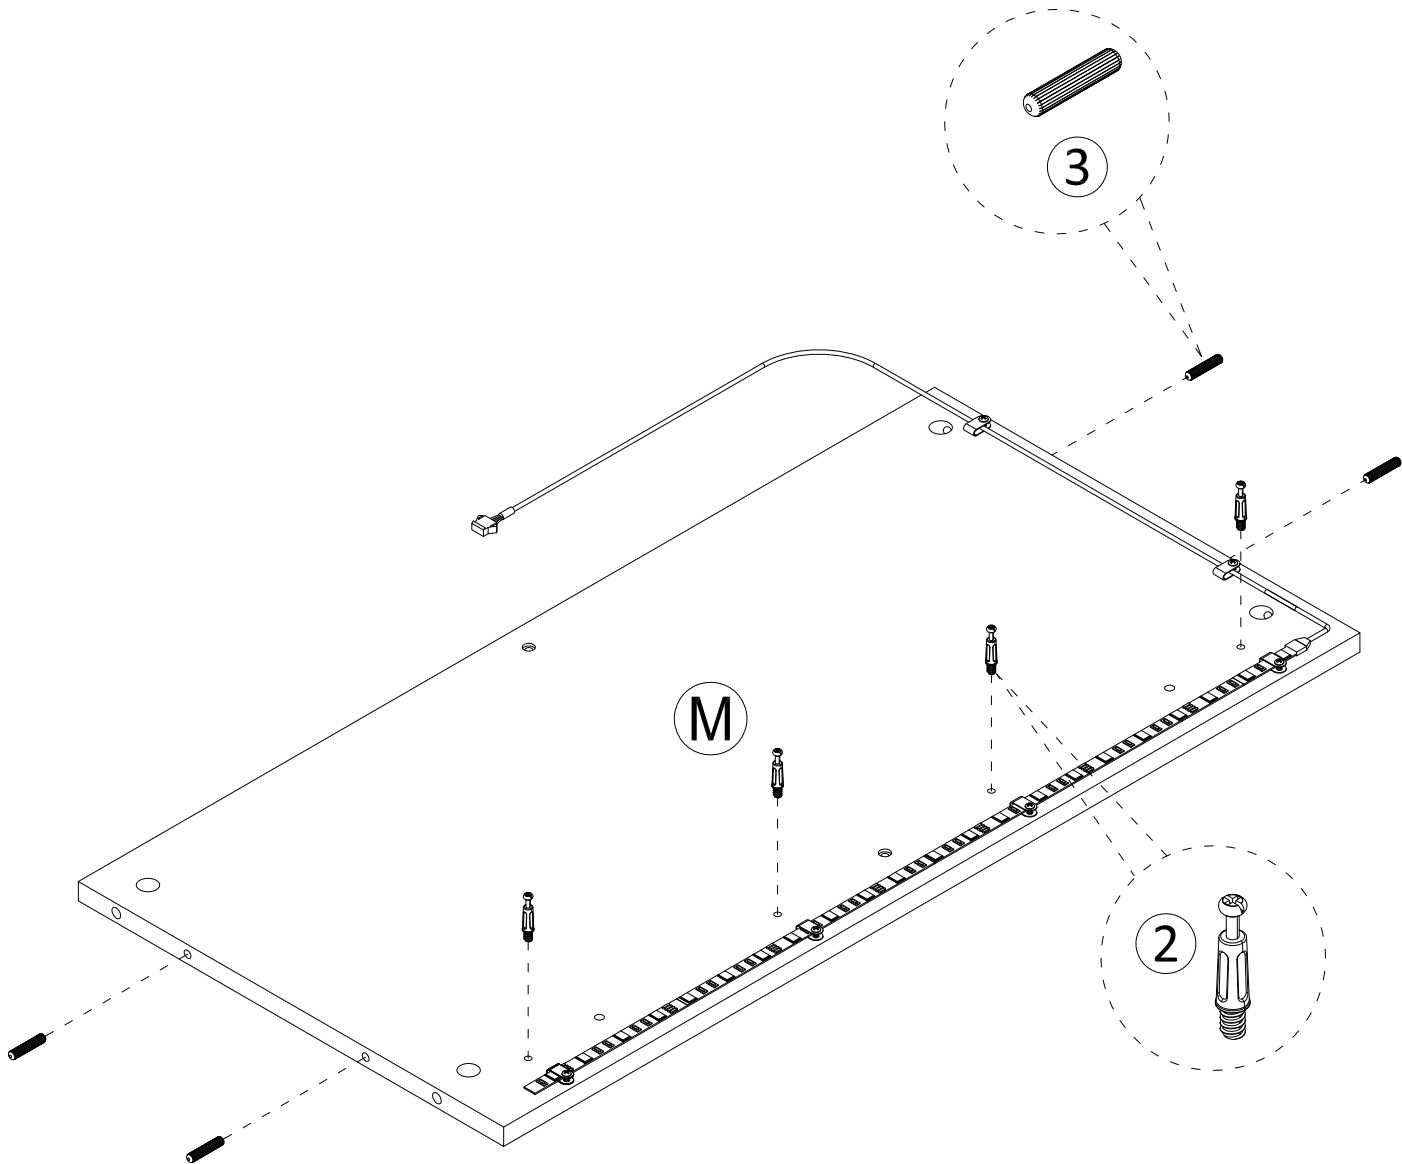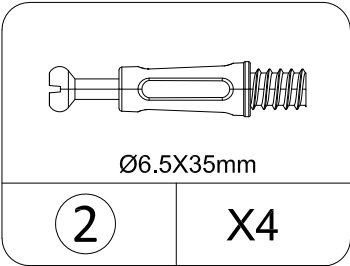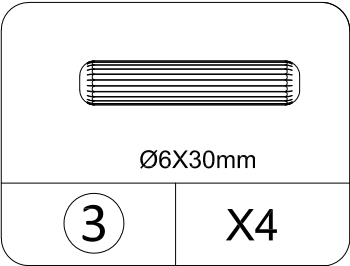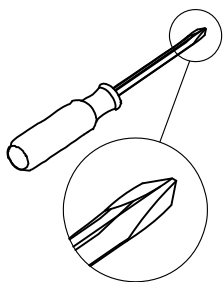


STEP24

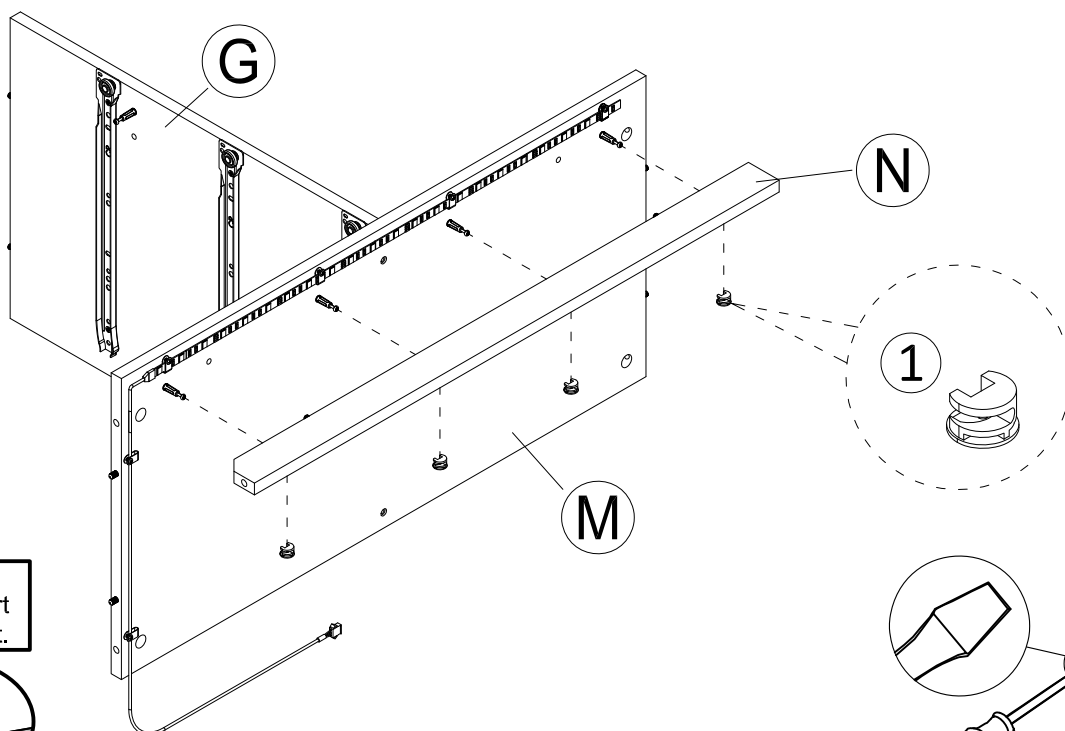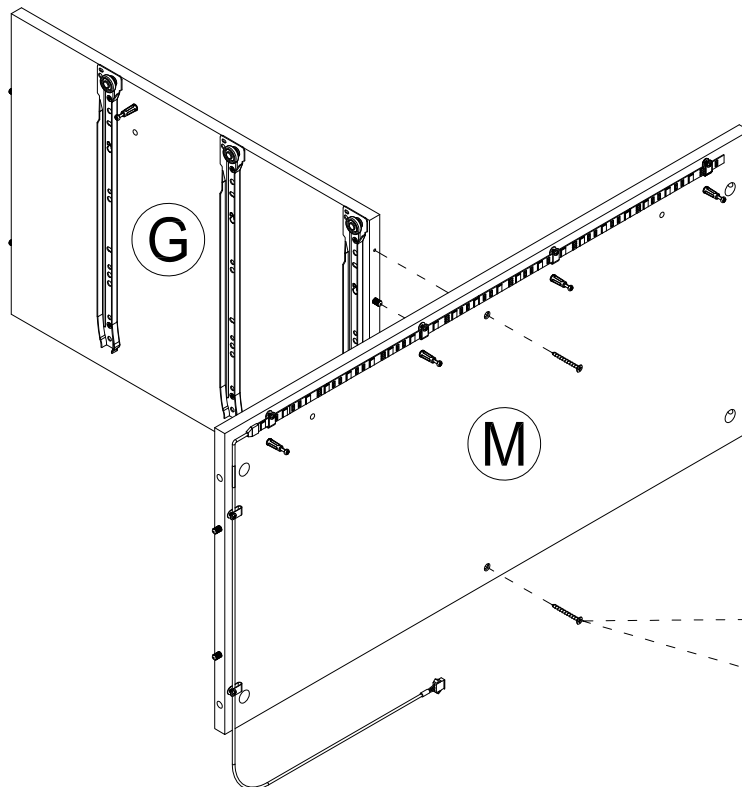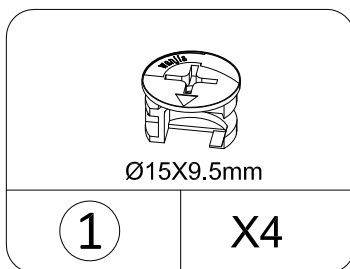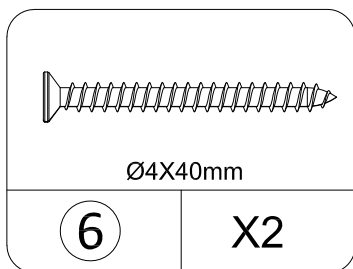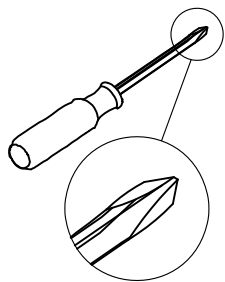




Insert the cam bolt into the hole first, then insert the cam lock and lock it.

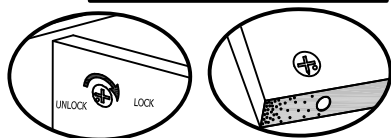


Proper orientation of CAM LOCK

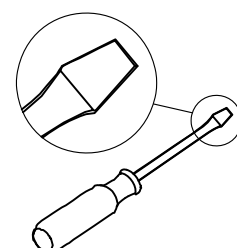

STEP25

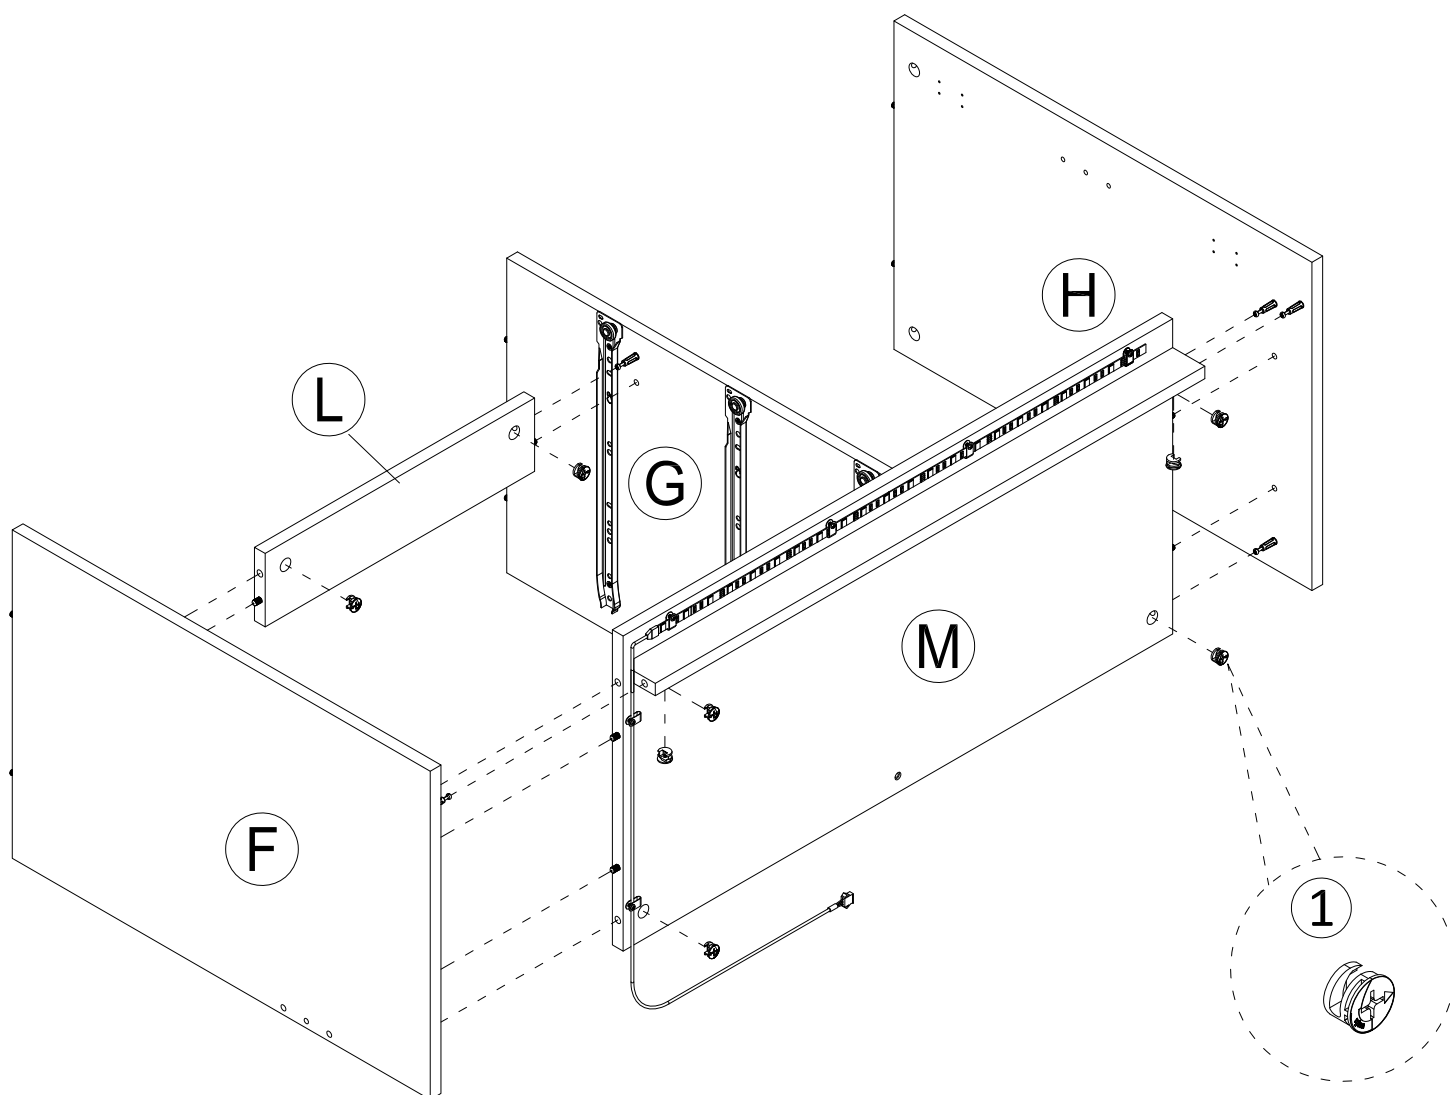
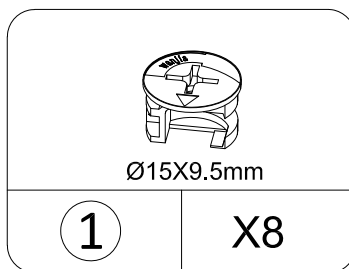
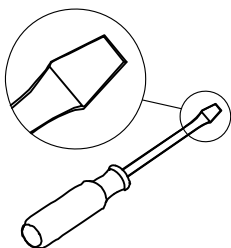


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

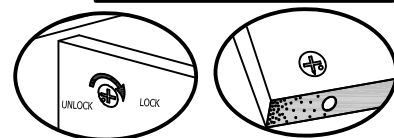


Proper orientation of CAM LOCK

STEP26

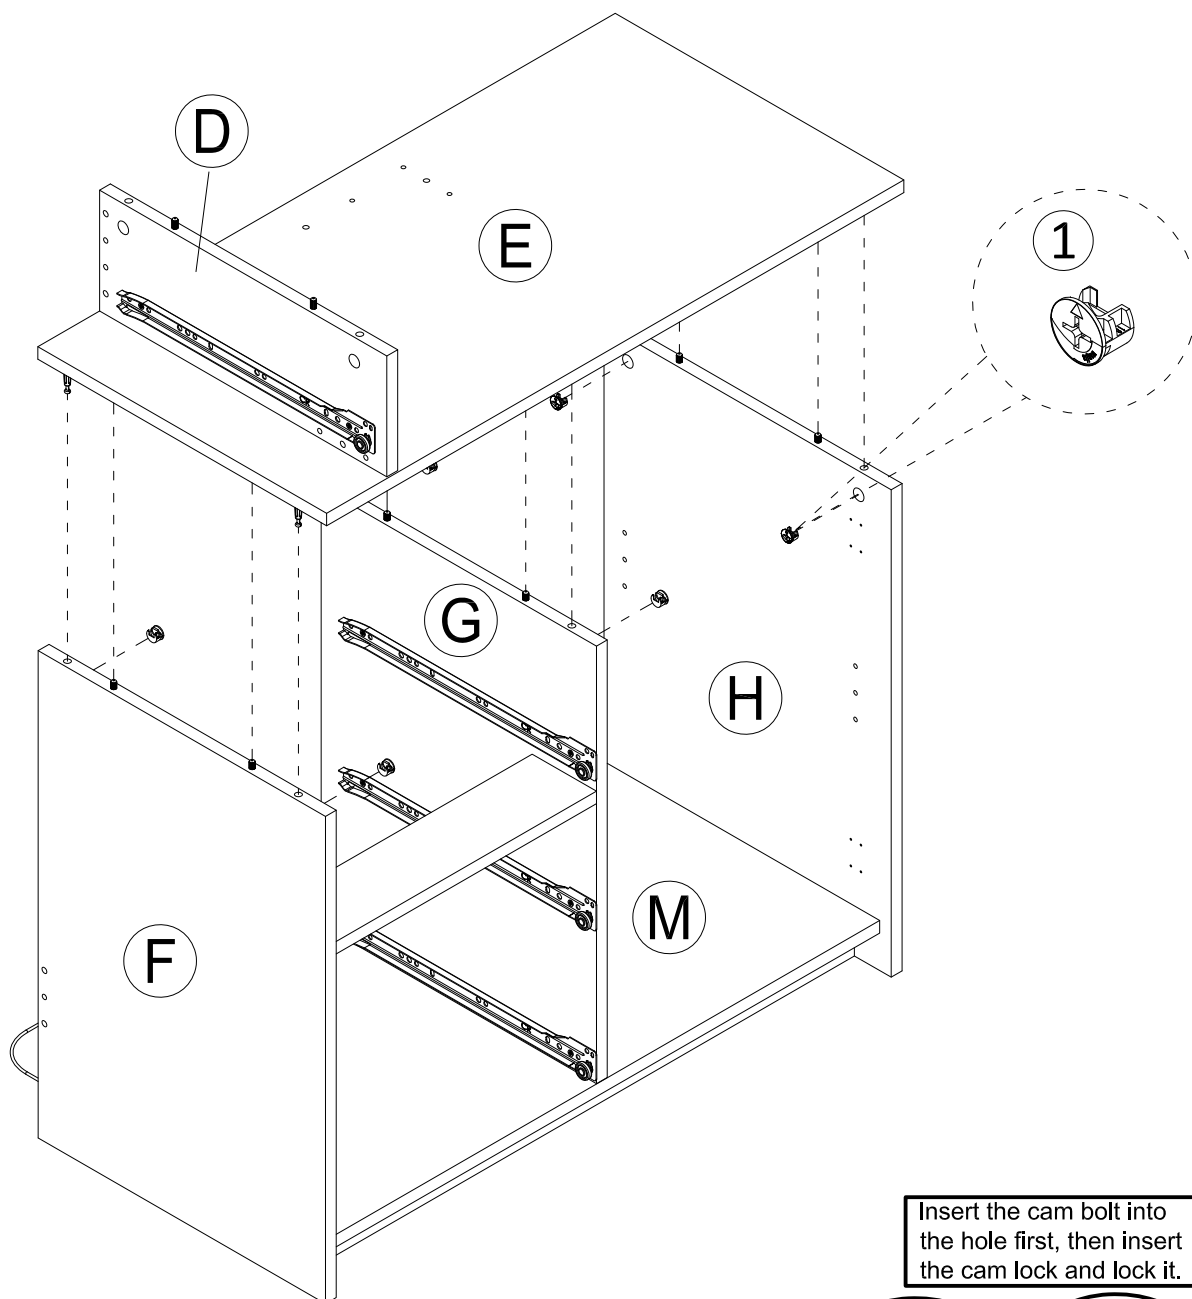
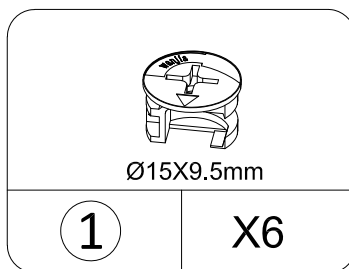
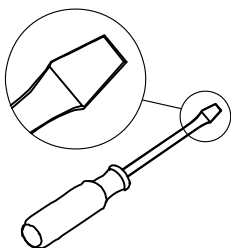


Insert the cam bolt into the hole first, then insert the cam lock and lock it.




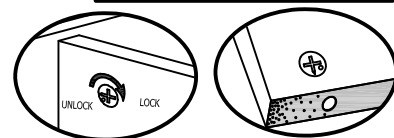


Proper orientation of CAM LOCK



STEP27

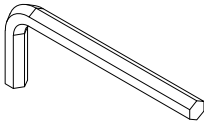 Ø6.5X35mm		 Ø6.3X50mm		 Ø21mm		 4X65mm	
2	X2	4	X5	22	X3	23	X1


THIS STEP REQUIRES 2 PEOPLE

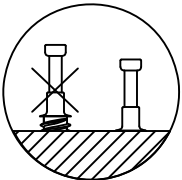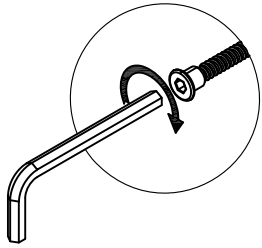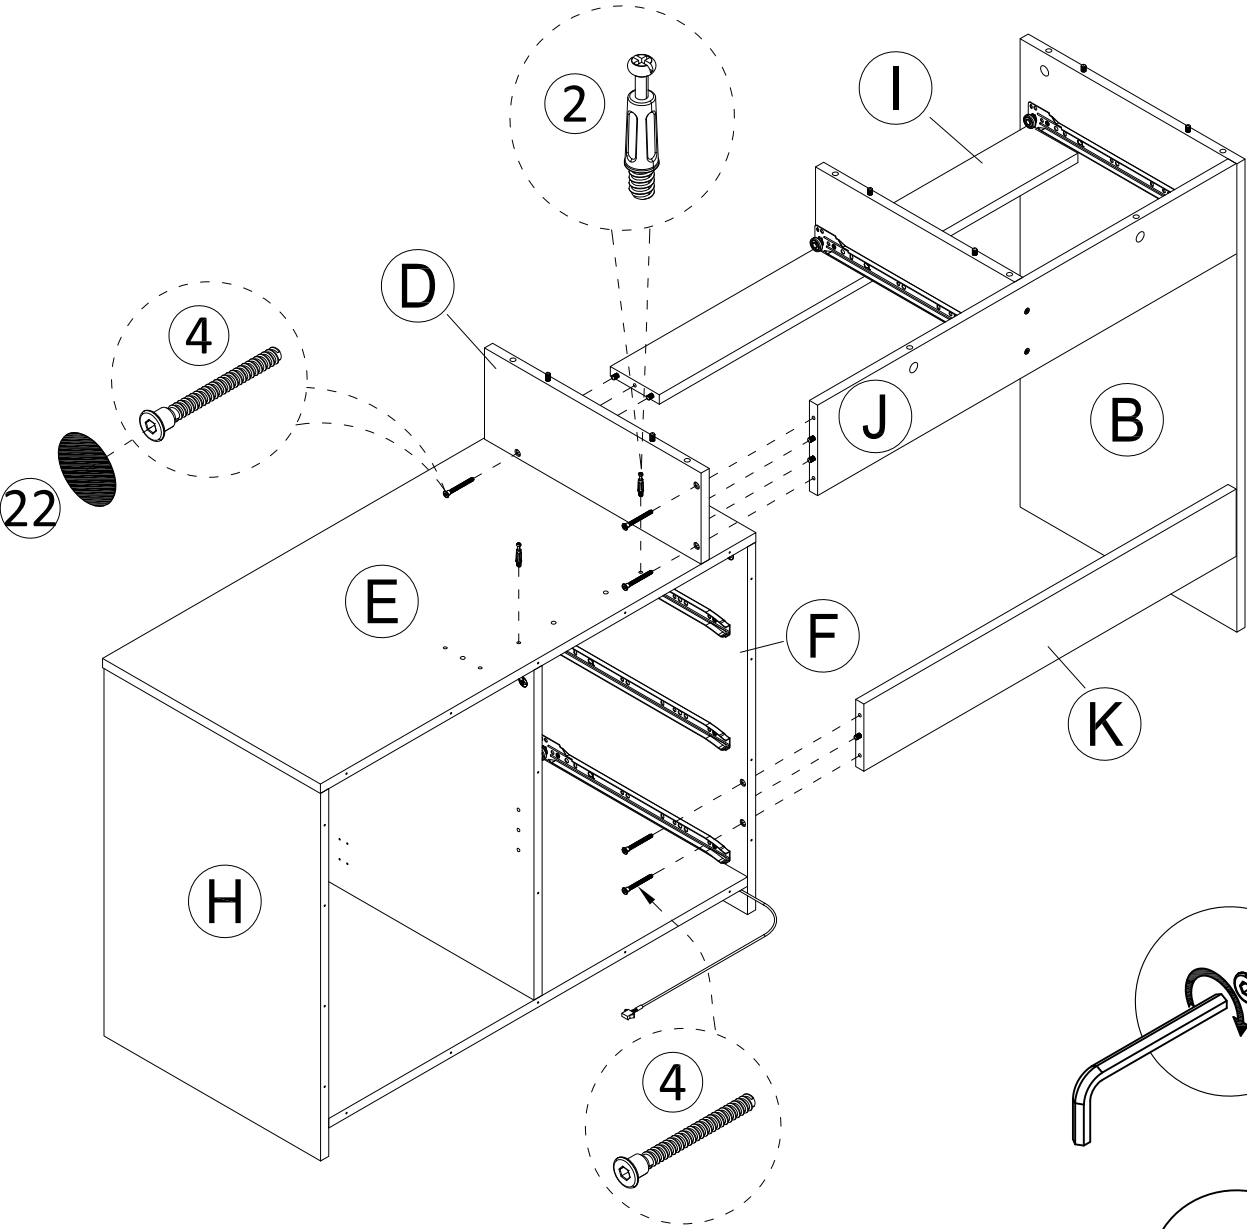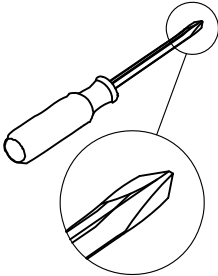


STEP28

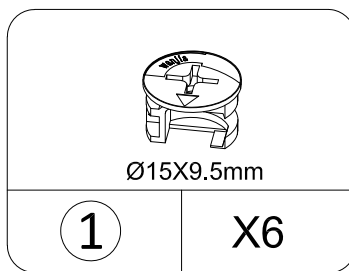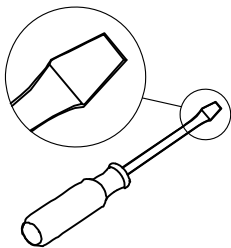

THIS STEP REQUIRES 2 PEOPLE







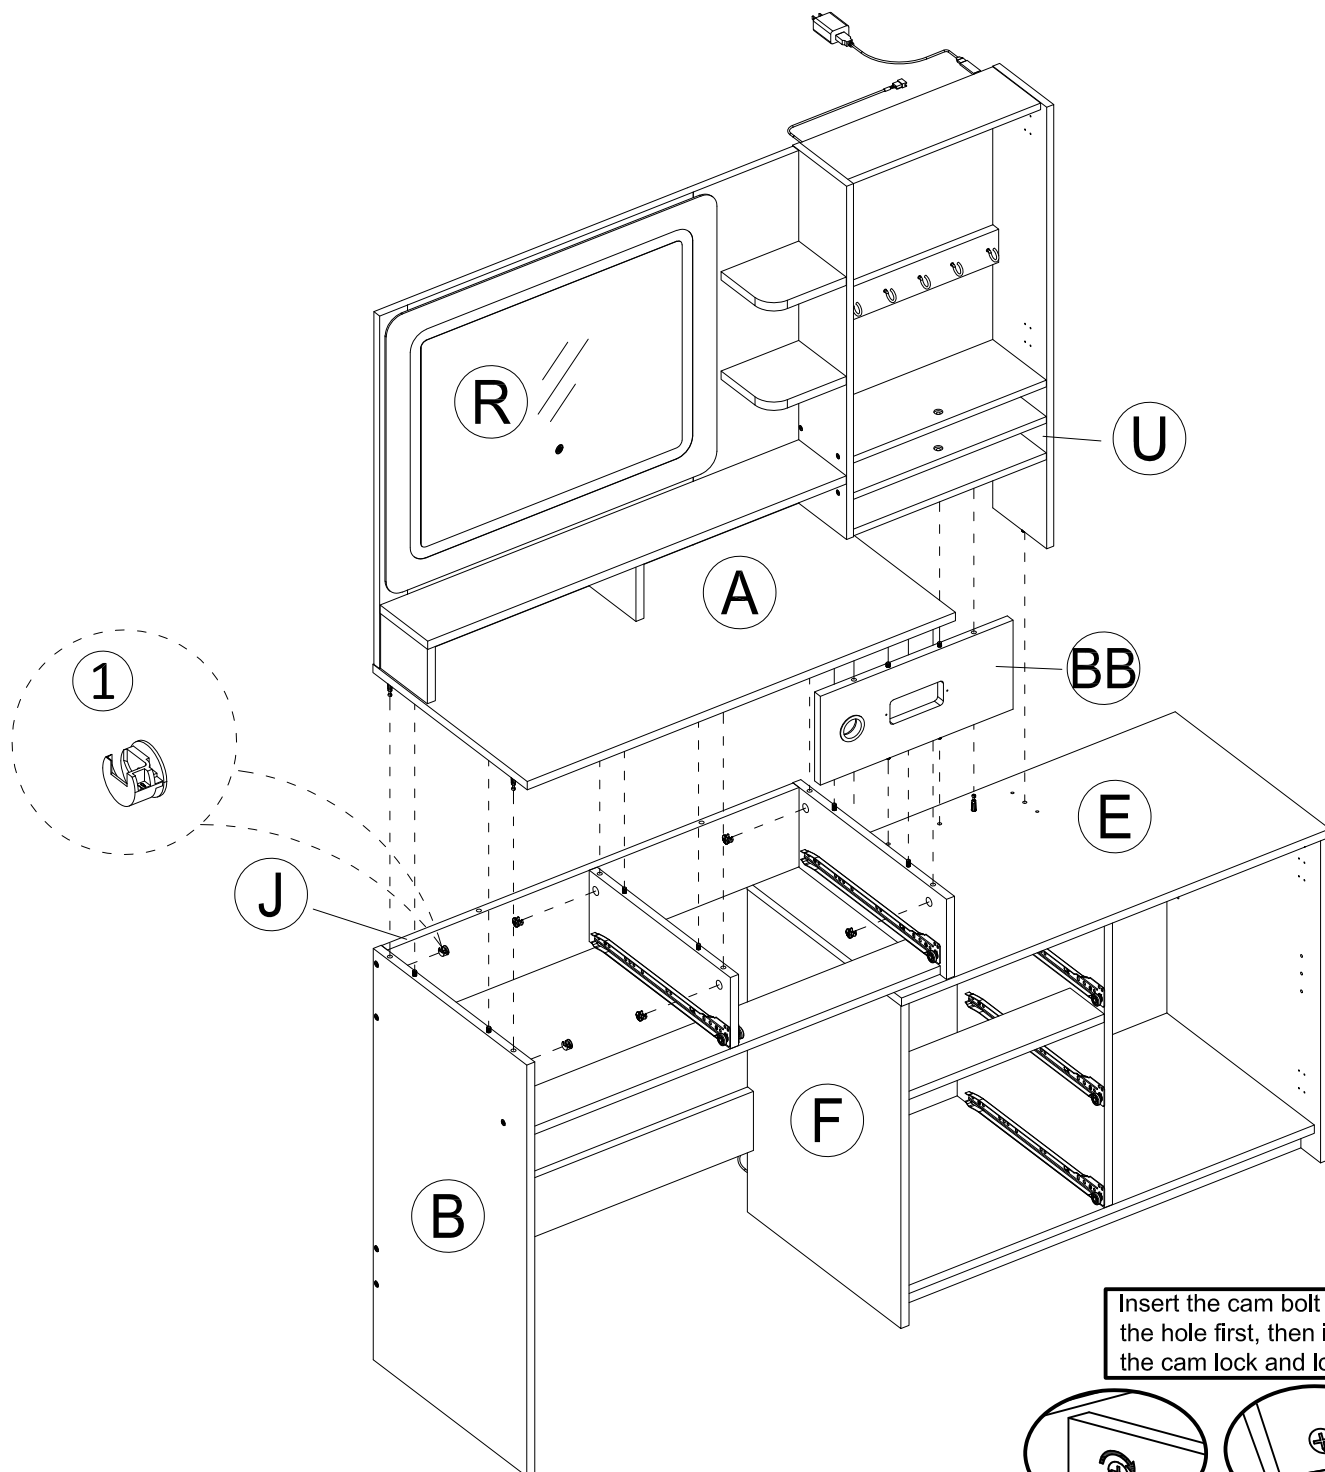


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

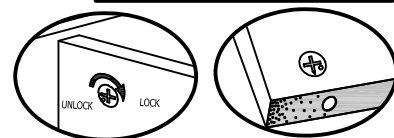


Proper orientation of CAM LOCK

STEP29

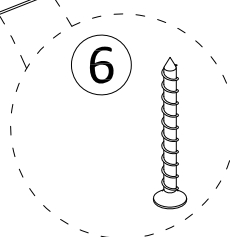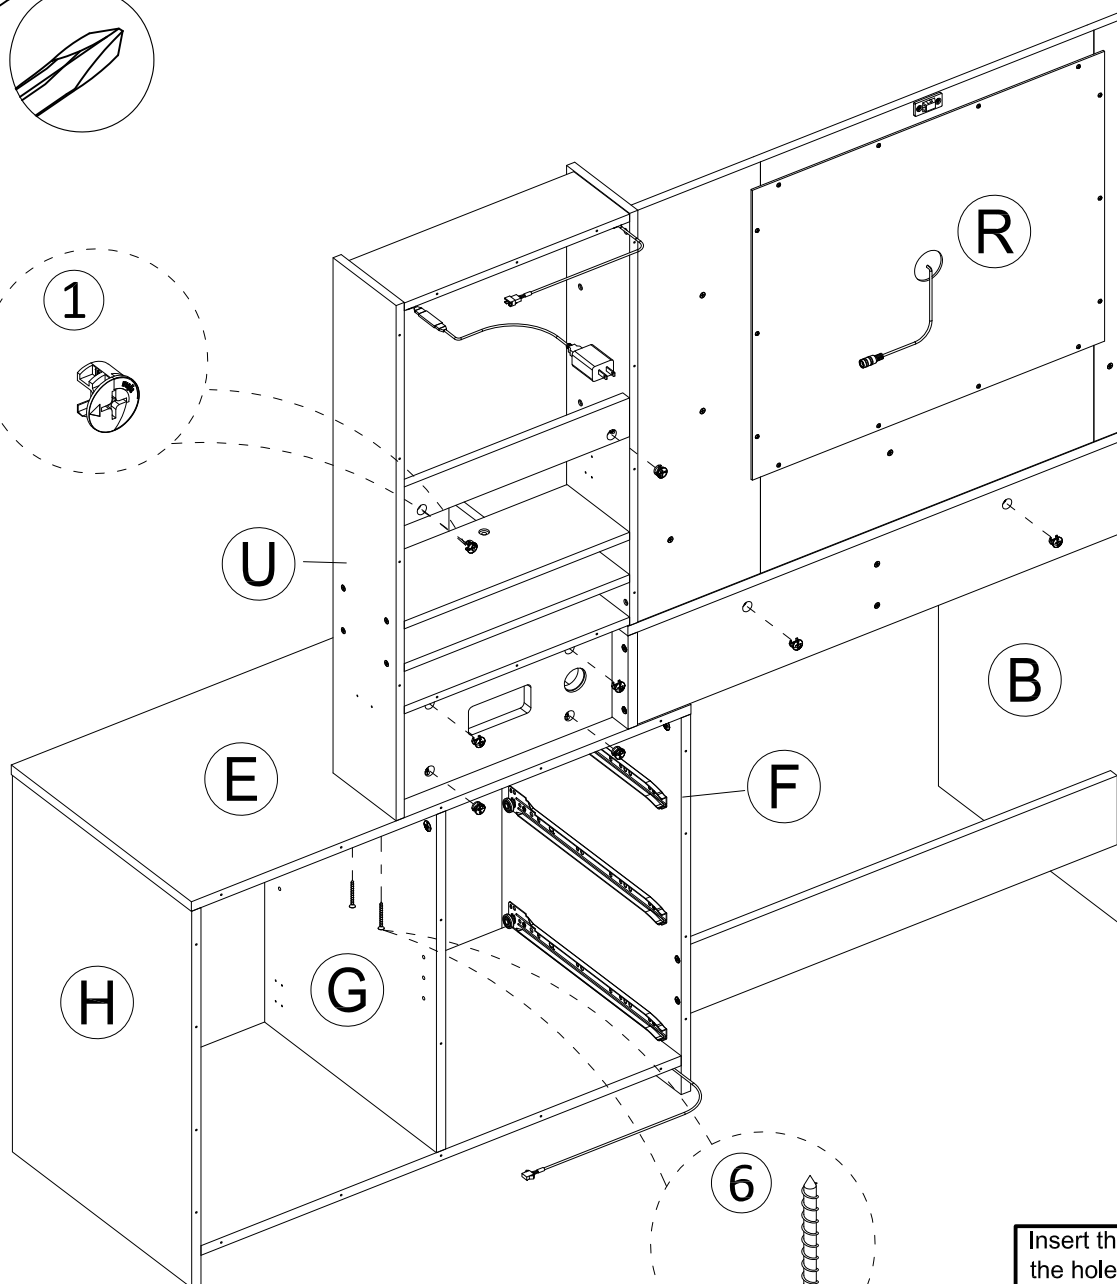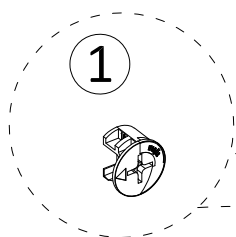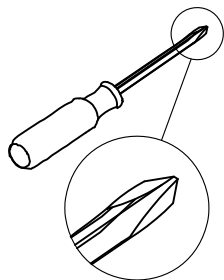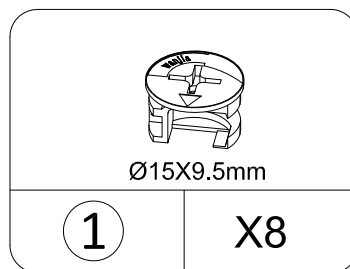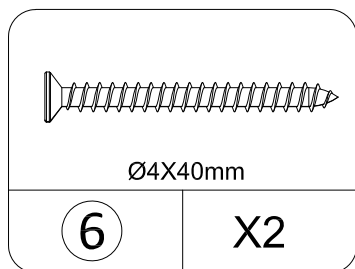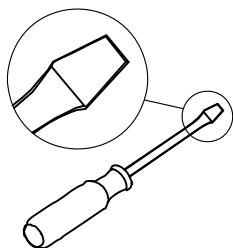


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

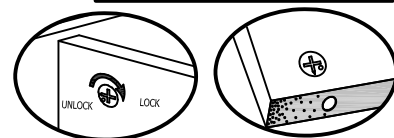

Proper orientation of CAM LOCK


STEP30

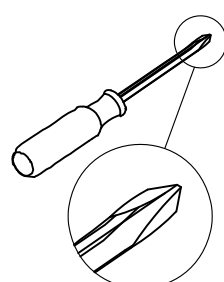




Ø11 (Ø8) *8mm

29	X4
----	----







Ø3X14mm




10	X4
----	----

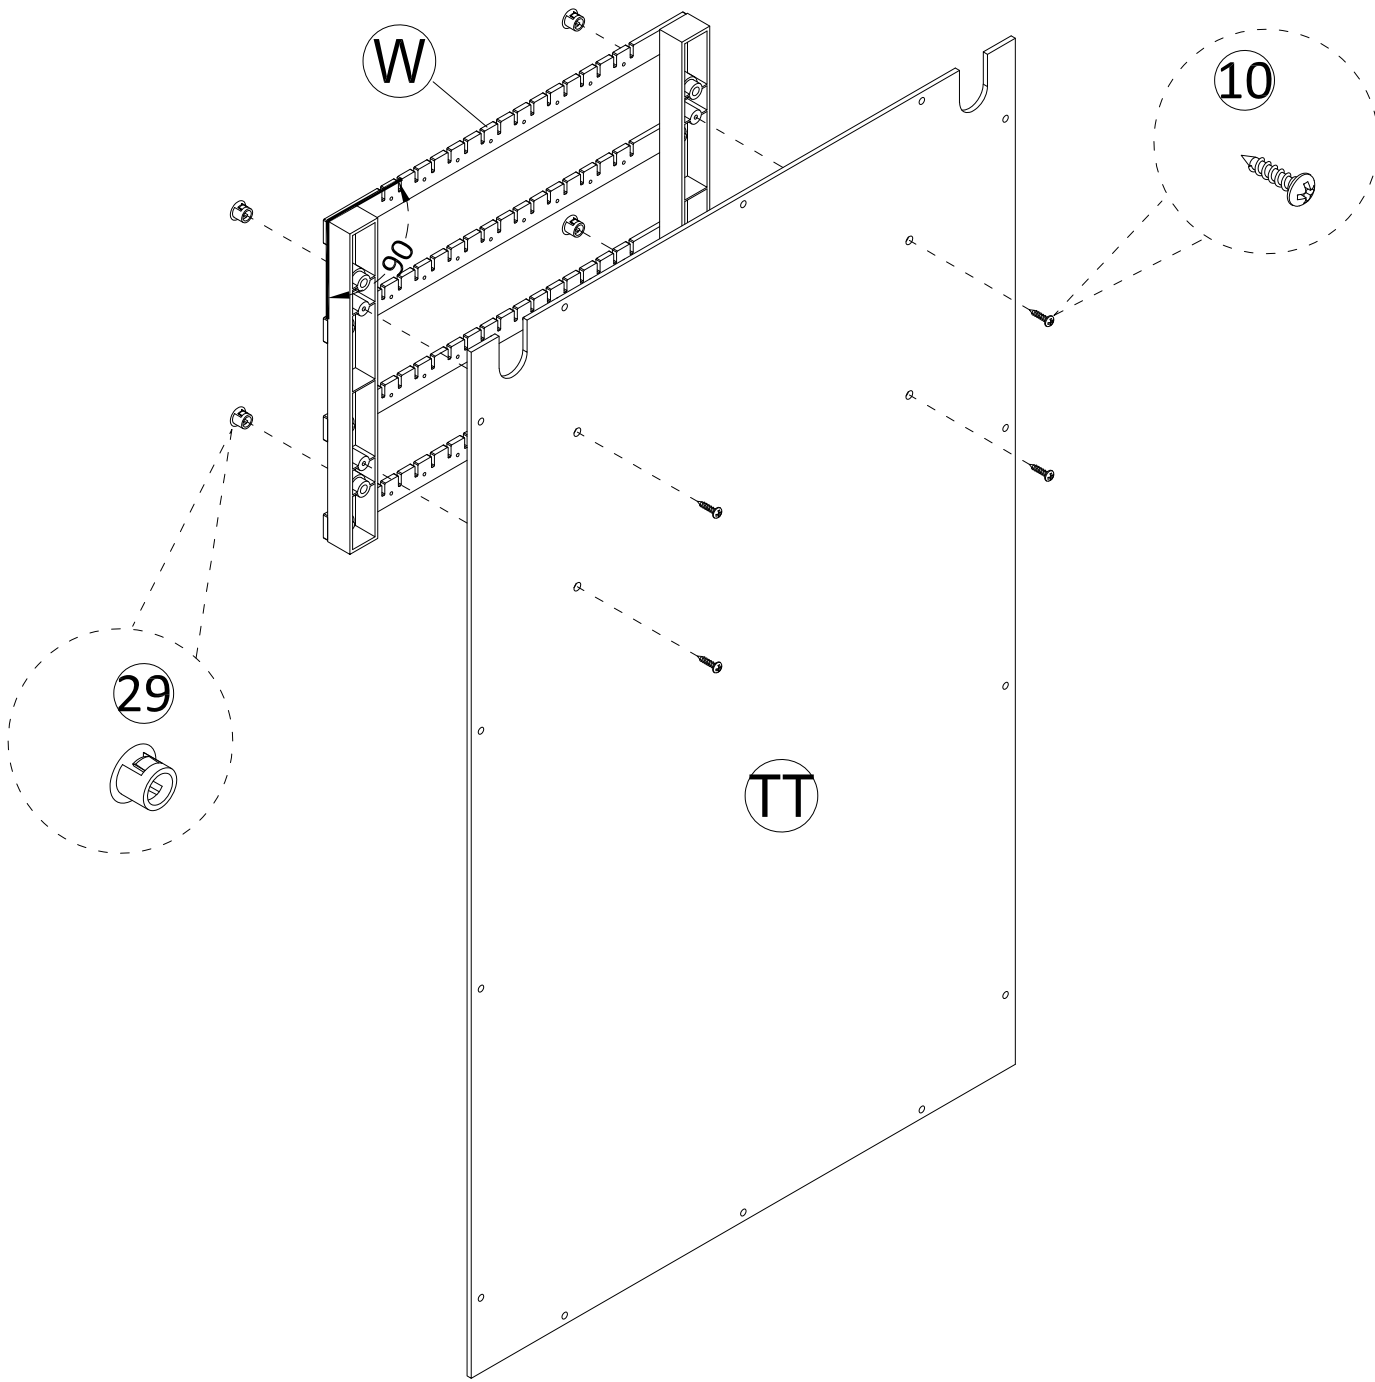


STEP31

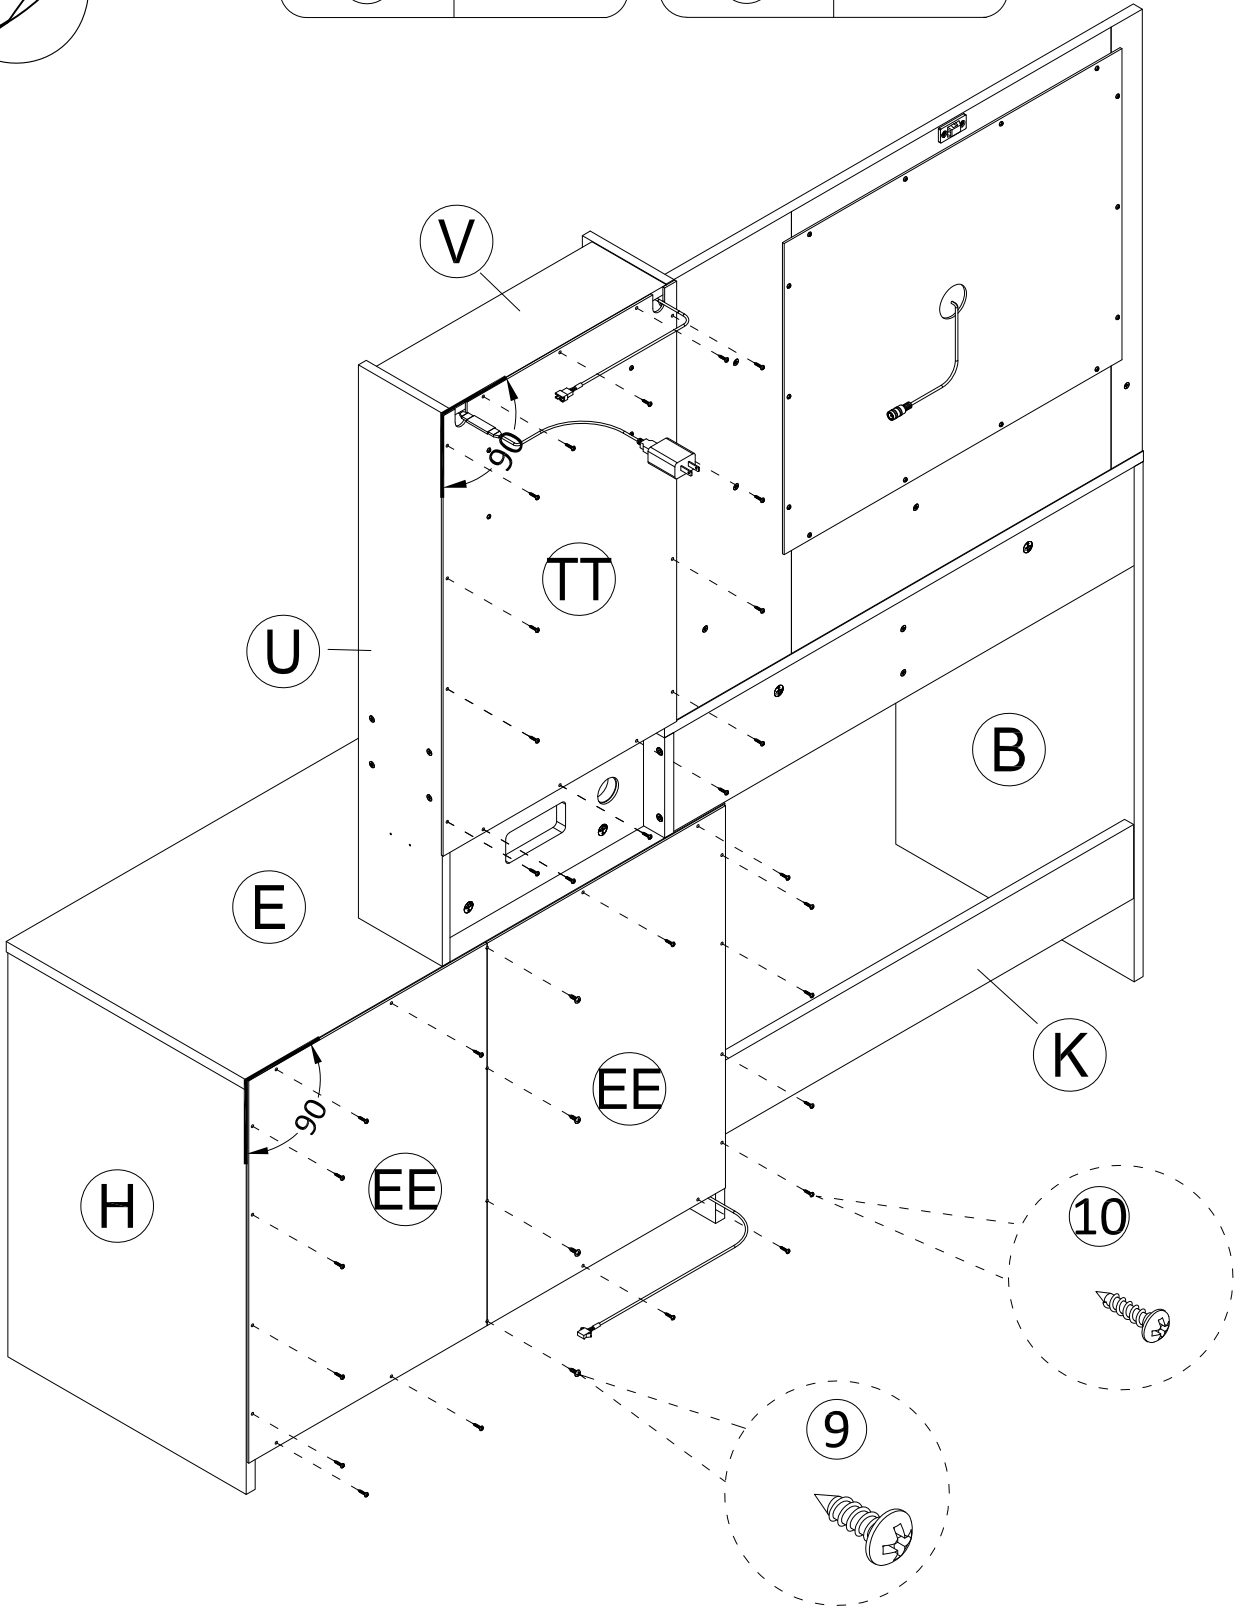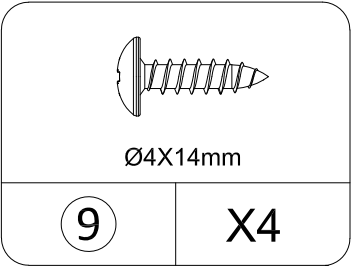
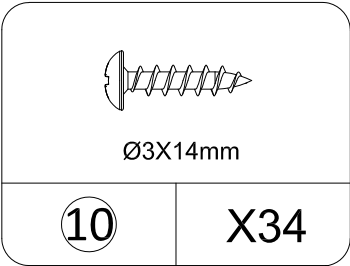
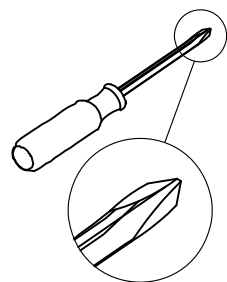


STEP32



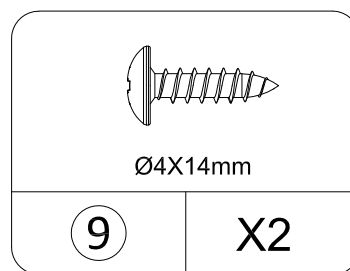
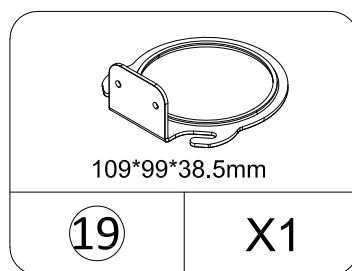
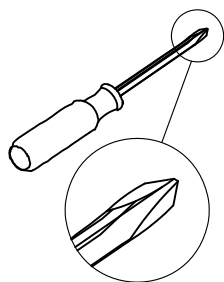


Note: The power connector is hidden inside, you need to gently pull out the red rope until you see the power connector







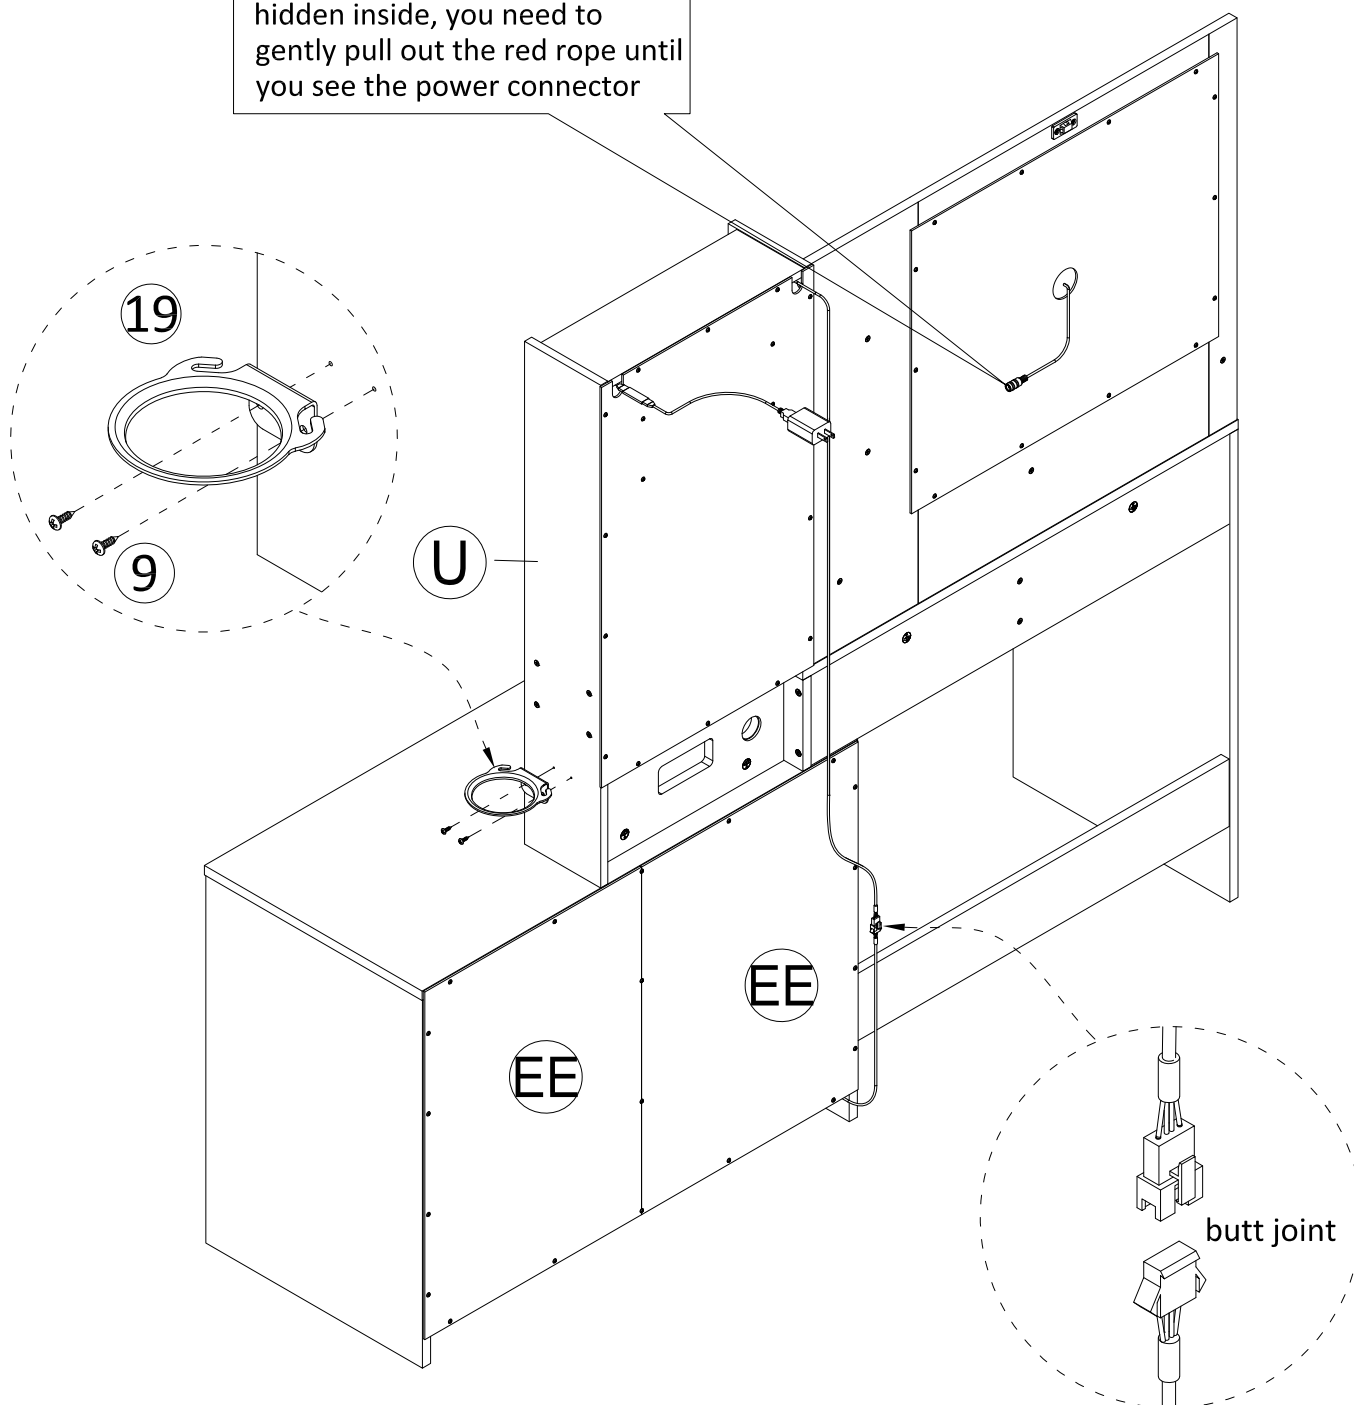


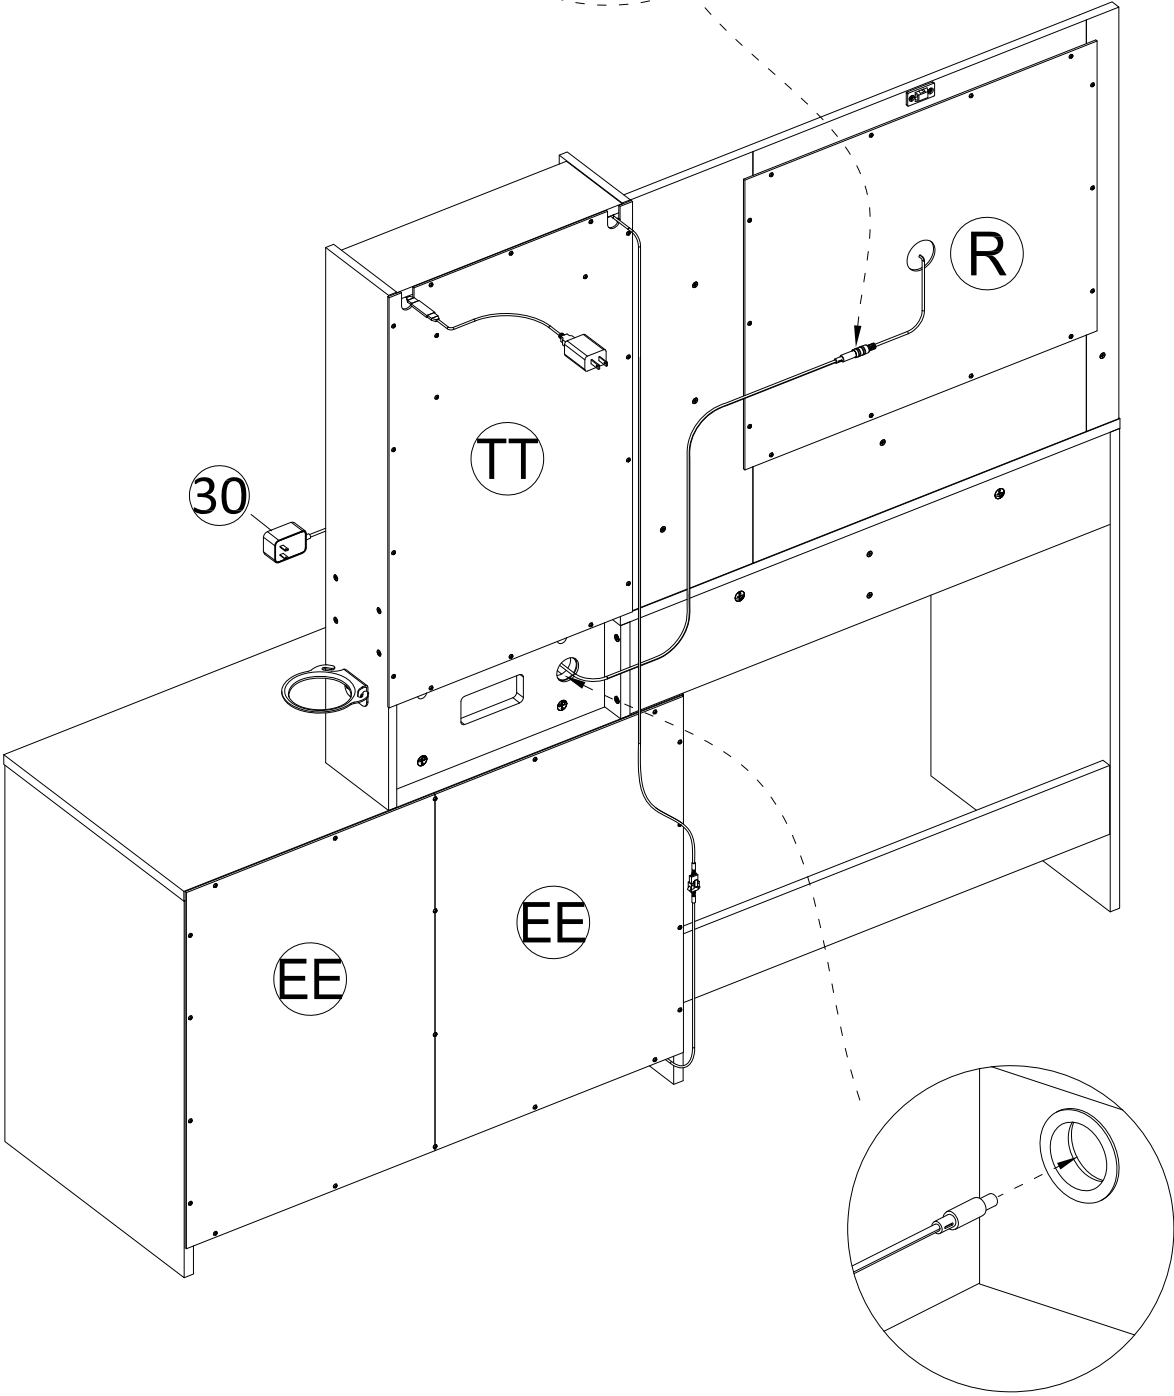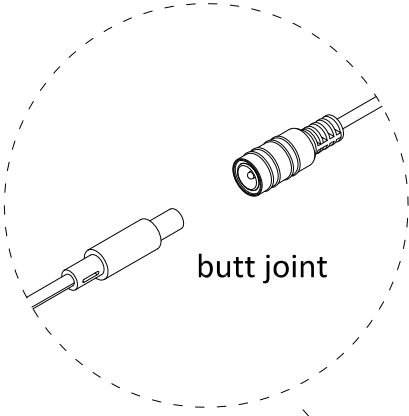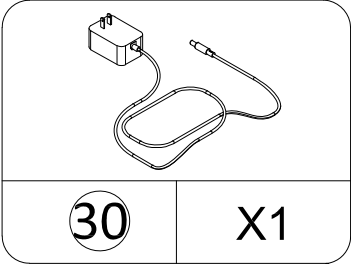

STEP34

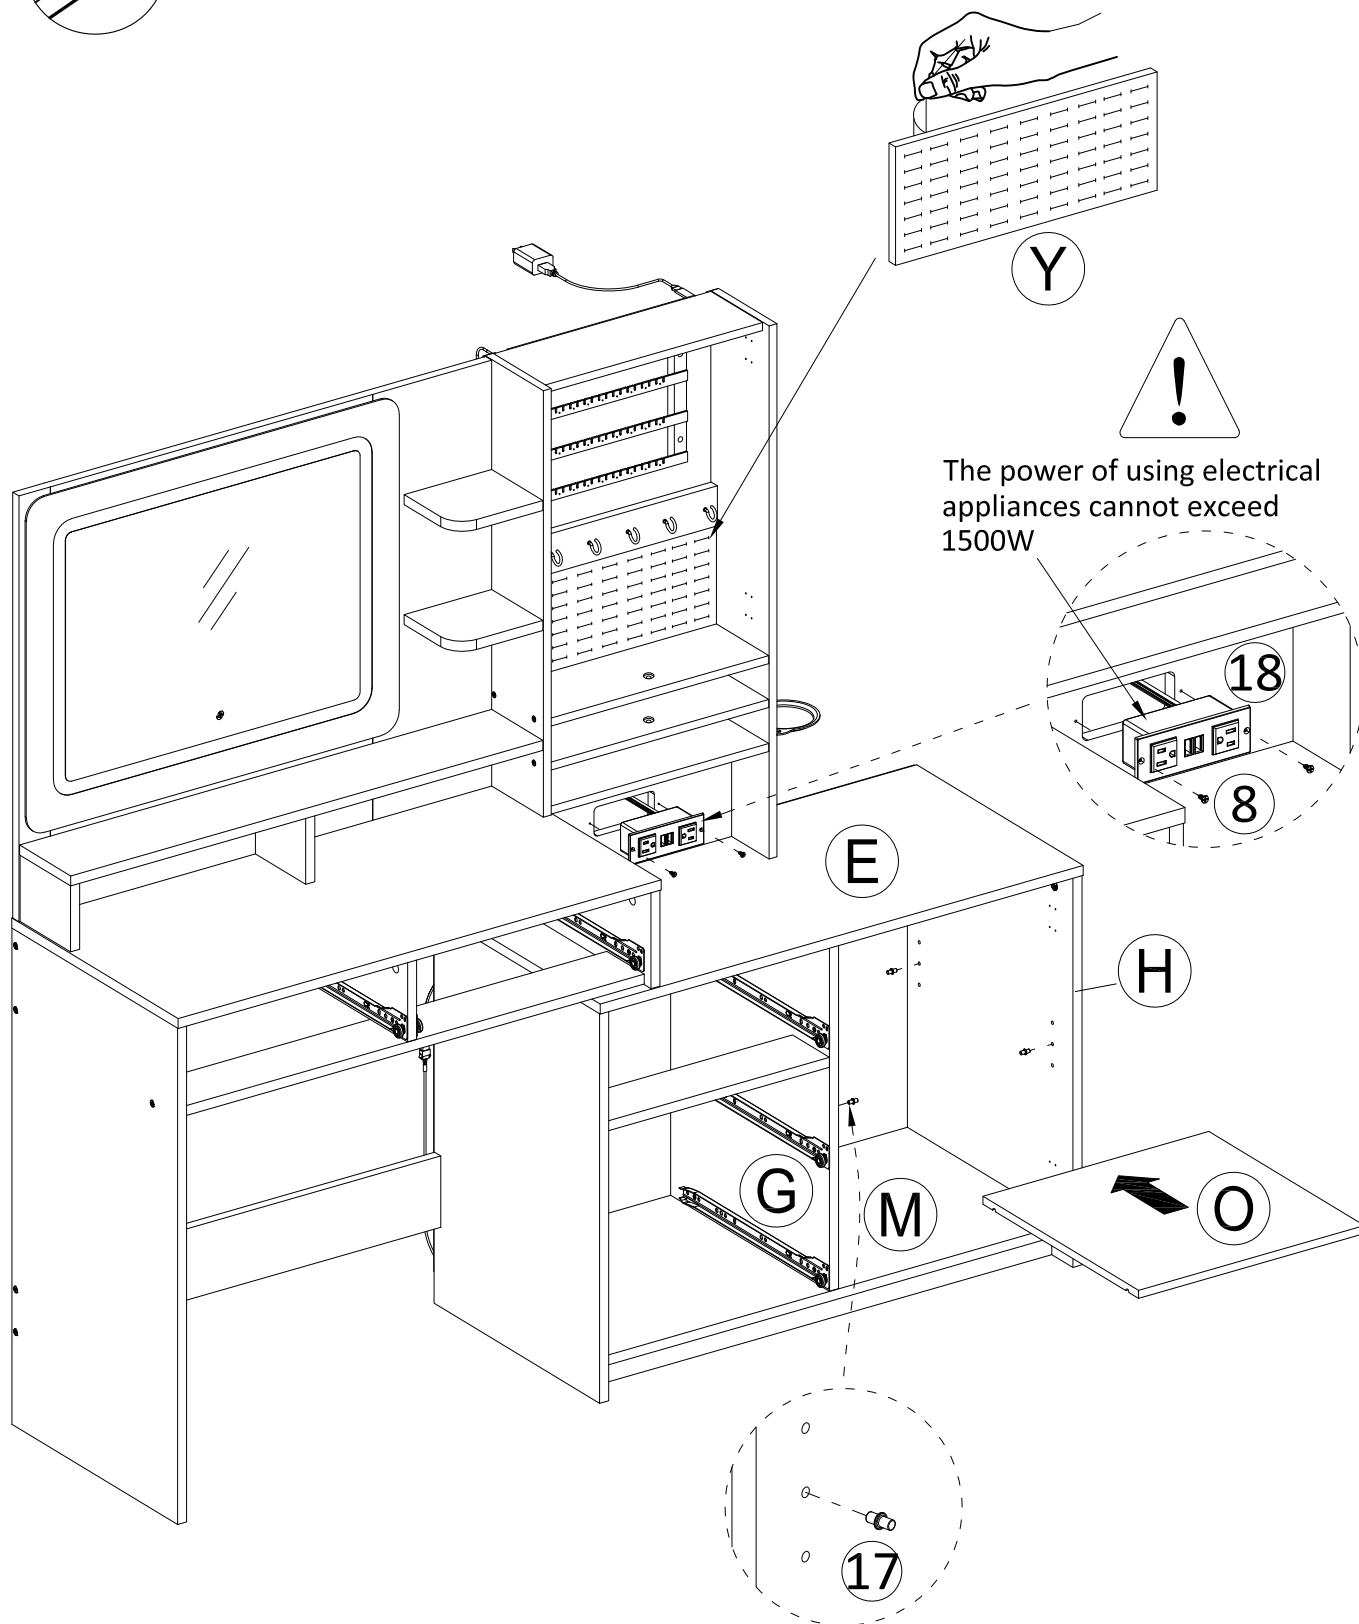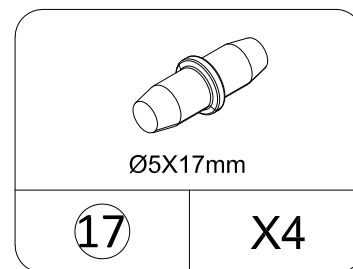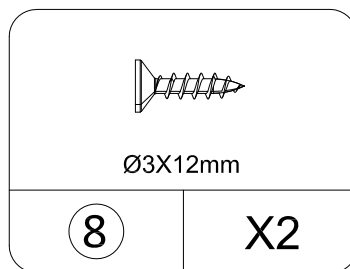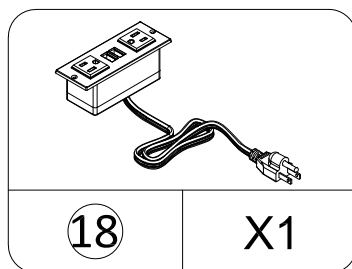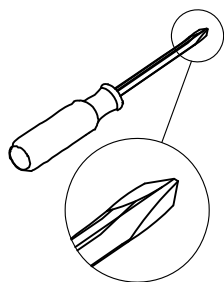


STEP35

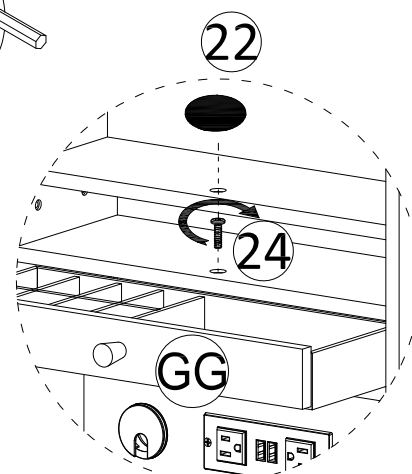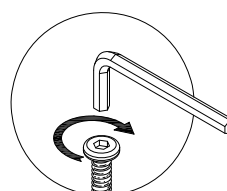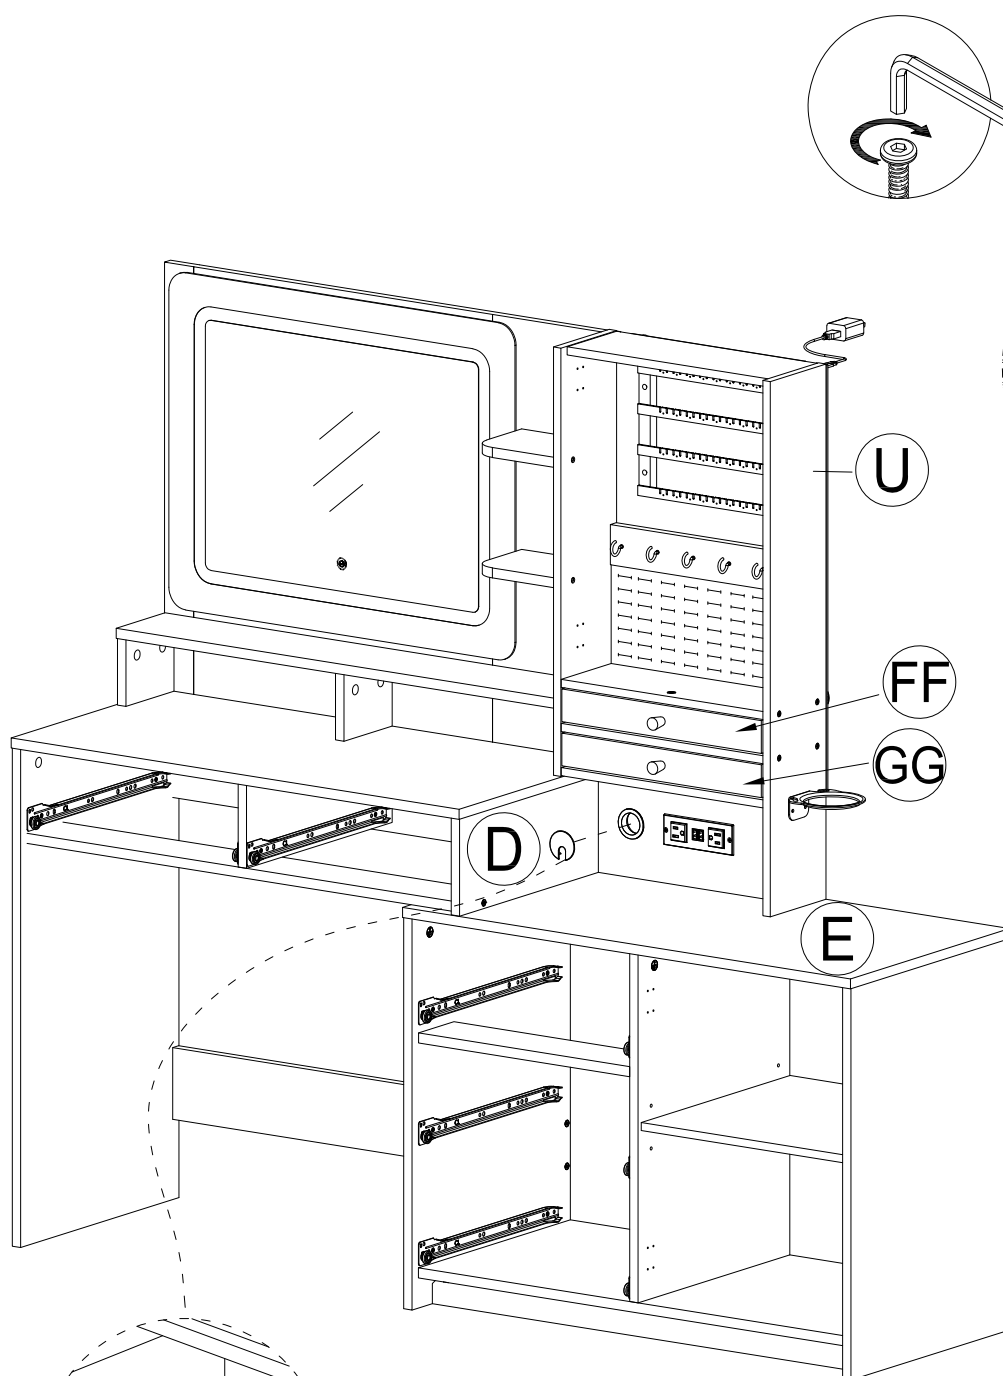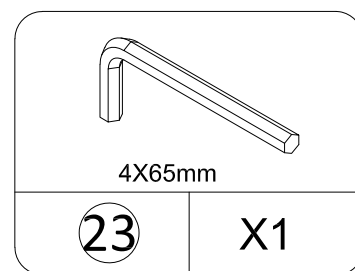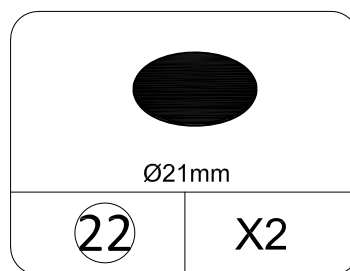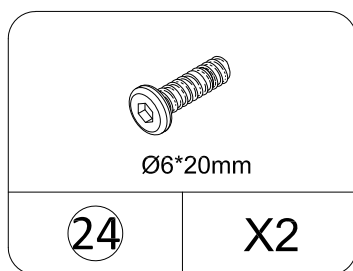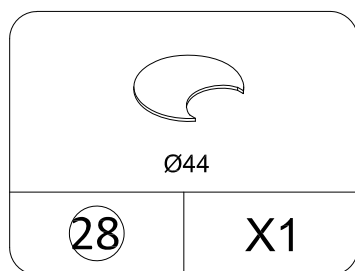


step1

Push in the bottom drawer


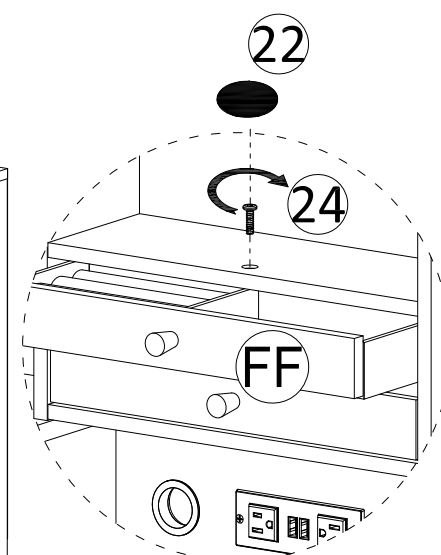


step2


Push in the top drawer a little bit

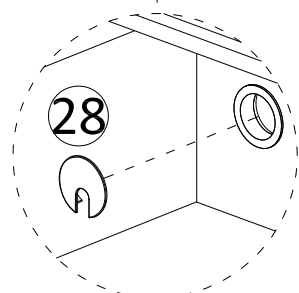




STEP36

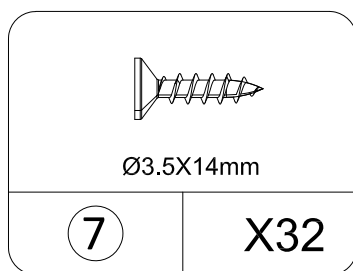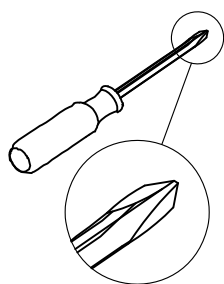



THIS STEP REQUIRES 2 PEOPLE

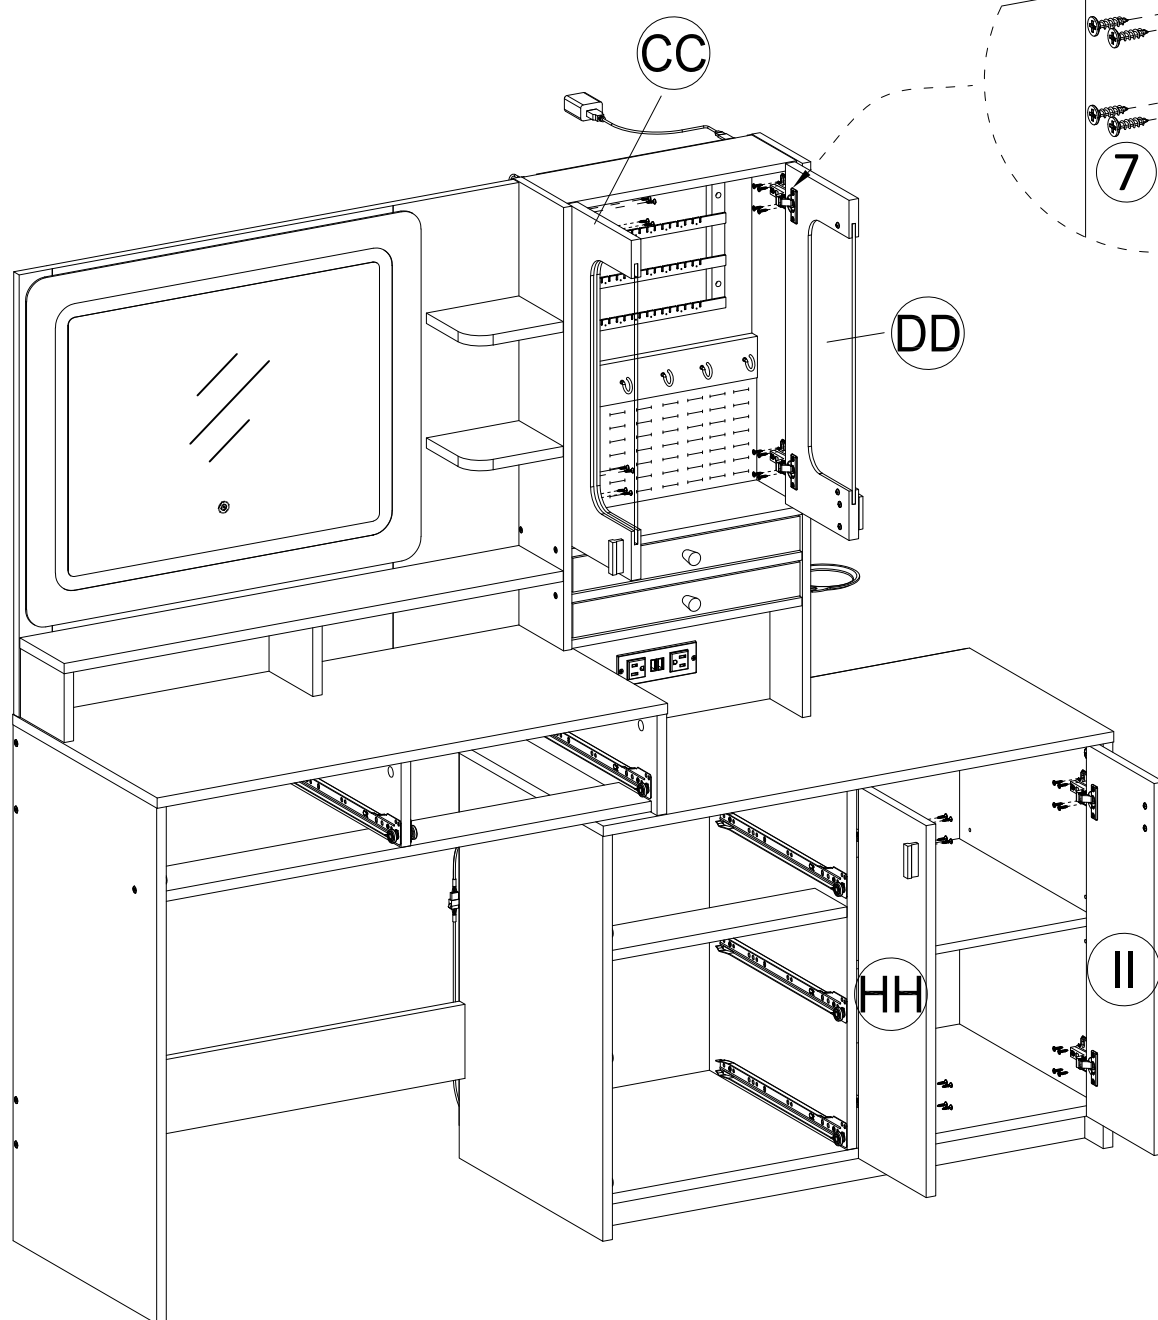



STEP37

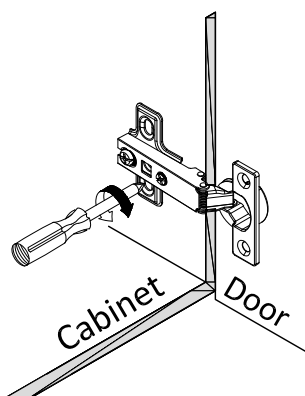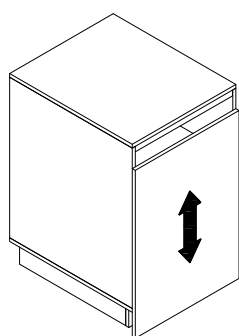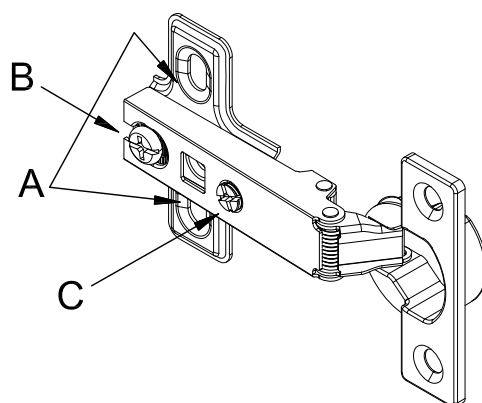

To adjust the vertical height.
Loosen the two screws "A" on both hinges.
Two of them are usually in slotted holes which
allows you to adjust up or down by a few mm.
Then tighten back up.

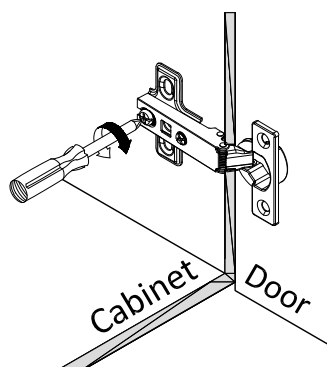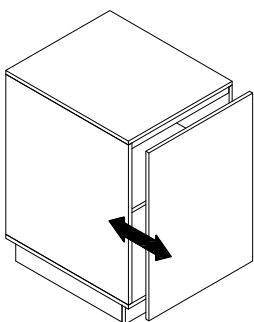


To adjust depth.
Loosen screw "B" and adjust door, if the door can
not be adjusted, please loosen screw "C", then try
again. Tighten screw "B" and "C".

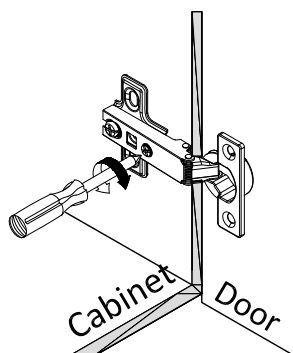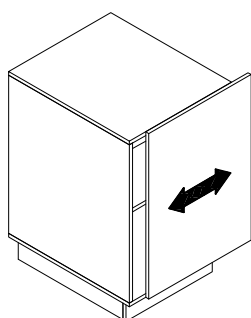


To adjust side ways.
Turning the screw "C" on BOTH hinges on each
door.

STEP38

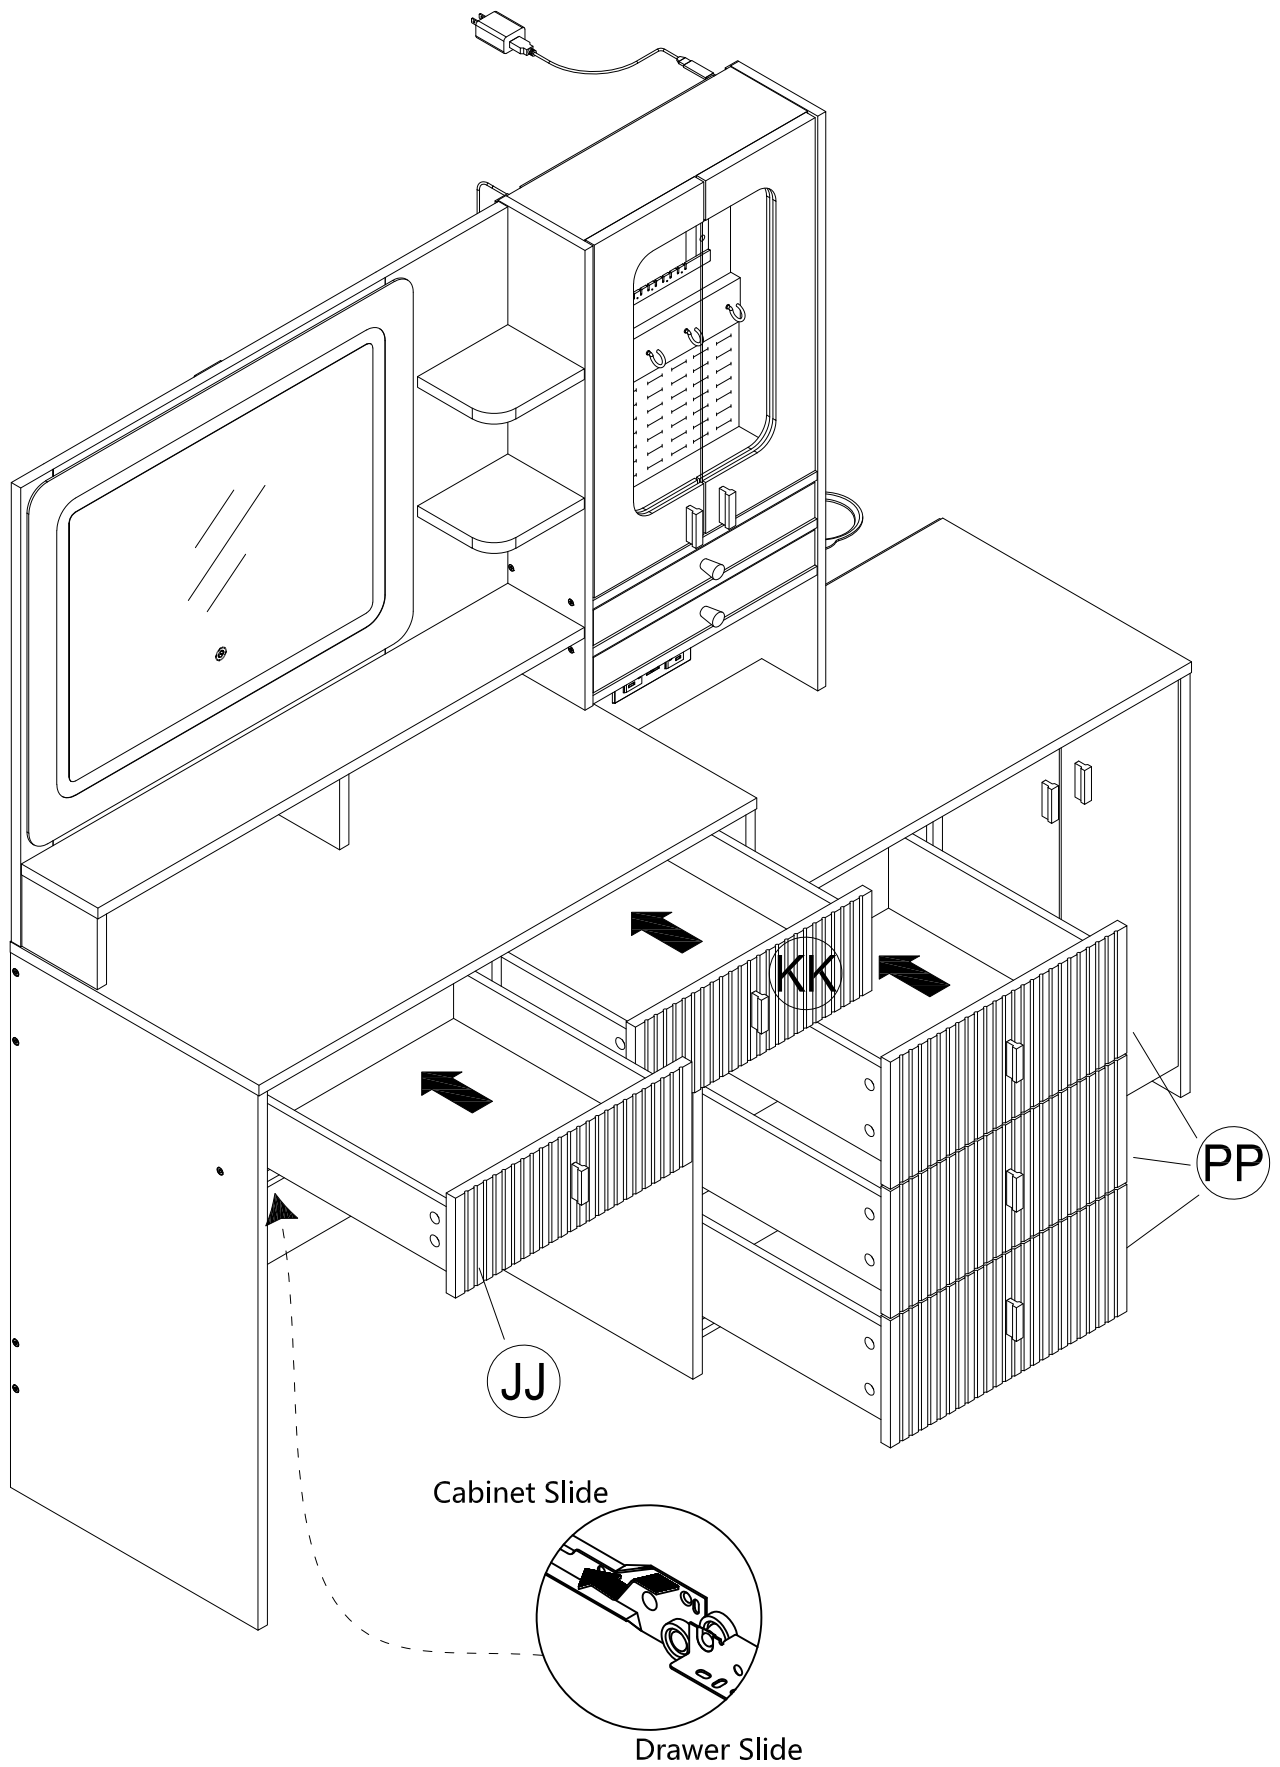

STEP39

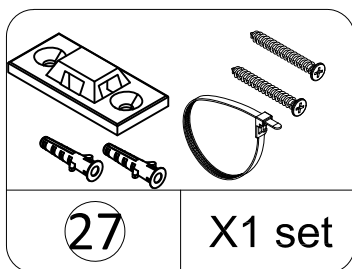


We have included a set of tipping restraint hardware for this unit. You must install this hardware to prevent accidents or injuries that can result from the unit falling. When properly installed, this restraint can provide protection against the unexpected tipping of the unit due to small tremors, bumps or climbing. We strongly recommend mounting this hardware to a wall stud and your unit.


NOTE: The tipping restraint hardware included is for wooden stud wall construction. It must be attached to a wall stud. Depending upon your wall construction different anchor hardware may be required. Please contact your local hardware store for assistance. Young children can be seriously injured by tipping furniture. You must install the tipping restraint hardware with the unit to prevent the unit from tipping, causing any accidents or damage. The tipping restraints are intended only as a deterrent and are not a substitute for proper adult supervision. The tipping restraints are not earthquake restraints. If you wish to add the extra security of earthquake restraints, they must be purchased and installed separately.




Install the tipping restraint hardware

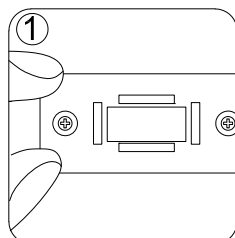


1. make mark on the wall

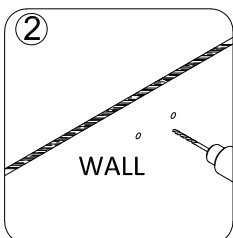


2. drill two Ø6 holes on the wall

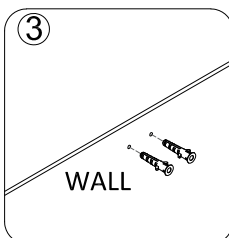


3. put two anchors in the holes

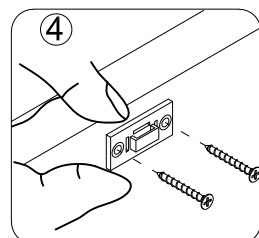

4. fix the device on the wall by the long screws

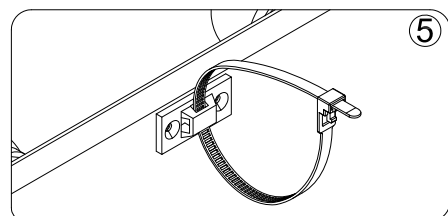

5. Push the cabinet close to the wall so that the two bases are close to each other, and then put on nylon tie to tighten it.

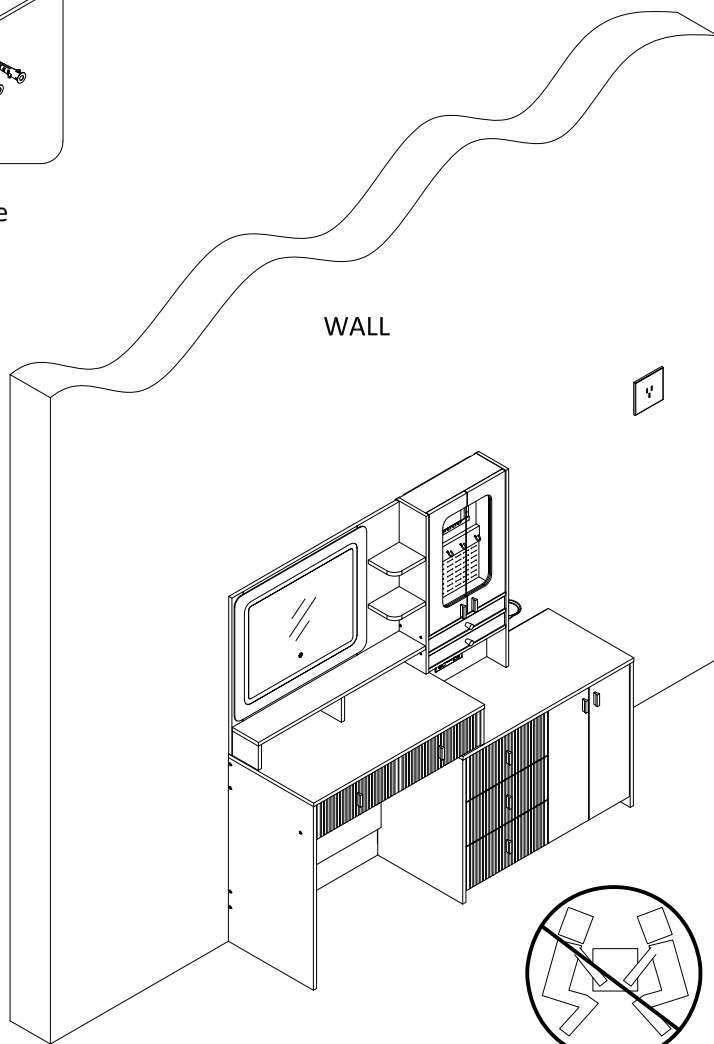

Cannot be lifted after assembly