




GrainWood

FURNITURE.COM

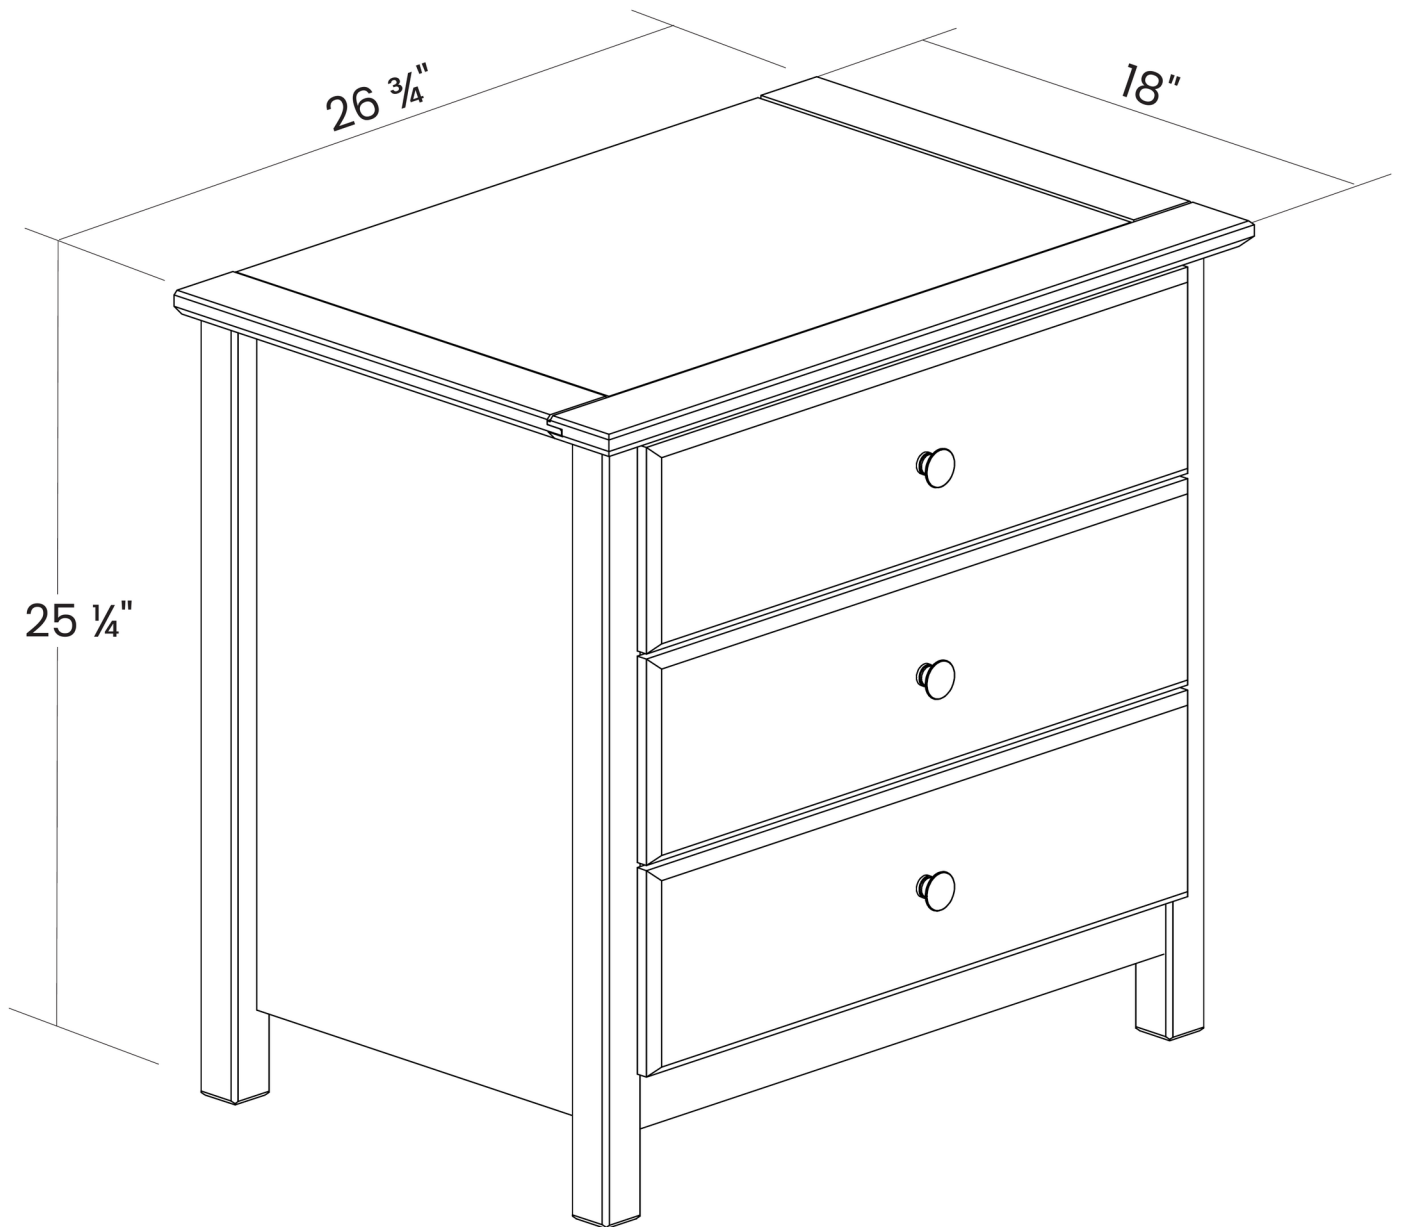

Shaker

3-Drawer Nightstand

Assembly Instructions


SH34
Rev. 08/21/26
Made in Brazil
Designed in Virginia Beach

Read Before Assembly


Thank you for choosing Grain Wood Furniture, it's an honor to be in your home. If you need help, visit **grainwoodfurniture.com/help** or email us at **support@grainwoodfurniture.com**.

For help troubleshooting common assembly issues, visit **grainwoodfurniture.com/assembly-troubleshooting** or scan the QR code to the right.


For care tips to extend the life of your furniture, see **grainwoodfurniture.com/care-guide**

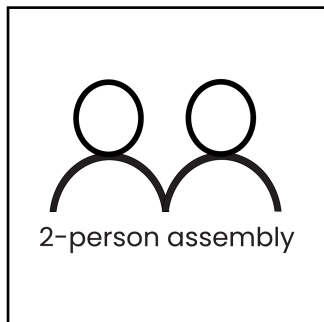


Most items require two people for assembly, so enlist help from a friend or family member. Assemble the furniture in a spacious area near its final location, as moving parts is easier than relocating the fully assembled piece. Do not discard packaging until assembly is complete.

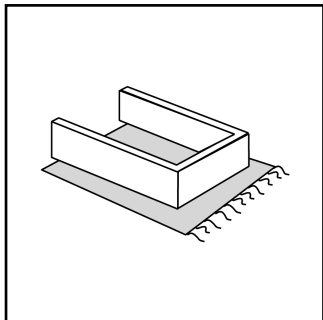





Assemble on a soft surface such as cardboard or an old blanket to protect the finish. Lay out all parts in order and count them twice. If any parts are missing or damaged, document the issue with photos and contact support so we can make it right.

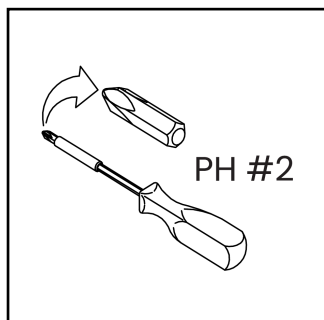

Use the tools provided, as they may be specially sized for the furniture. Power drills are not recommended, as improper use may cause damage. Use a carpenter's square or a hardcover book to ensure drawers and doors are assembled at 90 degrees; otherwise, they may not close properly.

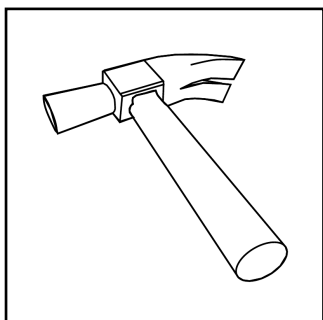

Solid wood furniture may naturally contain imperfections such as knots, minor splits, or cracks. Whenever stability of the furniture is not compromised, cosmetic touch-ups can be made using wax crayon fillers available at most hardware stores.

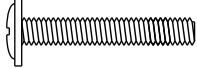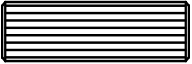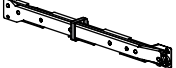Part	Hardware	Qty.
A1 4,0x30CP		37 + 2
A4 3,5x14CC		10 + 1
A25 M4x25CF		3 + 1
B31 6,0x10CC		24 + 2
C2 8,0x25		28 + 2
E21/E22 385mm		3
G1 10x10		16
G16 20x20x3		4
H4 -		3

Model #	Finish
SH3401	Cherry
SH3402	Espresso
SH3404	Walnut
SH3406	Natural


ATTENTION:

Before starting assembly, please count and make sure all of the hardware has been included. For missing hardware, please contact us at grainwoodfurniture.com/help

WARNING:**CHOKING HAZARD**


Small parts, not for children.
To be assembled by an adult.

Box A — 1 of 1		
Part	Description	Qty.
1	Top	1
2	Right side	1
3	Left side	1
4	Upper crosspiece	1
5	Lower crosspiece	1
6	Rear crosspiece	1
7	Back panel	2
8	Drawer front	3
9	Drawer right side	3
10	Drawer left side	3
11	Drawer bottom	3
12	Drawer back	3
15	Profile "H"	1
HW	Hardware	1

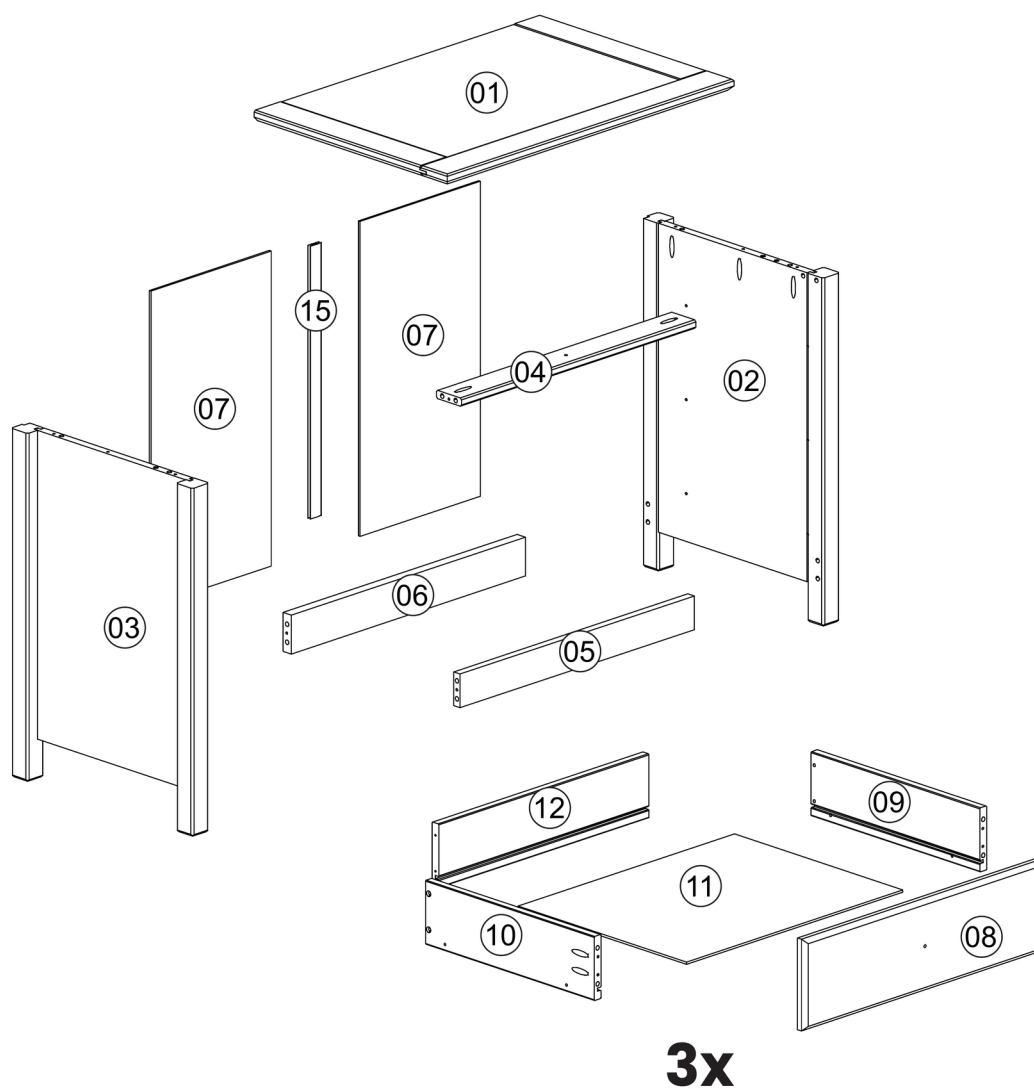


1

C2




28




Use a hammer in case dowels are hard to install by hand.

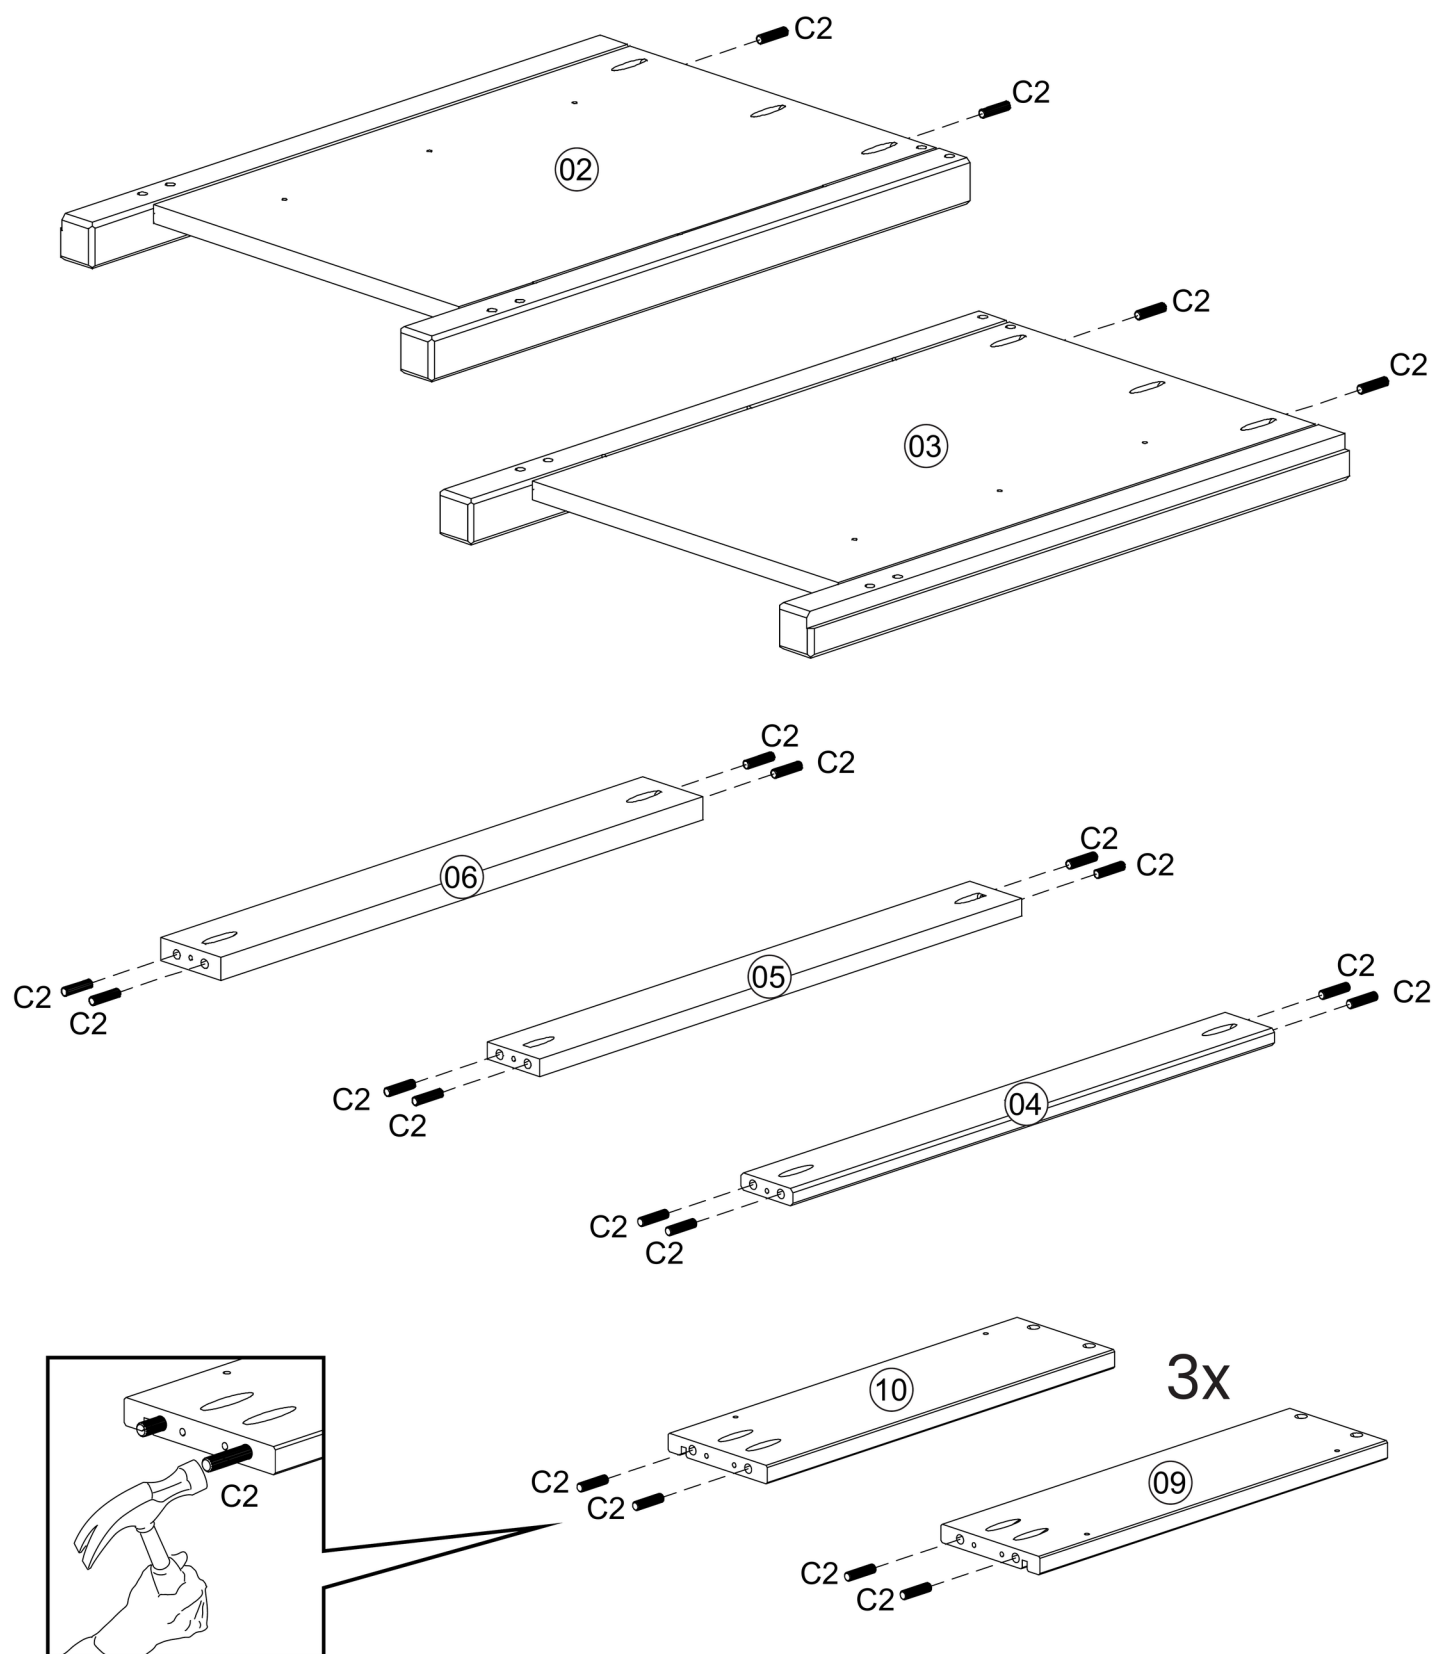


2

E21		3	B31		6
------------	---	----------	------------	---	----------



Glide wheels should be positioned towards the front and bottom of the side panel.

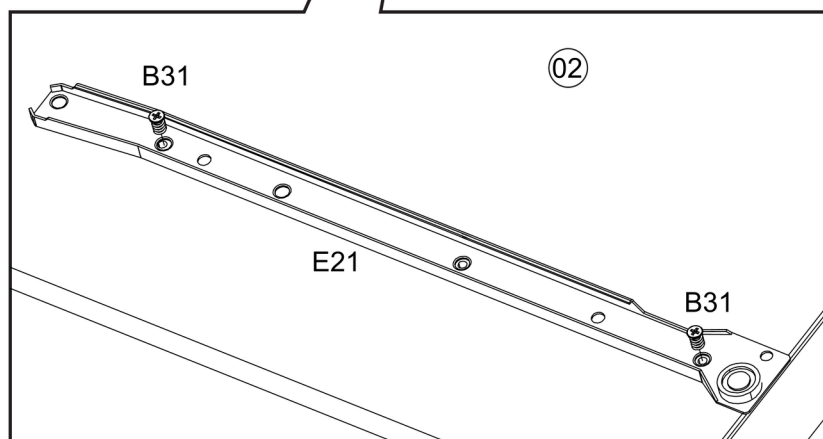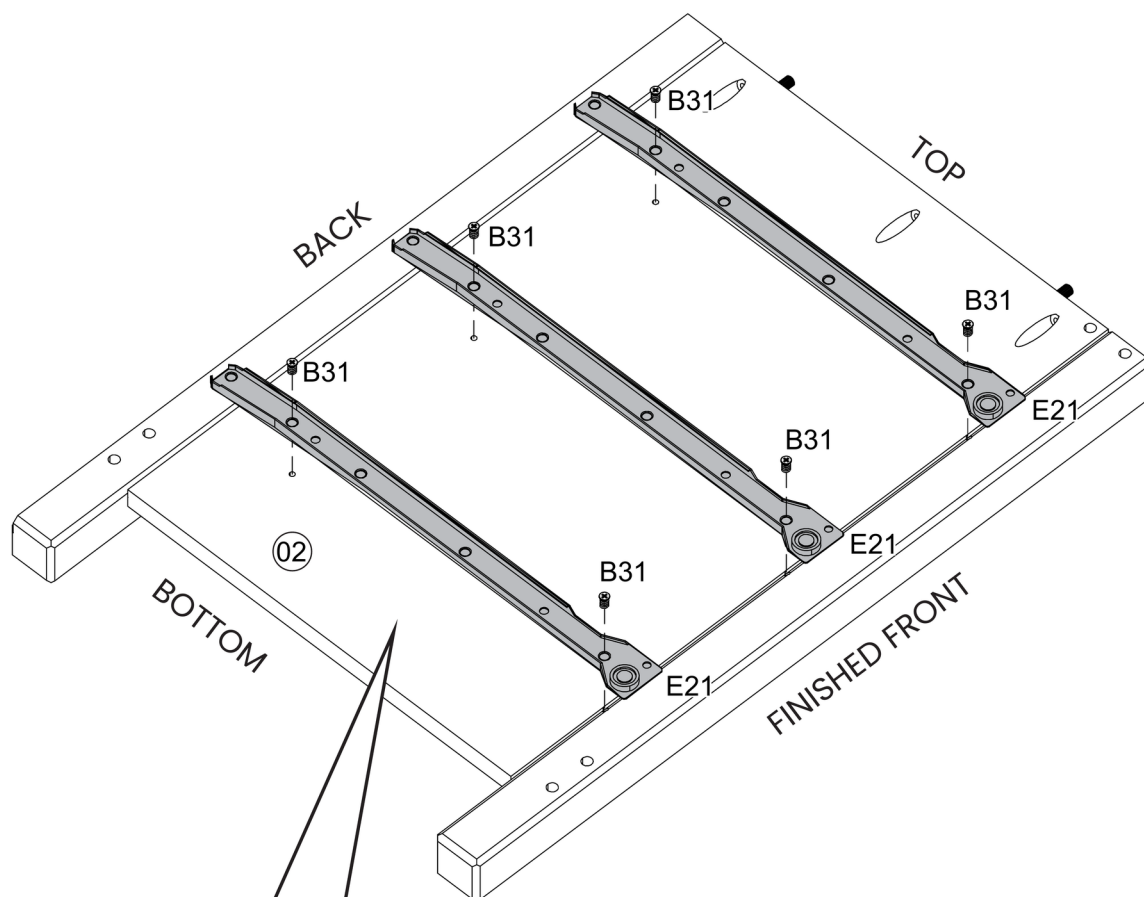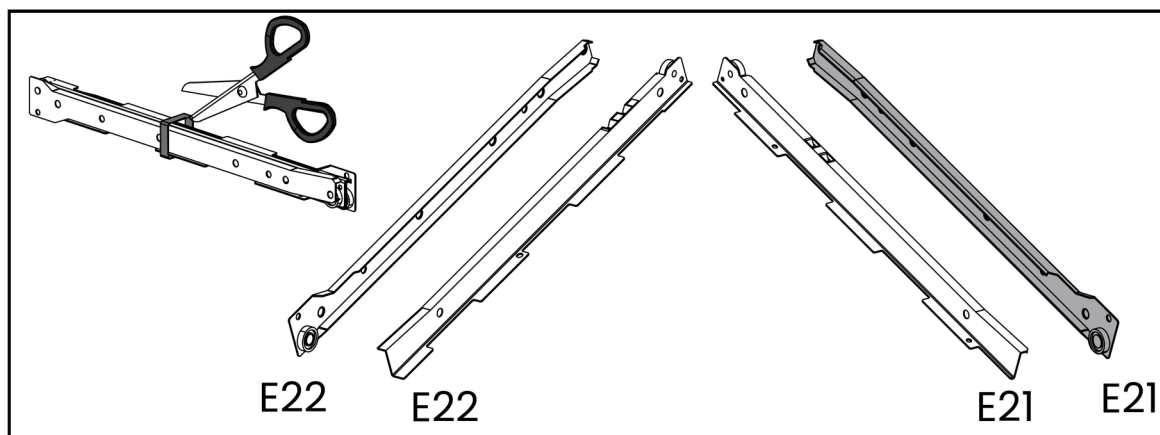



3


E22		3	B31		6
------------	---	----------	------------	---	----------

Glide wheels should be positioned towards the front and bottom of the side panel.

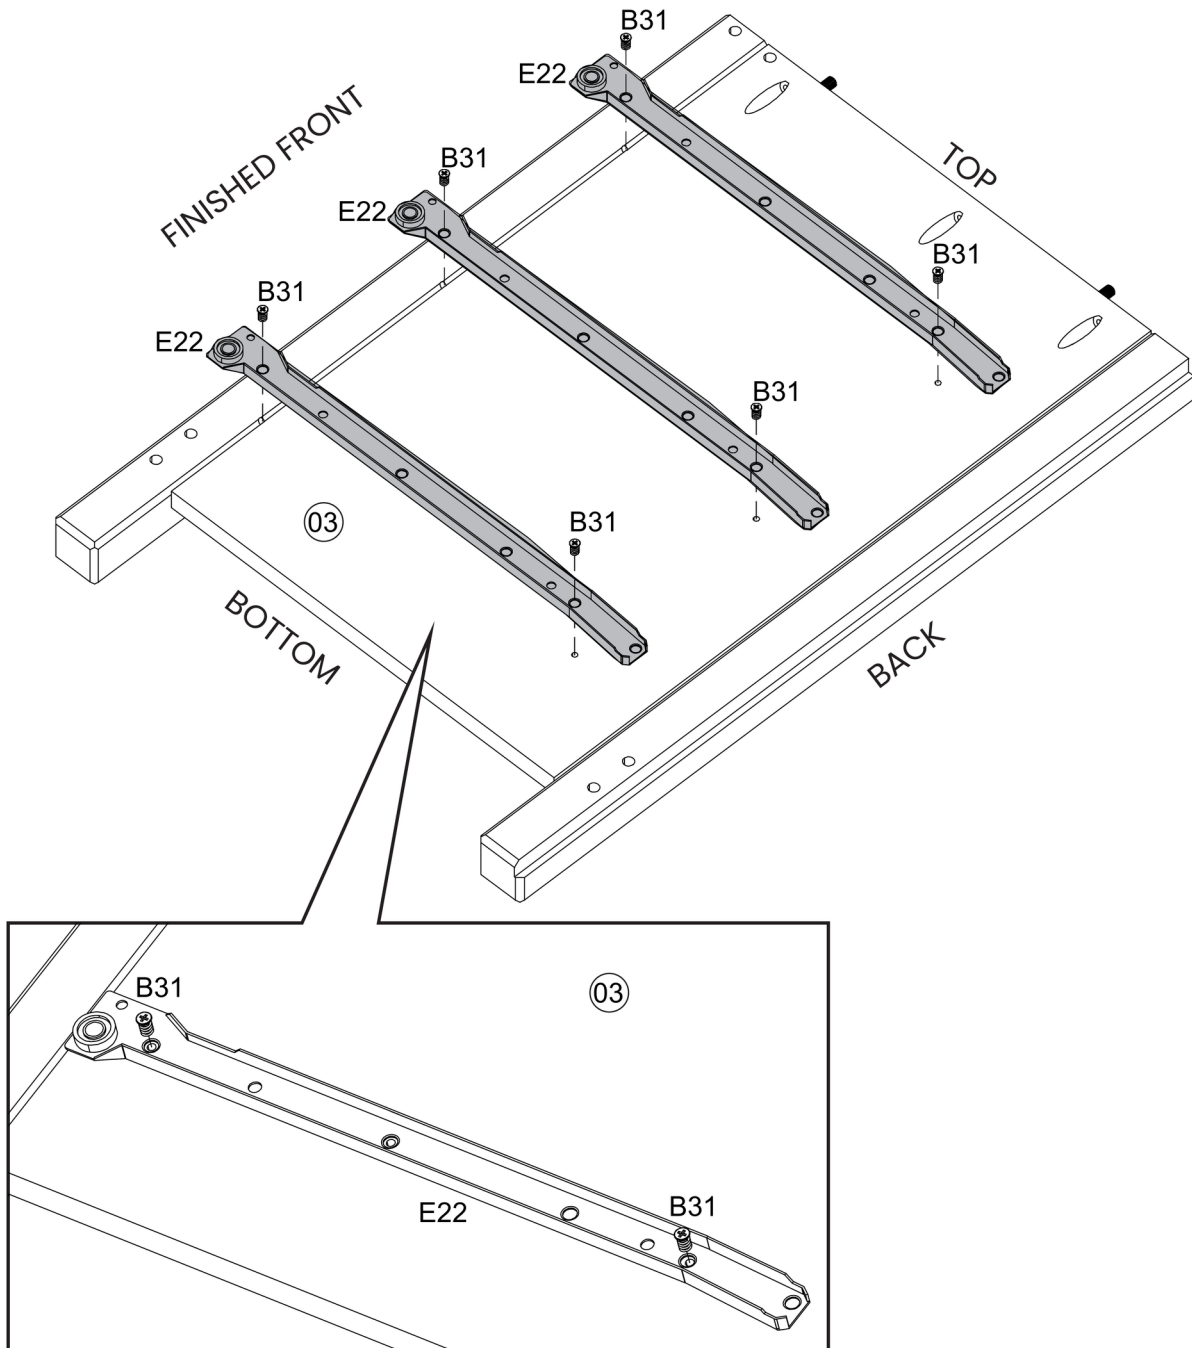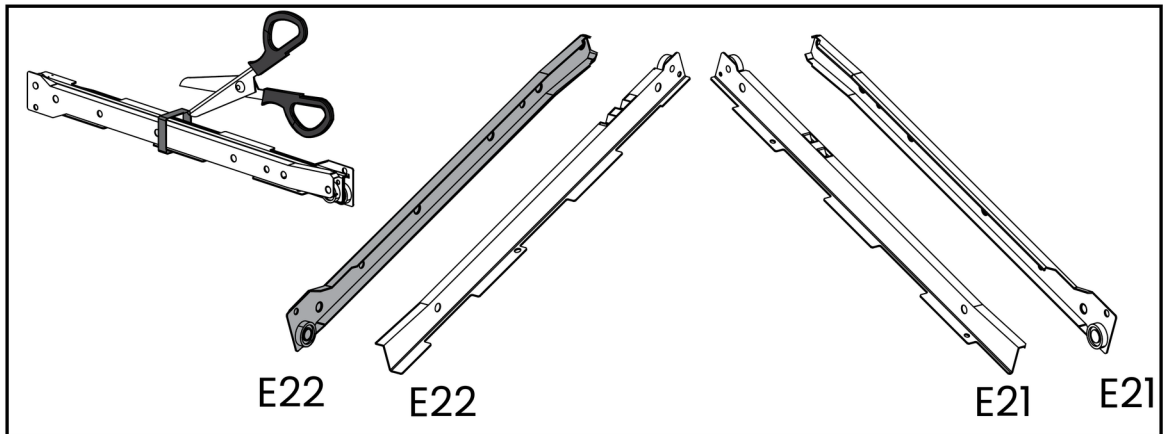



4

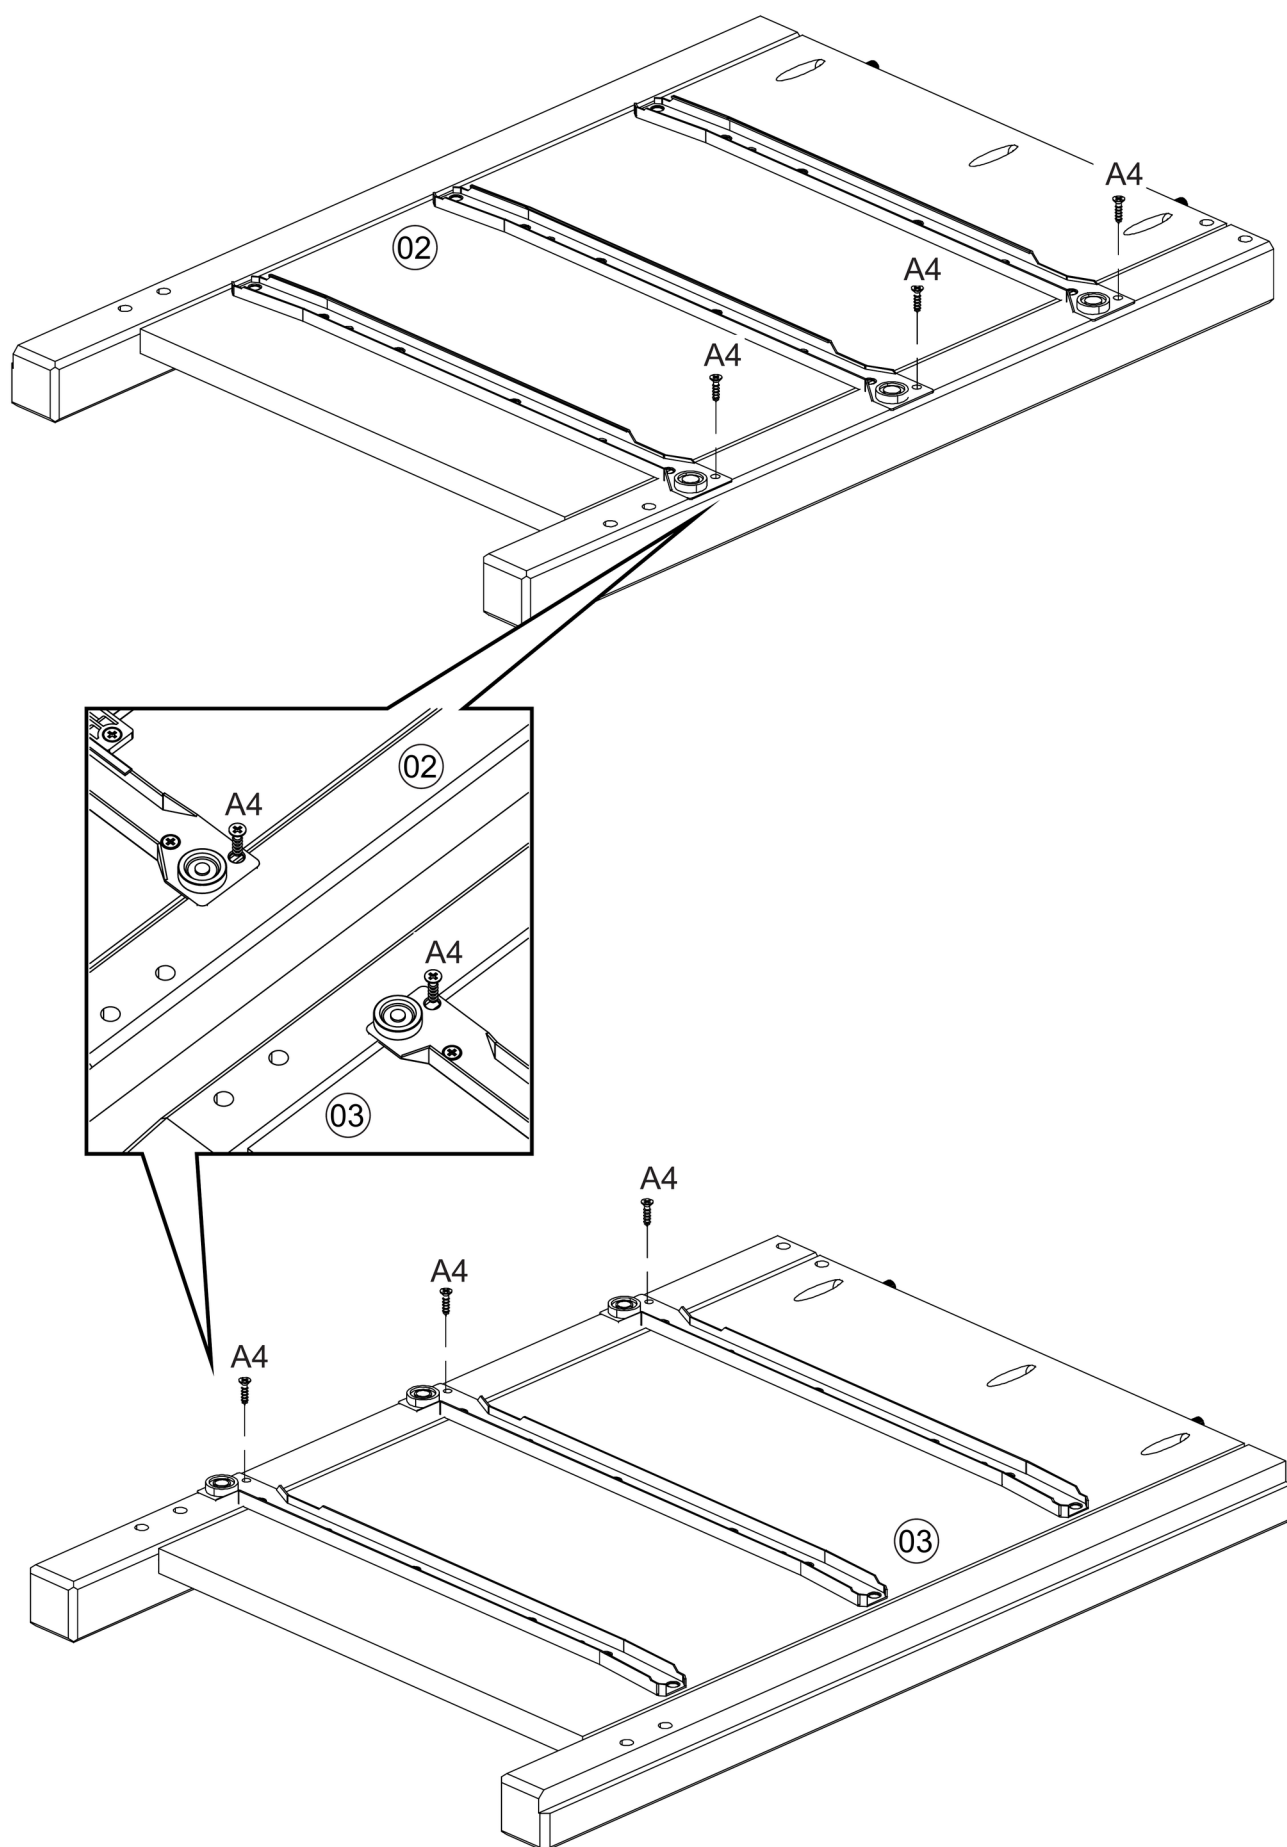


5

There are no predrilled holes for the A1 screws on part 02.

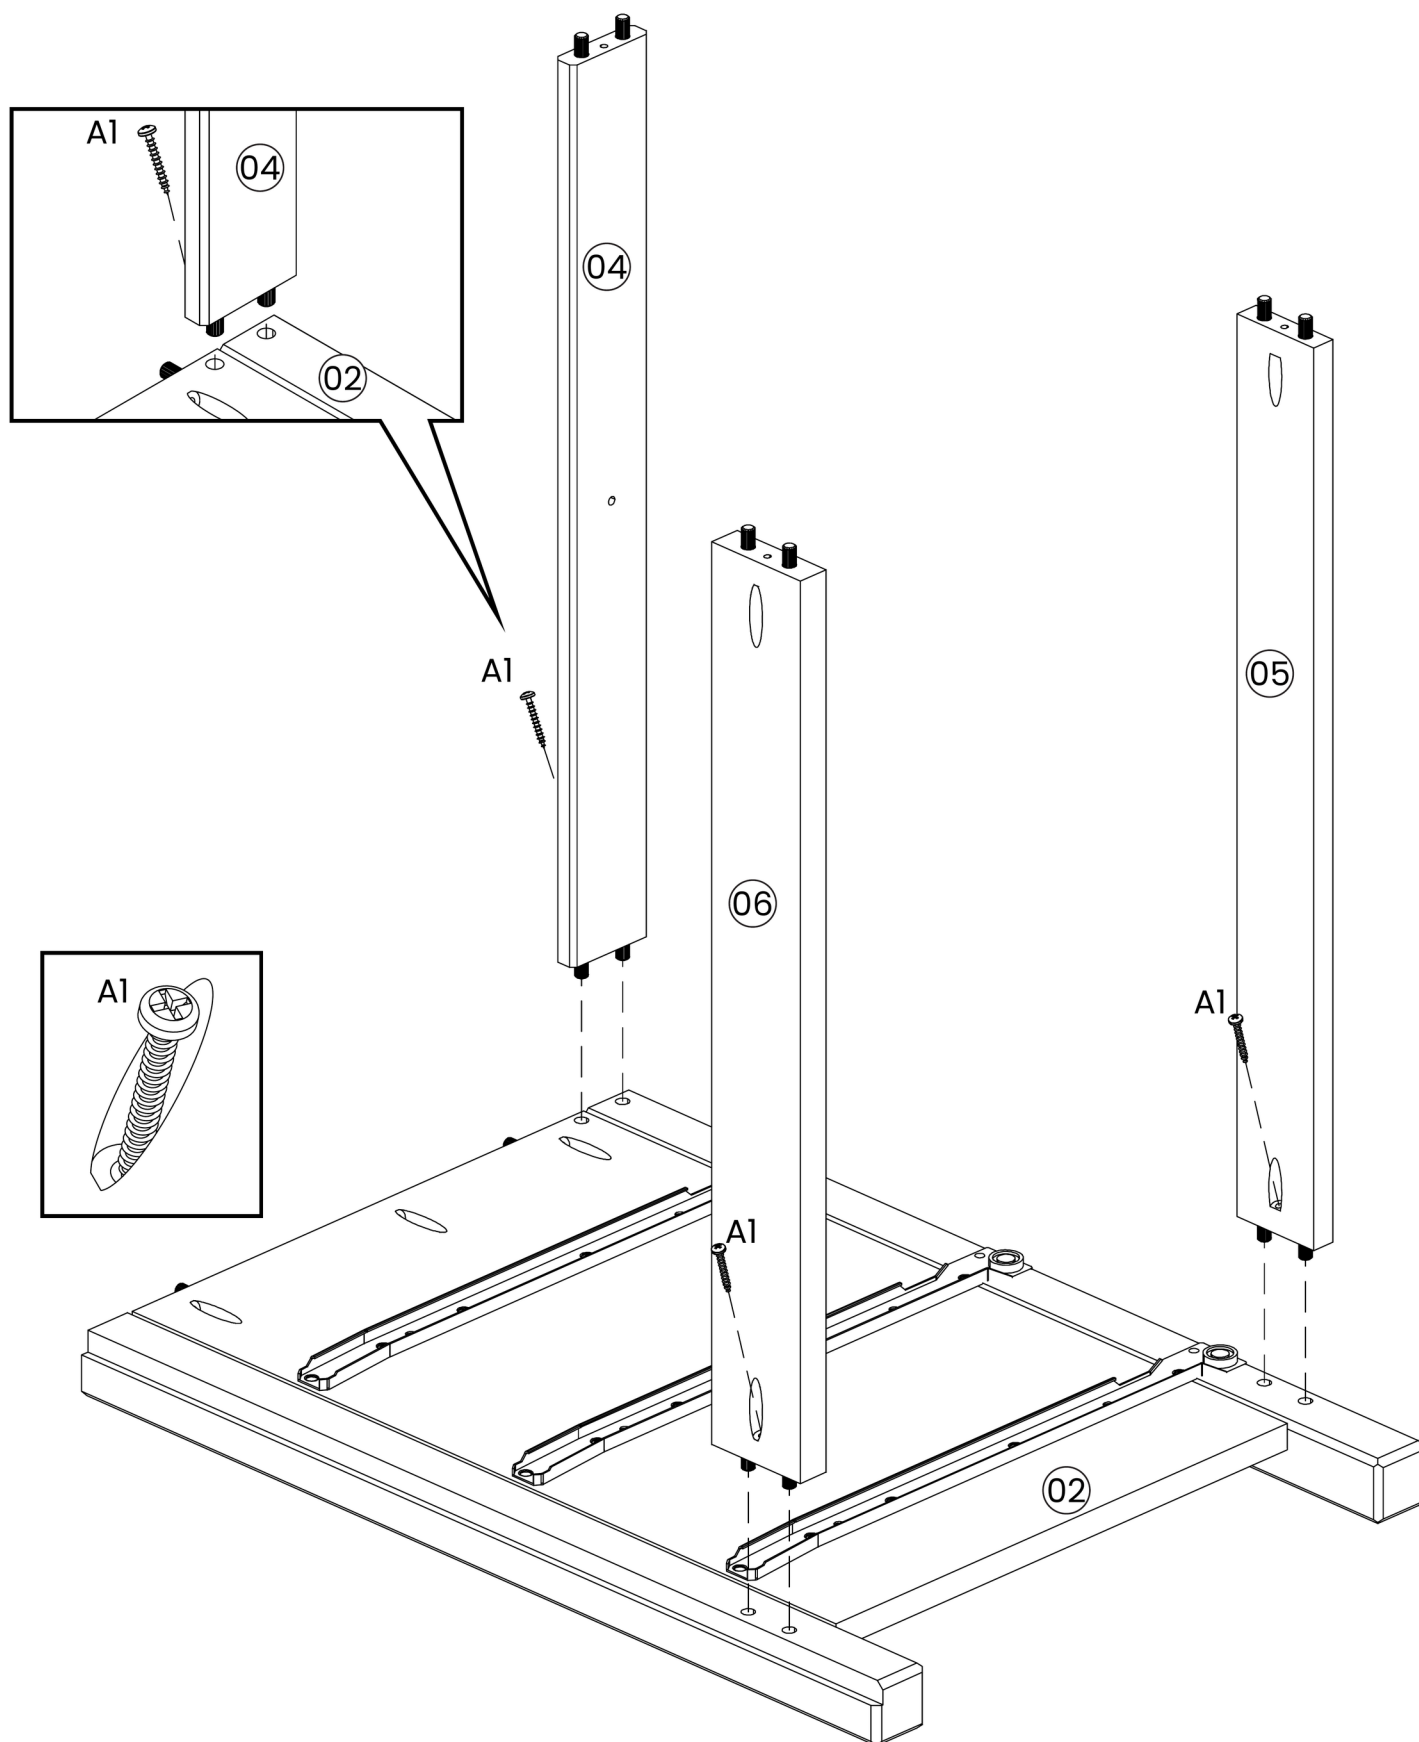


6


There are no predrilled holes for the A1 screws on part 03.

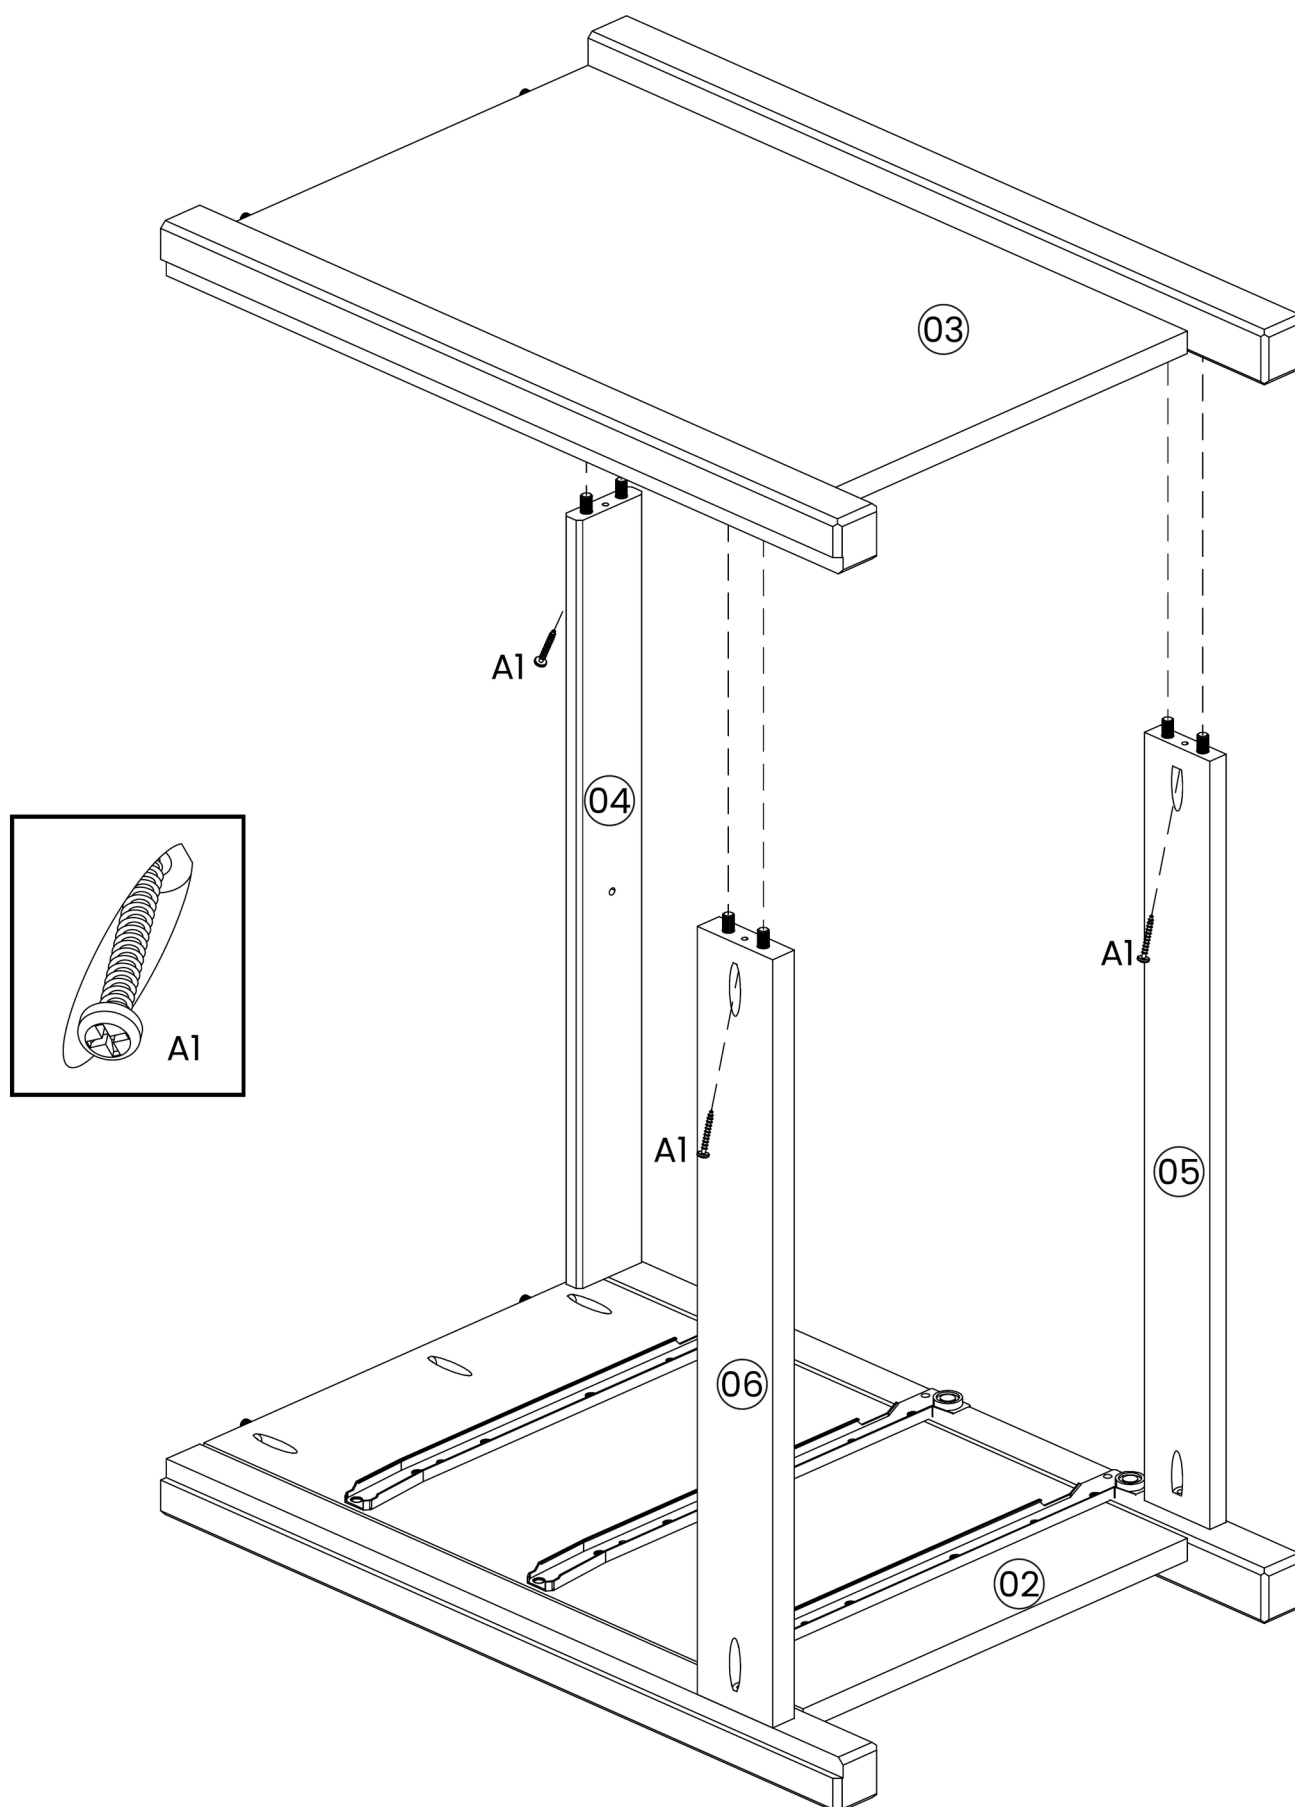


7

A1		7
----	---	---


There are no predrilled holes for the A1 screws on part 01.





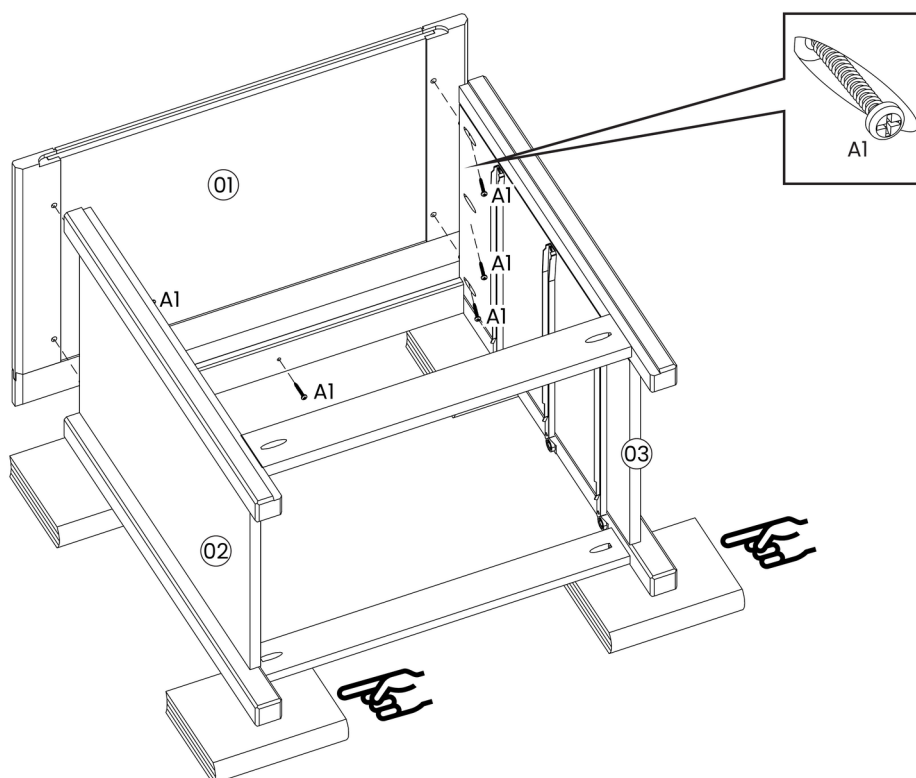


8


G1		4
----	---	---


Make sure back panels are perfectly aligned with side panels and top and there are NO gaps.

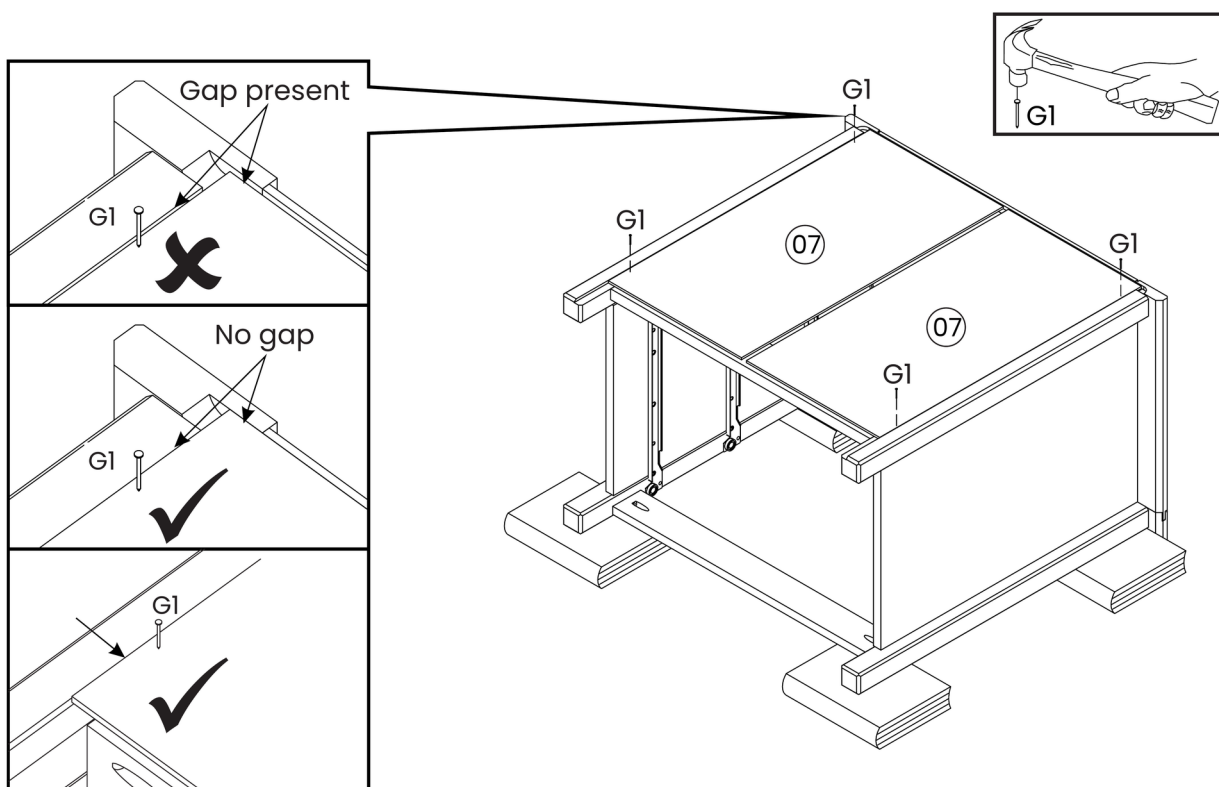

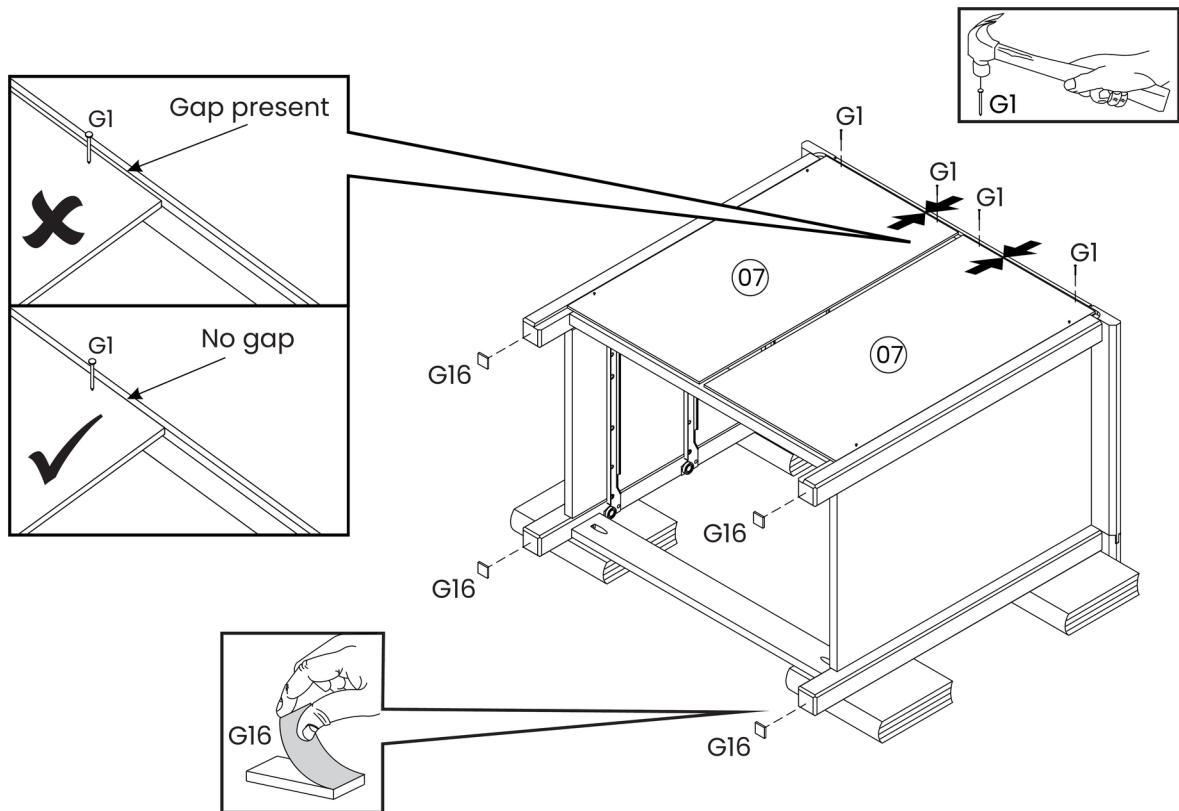
9**10**

There are no predrilled holes for the A4 screws on part 07.


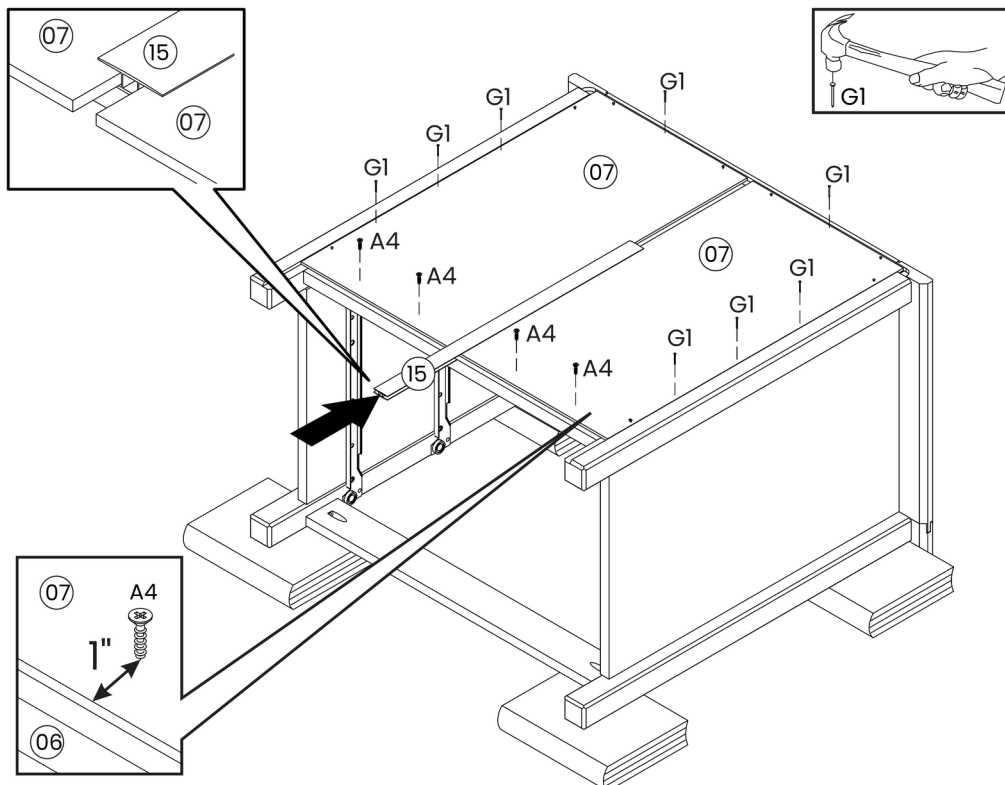


11



There are no predrilled holes for the A1 screws on part 08.

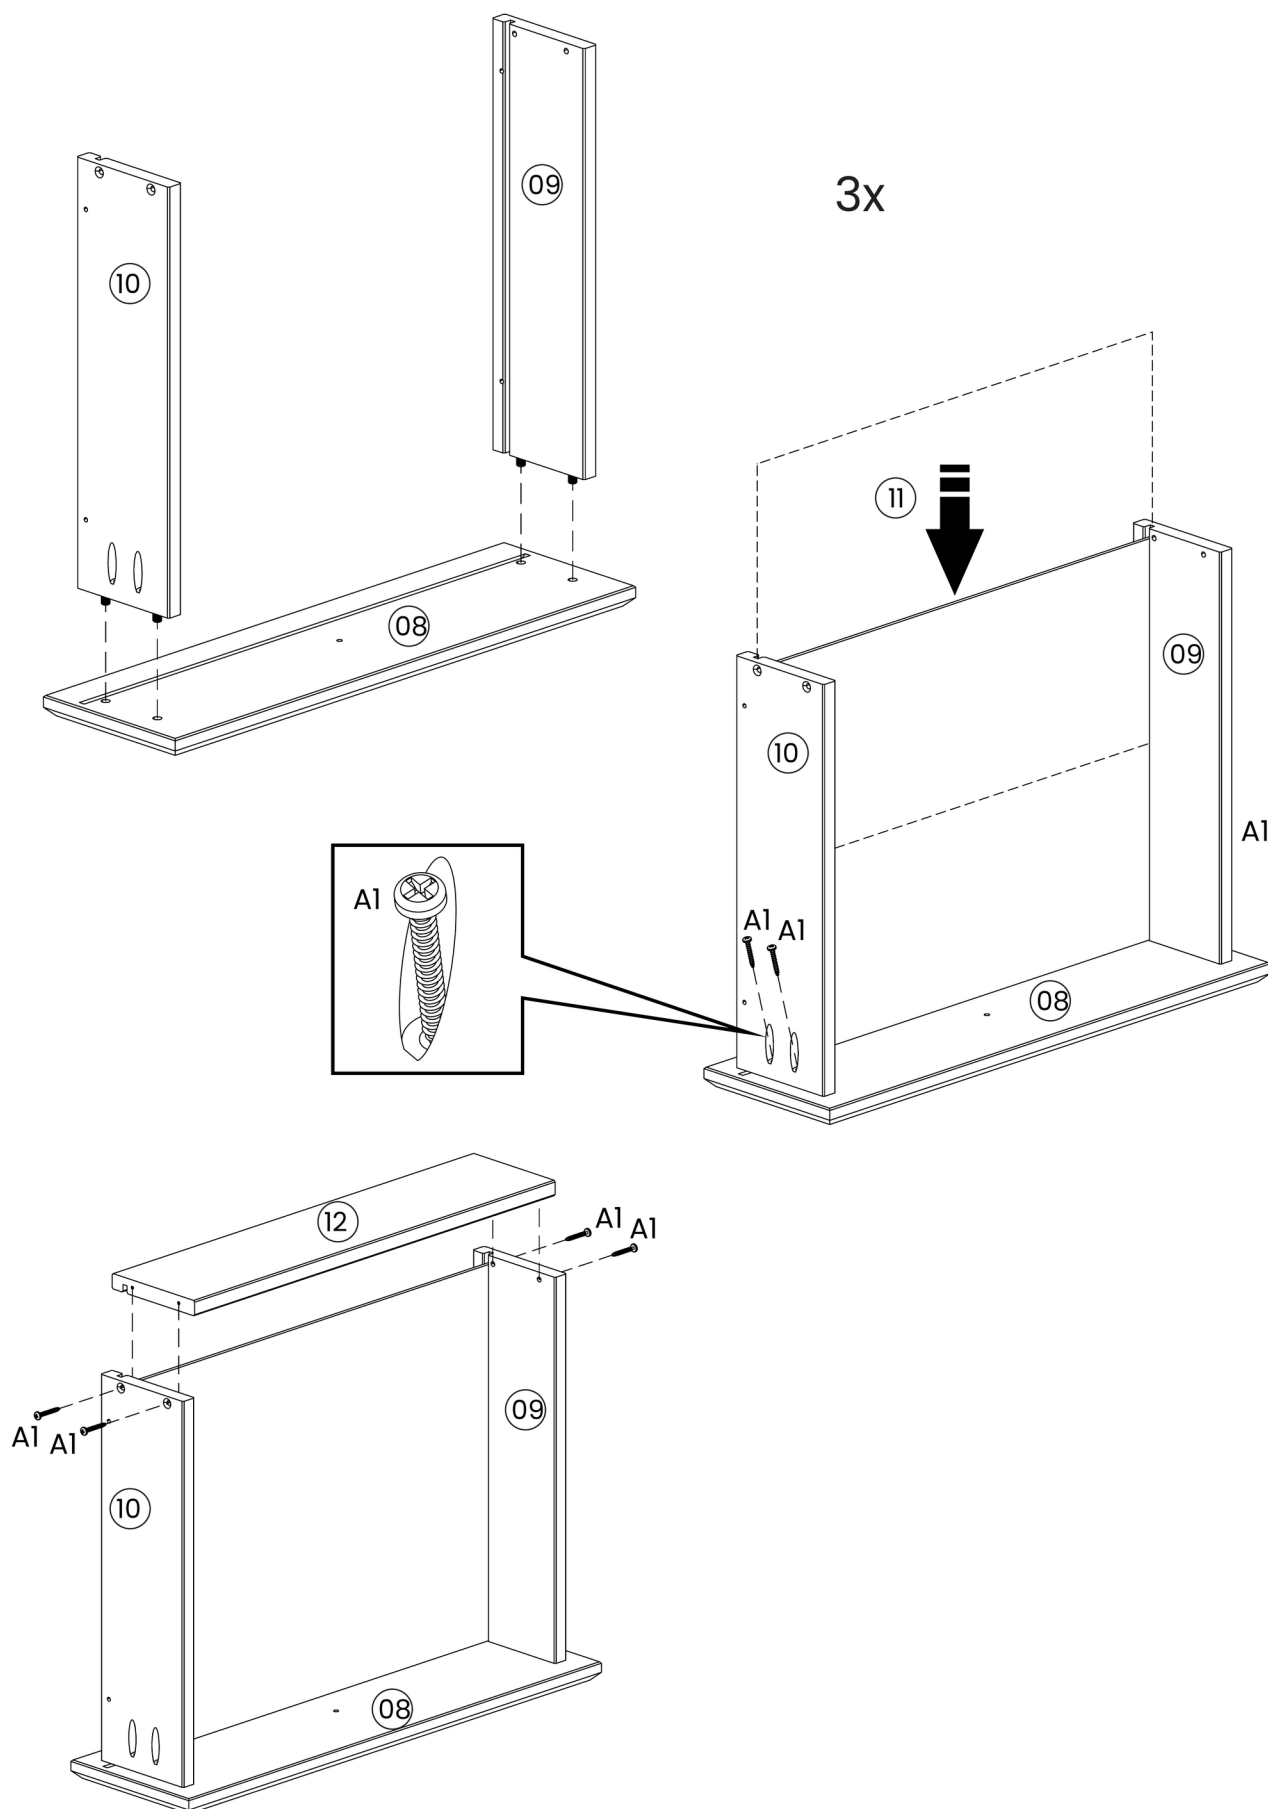

12


E21		3	E22		3	B31		12
------------	---	----------	------------	---	----------	------------	---	-----------

Flip the assembled drawer upside down to install glides.

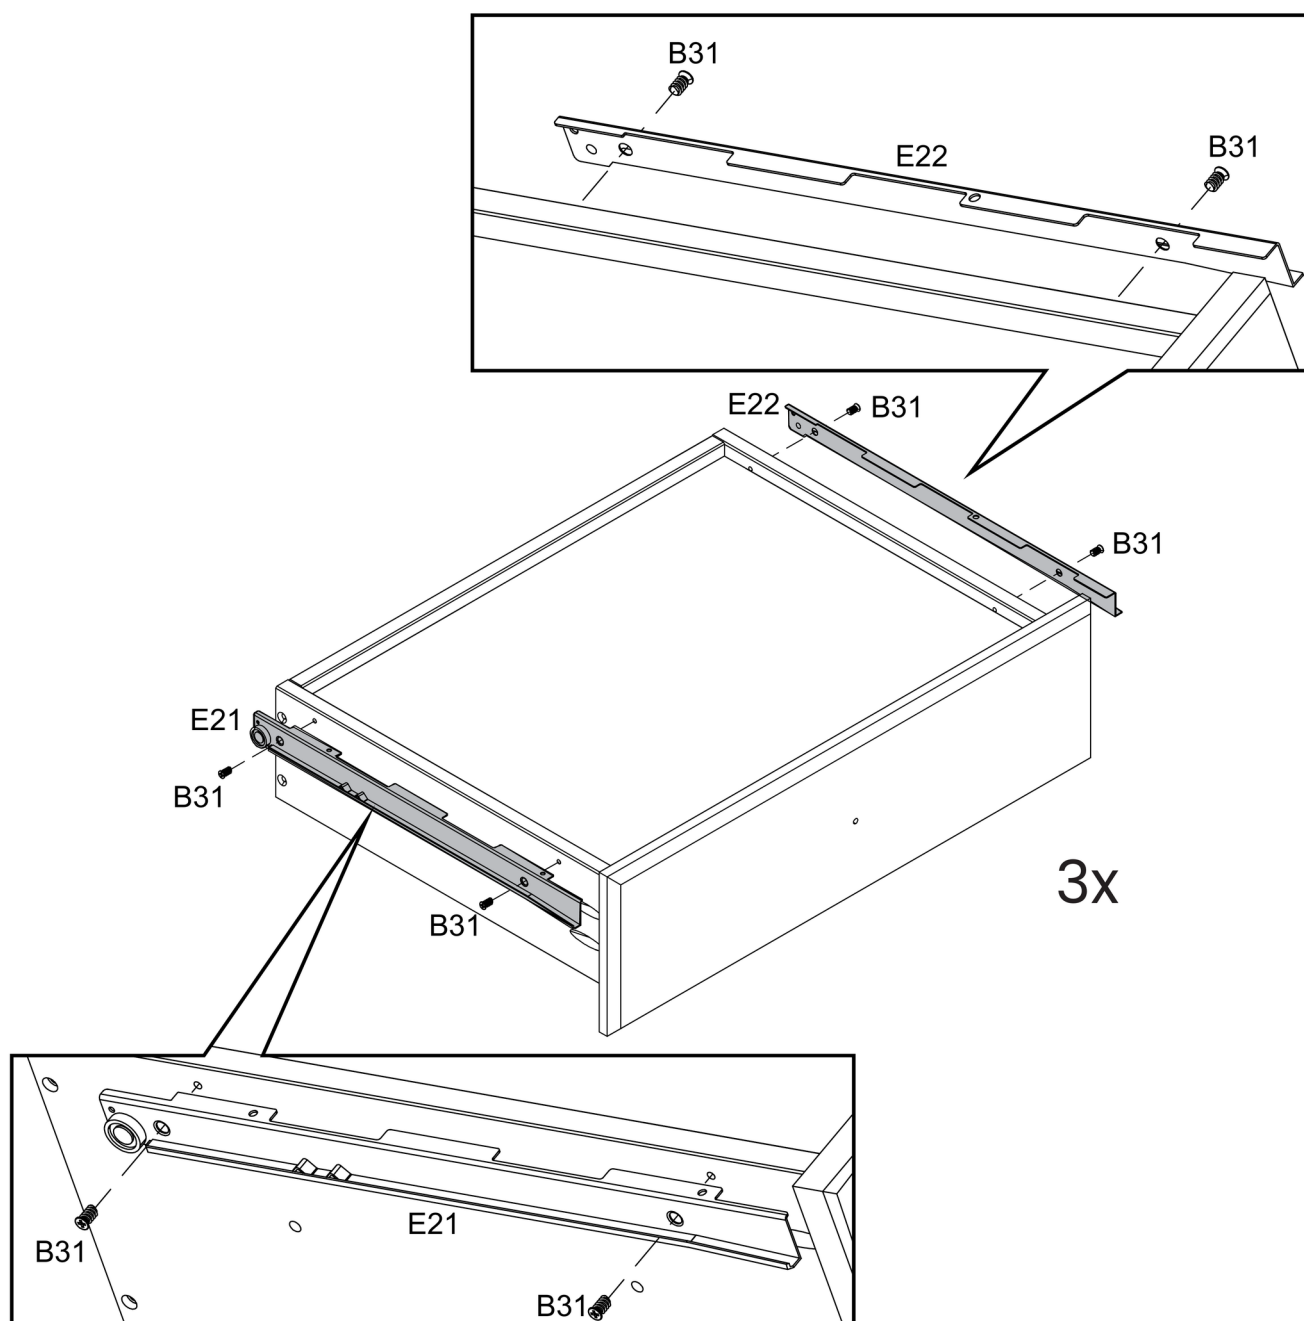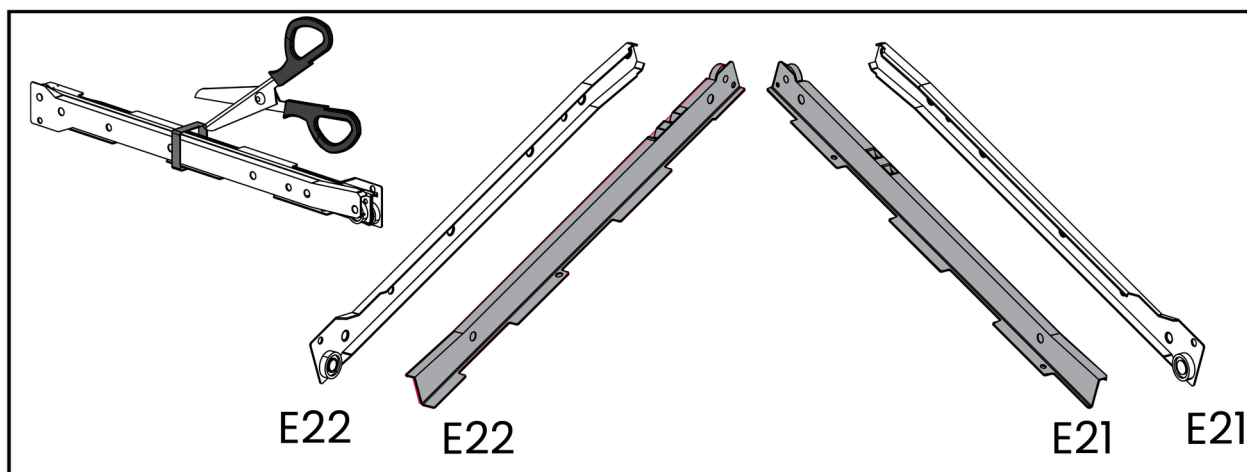

13

A25		3	H4		3
-----	---	---	----	---	---

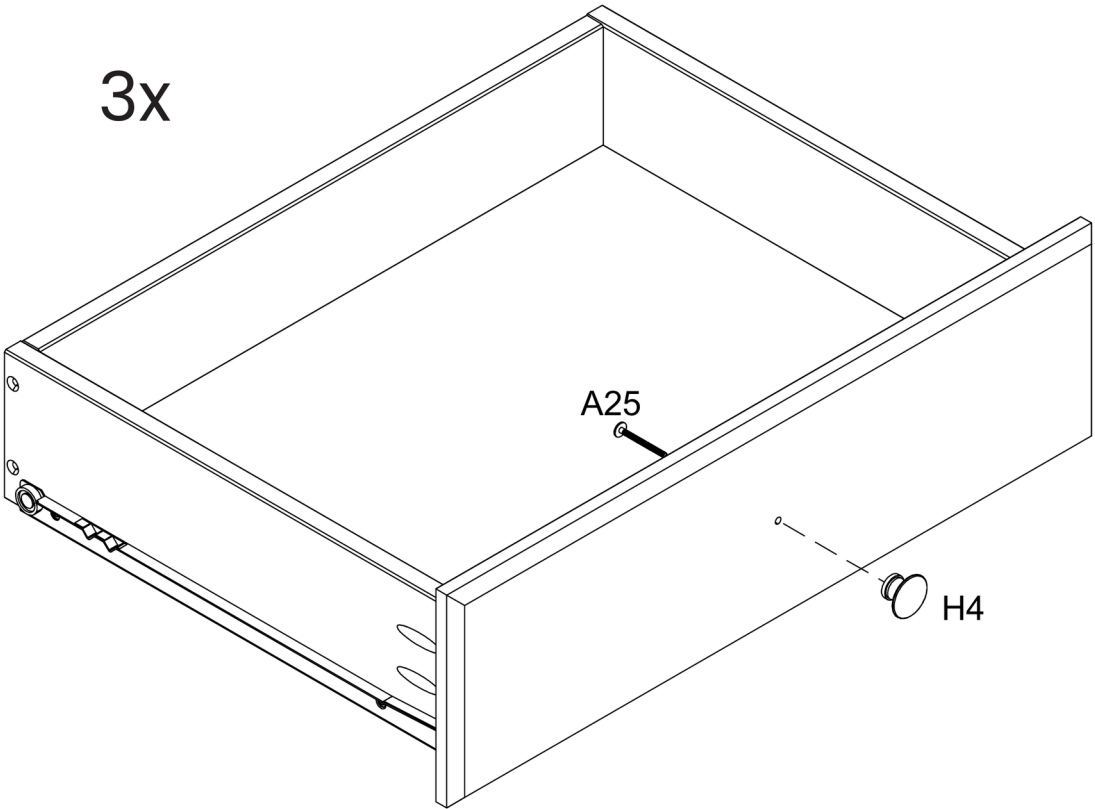

14

