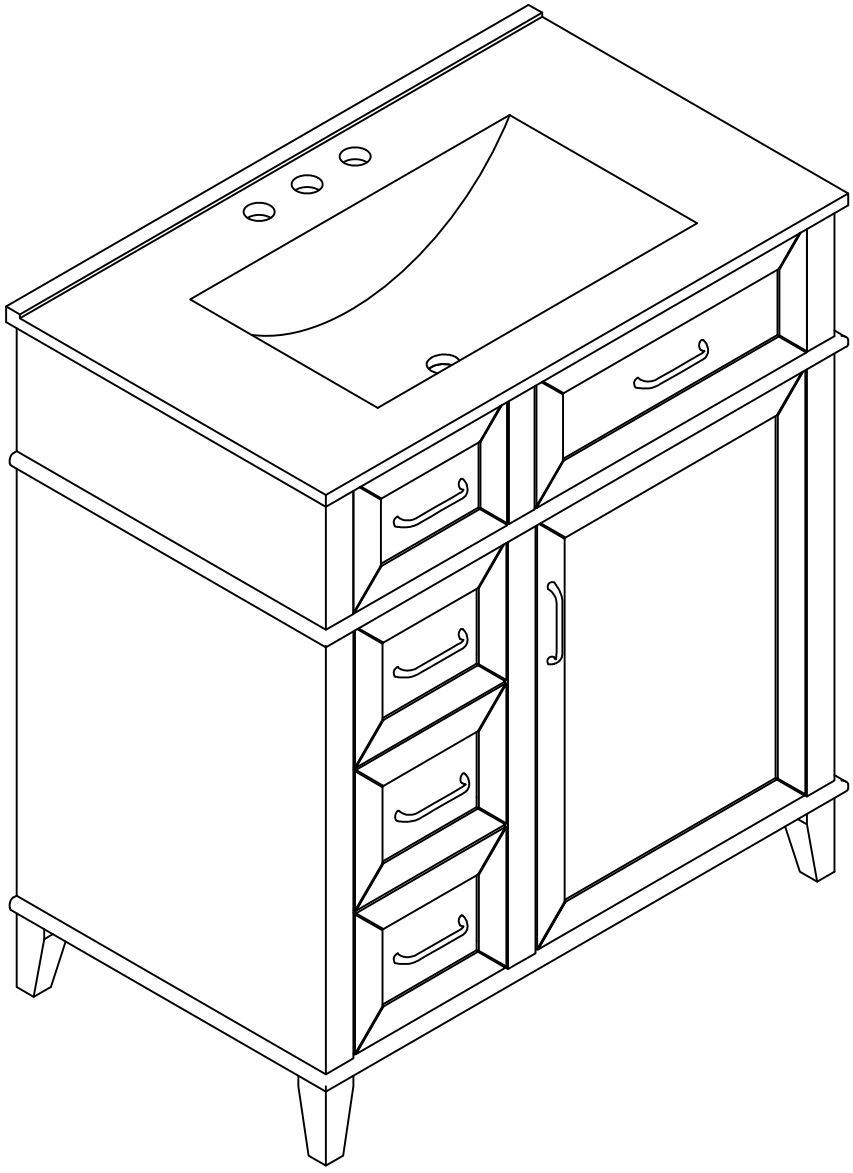
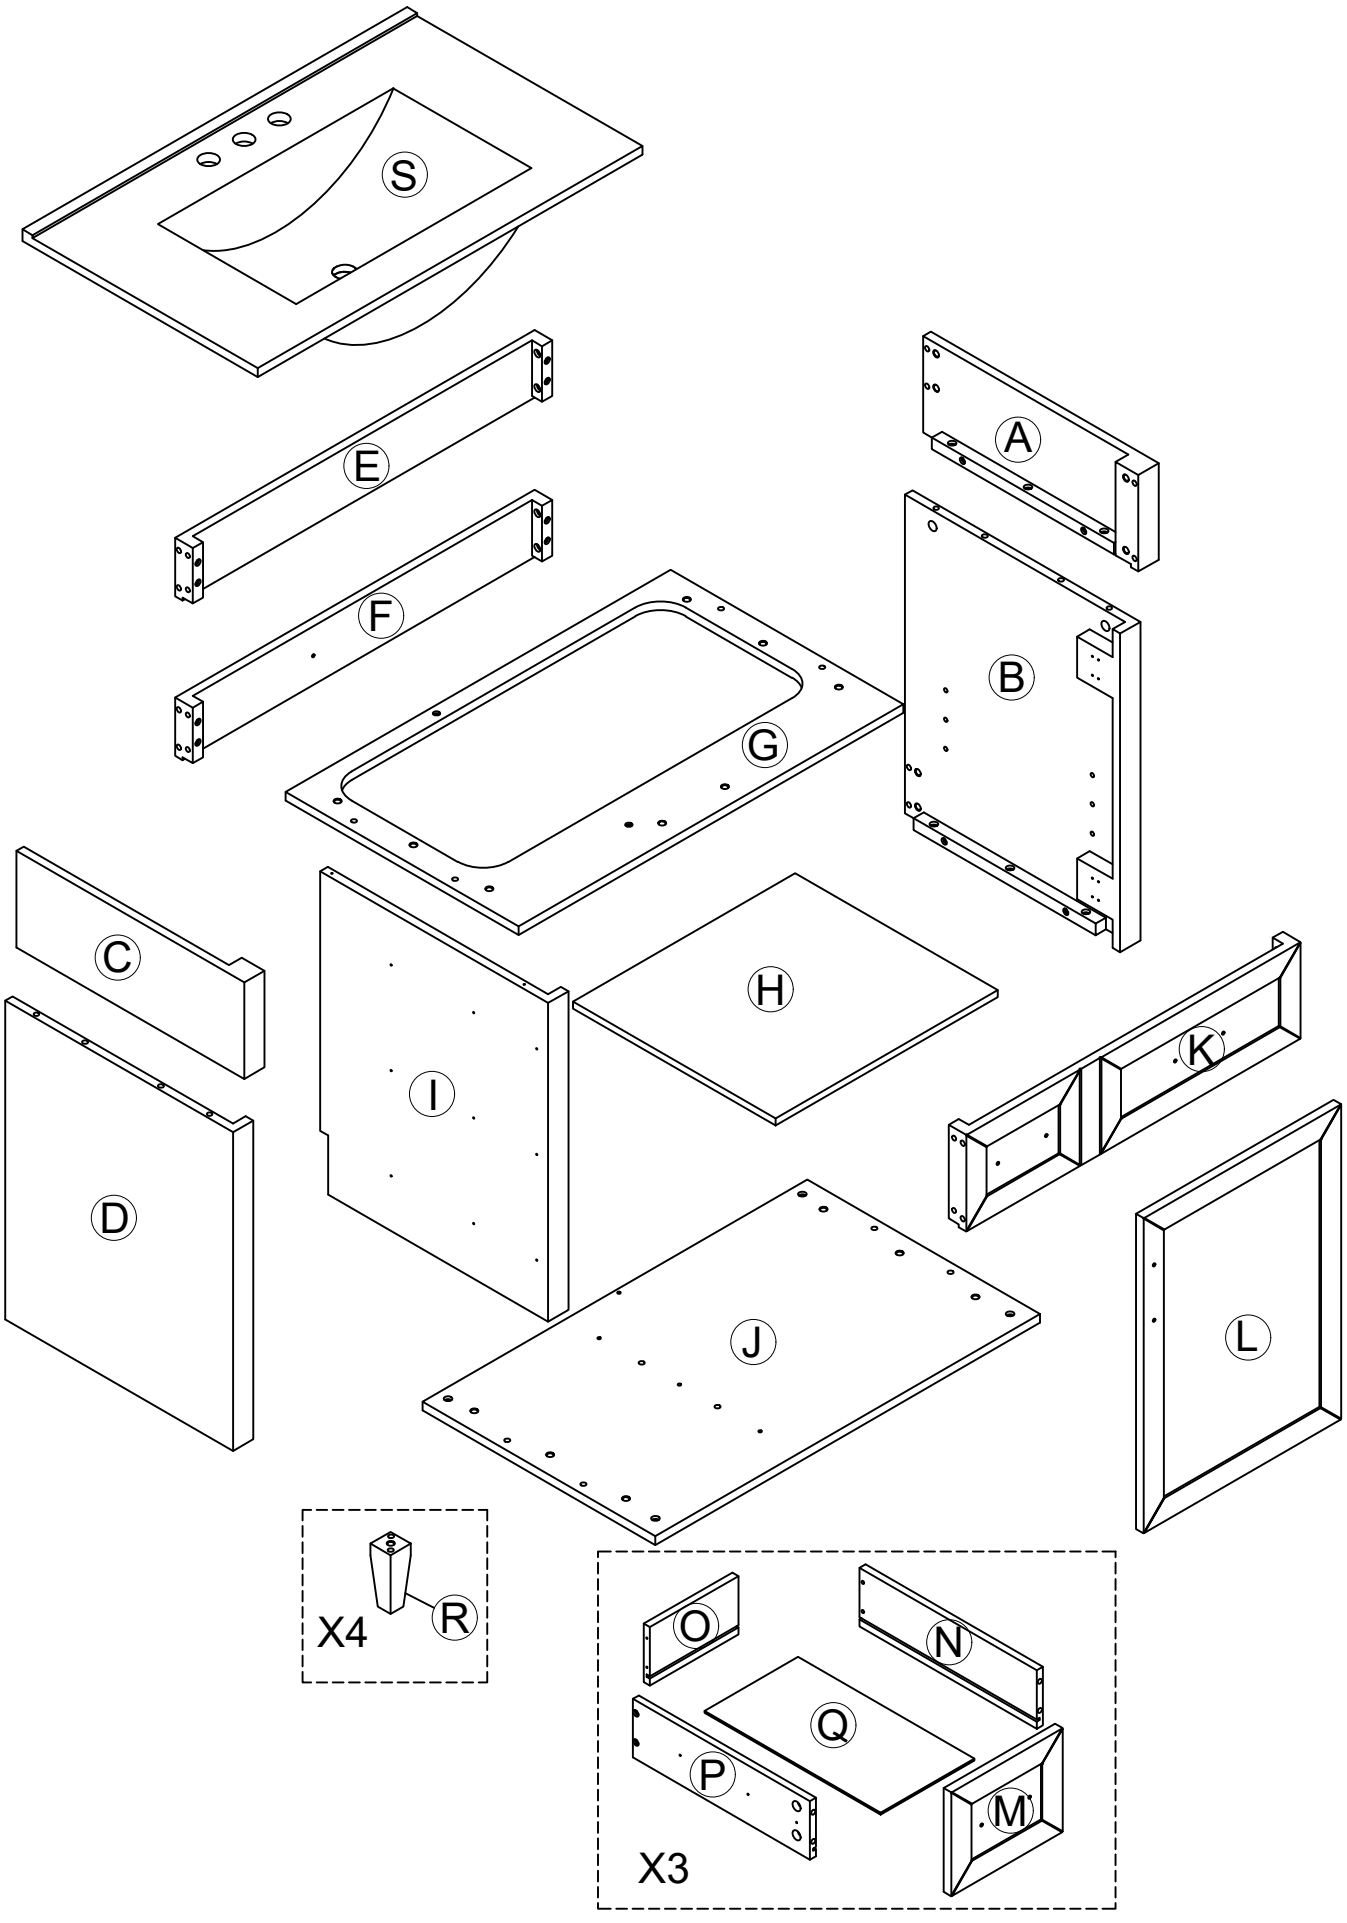
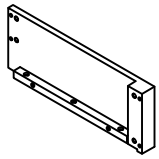

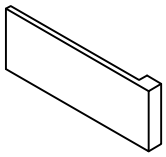

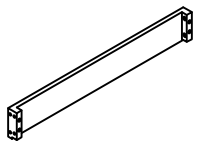
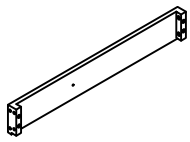
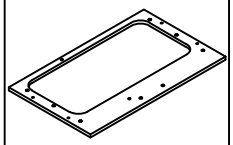


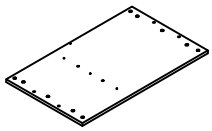
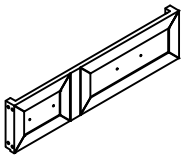

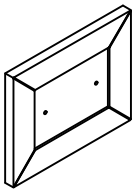
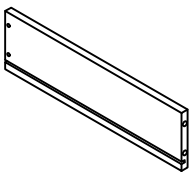

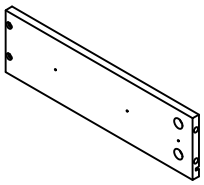
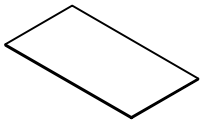

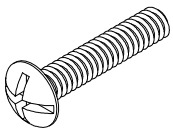

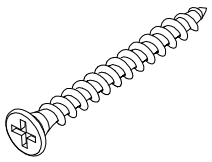
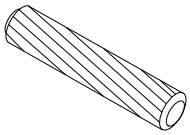

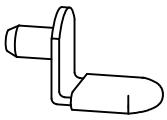
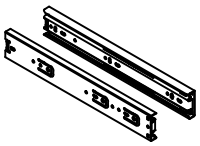







S
E
F
A
B
G
C
D
I
H
K
J
L
X4
R
O
N
Q
P
M
X3


PRODUCT PARTS:


| A | B | C | D | E | F |
|---|---|---|---|---|---|
|  |  |  |  |  |  |
| 1PC | 1PC | 1PC | 1PC | 1PC | 1PC |
| G | H | I | J | K | L |
|  |  |  |  |  |  |
| 1PC | 1PC | 1PC | 1PC | 1PC | 1PC |
| M | N | O | P | Q | R |
|  |  |  |  |  |  |
| 3PCS | 3PCS | 3PCS | 3PCS | 3PCS | 4PCS |
| S | | | | | |
|  | | | | | |
| 1PC | | | | | |

HARDWARE:

| ① | ② | ③ | ④ | ⑤ | ⑥ |
|---|---|---|---|---|---|
|  1/4"x25mm |  Ø4x25mm |  Ø4x35mm |  Ø8x30mm |  |  |
| 24+2 PCS | 12+1 PCS | 7 PCS | 34+2 PCS | 6 PCS | 2 PCS |
| ⑦ | ⑧ | ⑨ | ⑩ | ⑪ | ⑫ |
|  Ø4x12mm |  |  12"x45mm |  Ø3x10mm |  Ø6x33mm |  Ø15x9mm |
| 12+1 PCS | 4 PCS | 3 SET | 36+2 PCS | 16+1 PCS | 16+1 PCS |
| ⑬ | ⑭ | | | | |
|  5/32"x15mm |  1/4"x25mm | | | | |
| 12 PCS | 6 PCS | | | | |


STEP 1

④  8pcs
Ø8x30mm

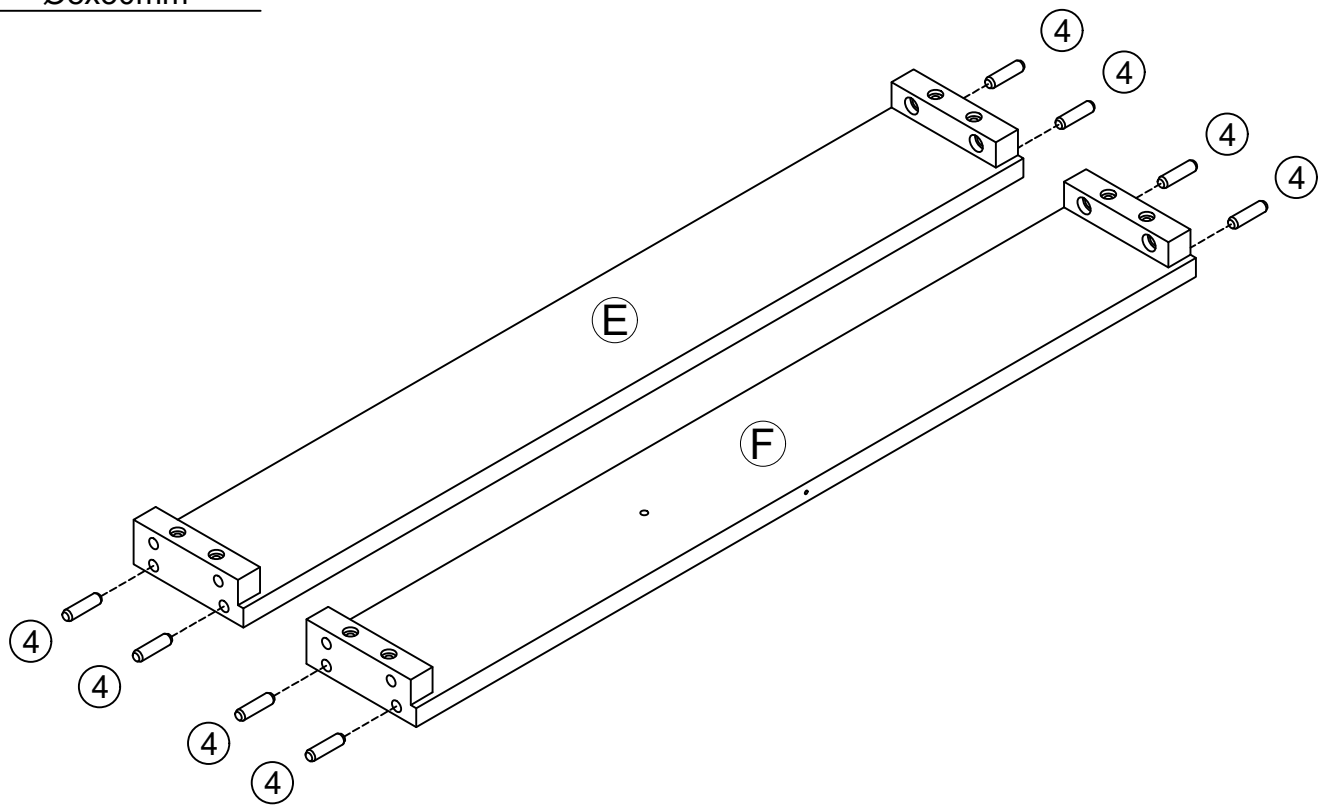




STEP 2

④  4pcs
Ø8x30mm

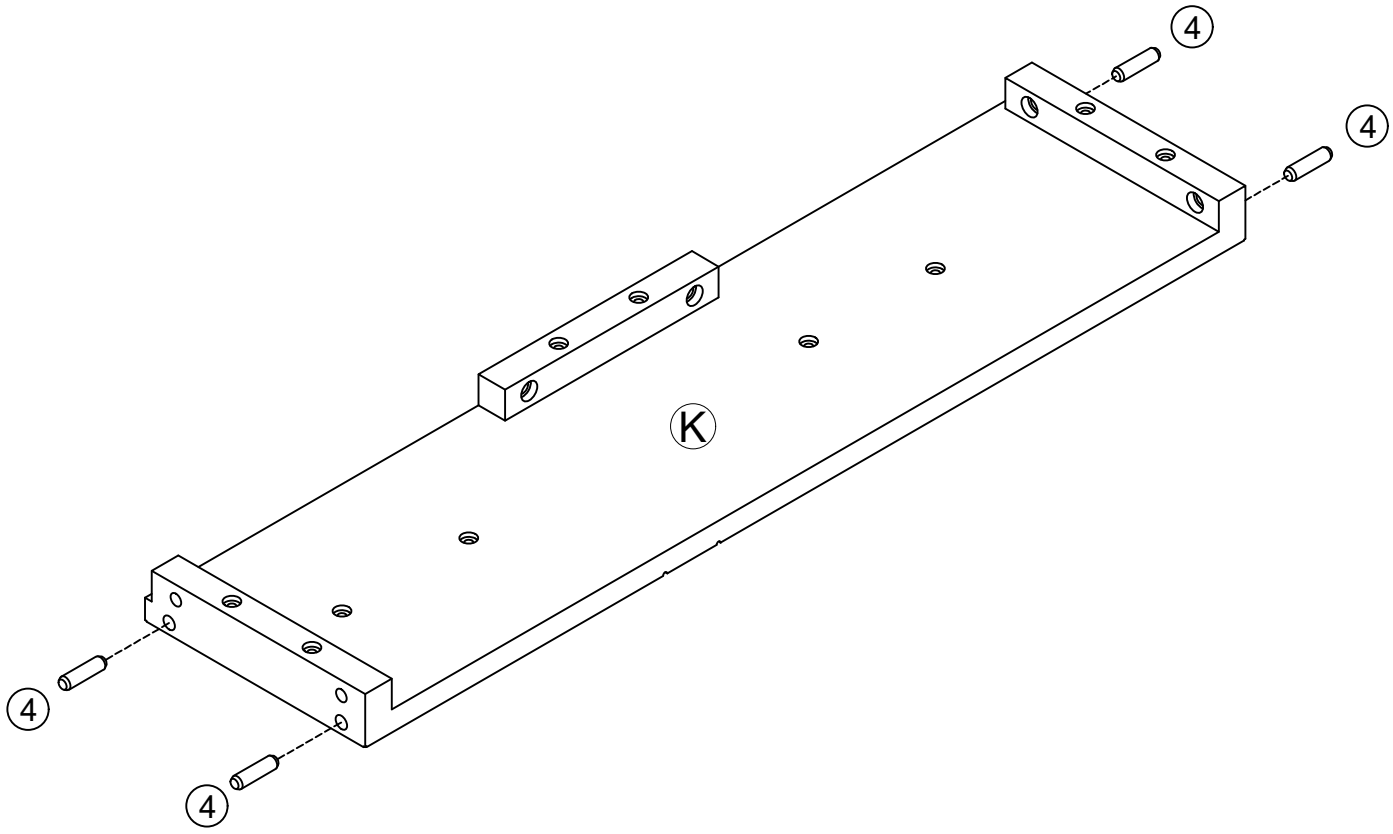


STEP 3

④  2pcs
Ø8x30mm

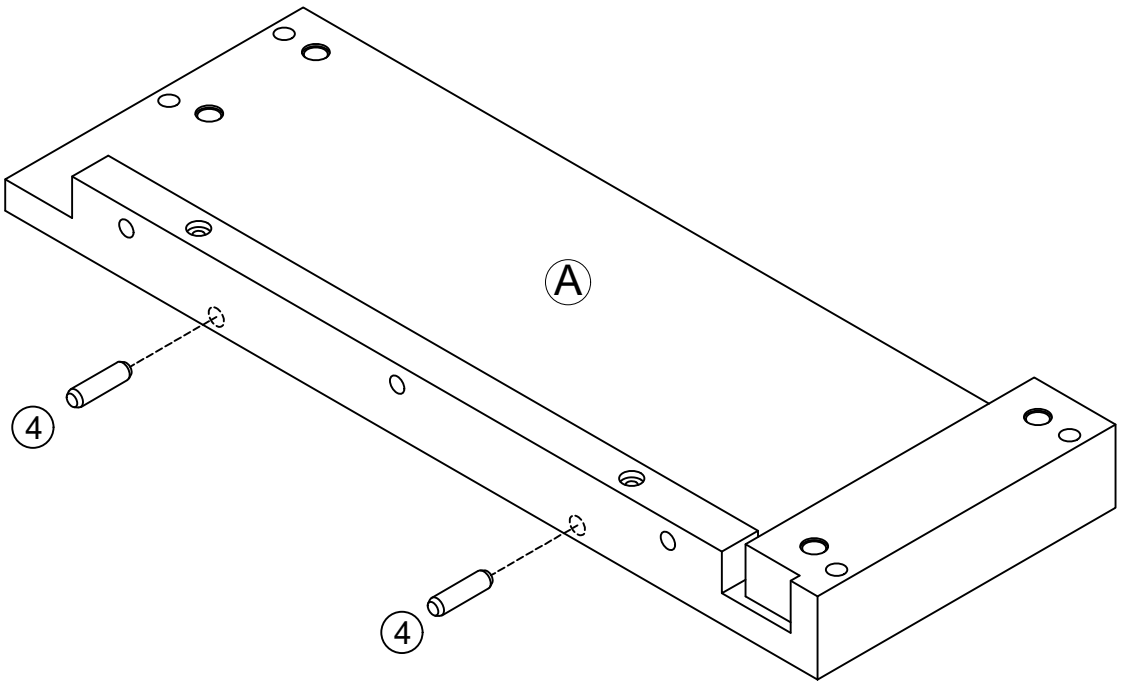



STEP 4

④  2pcs
Ø8x30mm

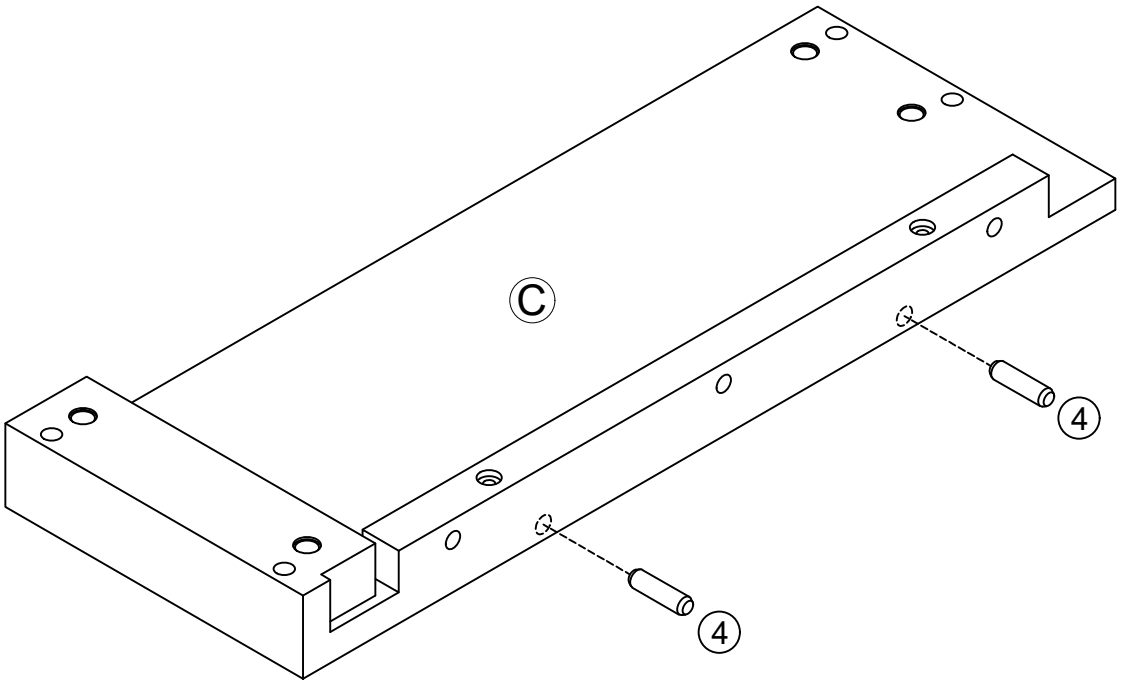


STEP 5


④ 4pcs
Ø8x30mm

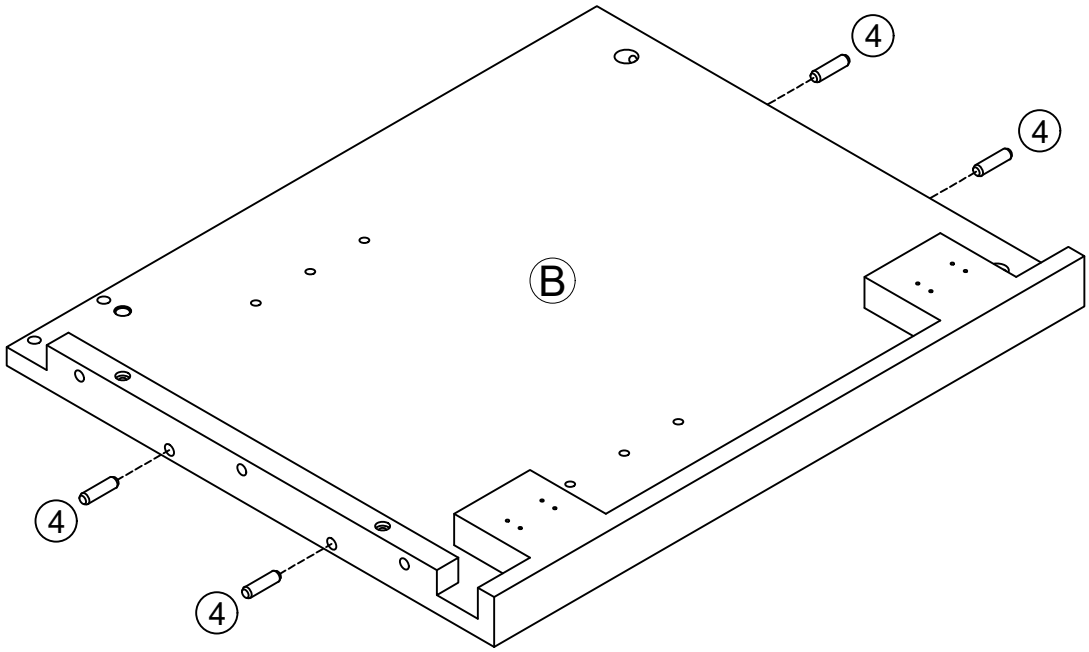



STEP 6

⑪ 4pcs
Ø6x33mm

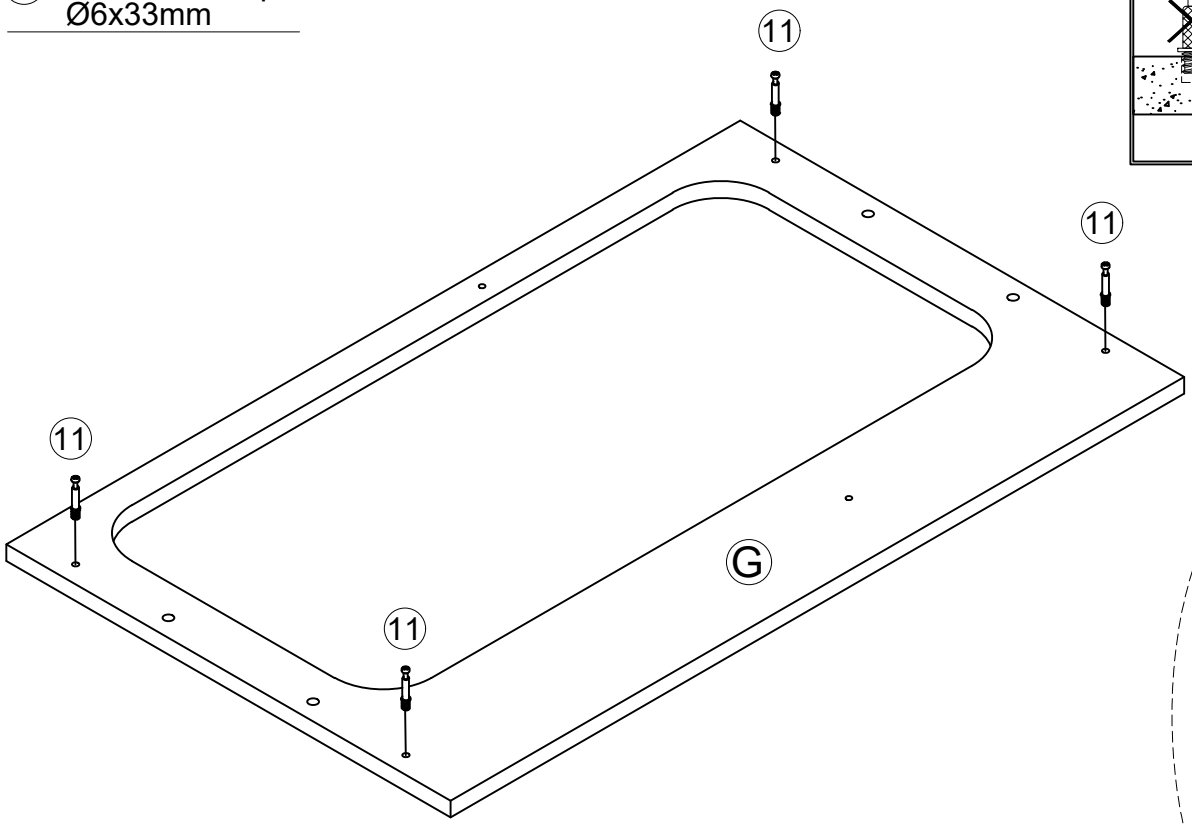


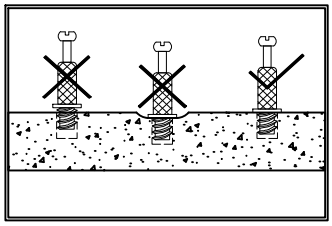

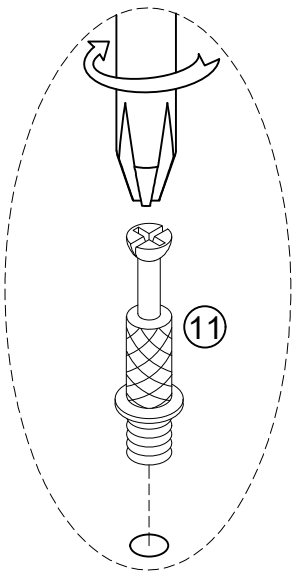STEP 7

⑨ 3SET
12"x45mm

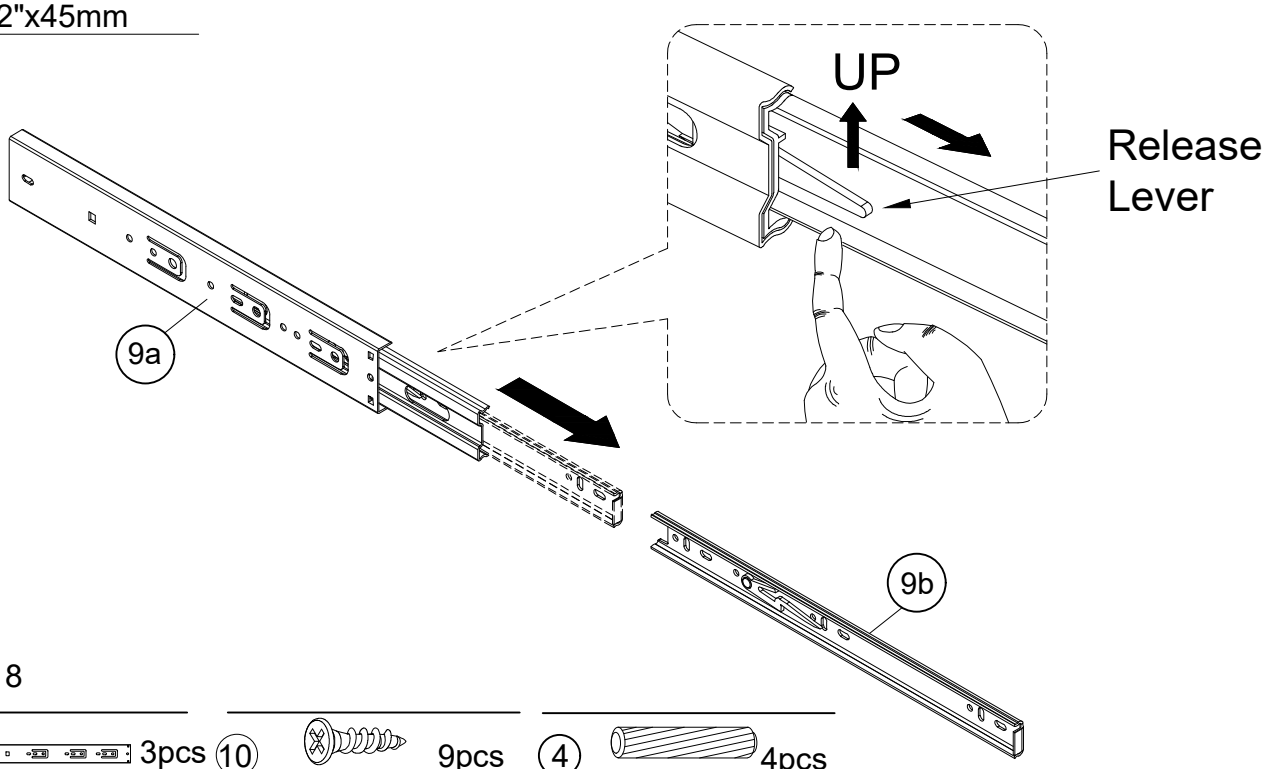



STEP 8


⑨a 3pcs
12"x45mm

⑩ 9pcs
Ø3x10mm


④ 4pcs
Ø8x30mm

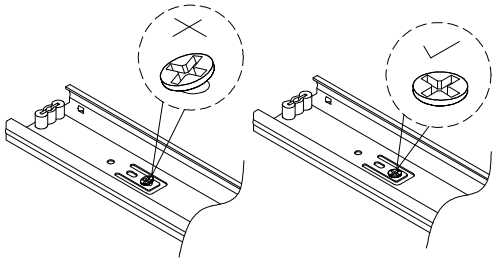

Please make sure that the screw is VERTICAL so as not to affect the sliding of the drawer.

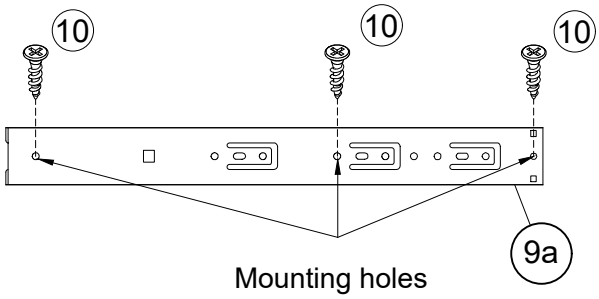



Mounting holes

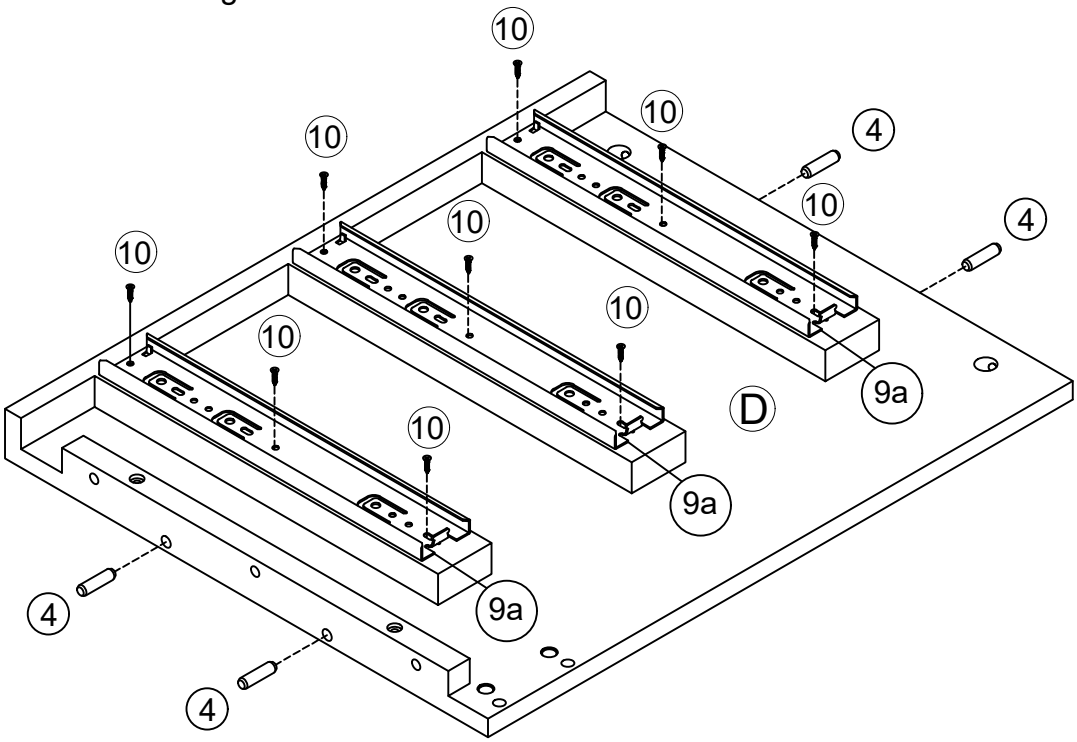

STEP 9

⑨ 3SET
12"x45mm

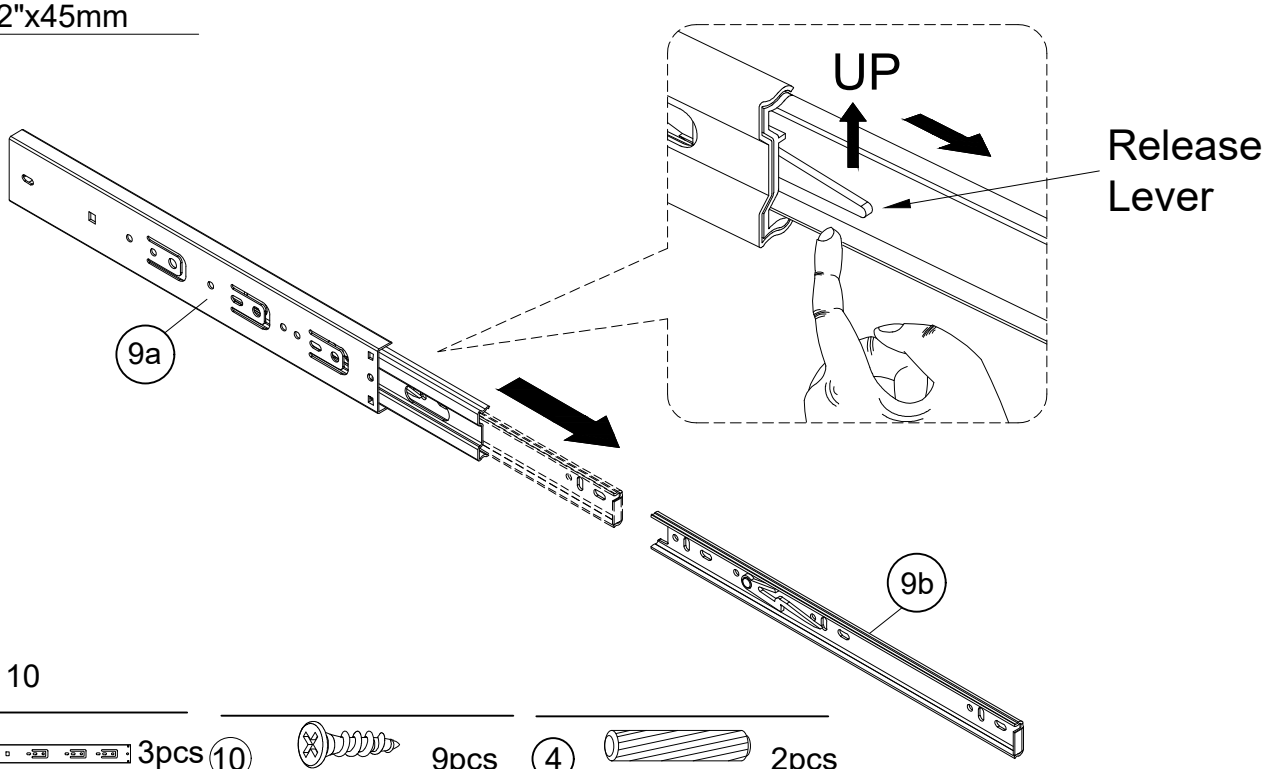



STEP 10


⑨a 3pcs
12"x45mm

⑩ 9pcs
Ø3x10mm


④ 2pcs
Ø8x30mm

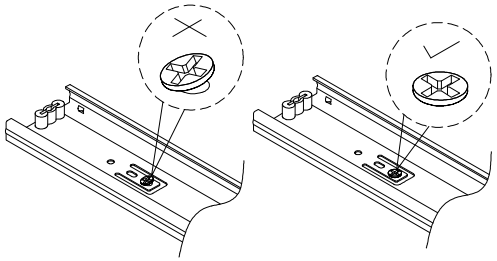

Please make sure that the screw is VERTICAL
so as not to affect the sliding of the drawer.

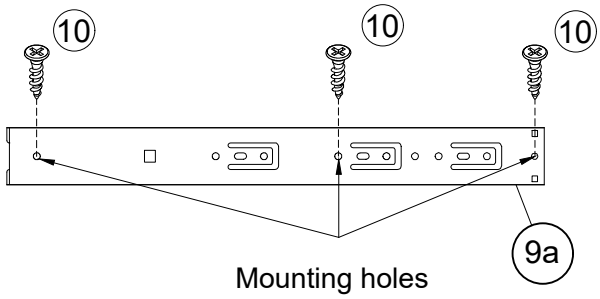



Mounting holes

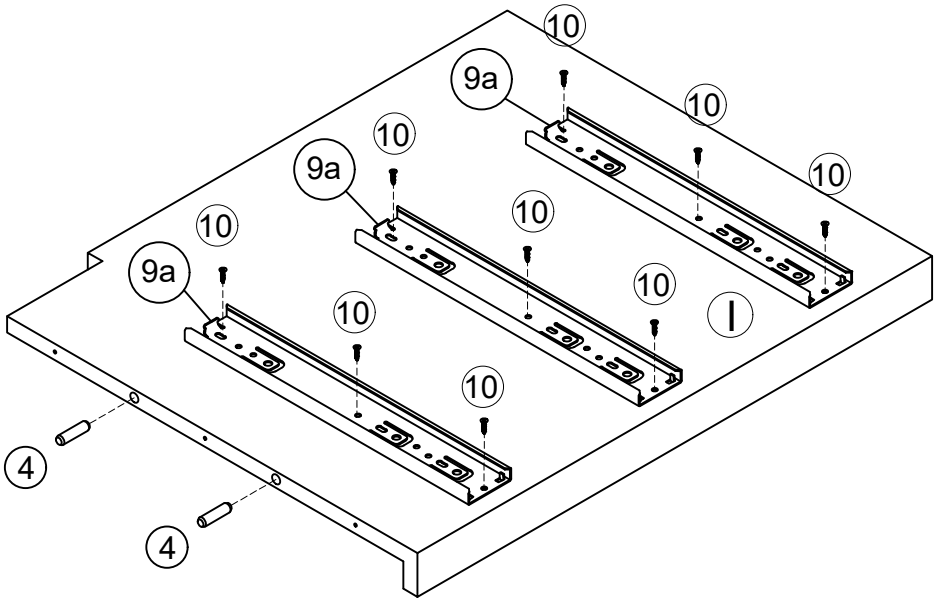


STEP 11

① 1/4"x25mm 4pcs ④ Ø8x30mm 8pcs

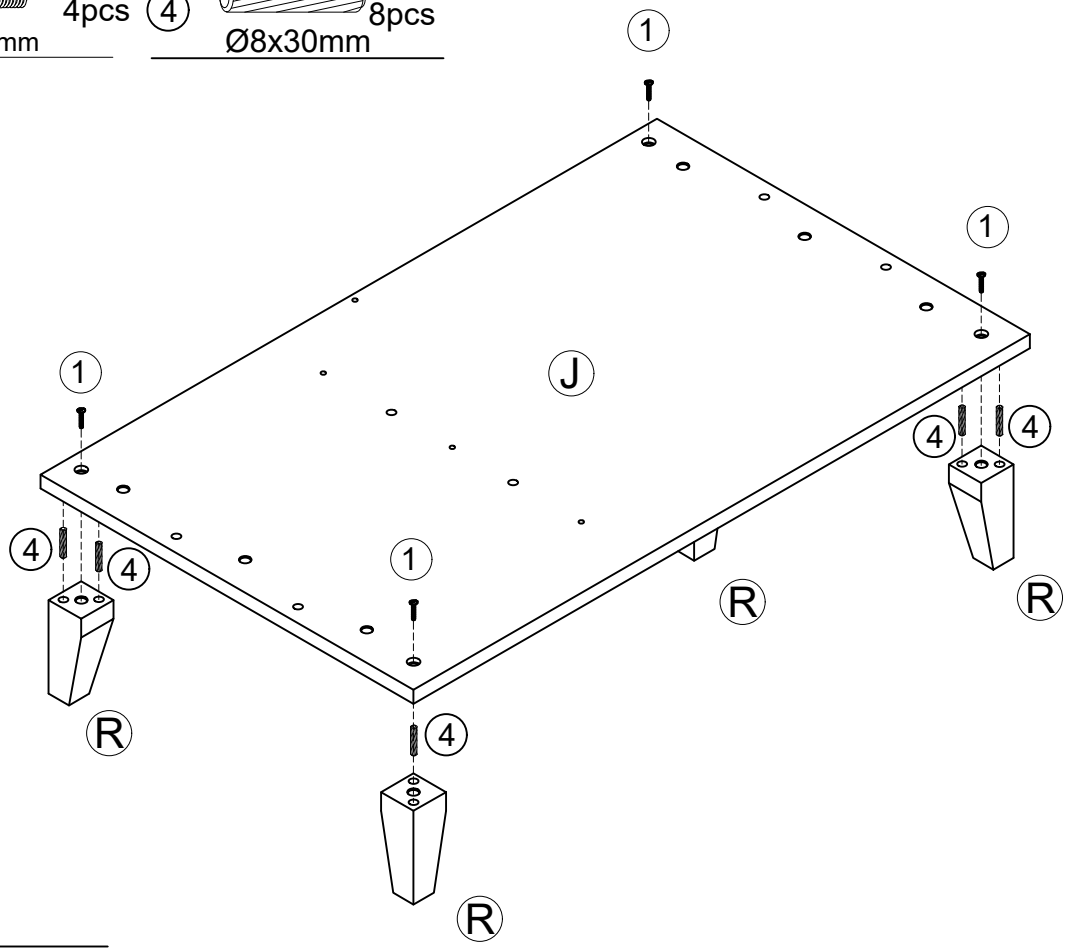


STEP 12


① 1/4"x25mm 2pcs

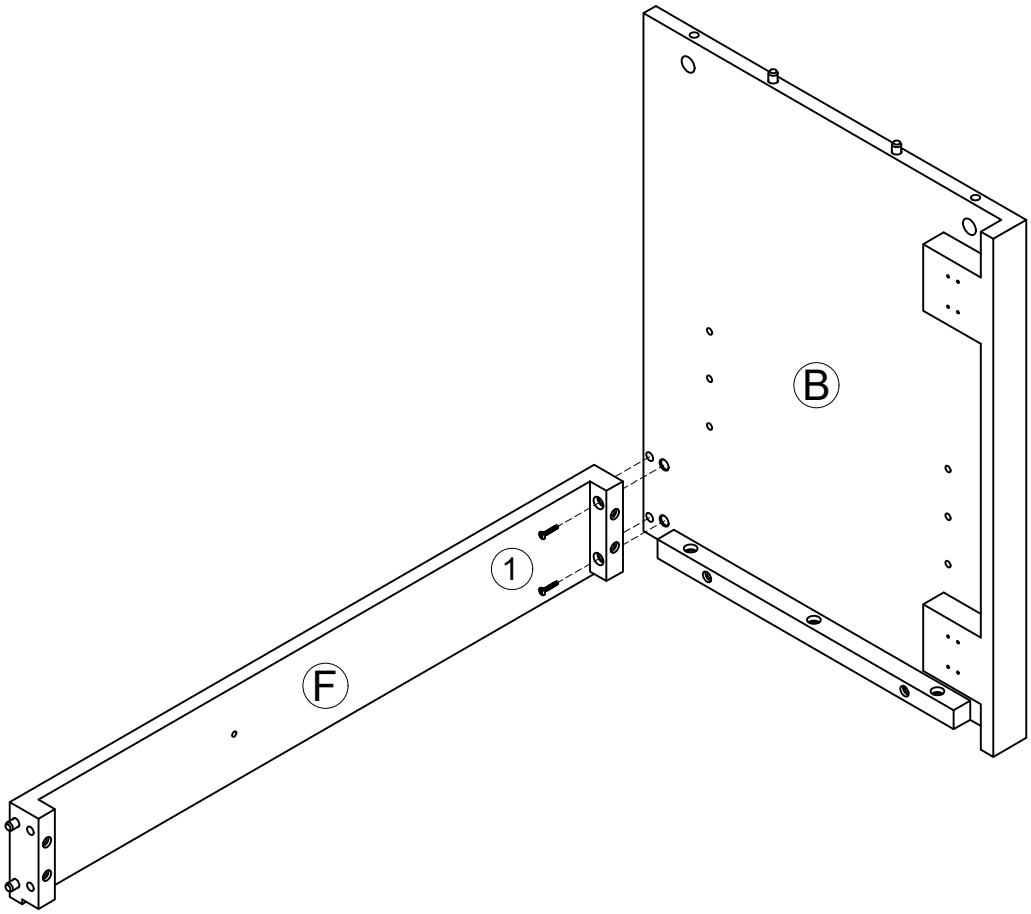

STEP 13

①  2pcs


1/4"x25mm

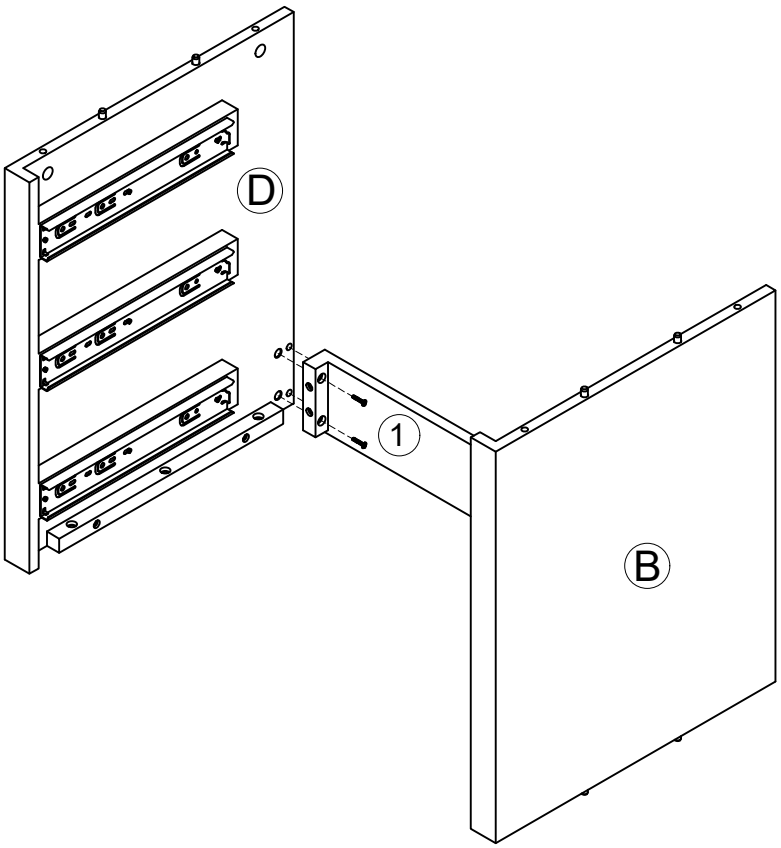



STEP 14

⑭  6pcs


1/4"x25mm

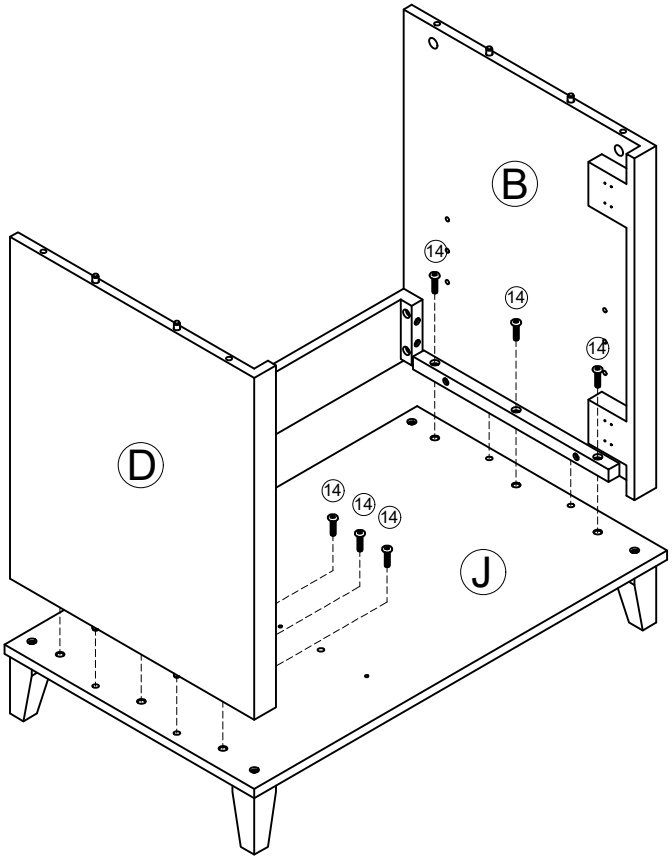

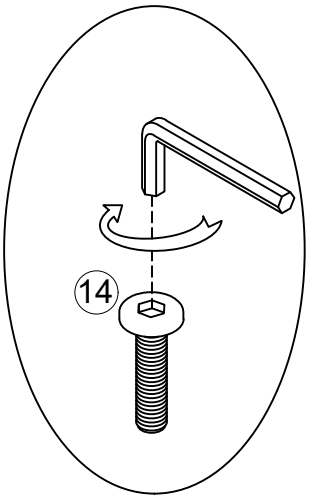STEP 15


③ 3pcs
Ø4x35mm

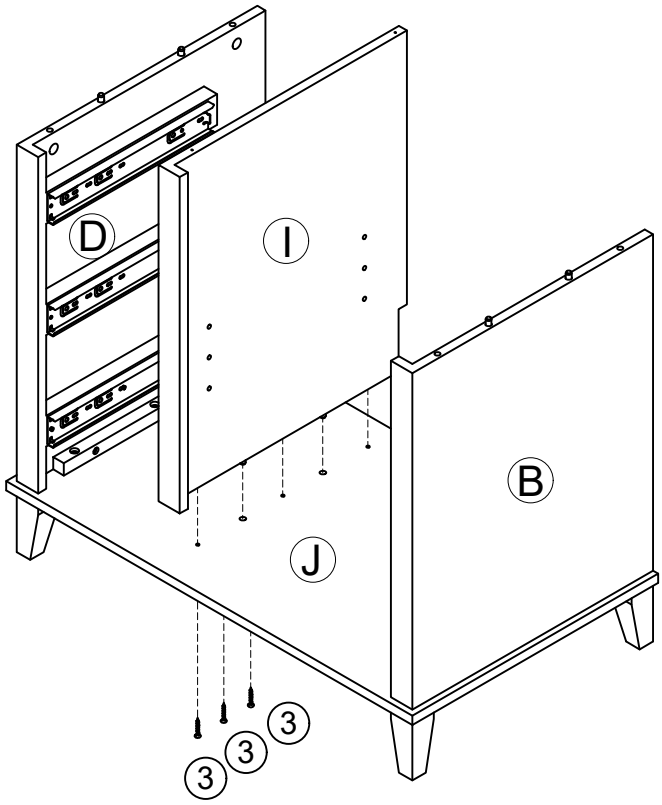



STEP 16

③ 4pcs
Ø4x35mm

⑫ 4pcs
Ø15x9mm

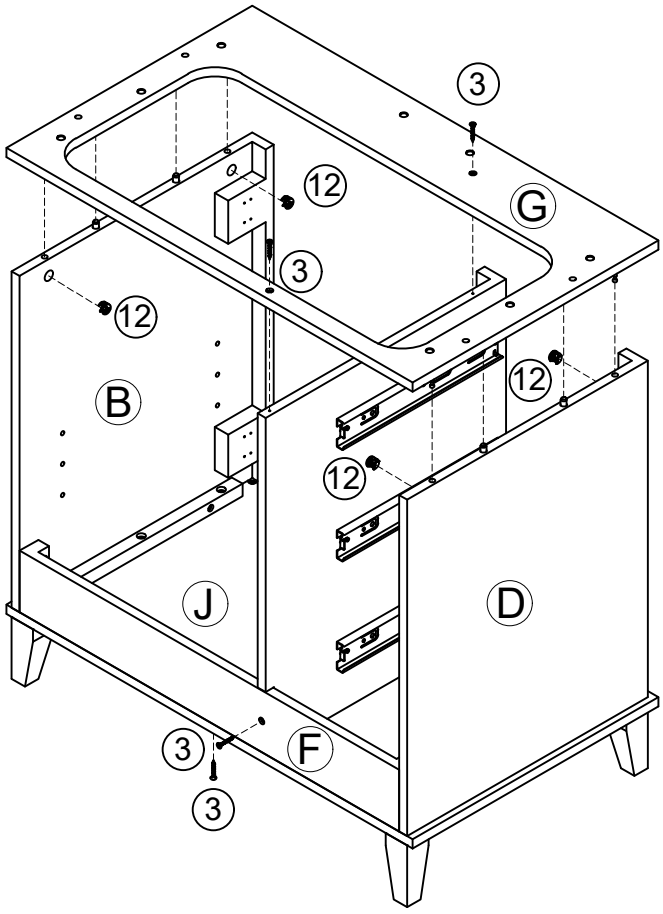


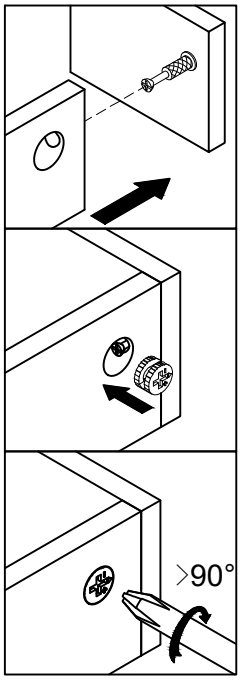STEP 17

①  4pcs


1/4"x25mm

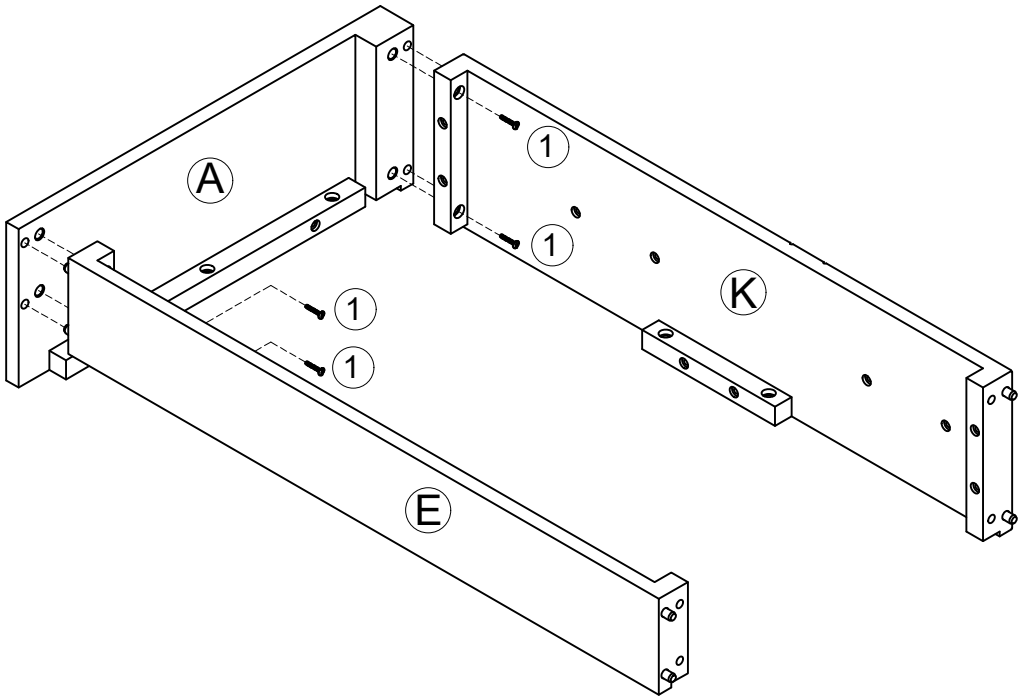


STEP 18


①  4pcs

1/4"x25mm

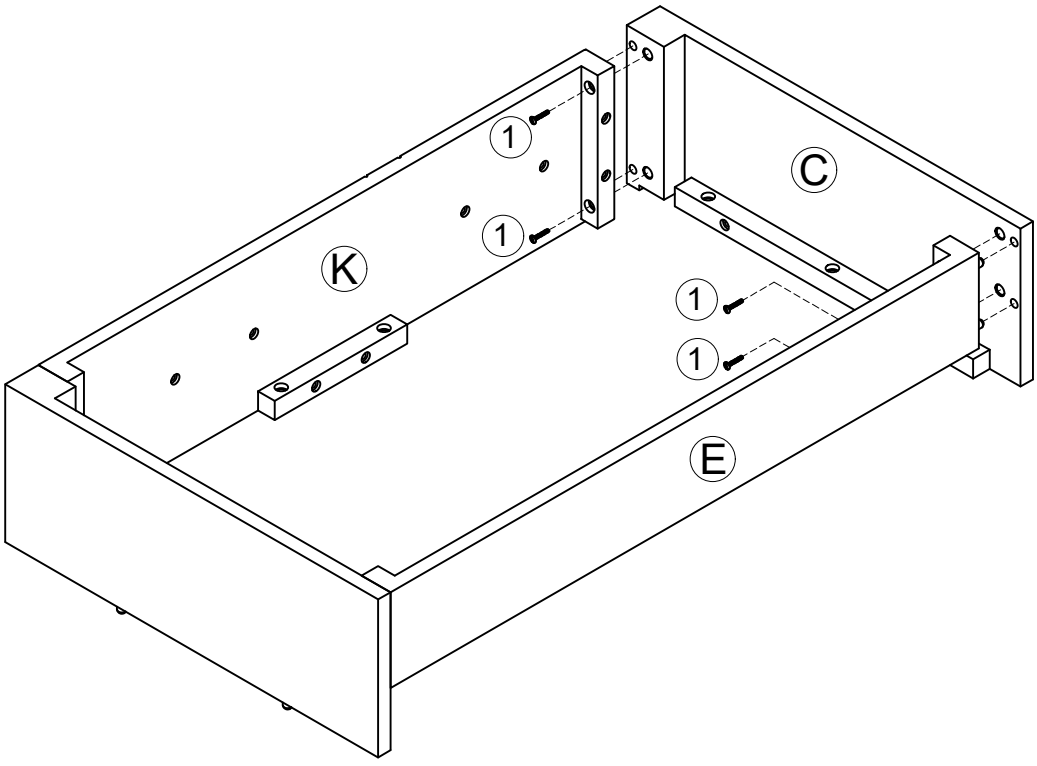


STEP 19


① 8pcs
1/4"x25mm

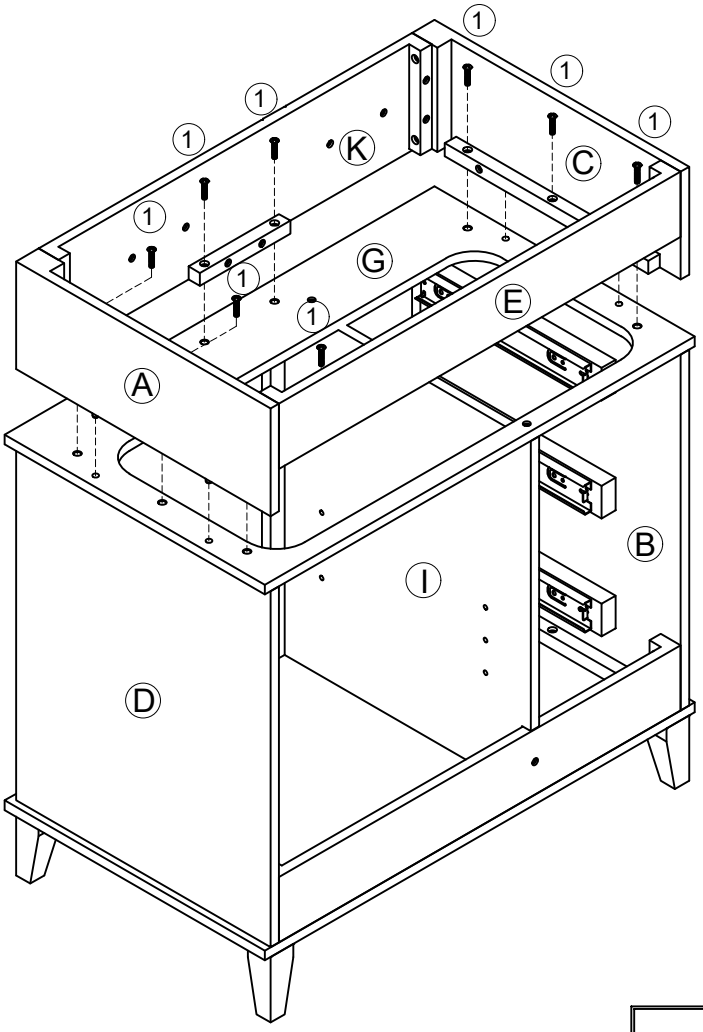



STEP 20

⑪ 12pcs
Ø6x33mm

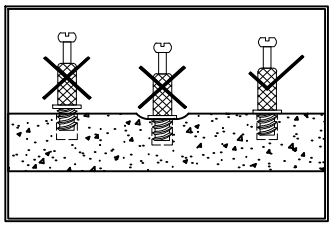

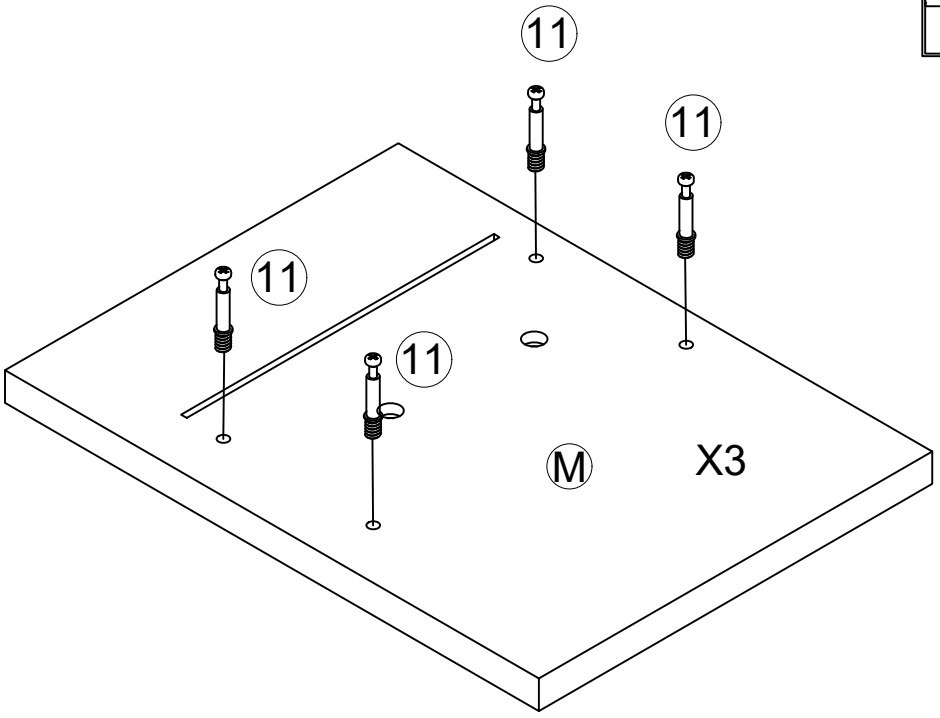


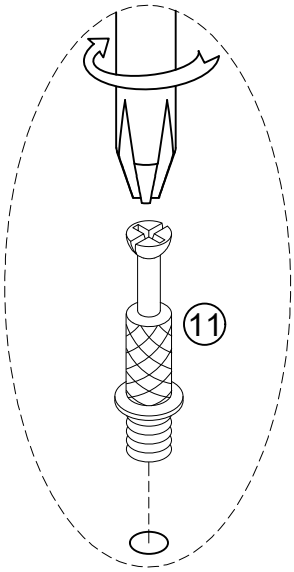



STEP 21

9b 6pcs 12"x45mm

10 18pcs Ø3x10mm

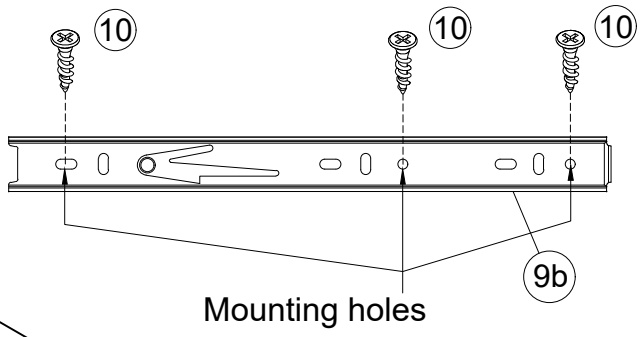


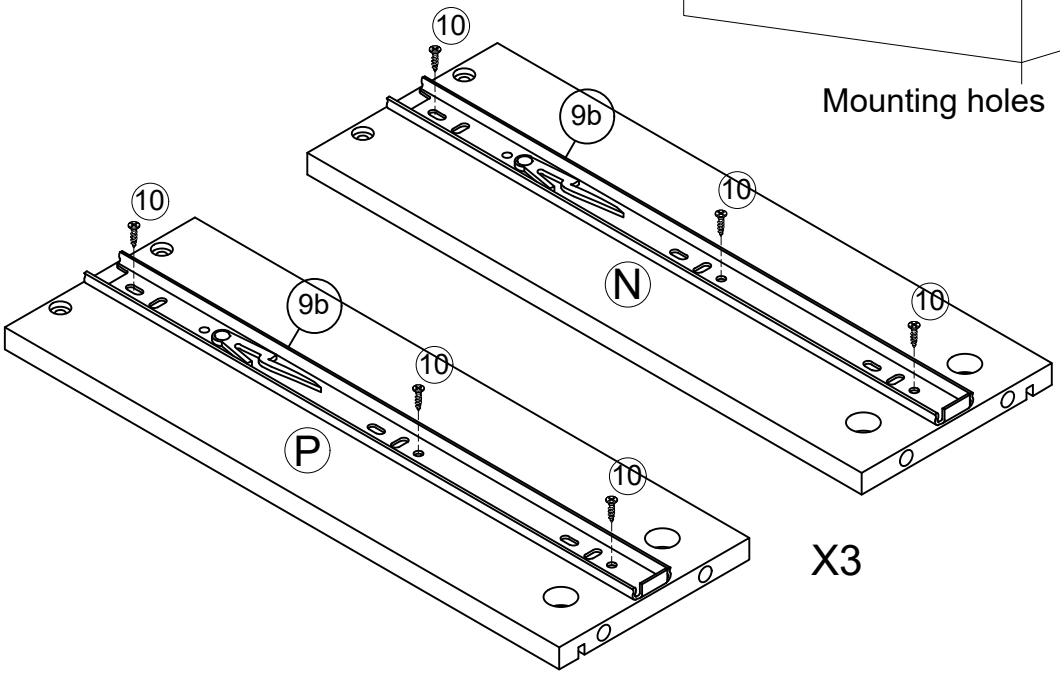
X3


STEP 22

2 12pcs Ø4x25mm

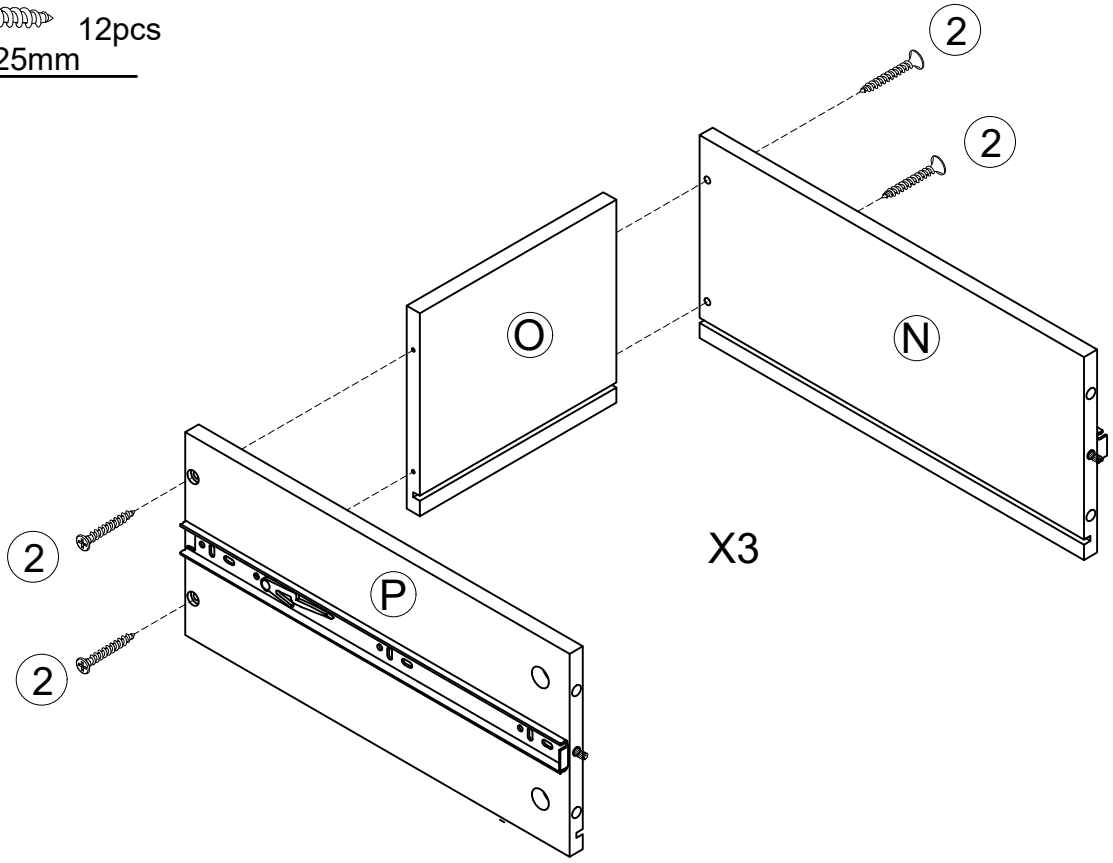



X3

STEP 23

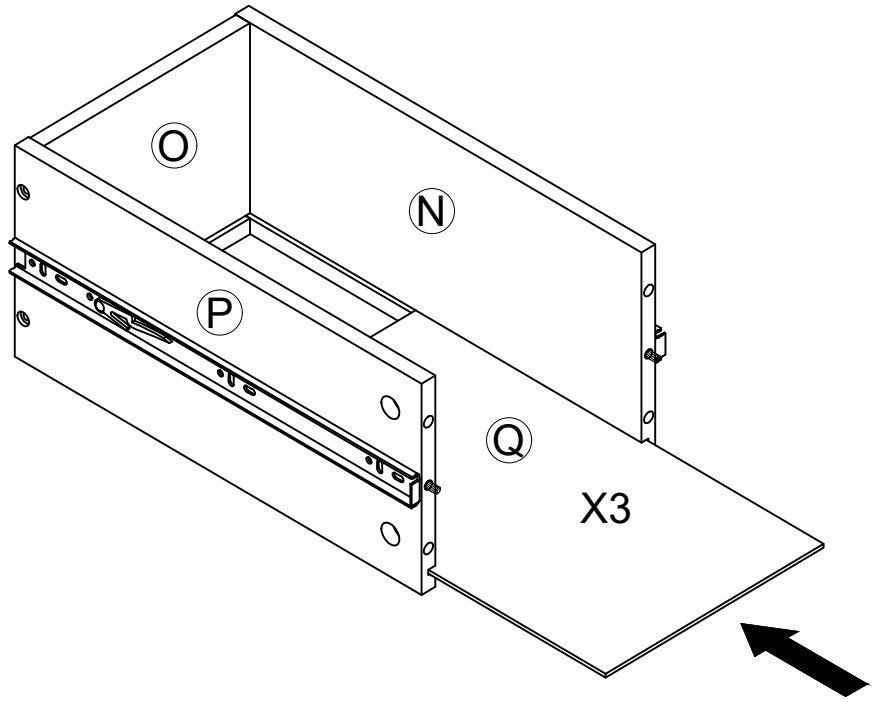




STEP 24


| | | | | | |
|---|---|---|---|---|---|
| 12 | Ø15x9mm | 12pcs | 5 | 3pcs | 13 | 5/32"x15mm | 6pcs |

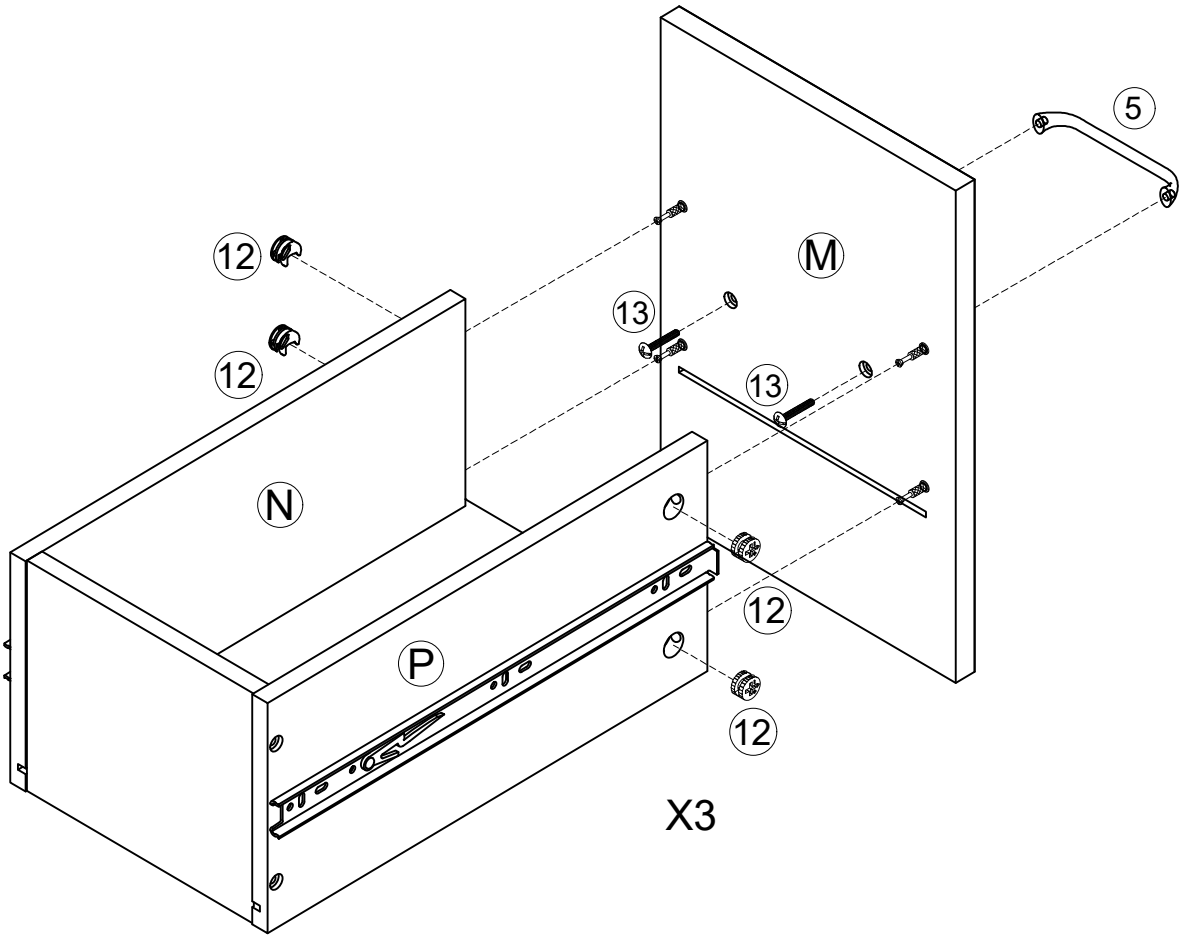


STEP 25


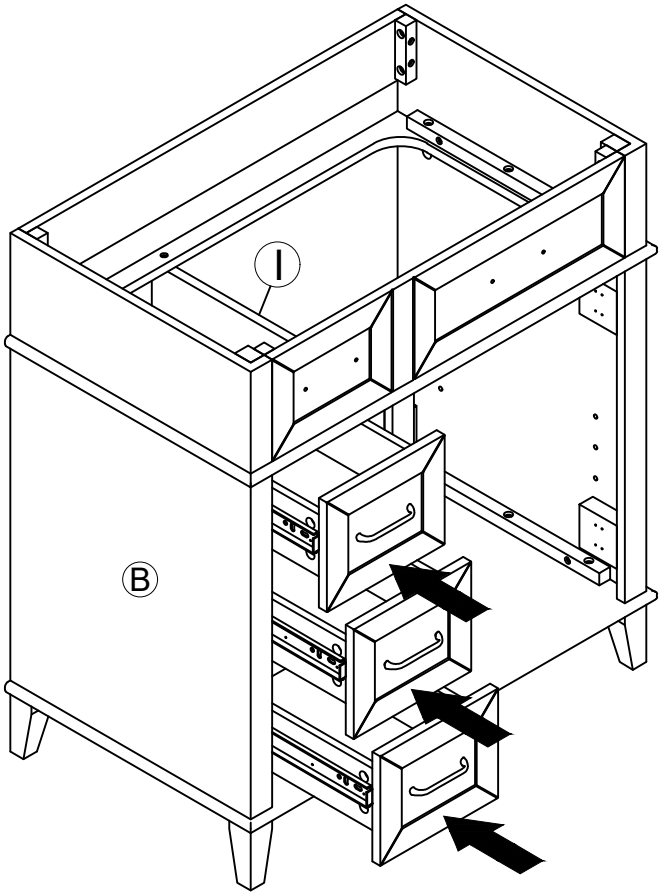


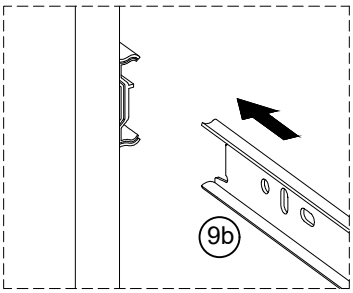


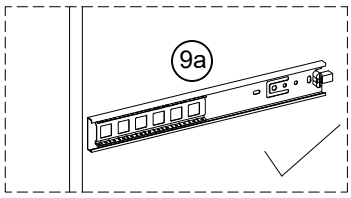
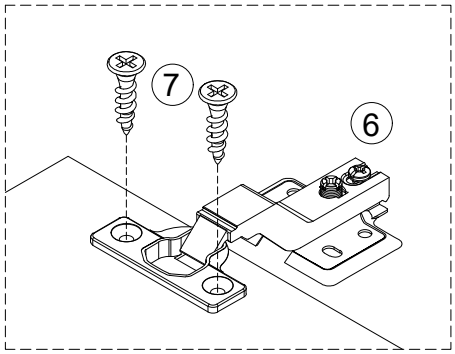


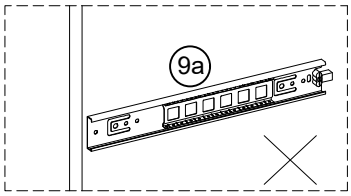

STEP 26

| | | | | | |
|---|---|---|---|---|---|
| 6 |  | 2pcs | 7 |  Ø4x12mm | 4pcs |

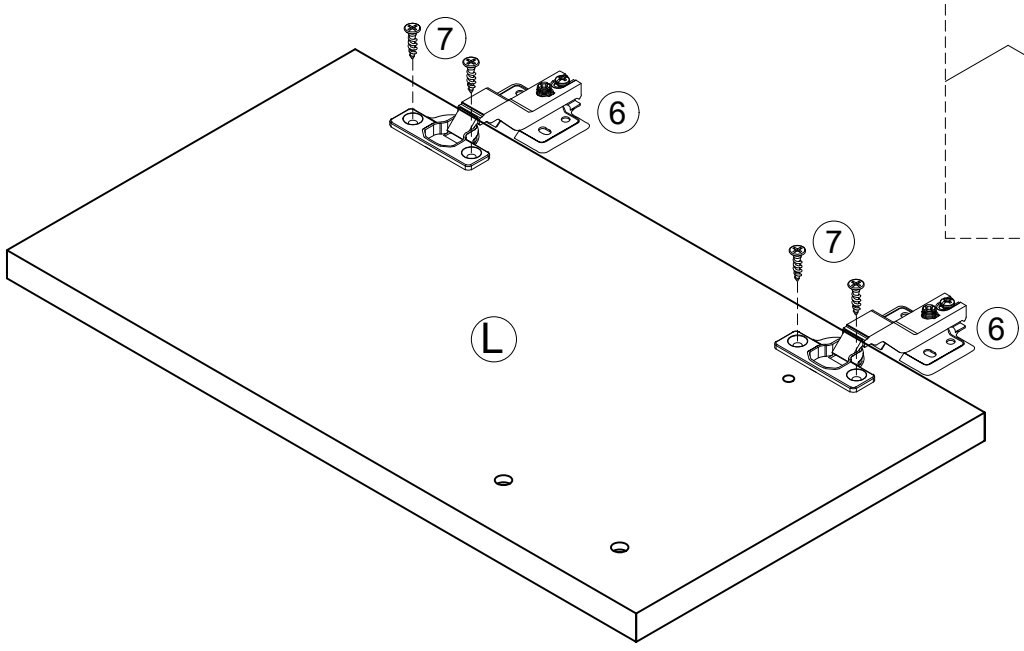





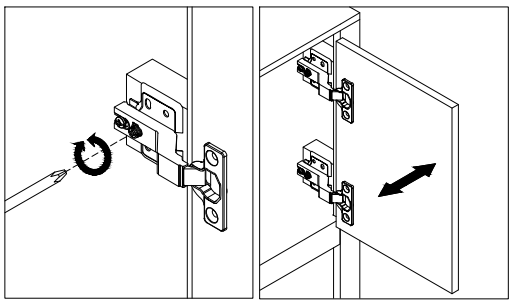
STEP 27


| | | | | | |
|---|---|---|---|---|---|
| ⑦ | Ø4x12mm | 8pcs | ⑤ | 1pc | ⑬ 5/32"x15mm | 2pcs |


Three-way adjustable hinge for perfectly aligned doors


1.TO ADJUST DOOR FORWARD OR BACKWARD.
2.TO ADJUST DOOR TO RIGHT ORTO LEFT.
3.TO ADJUST DOOR UP OR DOWN.

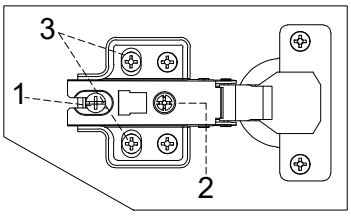





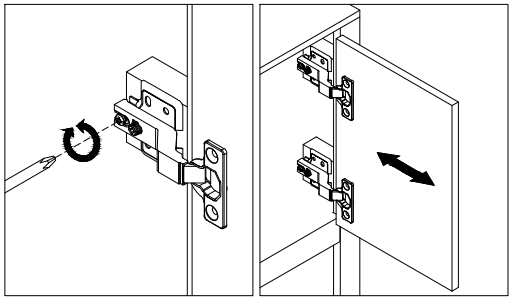

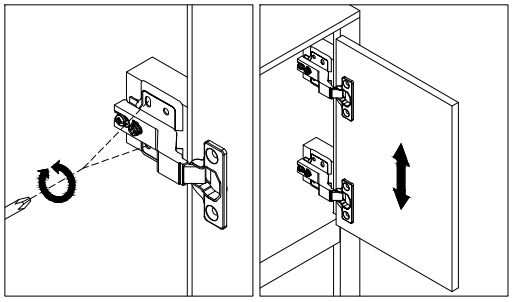



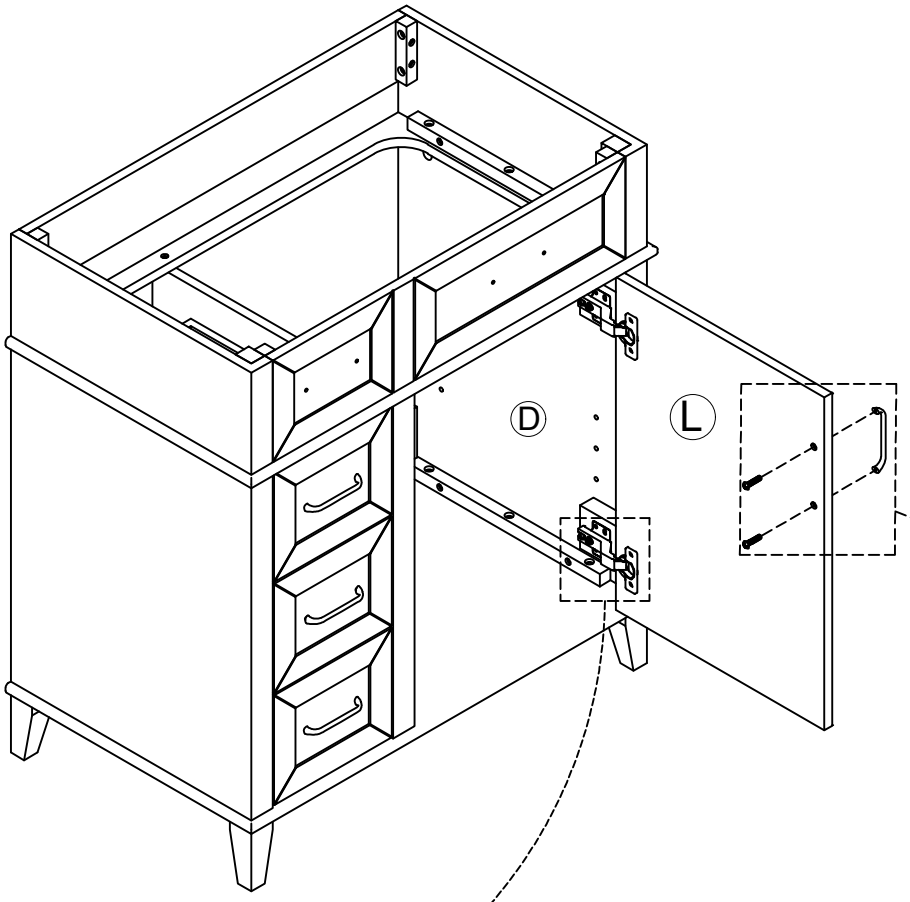


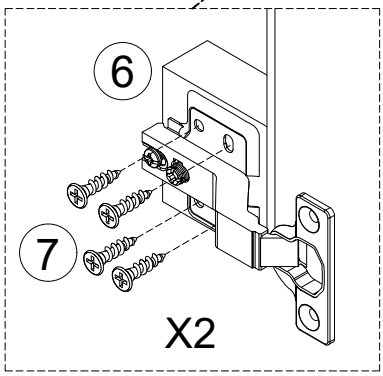
STEP 28
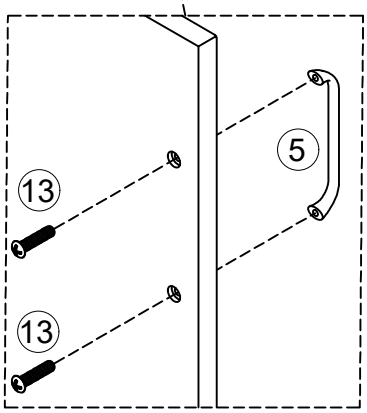
| | | | |
|---|---|---|---|
| 5 |  | 2pcs | |
| 13 |  | 4pcs | 5/32"x15mm |




STEP 29
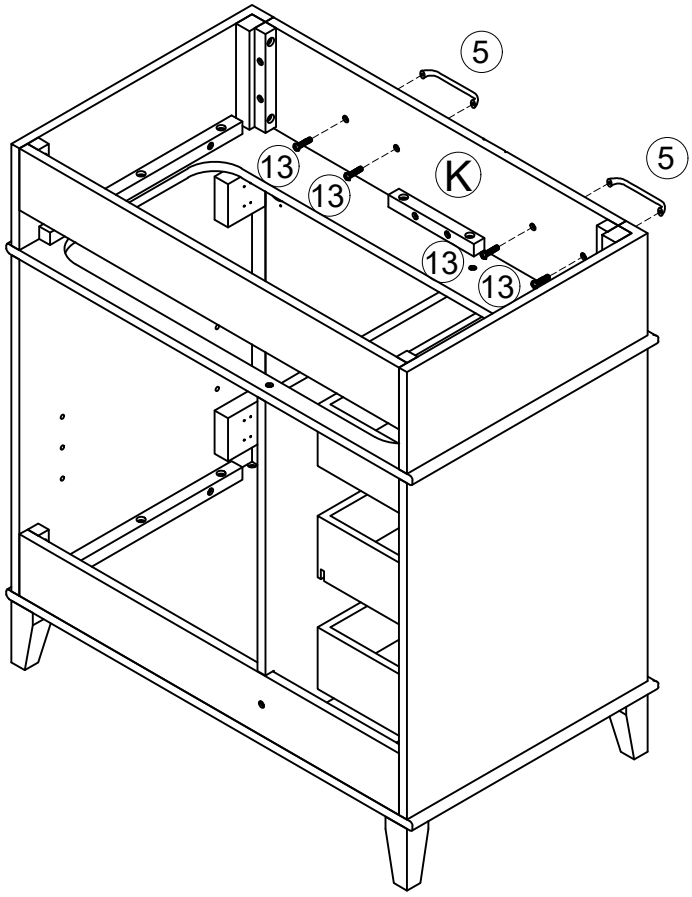
| | | |
|---|---|---|
| 8 |  | 4pcs |

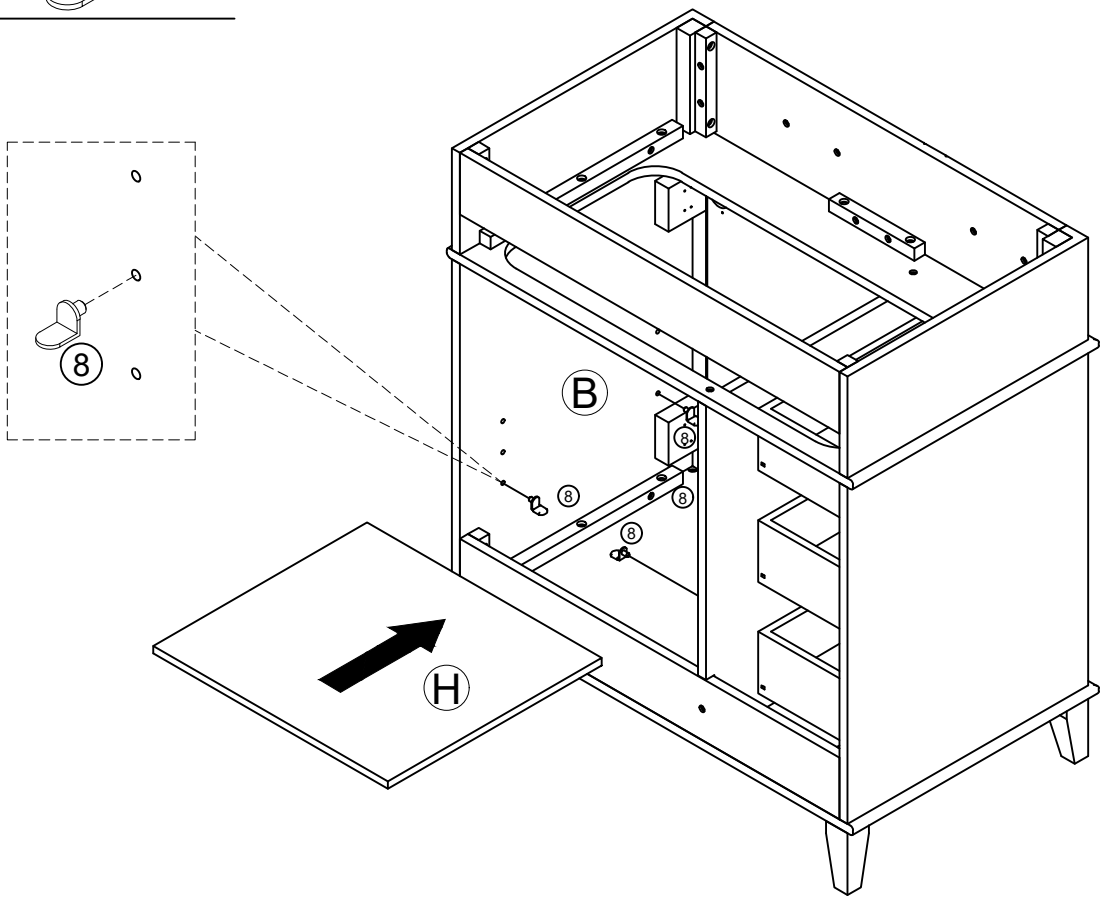

STEP 30

To install the Top (1) to the vanity (2).
Apply silicone caulk to the top edge of the wood cabinet. With the help of another adult, gently lower the Sink top with assembled sink onto the cabinet. Make sure the Sink top is flush with the back side of the wood cabinet and the wood cabinet left and right side walls.

