


INSTALLATION MANUAL

SHOE(STORAGE) CABINET

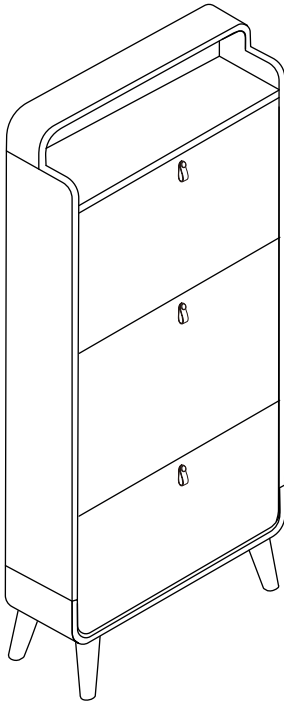

WARNING

**INSTALLATION REQUIRES TWO ADULTS,
KEEP AWAY FROM CHILDREN TO
PREVENT ANY INJURY.**

Tools Required



updated on 06/04/2024

SUMMARY

INTRODUCTION page 3

TIPS AND WARNINGS page 4

PARTS LIST page 5

INSTALLATION STEPS page 7

INTRODUCTION

Before using the product, please read this manual carefully and then assemble it.

To avoid any injury or damage to the product, please follow below safety rules.

- Product to be installed in a dry, flat place indoor.
- Assembly & movement: minimum 2 adults - heavy and fragile product.
- Make sure all screws in the part list included in the hardware package before assembly.
- In the event of a missing items, contact the seller within 48 hours of receiving the product.

■ ATTENTION ■

This product is for household use only! And not for commercial use.

Do not use this product for any other over expected purpose. To any commercial use, public or institutional, disclaims all liability and cancels all guarantees.

TIPS AND WARNINGS:

- Do not lean on the shoe cabinet.
- Do not store in a damp room or outdoor.
- Beware of the risks of pinching and puncturing during installation.














Maintenance :





Cleaning with a dry cloth.












Far away from water or wet shoes.












PART LIST

Illustration picture for reference only

NO.	DESCRIPTION	QTY	SIZE	ILLUSTRATION
①	Left Side panel	1	1025x294x15mm	
②	Right Side panel	1	1025x294x15mm	
③	Top panel	1	630x90x80mm	
④	Bottom panel	1	630x294x80mm	
⑤	Back slotted slat	1	598.5x117x12mm	
⑥	Back slotted slat	1	598.5x198x12mm	
⑦	Back slotted slat	1	598.5x198x12mm	
⑧	Back panel	2	606x334x5mm	
⑨	shelf panel	1	598x278x15mm	
⑩	Rack cover panel	1	595x333x12mm	
⑪	Rack cover panel	2	595x333x12mm	
⑫	Left rack side panel	3	267x232x12mm	
⑬	Right rack side panel	3	267x232x12mm	

⑭	Rack partition panel	3	546x175x12mm	
⑮	Rack bottom panel	3	536x149x12mm	
⑯	Rack back panel	3	594x198x12mm	
⑰	Solid wood feet	4	150mm	

NO.	ILLUSTRATION	QTY	SIZE
⑱		6	
⑲	 Left	3	
⑳	 Right	3	
㉑		6	
㉒		18	Ø 4x12mm
㉓		2	Ø 3.5x14mm
㉔	 Small	32	
㉕	 Small	32	
㉖	 Small wooden mortise	6	Ø 6x30mm
㉗		4	Ø 8x30mm
㉘	 Large	6	


NO.	ILLUSTRATION	QTY	SIZE
㉙	 Large	6	
㉚		4	
㉛	 anti-falling	24	
㉜		24	Ø 5x50mm
㉝		3	
㉞		3	Ø 4x18mm
㉟		2	Ø 3.5x25mm
㊱		2	
㊲	 Greens	2	
㊳	 Large wooden mortise	8	Ø 8x30mm
㊴		24	Ø 3.5x12mm

INSTALLATION STEPS

Please read the instructions carefully before assembling the cabinet.
Two adults are required for assembly of this product on a clean, flat surface instead of a rough surface.


STEP 1

Screw on the side panels

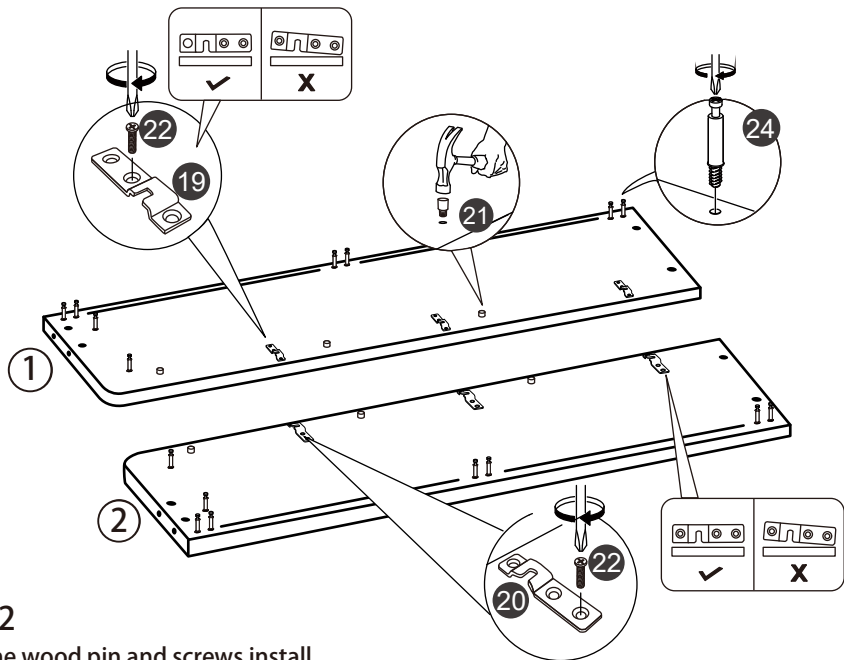

STEP 2


Insert the wood pin and screws install the bottom slats.

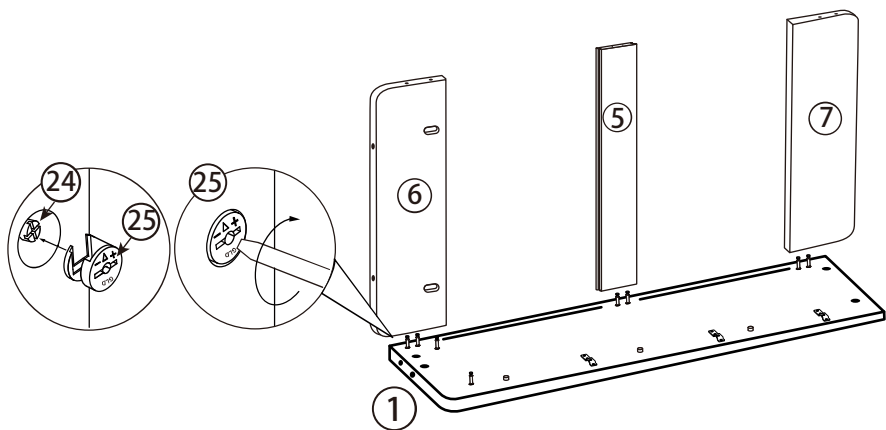

STEP 3




Insert panel ⑧ into the slot,
install panel ⑨ into panel ①.

Attention:
make sure panels ⑧ fall
into the slots.

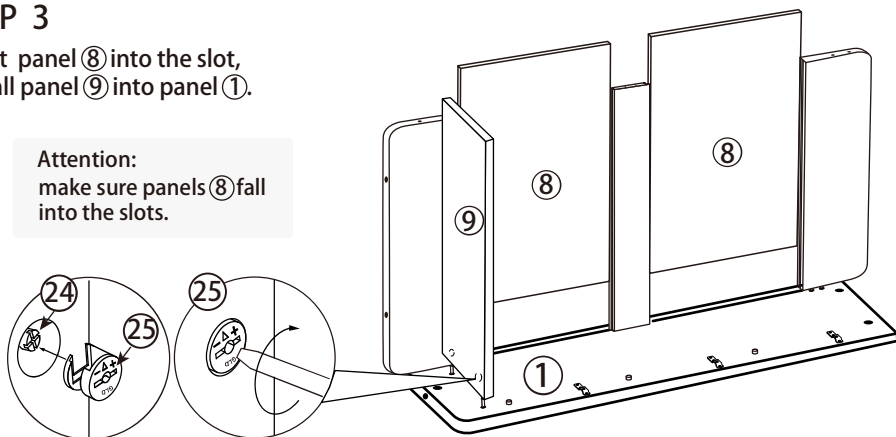


STEP 4

Attention:
Insert ③⑧ into the hole first.

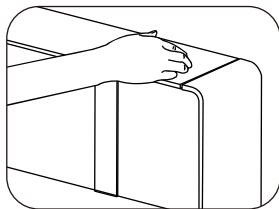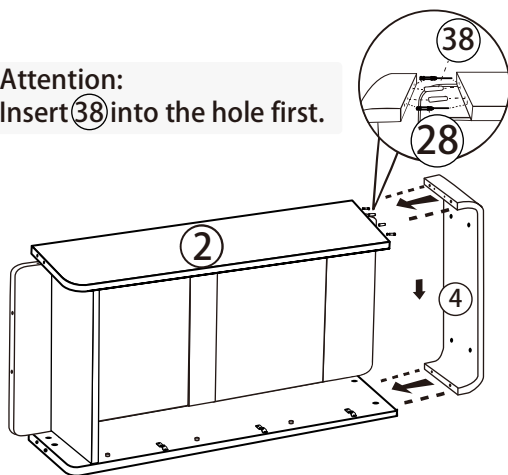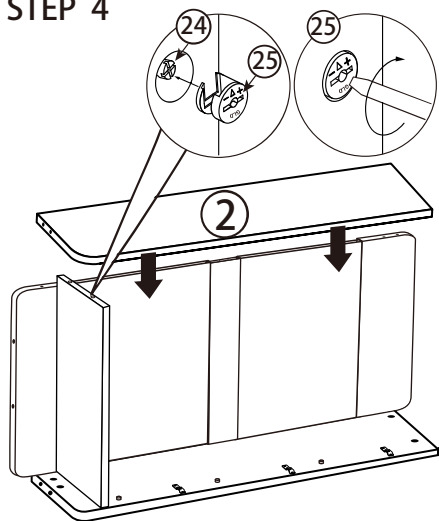


Attention:
Make sure side panel fall into slots, if
the side panel is not fully fit, please tap
the side panel tightly to adjust.

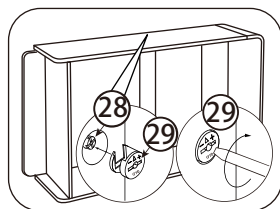



Attention:
Make sure all screws locked
tightly.

STEP 5

Attention:
put 28 into the hole and
turn 28 clockwise to lock 29.

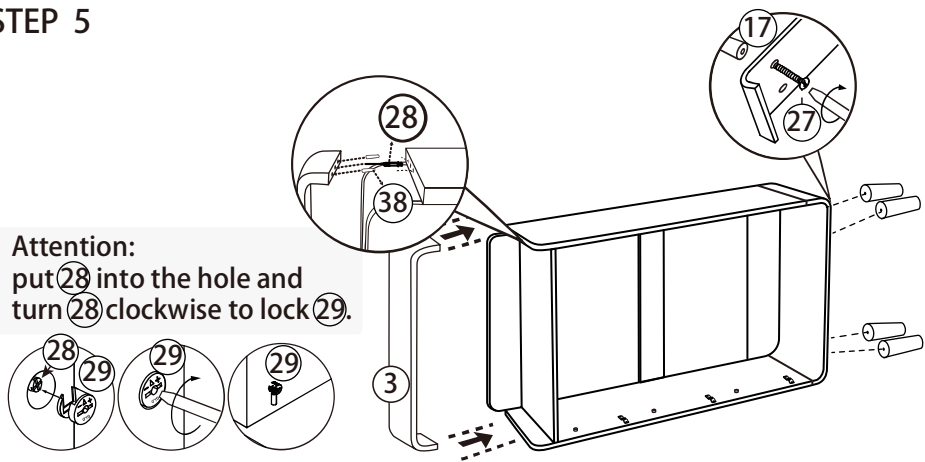


STEP 6

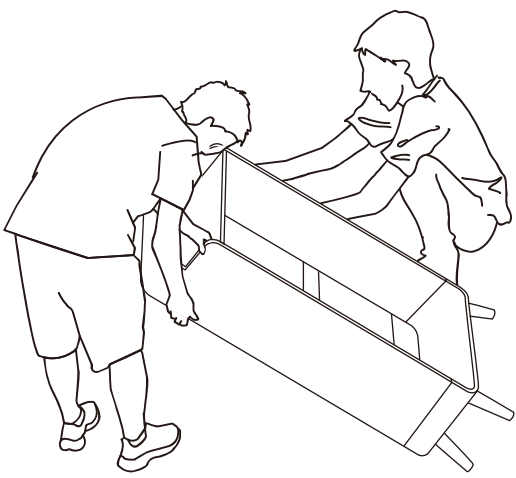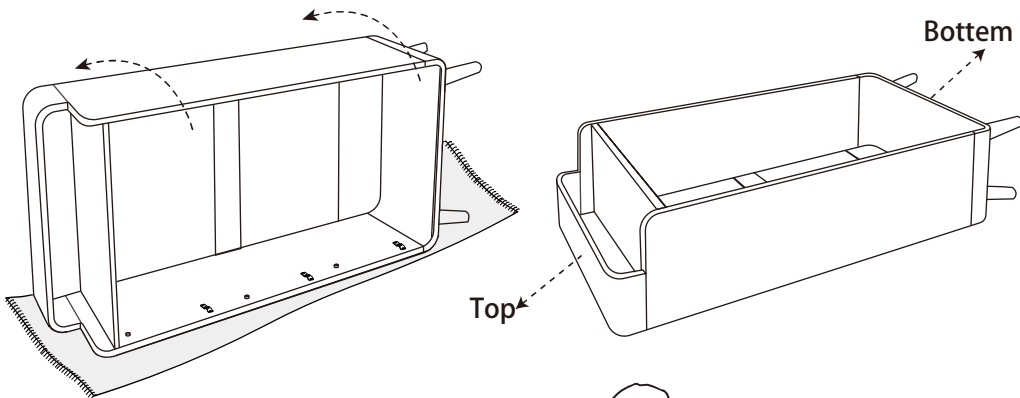



STEP 7

⚠ WARNING

To reduce the risk of furniture Tip over"
ALWAYS install anti-tip device provided
-NEVER allow children to stand,
climb or hang on drawers.

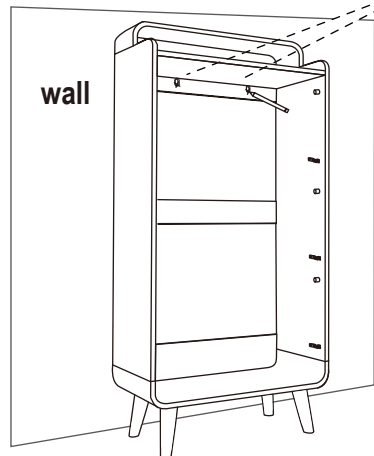

STEP 1

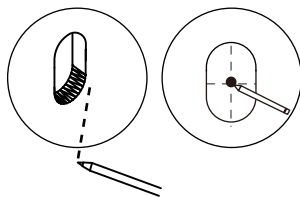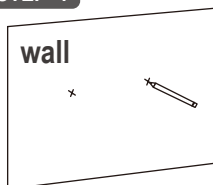


Put the cabinet in an appropriate position, and
mark the center of the hole on the cabinet, a total
of 2 places.

STEP 2



According to the 2 holes drawn, Put the rubber plug
(37) into the wall.




STEP 3

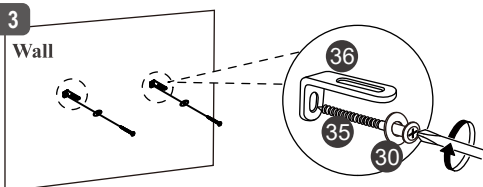

Screw (42) into the top two holes in the wall.


STEP 4

Move the cabinet back to the
position of the drawing points,
and align to holes.

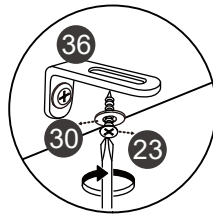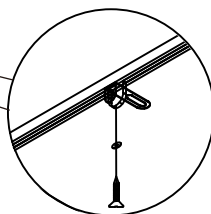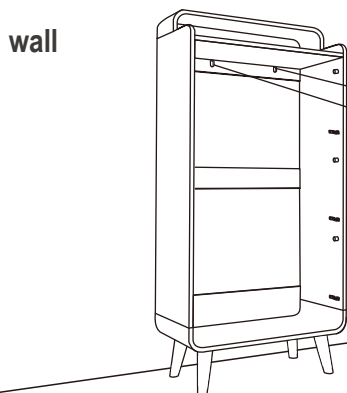


STEP 8


1

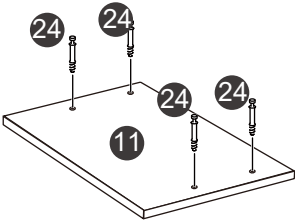


2

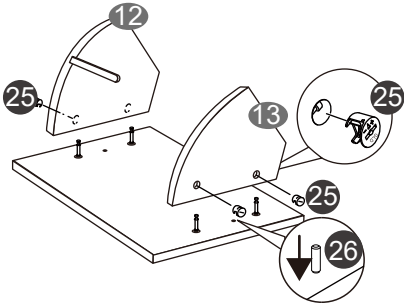


3

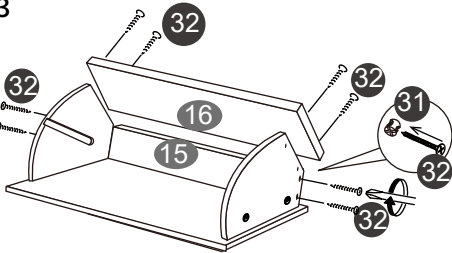


4

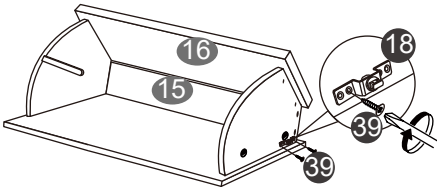

5

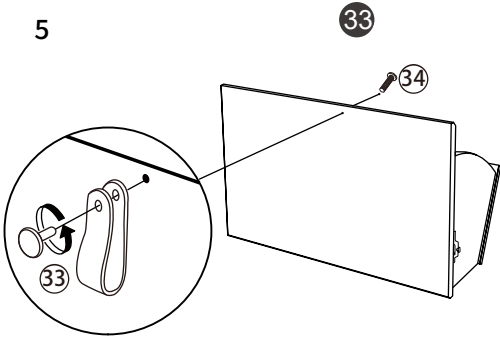

6

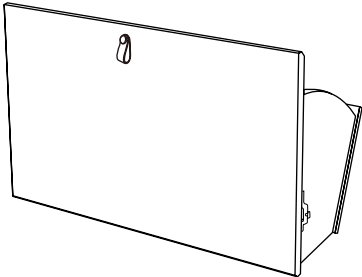

STEP 9

