


# JA26201-CFM
# ASSEMBLY INSTRUCTION





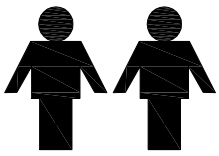


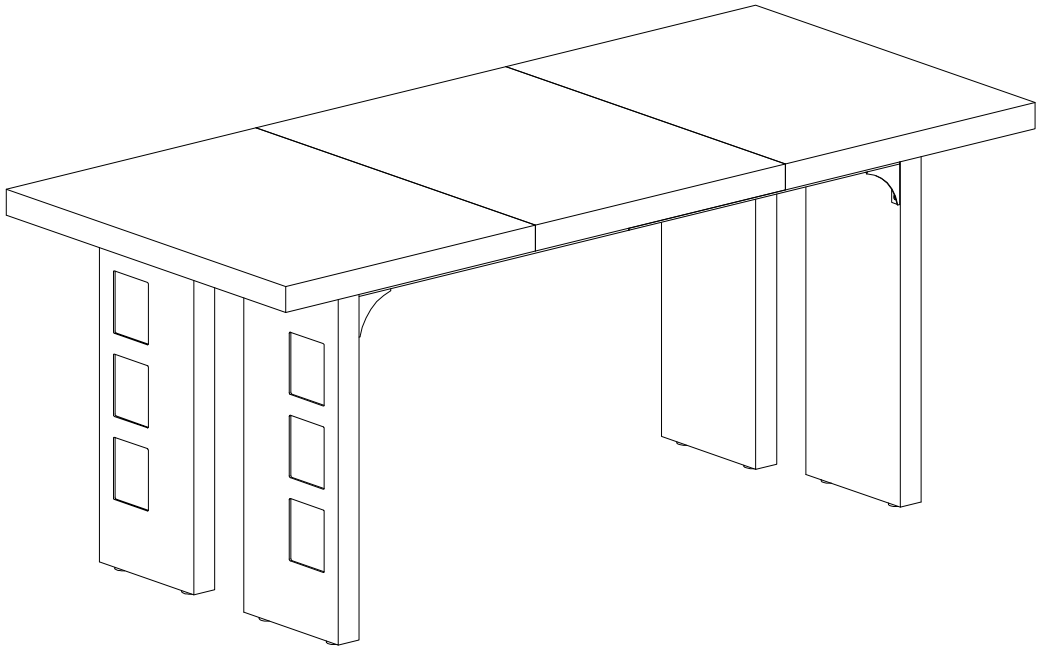


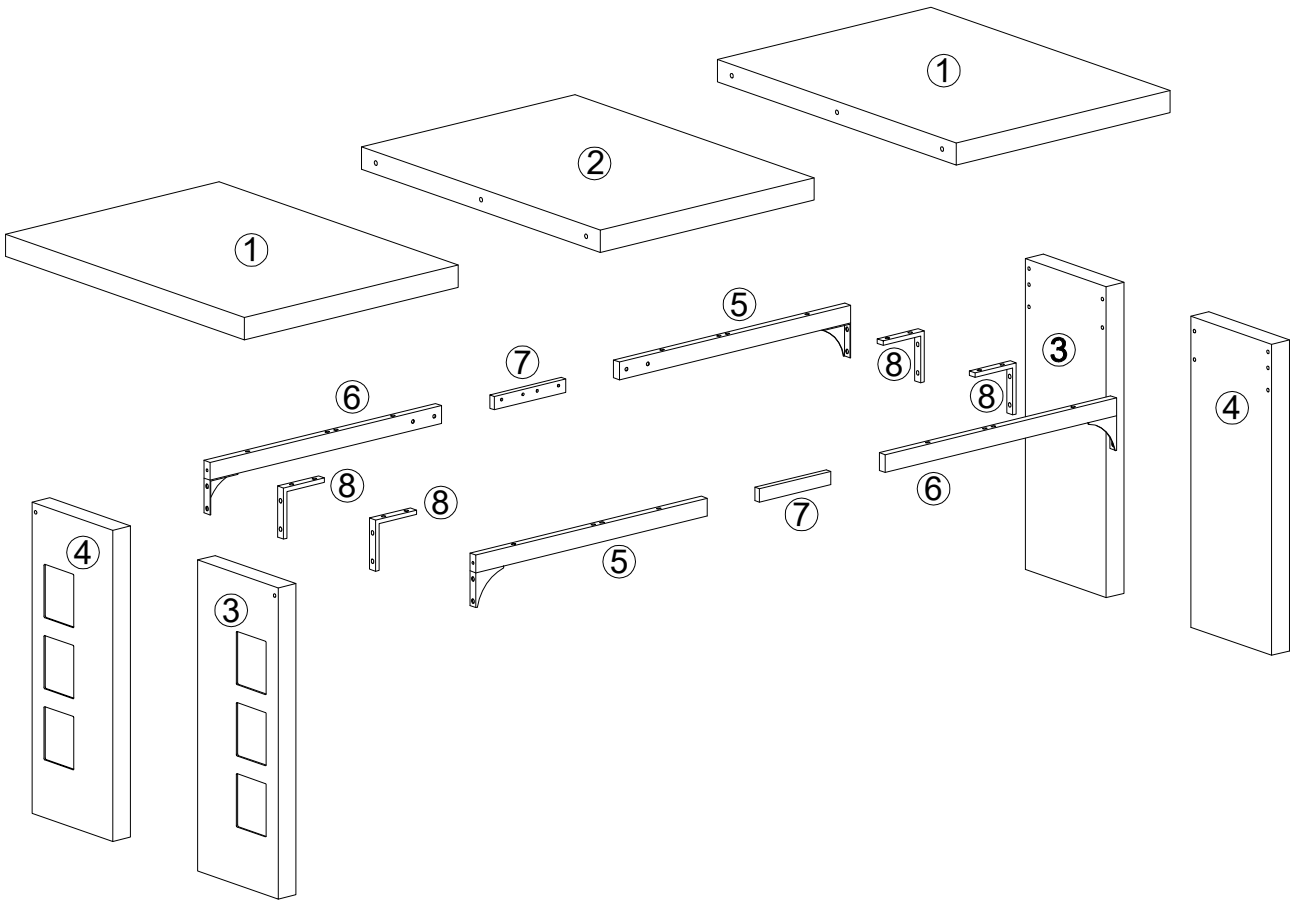


**Notes:** Don't fully tighten screws until all parts are confirmed in place to avoid misalignment.




| A | X16+1 | B | X16+1 | C | X16+1 | D | X16+1 | E | X4+1 |
|---|---|---|---|---|---|---|---|---|---|
|  | |  | |  | |  | |  | |
| M6X12mm | | **M6X15mm** | | **M6X25mm** | | M6X55mm | | M6X70mm | |

| F | X1 | G | X6+1 | H | X8 | I | X4 |
|---|---|---|---|---|---|---|---|
|  | |  | |  | |  | |
| **M4X55mm** | | Ø10X50mm | | M6XØ30mm | | 40X20mm | |


# STEP 1

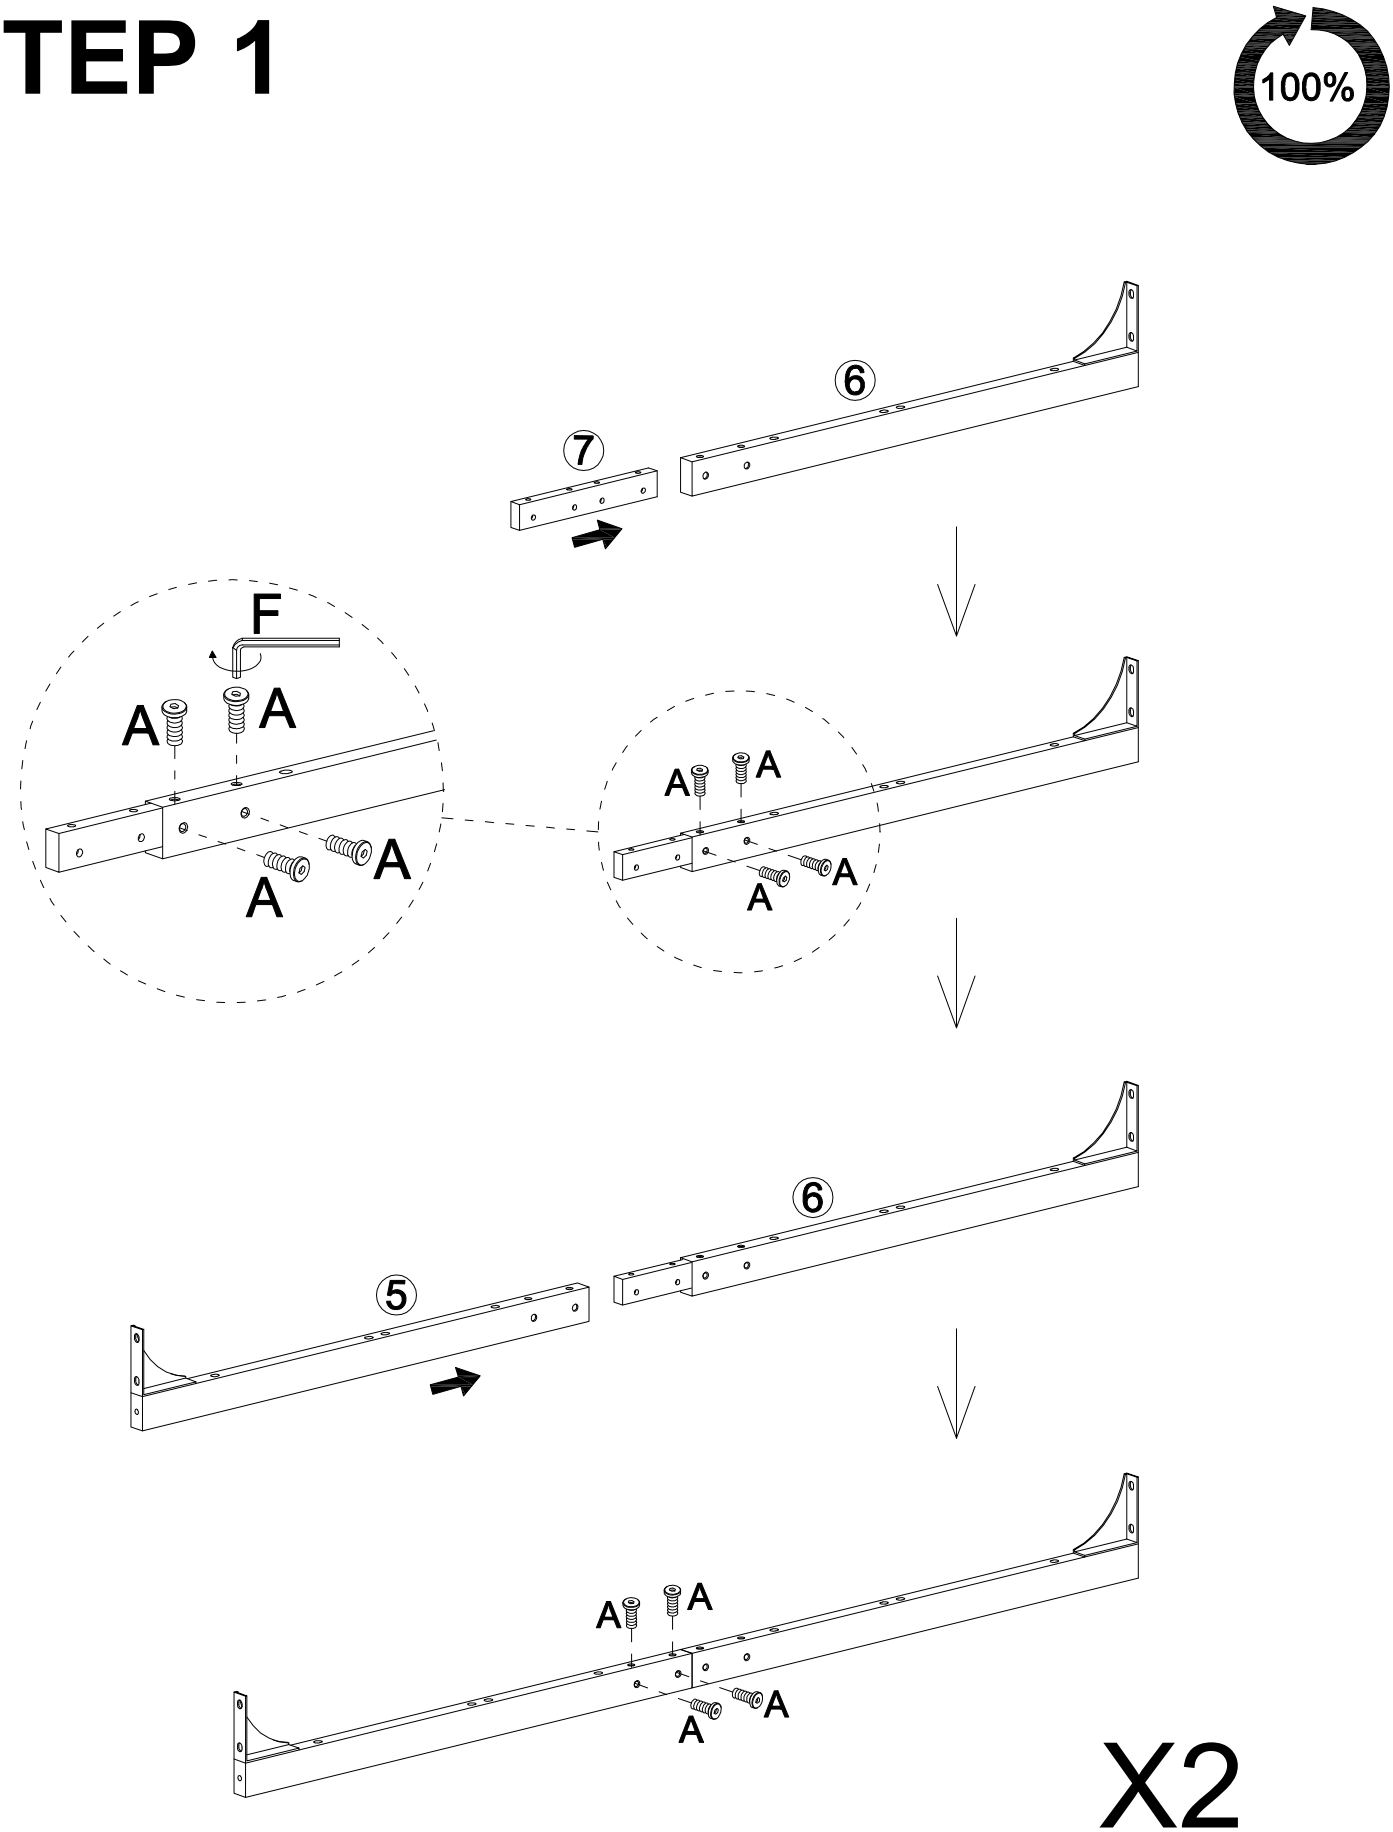


X2


| A | X16 | F | X1 |
|---|---|---|---|
| M6X12mm | | M4X55mm | |

# STEP 2

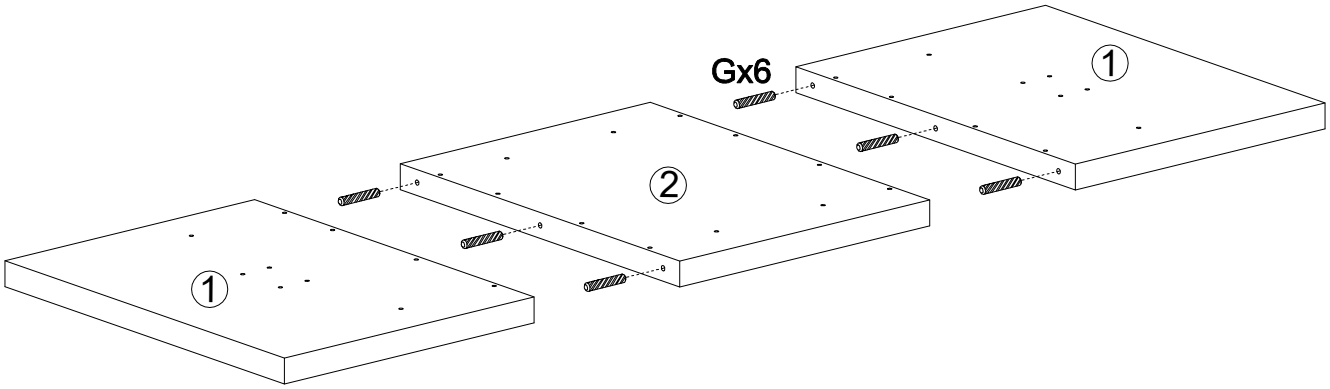



| G | X6 |
|---|---|
|  | |
| Ø10X50mm | |


# STEP 3

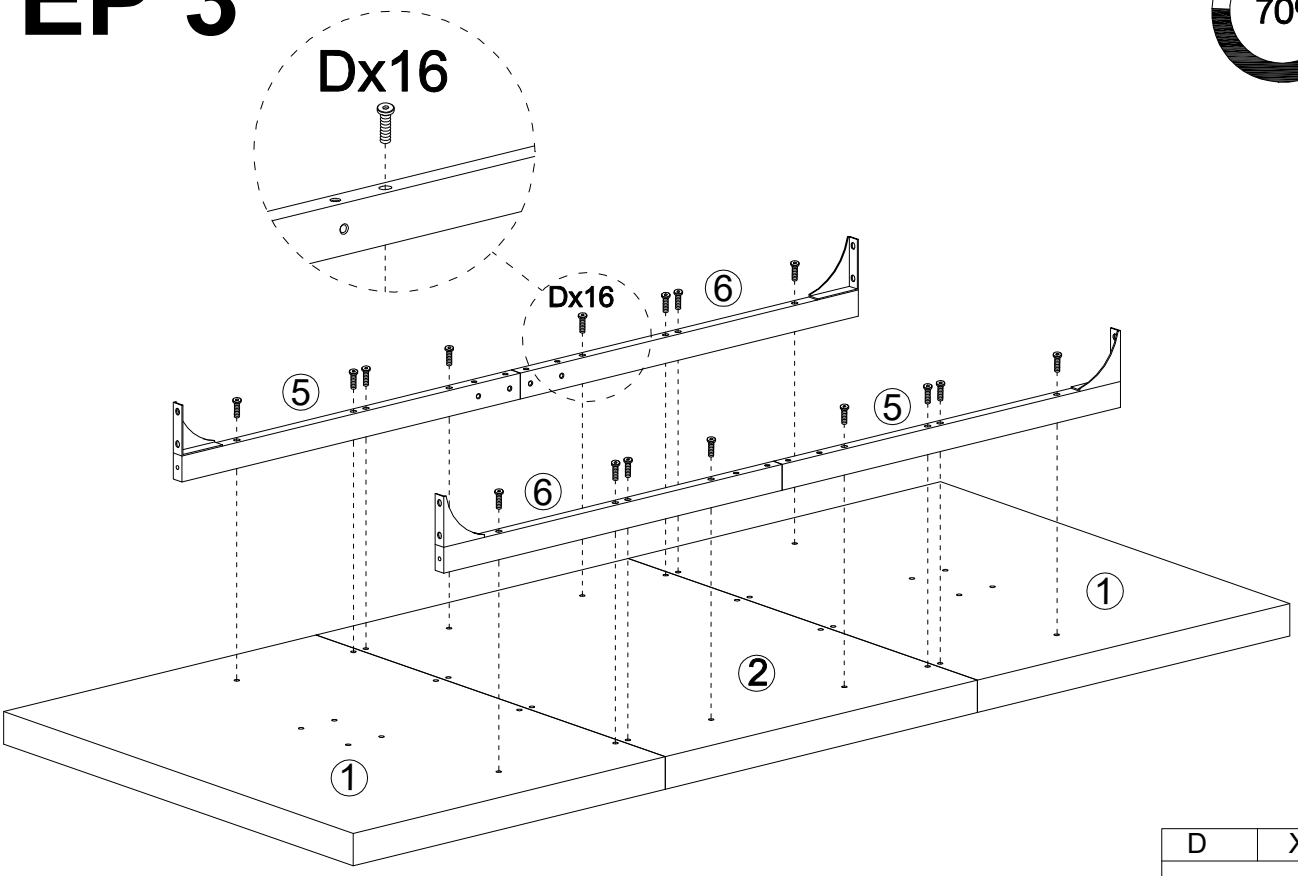


| D | X16 |
|---|---|
|  | |
| M6X55mm | |


# STEP 4

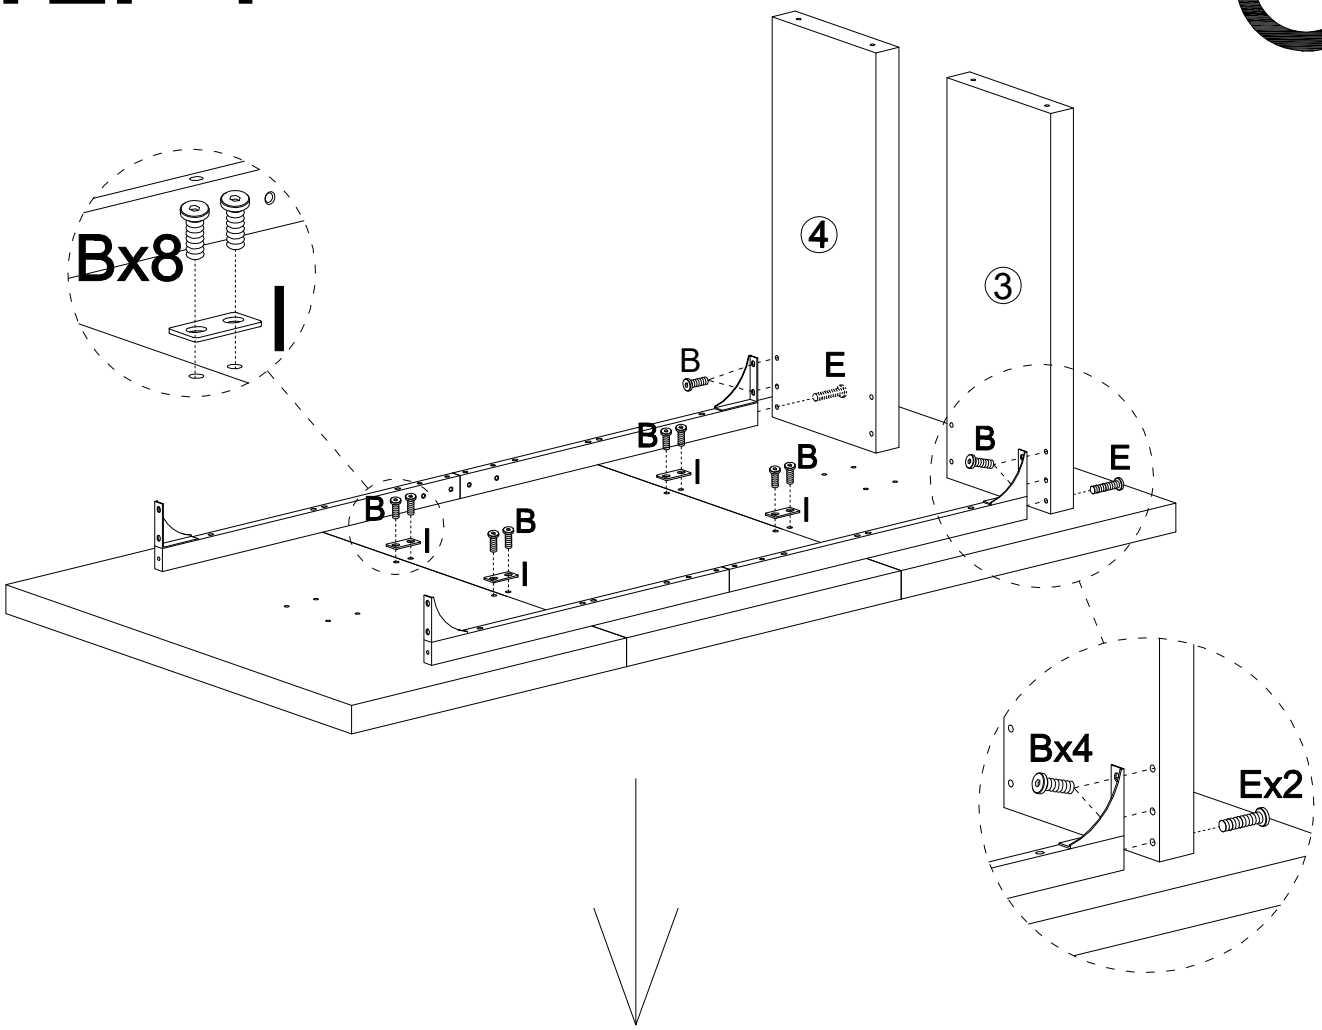

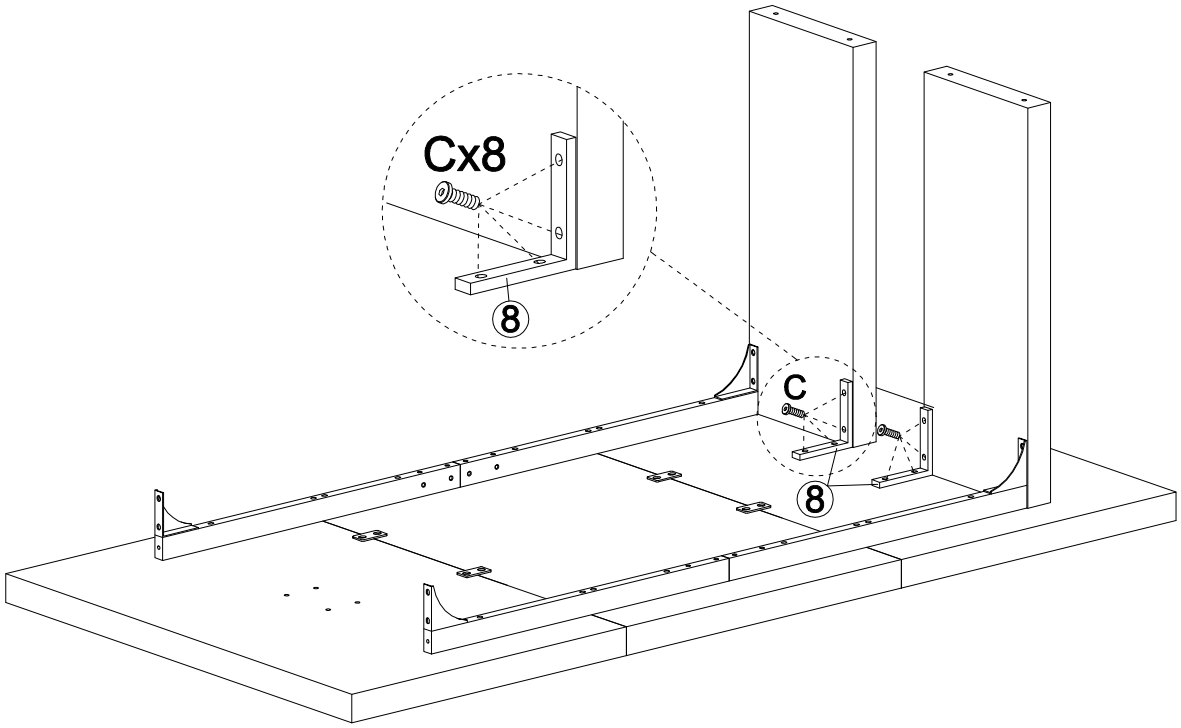

| B | X12 | C | X8 | E | X2 | I | X4 |
|---|---|---|---|---|---|---|---|
| | | | | | | | |
| M6X15mm | | M6X25mm | | M6X70mm | | 40X20mm | |

# STEP 5

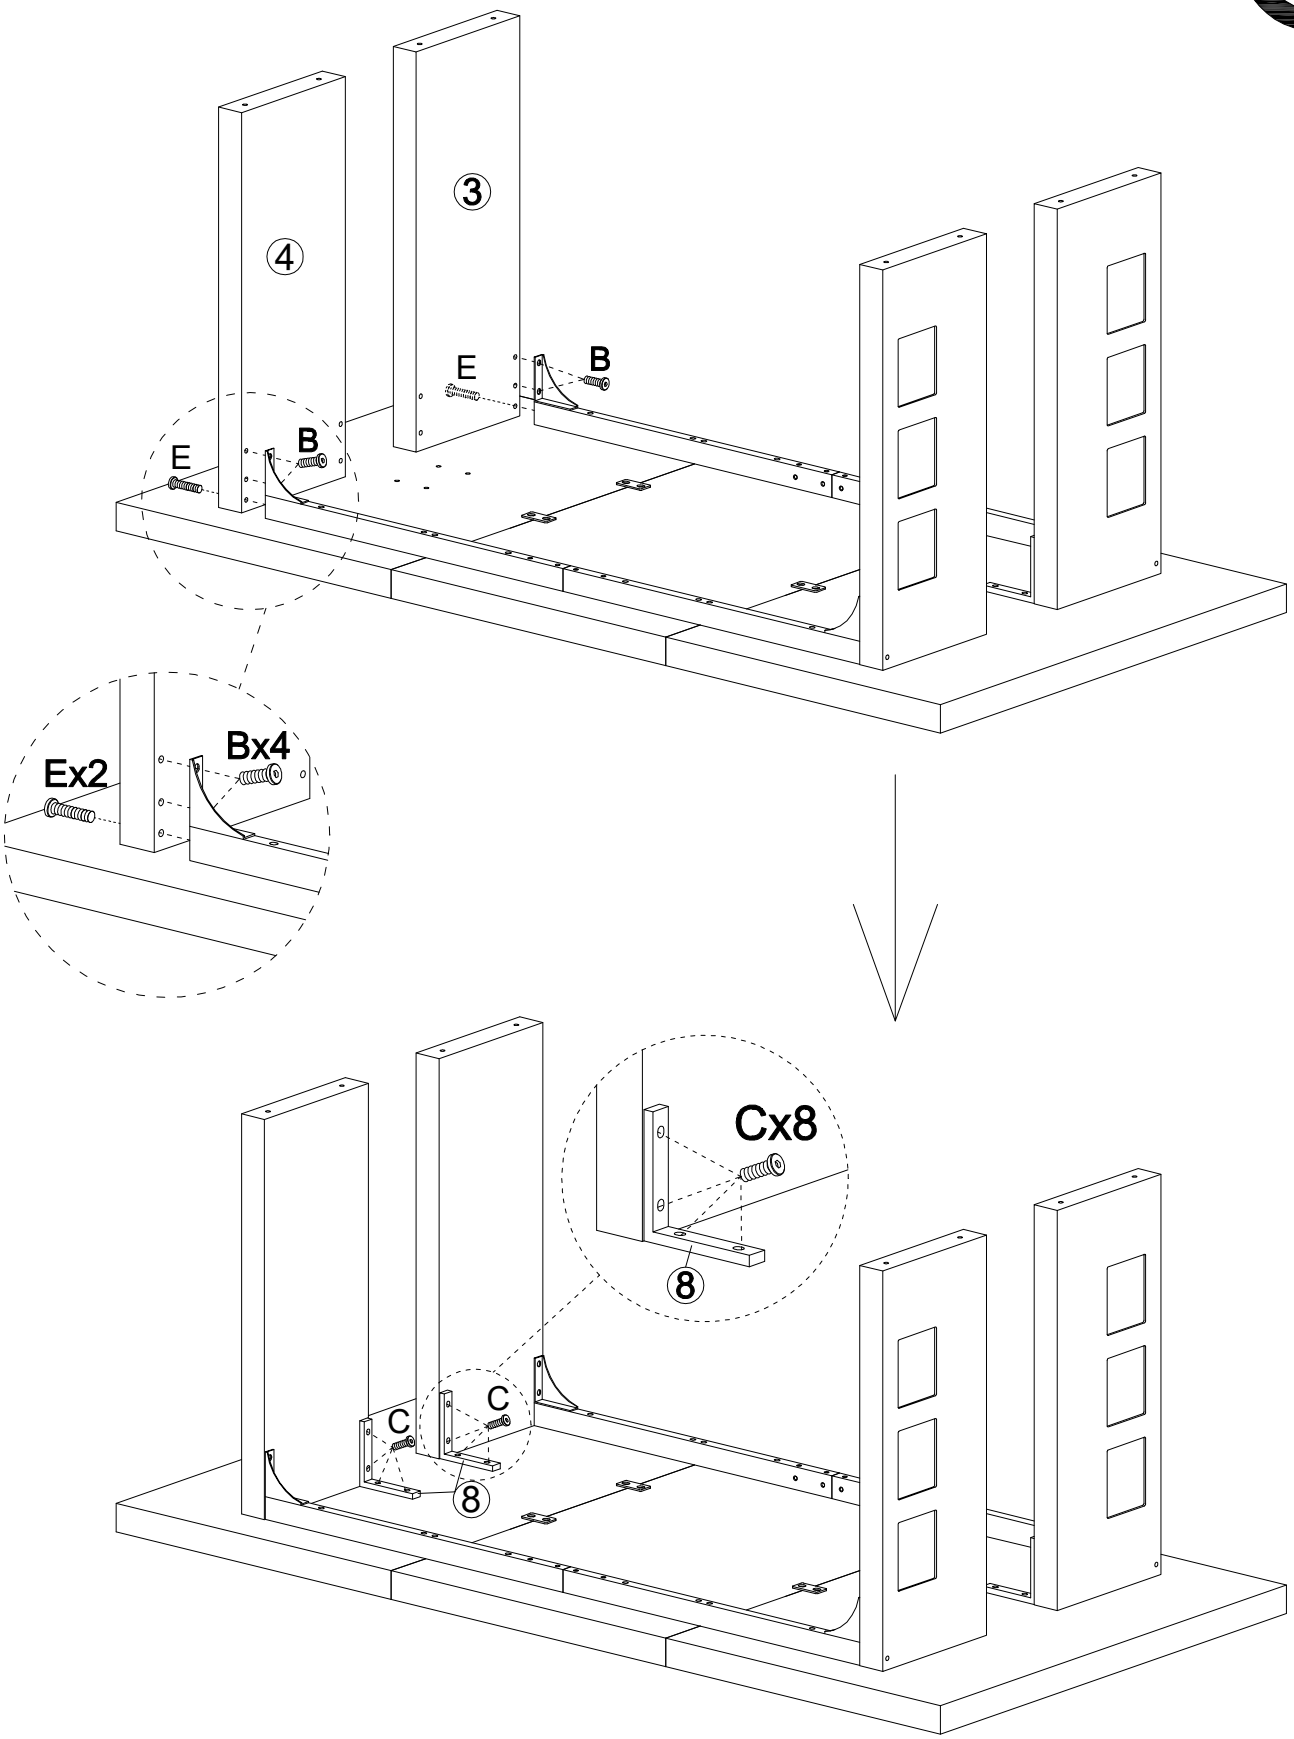


| B | X4 | C | X8 | E | X2 |
|---|---|---|---|---|---|
| | | | | | |
| M6X15mm | | M6X25mm | | M6X70mm | |

# STEP 6

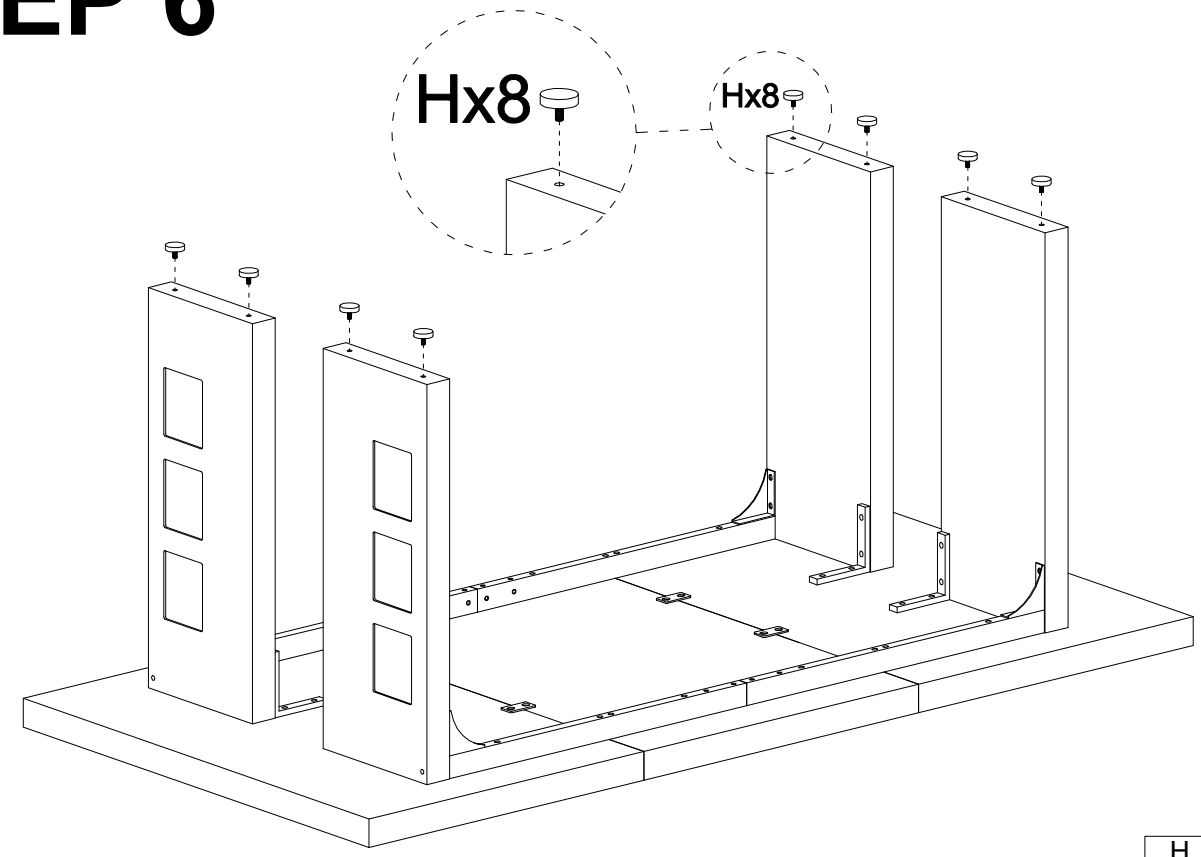


| H | X8 |
|---|---|
|  | |
| M6XØ30mm | |

# STEP 7

