


## ASSEMBLY INSTRUCTIONS

**FOR ITEM NO.AVP1591PK, AVP1591WH, AVP1591GLDWH PLEASE ASSEMBLE THE PRODUCT BY THE FOLLOWING STEPS :**

1. **\*IMPORTANT\*** FIND PART (C) ATTACHED TO PART (B). FIND PARTS (E,F,G) ATTACHED TO THE HEAD (D).
2. PLACE THE SADDLE (B) ONTO THE BODY(A)
3. PLACE THE HEAD (D) ONTO THE SHADE (E)
4. FROM INSIDE, PLACE THE SPACER (F) ONTO SCREW AND TIGHTEN BY NUT(G).
5. PLACE THE SHADE (E) ONTO THE SADDLE (B)
6. TIGHTEN THE SHADE (E) BY THE LOCK UNTIL TIGHT

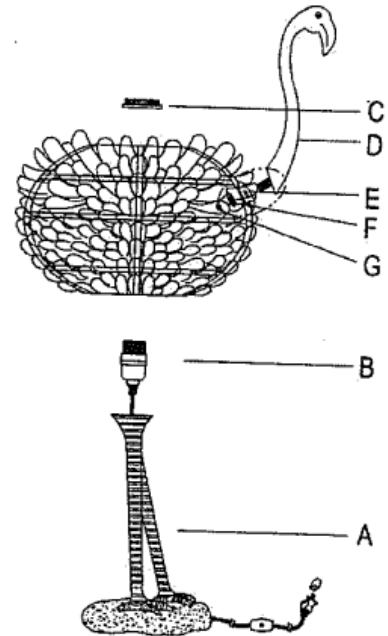

## IMPORTANT SAFETY INSTRUCTIONS :

This portable lamp has a polarized plug (one blade is wider than the other ) as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not attempt to defeat this safety feature.