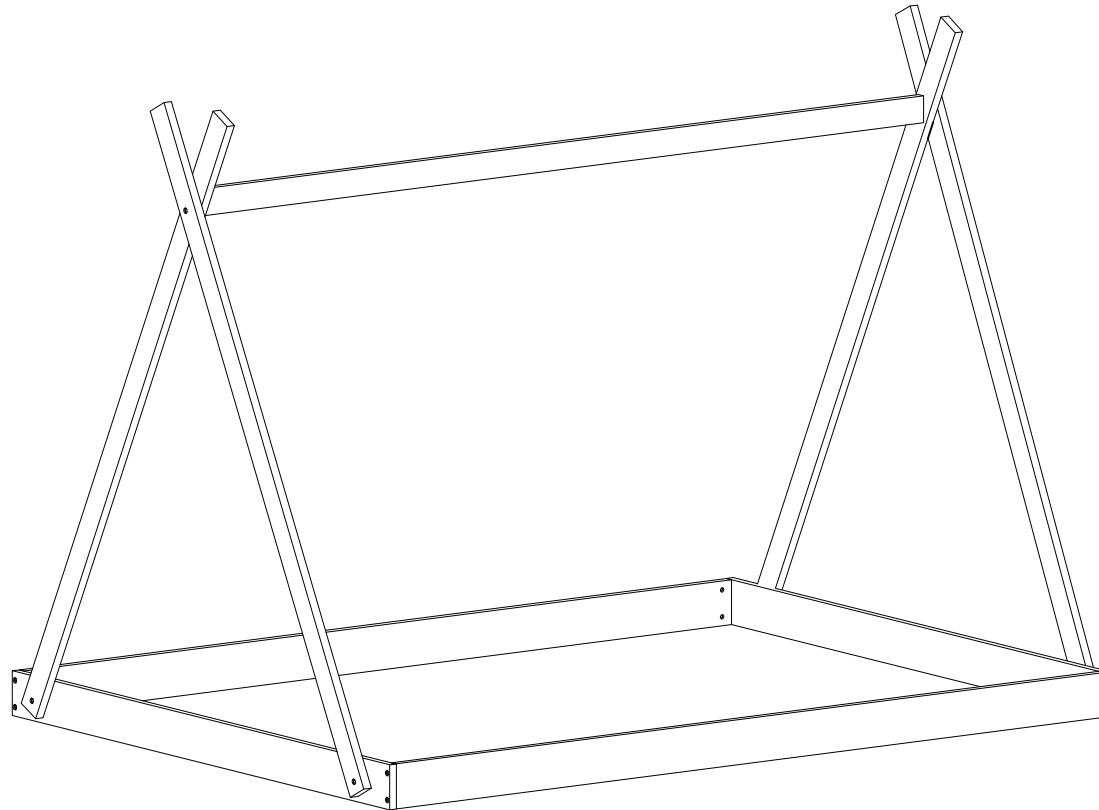


# ASSEMBLY INSTRUCTION

TENT FULL FLOOR BED - WF306831

PAGE: 1 OF 4








## IMPORTANT NOTE

1. PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED
2. BEFORE YOU BEGIN, KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP
3. DO NOT TIGHTEN ALL SCREWS AND BOLTS UNTIL THE BED IS FULLY SET-UP

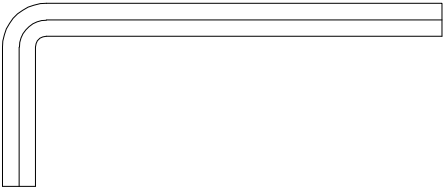





# ASSEMBLY INSTRUCTION

PAGE: 2 OF 4

## PART LIST WF306831

<div data-bbox="47 231 85 263">A</div> <div data-bbox="118 309 672 367"></div> <div data-bbox="268 442 521 478">END PANEL (2PCS)</div>	<div data-bbox="770 231 808 263">B</div> <div data-bbox="848 309 1411 360"></div> <div data-bbox="1008 442 1265 478">SIDE PANEL (2PCS)</div>	<div data-bbox="1491 231 1529 263">C</div> <div data-bbox="1592 309 2114 365"></div> <div data-bbox="1749 442 1960 478">TOP RAIL (1PC)</div>
<div data-bbox="40 502 78 534">D1</div> <div data-bbox="98 584 667 627"></div> <div data-bbox="280 694 483 729">LEGS 1 (2PCS)</div>	<div data-bbox="763 502 801 534">D2</div> <div data-bbox="826 584 1431 632"></div> <div data-bbox="1039 694 1240 732">LEGS 2 (2PCS)</div>	

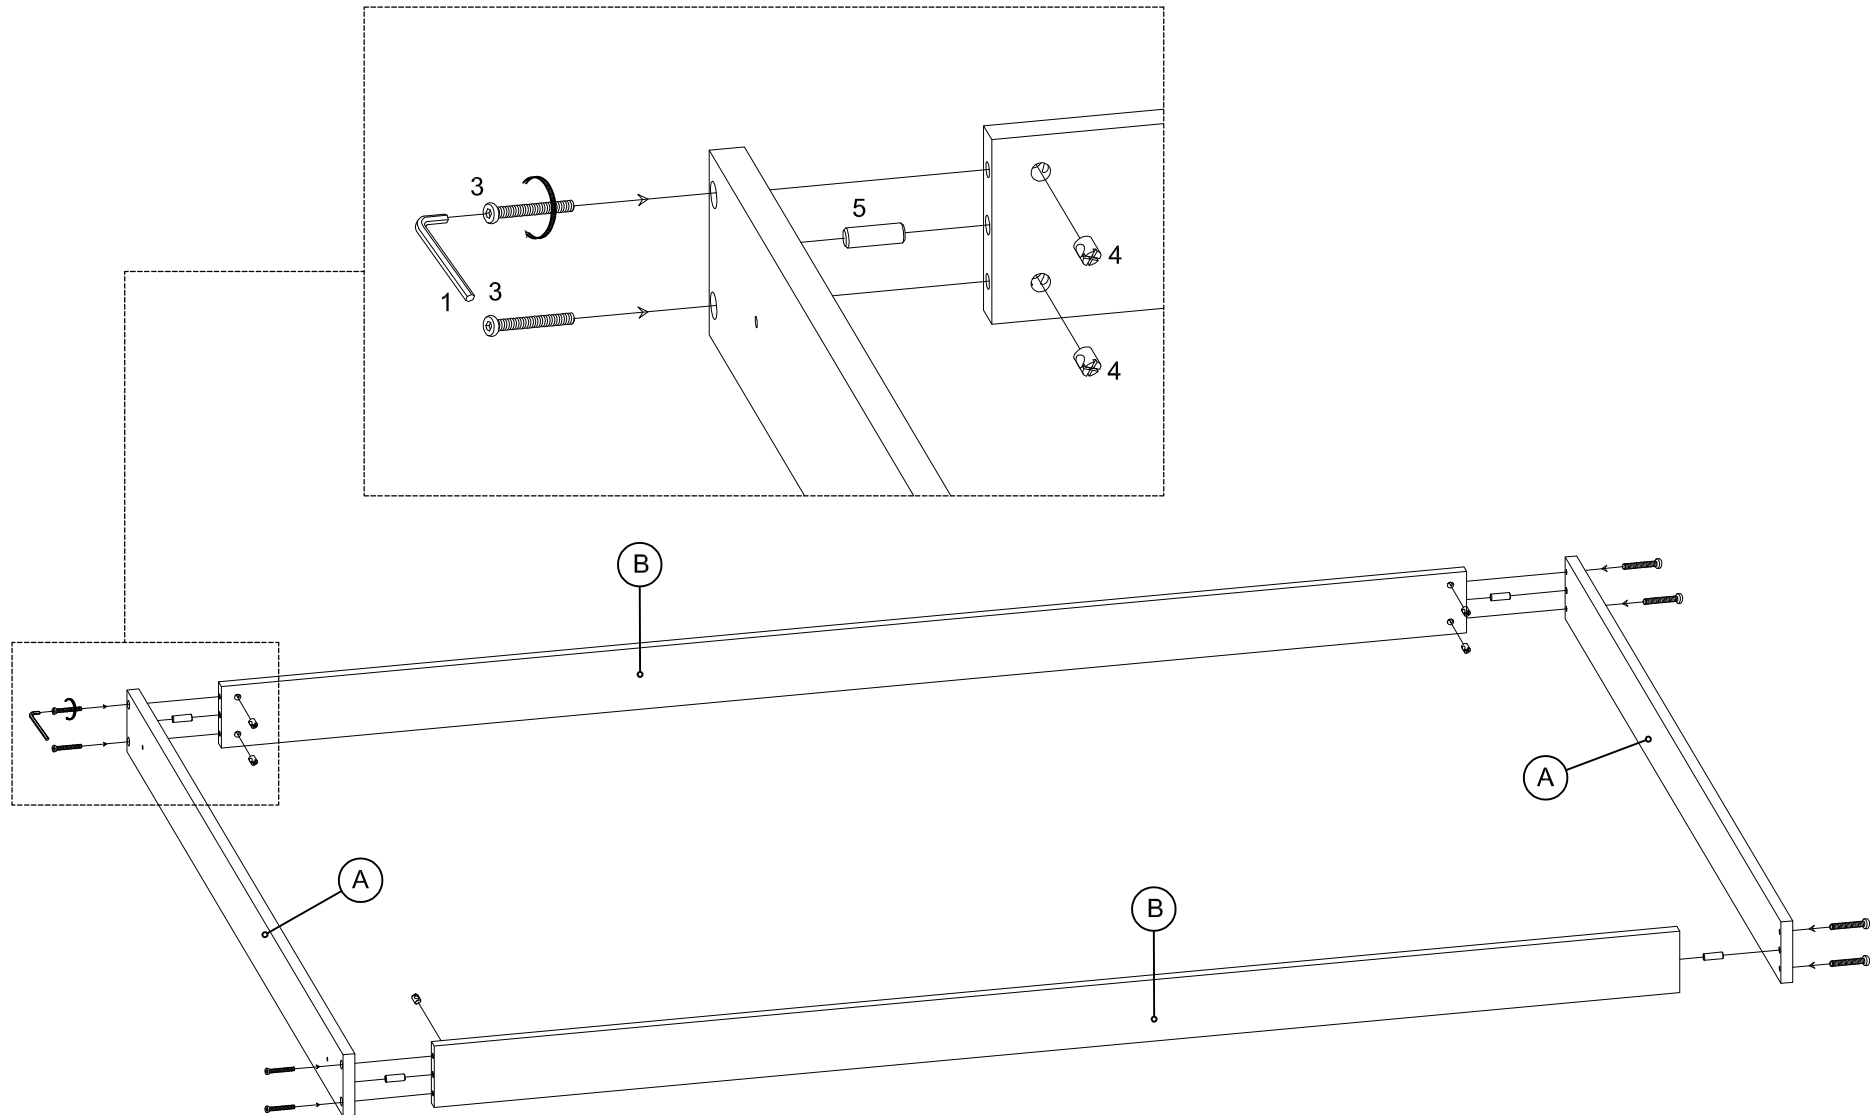
## HARDWARE LIST WF306831

<div data-bbox="47 852 85 884">1</div> <div data-bbox="179 890 620 1078"></div> <div data-bbox="280 1112 508 1176">ALLEN KEY (1PC) K4 x 60 mm</div>	<div data-bbox="770 852 808 884">2</div> <div data-bbox="792 940 1456 1040"></div> <div data-bbox="965 1112 1274 1176">HEX HEAD BLOT (2PCS) 1/4 x 90 mm</div>	<div data-bbox="1491 852 1529 884">3</div> <div data-bbox="1606 940 2067 1040"></div> <div data-bbox="1688 1112 2009 1176">HEX HEAD BLOT (8PCS) 1/4 x 60 mm</div>
<div data-bbox="47 1217 85 1249">4</div> <div data-bbox="369 1307 477 1380"></div> <div data-bbox="288 1471 571 1535">BARREL NUT (10PCS) 1/4 x Ø10 x 13 mm</div>	<div data-bbox="770 1217 808 1249">5</div> <div data-bbox="1005 1297 1236 1383"></div> <div data-bbox="972 1471 1263 1535">WOOD DOWEL (6PCS) Ø10 x 30 mm</div>	<div data-bbox="1491 1217 1529 1249">6</div> <div data-bbox="1738 1300 1968 1399"></div> <div data-bbox="1688 1471 2009 1535">HEX HEAD BLOT (4PCS) 1/4 x 30 mm</div>


# ASSEMBLY INSTRUCTION

PAGE: 3 OF 4

## STEP 1




1



ALLEN KEY (1PC)  
K4 x 60 mm

3



HEX HEAD BOLT (8PCS)  
1/4 x 60 mm

4



BARREL NUT (8PCS)  
1/4 x Ø10 x 13 mm

5

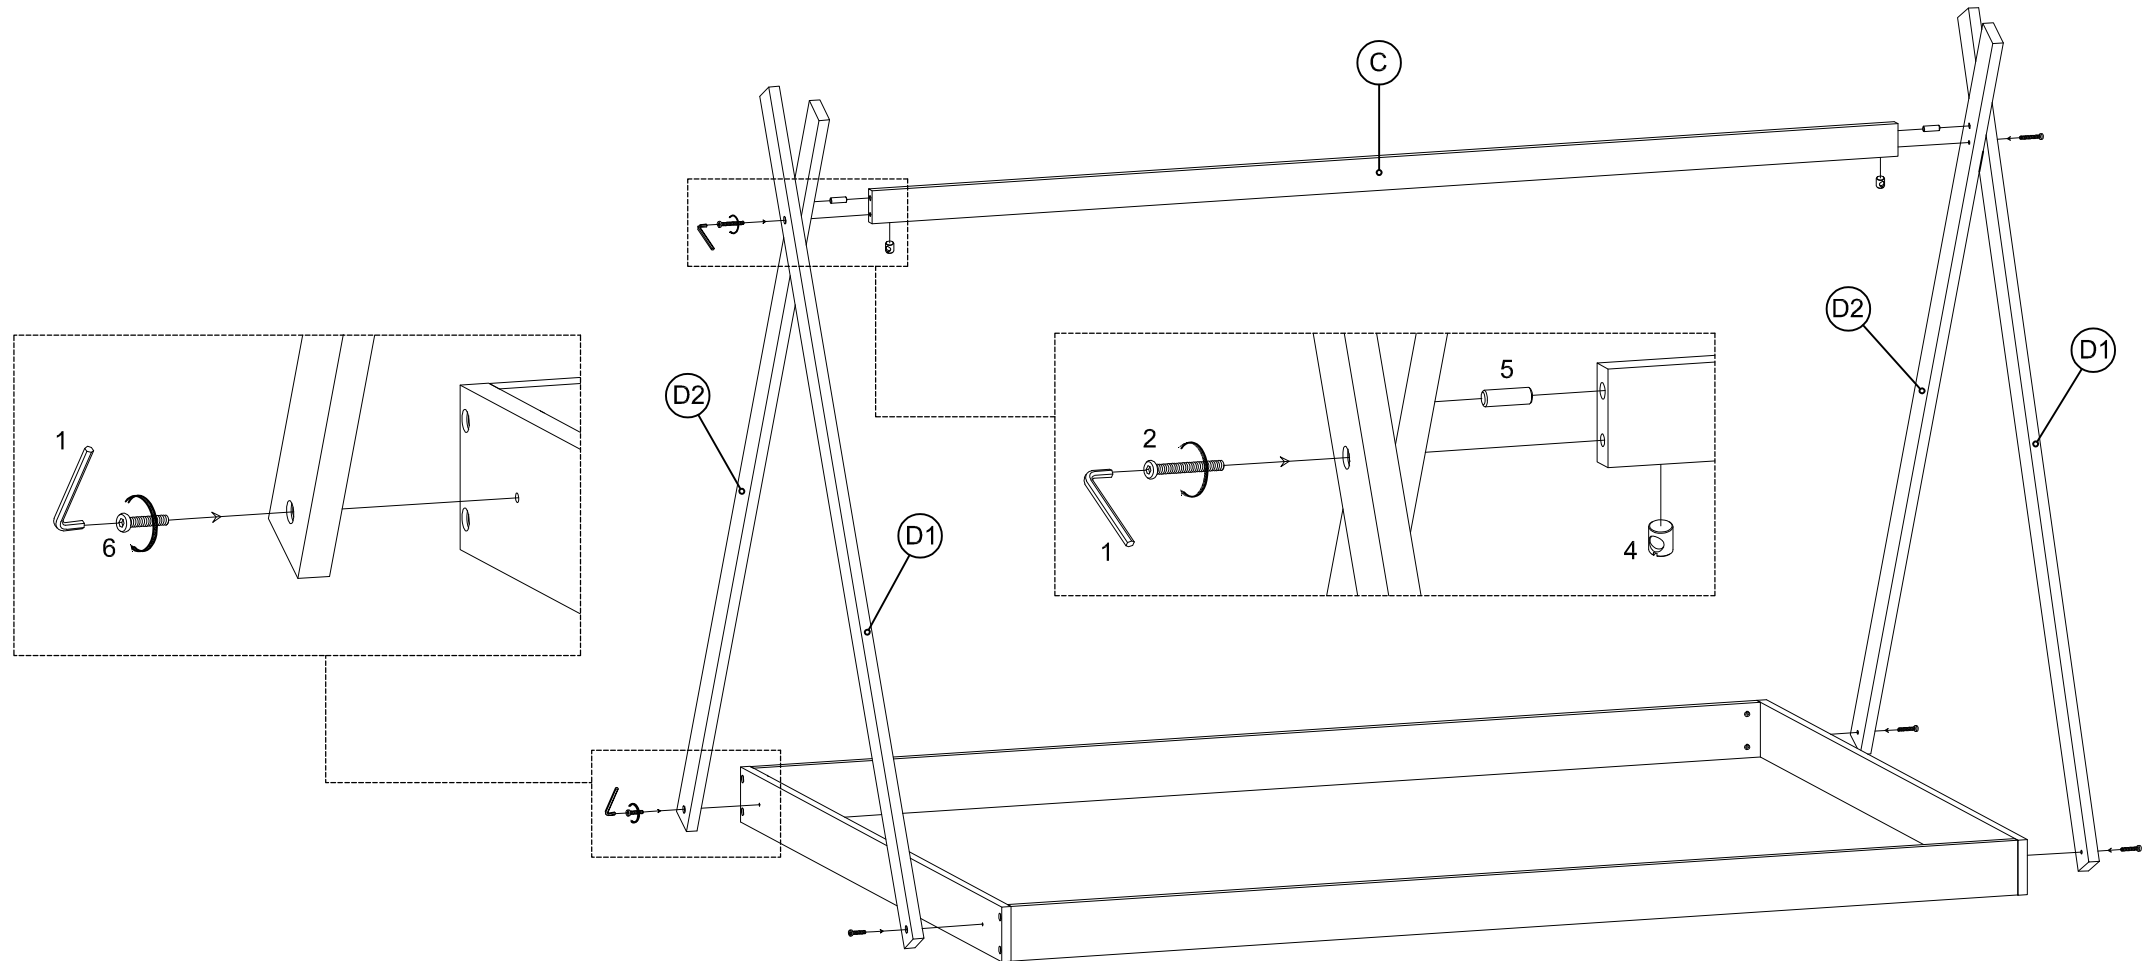







WOOD DOWEL (4PCS)  
Ø10 x 30 mm

# ASSEMBLY INSTRUCTION

PAGE: 4 OF 4

## STEP 2



1	2	4	5	6
				
ALLEN KEY (1PC) K4 x 60 mm	HEX HEAD BOLT (2PCS) 1/4 x 90 mm	BARREL NUT (2PCS) 1/4 x Ø10 x 13 mm	WOOD DOWEL (2PCS) Ø10 x 30 mm	HEX HEAD BOLT (4PCS) 1/4 x 30 mm