
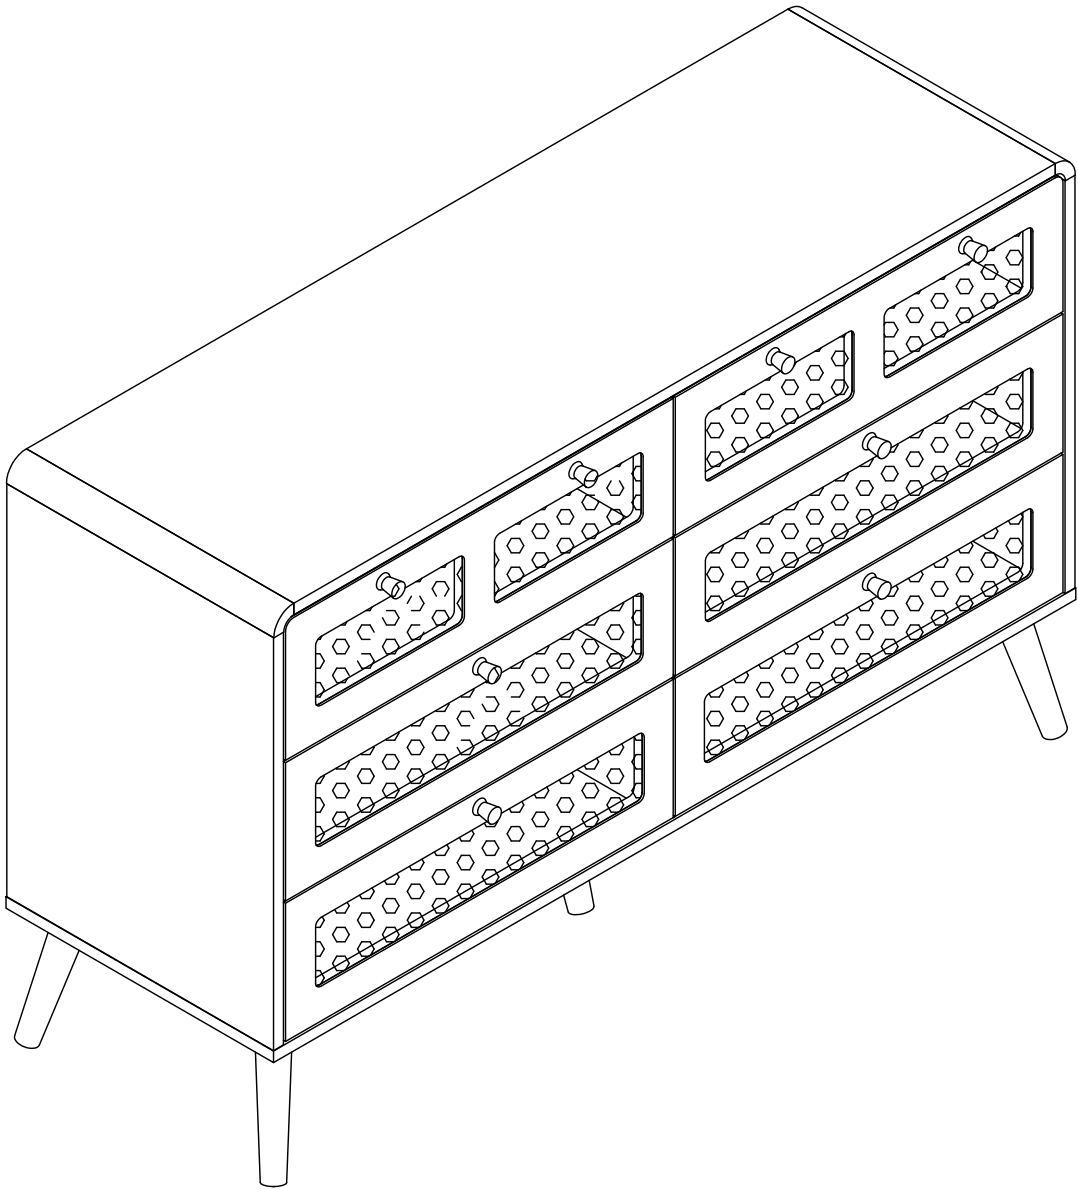


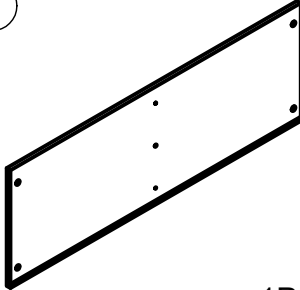
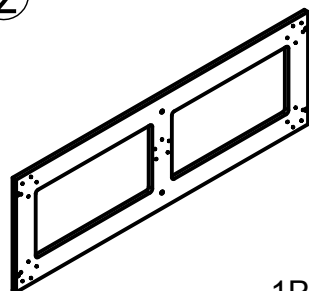
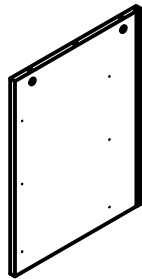
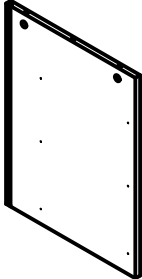
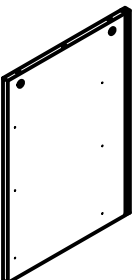
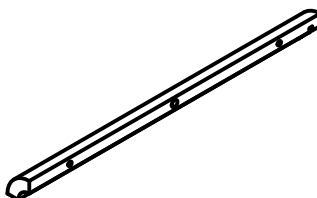


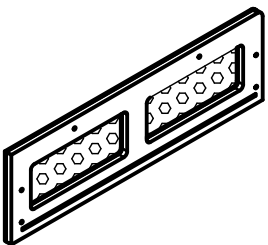
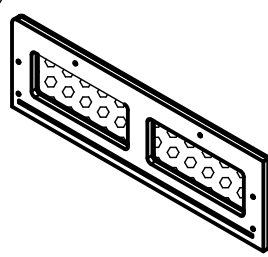
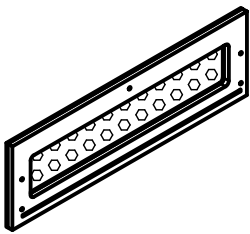
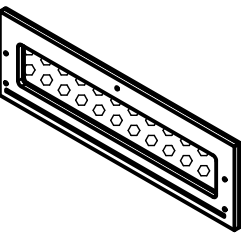
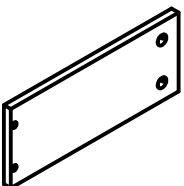
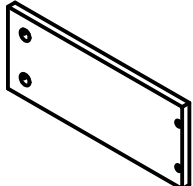
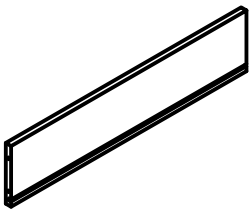
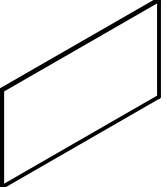




Assembly Instruction




A M6×35mm  34PCS	B Ø15×9 mm  34PCS	C M3.5×14mm  68PCS	D Ø8×30mm  8PCS	E M4×35mm  26PCS	F  8PCS	G M4×20mm  8PCS	H M3.5×14mm  24PCS	I M5×40mm  6PCS	J  2PCS
K M4×14mm  2PCS	M  8PCS	N  4PCS	O 4mm  1PC	P  2PCS	Q  1PC	S M6×15mm  1PC	L  CL DL 6PCS	R  DR CR 6PCS	
①  1PC	②  1PC	③  1PC	④  1PC						
⑤  1PC	⑥  2PCS	⑦  1PC	⑧  2PCS						
⑨  4PCS	⑩  1PC	⑪  1PC	⑫  2PCS						
⑬  2PCS	⑭  6PCS	⑮  6PCS	⑯  6PCS						
⑰  6PCS	⑱  1PC	⑲  1PC	⑳  2PCS						

Cam Lock Fastening System

Insert the cam bolt into the hole first, then insert the cam lock and lock it.

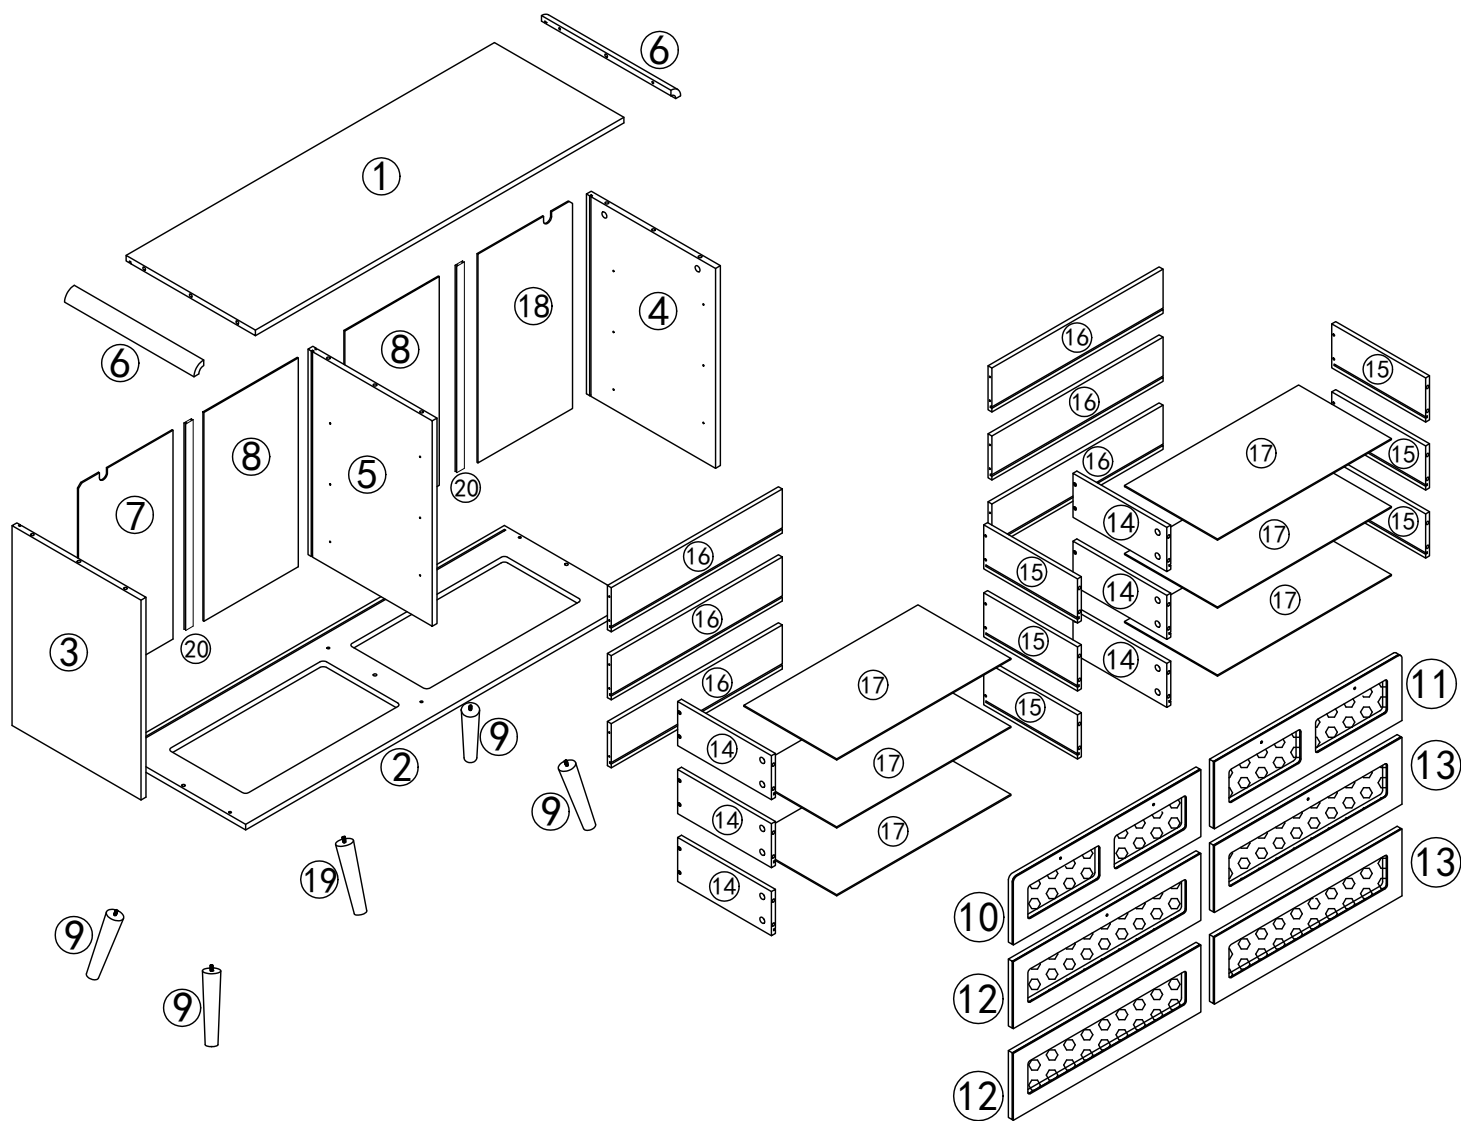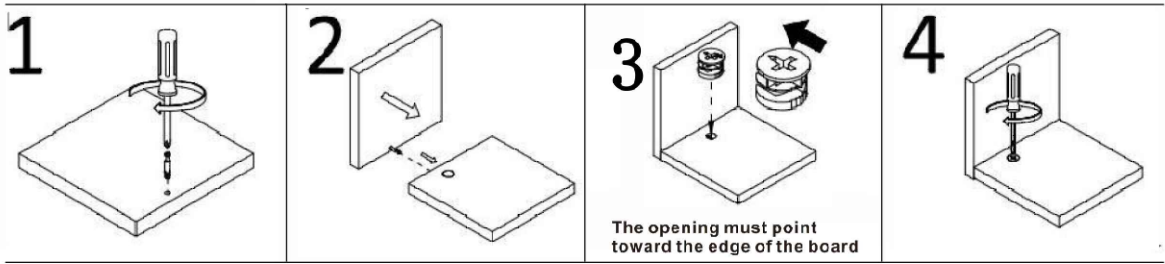


1

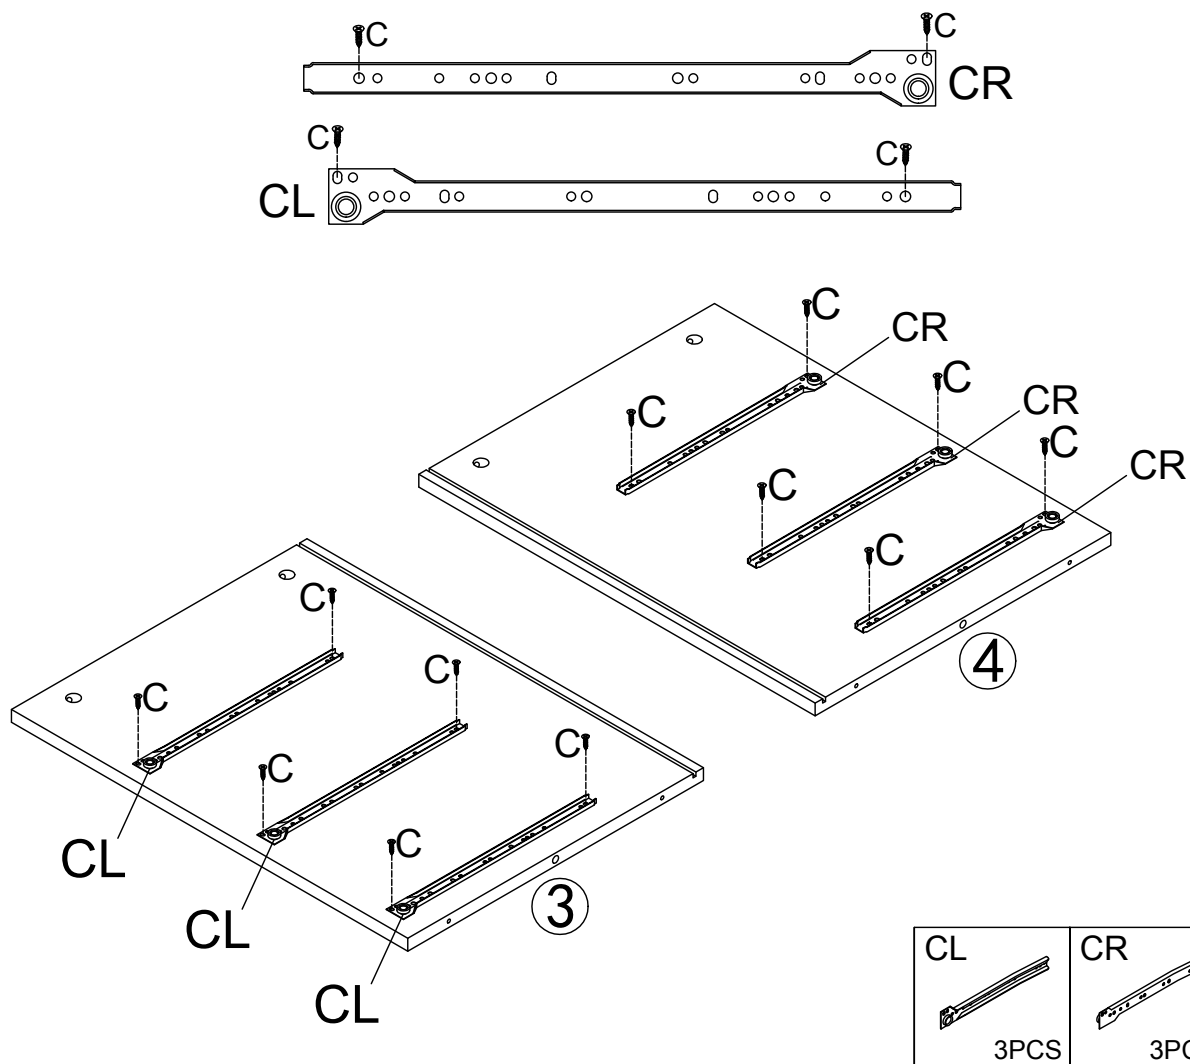


2


Once done the screws on front side of #5 board, please flip over it to back side to screw slides.

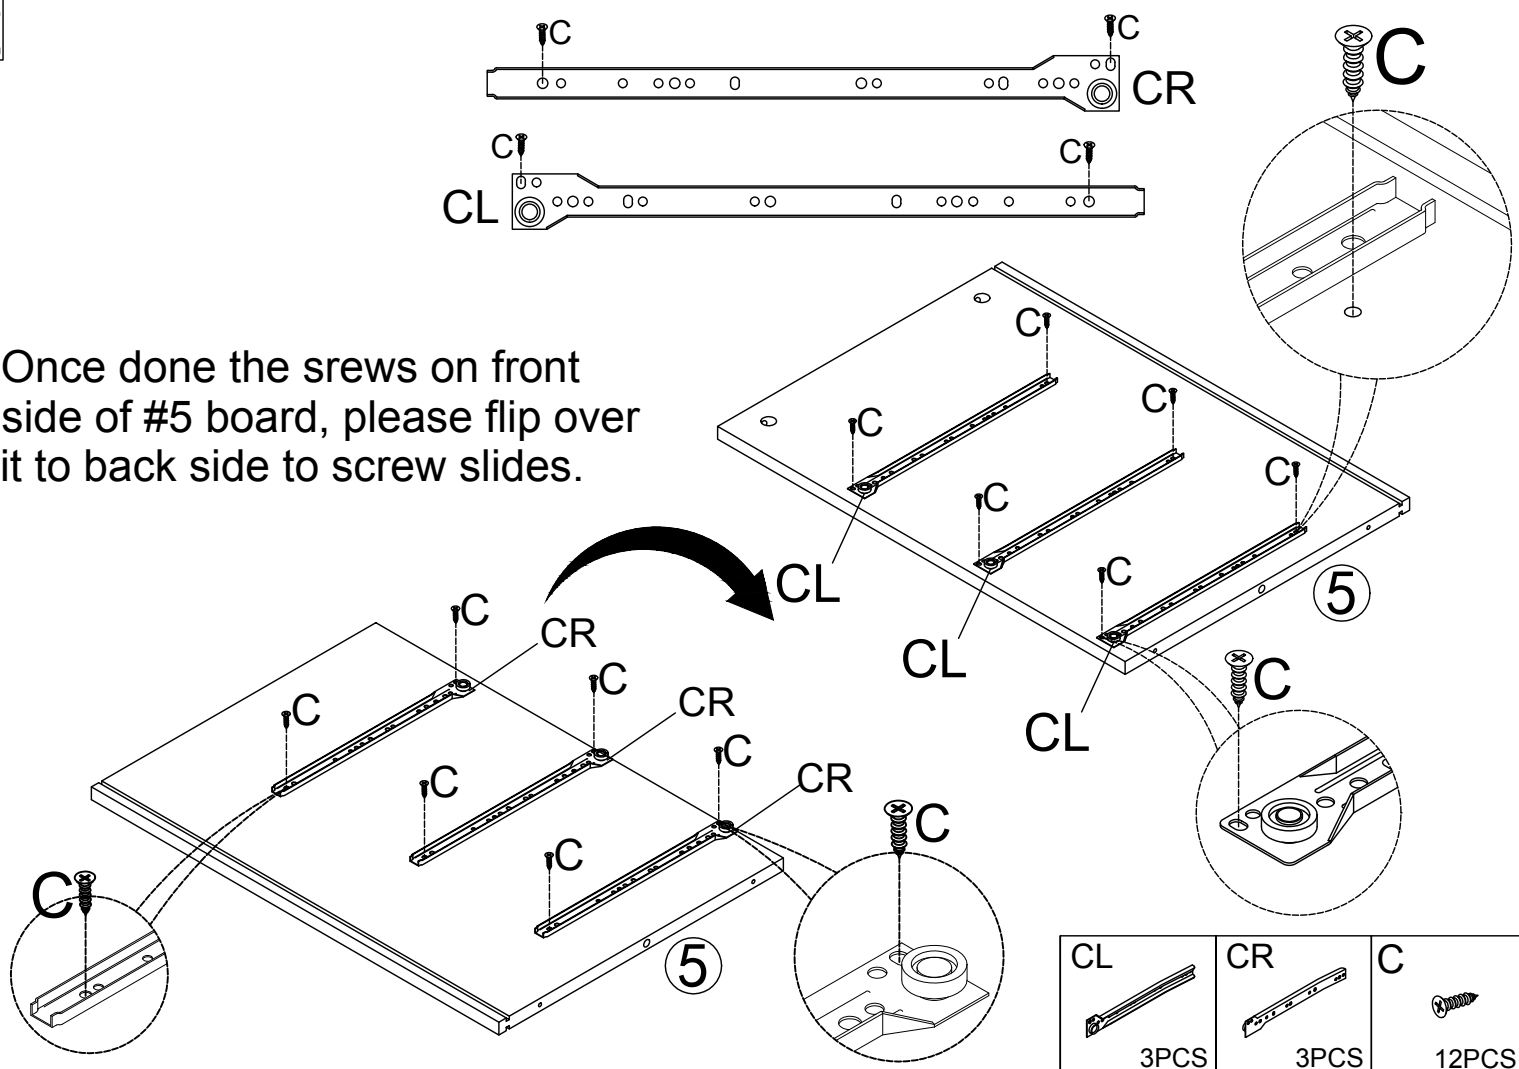


3

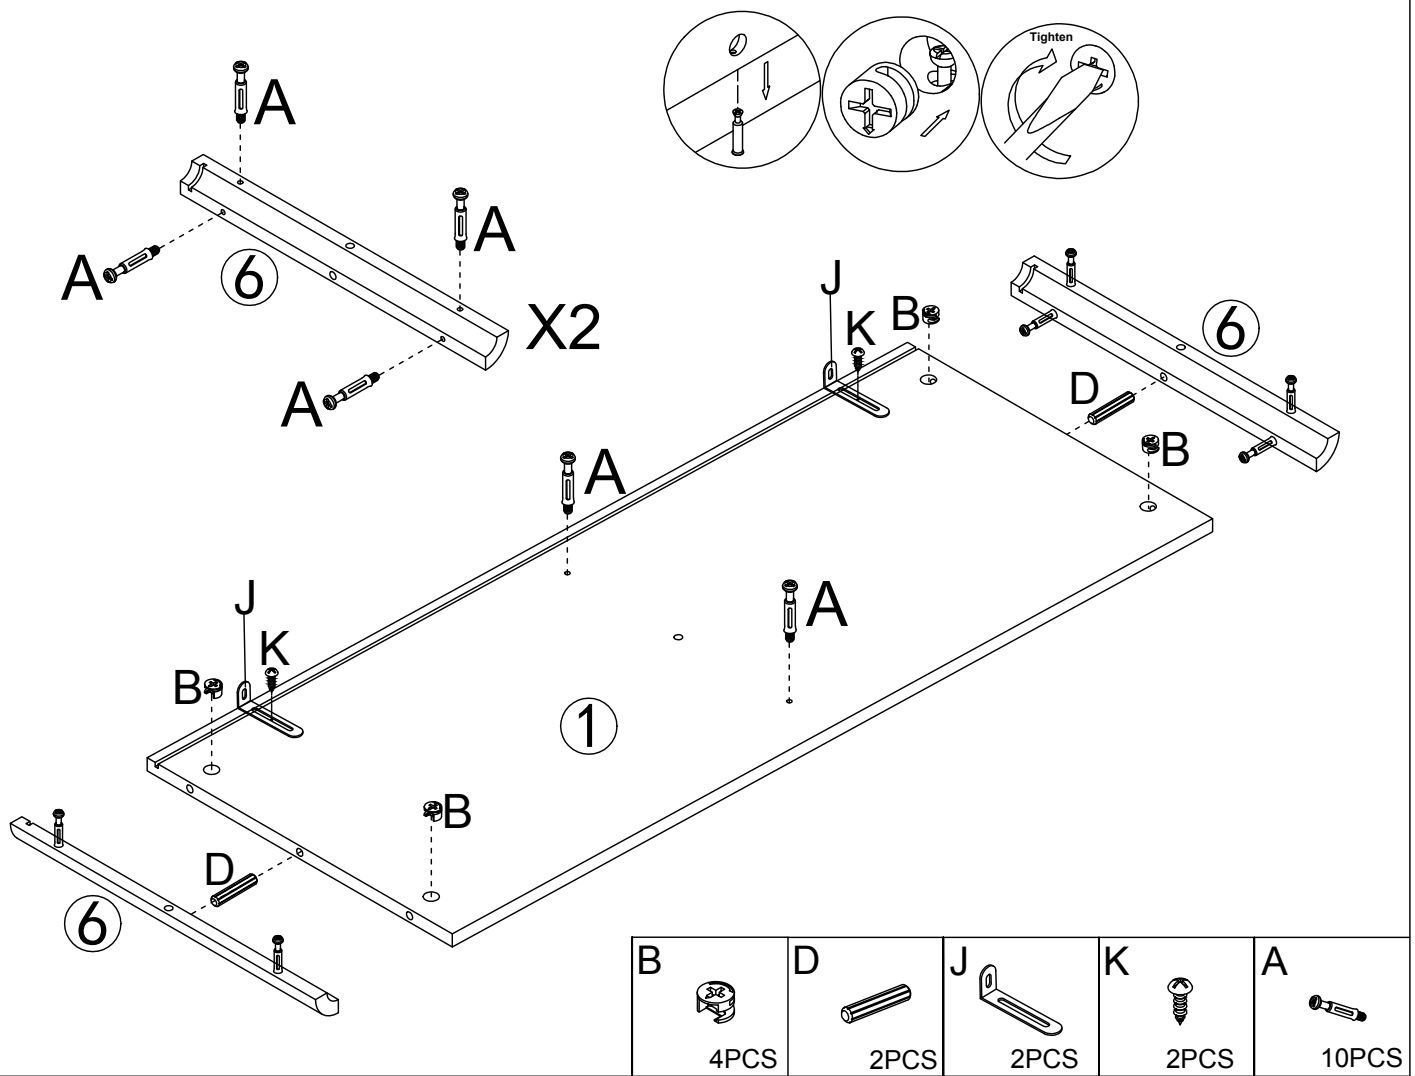


4

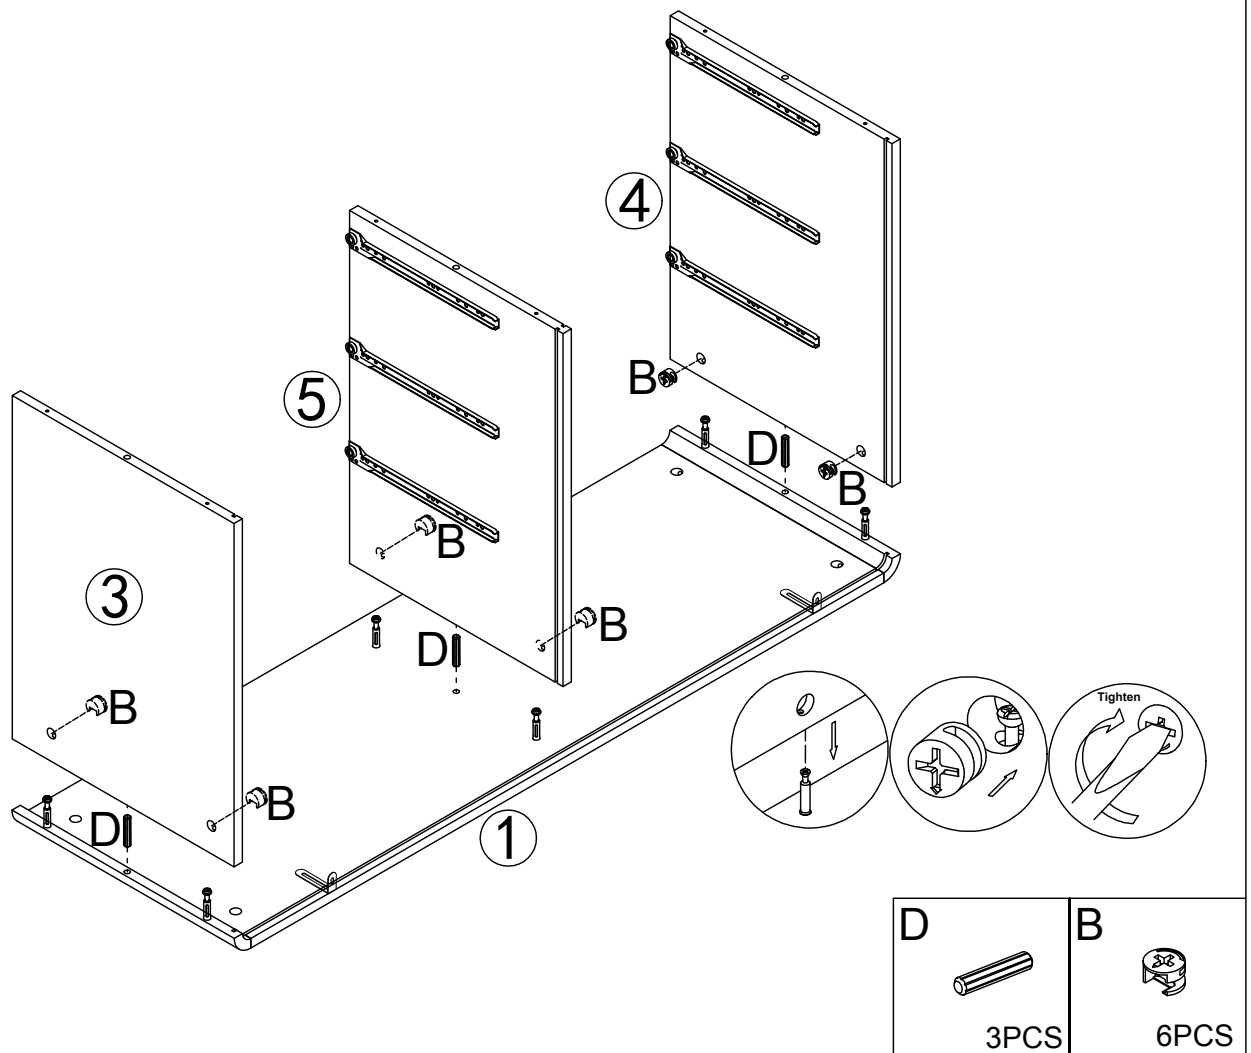


5

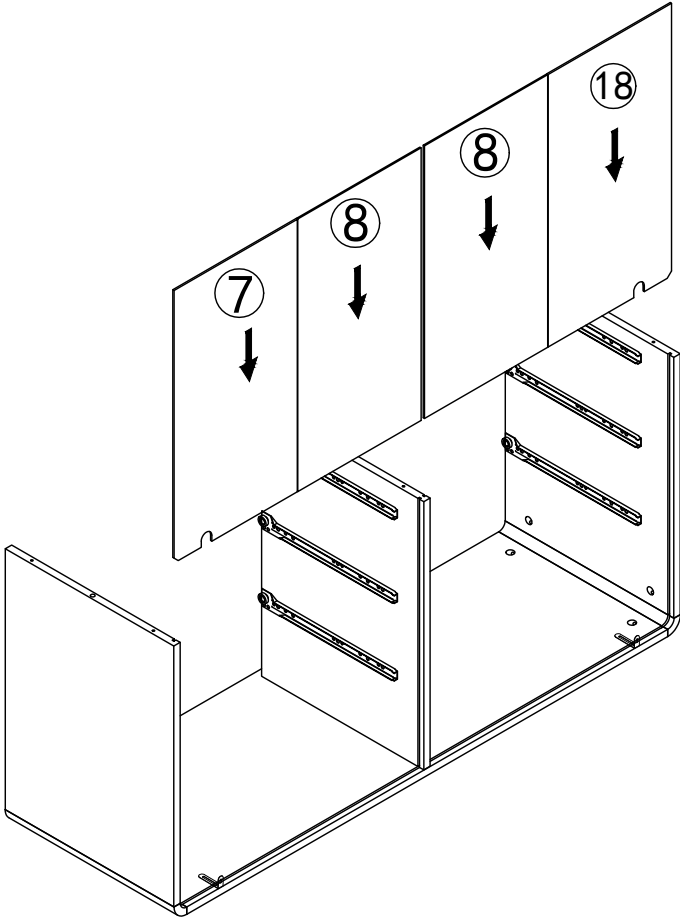

6

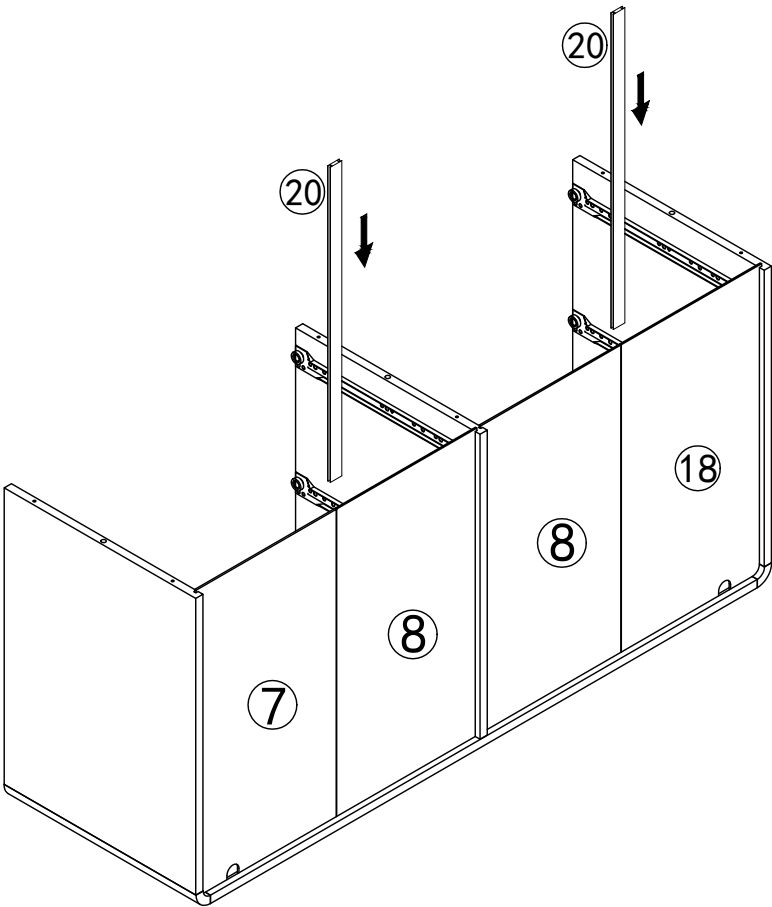


7

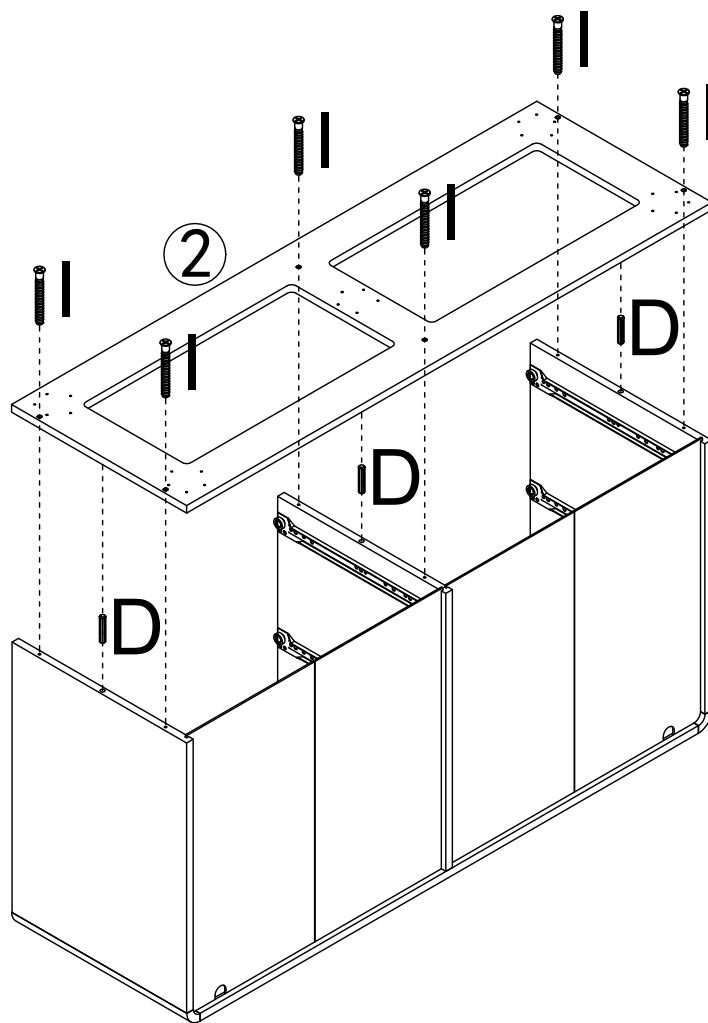



D	I
	
3PCS	6PCS

8



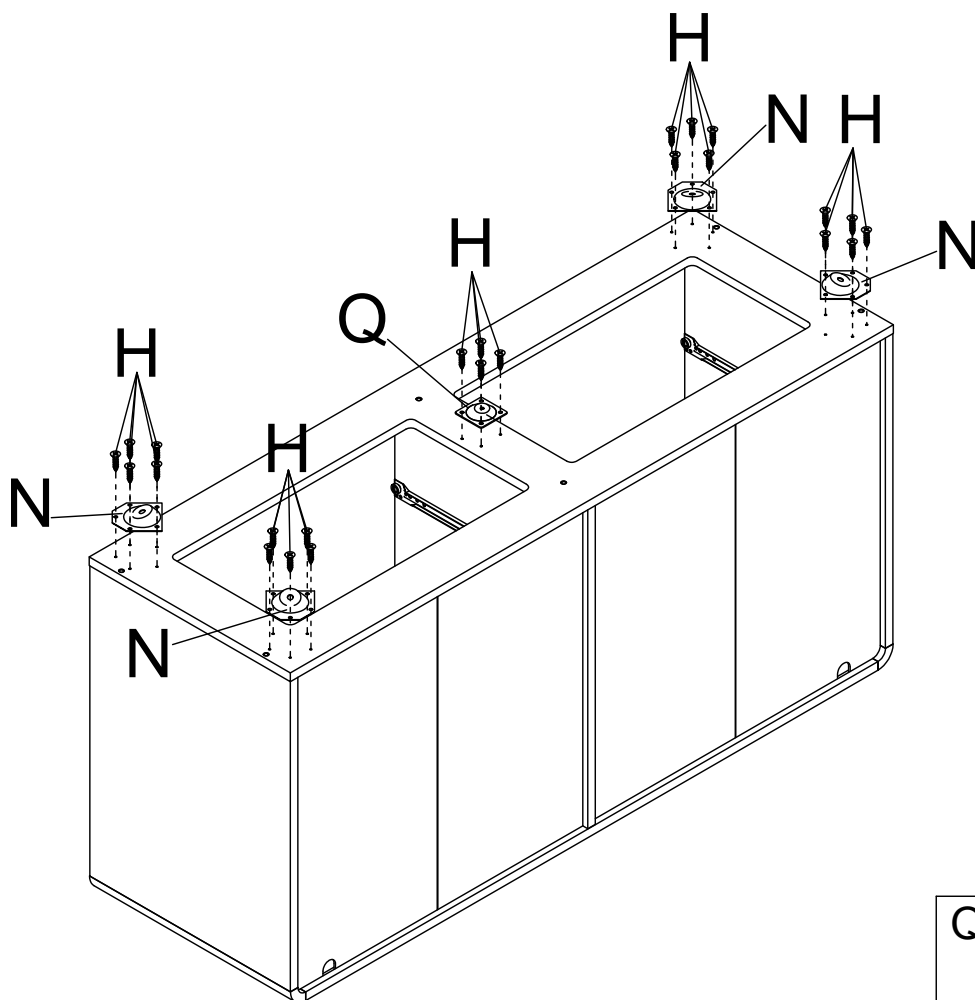


Q	N	H
		
1PC	4PCS	24PCS


9

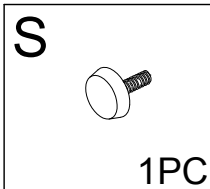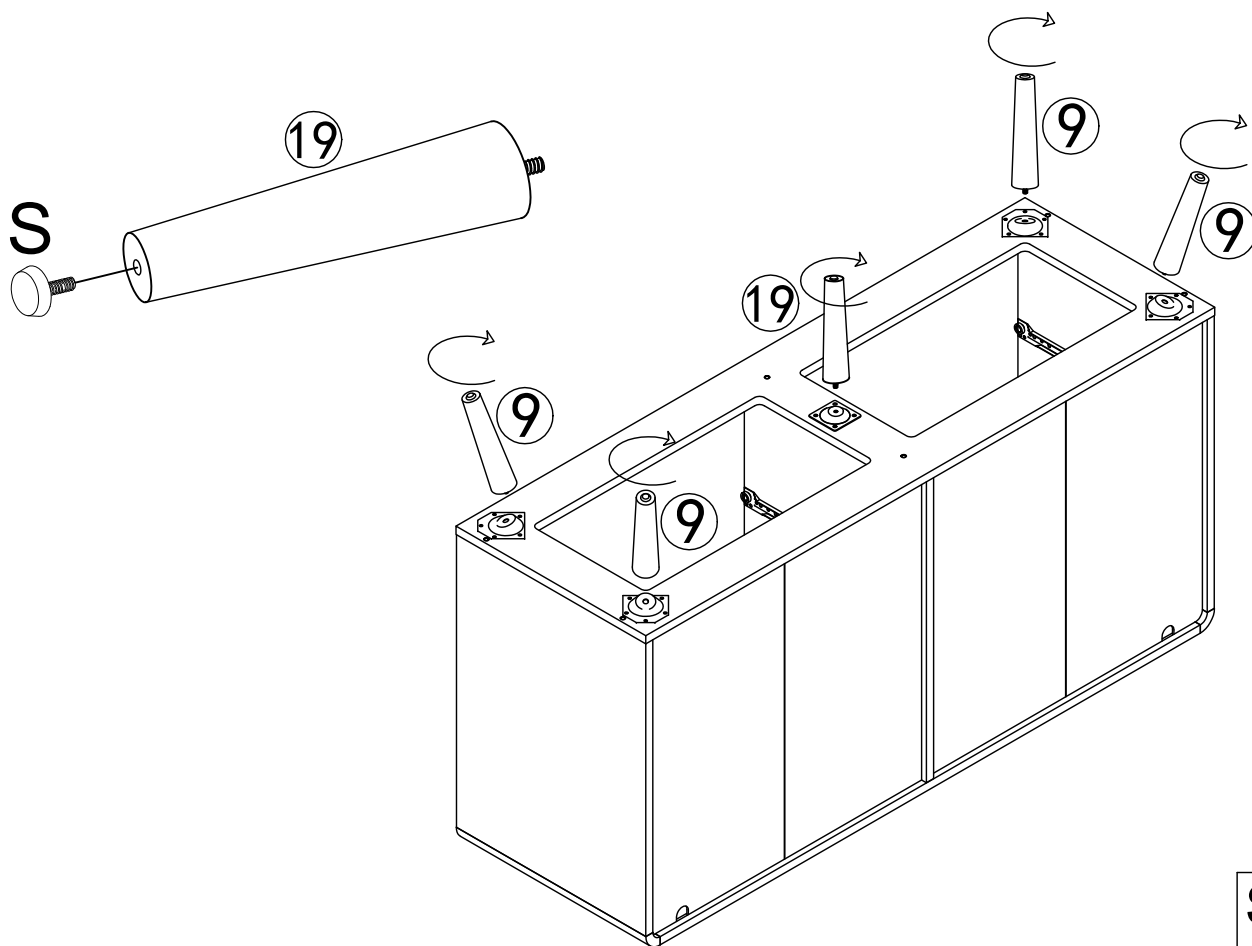


10

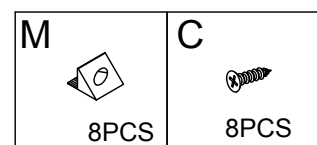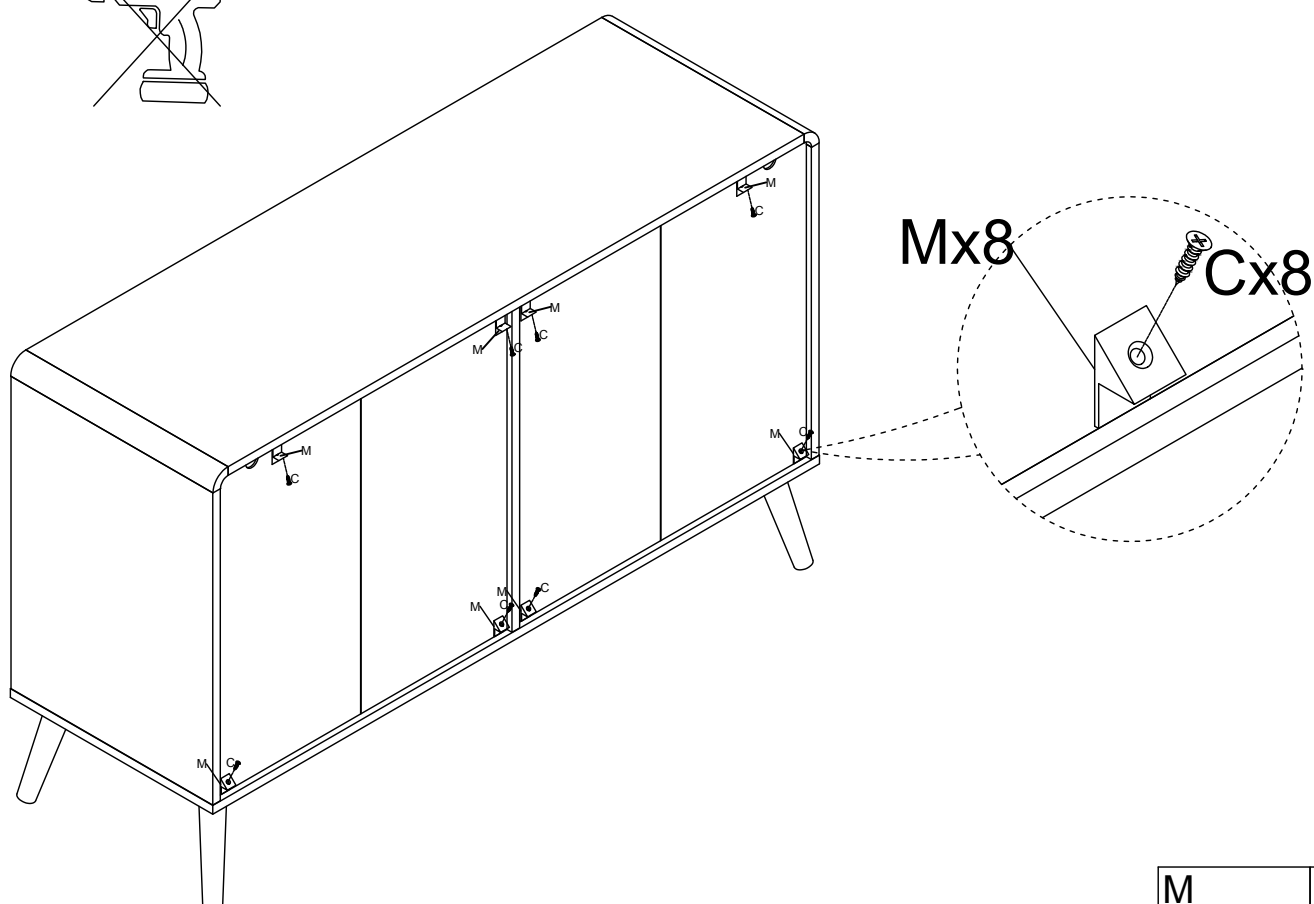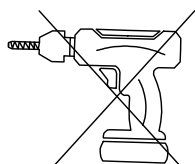


11

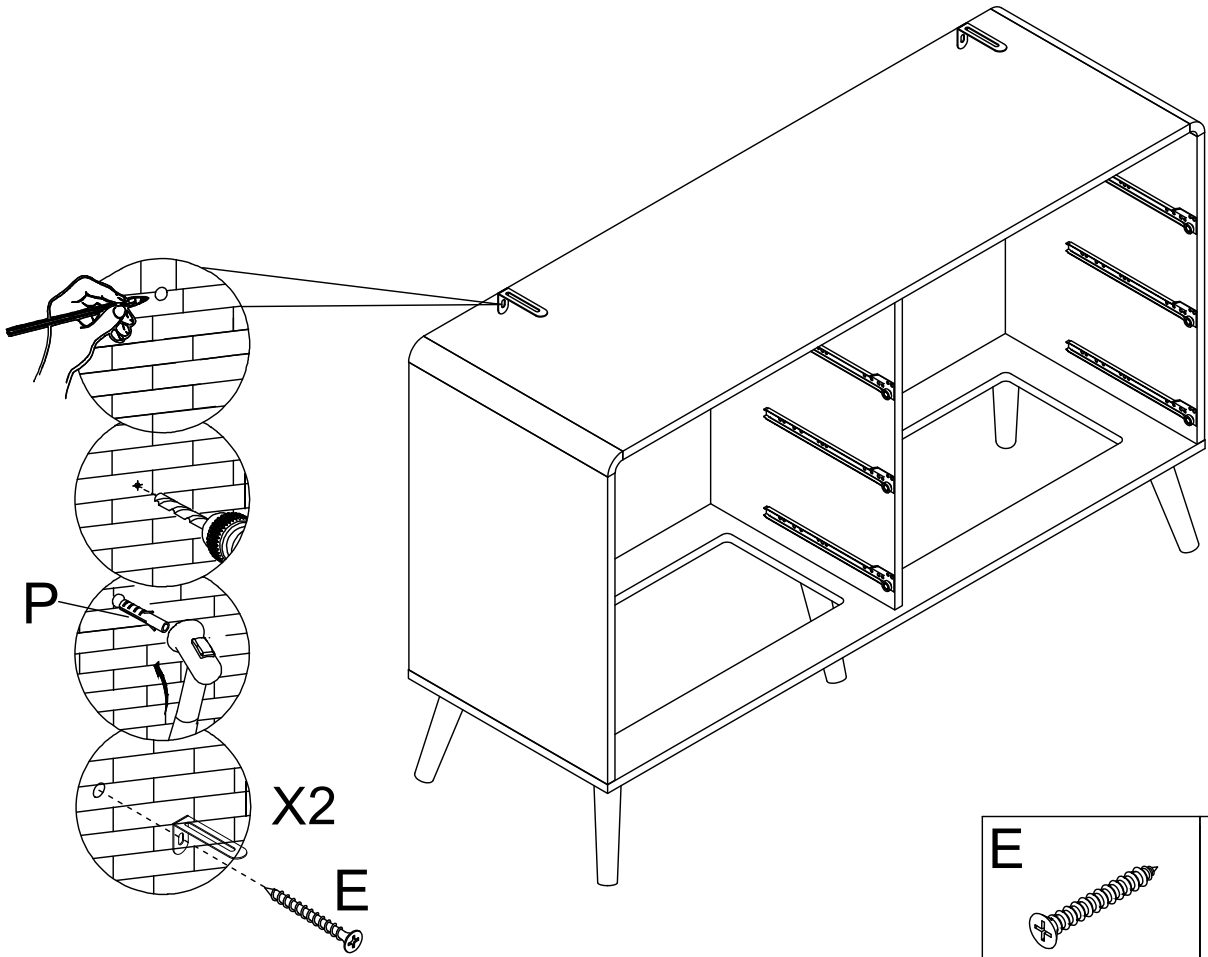



E	P
	
2PCS	2PCS

12

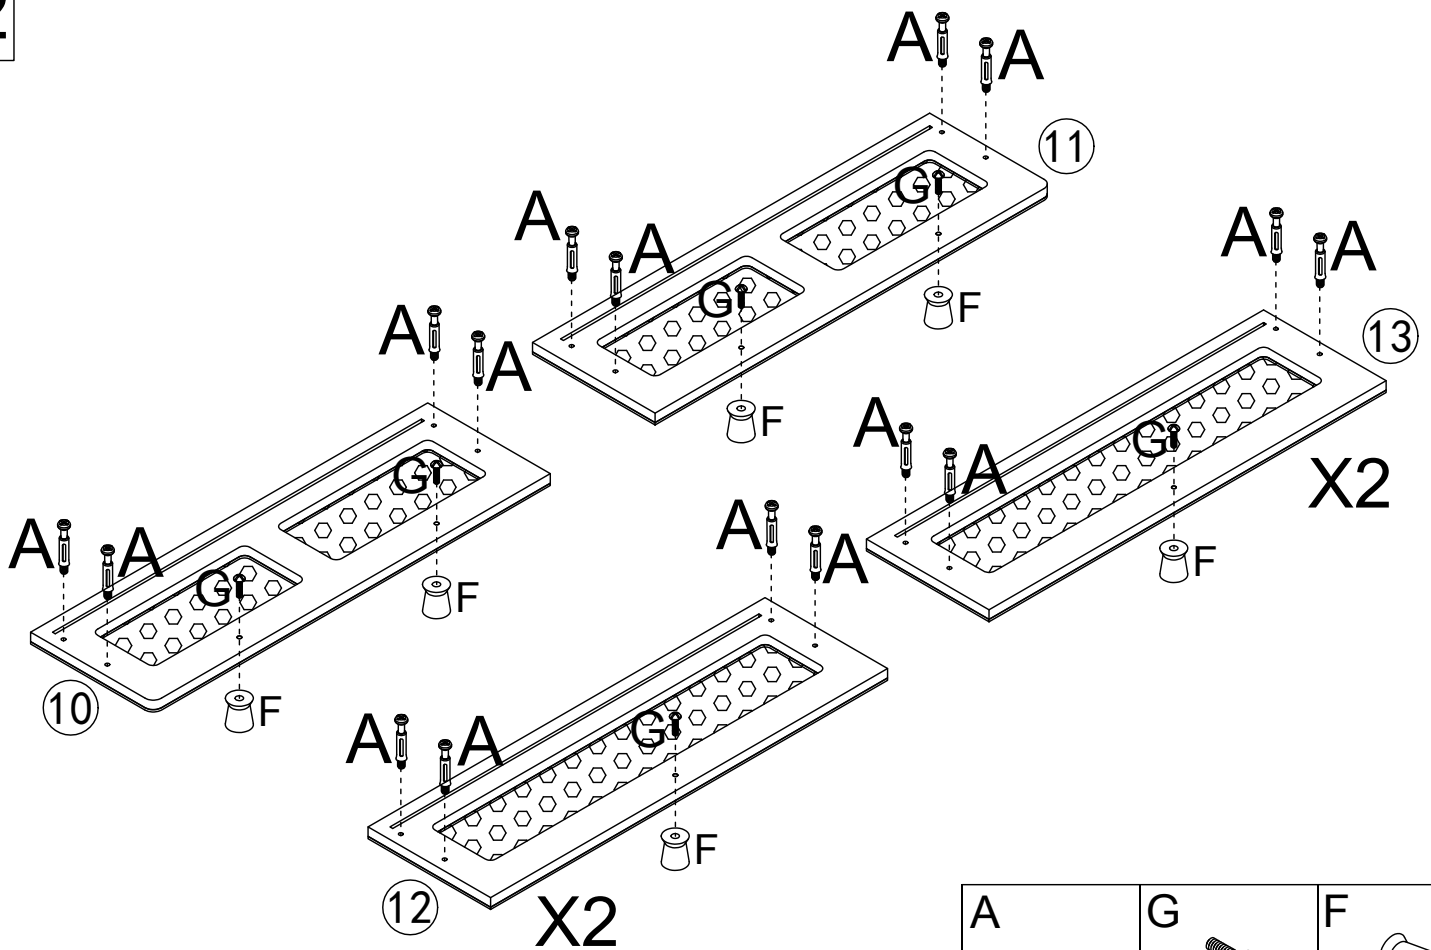


A	G	F
		
24PCS	8PCS	8PCS


13

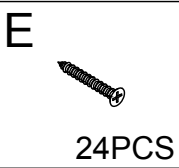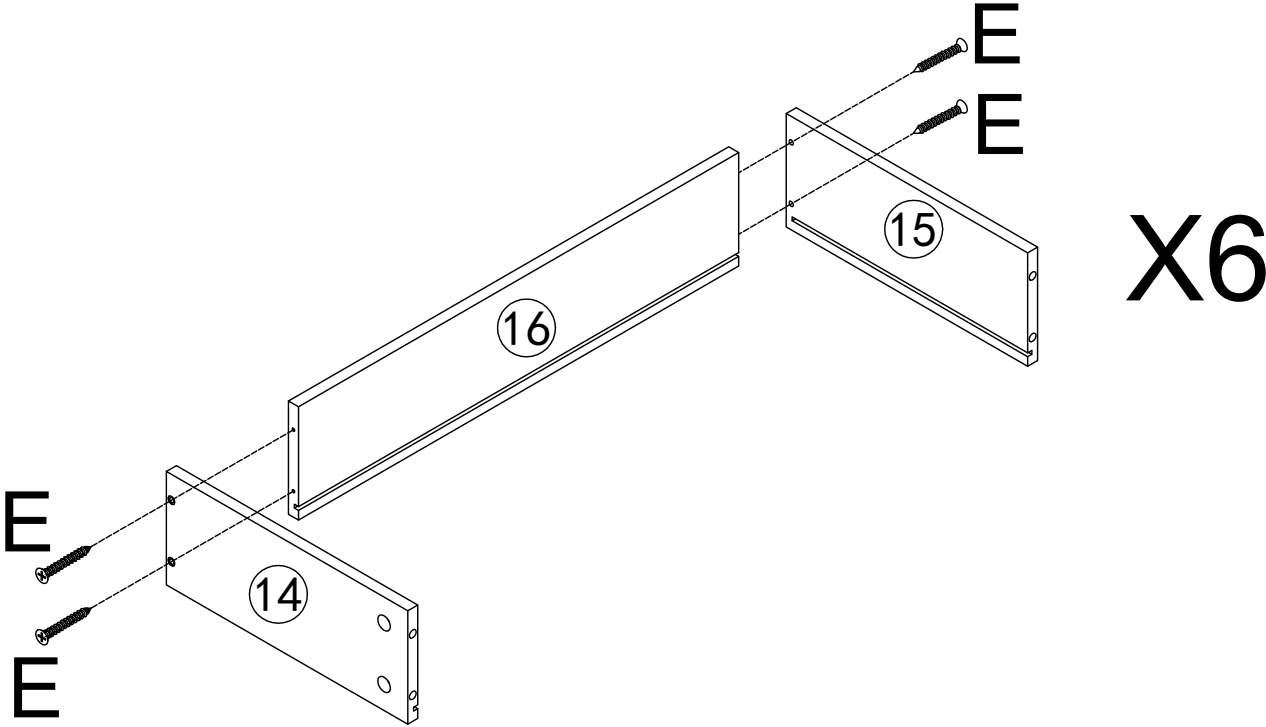

14

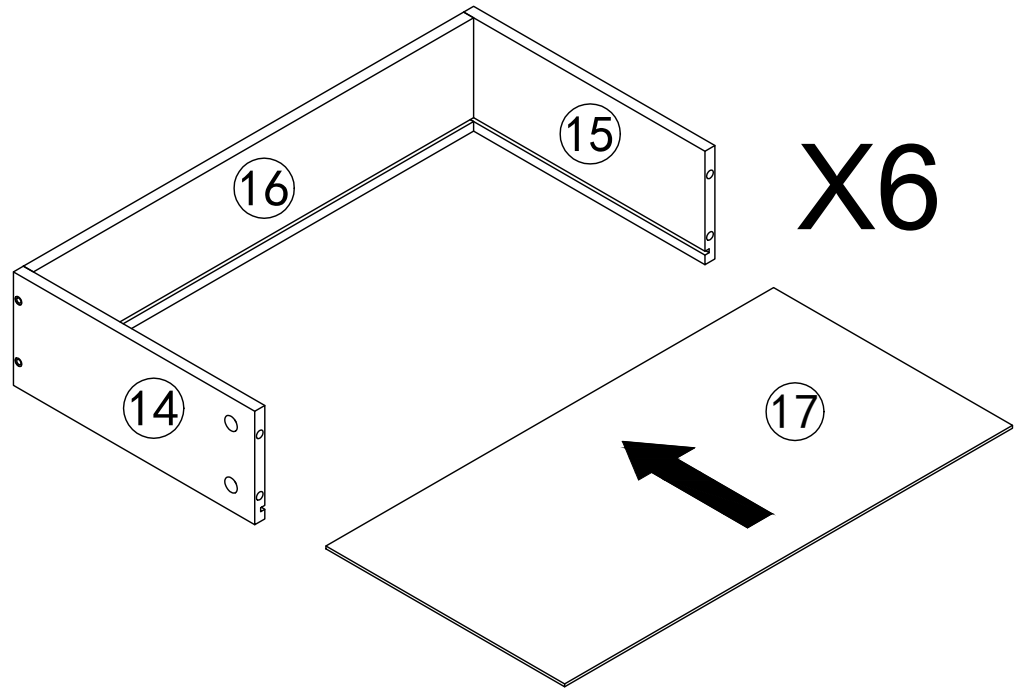

15

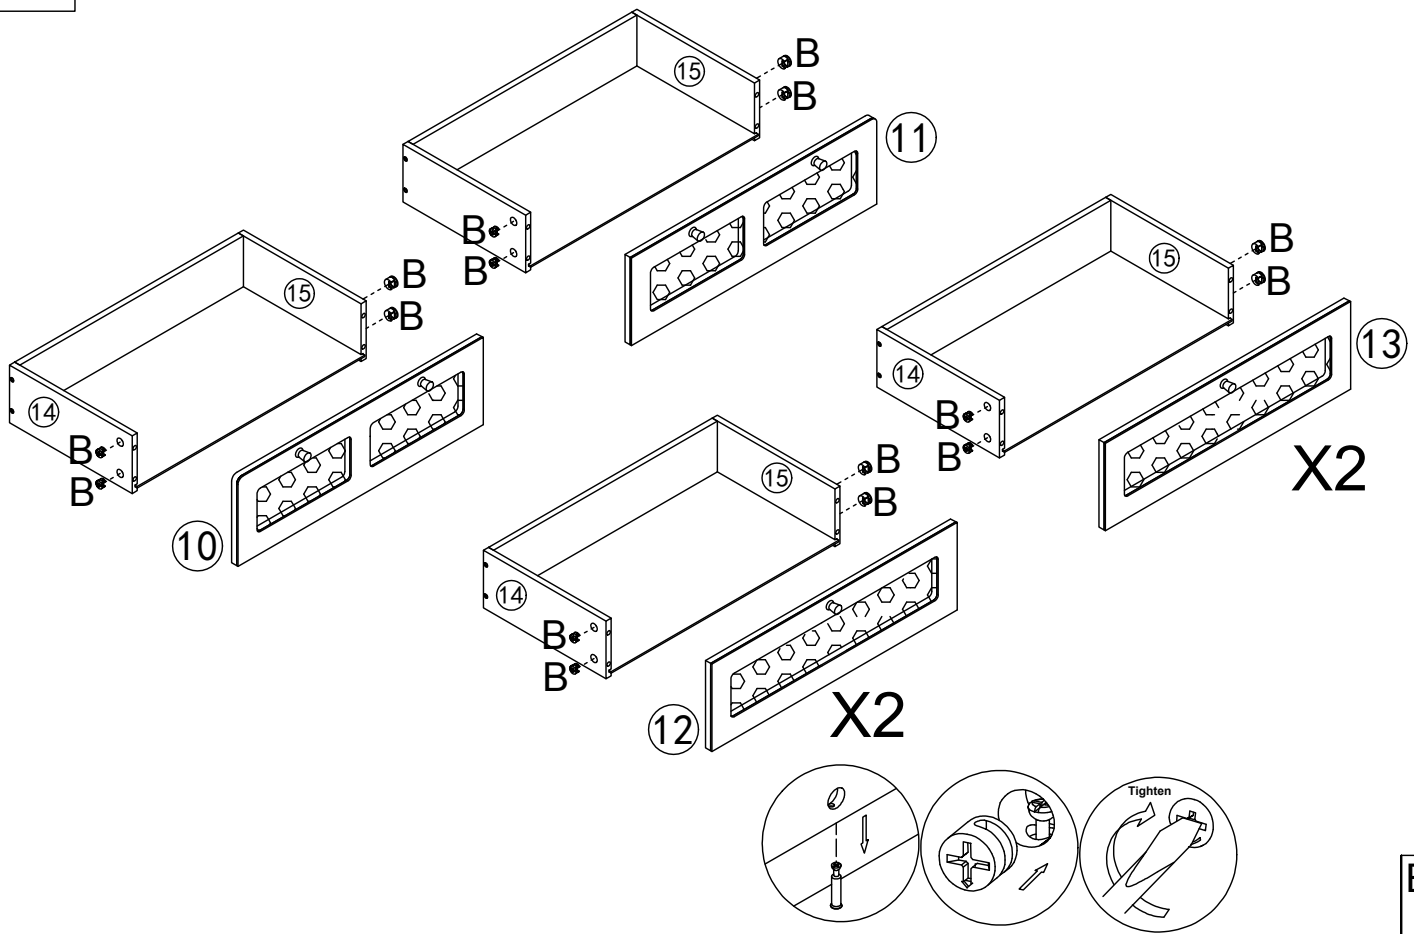


B



24PCS

16

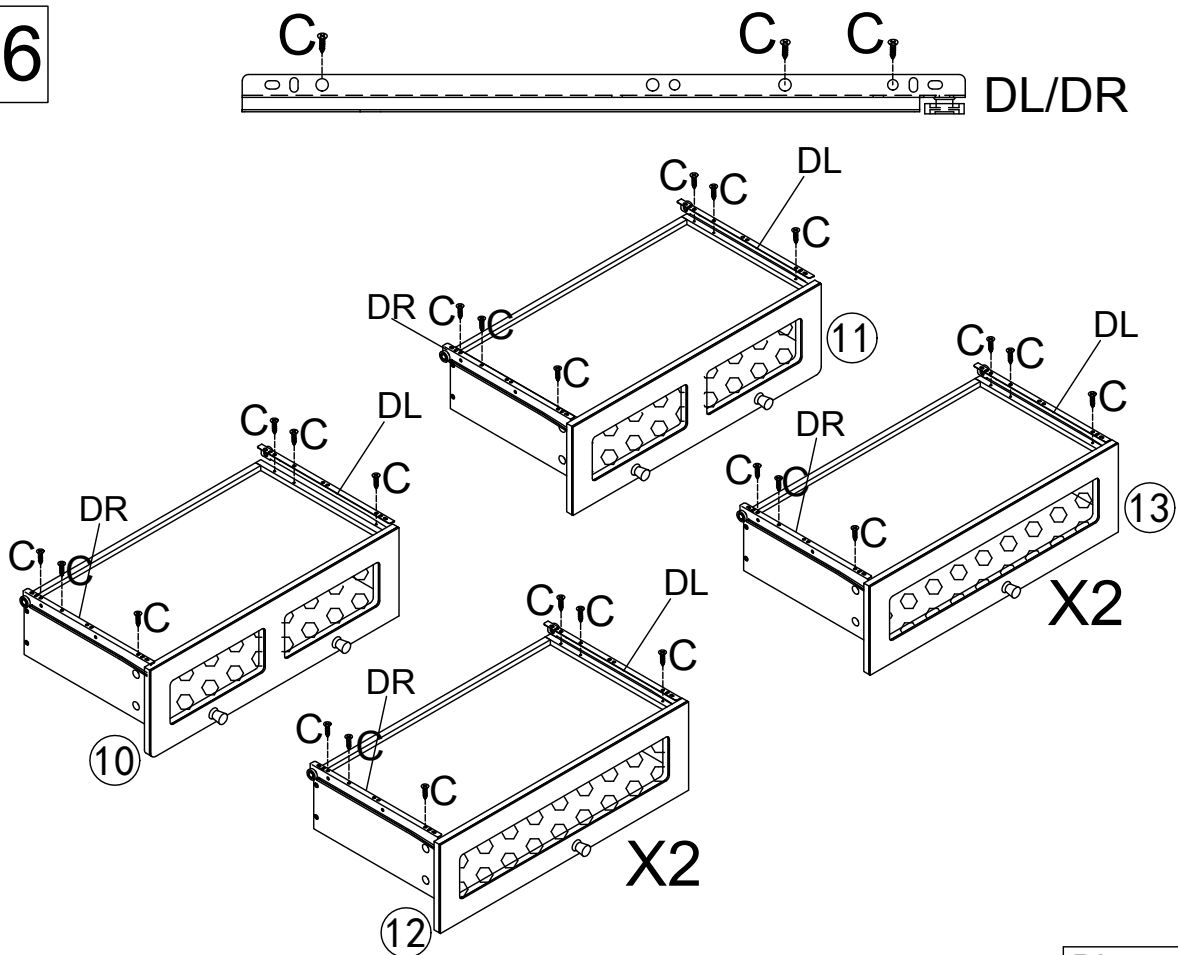


DL



6PCS

DR




6PCS

C

36PCS

17

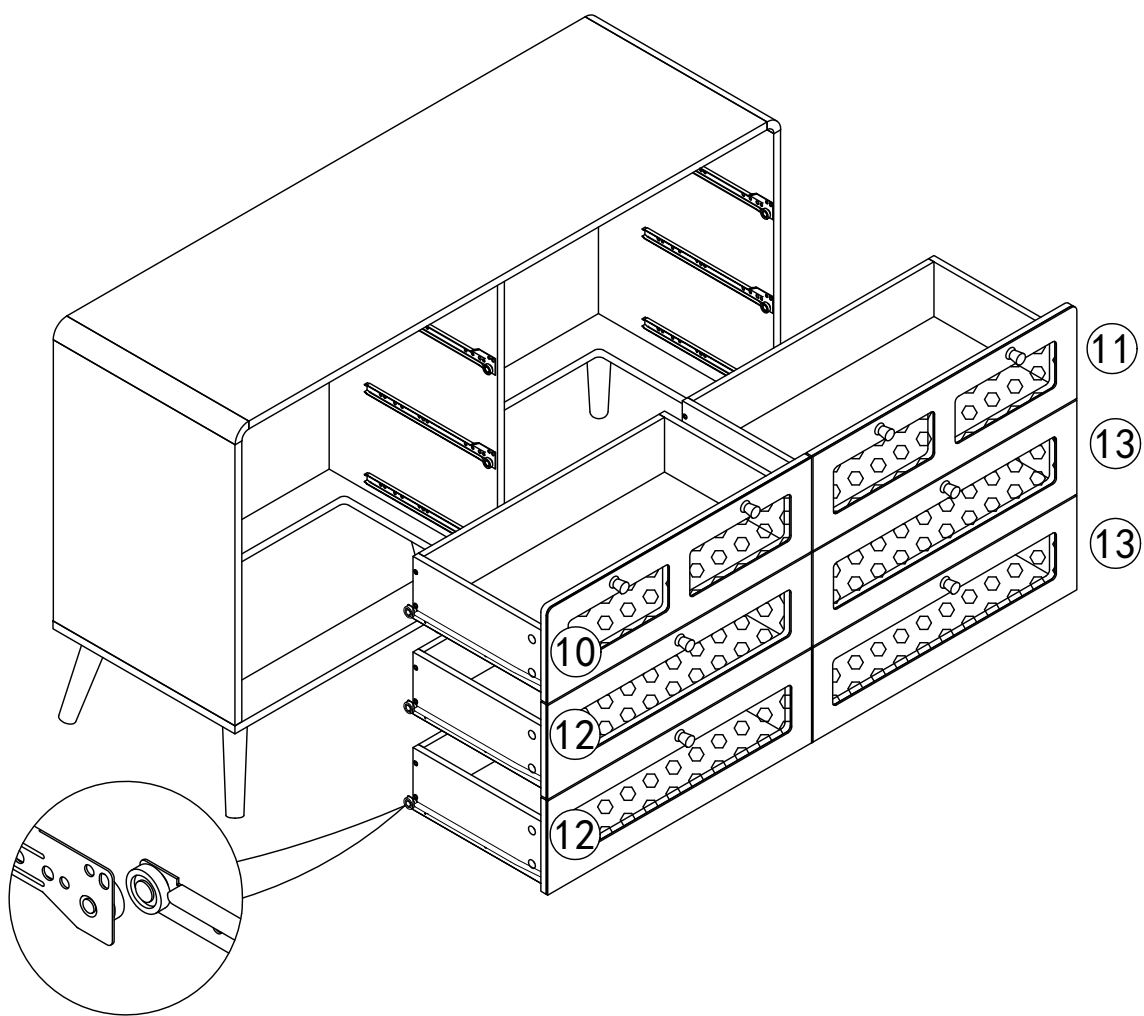

18

