


SICOTAS

DR118A1XWTY1394 | DR118A1ELTY1395

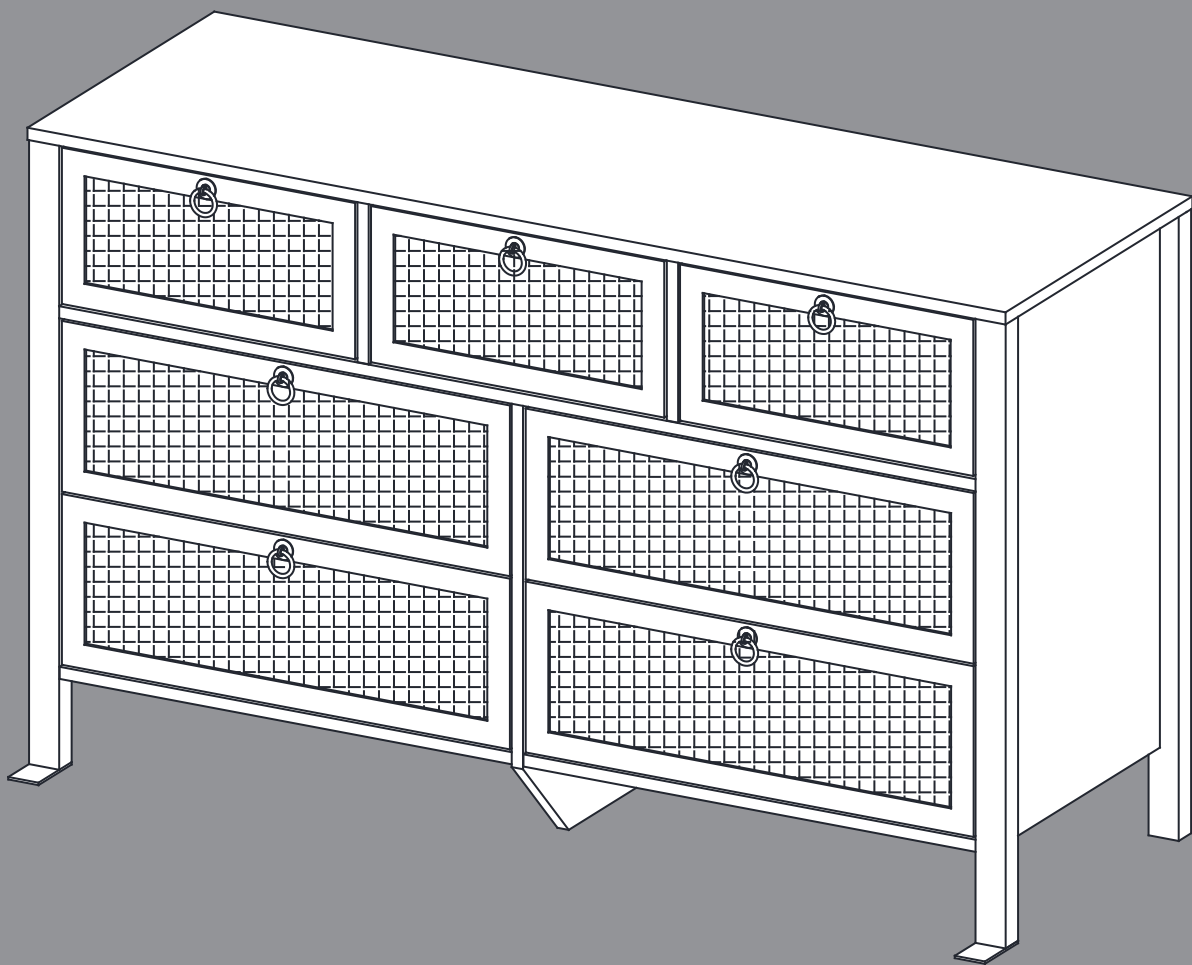

Terra Collection

Assembly Instructions

Before beginning the assembly process, please read and save these instructions for reference. Following these guidelines will ensure a smooth and successful assembly of your product.

1. Part Identification:

Carefully separate and identify all the parts included in your package. Confirm that you have all the components listed in the instruction manual. This step will help you avoid any missing or misplaced parts during assembly.

2. Work Surface:

To prevent any scratches or damage to the product, assemble it on a soft mat or a similar protective surface. This will provide a cushioned area for the components and protect the surfaces from unwanted marks.

3. Step-by-Step Assembly:

Follow the assembly instructions provided, proceeding one step at a time. Take care to understand each step properly before proceeding to the next one. This sequential approach ensures that the assembly is done correctly and minimizes the chance of errors.

4. Proper Screw Seating:

When attaching screws and nuts, it is essential not to fully tighten them until all screws are correctly seated. By partially tightening each screw and nut initially, you can ensure that they are aligned properly and fit securely before final tightening.

5. Avoid Over-Tightening:

While each screw and nut should be tightened correctly, it is crucial not to over-tighten them. Over-tightening can cause damage to the product or compromise its structural integrity. Use the appropriate amount of force to secure the components without excessive tightening.

SICOTAS customer help center:

If you encounter any questions or problems during the assembly process, please do not hesitate to contact us.

We strive to provide excellent customer support and will respond to your inquiries within 24 hours. Our team will offer you a suitable solution to address any concerns you may have.



Email:
service@sicotas.com



Website:
www.sicotas.com



Phone:
(833) 742-6827



Official Website:



WhatsApp:



YouTube:



Instagram:






Facebook:



TikTok:

Parts List

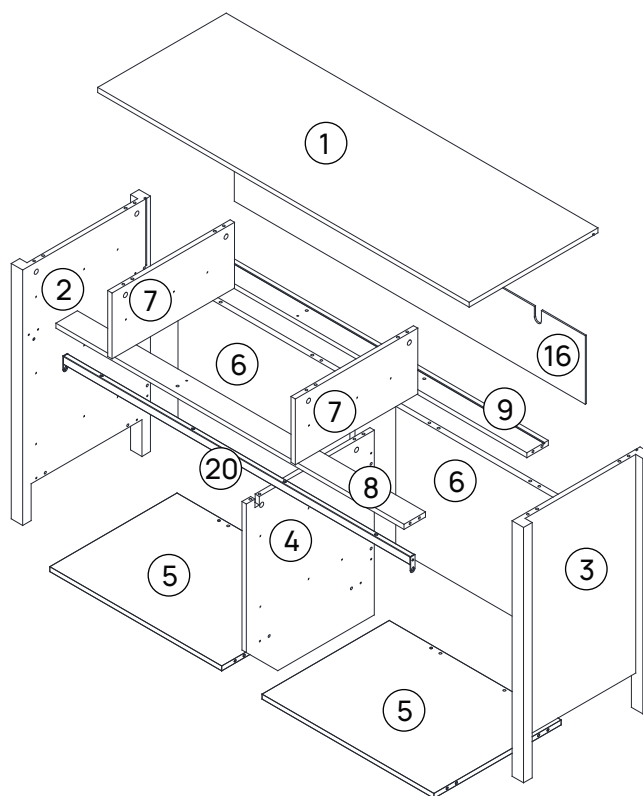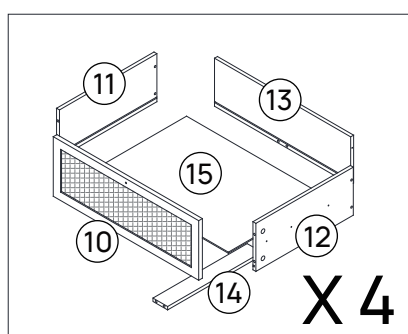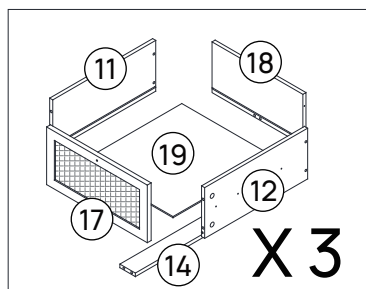

Hardware List



AX78
Ø6x35mm



BX78
Ø15x10mm



CX32
Ø8x30mm



DX52
M4x35mm



EX84
M3x12mm



FX4
Ø8x50mm



GX2



HX2
M4x12mm



IX10



JX14
M3x16mm



KX7




LX7
M4x18mm



MX14
M340mm



NX2



OX2



PX2



QX3



RX4
M6x35mm



SX2
M6x12mm





TX1
M4

Code	Description	Quantity
A	Ø6*35mm Cam bolt	78+4
B	Ø15x10mm Cam lock	78+4
C	Ø8x30mm Wood dowel	32+3
D	M4x35mm Screw	52+4
E	M3x12mm Screw	84+4
F	Ø8x50mm Wood dowel	4+1
G	Anti falling iron sheet	2
H	M4x12mm Screw	2+1
I	Back clip	10+2
J	M3x16mm Screw	14+2
K	Handle	7




Code	Description	Quantity
L	M4x18mm Bolt	7+1
M	Drawer Slides	14
N	Plastic anchor	2
O	Iron sheet	2
P	Foot pad	2+2
Q	Foot pad	3+2
R	M6x35mm Bolt	4+1
S	M4x12mm Bolt	2
T	Wrench	1

Step 1

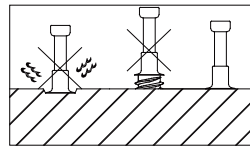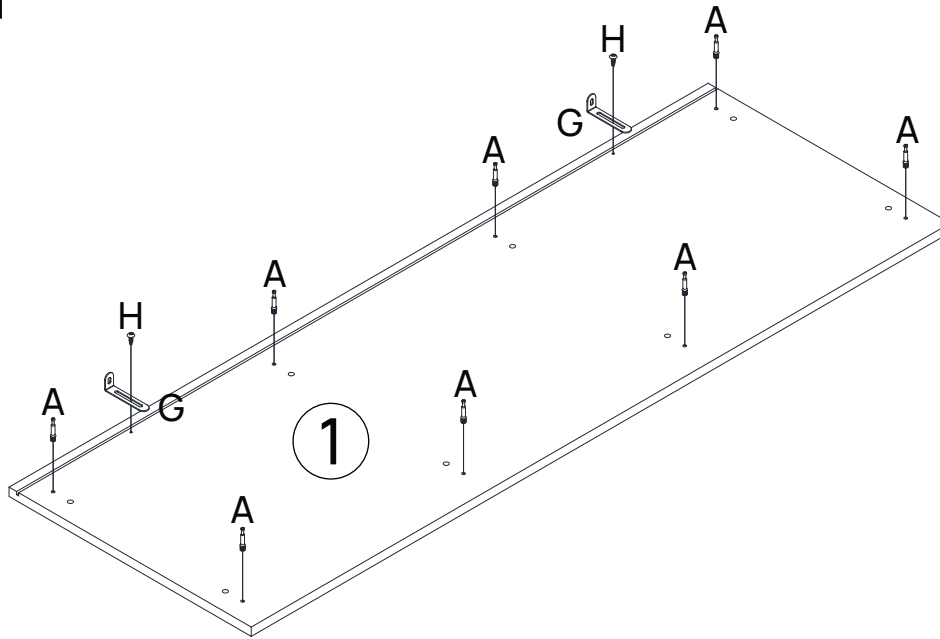



A * 8	G * 2	H * 2
		

Step 2

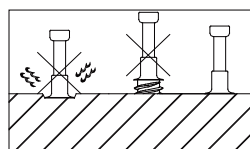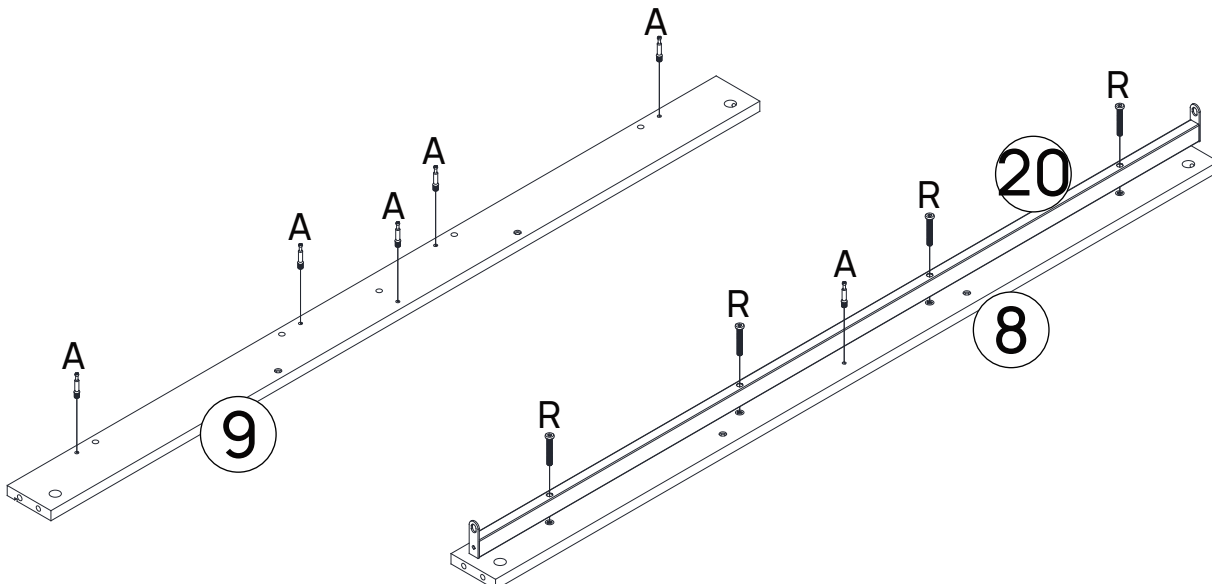

T * 1	R * 4	A * 6
		


Step 3

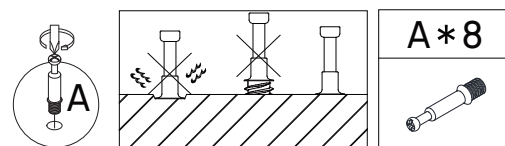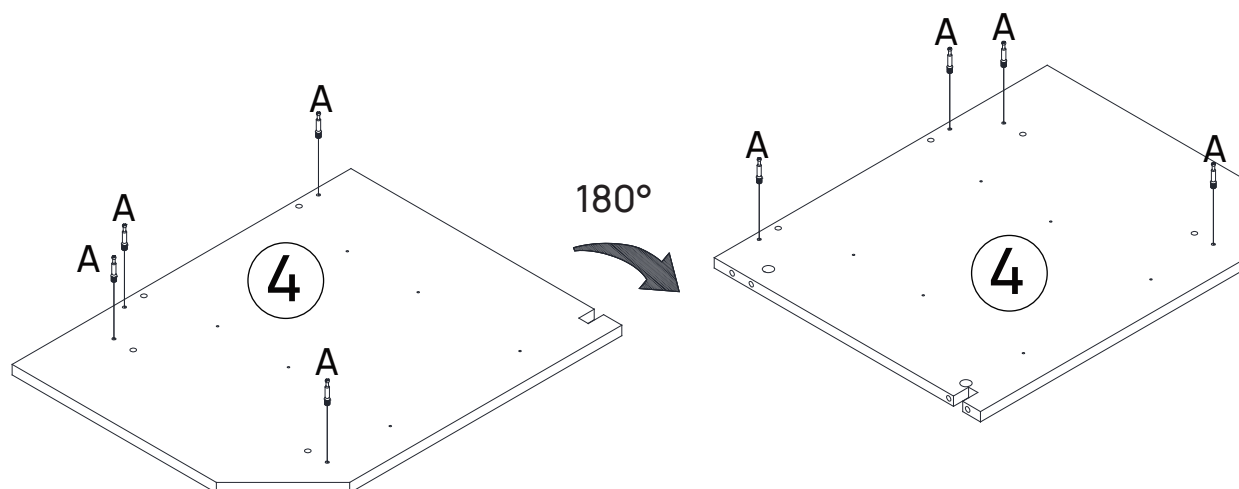

Step 4


Press the plastic plastic part in the indicated direotionon to seaparste drawer runner M1 and M2 beore assembling.

Attention
Ploase grip tho M1 part while sliding
the M2 prt

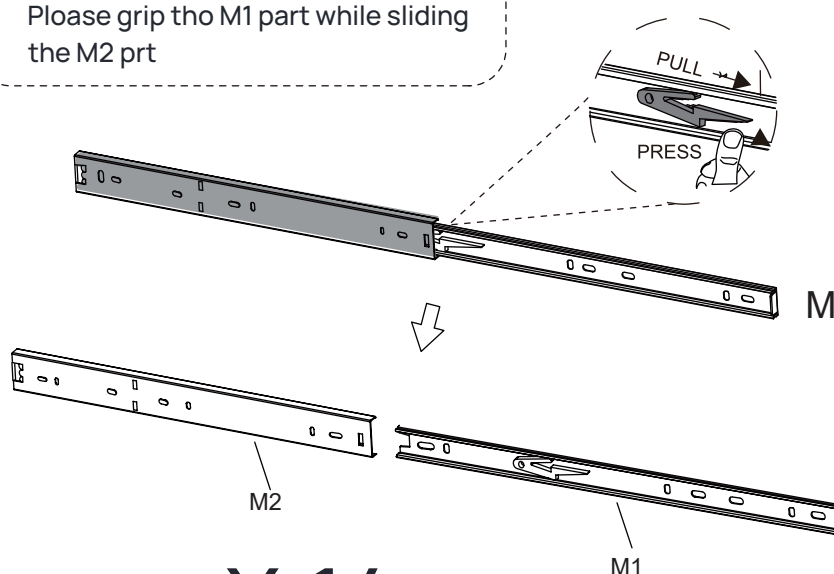


X 14




Step 5

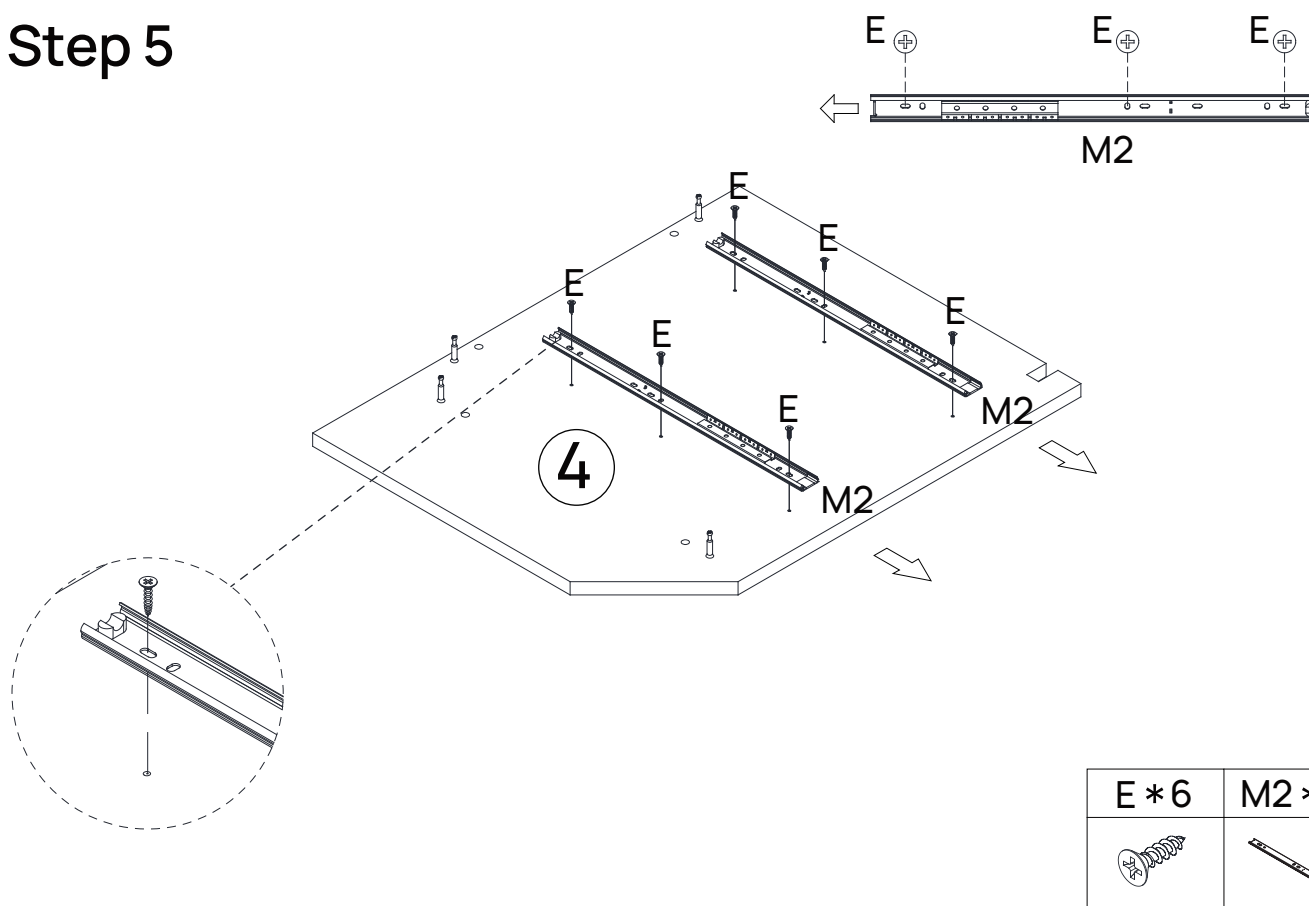




Step 6

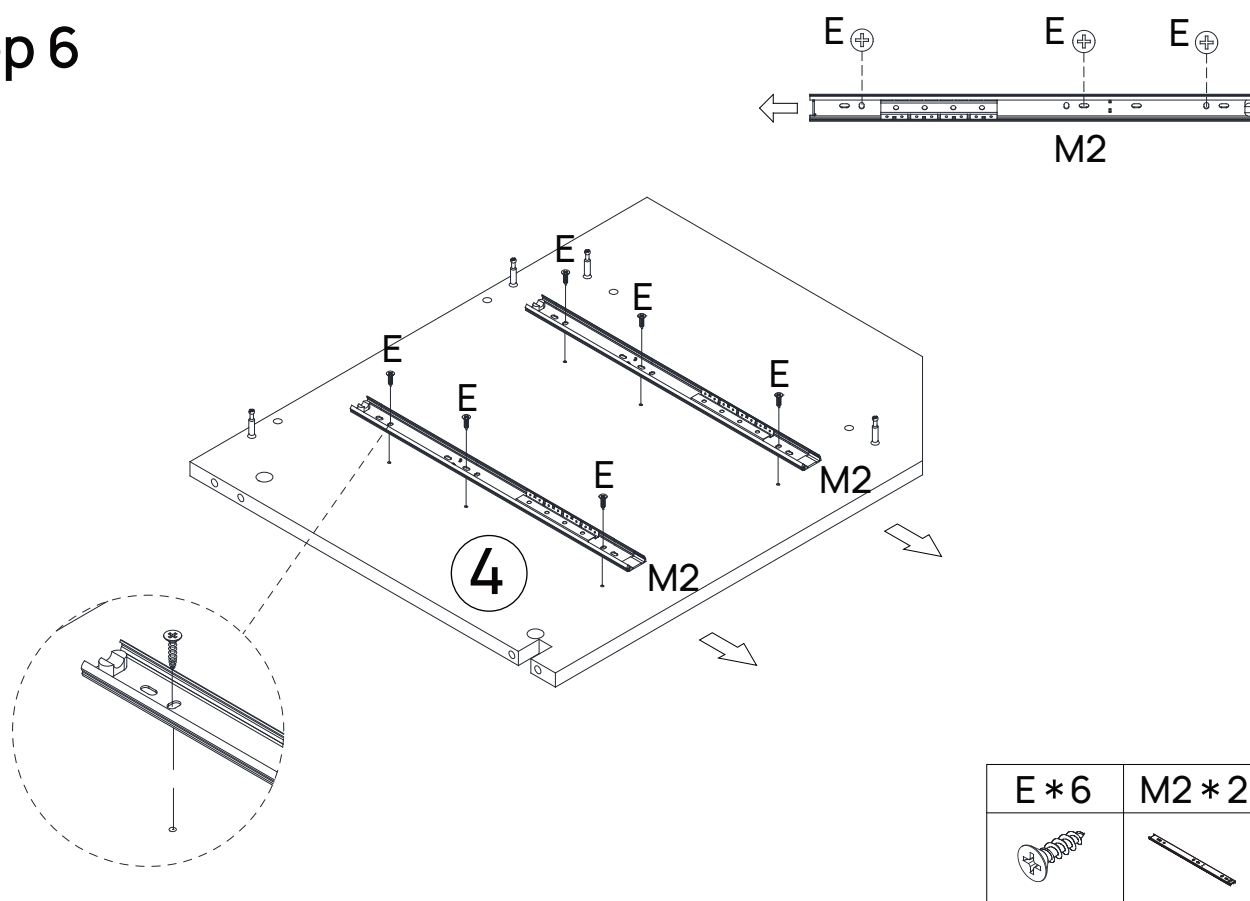


Step 7

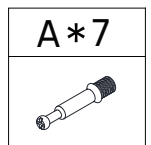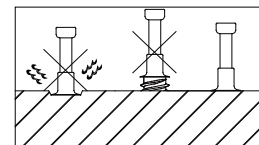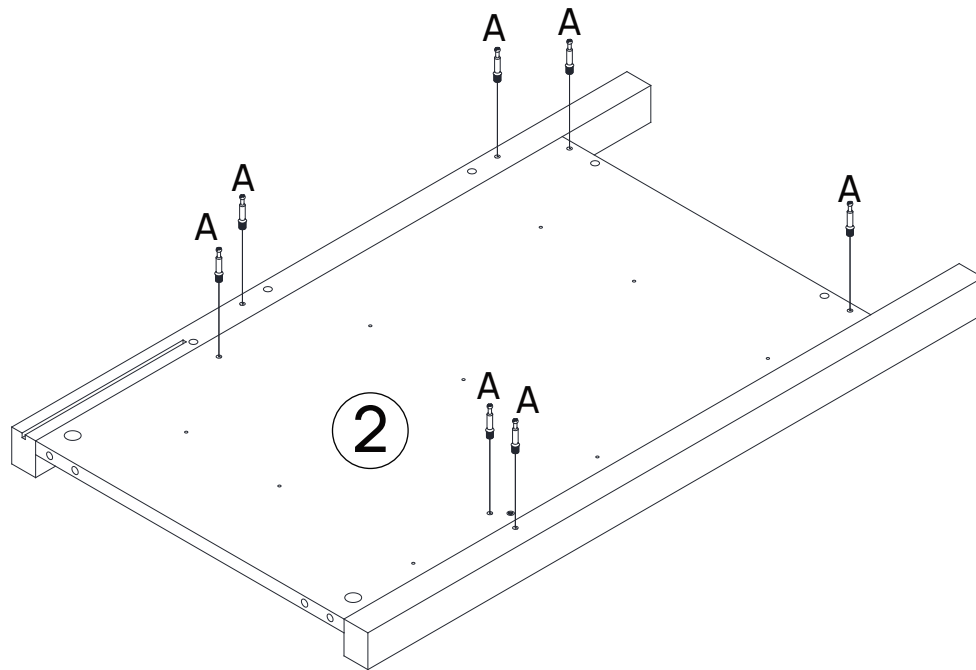


Step 8

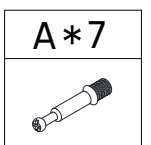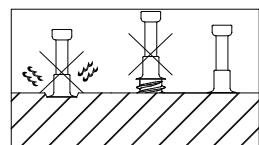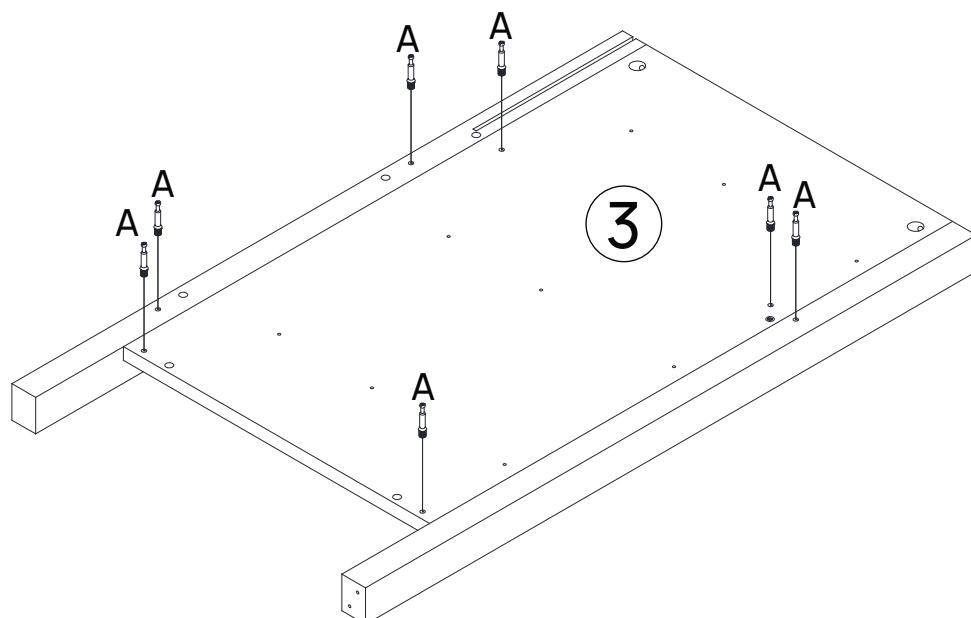


Step 9

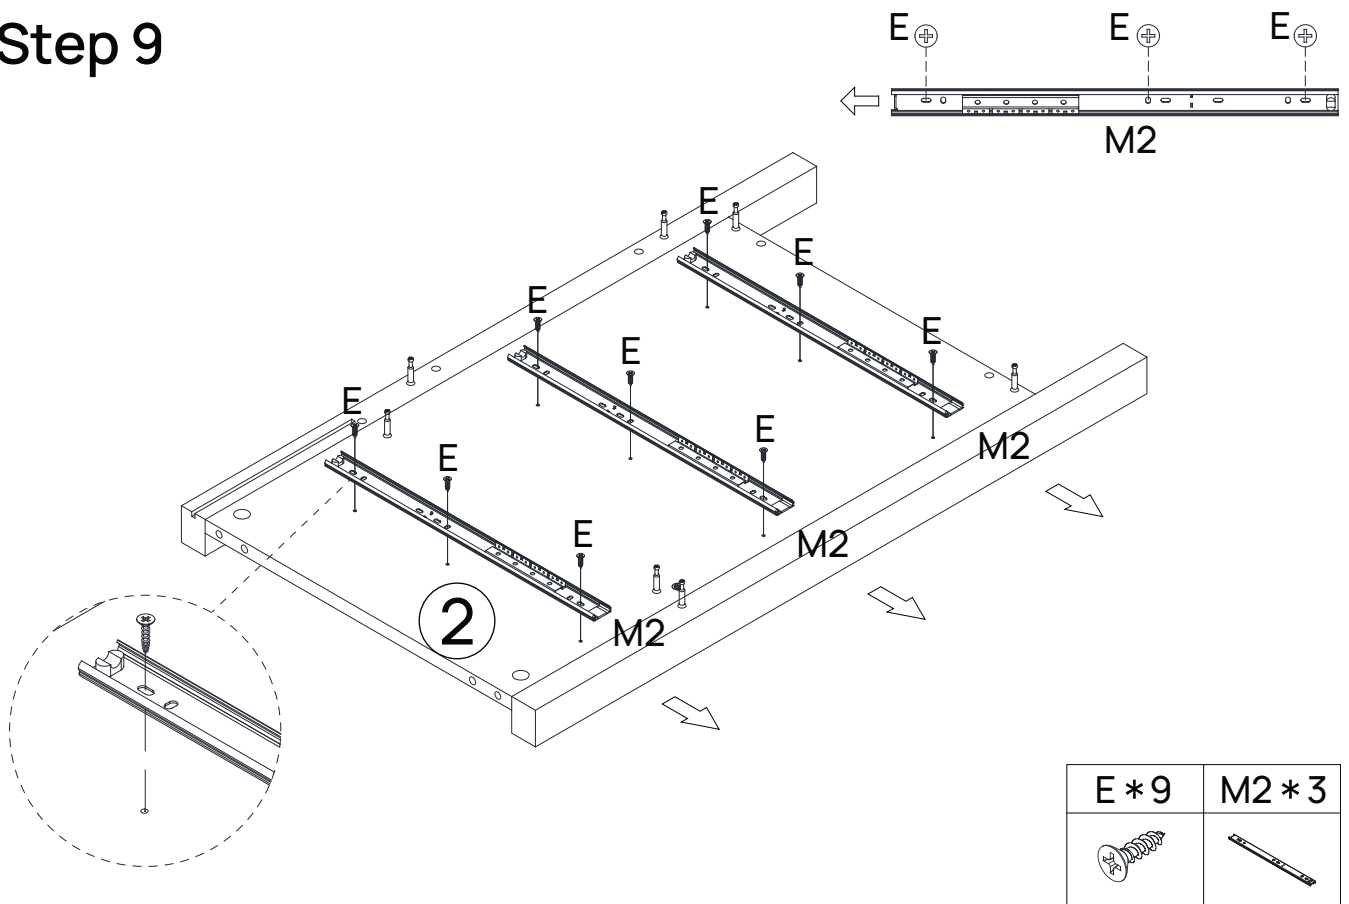


Step 10

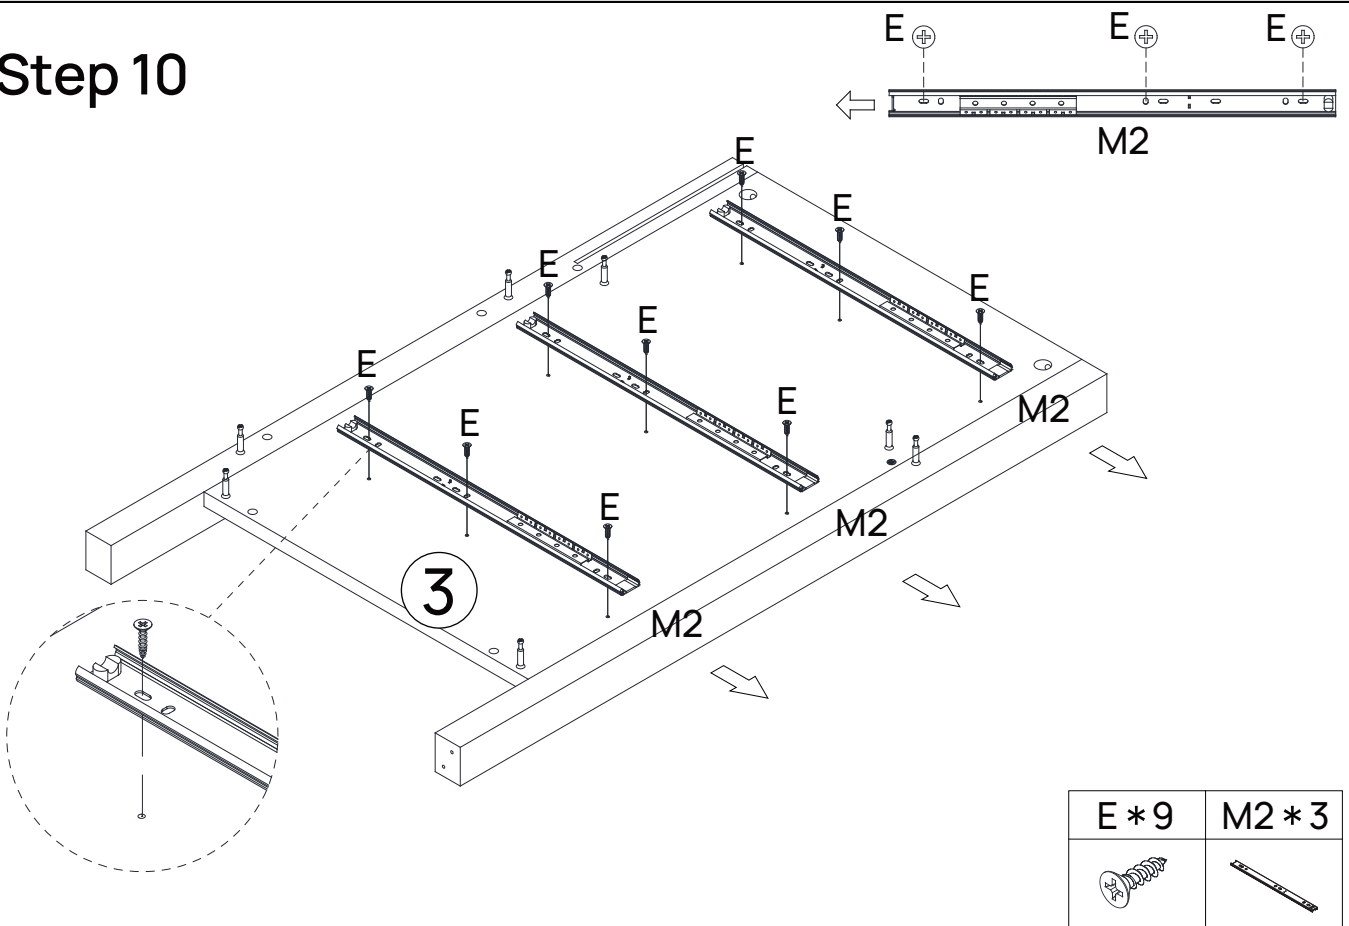

Step 11




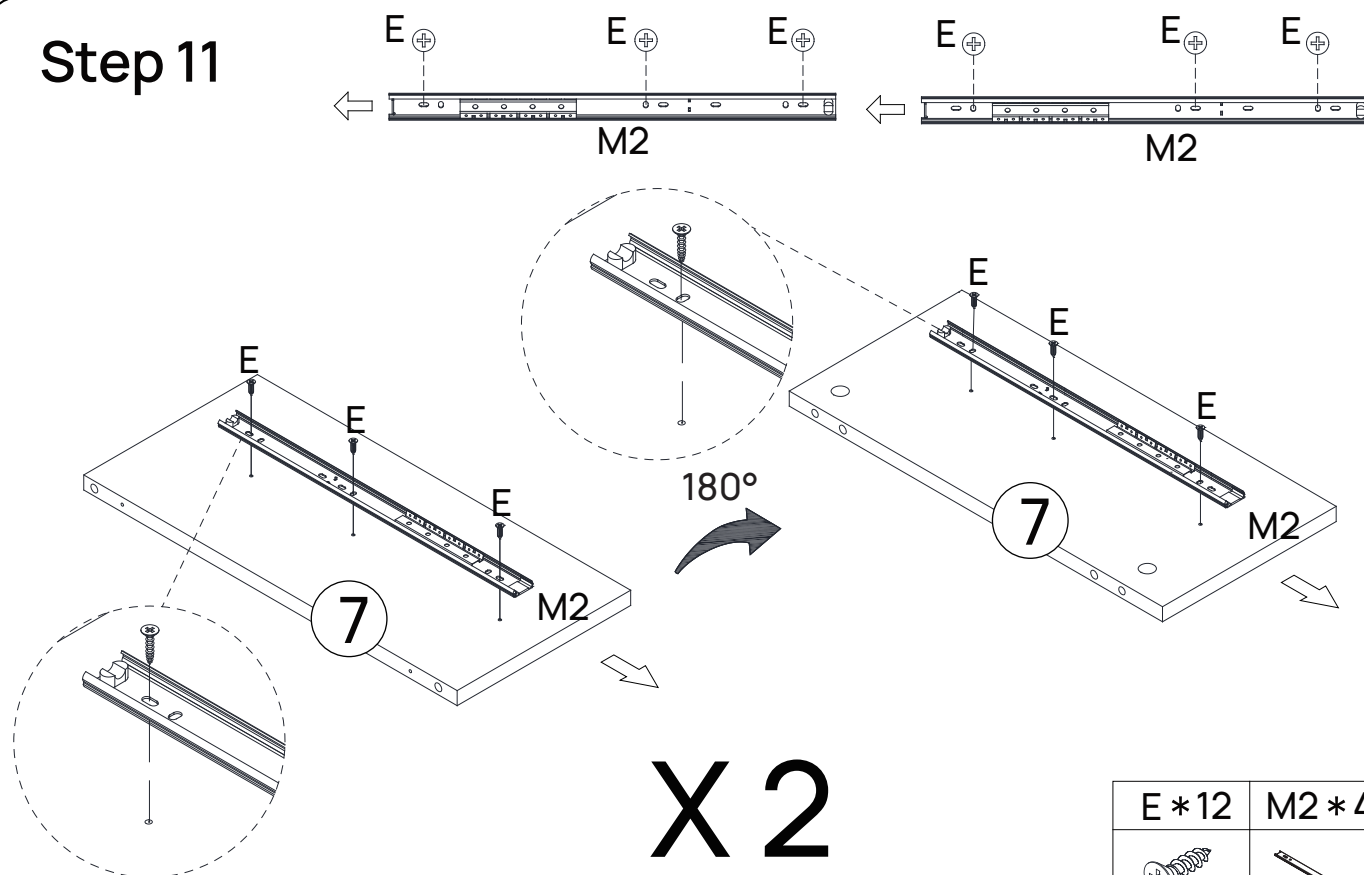


Step 12


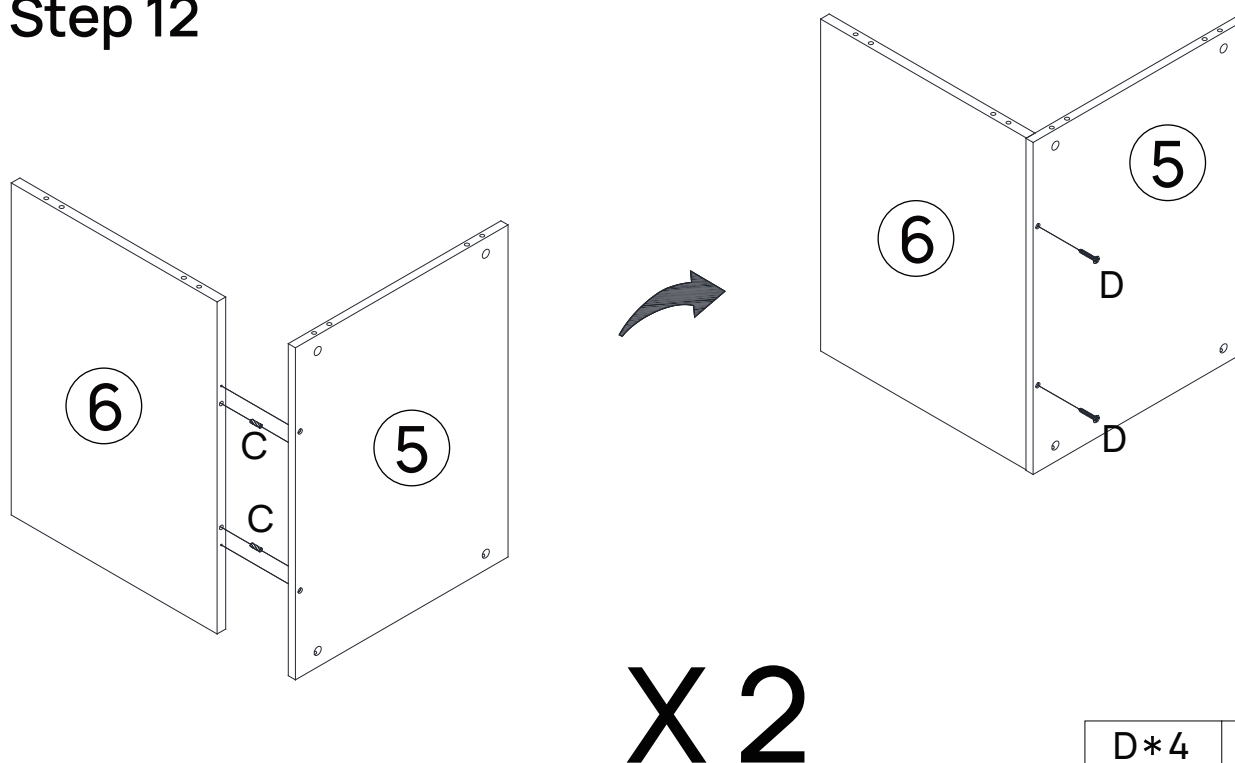


D * 4	C * 4
	



Step 13

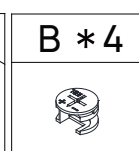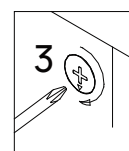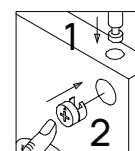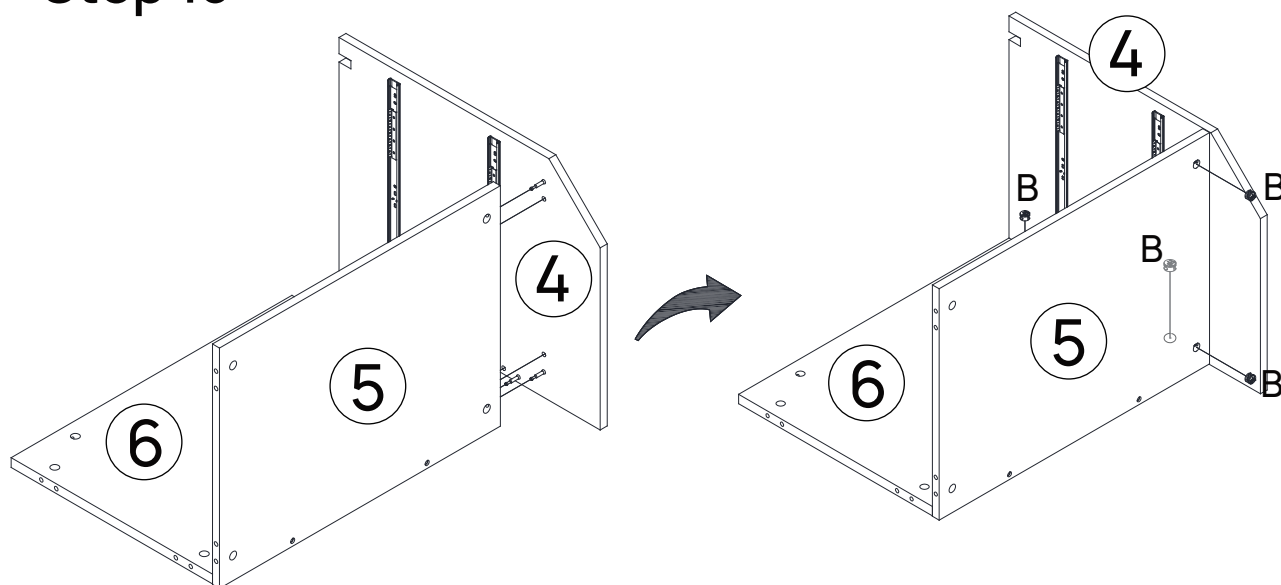



Step 14

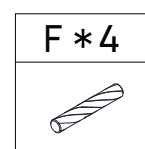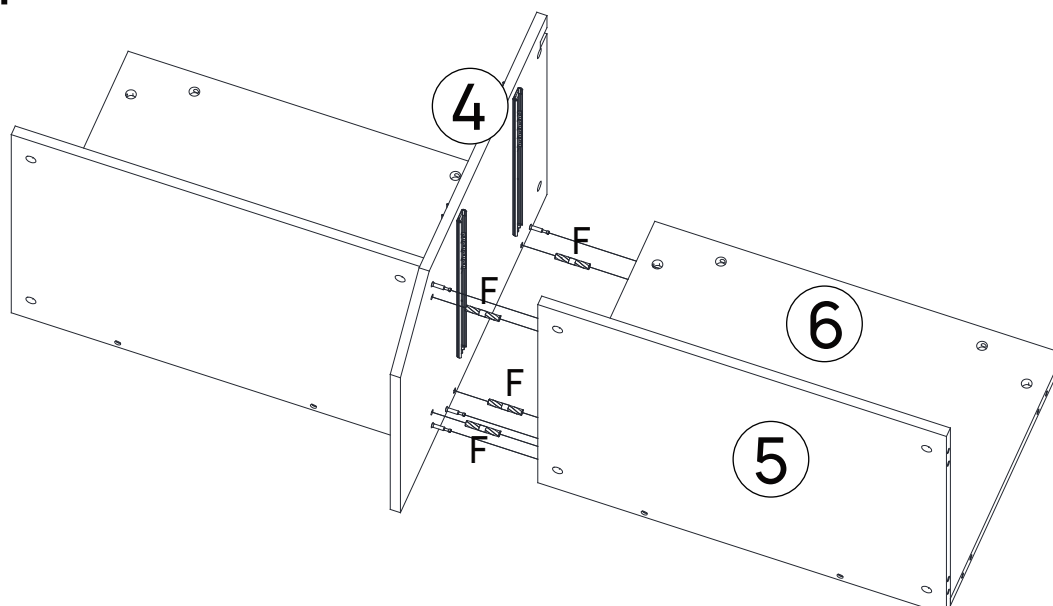


Step 15

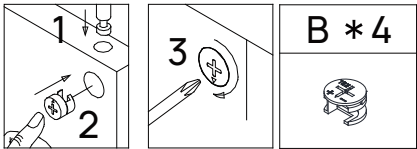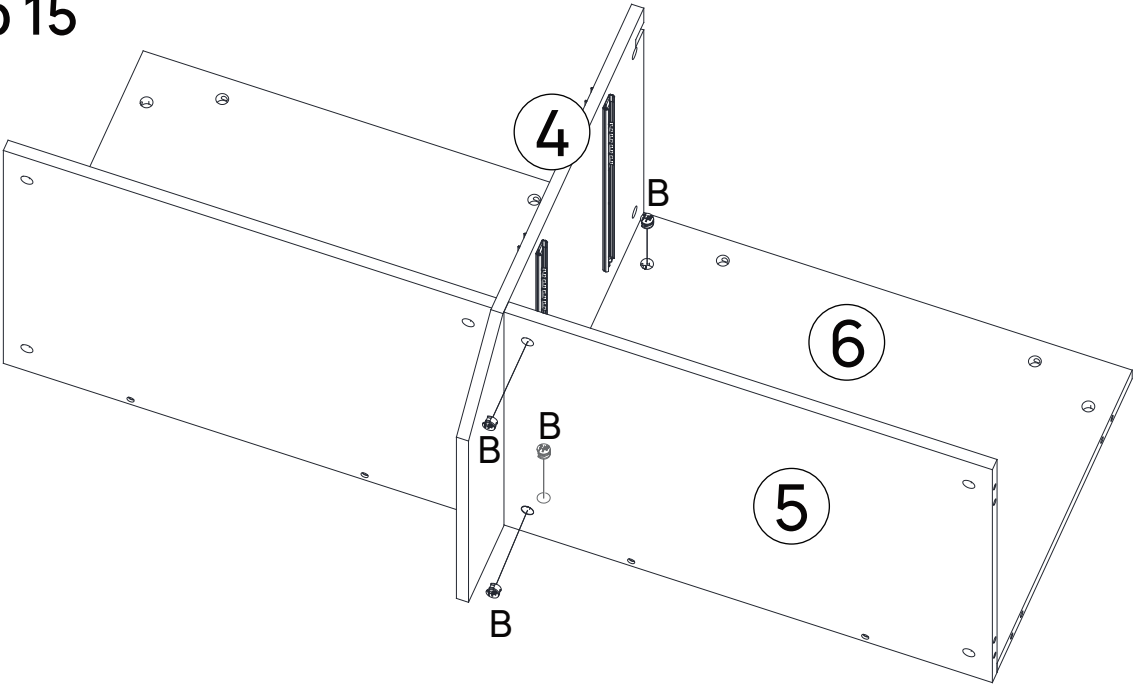

Step 16

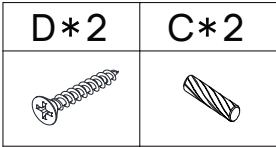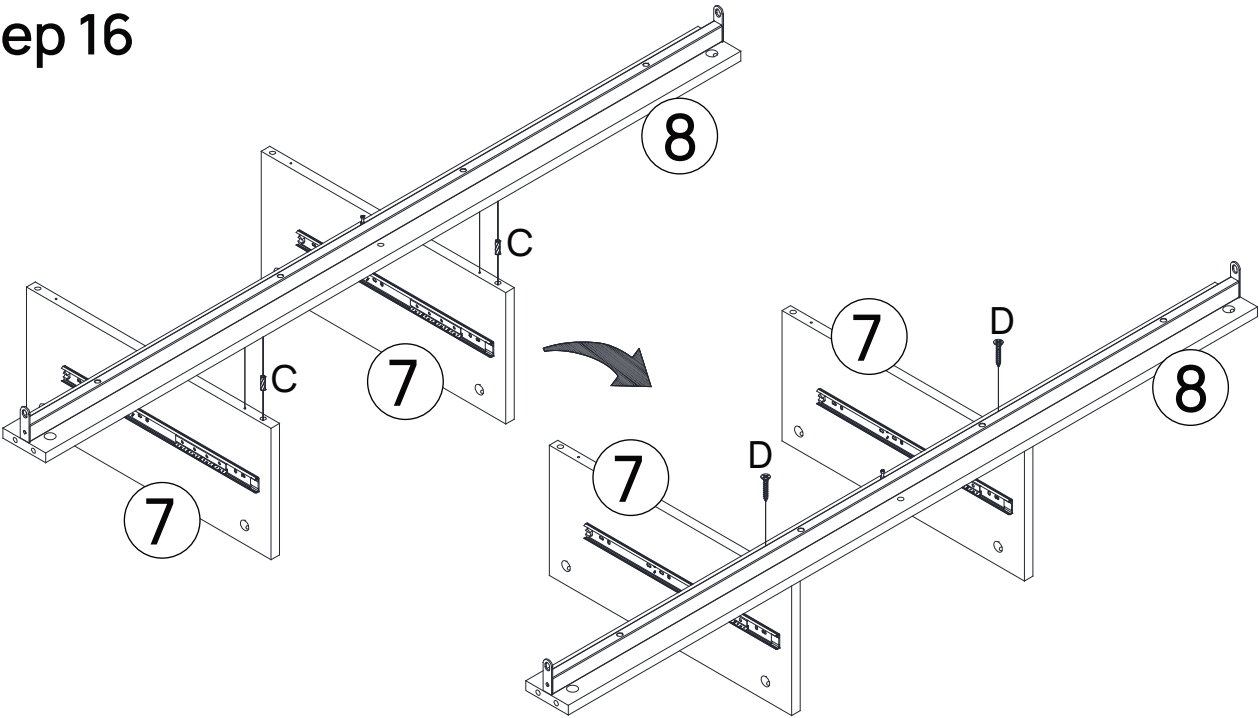


Step 17

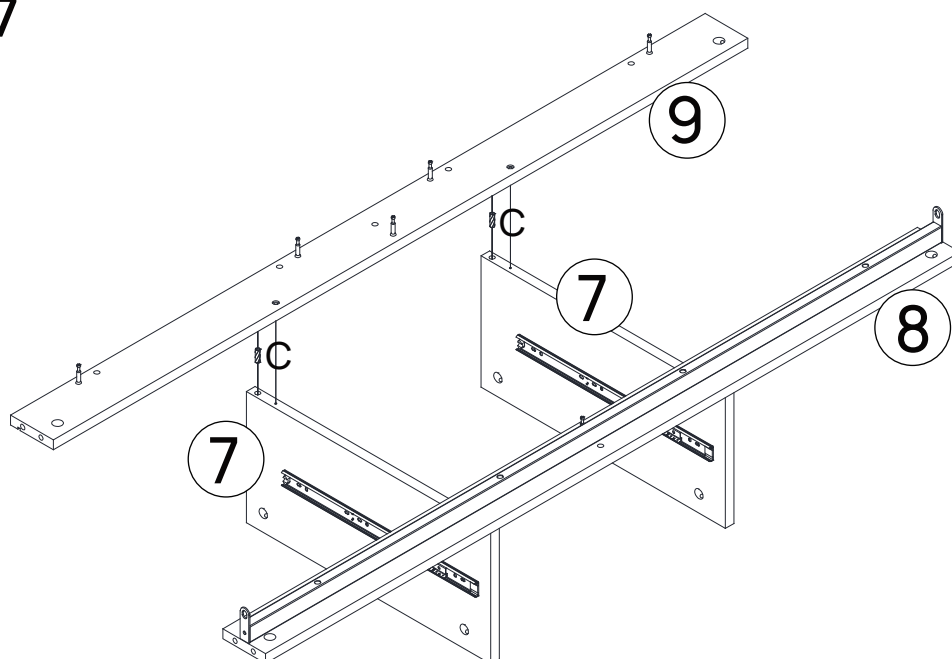

C*2





Step 18

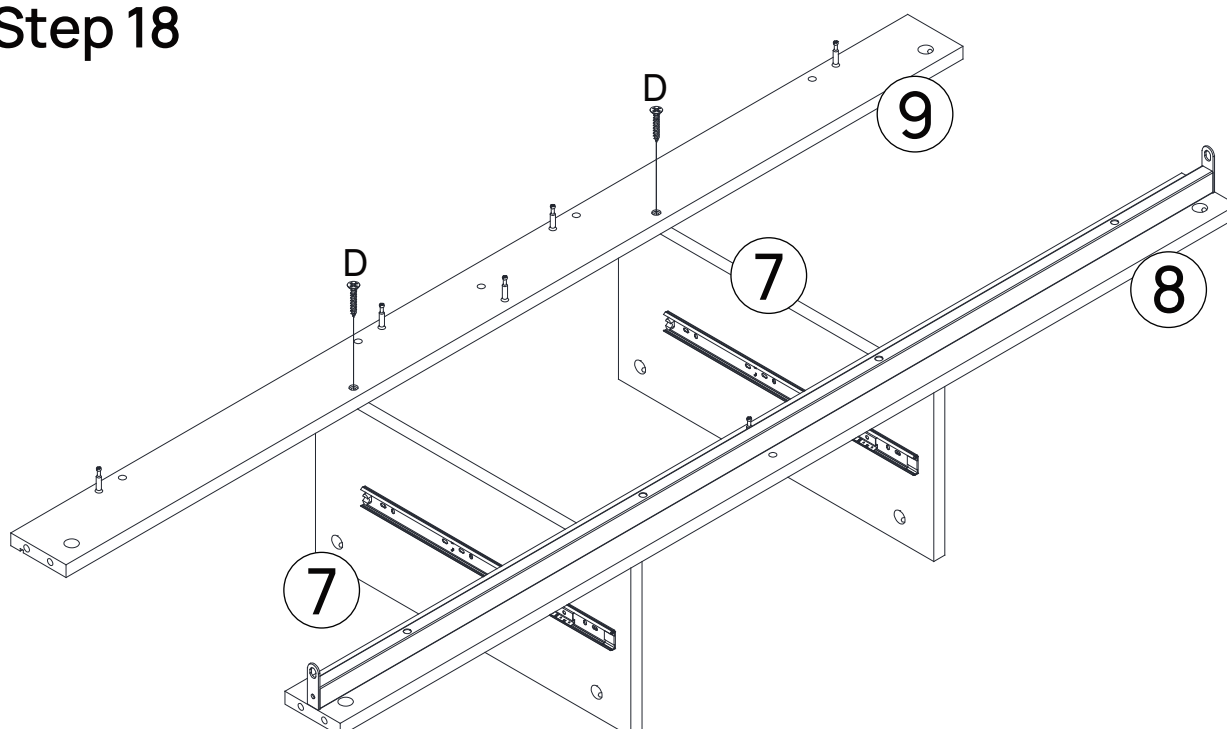



D*2





Step 19

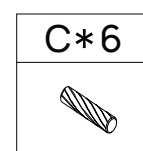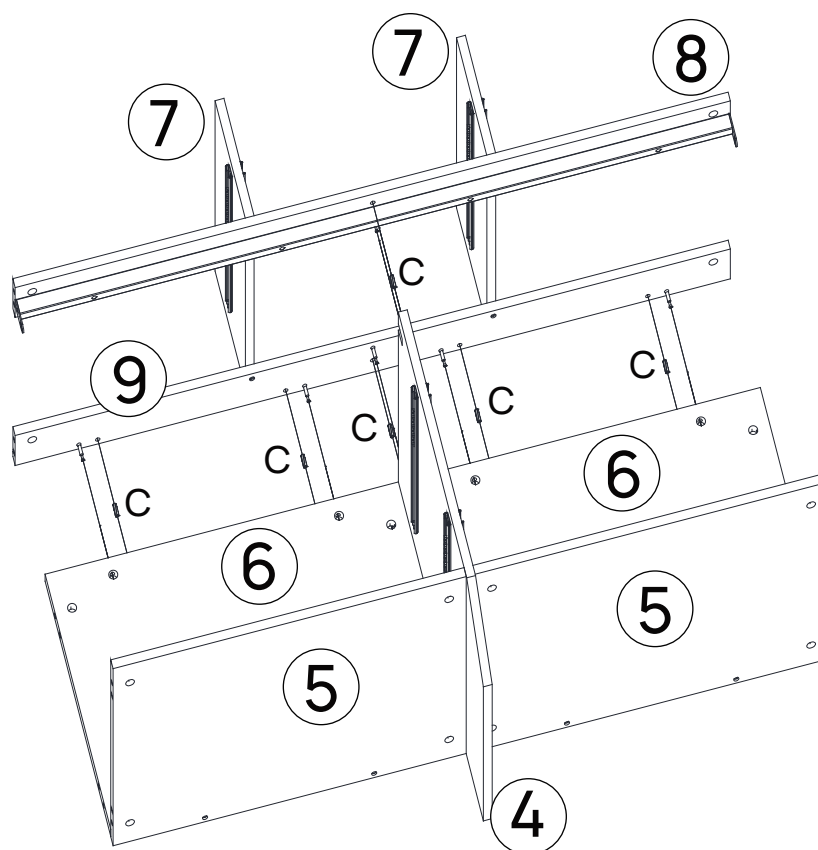

Step 20



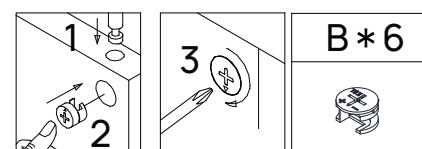
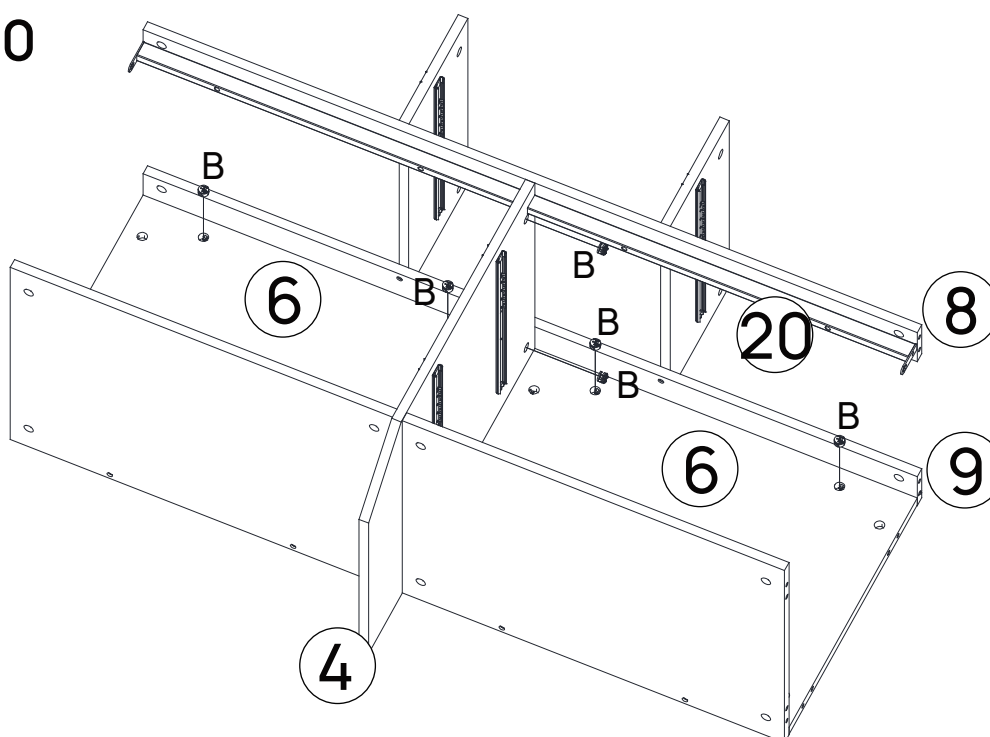


Step 21

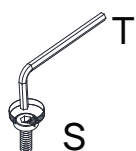
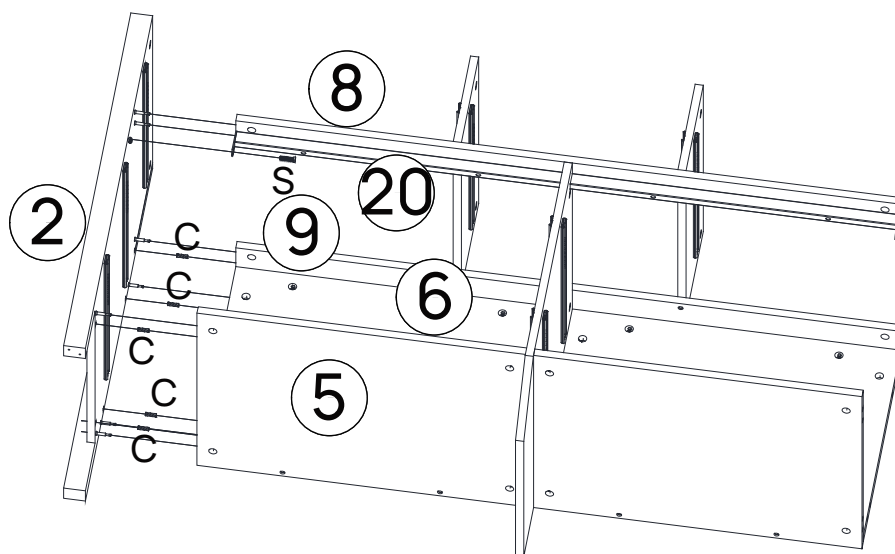


S*1	T*1	C*5

Step 22

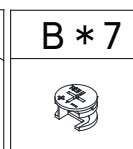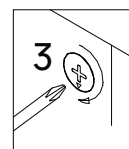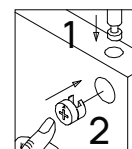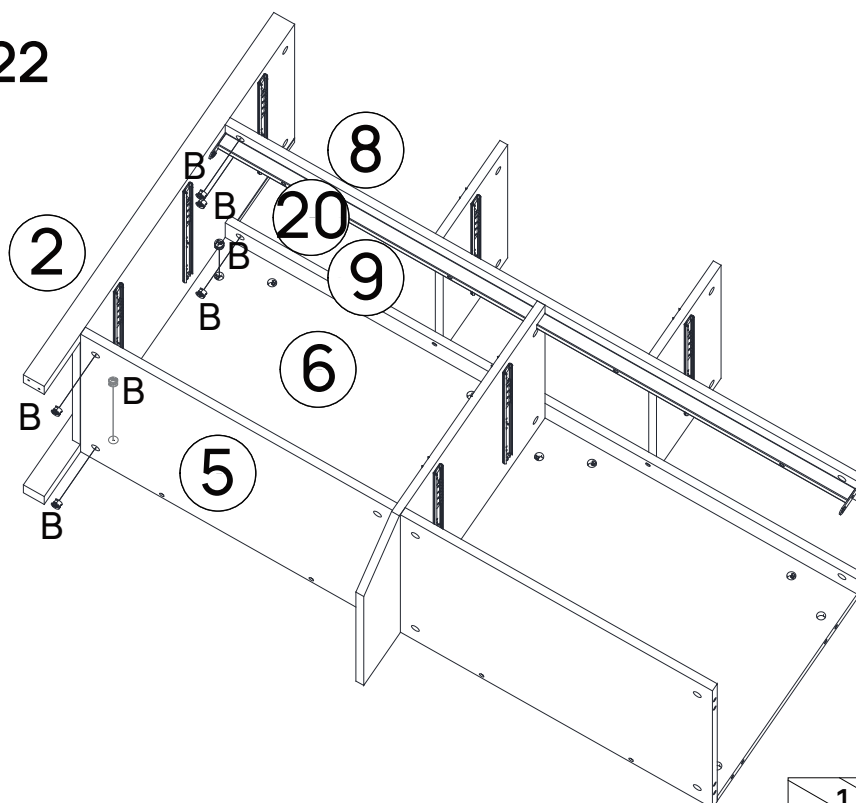


Step 23

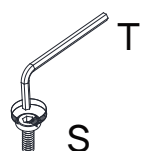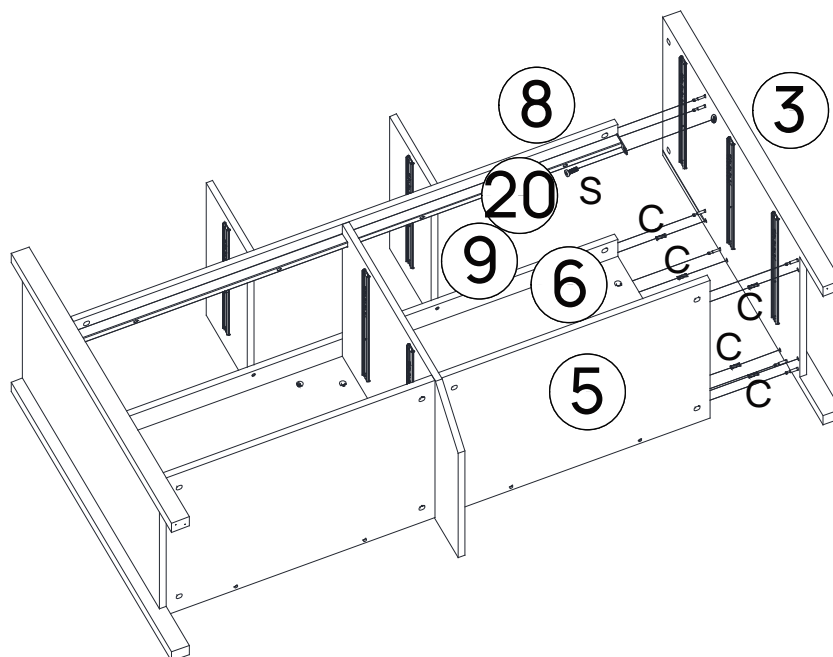


S*1	T*1	C*5

Step 24

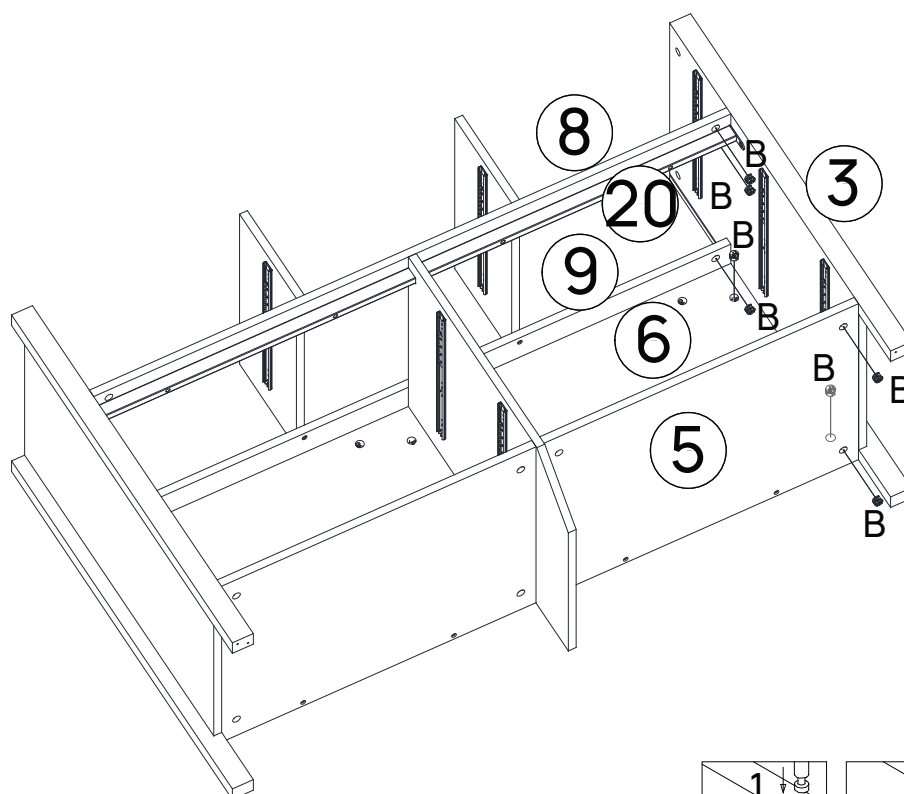


		B * 7

Step 25


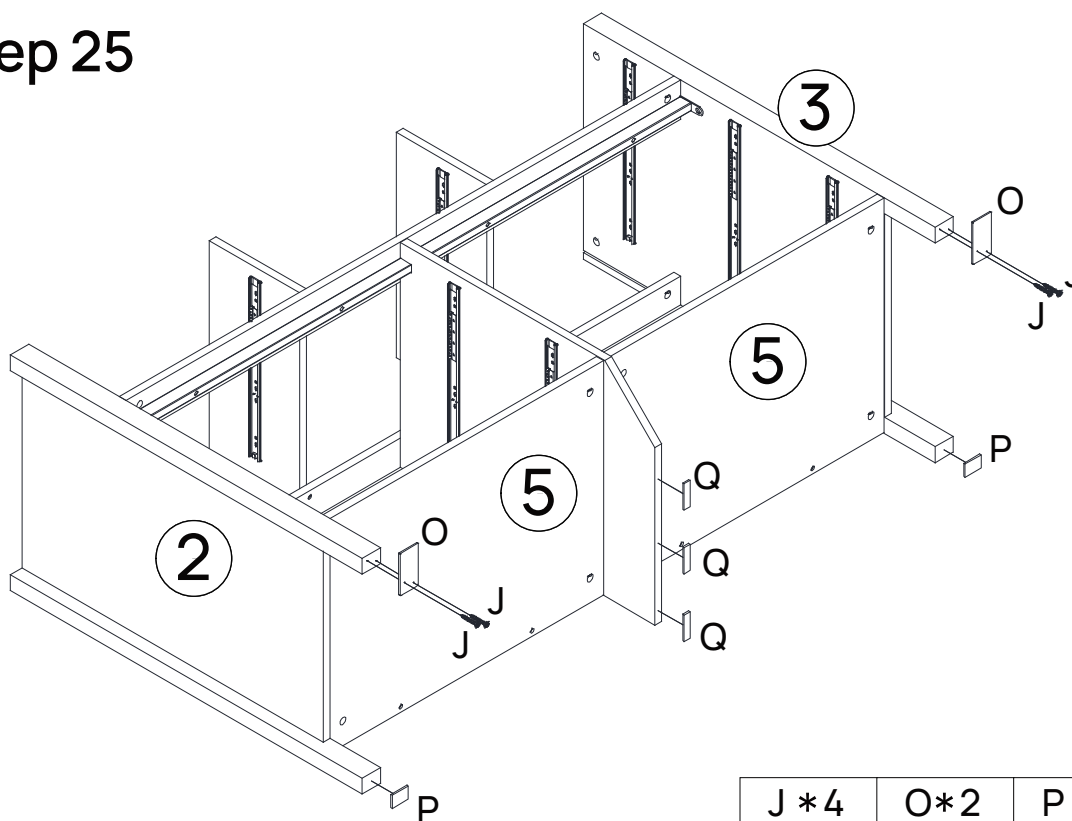


J * 4	O * 2	P * 2	Q * 3
			




Step 26

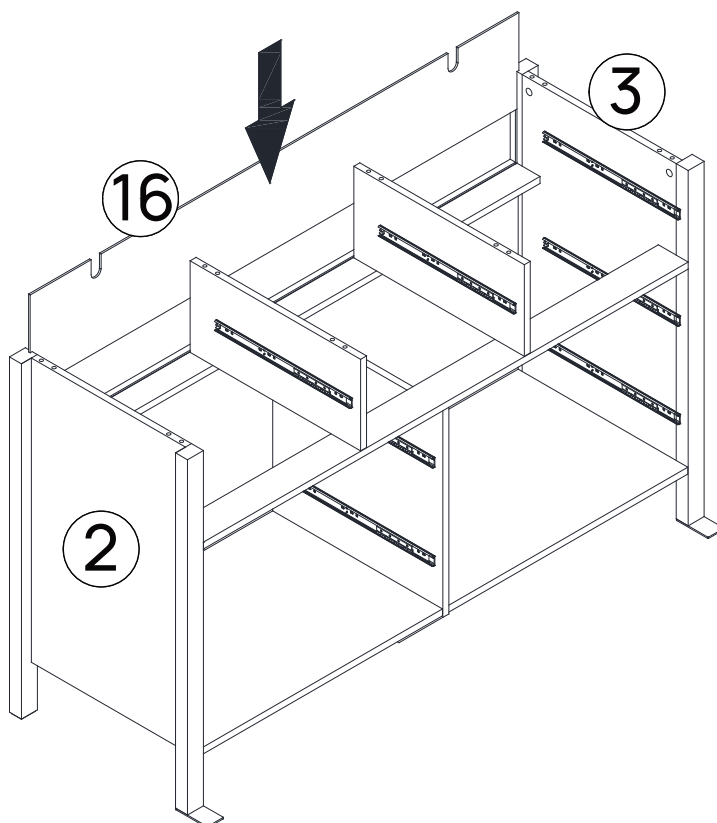



Step 27

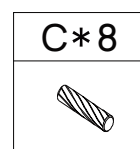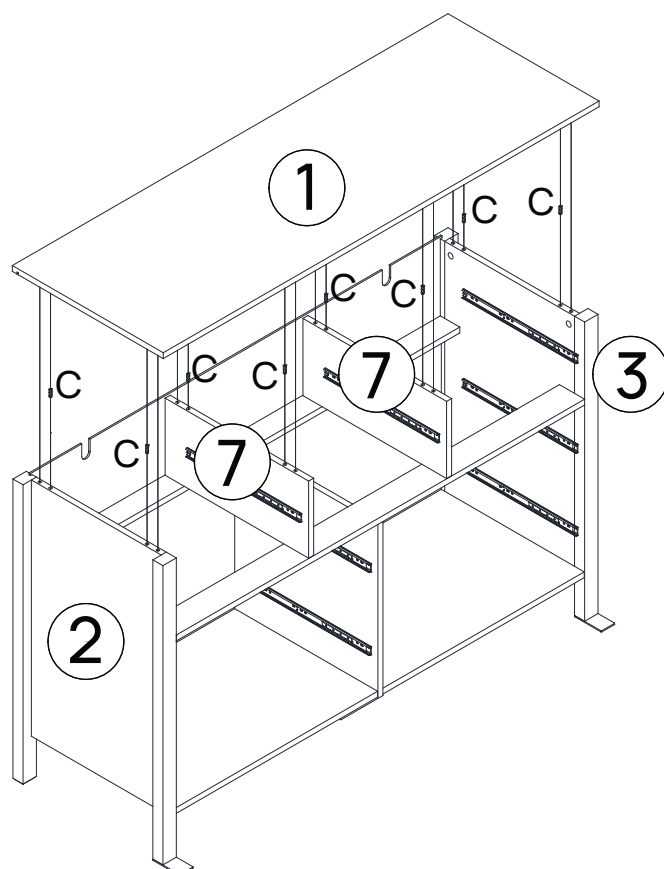

Step 28

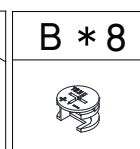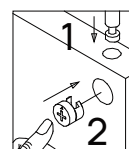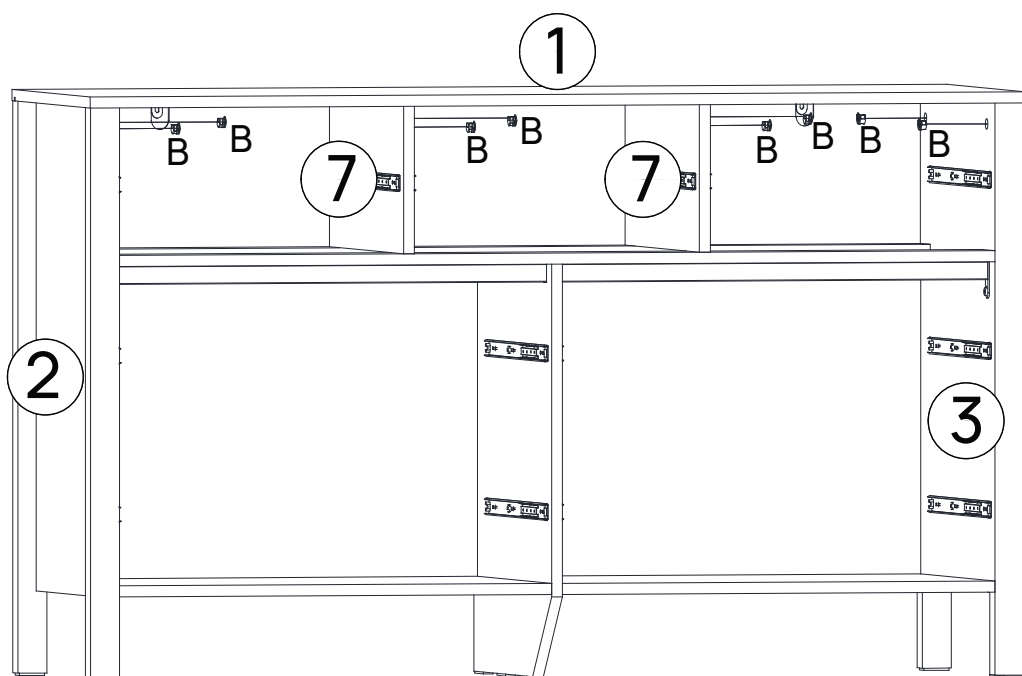






Step 29

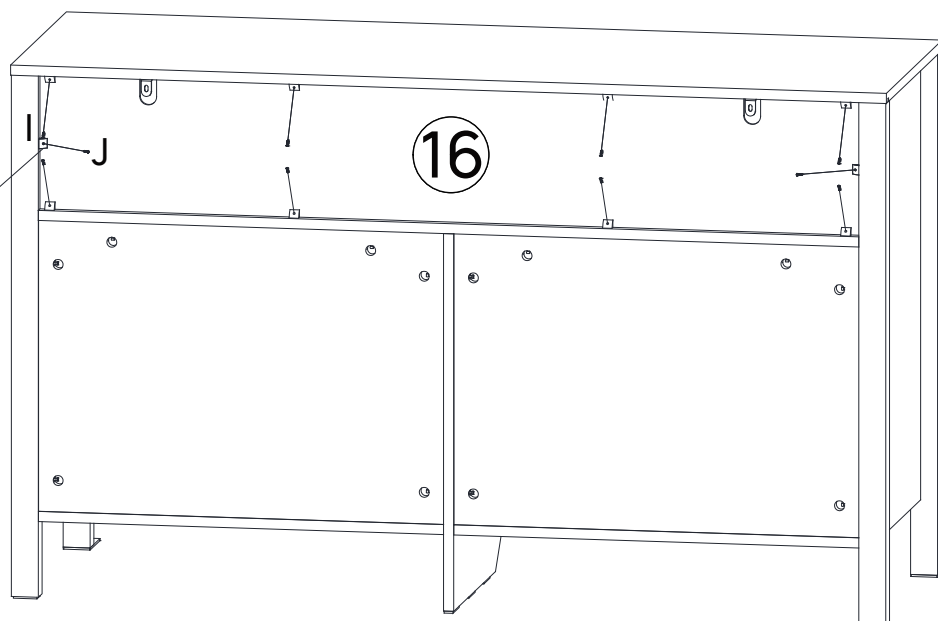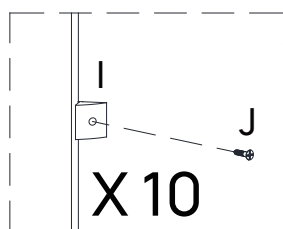

Must Be Installed

J * 10	I * 10
	


Step 30

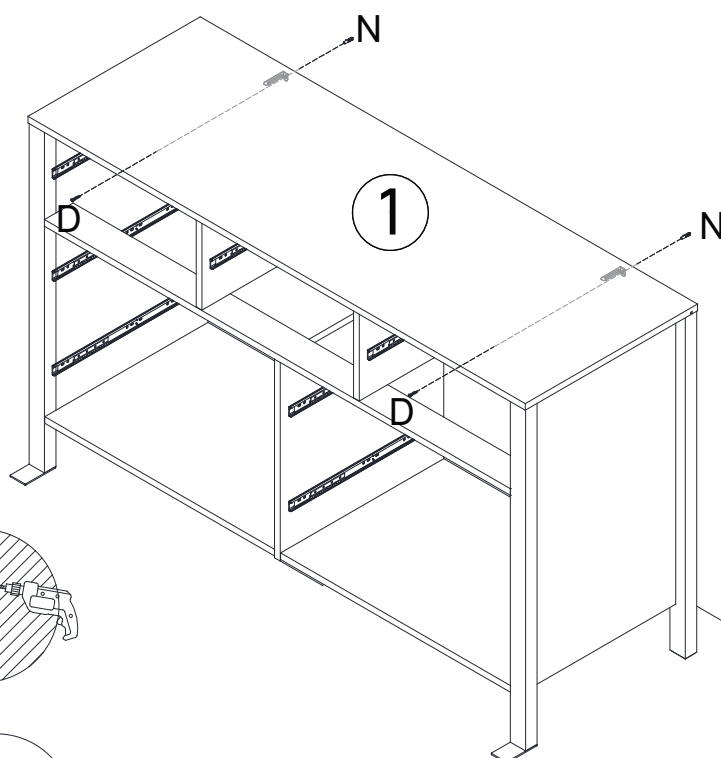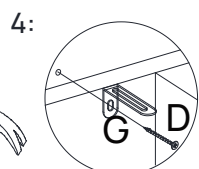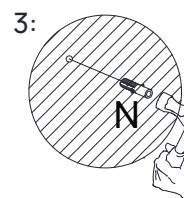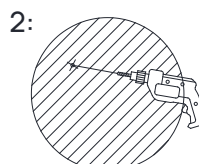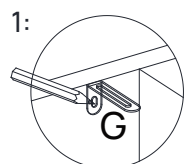


WALL

D * 2	N * 2
	


Step 31

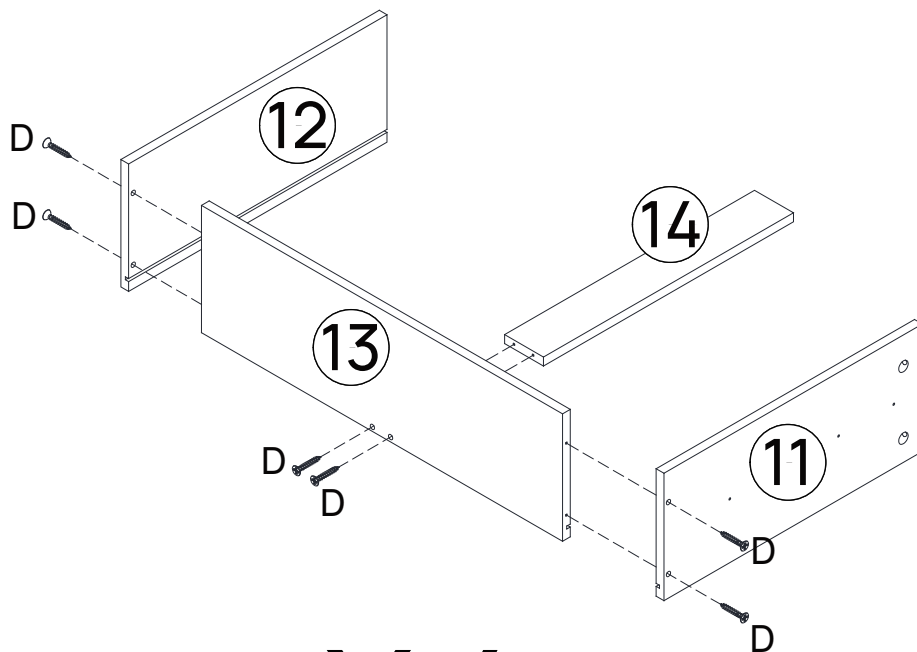

X 4



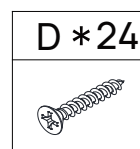


Step 32

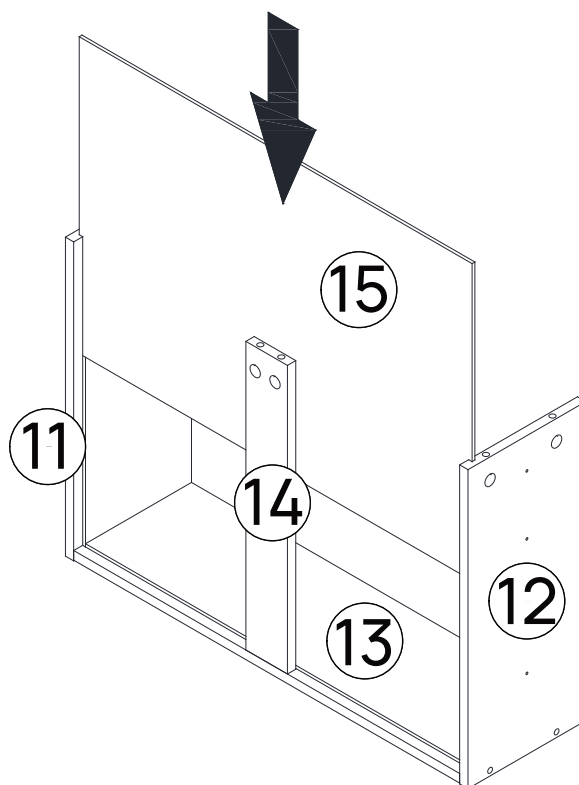




X 4

Step 33

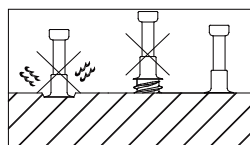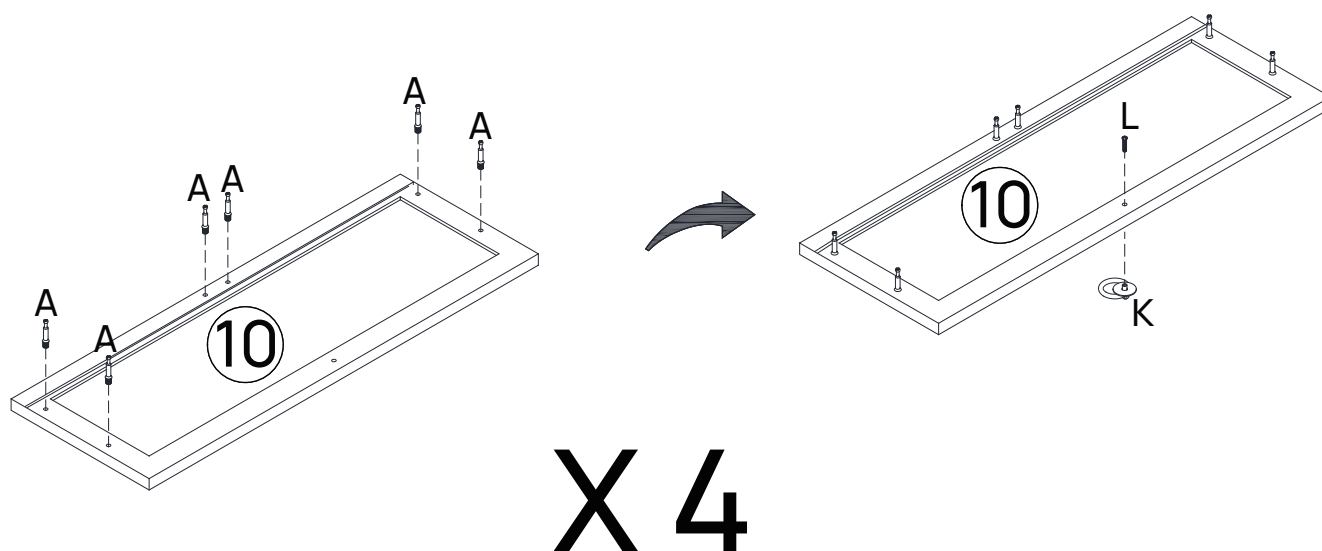


A * 24	K * 4	L * 4
		

Step 34

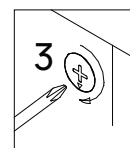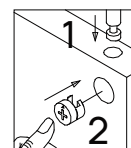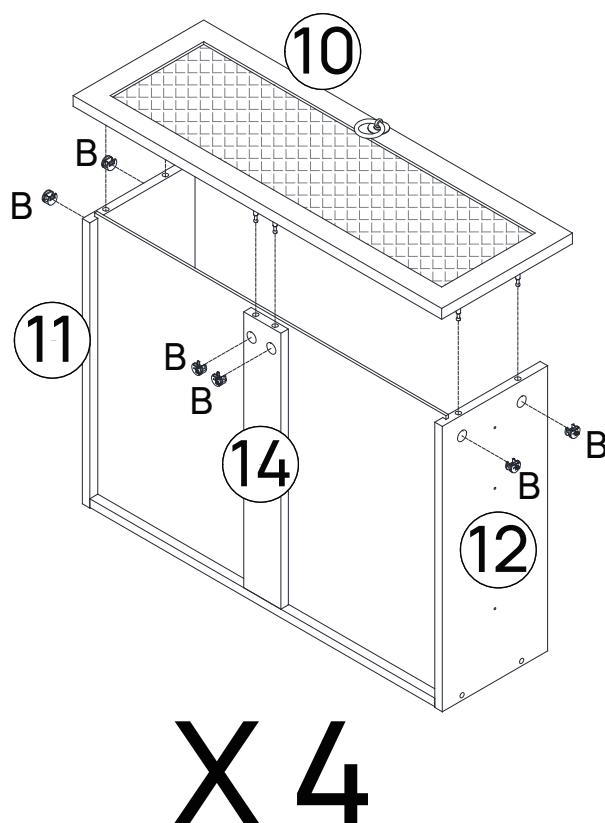


B * 24



Step 35

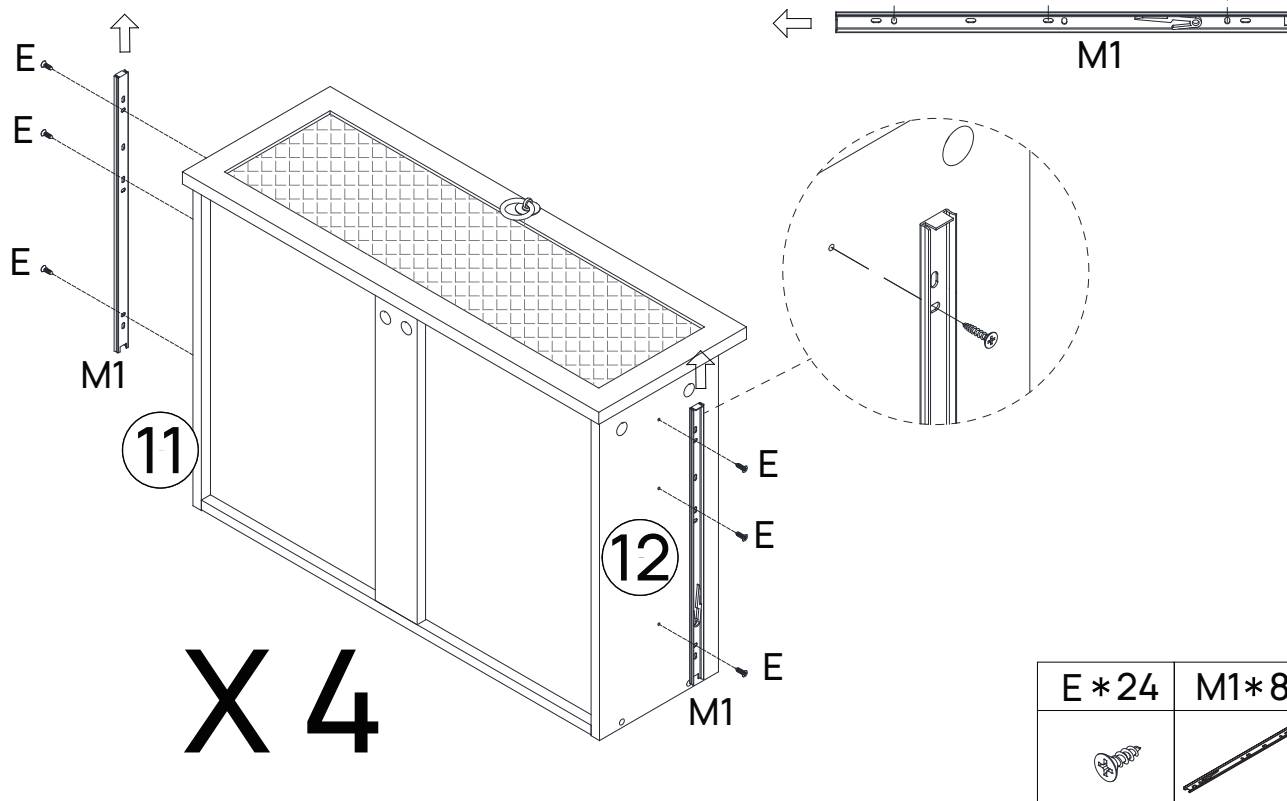




Step 36

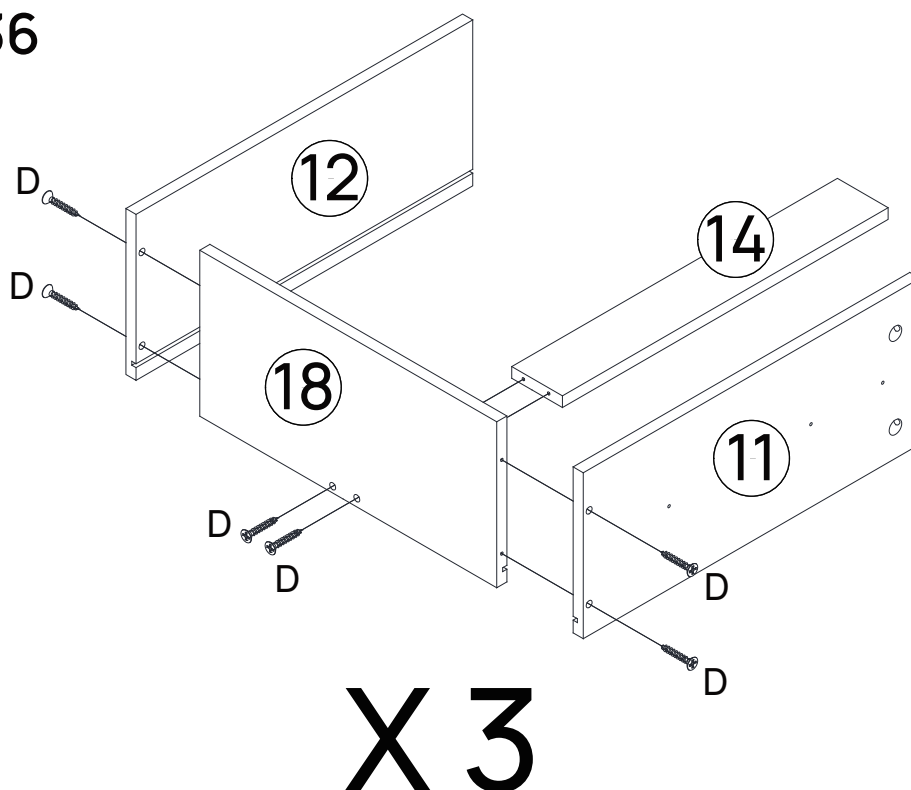

Step 37

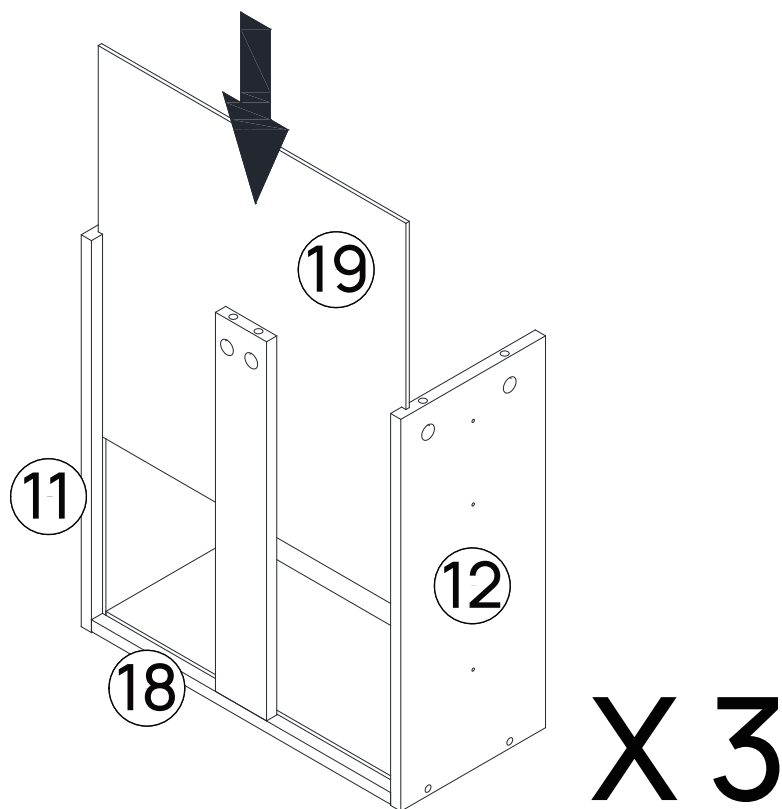


Step 38

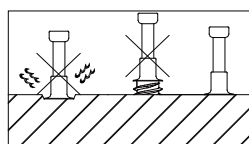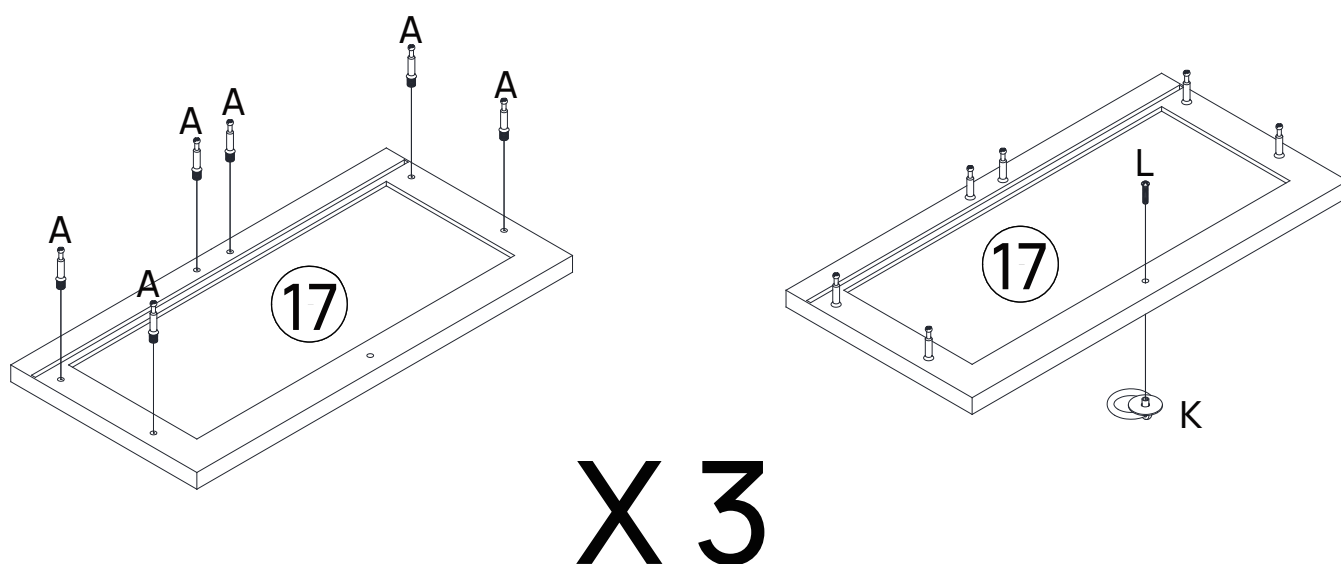


A*18	K*3	L*3
		

Step 39


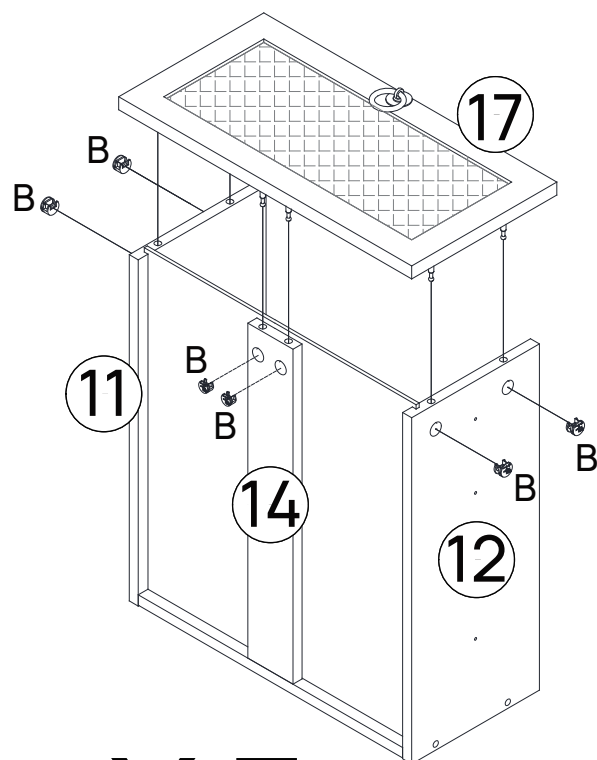


X 3

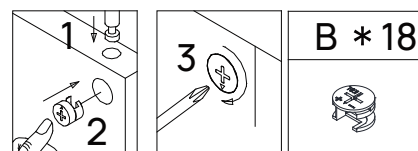


Step 40

X 3

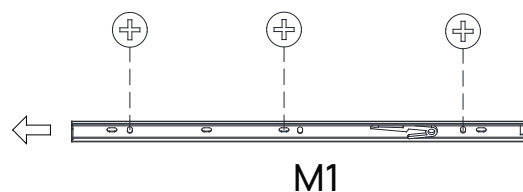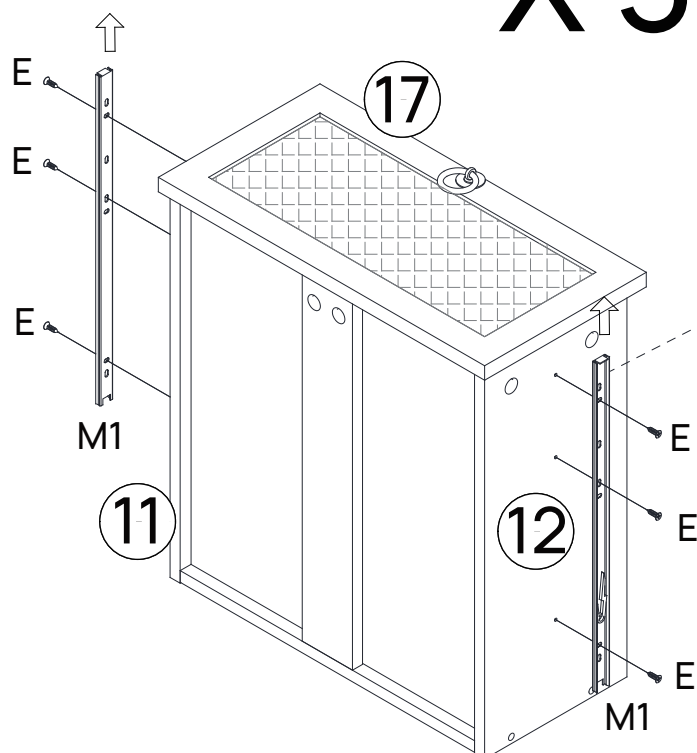

E * 18	M1*6

Step 41

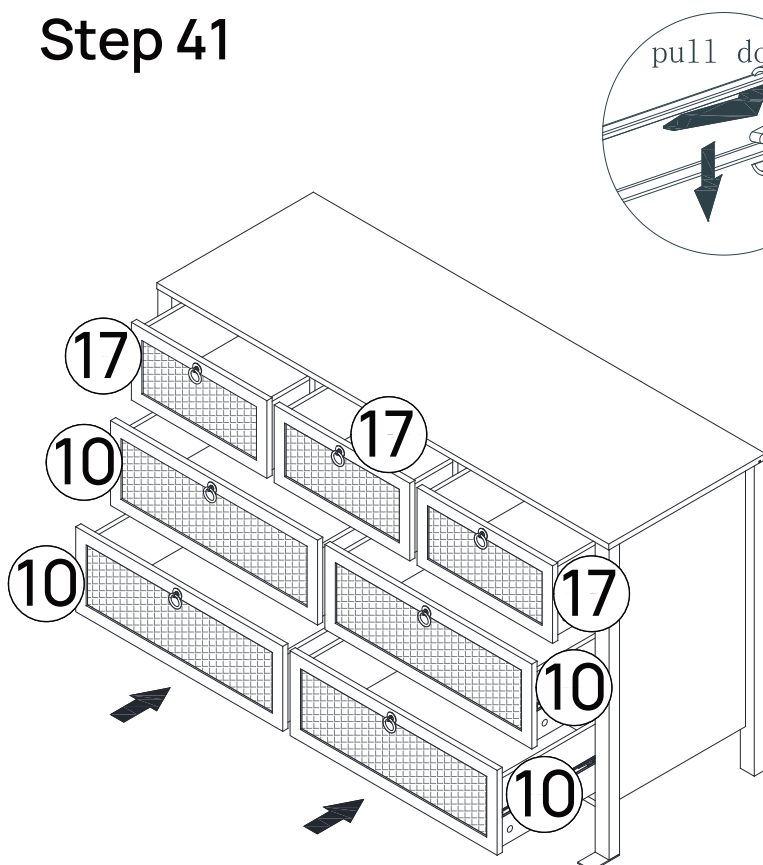

Preparation: Slide the inner rail (movable track) to the frontmost position

Precise installation: Position the drawer horizontally. Align both slide rails precisely, then push inward with steady, even pressure until you hear a "click," indicating the lock is engaged. Installation complete.

WARNING: NEVER FORCE the drawer! Incorrect start position or forcing the drawer will cause ball bearings to fall out and damage the slide.

Note: If the drawer does not slide smoothly, lift the release lever on one side and press it downward on the other side at the same time. Pull out the slider bracket from the slider arm, then re-assemble the drawer until they go in smoothly.

Step 42

