


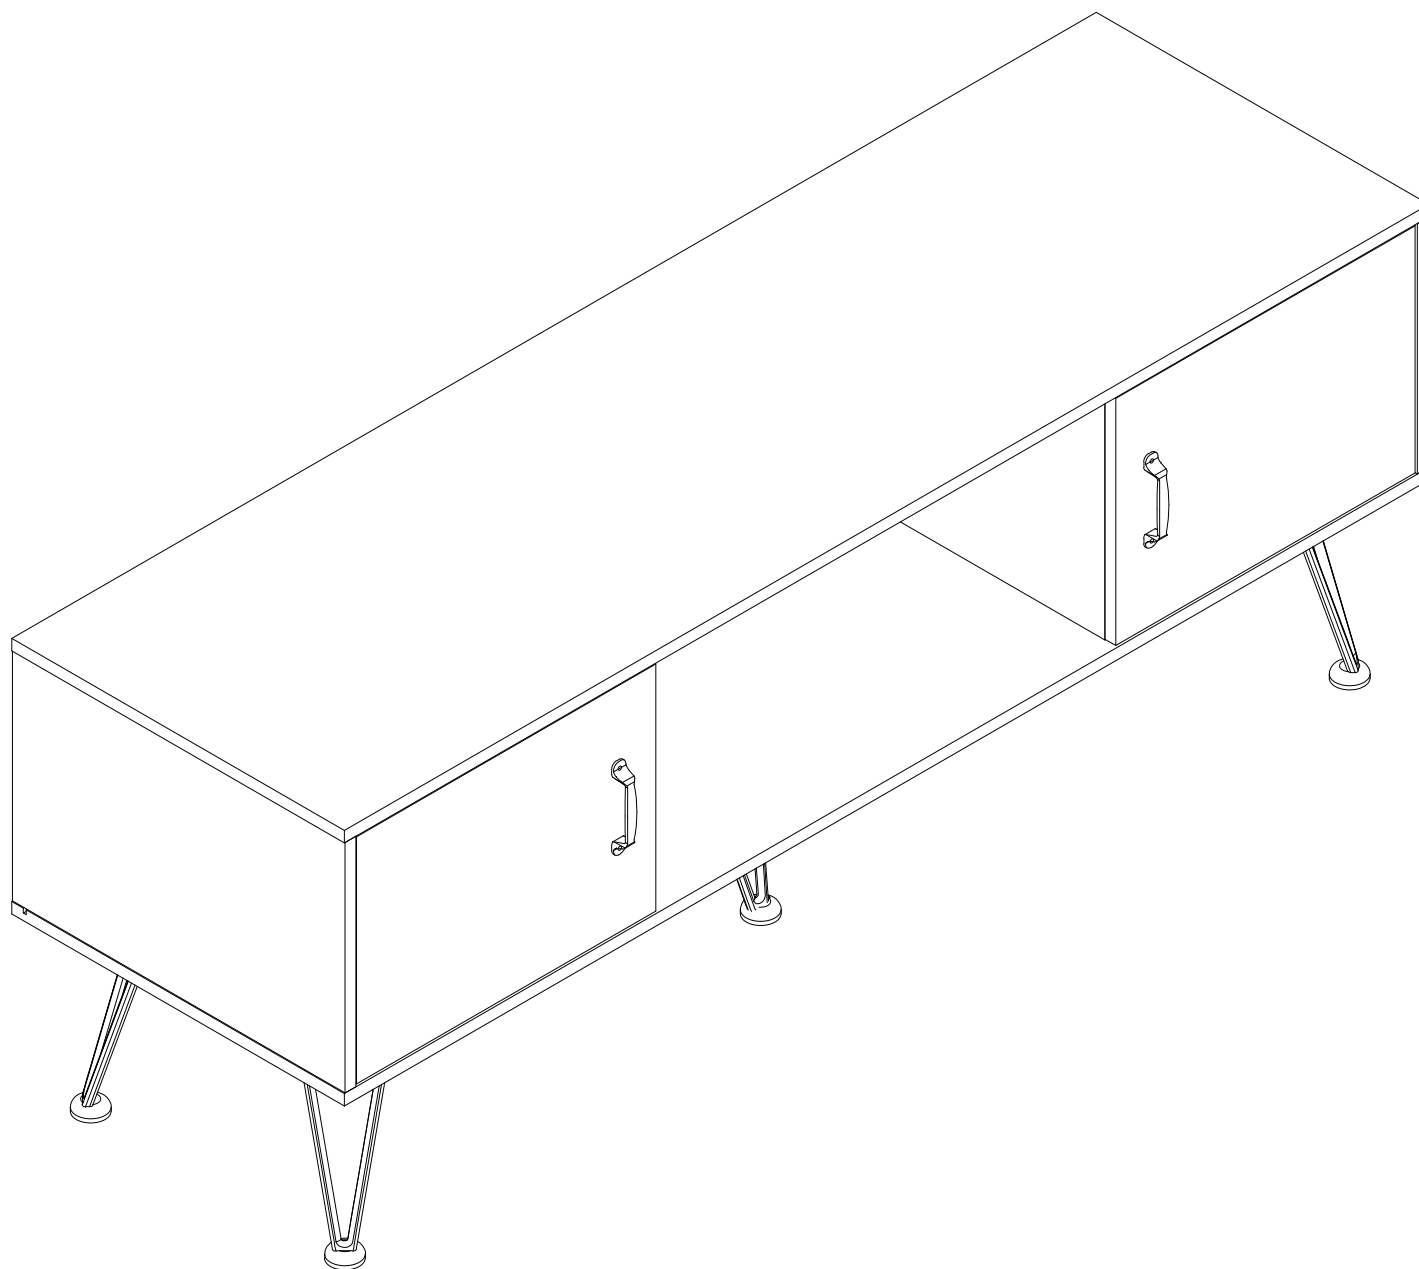
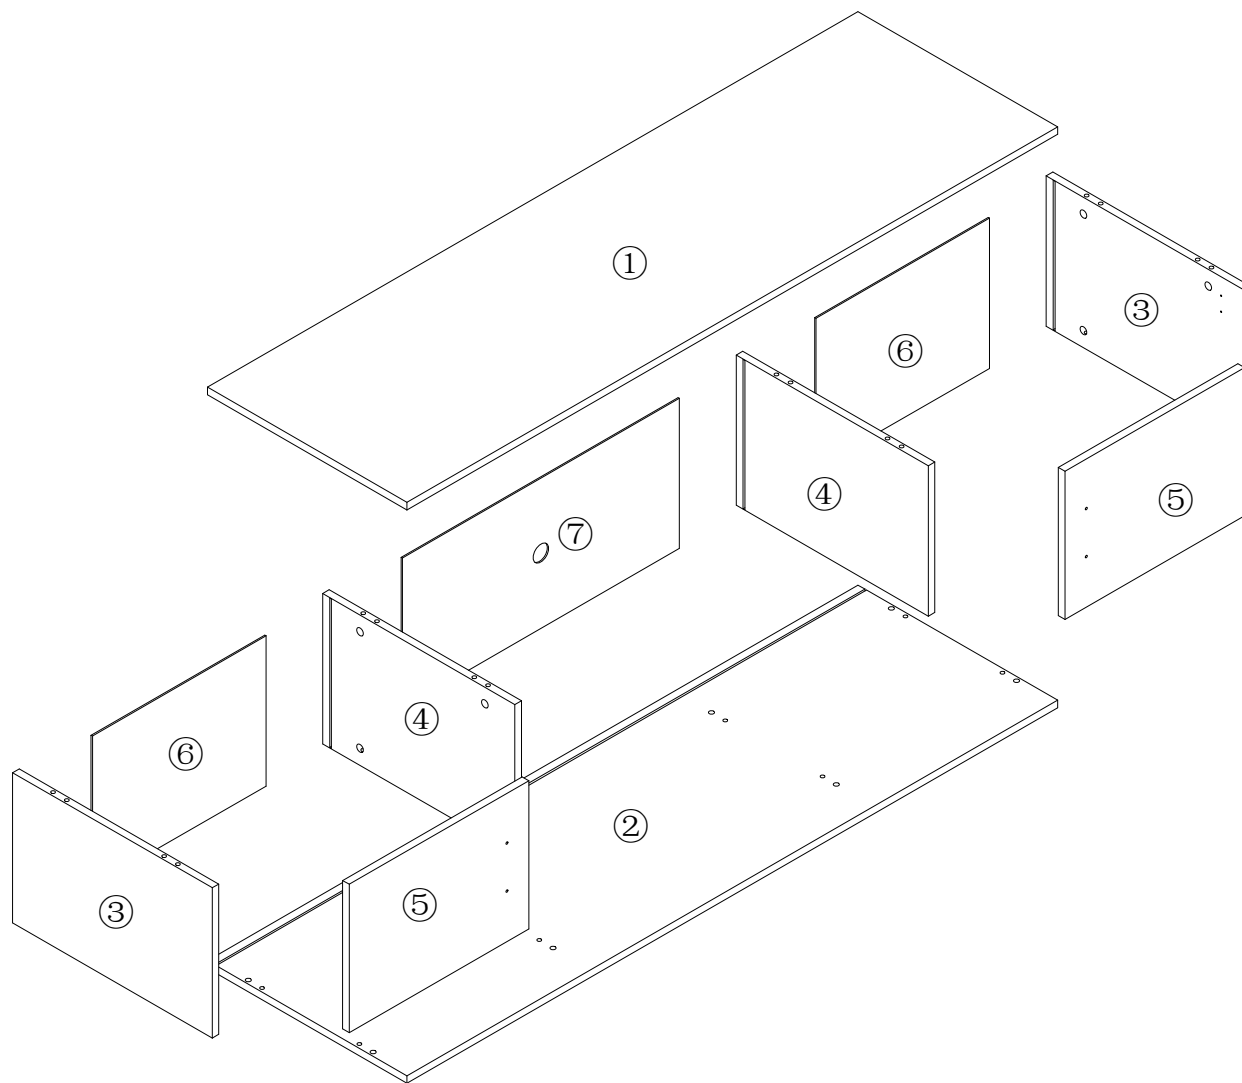
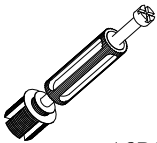










A  16PCS	B  16PCS	C 8*40  16PCS	D  4PCS	E  1PCS	F  5PCS	G 3.5*14  44PCS	H 96MM  2PCS	I 4*18  4PCS	J  4PCS
--	---	---	--	---	--	---	--	--	--




Hardware installation demonstration

NOTE: Please make sure "A" hardware tightened and can't be pulled out!


I

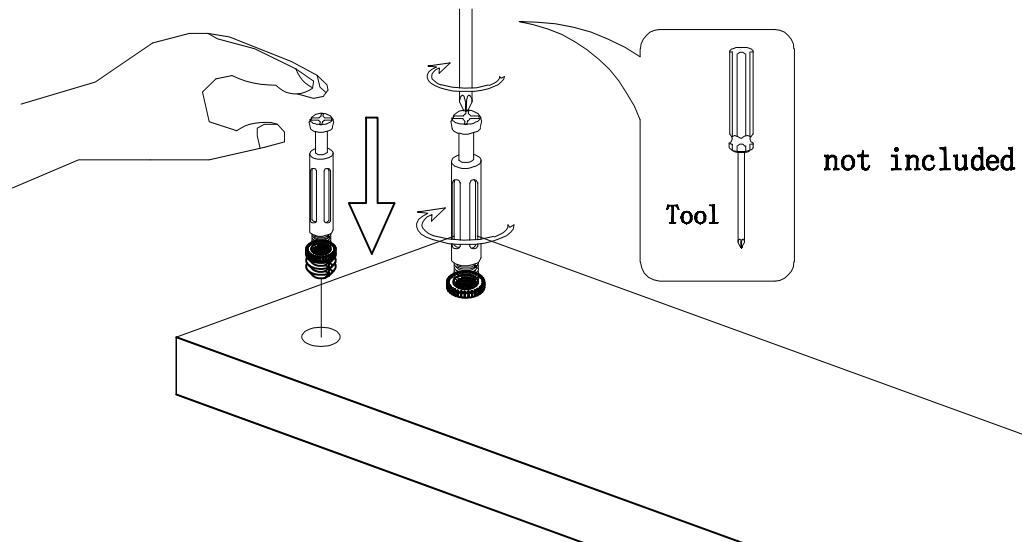

II

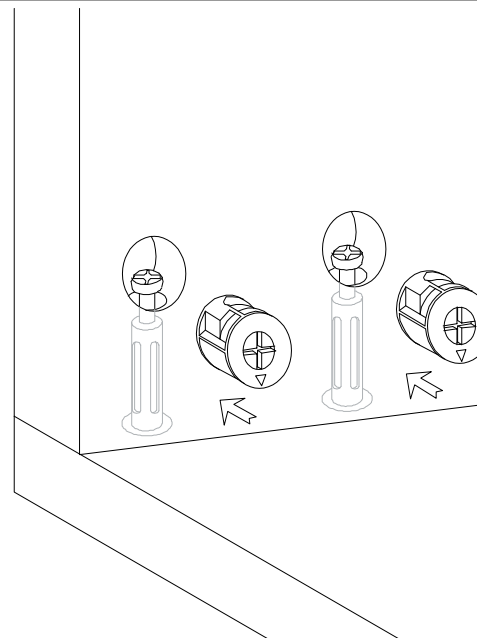


III

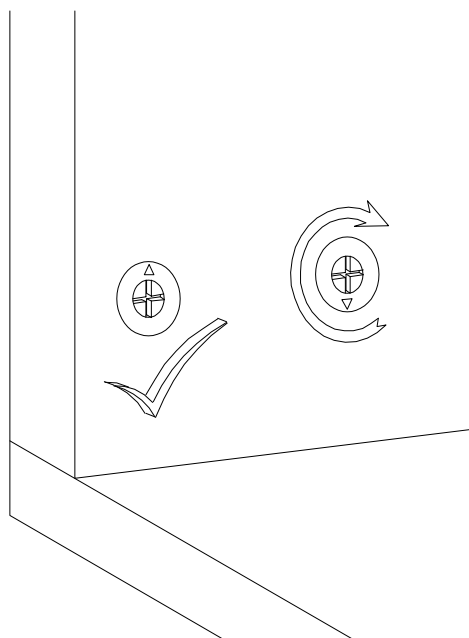

1


1500*460 (mm)

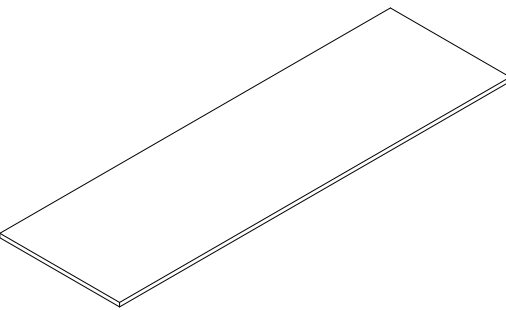

1 PCS

2


1500*460 (mm)

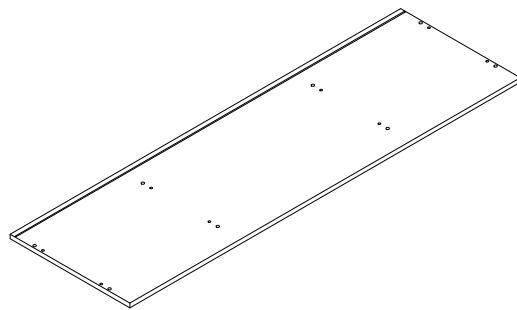

1 PCS

3


300*460 (mm)

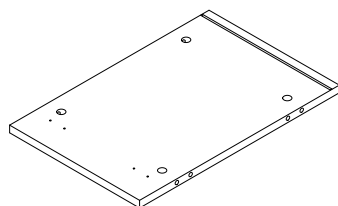

2 PCS

4


300*443 (mm)

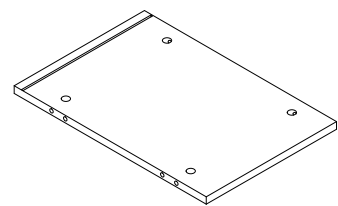

2 PCS

5


296*414 (mm)

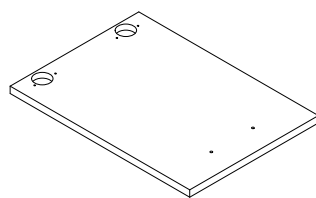

2 PCS

6


409*310 (mm)

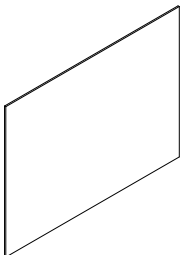

2 PCS





7

646*310 (mm)

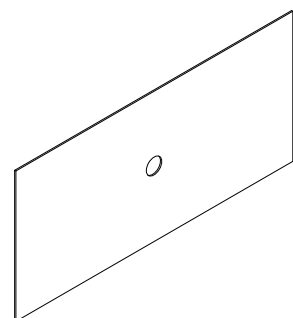







1 PCS

1

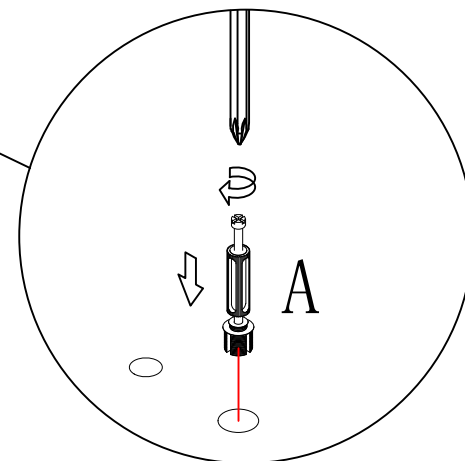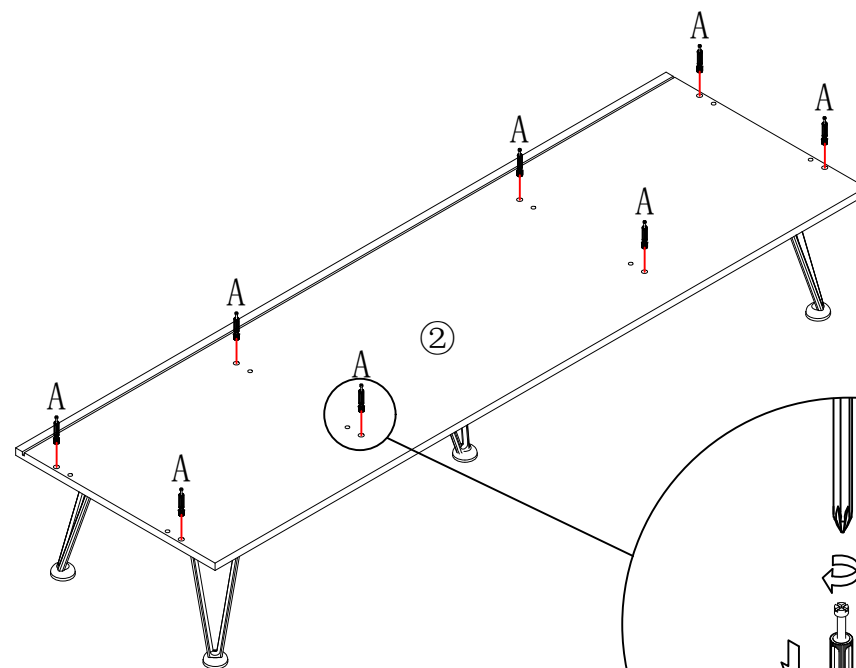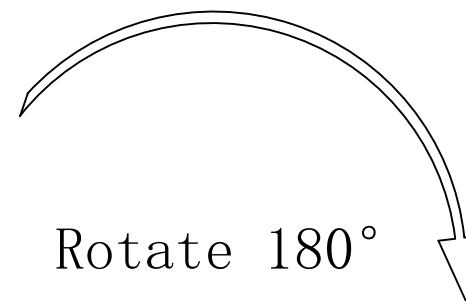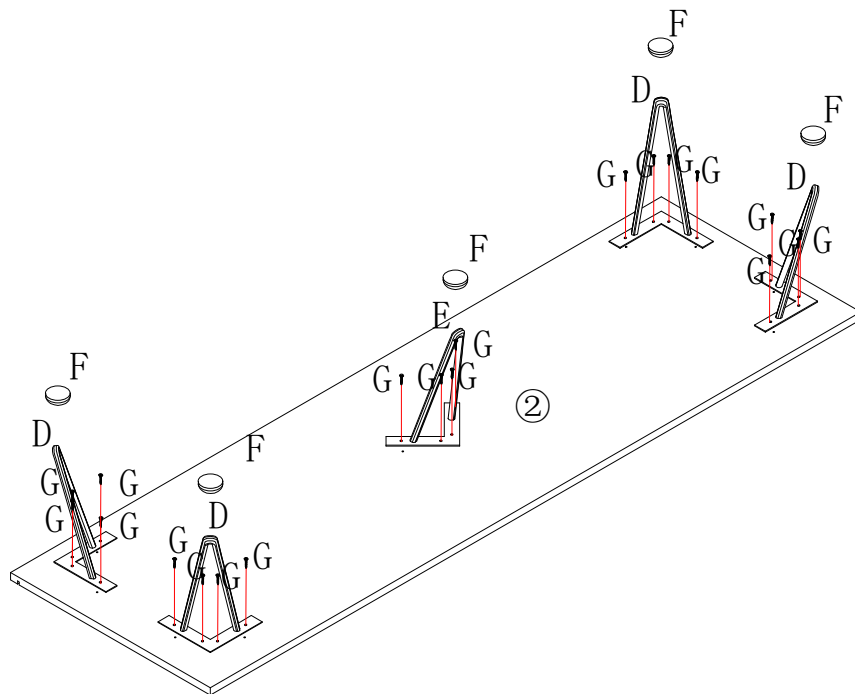

	A*8	put A on board ②
	D*4	put D on board ②
	E*1	put E on board ②
	F*5	
	G*20	put G on board ②

2

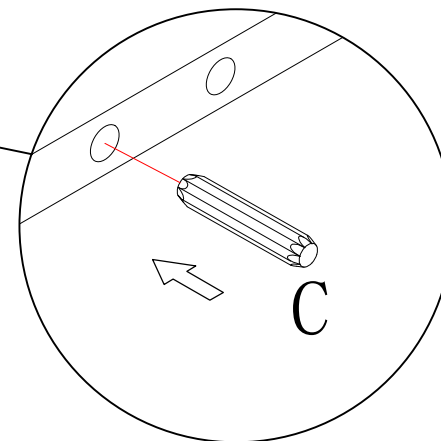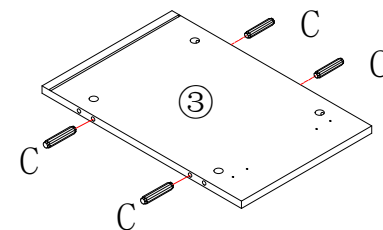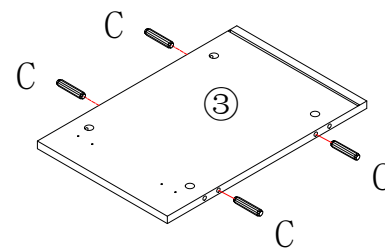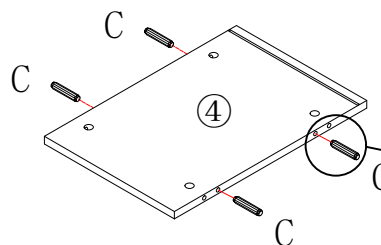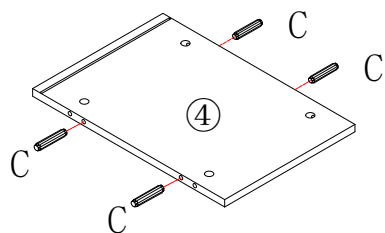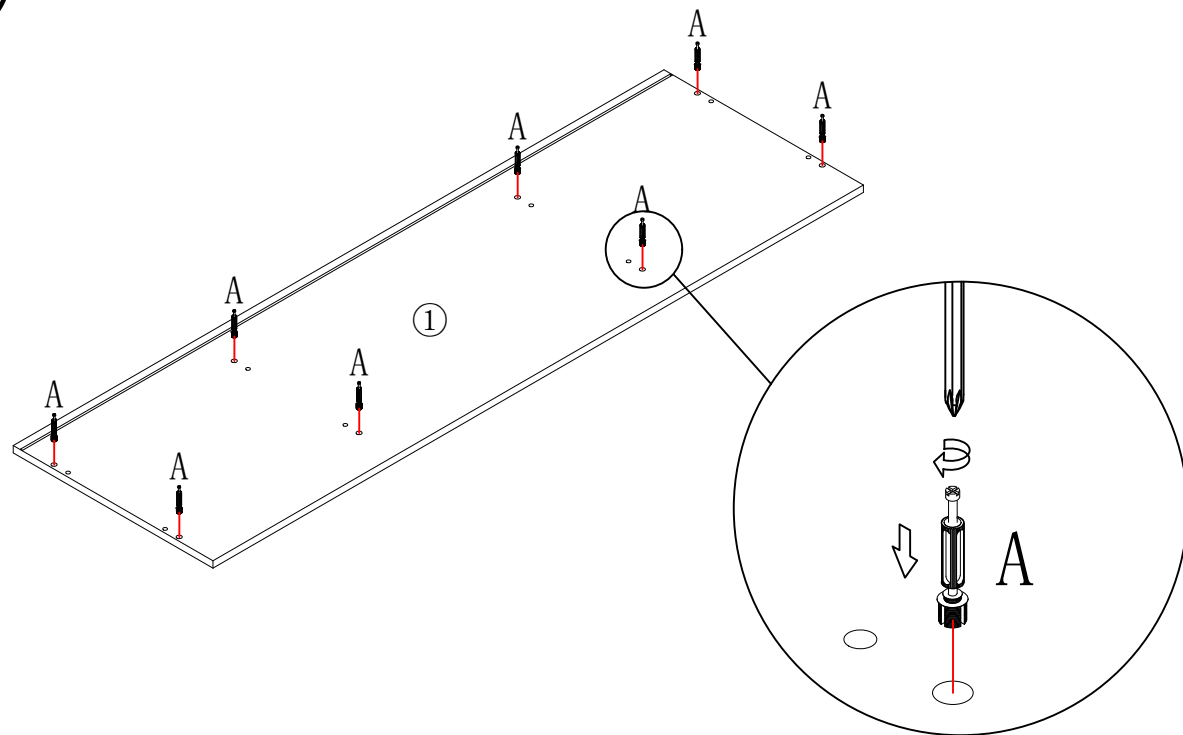

A*8


put A on board ①



C*16

put C on board ③④

3

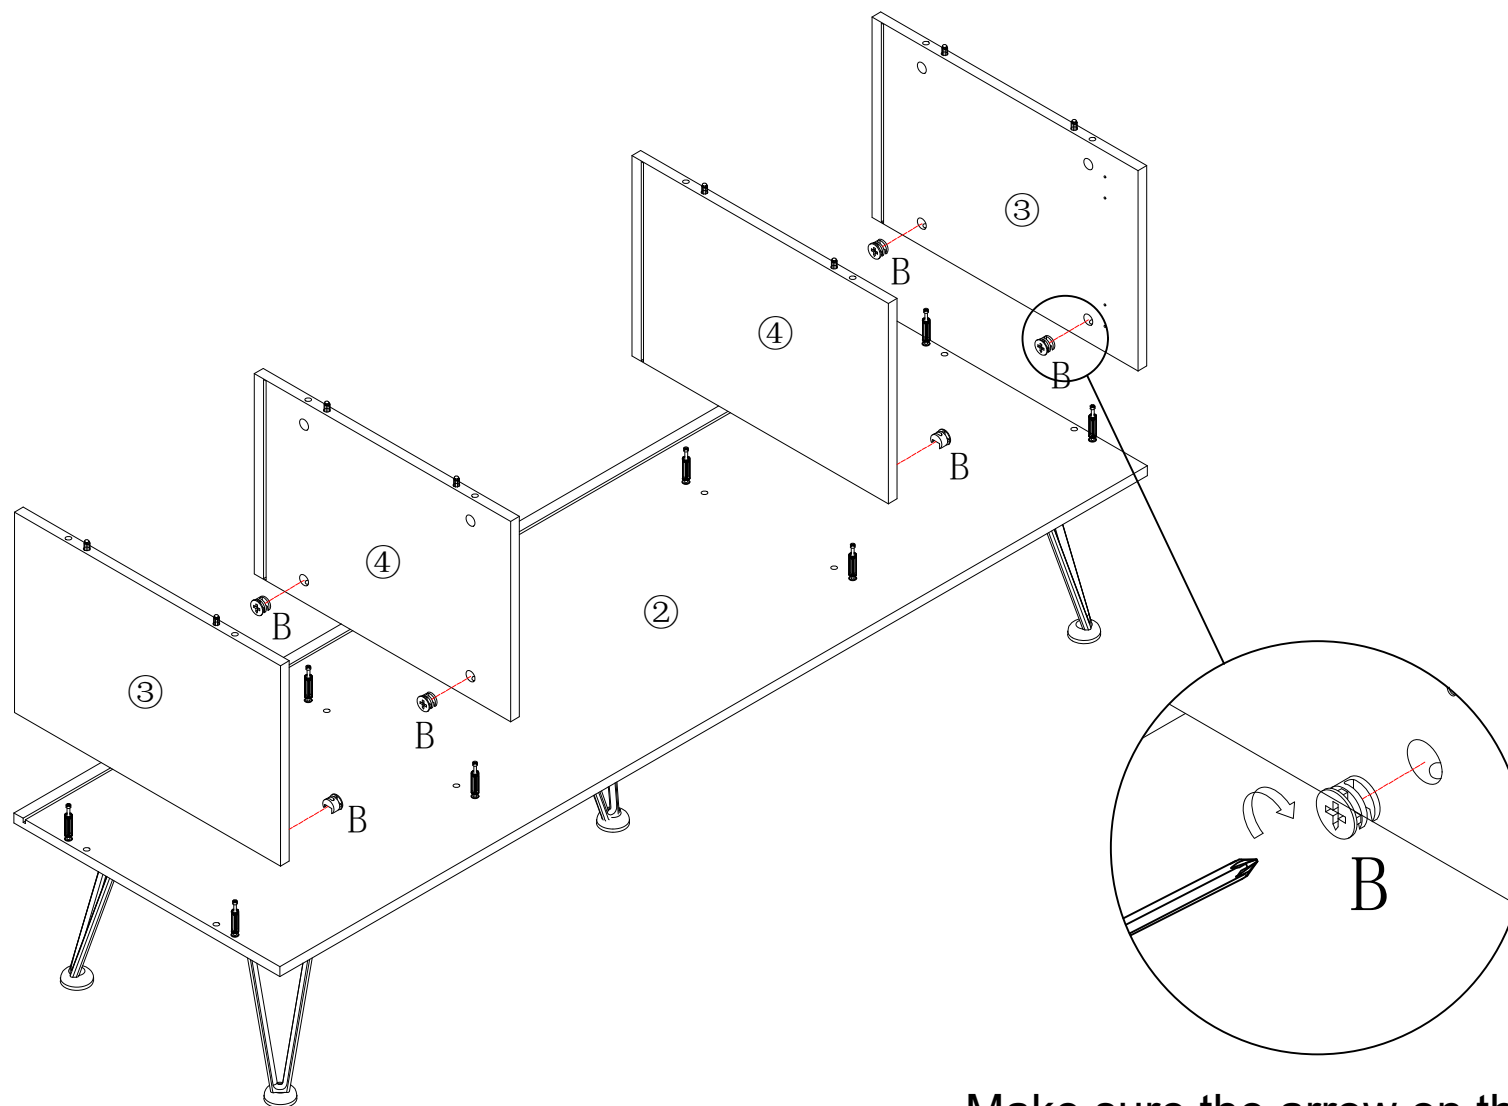


Make sure the arrow on the screw align to the hole on the side.




B*8

put B on board ③④

④

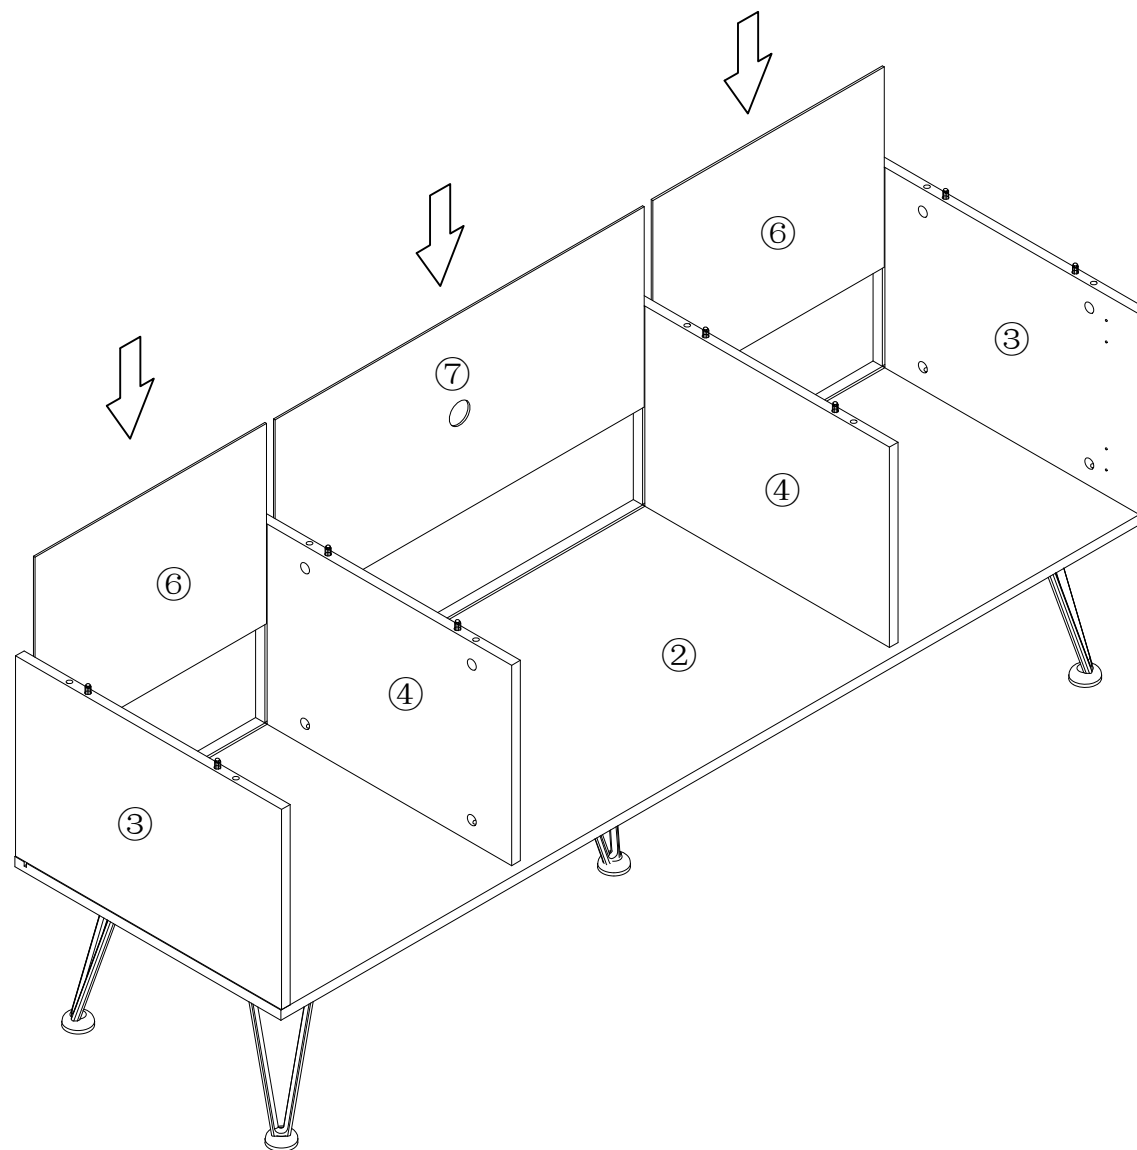

5

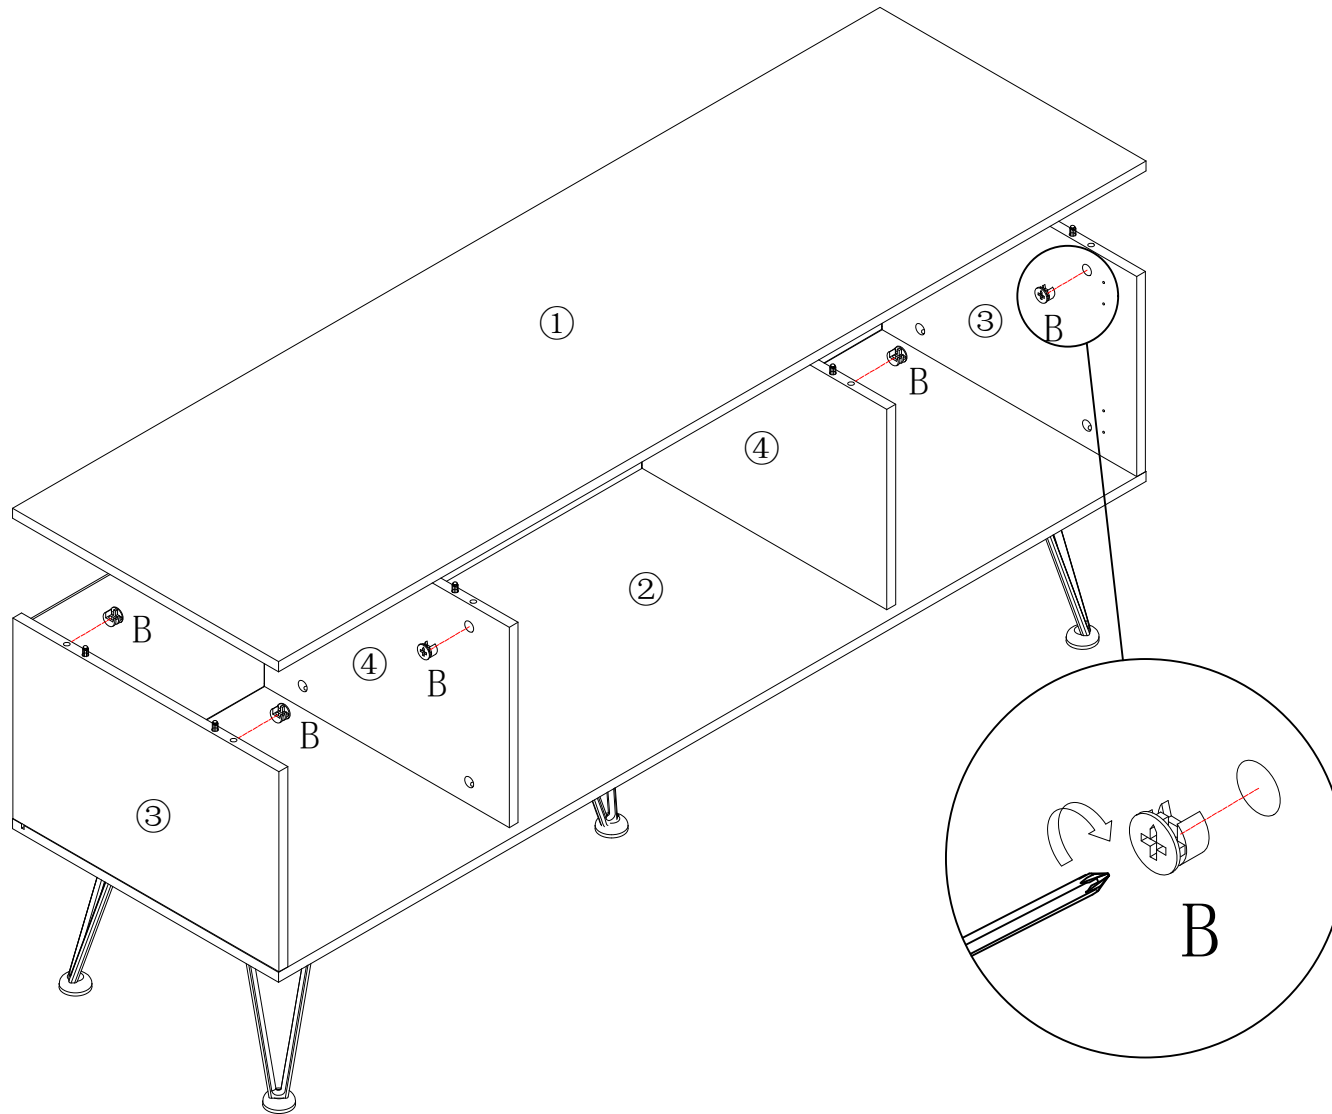




Make sure the arrow on the screw align to the hole on the side.



B*8

put B on board ③④

6

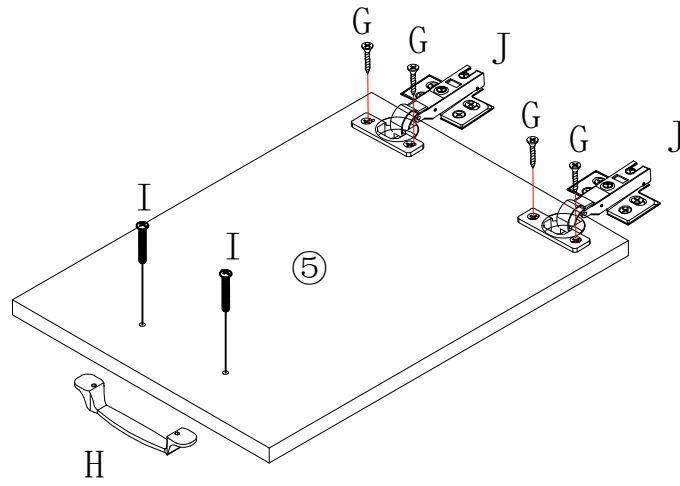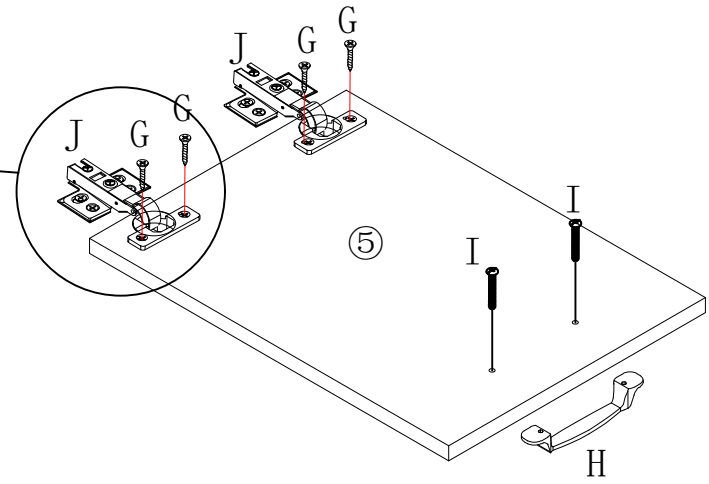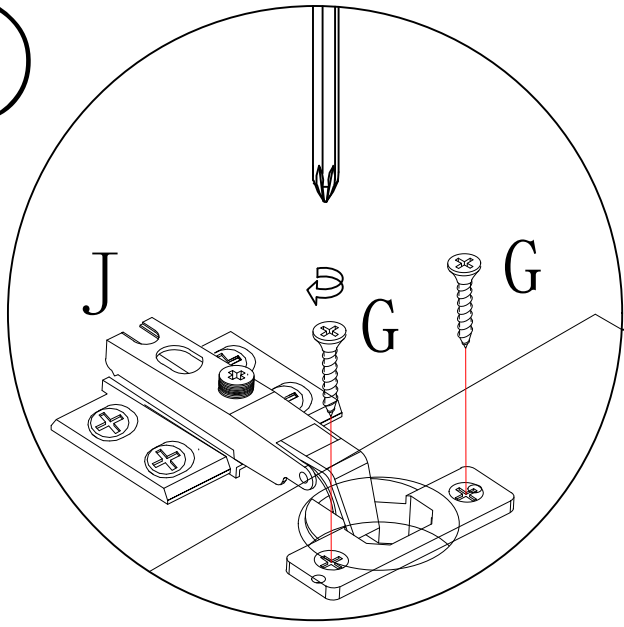

	G*8
	H*2
	I*4
	J*4


put G on board ⑤

put H on board ⑤

put I on board ⑤

put J on board ⑤

7

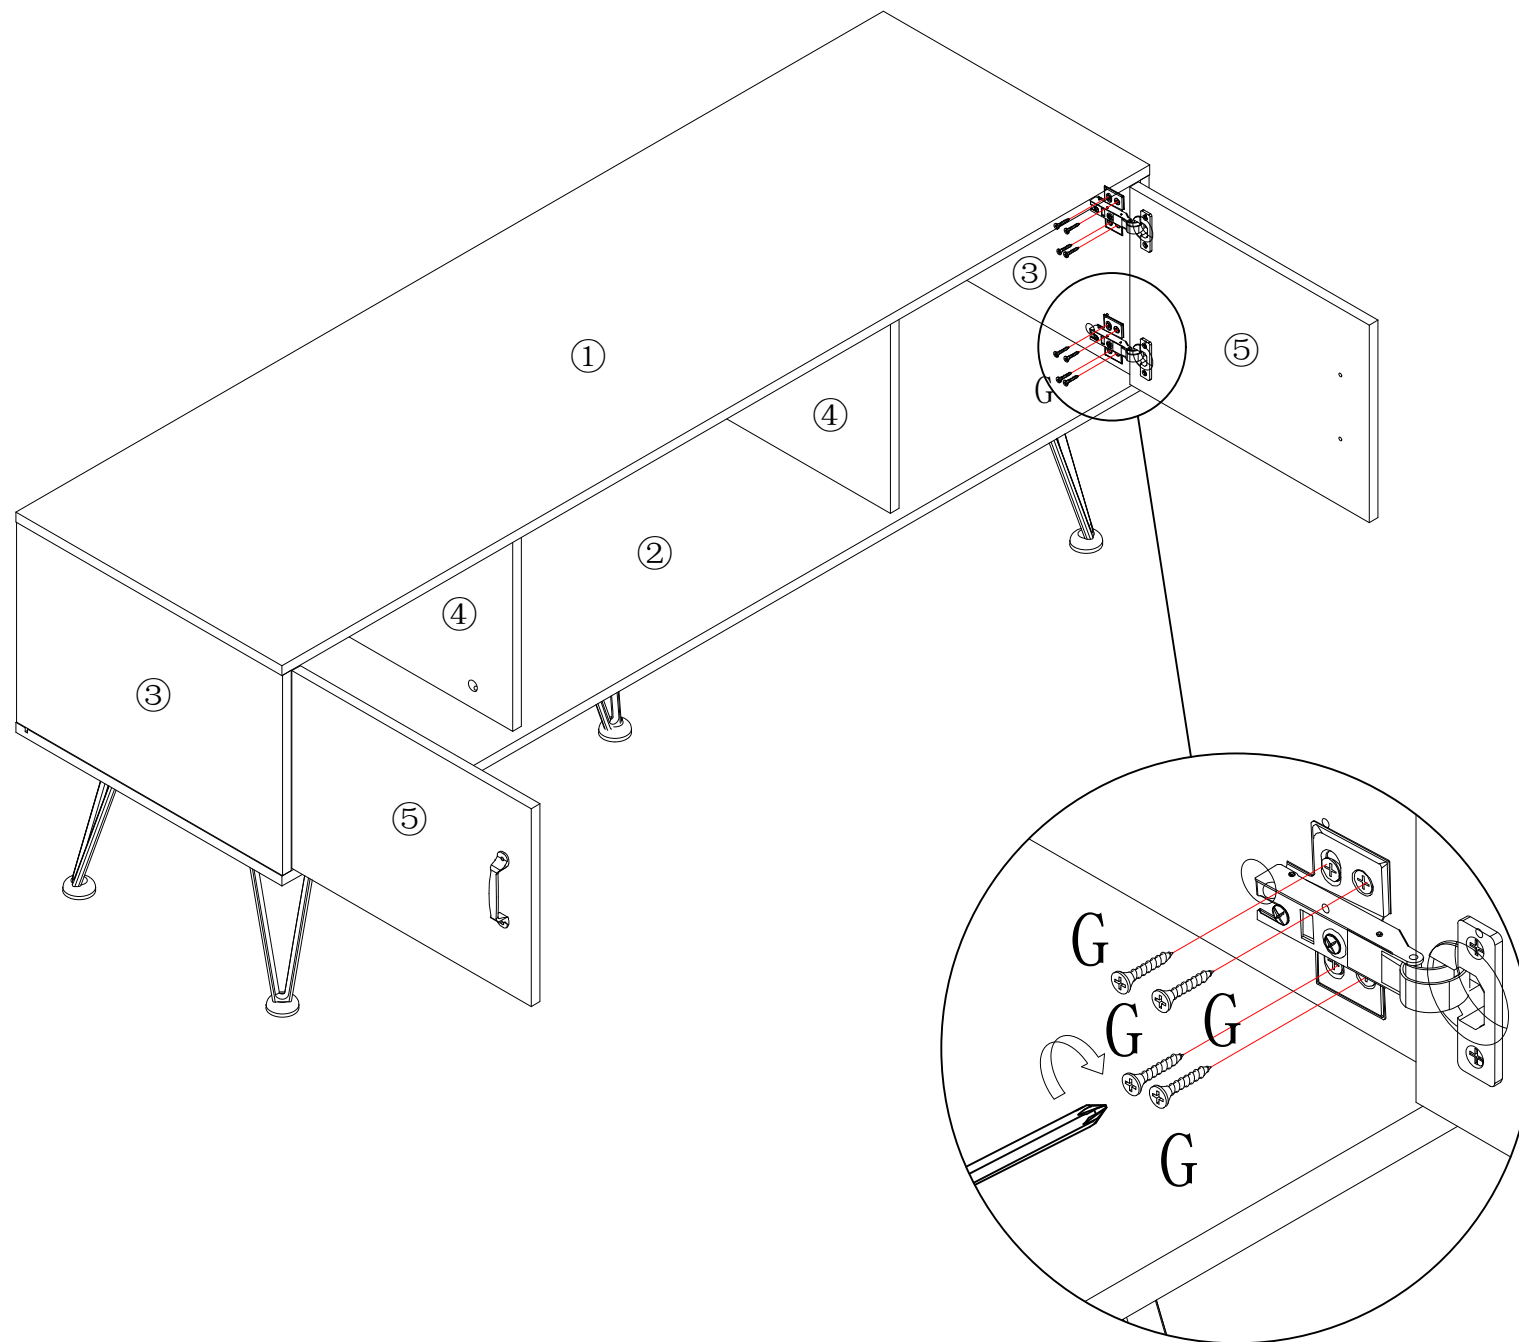

G*16

put G on board ③

8

