


Owner Manual



WARNING !


MAXIMUM LOAD
220 lb/ 100kg

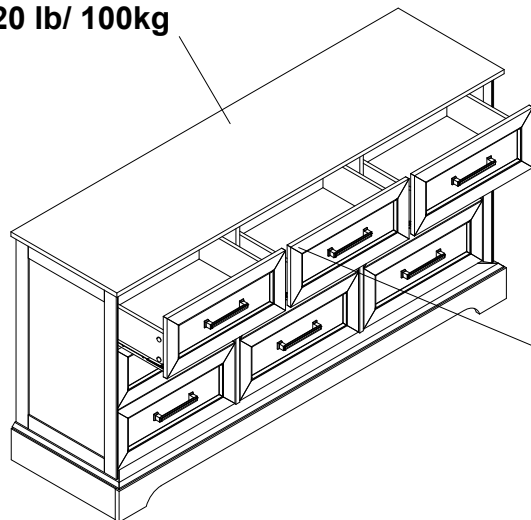


Estimated Time for Assembly

60 mins

MAXIMUM LOAD
20 lb/ 9.1kg

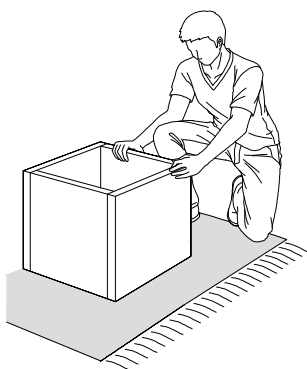

Assembly the furniture on empty carton, carpet, or rug to prevent scratches or damage.

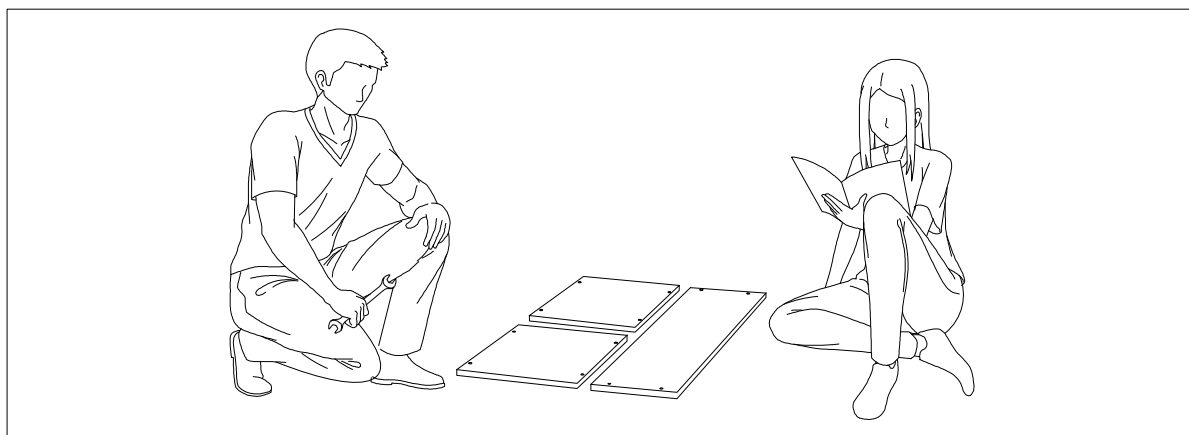


This furniture requires 2 people to assembly.

Make sure no parts are missing or damaged before assembly.


Board Identification

Not actual size

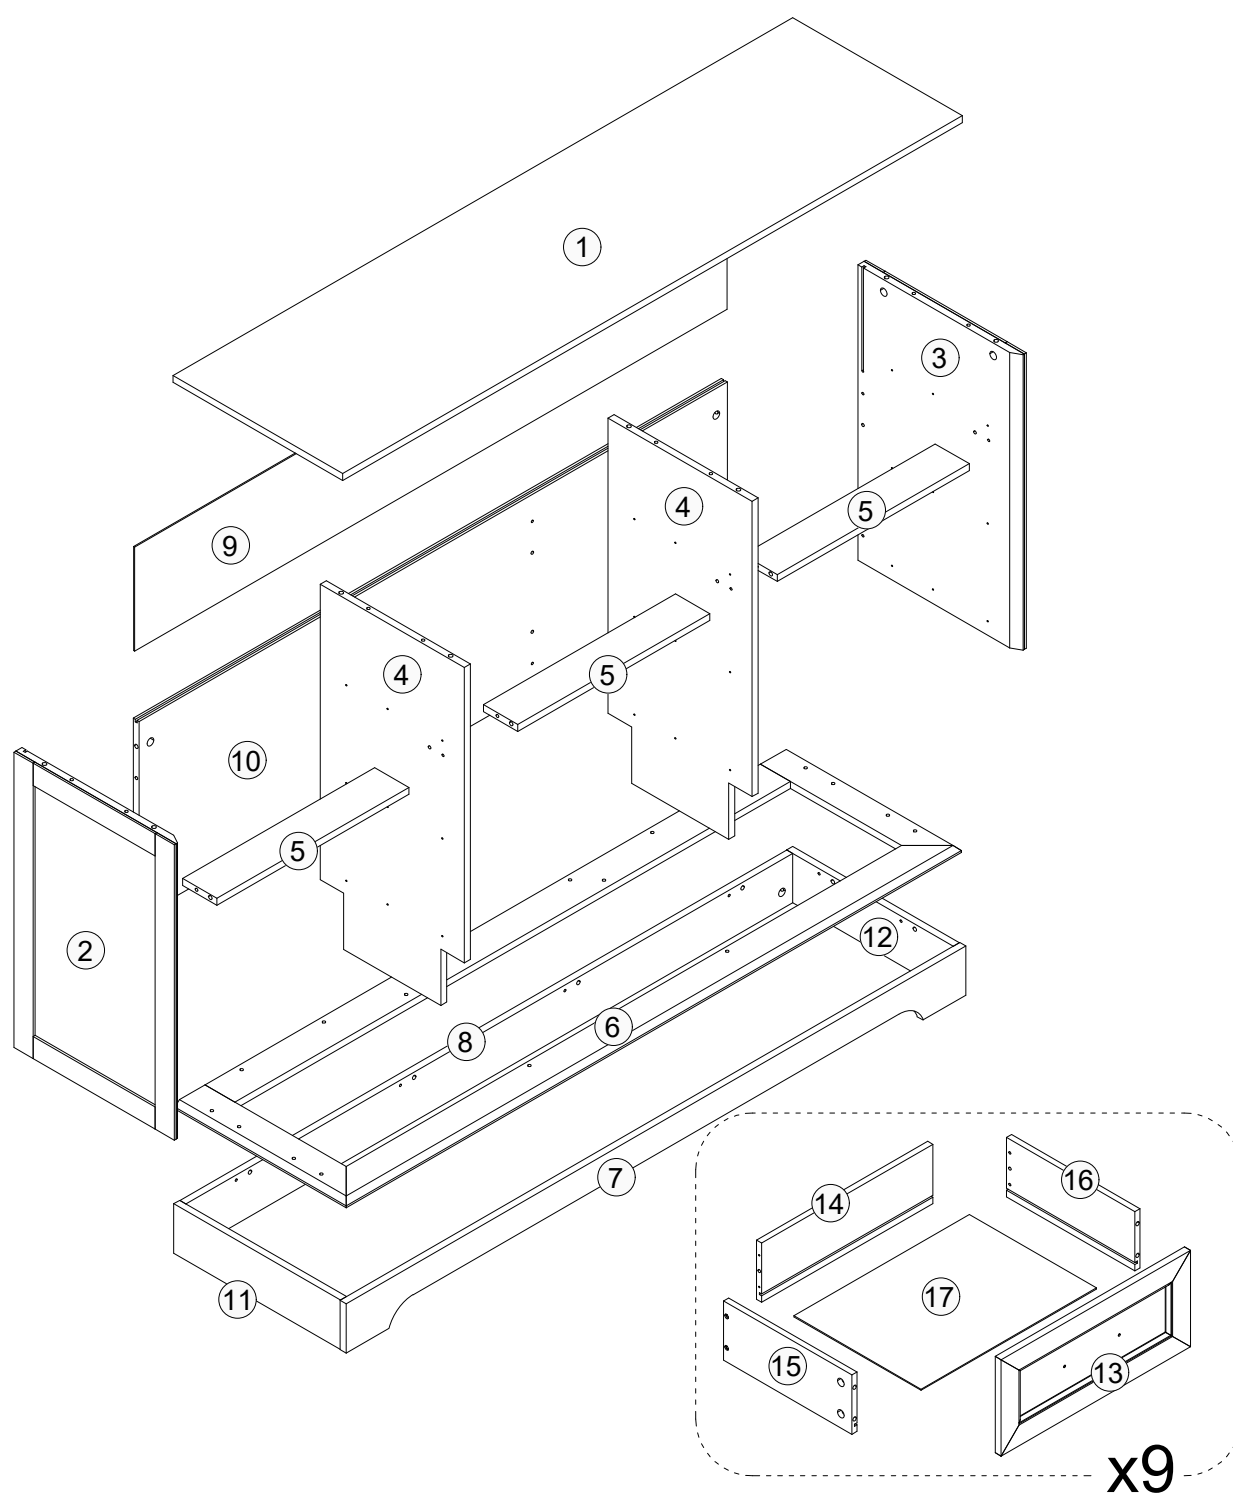


BOARD IDENTIFICATION


Not actual size

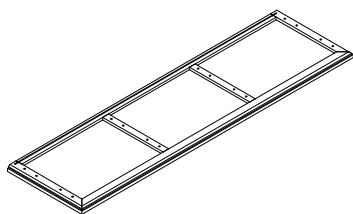


① x1

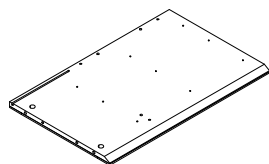


② x1

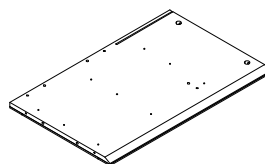


③ x1

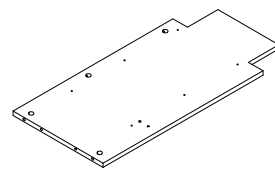


④ x2




⑤ x3

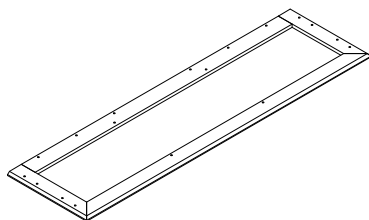


⑥ x1

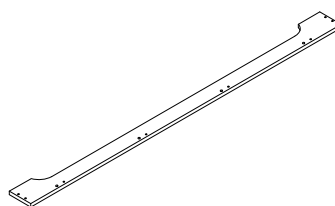


⑦ x1

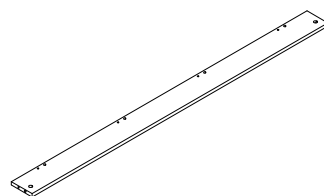


⑧ x1

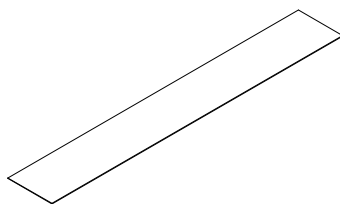


⑨ x1

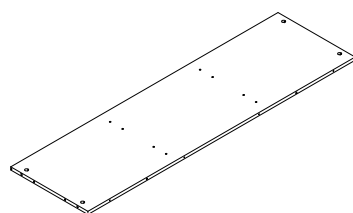


⑩ x1

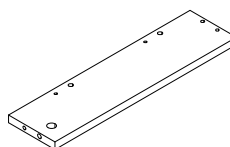


⑪ x1

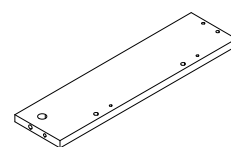


⑫ x1

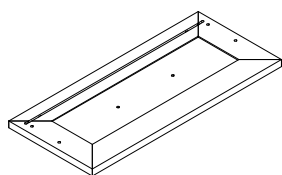


⑬ x9

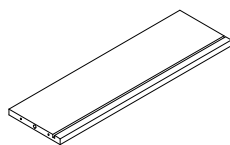


⑭ x9



⑮ x9












⑯ x9

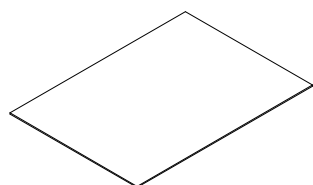


⑰ x9

HARDWARE LIST

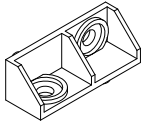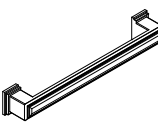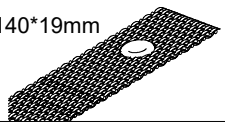
 Ø6x33.5mm A x62+6	 Ø15x9.5mm B x62+6	 Ø6x30mm C x50+5	 Ø5x38mm D x12+1				
 Ø3.5x12mm E x102+10	 F x12	 Ø6x12mm G x24+2	 Ø3x15 H x4+1				
 M4x8mm I x18	 J x2+4	 K x9	 Ø4x38mm L x36+3				
M1x2 140*19mm  M2x4 Ø16xØ6.5x1mm  M3x2 Ø4x16mm  M				N1x2 Ø6x30  N2x2 Ø4x35  N		 O x1	
 CL x9		 CR x9		 DR x9		 DL x9	

Cam Lock Fastening System



Insert the cam bolt into the hole first, then insert the cam lock and lock it.

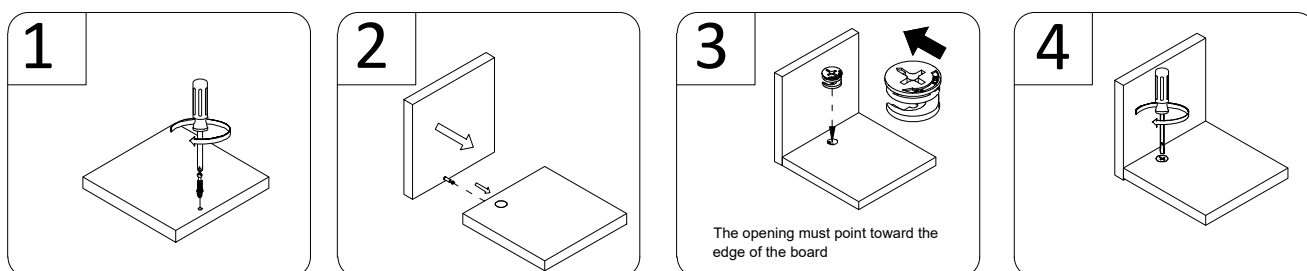


STEP 1

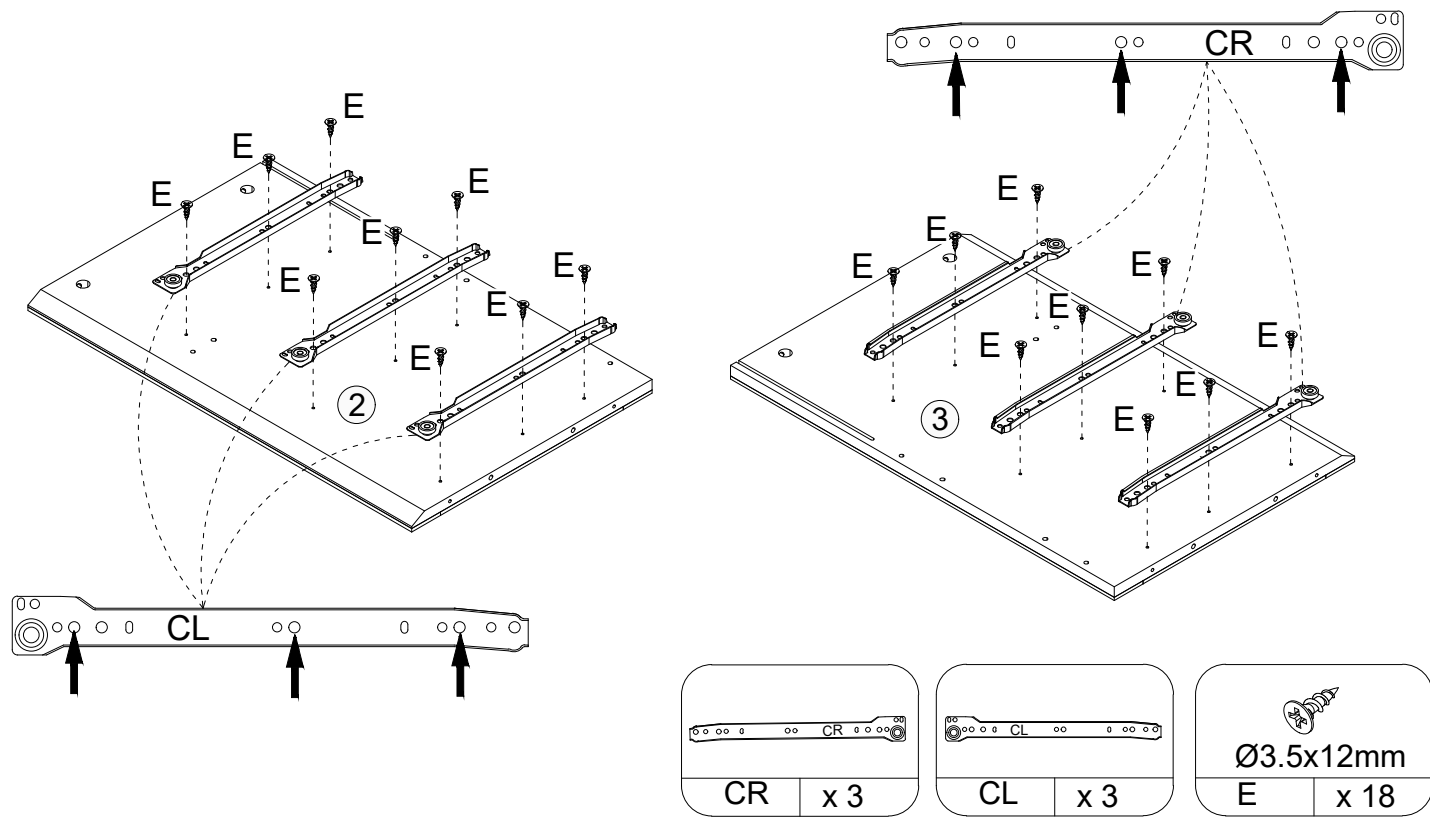


STEP 2

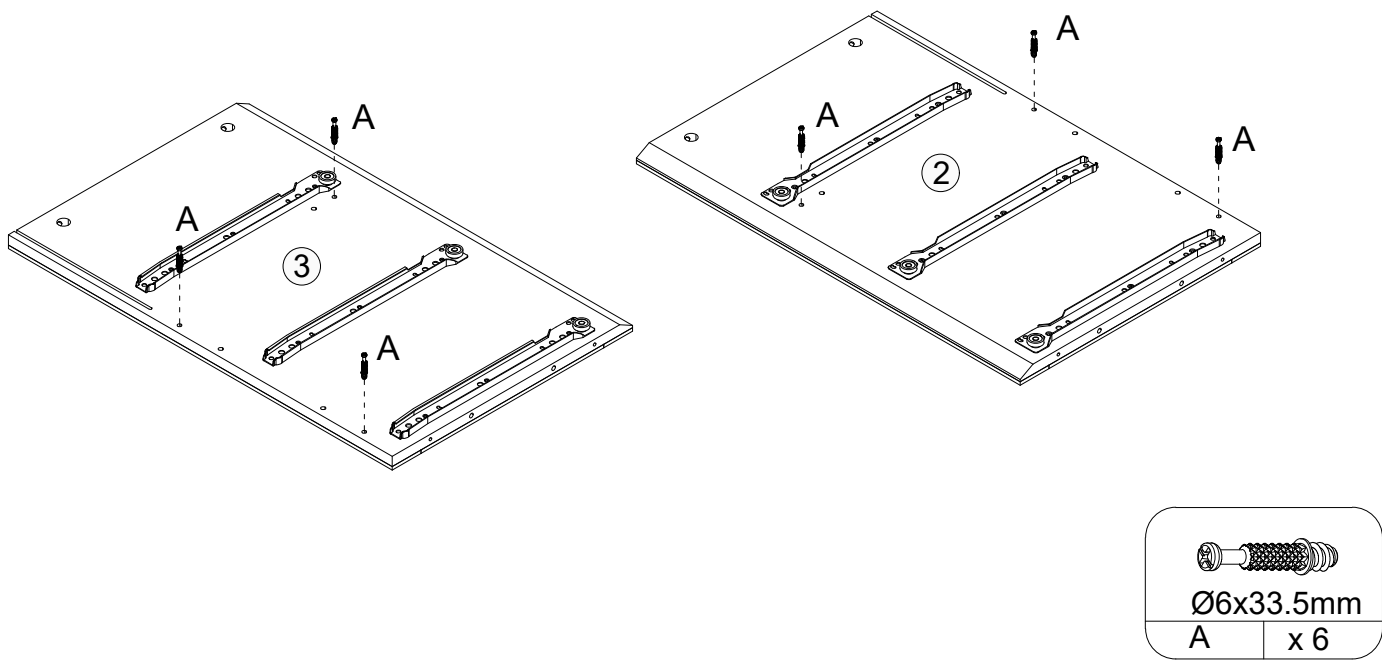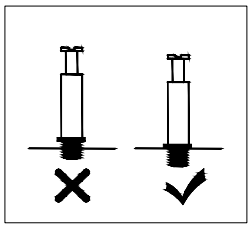




STEP 3

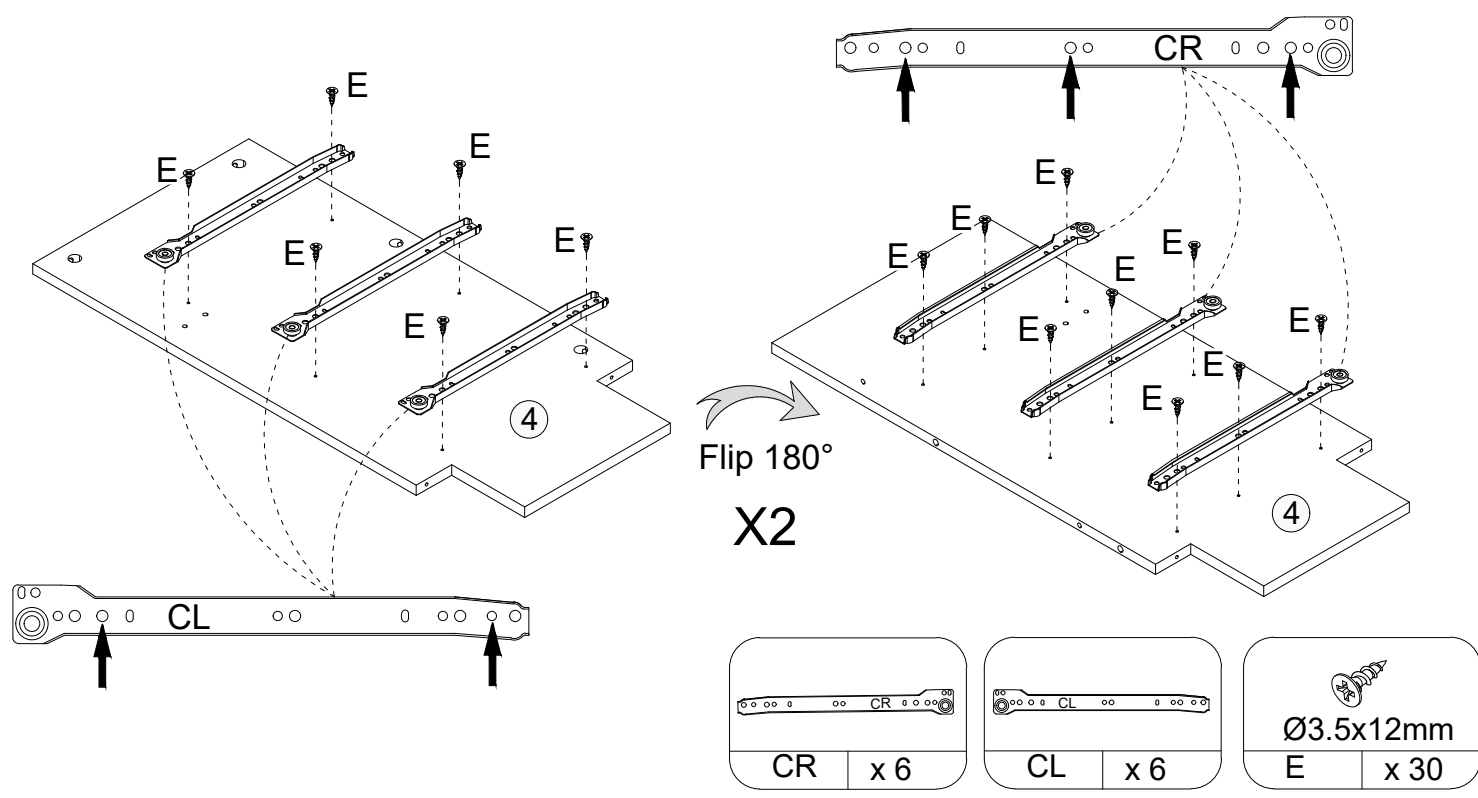





STEP 4

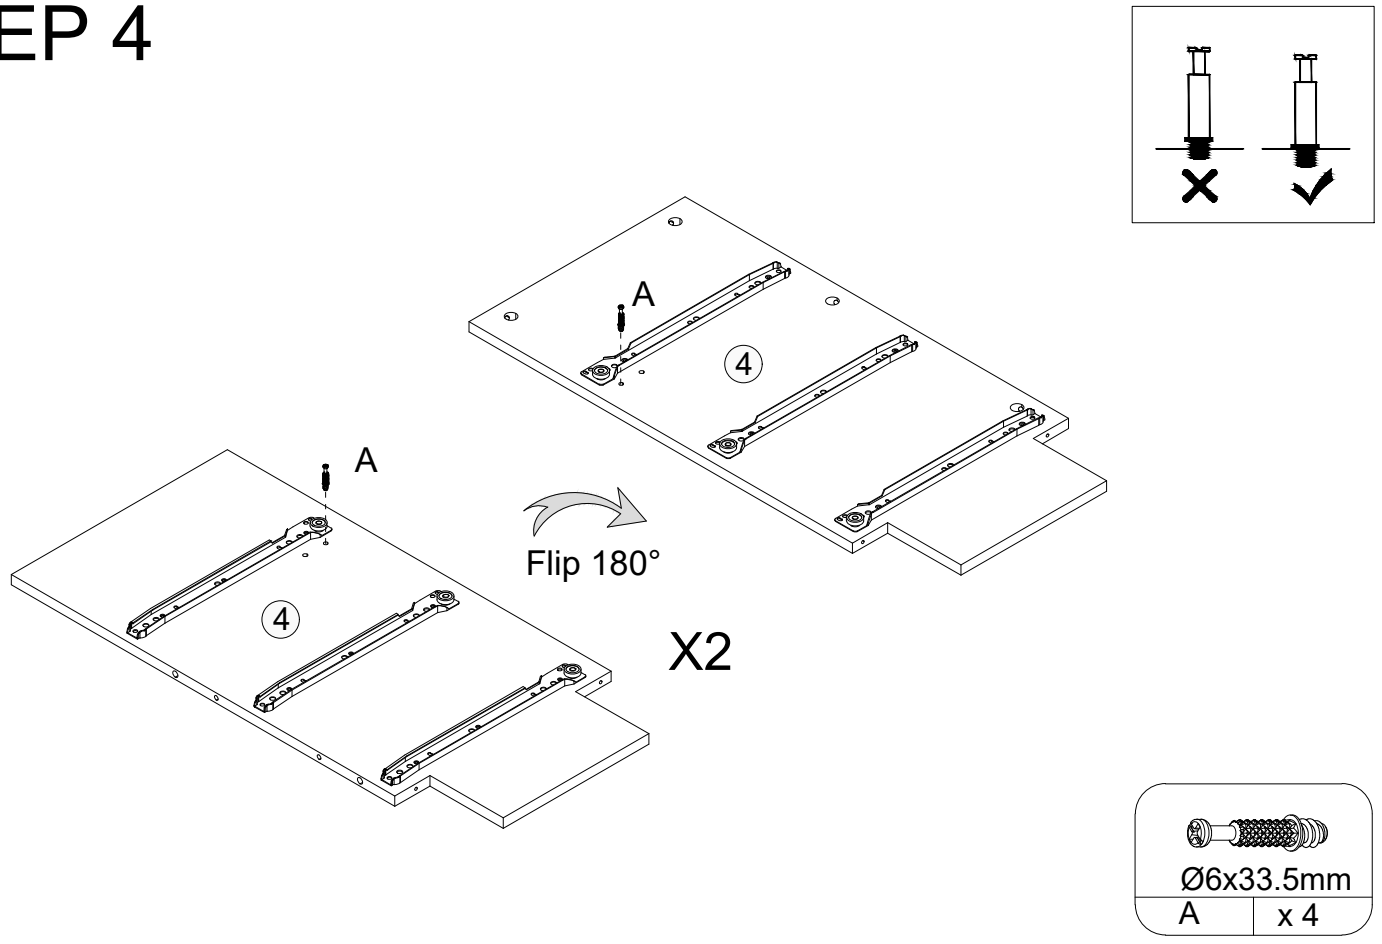


STEP 5

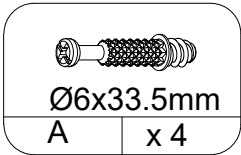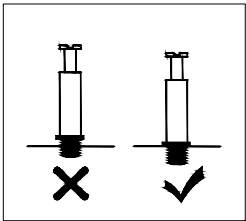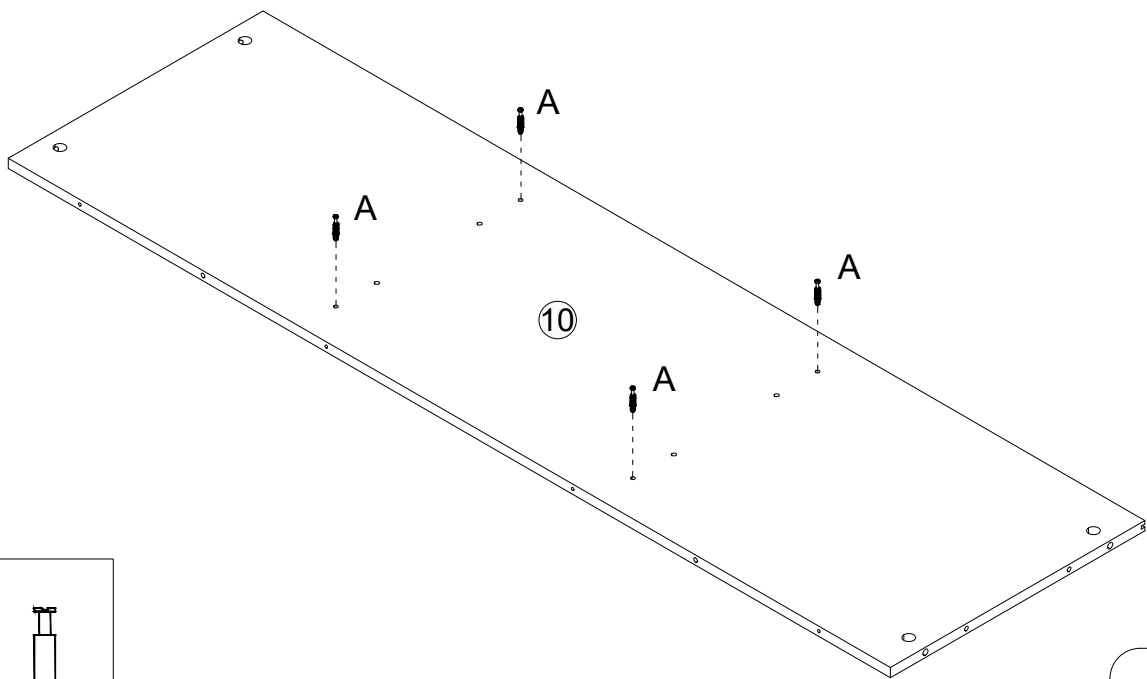


STEP 6

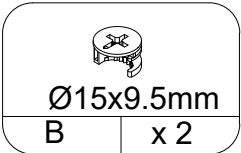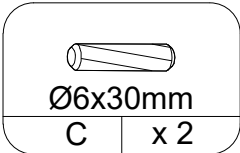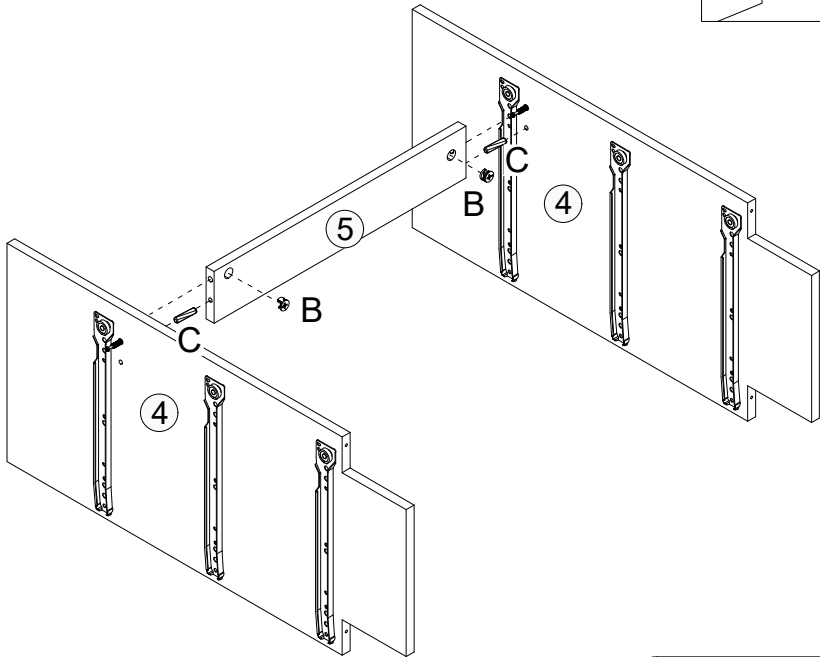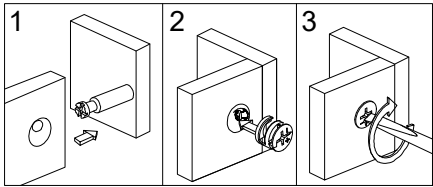


STEP 7

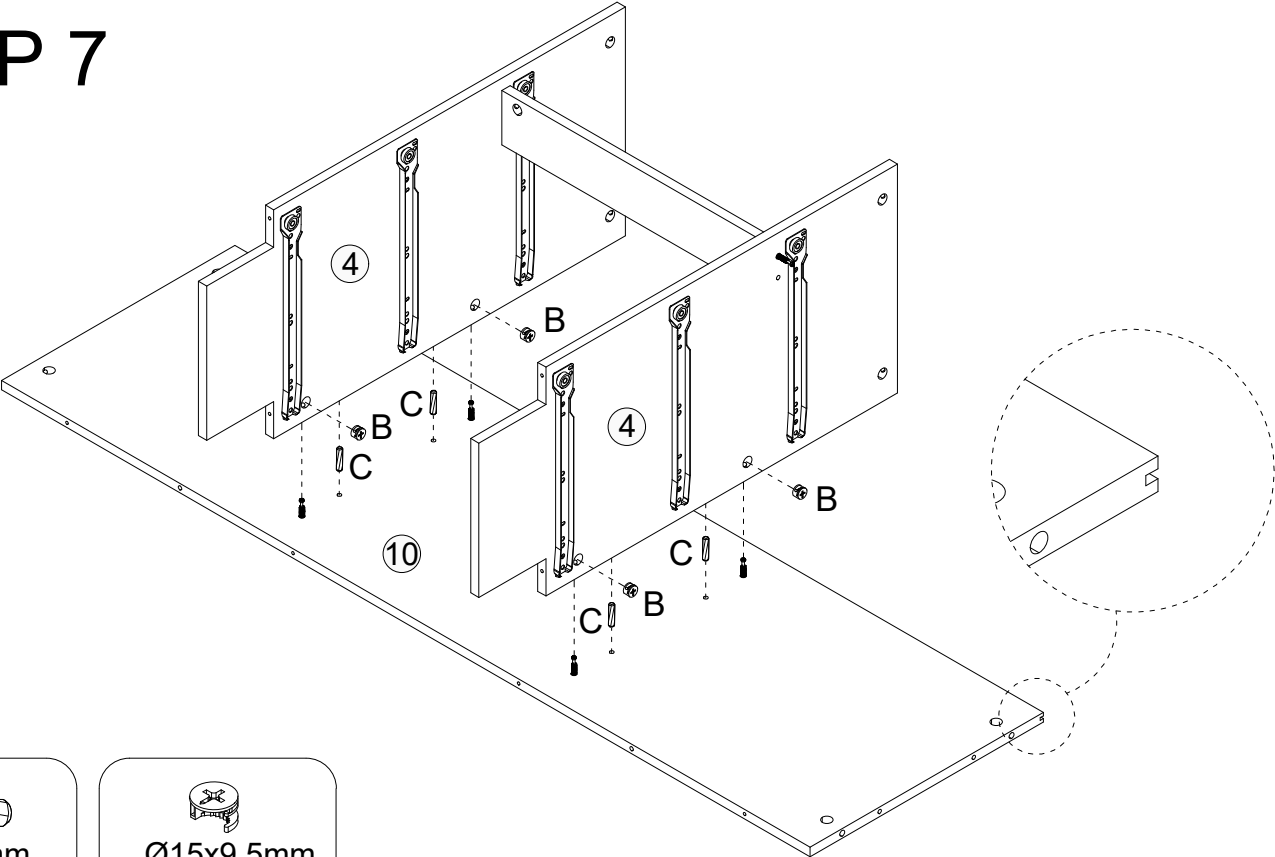


Ø6x30mm
C x 4


Ø15x9.5mm
B x 4


STEP 8

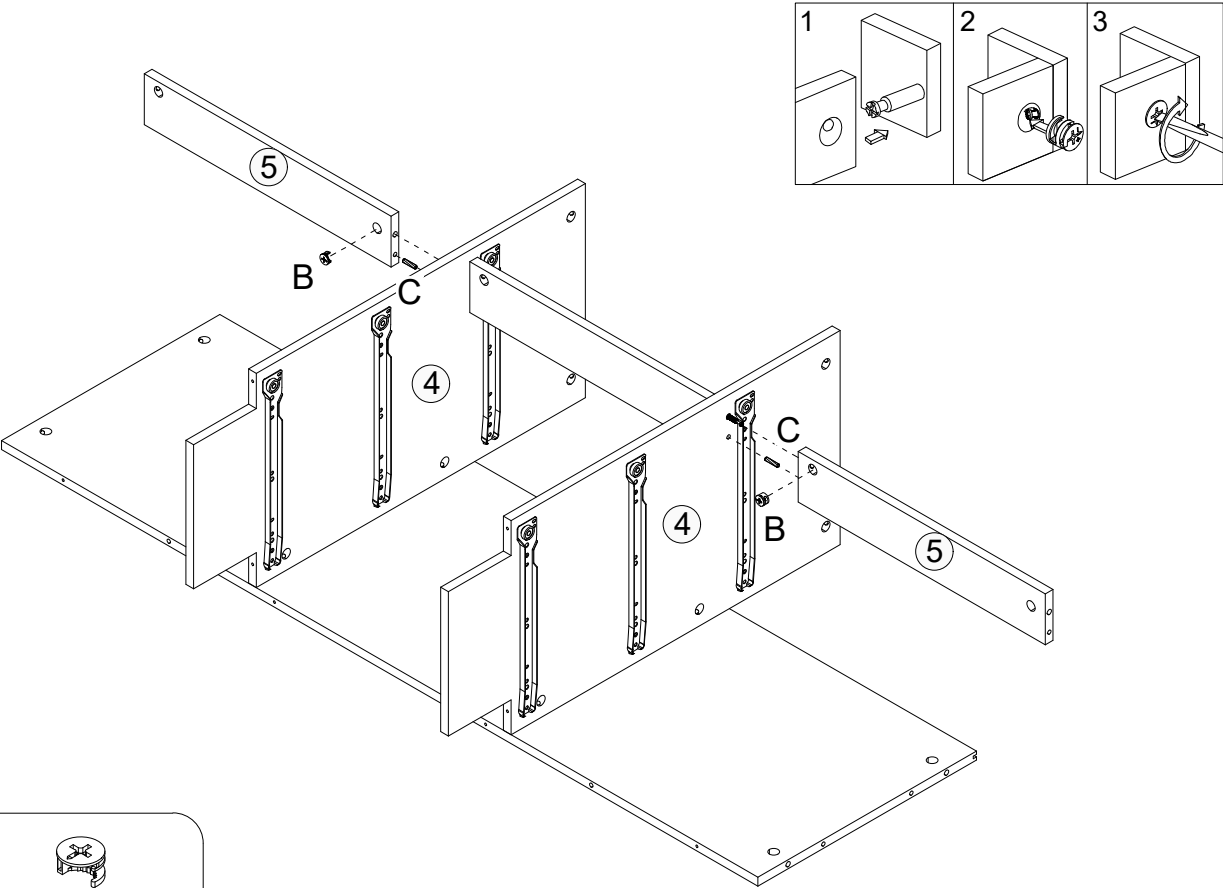



Ø6x30mm
C x 2


Ø15x9.5mm
B x 2



STEP 9

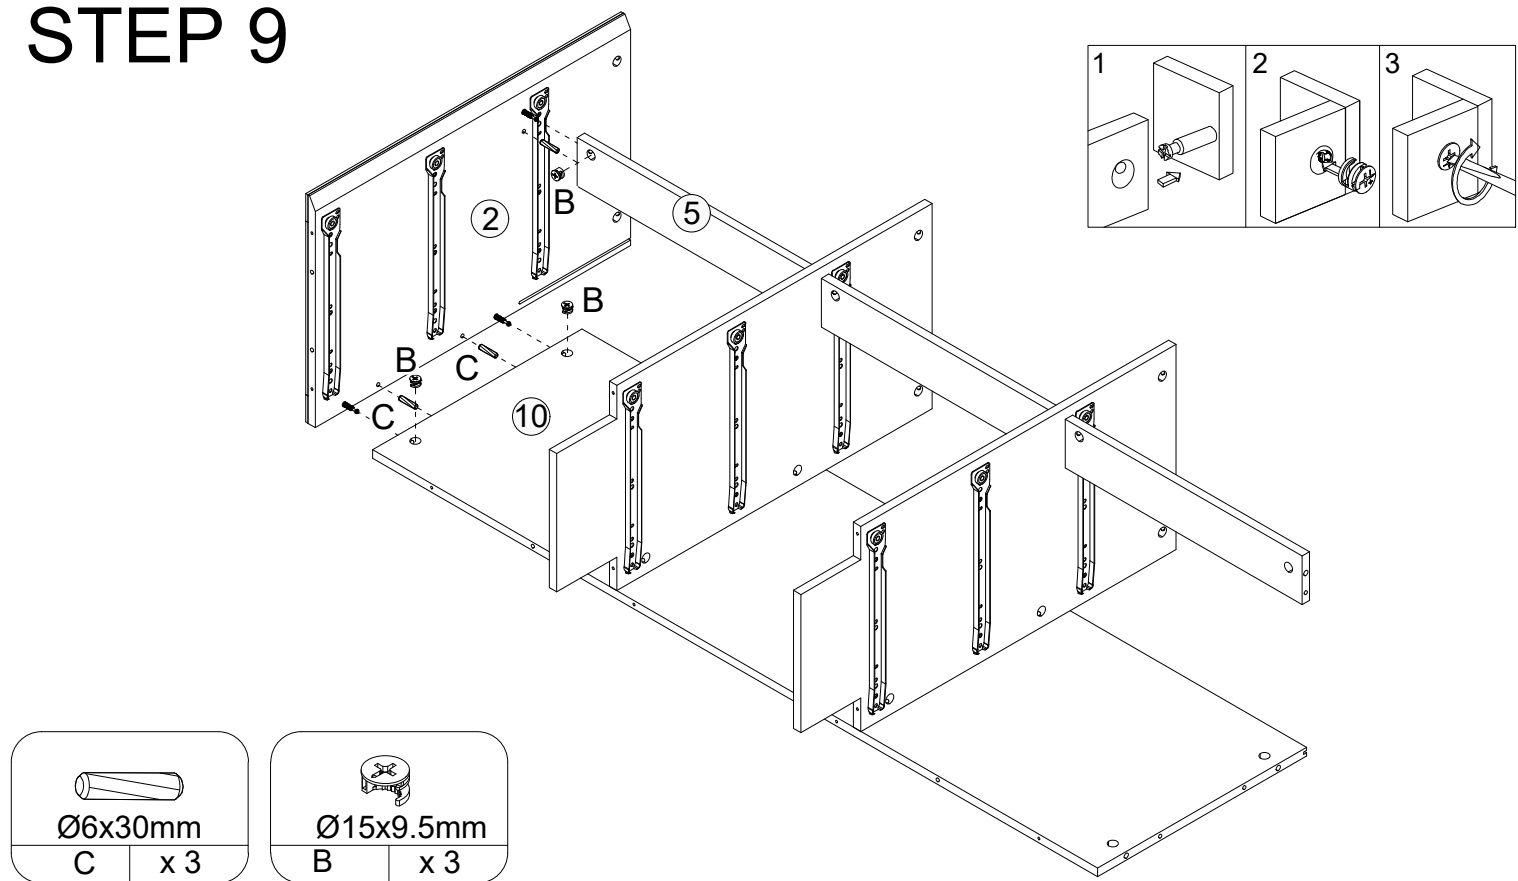



STEP 10

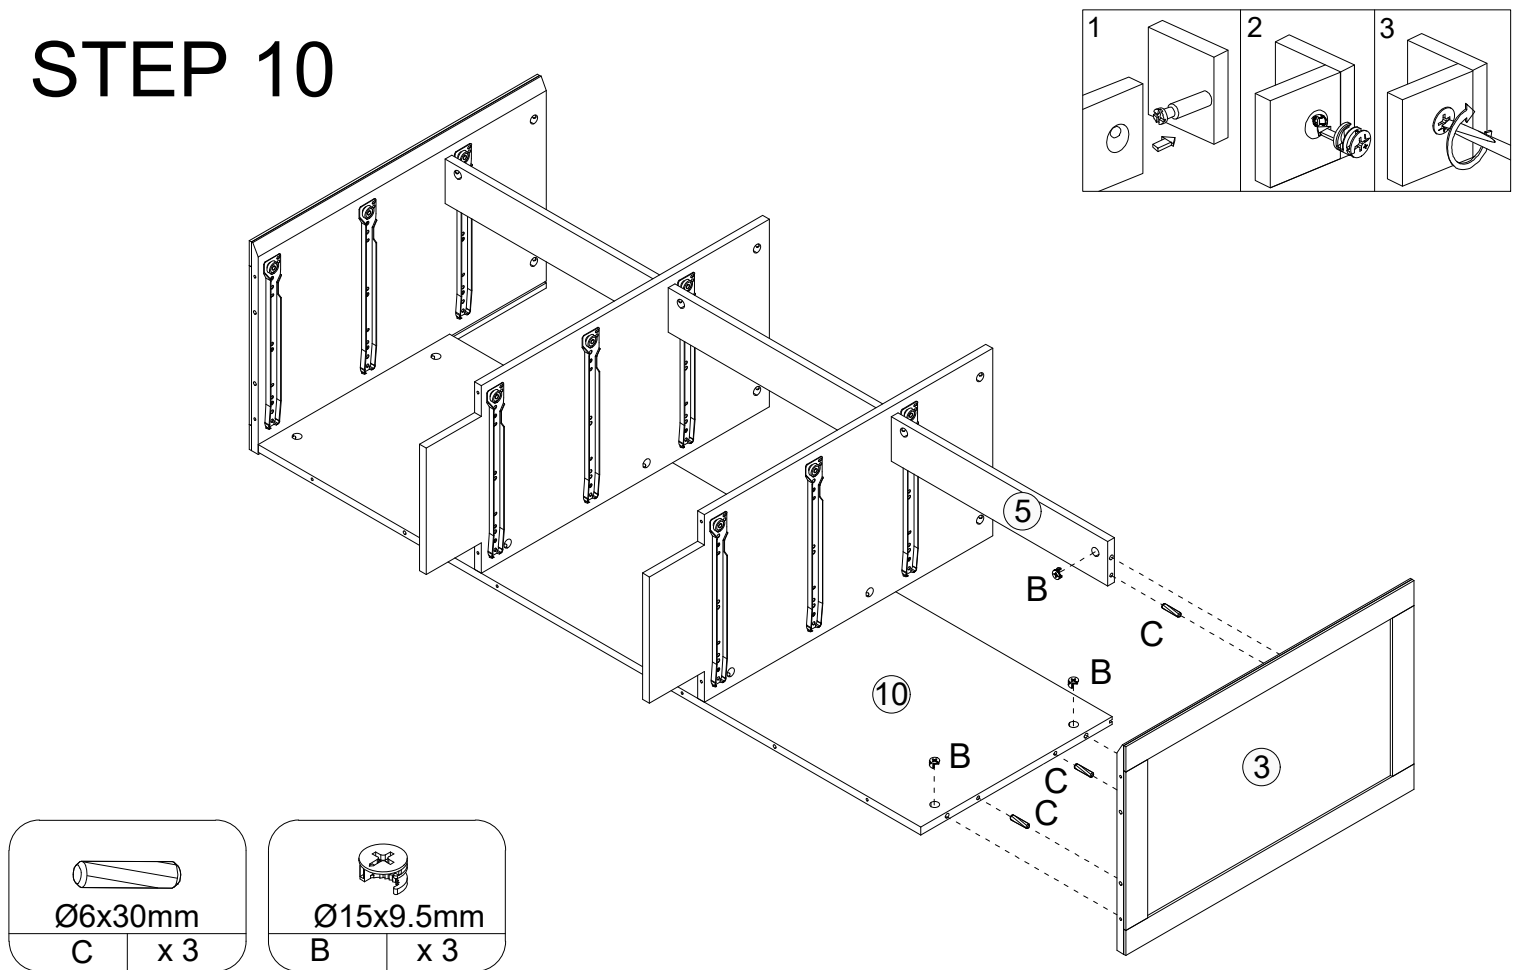


STEP 11

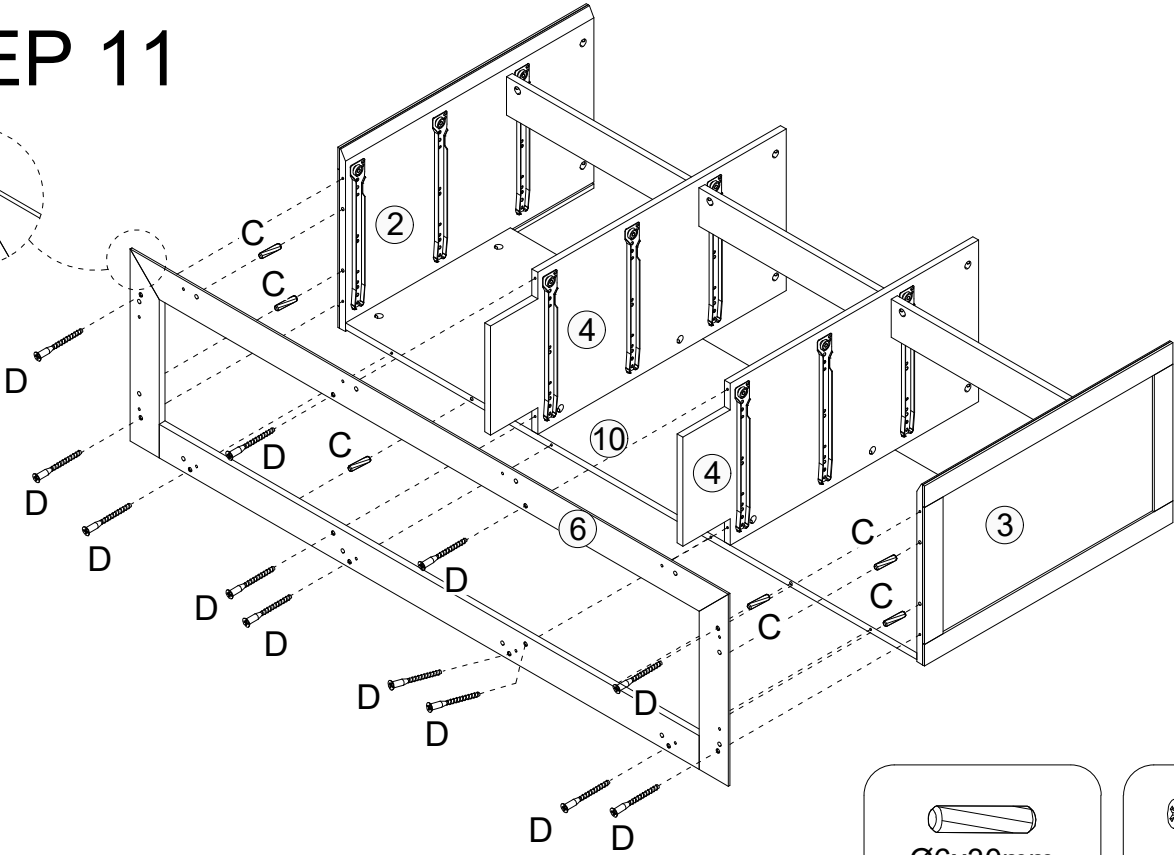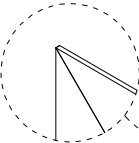


	
Ø6x30mm	
C	x 6

	
Ø5x38mm	
D	x 12


STEP 12

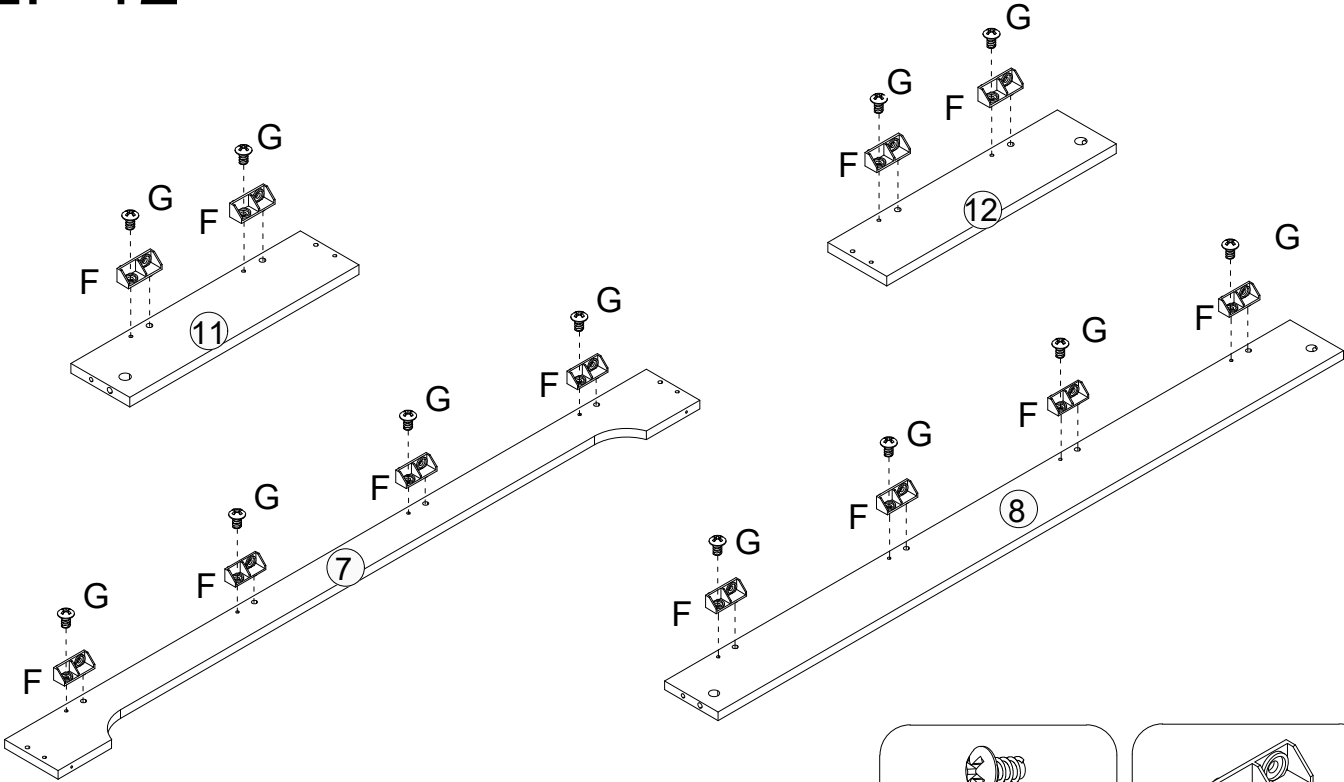


	
Ø6x12mm	
G	x 12

	
F	x 12





STEP 13

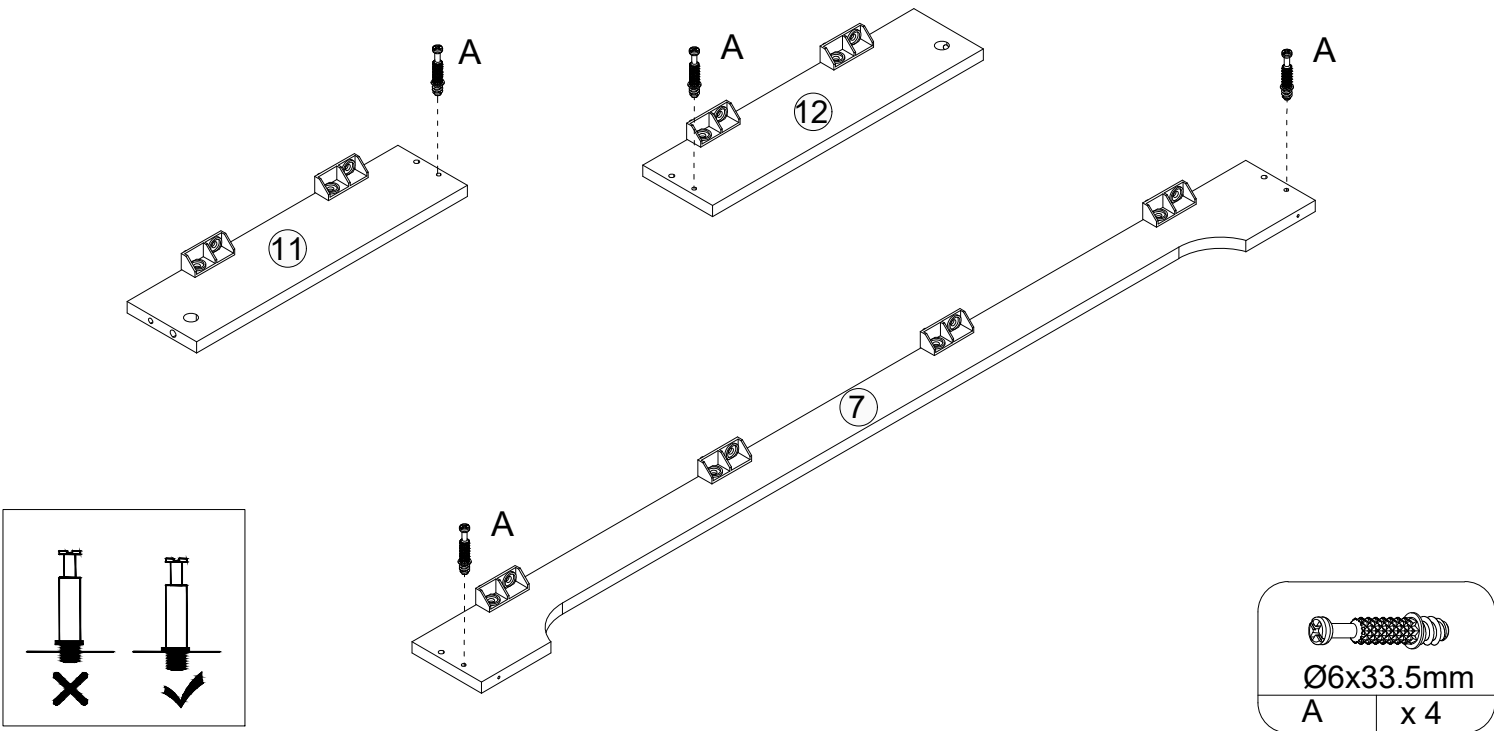



STEP 14

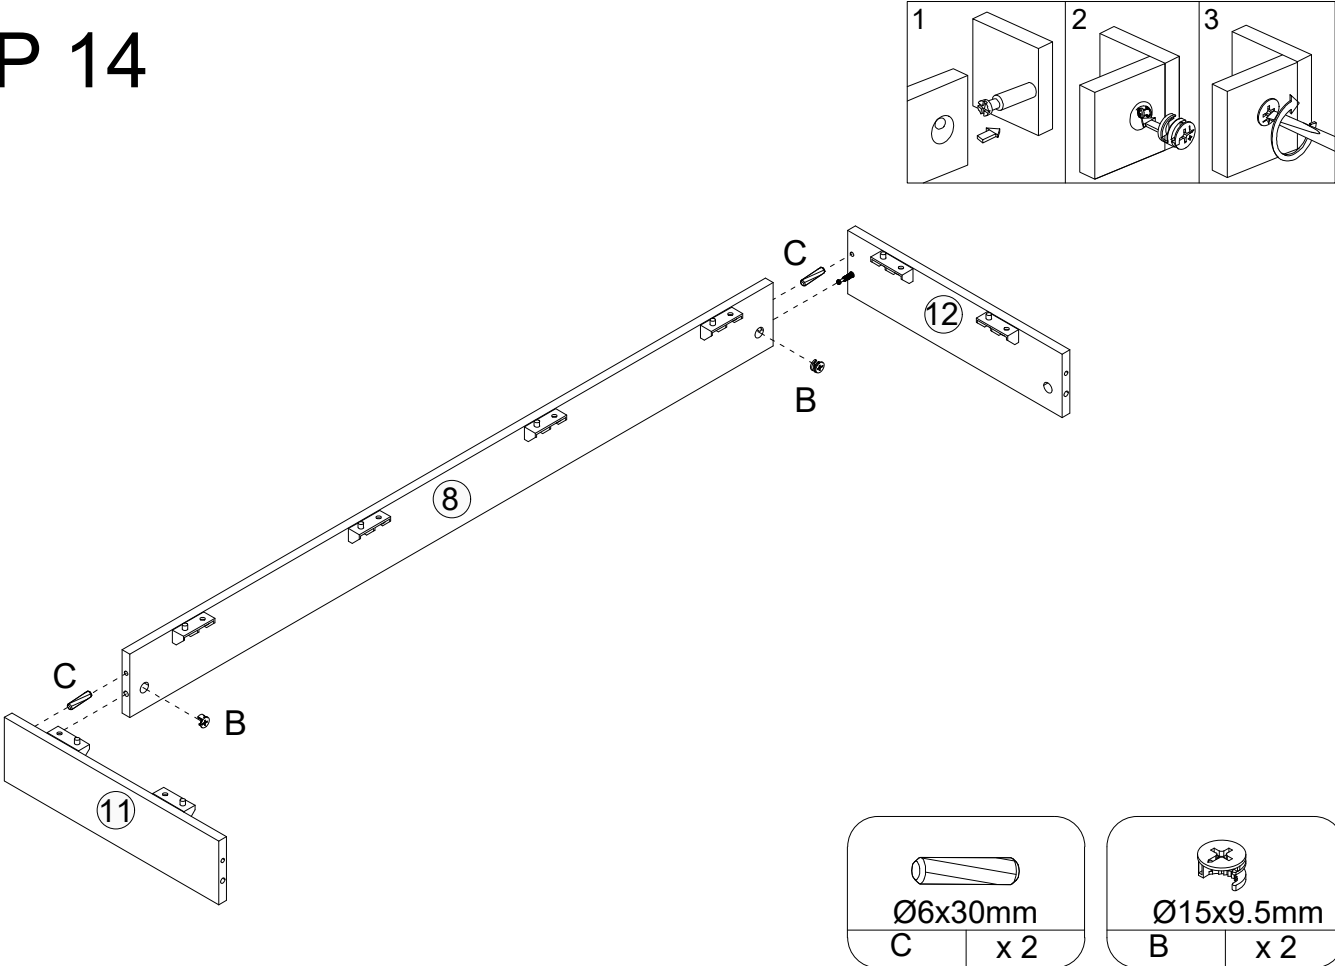


STEP 15

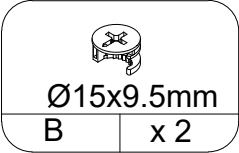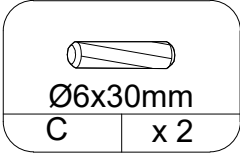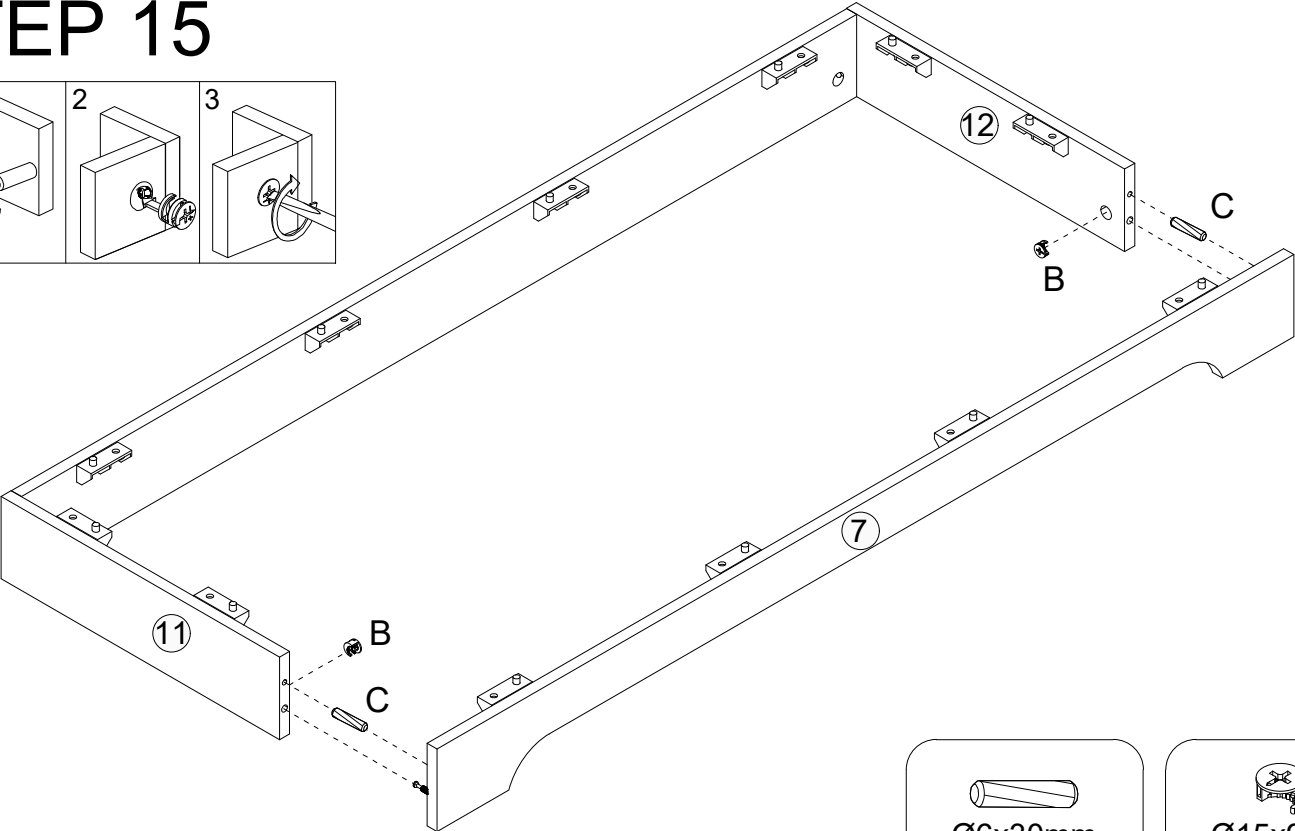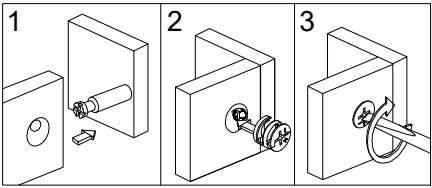


STEP 16

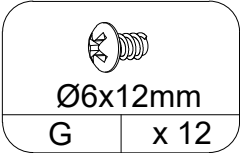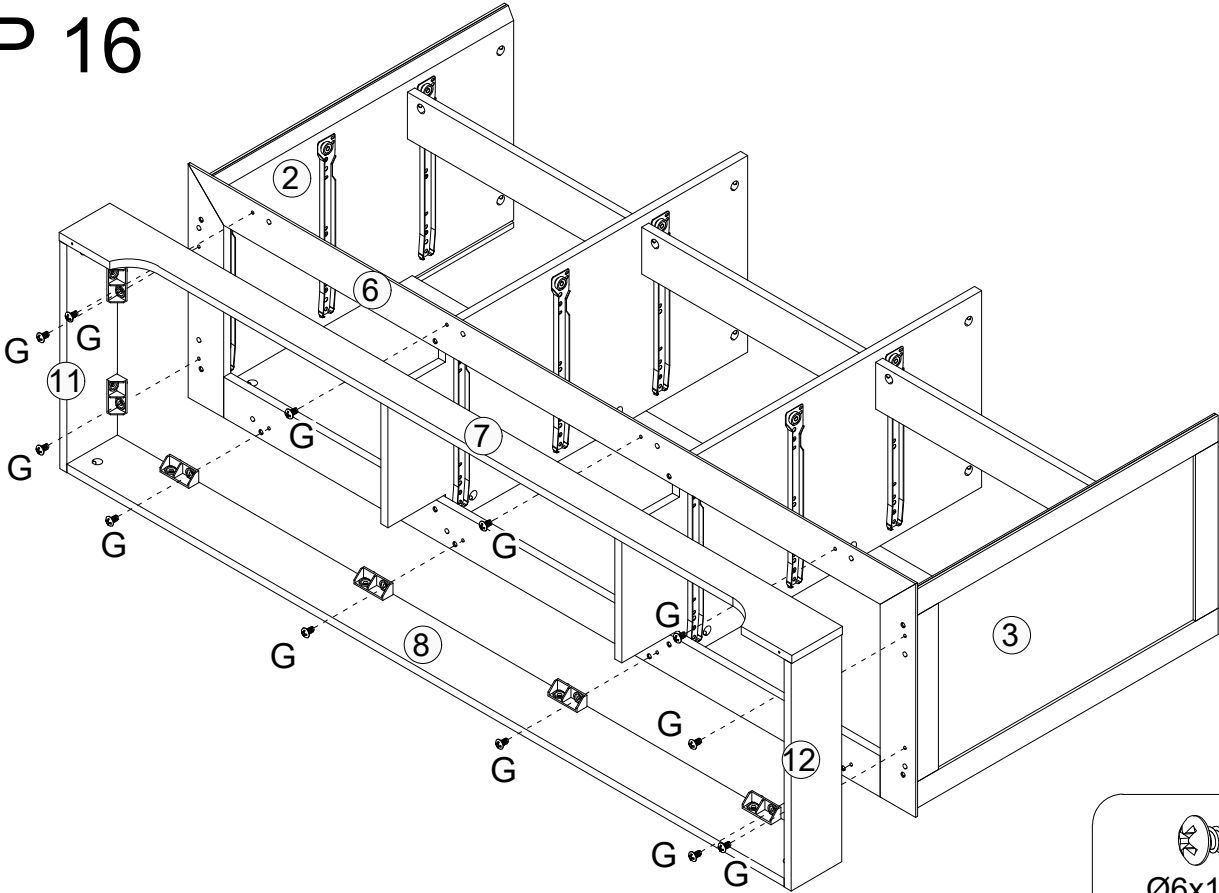


STEP 17

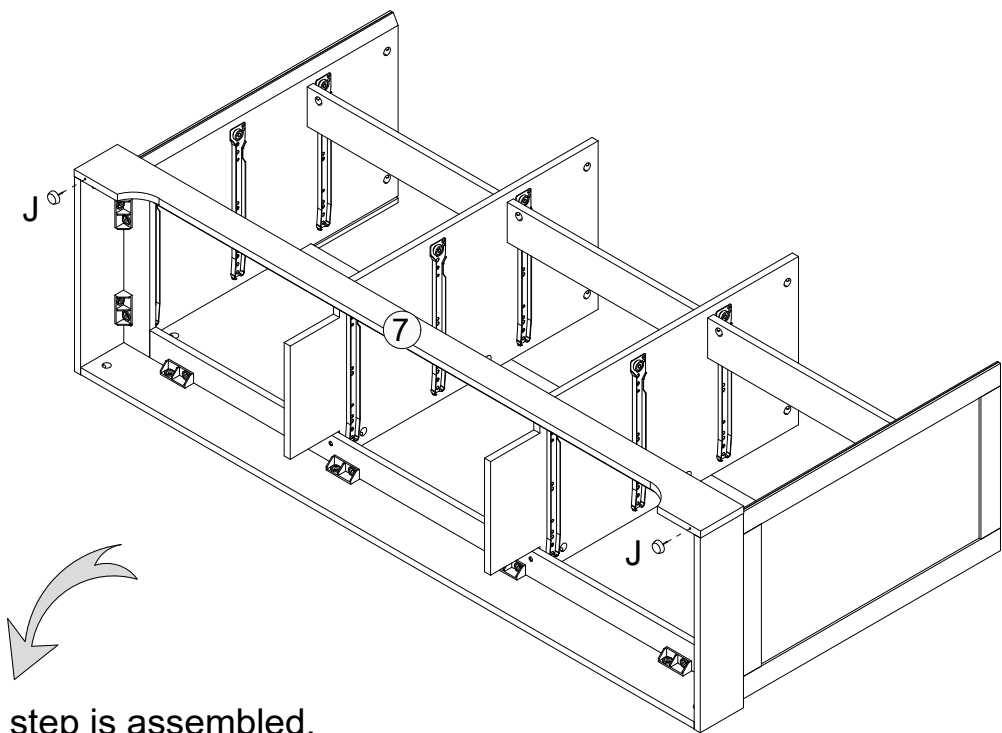




After this step is assembled,
flip it 90 degrees(to next step)

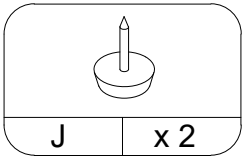

STEP 18



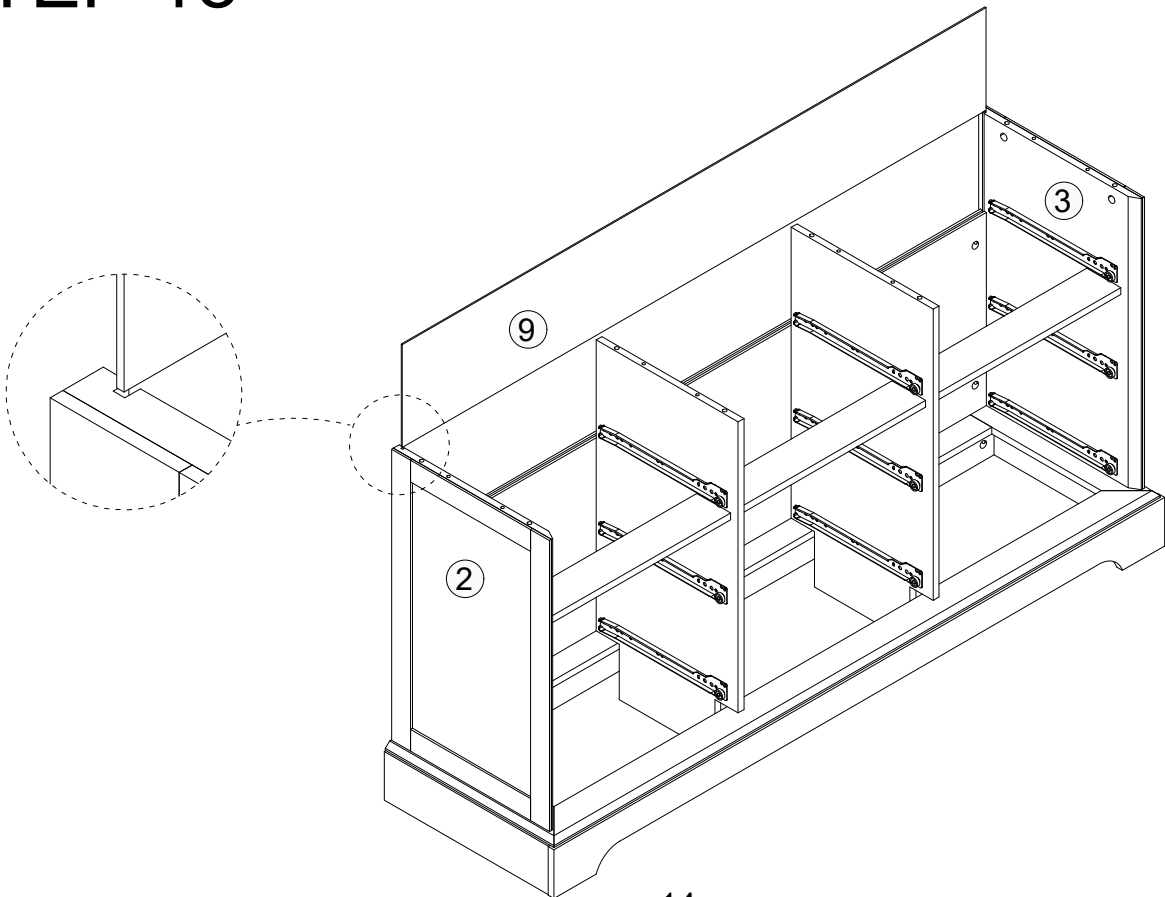


STEP 19

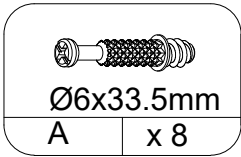
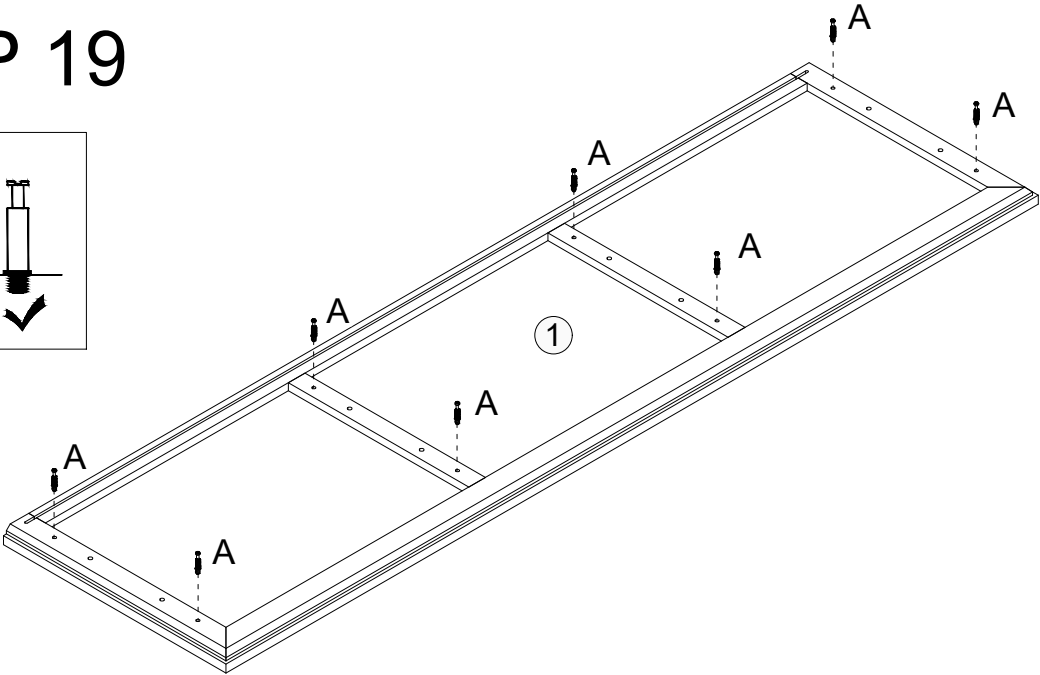
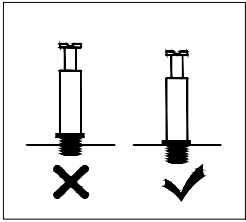


STEP 20




Back panel groove

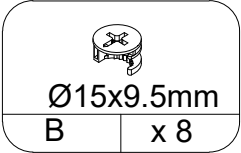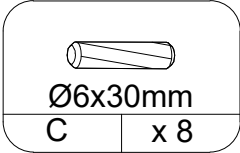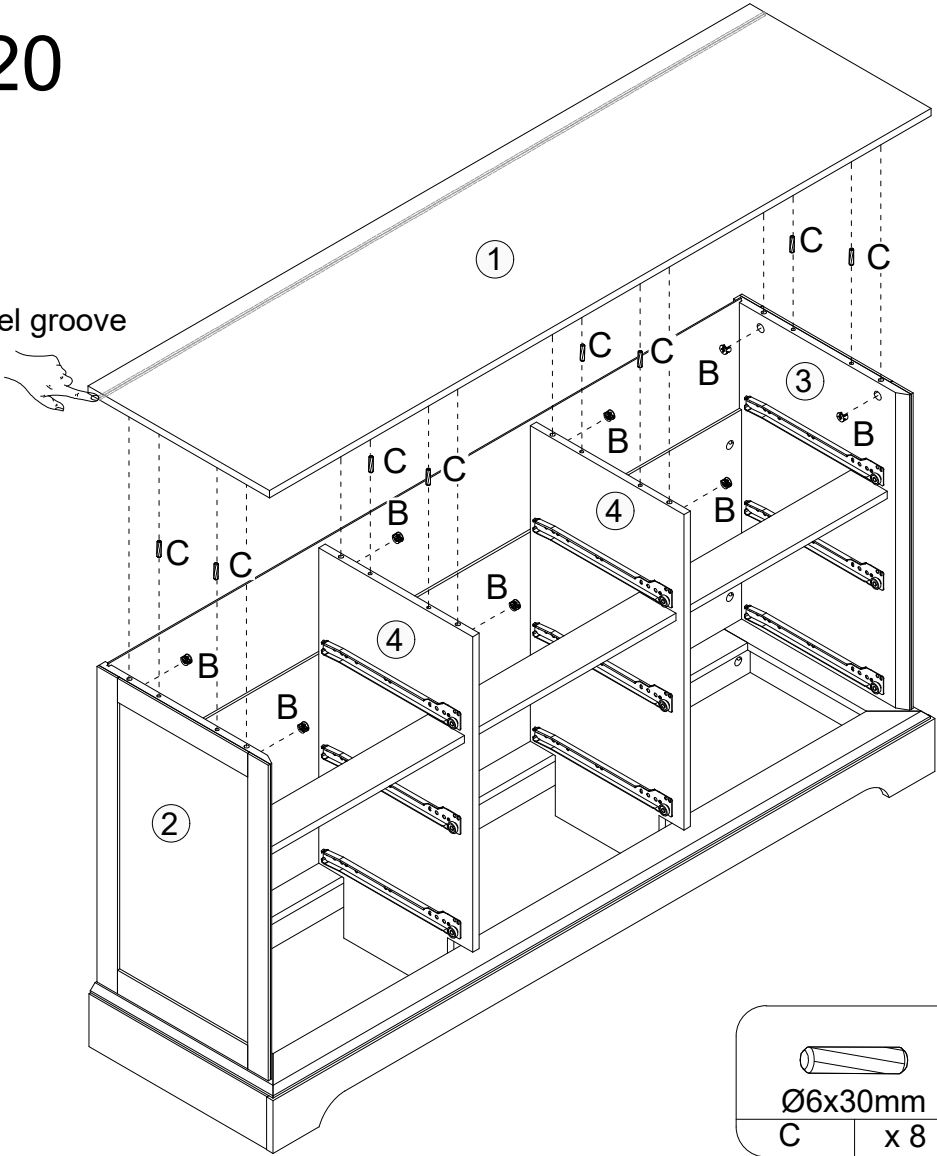


STEP 21

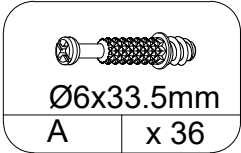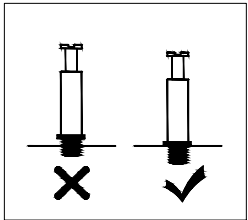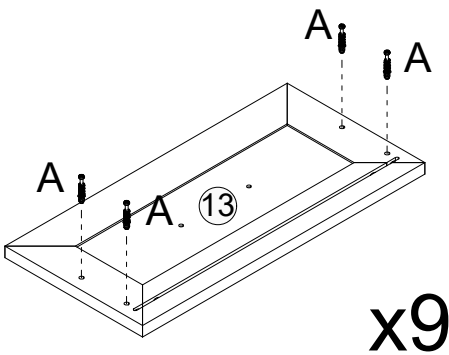




STEP 22

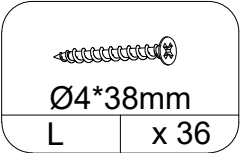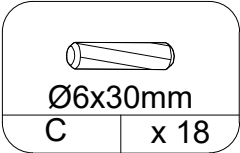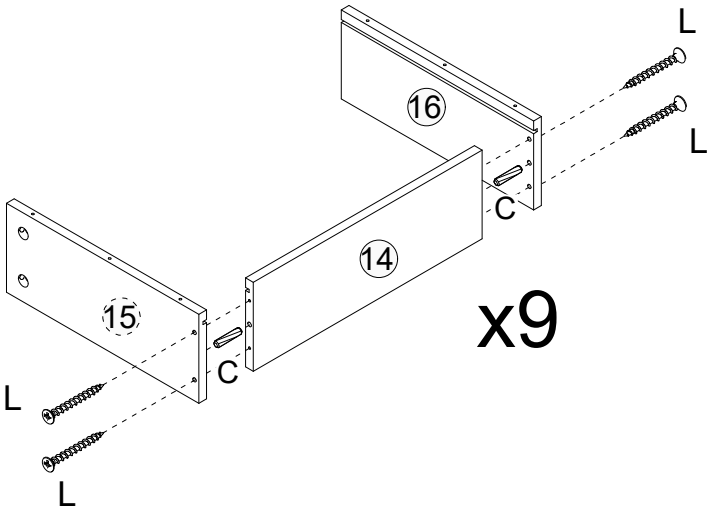


STEP 23

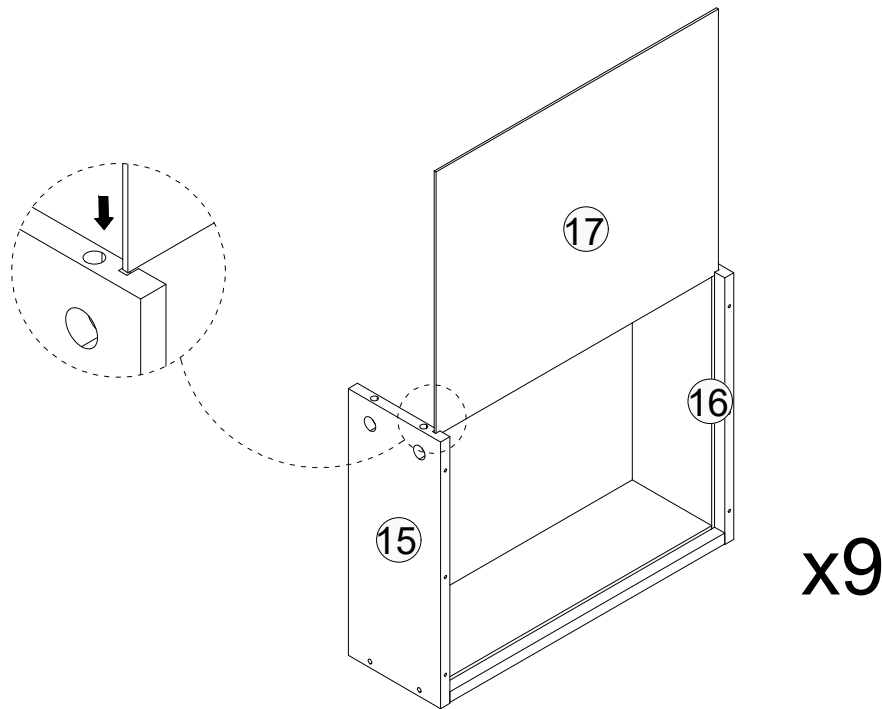



STEP 24

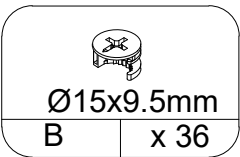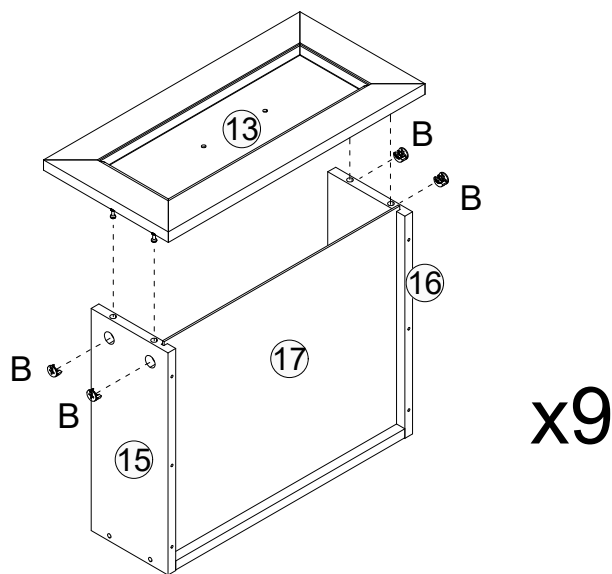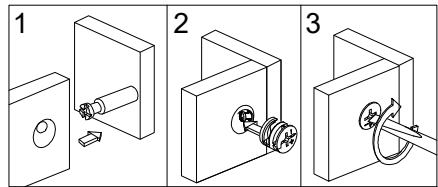


STEP25

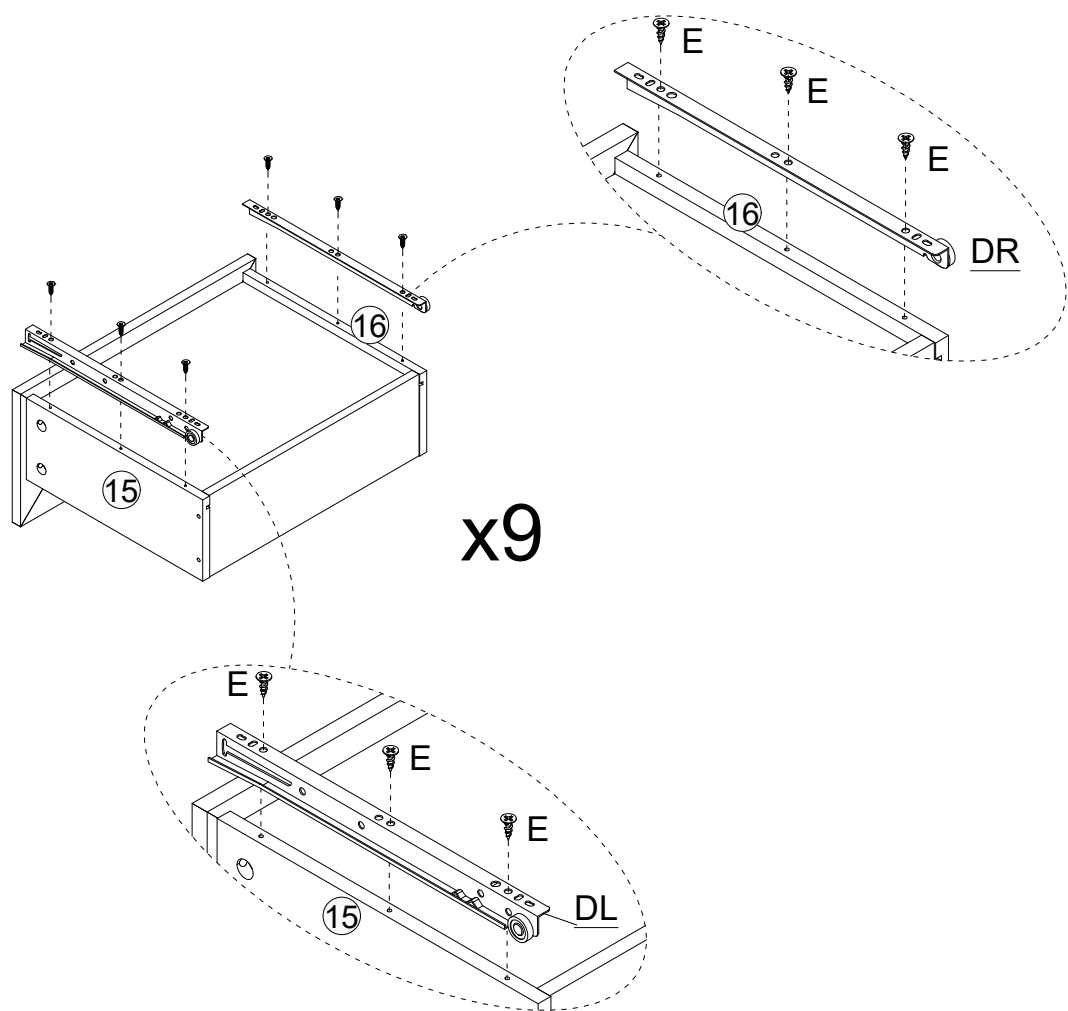


x9



 Ø3.5x12mm		 DR		 DL	
E	x 54	DR	x 9	DL	x 9

STEP26

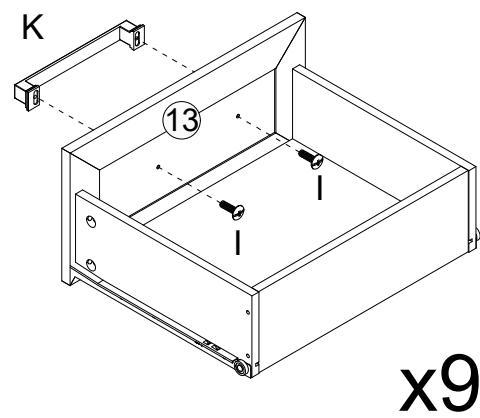


 M4x8mm			
I	x 18	K	x 9


STEP27

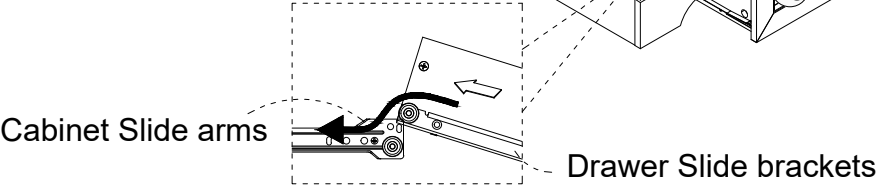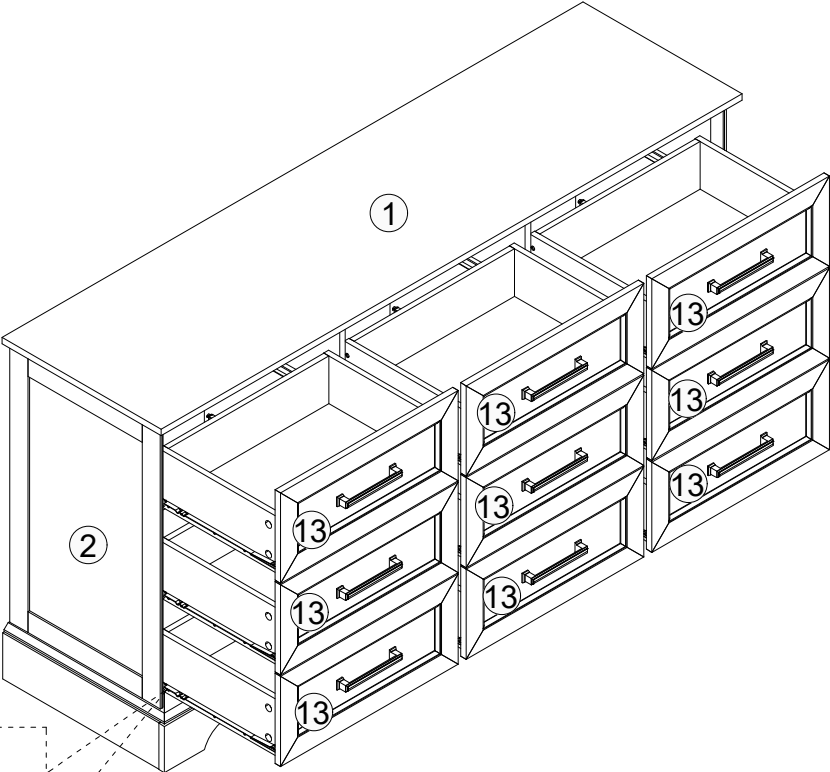



STEP 28

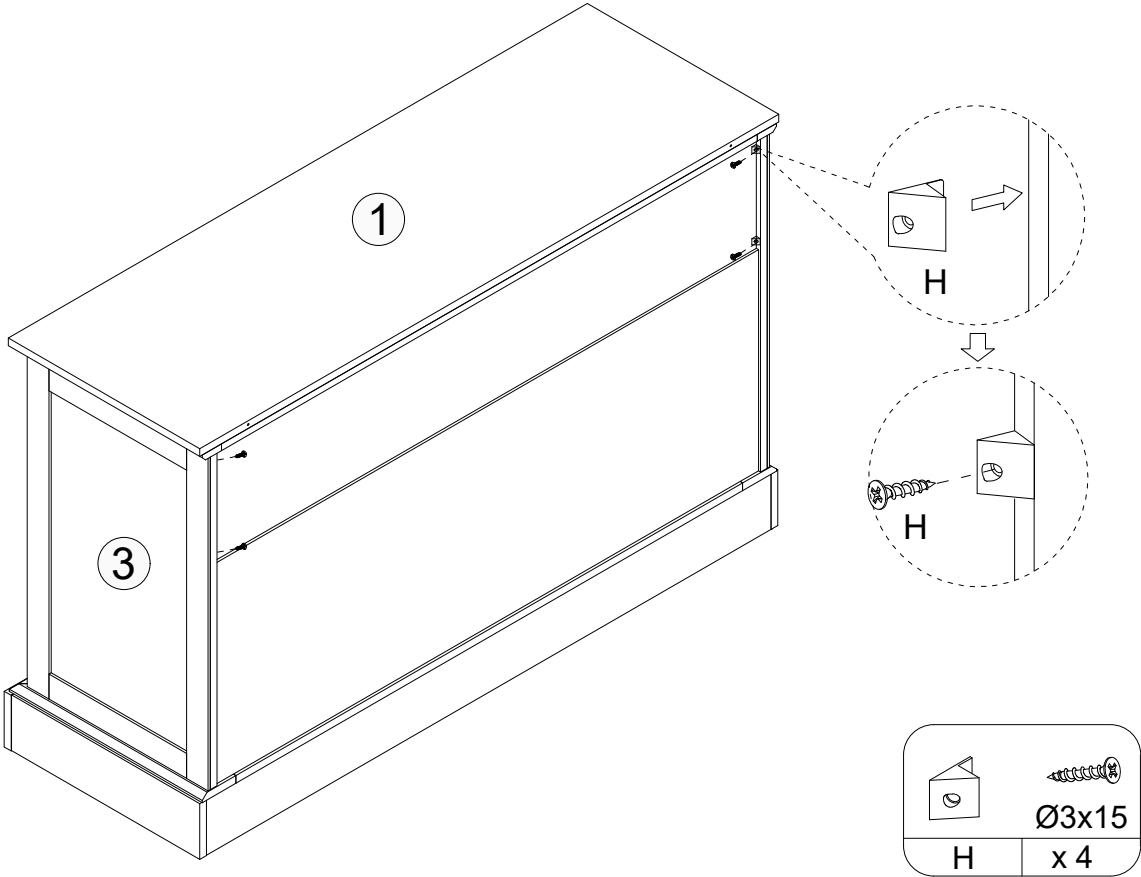

STEP 29

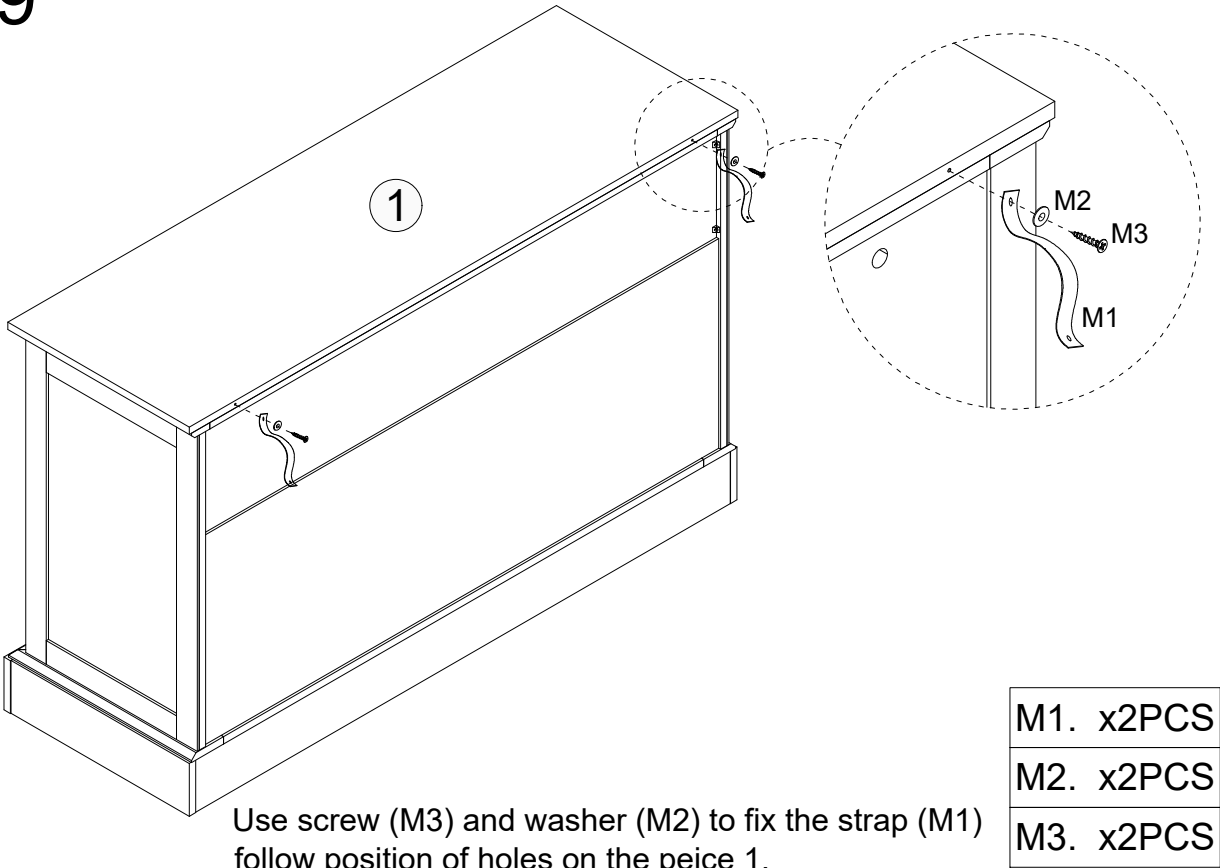

STEP 30

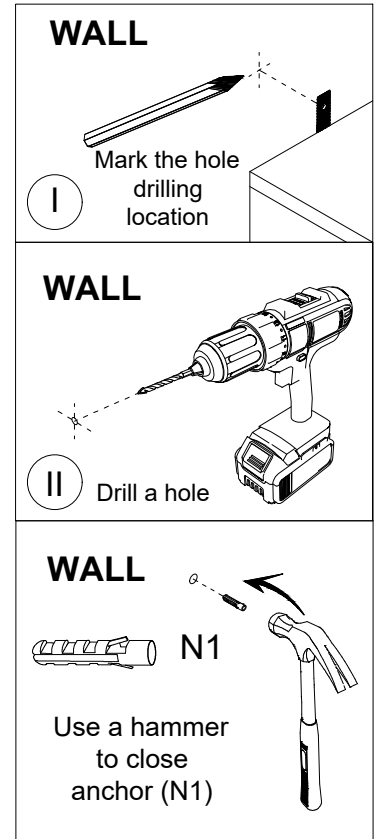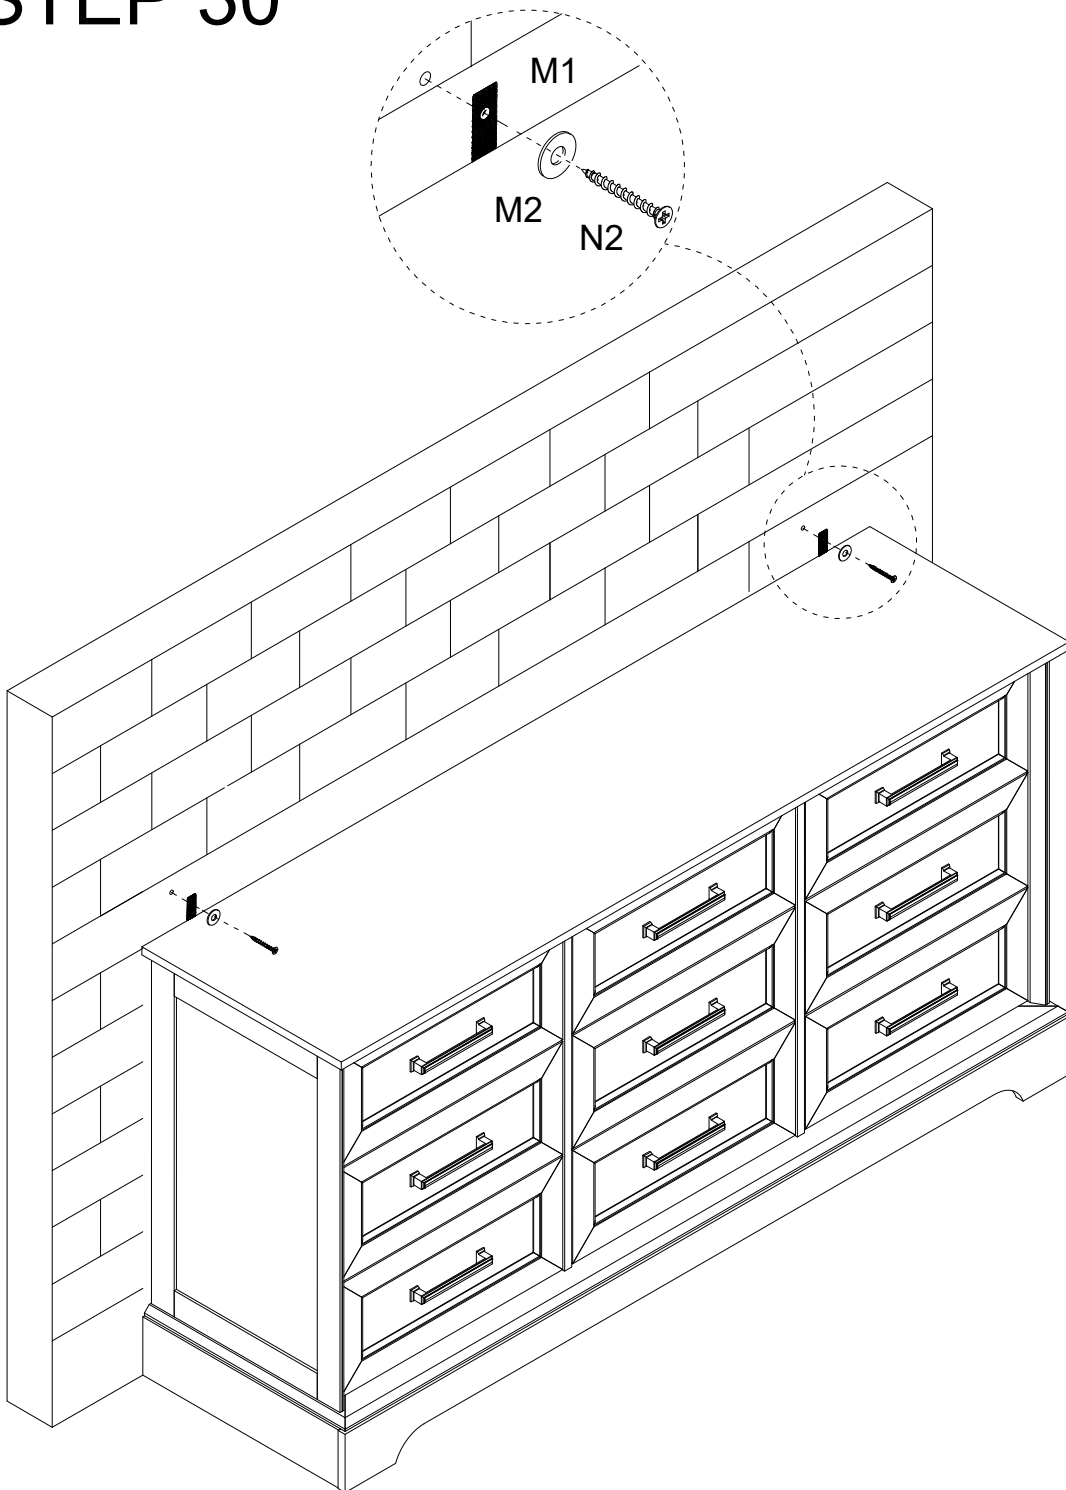

Step1: determine the location of the anti-overturning on the wall and then mark the position after confirming the product has been balanced.

Step 2: drill the hole and then fixed the anchor (N1) on the wall.

Step 3: use screw (N2) to fix the strap (M1), (M2) on the wall .

N1.	x2PCS
N2.	x2PCS
M2.	x2PCS

FURNITURE CARE AND MAINTENANCE

Medium - Density Fiberboard and Particle board

Thank you for your purchase. We want your item to last as long as possible. To ensure the product gives you years of service, please refer to this care and maintenance guide.



MAINTENANCE

- Tighten all bolts and screws again within the first 2 weeks of assembly
- Check the tightness of all bolts every 2 months, tighten them if necessary



CLEANING

- Clean the surface of the MDF (medium - density fiberboard) or PB (particle board) with a lightly dampened cloth.
- Small amount of mild soap can be used if necessary
- Dry the surface immediately after cleaning.

⚠ DO NOT use bleach or alcohol detergent to clean the surface.

⚠ DO NOT apply wood treatment on parts made with MDF and PB.

Medium - density fiberboard and Particle board will swell and distort when suffer from water damage.

Make sure to dry the furniture immediately after cleaning