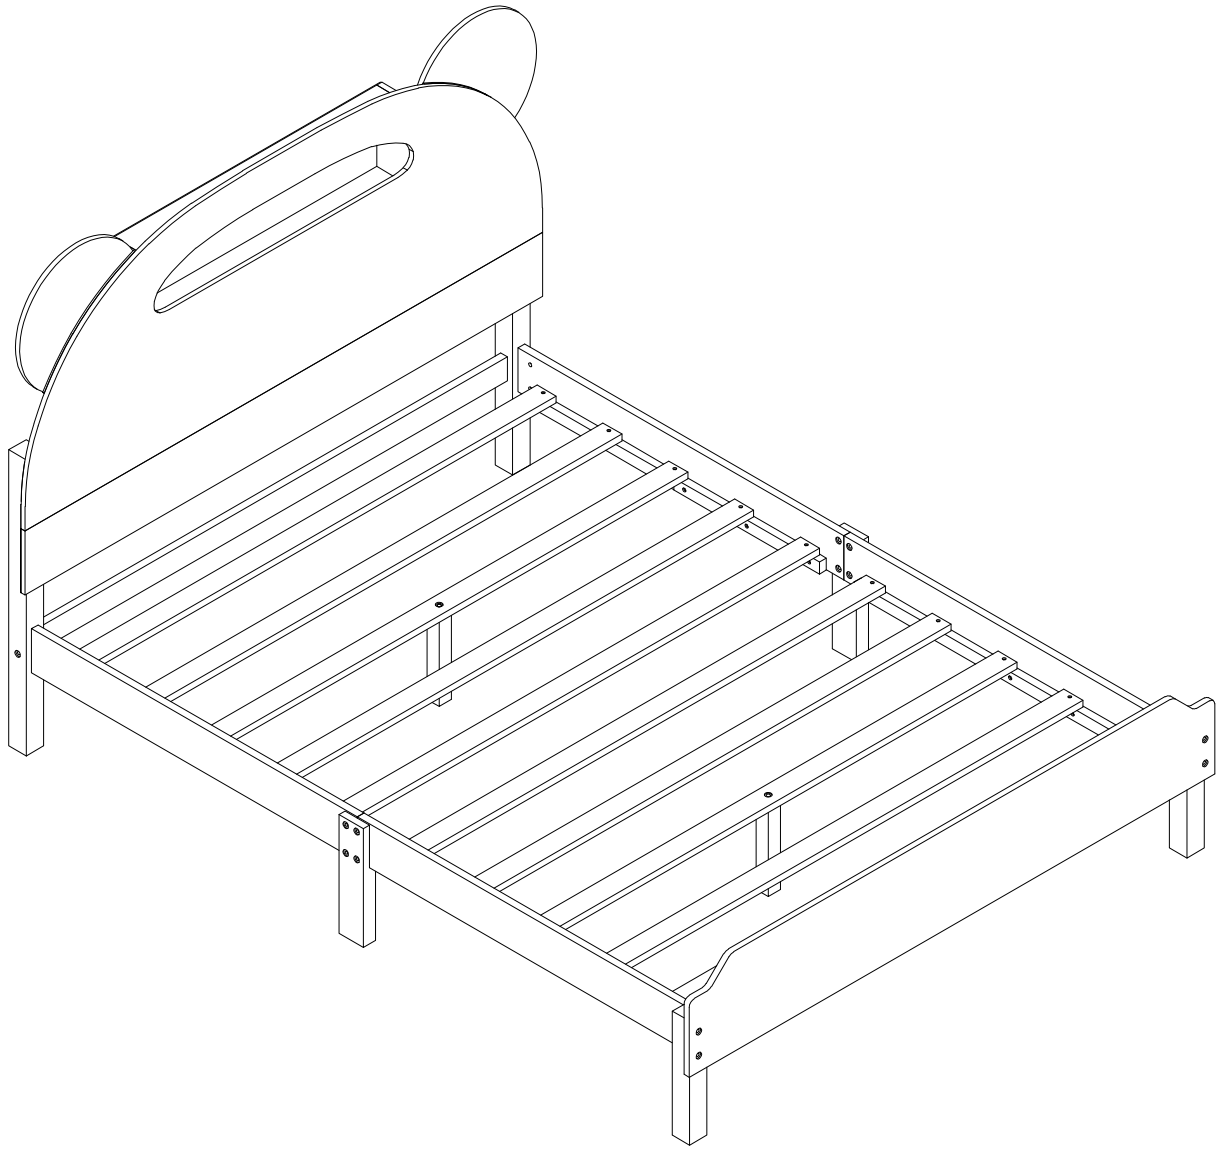
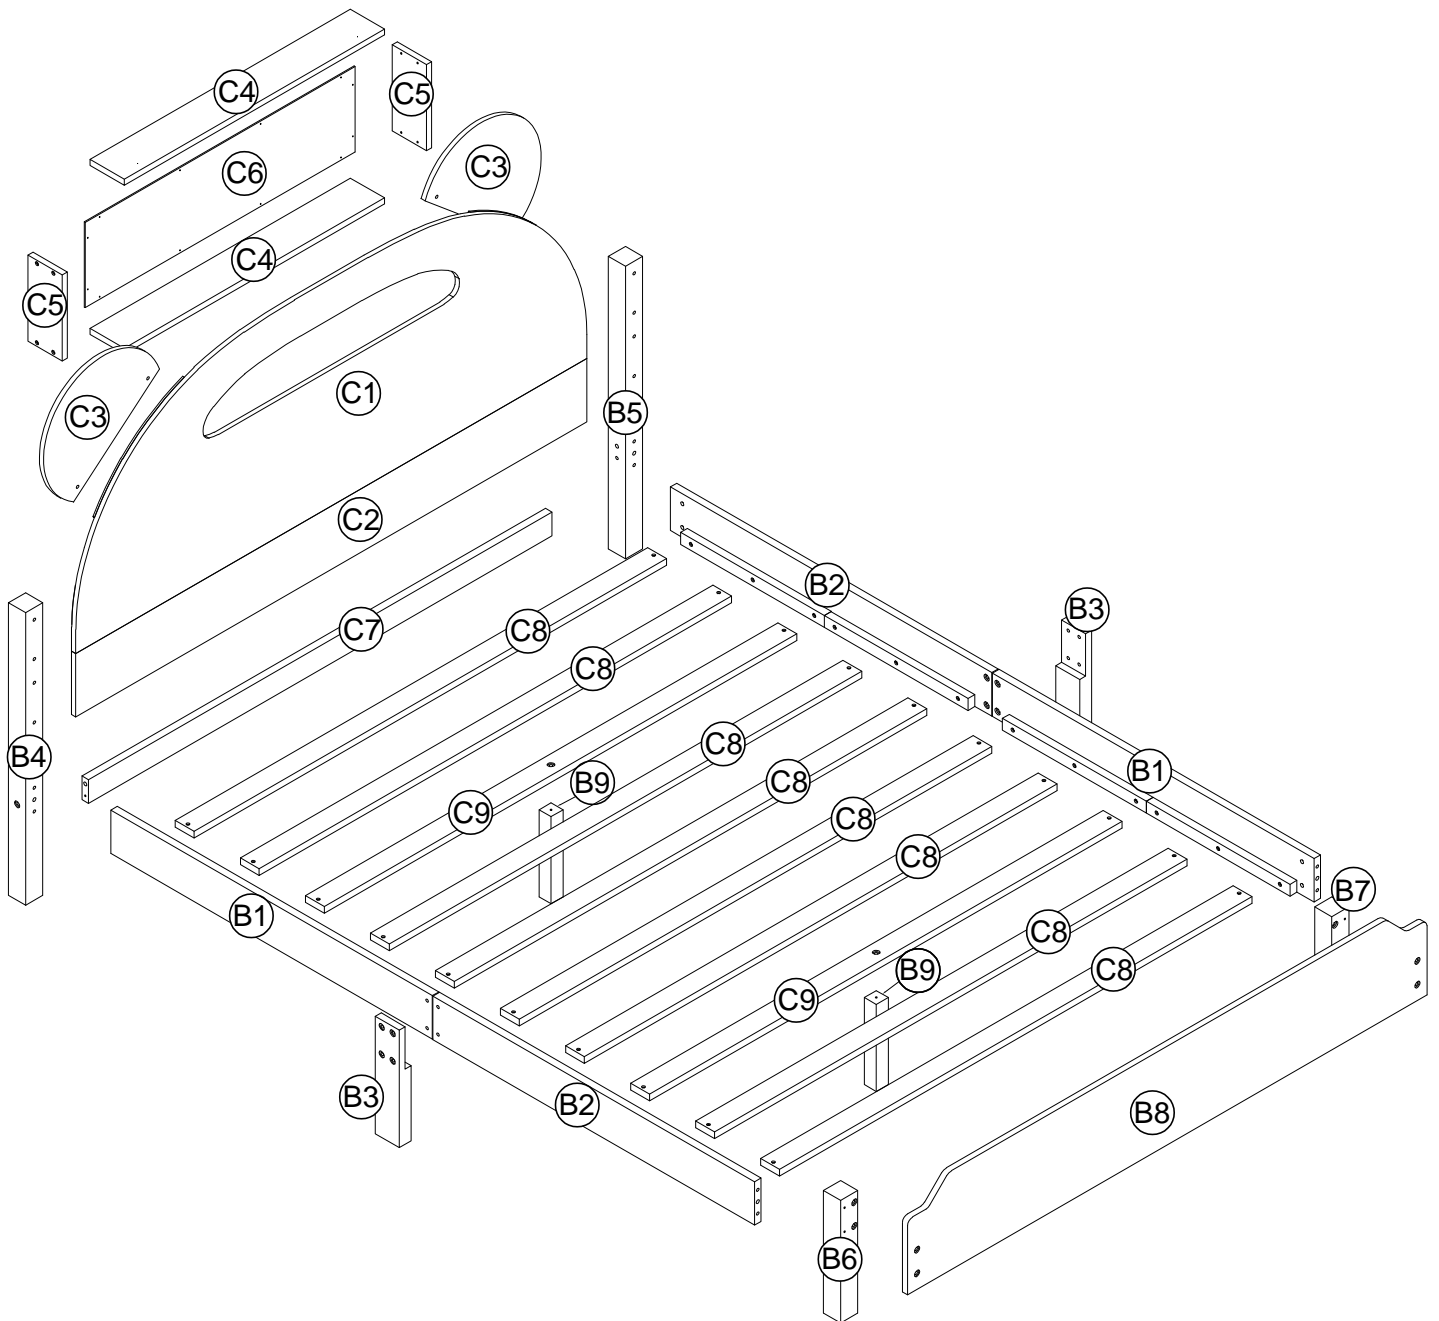


# ASSEMBLY INSTRUCTION

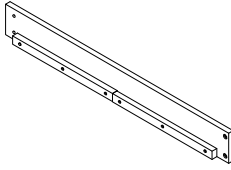
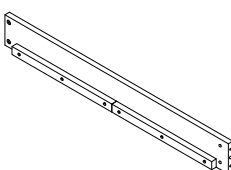





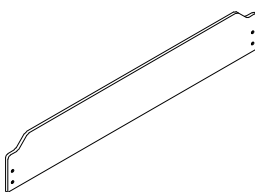

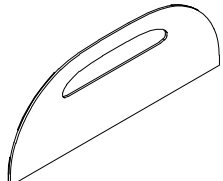
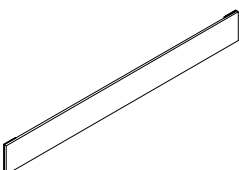

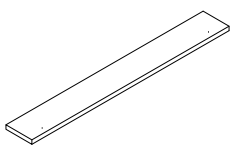

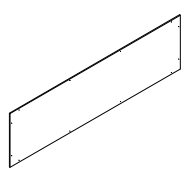
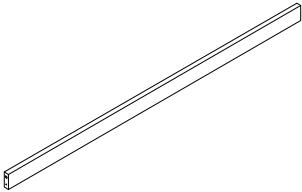
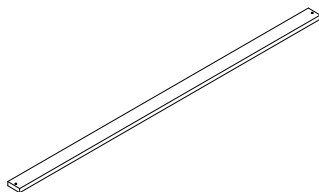
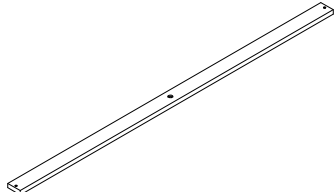
SKU CODE: (WF307730)

















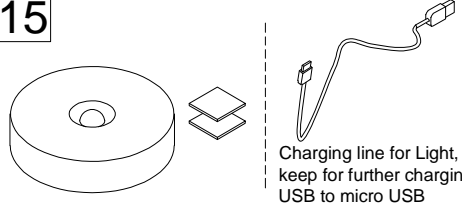
# ASSEMBLY INSTRUCTION




# Part List & Hardware List (WF307730)

<p><b>B1</b></p>  <p>Side Rail-2pcs</p>	<p><b>B2</b></p>  <p>Side Rail-2pcs</p>	<p><b>B3</b></p>  <p>Support Siderail-2pcs</p>
<p><b>B4</b></p>  <p>Leg- 1pc</p>	<p><b>B5</b></p>  <p>Leg- 1pc</p>	<p><b>B6</b></p>  <p>Leg- 1pc</p>
<p><b>B7</b></p>  <p>Leg- 1pc</p>	<p><b>B8</b></p>  <p>Headboard Panel-1pc</p>	<p><b>B9</b></p>  <p>WoodBar-2pcs</p>
<p><b>C1</b></p>  <p>Top Panel-1pc</p>	<p><b>C2</b></p>  <p>Bottom Panel-1pc</p>	<p><b>C3</b></p>  <p>Panel-2pcs</p>
<p><b>C4</b></p>  <p>Panel-2pcs</p>	<p><b>C5</b></p>  <p>Panel-2pcs</p>	<p><b>C6</b></p>  <p>Back panel-1pc</p>
<p><b>C7</b></p>  <p>Side Rail-1pc</p>	<p><b>C8</b></p>  <p>Slats-8pcs</p>	<p><b>C9</b></p>  <p>Slats-2pcs</p>



# Hardware List (WF307730)

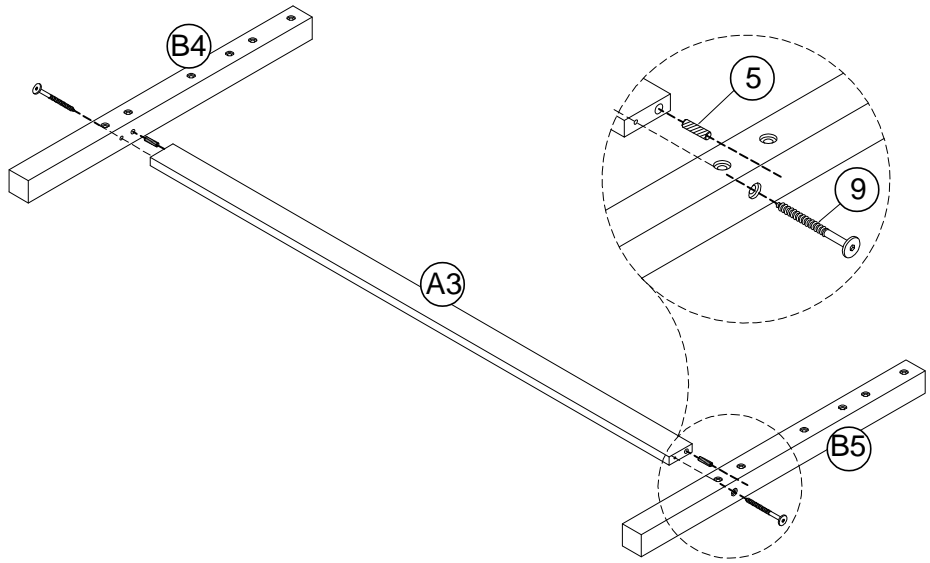
<p><b>1</b></p>  <p>Ø1/4" x 80 mm Hex-Head bolts 8pcs</p>	<p><b>2</b></p>  <p>Ø1/4" x 50 mm Hex-Head bolts 8 pcs</p>	<p><b>3</b></p>  <p>Ø1/4" x 30 mm Hex-Head bolts 2 pcs</p>
<p><b>4</b></p>  <p>Ø1/4" x 25 mm Hex-Head bolts 12 pcs</p>	<p><b>5</b></p>  <p>Ø10 x 40 mm Wood dowel 8pcs</p>	<p><b>6</b></p>  <p>Allen Key 1pc</p>
<p><b>7</b></p>  <p>Ø1/4" x 13 mm Horizontal-Hole bolts 8pcs</p>	<p><b>8</b></p>  <p>Screws 1/4" x40 4pcs</p>	<p><b>9</b></p>  <p>Screws 1/4" x80 2pcs</p>
<p><b>10</b></p>  <p>Ø1/4" x 15 mm Canopy head though -8pcs</p>	<p><b>11</b></p>  <p>M3 x 12 mm Wood Screws 8pcs</p>	<p><b>12</b></p>  <p>M3 x 15 mm Wood Screws 12 pcs</p>
<p><b>13</b></p>  <p>M4 x 30 mm Wood Screws 28 pcs</p>	<p><b>14</b></p>  <p>4 pcs</p>	<p><b>15</b></p>  <p>Led Light 1 pc</p> <p>Charging line for Light, keep for further charging, USB to micro USB</p>





**Assembly Tools Required (Not Included)**

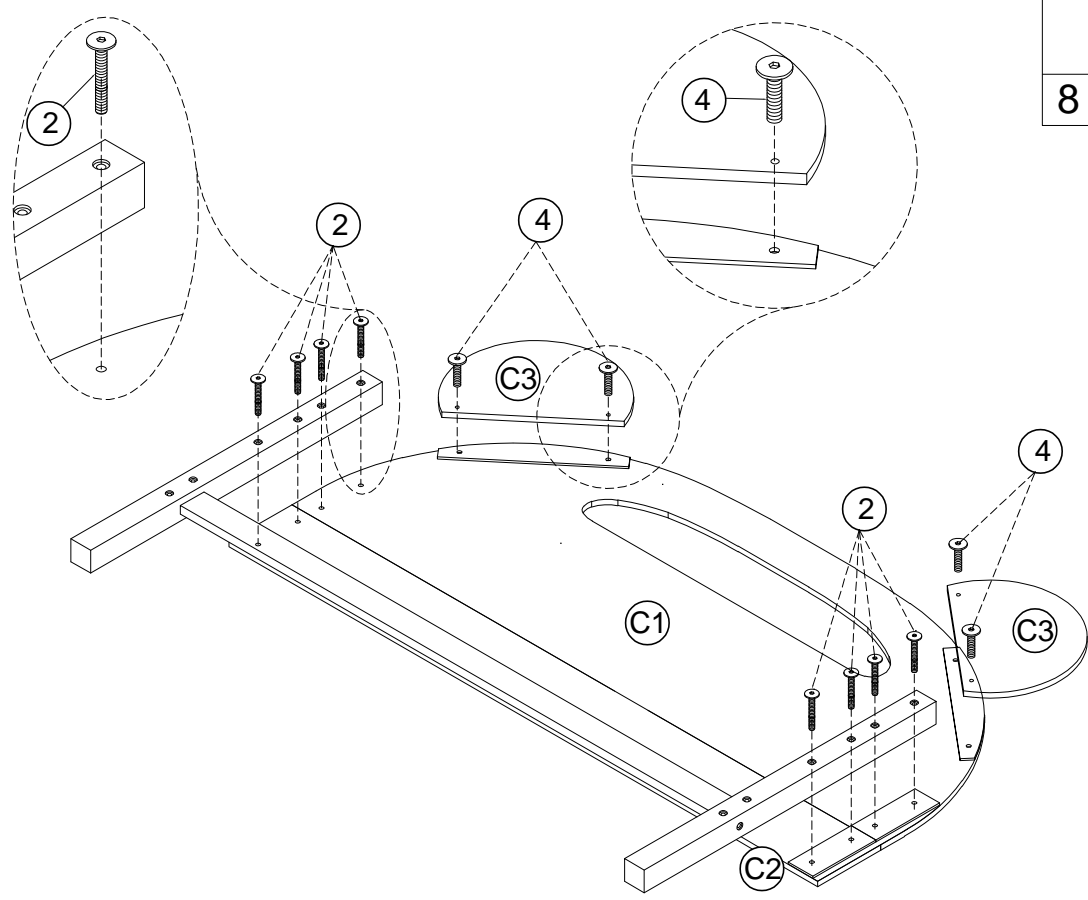
# STEP 1: Following below illustration.

5		9	
2 pcs		2 pcs	

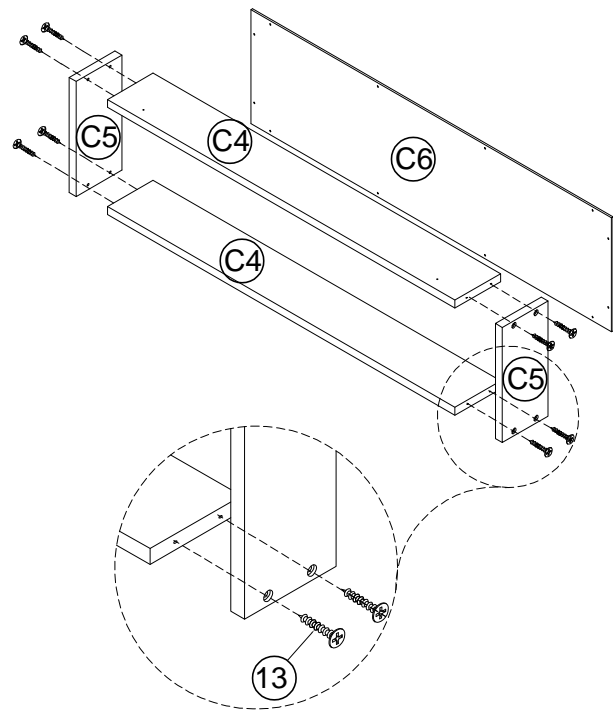


# STEP 2: Following below illustration.

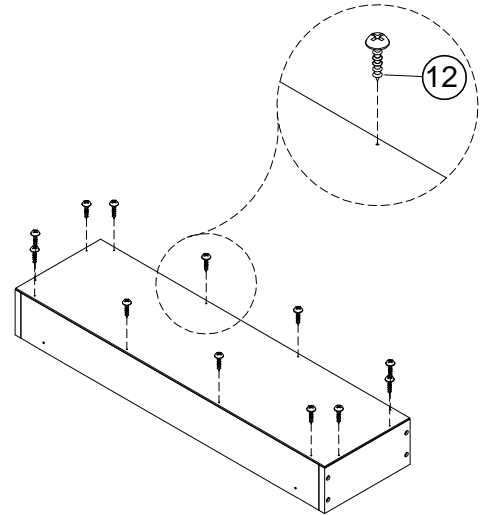
2		4	
8 pcs		4 pcs	



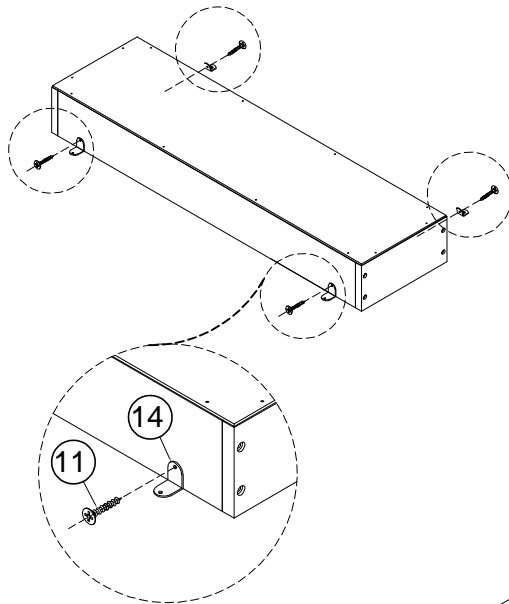
**STEP 3:** Following below illustration.



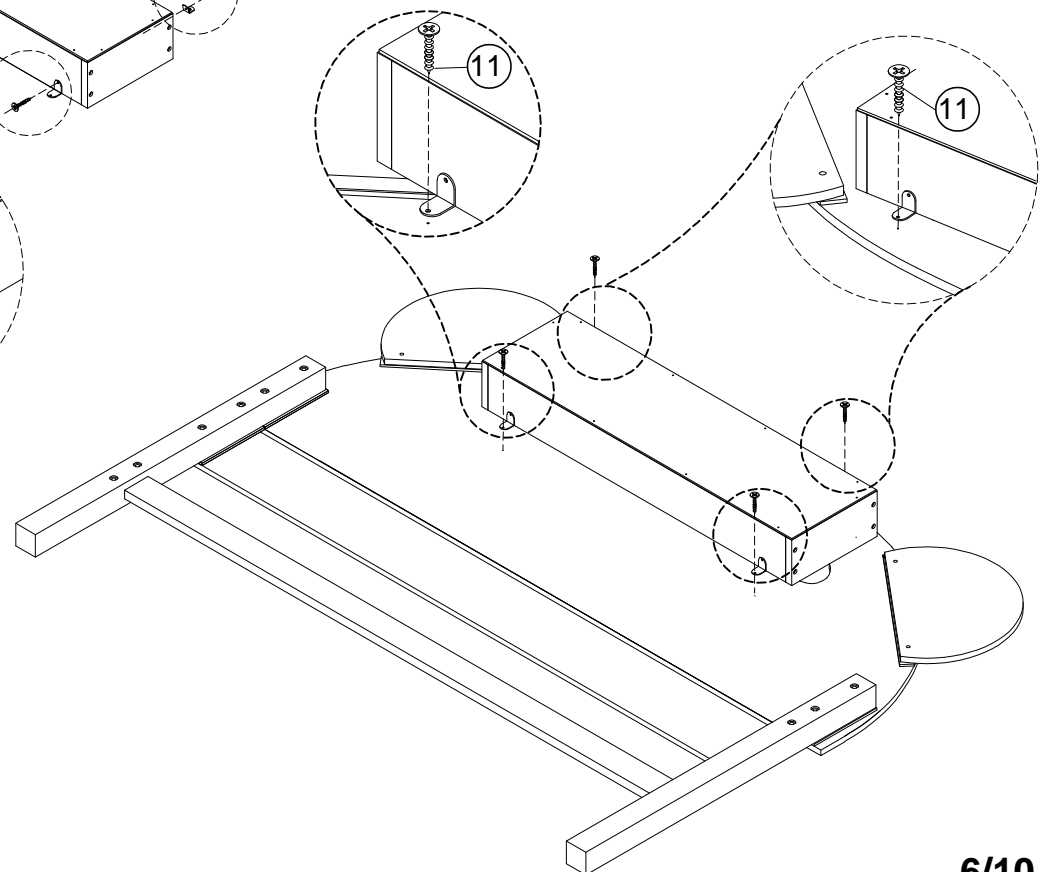
12	13
12 pcs	8 pcs



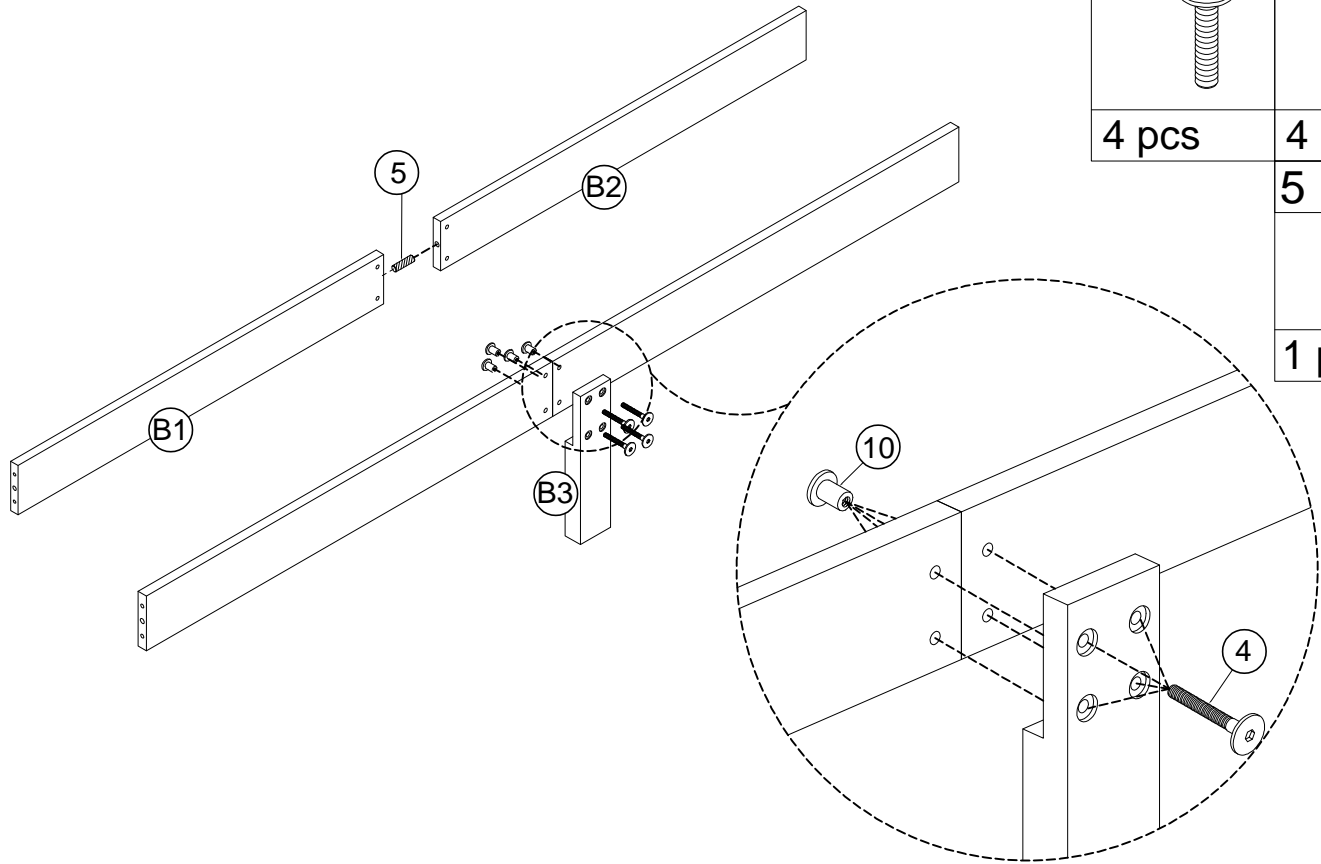
**STEP 4:** Following below illustration.






11	14
8 pcs	4 pcs

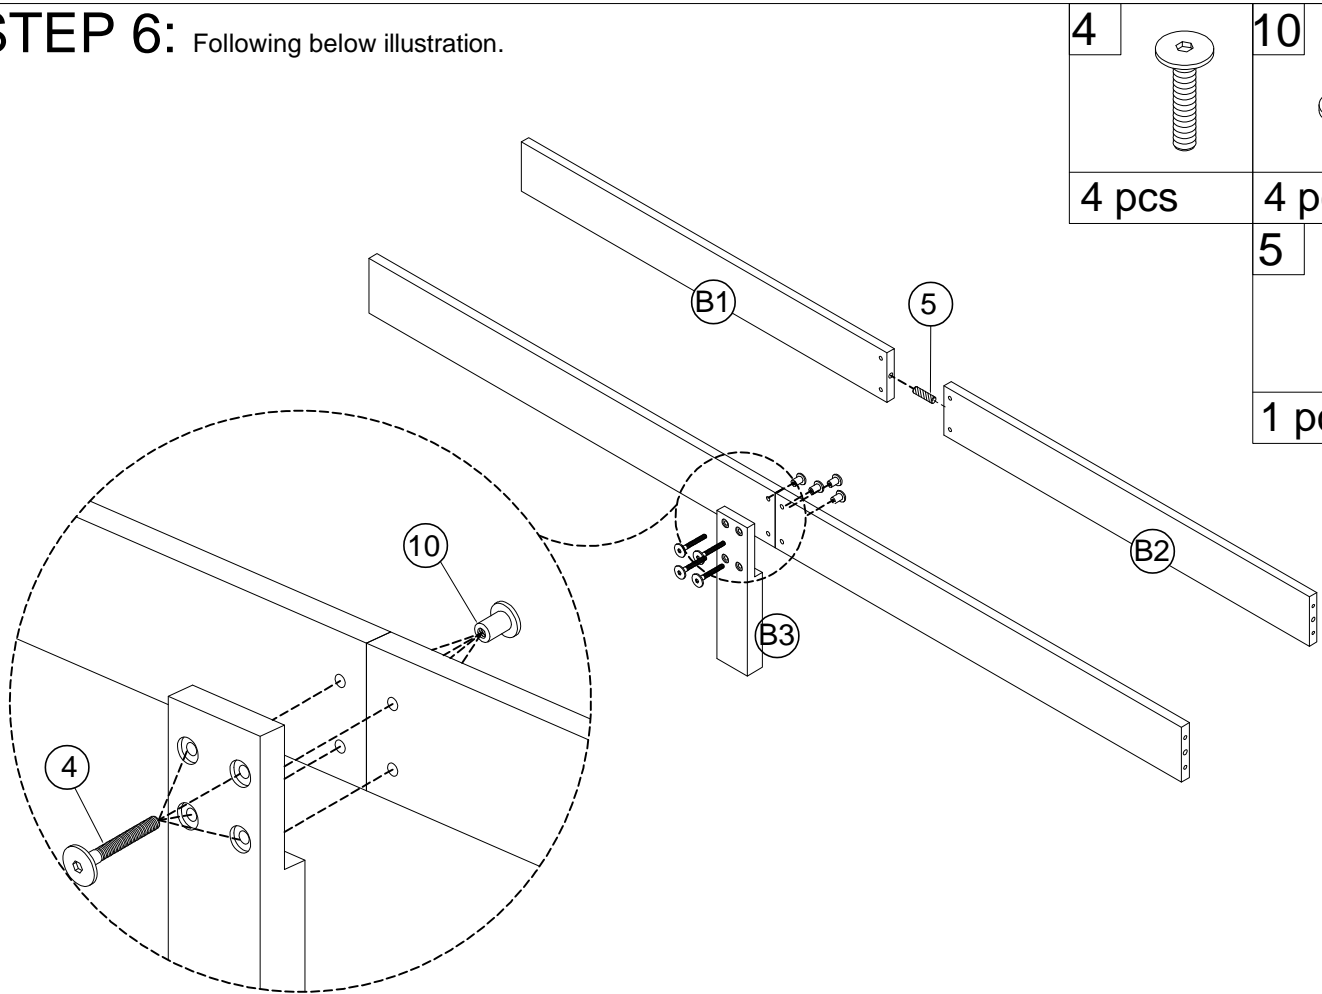





**STEP 5:** Following below illustration.






4		10	
4 pcs		4 pcs	
		5	
		1 pc	

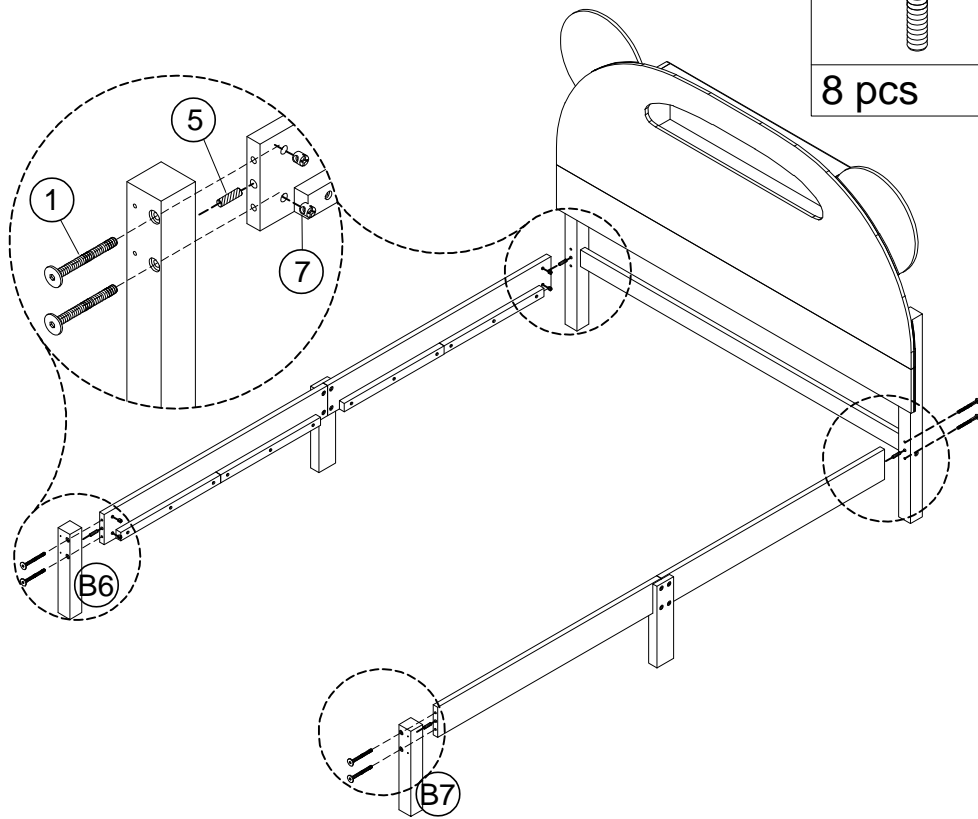
**STEP 6:** Following below illustration.




4		10	
4 pcs		4 pcs	
		5	
		1 pc	

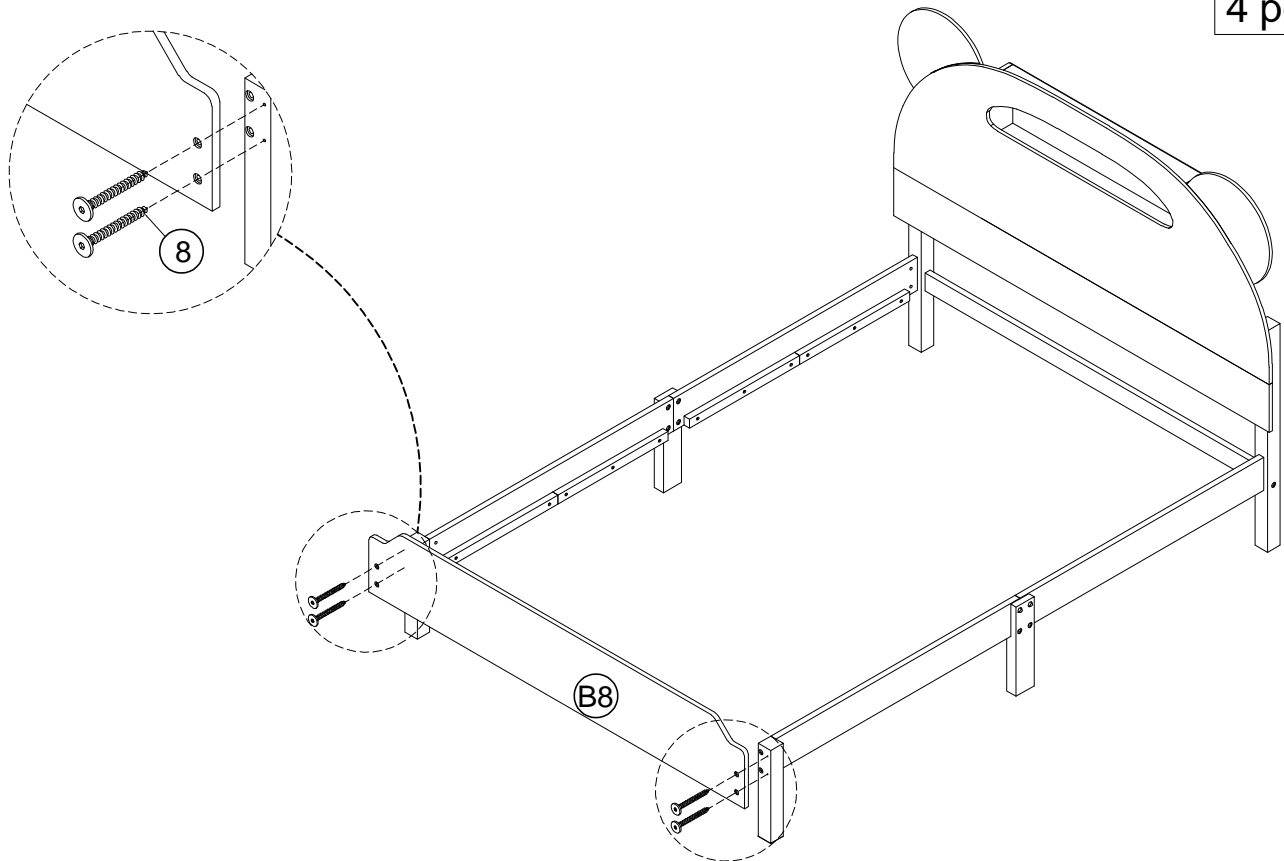
# STEP 7: Following below illustration.

1		7		5	
8 pcs		8 pcs		4 pcs	



# STEP 8: Following below illustration.

8	
4 pcs	




# STEP 9: Following below illustration.

13

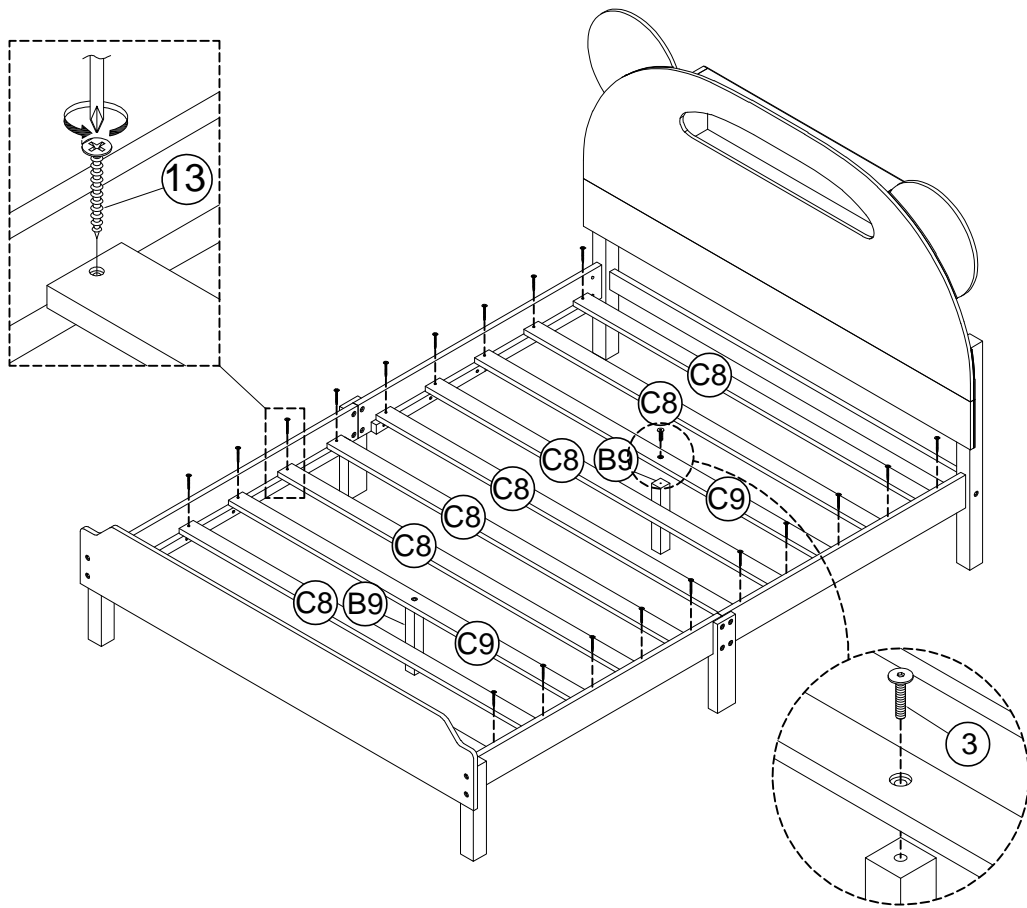


20 pcs

3




2 pcs



# STEP 10: Following below illustration.

15



1 pc

