

















ASSEMBLY INSTRUCTIONS



24" VANITY

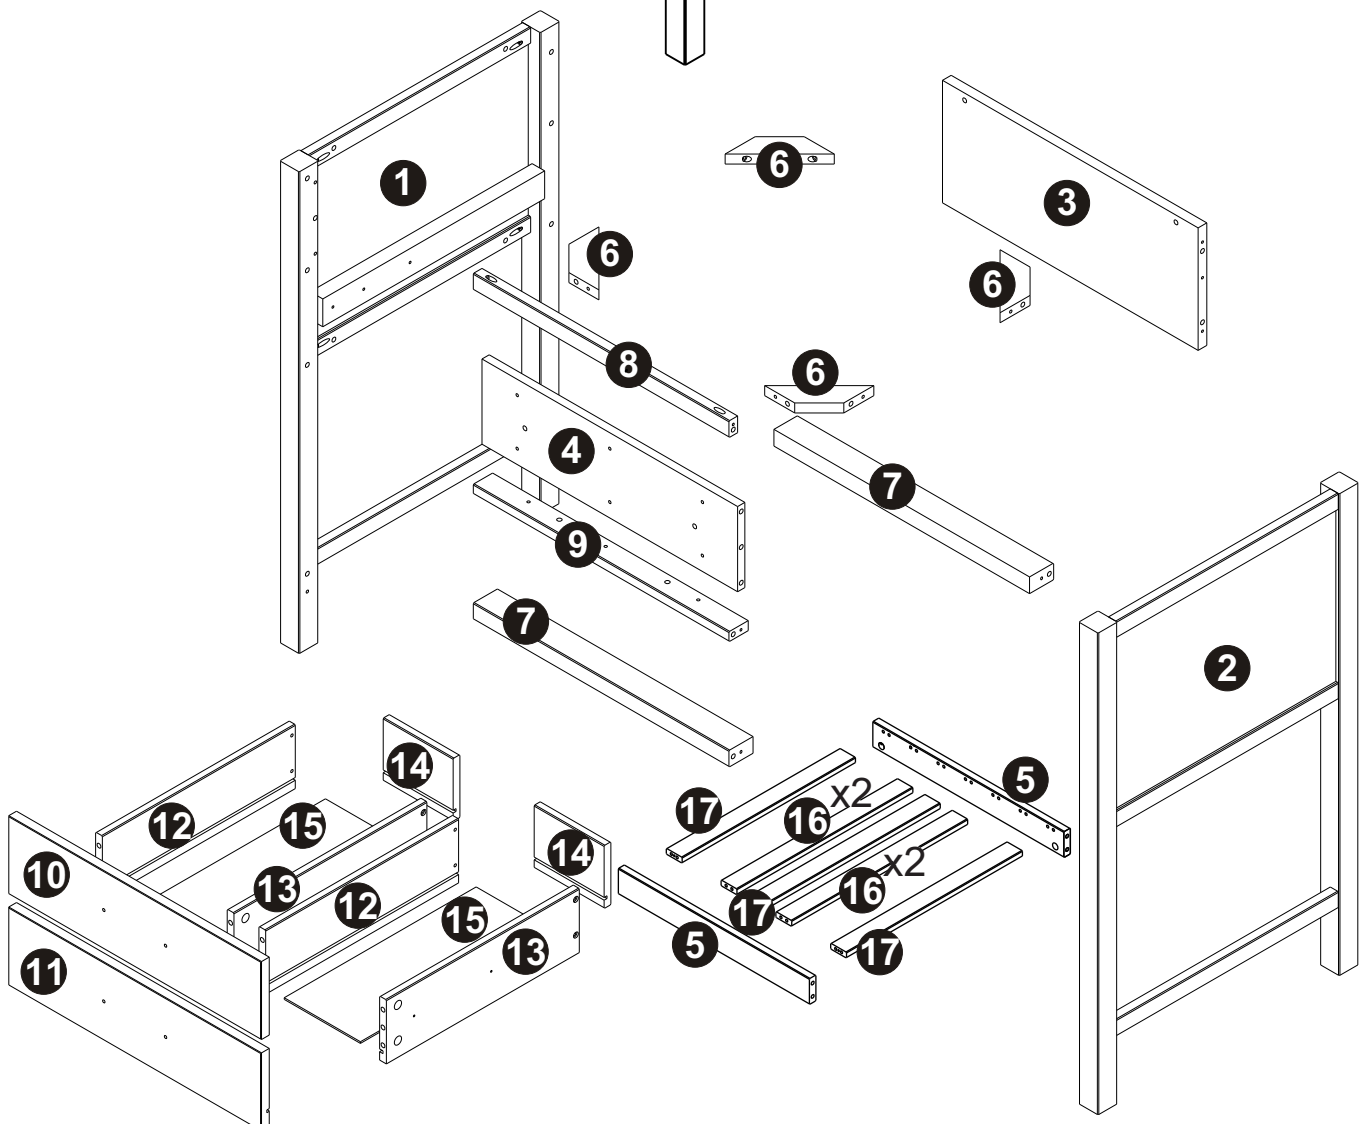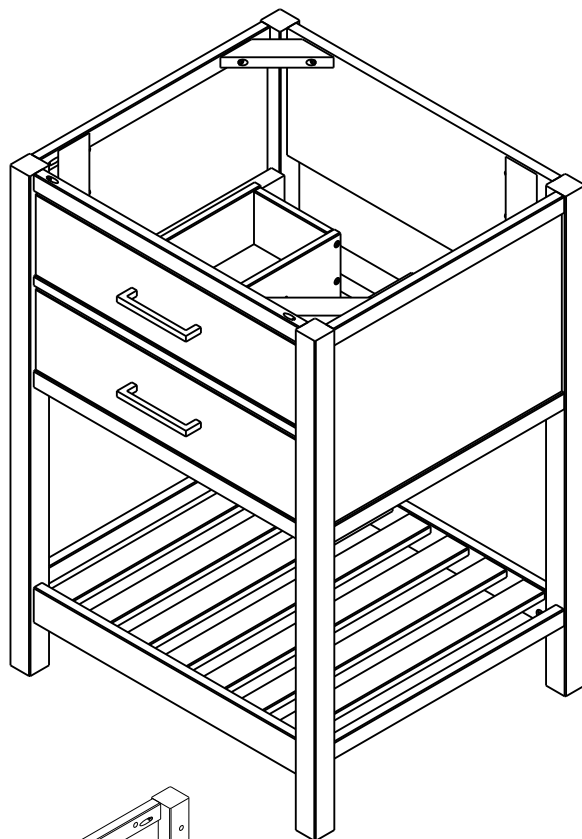

A	 Ø8x30mm	32
B	 Ø8x20mm	02
C	 Ø3,5x30mm	30
D	 Ø4x25mm	04
E	 Ø3,5x14mm	04
F	 Ø4,0x25mm	12
G	 Ø6x10mm	06
H	 Ø4,0x40mm	03
I		16
J		16
K		02
L	 27x23mm	04
M		02
N	 Ø6x30mm	28

REPLACEMENT PARTS

Please do not contact the company purchased from as we can help you faster.
Order replacement parts and hardware at "www.boltonfurniture.com".

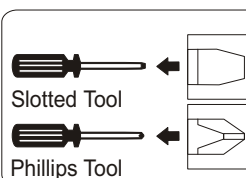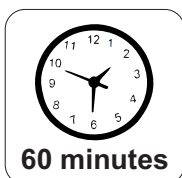




Tools Required





Hammer
* These tools are not
supplied by the
manufacturer

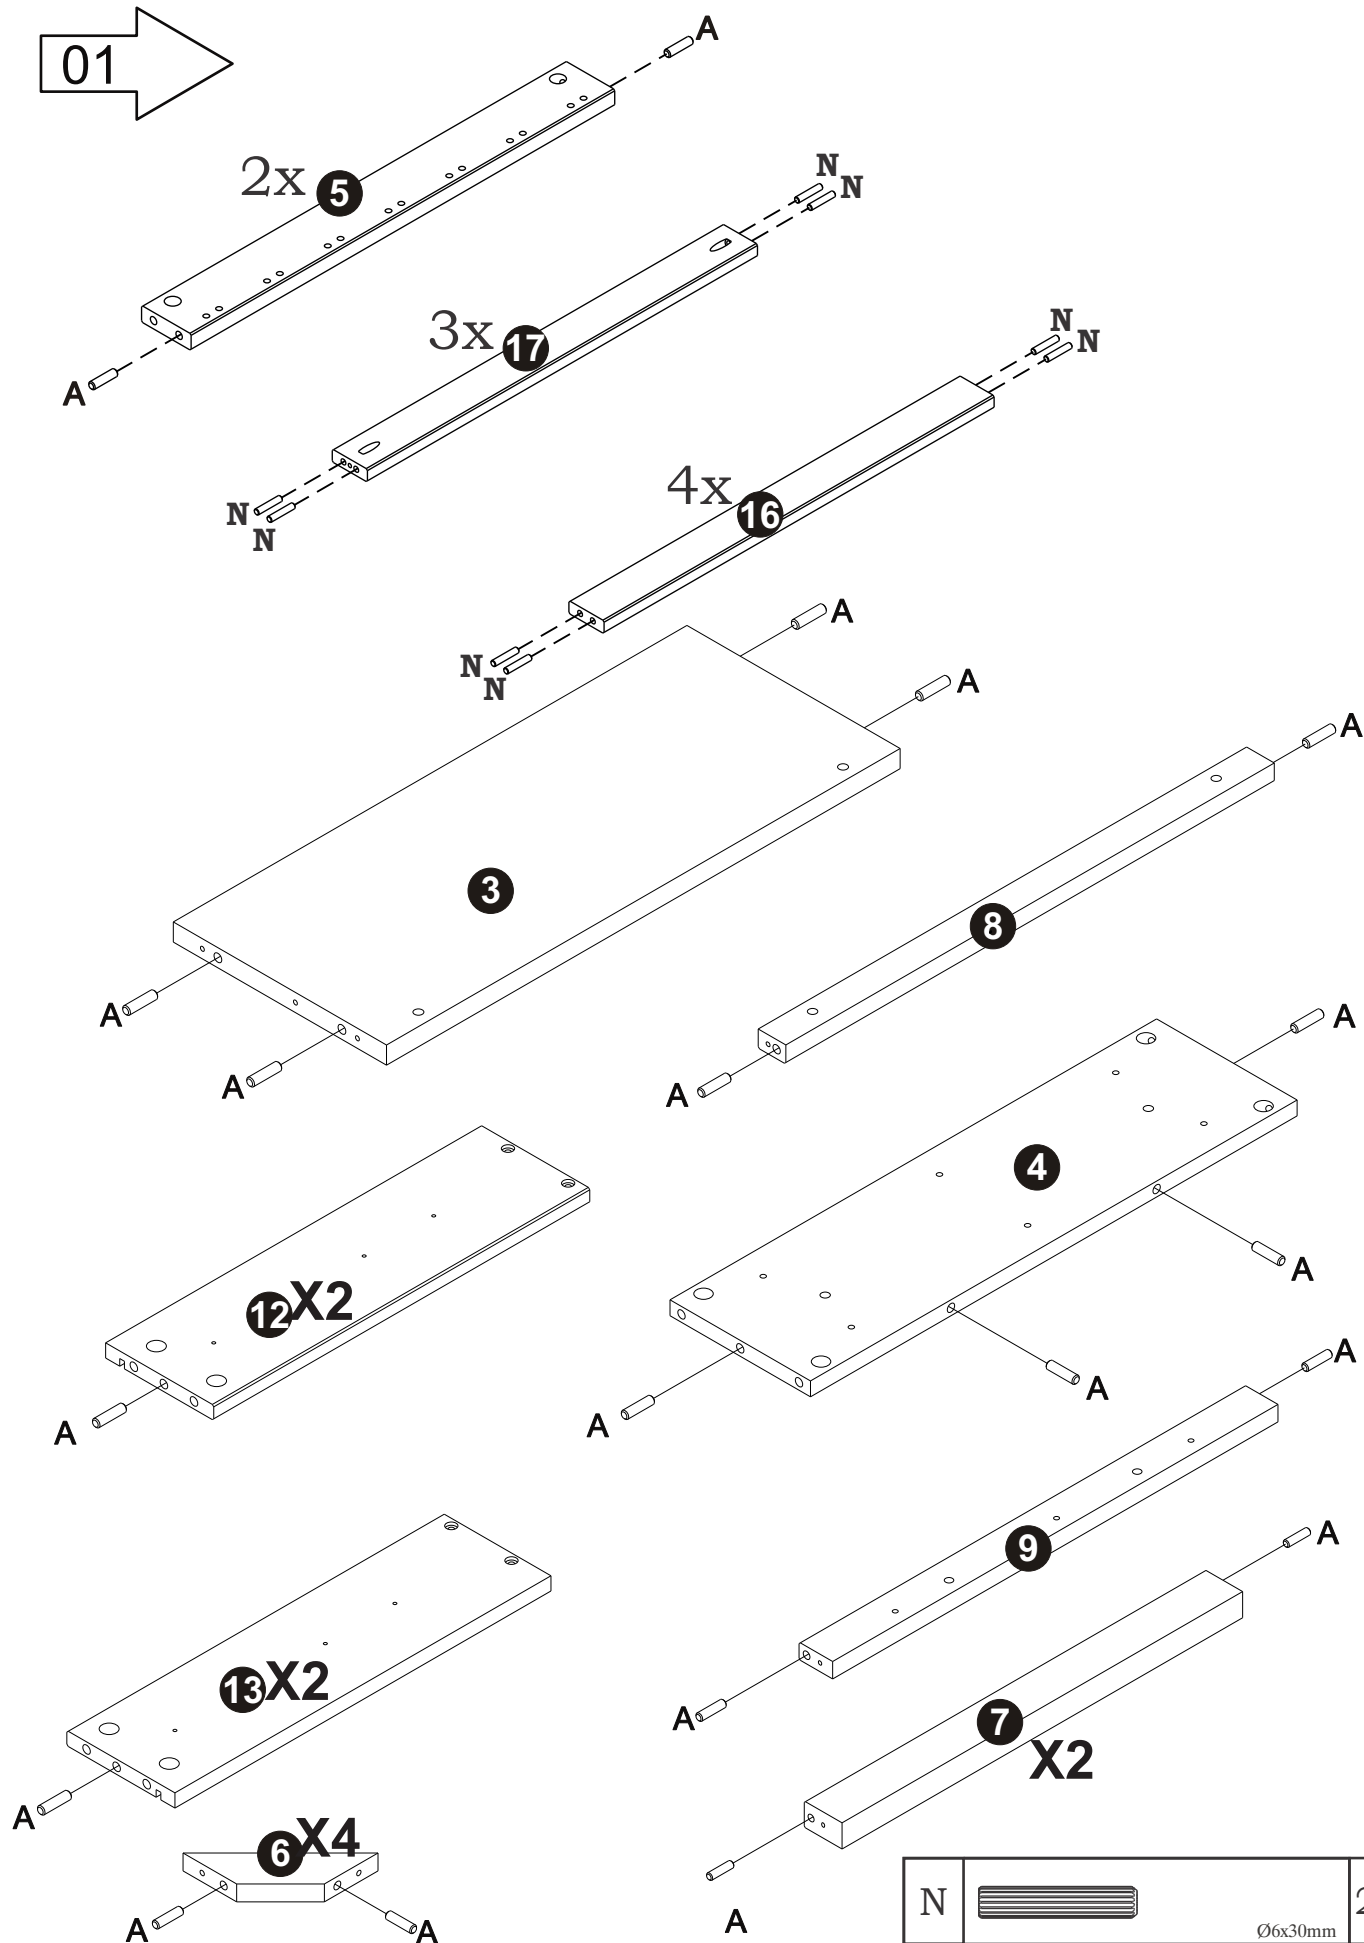01





N		28
Ø6x30mm		
A		32
Ø8x30mm		


02

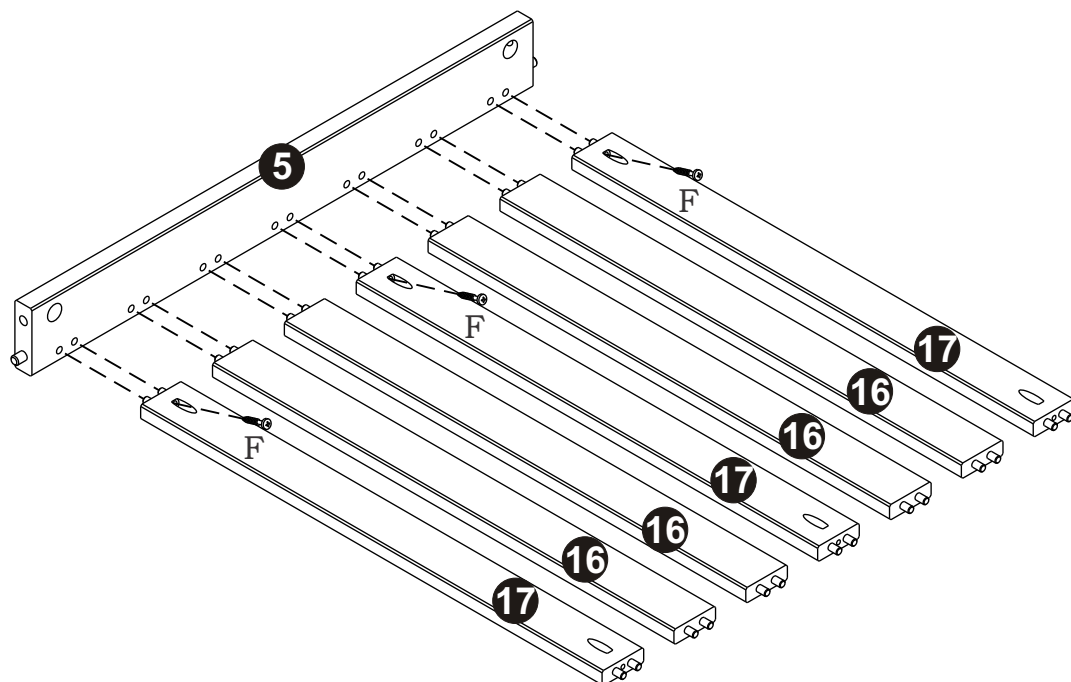


03

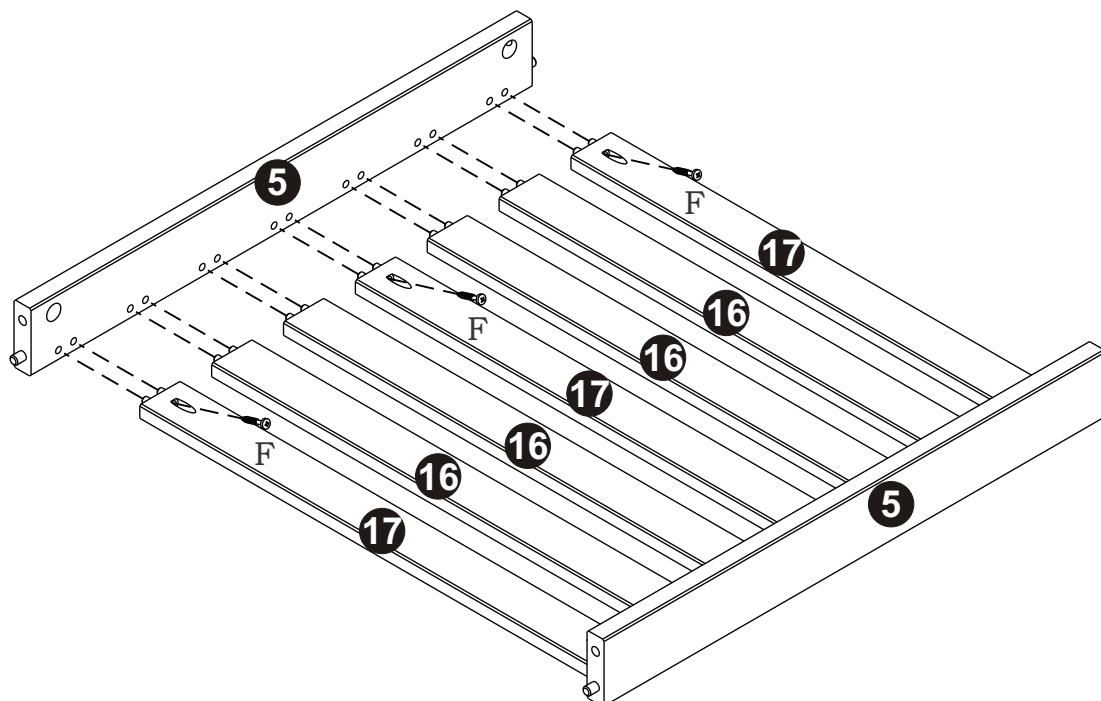

04

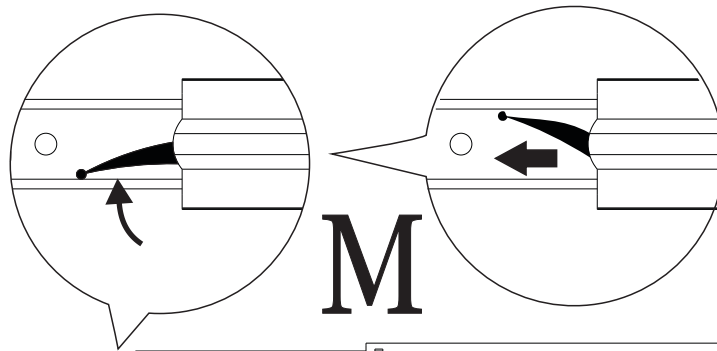

M









M

2x



M

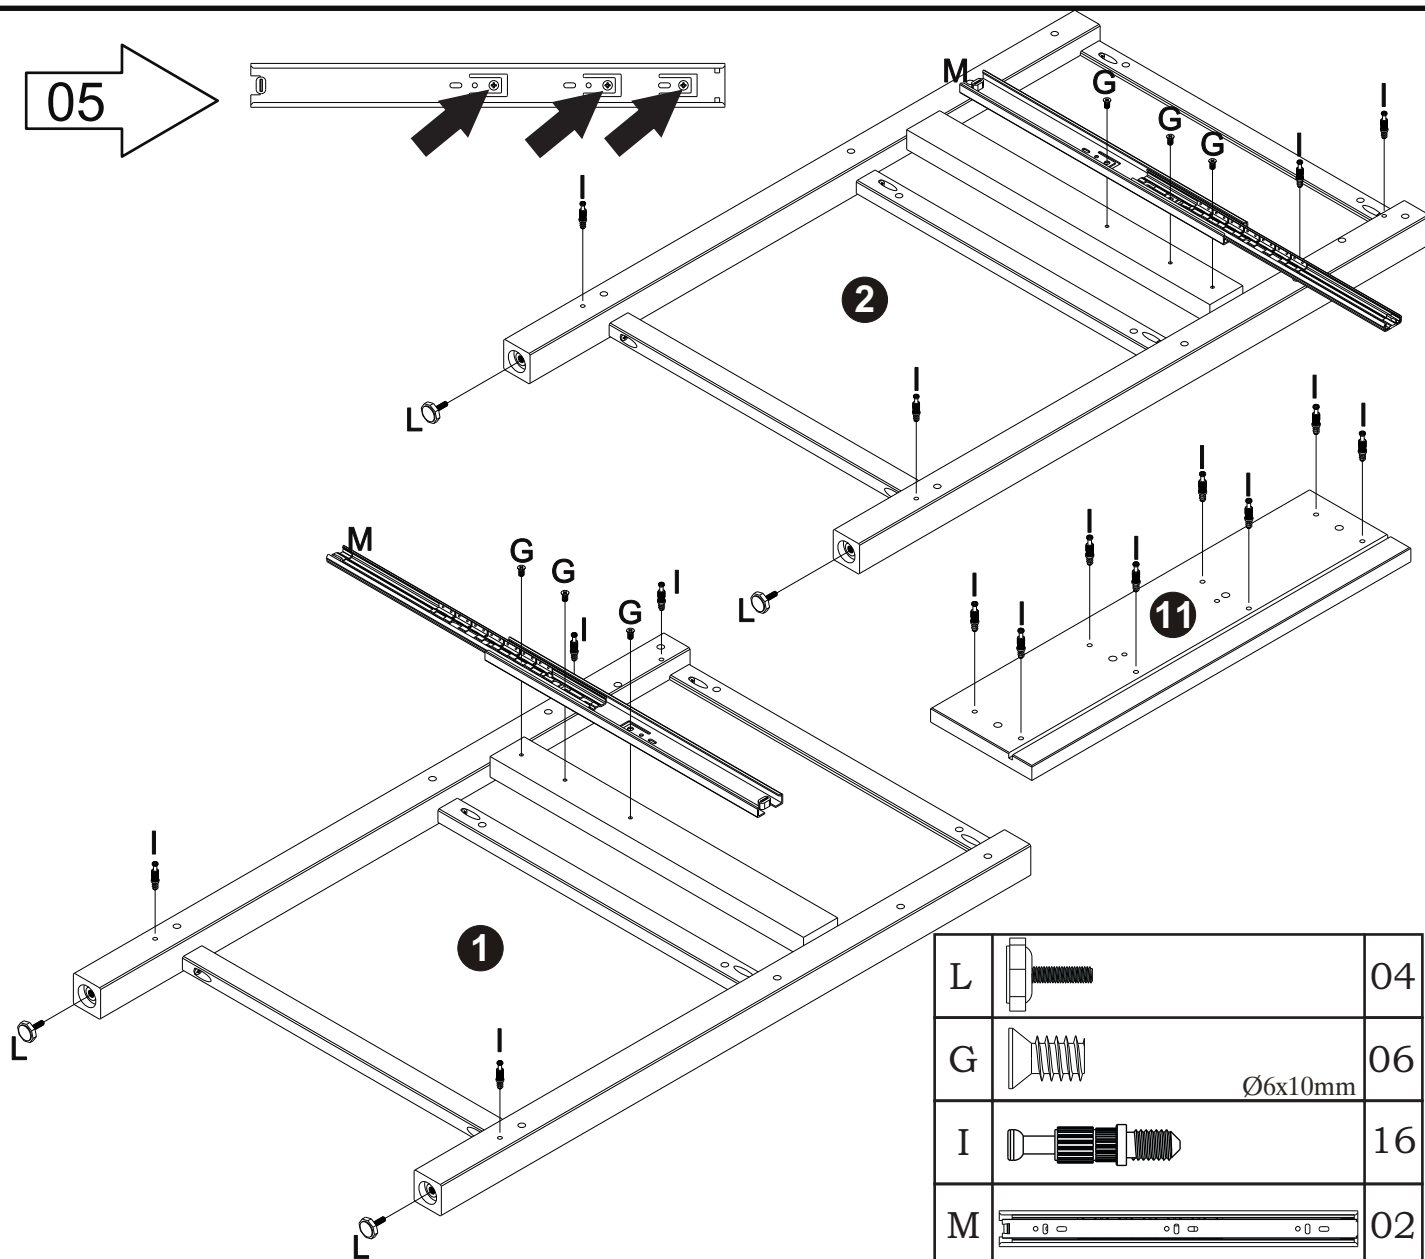05





L		04
G	 Ø6x10mm	06
I		16
M		02


06


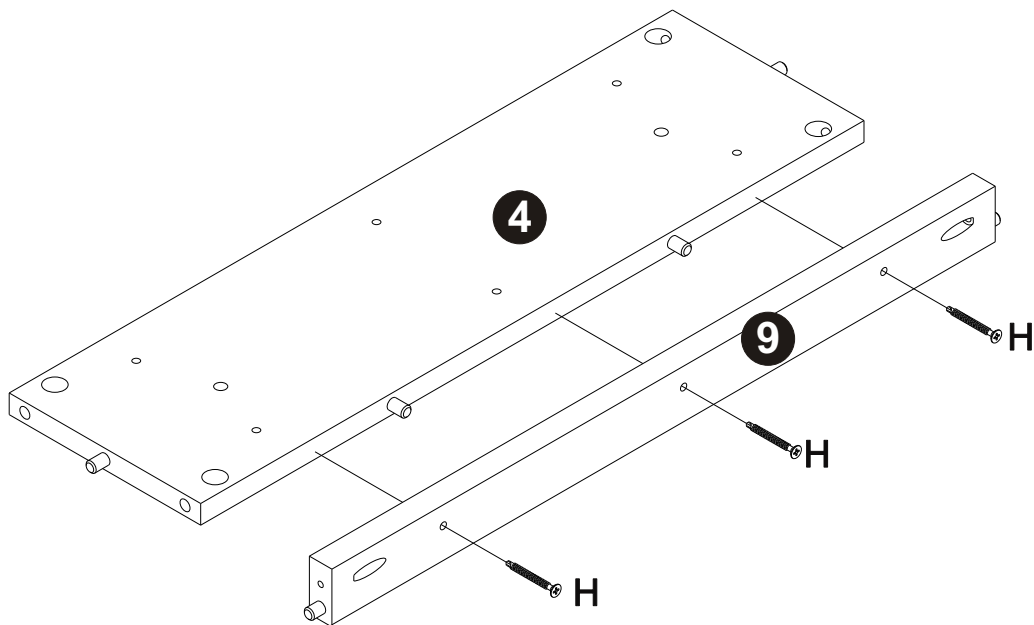


07

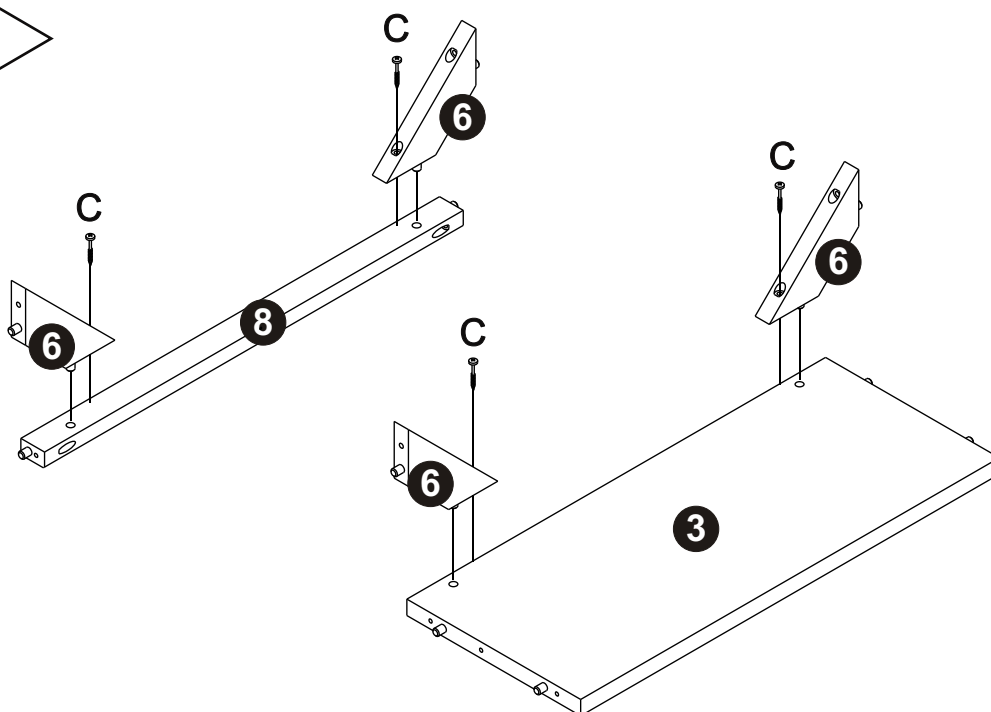


08


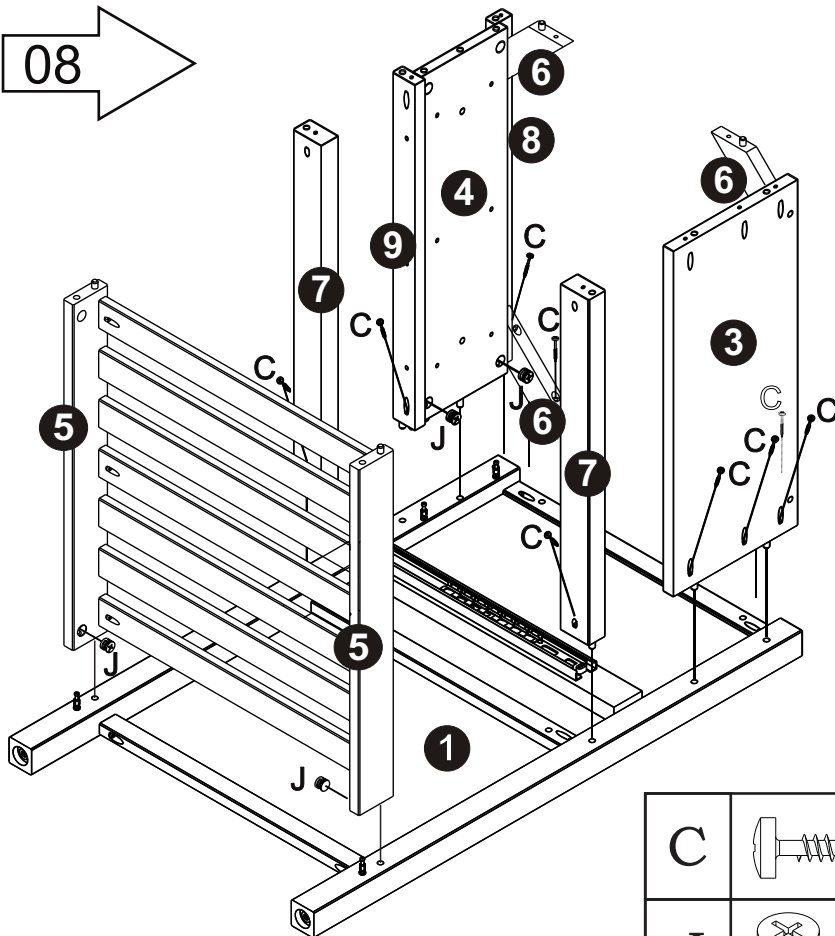


C		09
J		04

Ø3,5x30mm


09

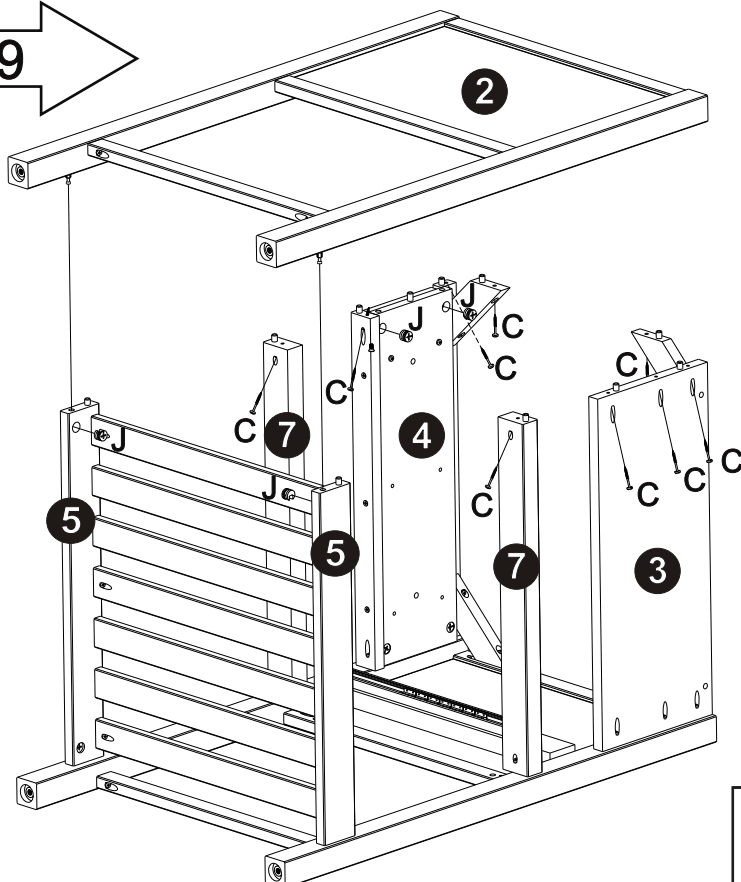




C		09
J		04


Ø3,5x30mm


10

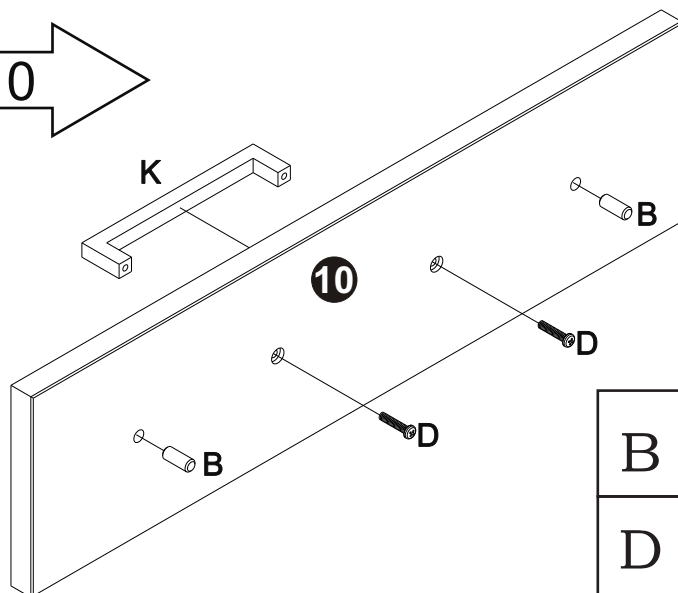





B		Ø8x20mm	02
D		Ø4x25mm	02
K			01







11

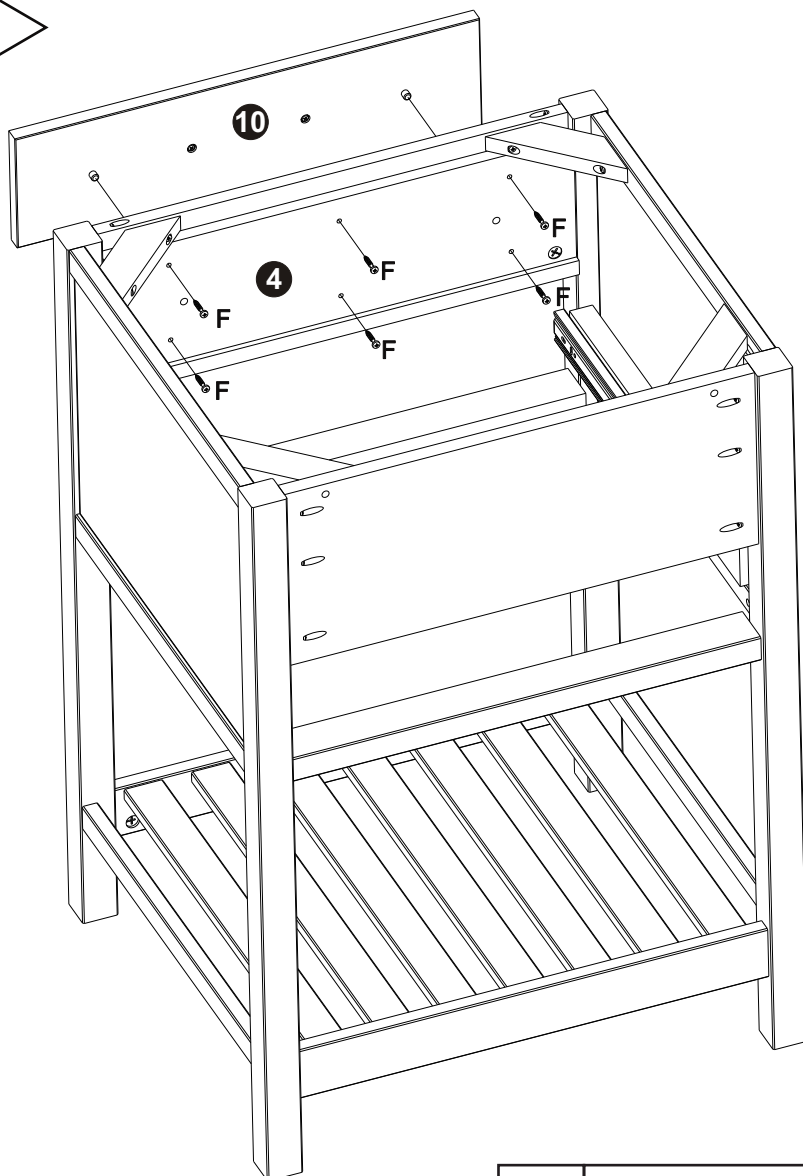

F		Ø4,0x25mm	06
---	--	-----------	----

12

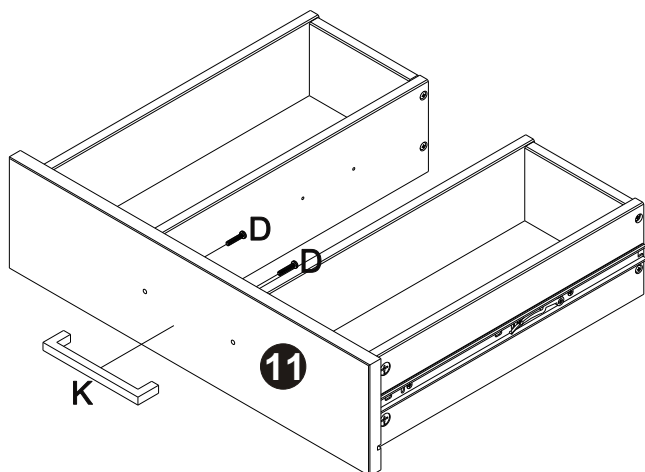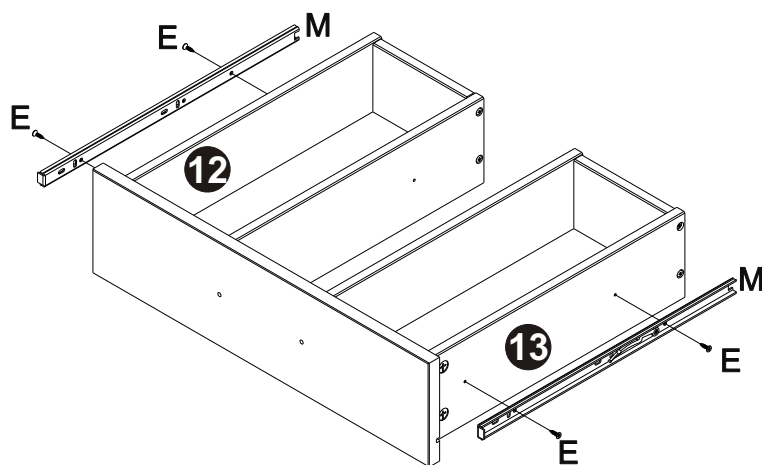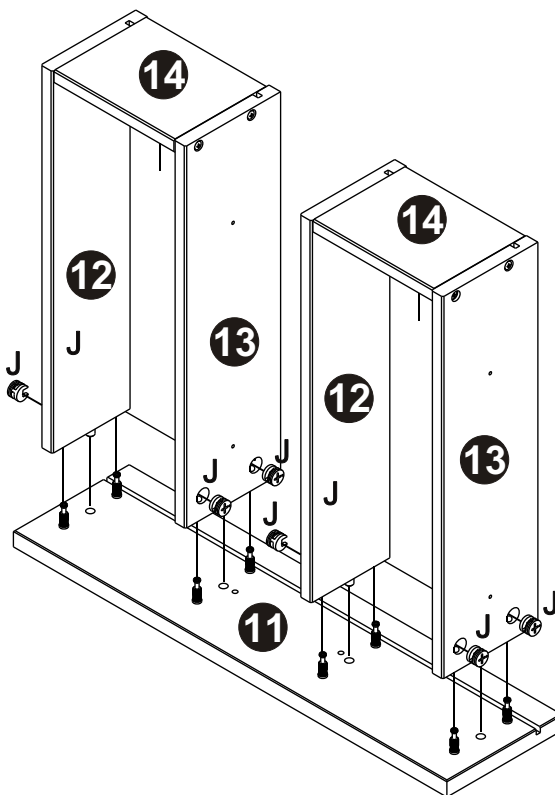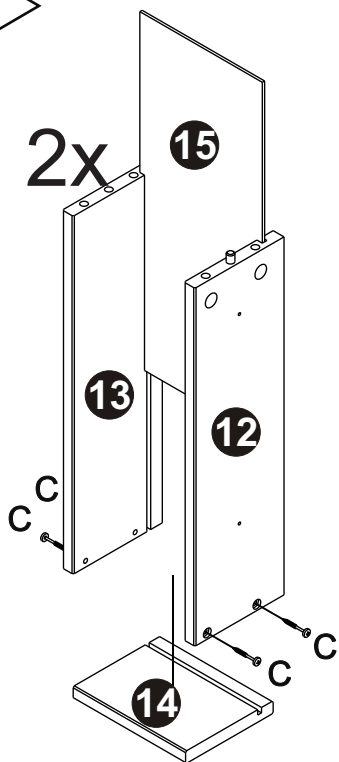

C		Ø3,5x30mm	08
D		Ø4x25mm	02
E		Ø3,5x14mm	04
J			08
K			01
M			02

13

