

3910 Series

3910 - 961 6/6 POSTER HEADBOARD
3910 - 963 6/6 POSTER FOOTBOARD
3910 - 880 5/0 - 6/6 RAILS




1060 E. Springfield Rd.
High Point, NC 27263
(336)861-0003

Assembly Instruction

A. Components :

- | | |
|---------------------|---------|
| 1. Poster Headboard | : 1 Pc |
| 2. Poster Footboard | : 1 Pc |
| 3. HB Legs | : 2 Pcs |
| 4. HB Vinyl | : 2 Pcs |
| 5. FB Vinyl | : 2 Pcs |
| 6. Stretcher | : 1 Pc |
| 7. Bed Rails | : 2 Pcs |
| 8. Slats | : 4 Pcs |
| 9. Slats Support | : 4 Pcs |

Qty

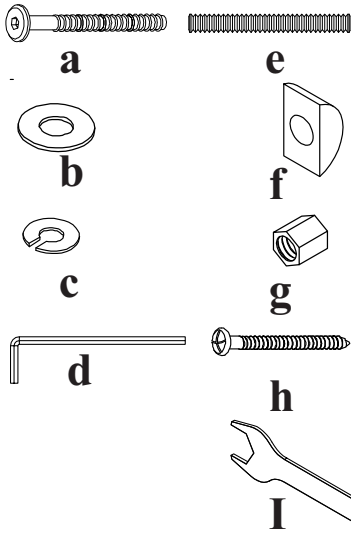


B. Hardware :

Qty


- | | |
|--------------------|----------|
| a. Bolt M6 x 50mm | : 10 Pcs |
| b. Flat Washer | : 10 Pcs |
| c. Lock Washer | : 10 Pcs |
| d. Allen Key | : 1 Pc |
| e. Bolt M8 x 100mm | : 8 Pcs |
| f. Halfmoon Washer | : 8 Pcs |
| g. Hexa Nut | : 8 Pcs |
| h. Screw | : 8 Pcs |
| i. Hexa Wrench | : 1 Pc |

C. Tool Required

1. Screw Driver = (not included)



STEP - 1

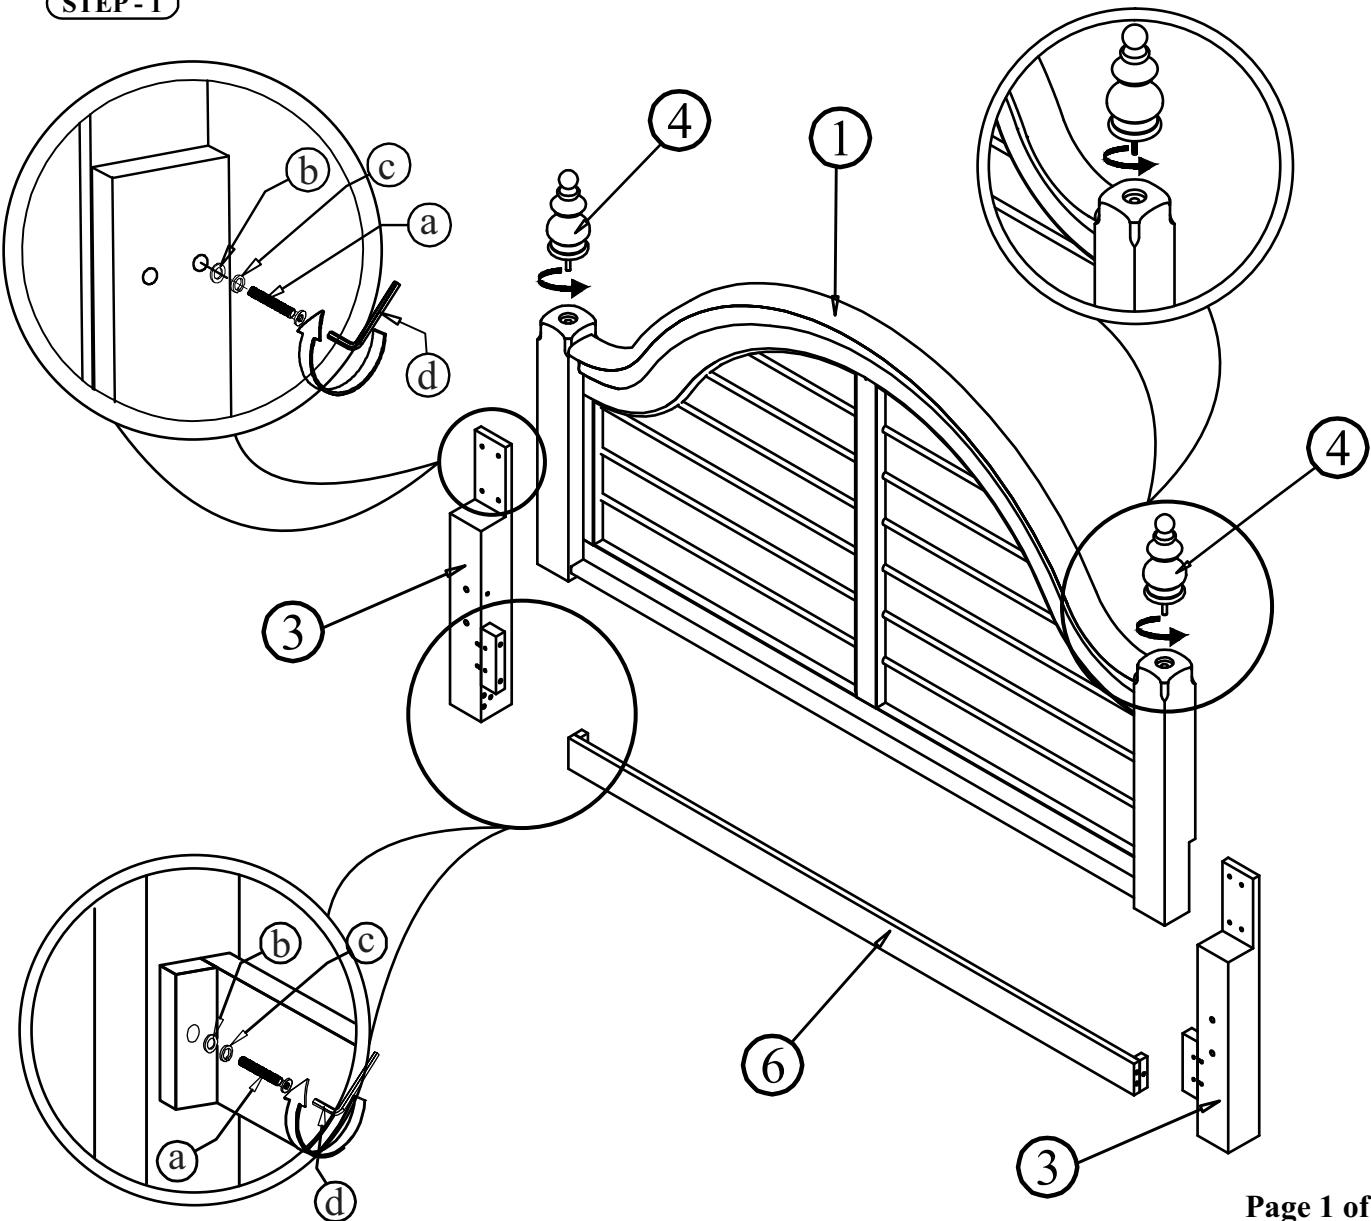

3910 Series


3910 - 961 6/6 POSTER HEADBOARD
3910 - 963 6/6 POSTER FOOTBOARD
3910 - 880 5/0 - 6/6 RAILS




1060 E. Springfield Rd.
High Point, NC 27263
(336)861-0003

Assembly Instruction

STEP - 2

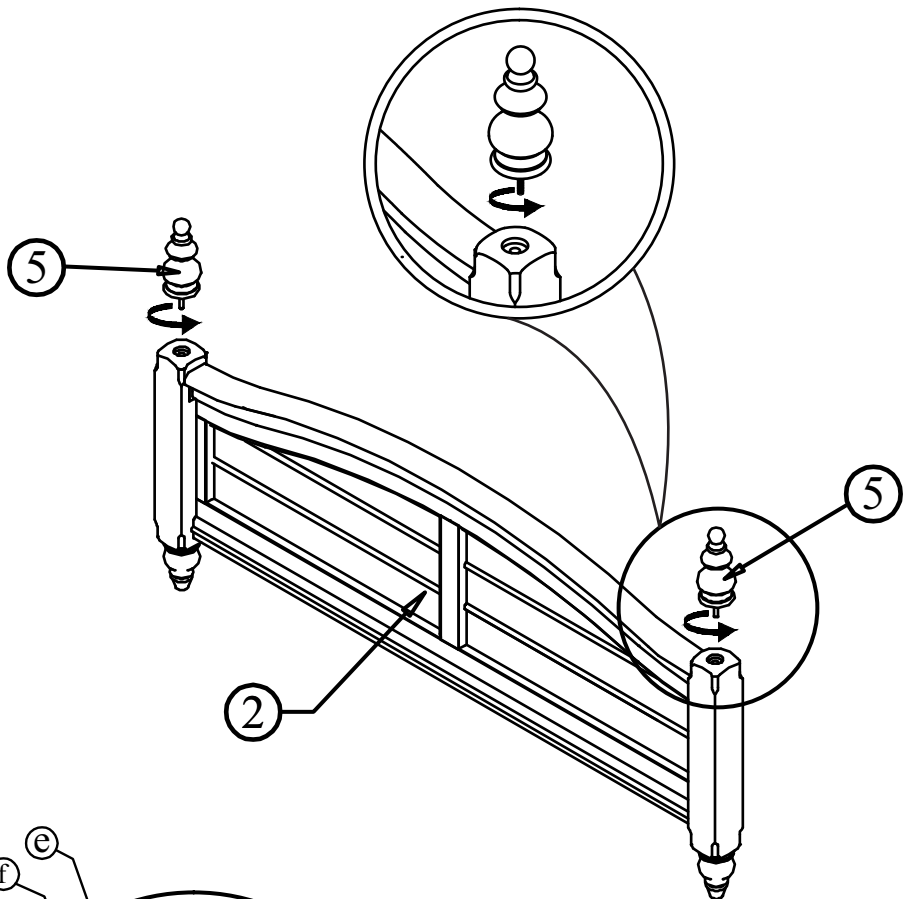

STEP - 3

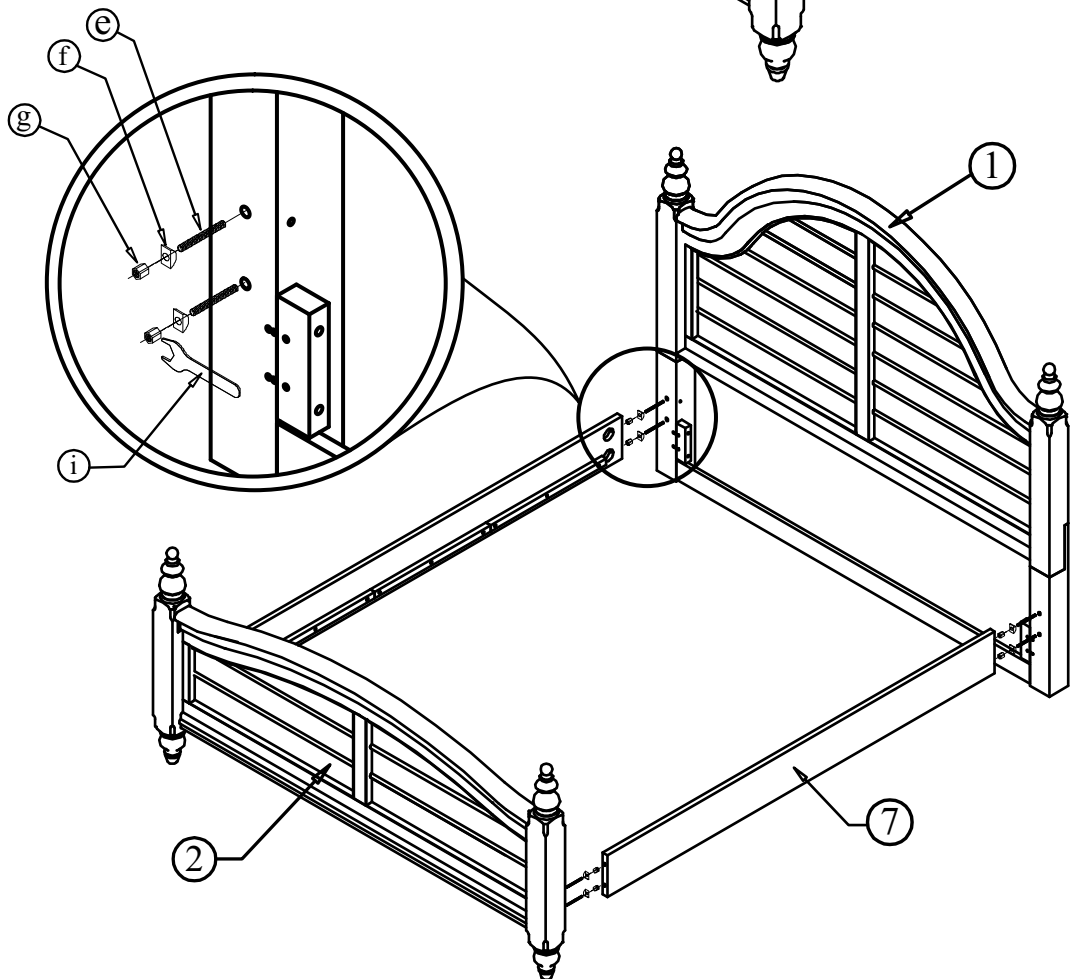

3910 Series


3910 - 961 6/6 POSTER HEADBOARD
3910 - 963 6/6 POSTER FOOTBOARD
3910 - 880 5/0 - 6/6 RAILS



1060 E. Springfield Rd.
High Point, NC 27263
(336)861-0003

Assembly Instruction

STEP - 4

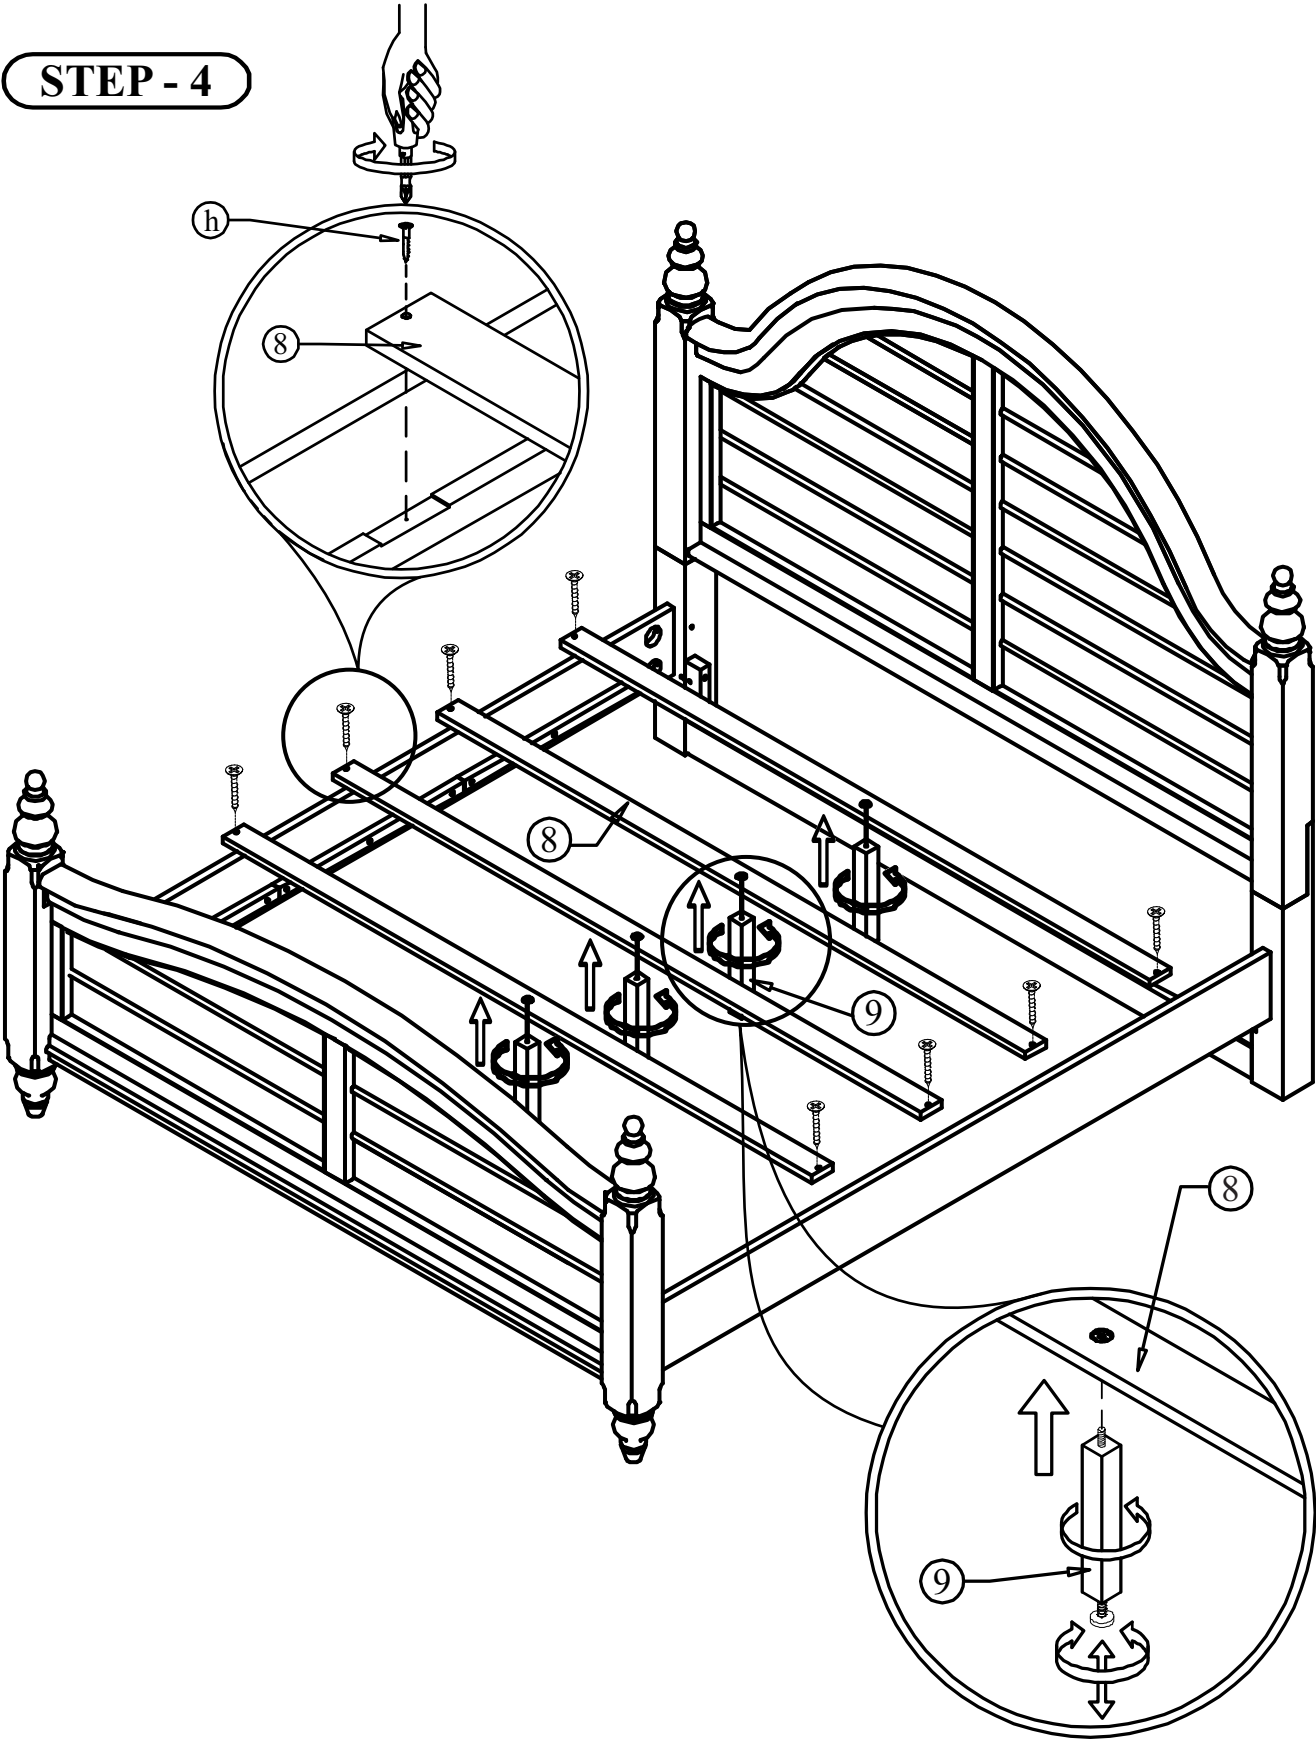

3910 Series


3910 - 961 6/6 POSTER HEADBOARD
3910 - 963 6/6 POSTER FOOTBOARD
3910 - 880 5/0 - 6/6 RAILS



1060 E. Springfield Rd.
High Point, NC 27263
(336)861-0003


CARTON 1

6/6 Poster Headboard.....1 Pc

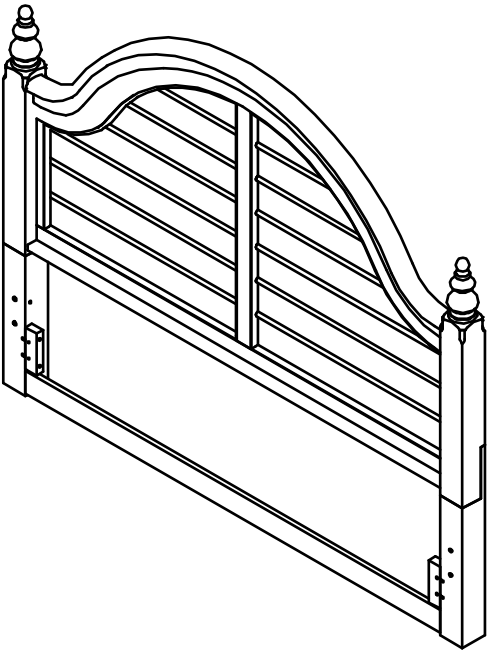

CARTON 2


Slats.....4 Pcs

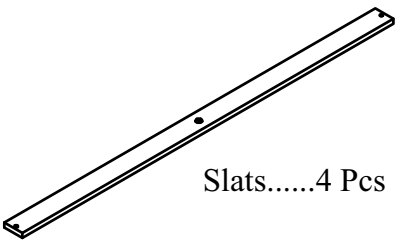

Slats Support.....4 Pcs



6/6 Poster Footboard.....1 Pc

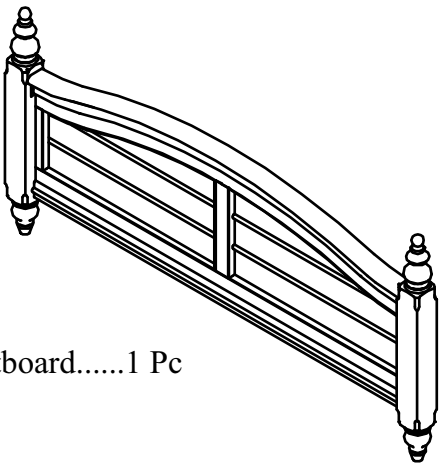

CARTON 3

5/0 6/6 Rails.....2 Pcs

