


Installation Instruction

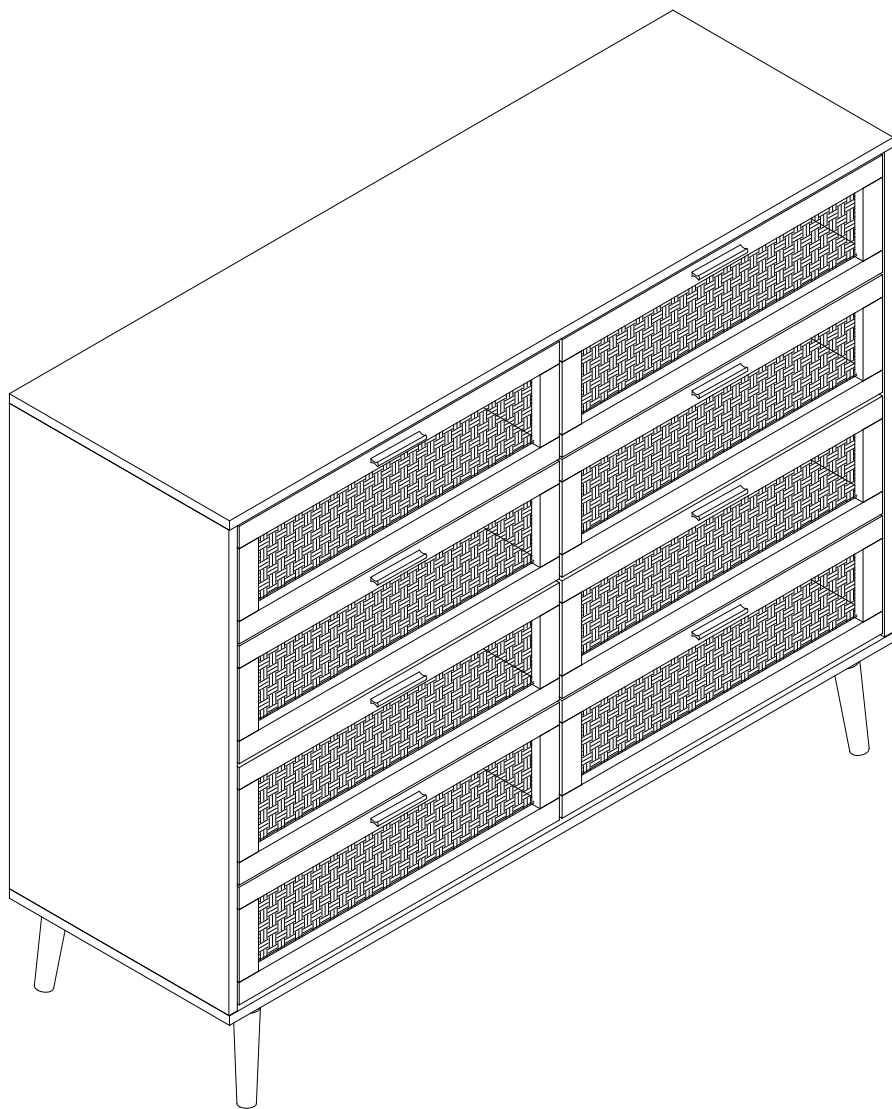


Assembling

Estimated time for assembly



What you need

- Use the packaging carton as a working surface to prevent product damage during assembly
- Phillips head screwdriver



Weight Limitation




What's included

Code	Description	Qty
A	Cam Bolt M6X35MM	54
B	Cam Lock 15X10MM	54
C	Screw M4X40MM	56
D	Screw M3.5X12MM	96
E	Screw M4X14MM	22
F	Screw M4X40MM	2
G	Wooden Dowel M6X30MM	20
H	Wooden Dowel M6X50MM	2
I	Handle	8
J	Bolt M4X18MM	16
K	Nylon Strap	2
L	Anchor	2
M	Plastic Strip	2
N	Slide Sets	8
O	Plastic Corner Support	16
P	Screw M3X14MM	16
Q	Foot Metal Pin	4
R	Adjustable Foot Nail	1

The Hardware


A



B



C



D




E




F




G



H



I



J



K




L



M



N



CL DL DR CR


O




P



Q



R




IMPORTANT:

1. Do not tighten bolts / screws completely until all bolts / screws are lined up and inserted into holes.
2. Do not over tighten screws and bolts to avoid stripping.
3. Please use hand tools to assemble this product. Do not use power tools.

Included Accessories


Code	Description	Qty
1	Cabinet Top	1
2	Left Side Panel	1
3	Middle Side Panel	1
4	Right Side Panel	1
5	Left Back Stretcher	1
6	Right Back Stretcher	1
7	Left Drawer Support Panel	1
8	Right Drawer Support Panel	1
9	Bottom Panel	1
10	Back Panel	4
11	Drawer Back Panel	8
12	Drawer Left Side Panel	8
13	Drawer Right Side Panel	8
14	Drawer Inner Support Panel	8
15	Drawer Bottom Panel	8
16	Drawer Left Front Panel	4
17	Drawer Right Front Panel	4
18	Feet	4
19	Middle Foot	1


The Accessoriess

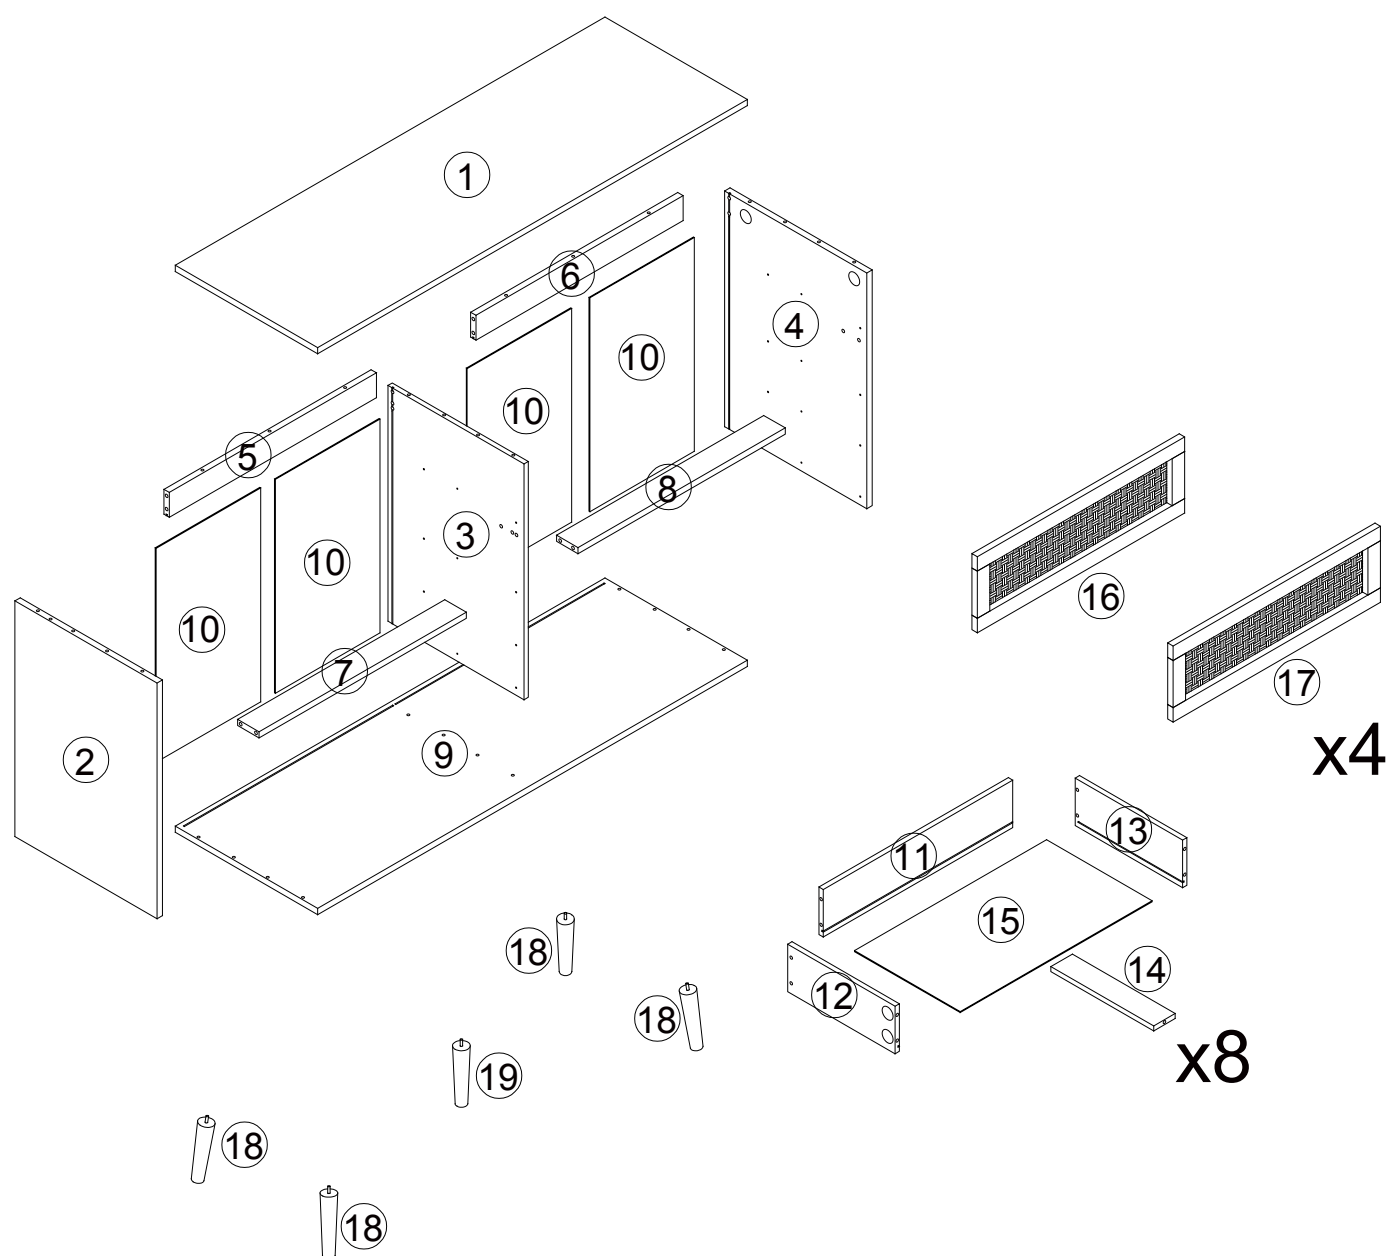

Step 1


D	x24
	


N	x 4
	
CL DL DR CR	

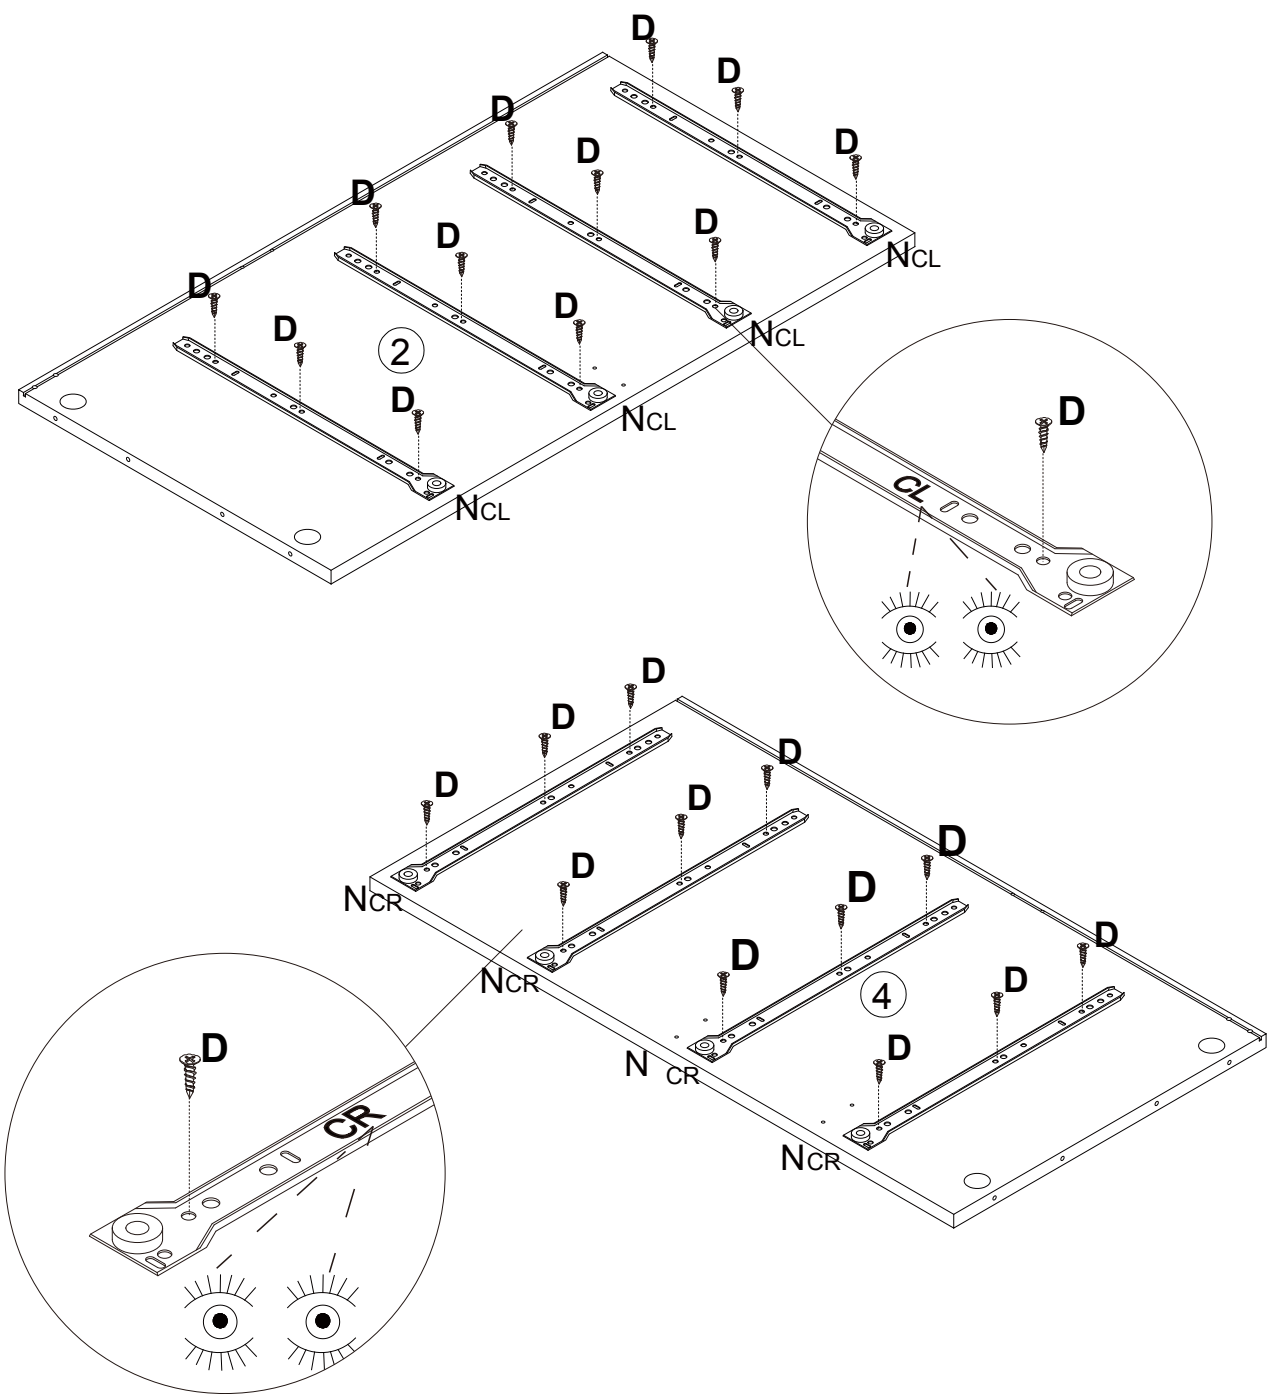


Step 2

D	x24
	


N	x 4
	
CL DL DR CR	

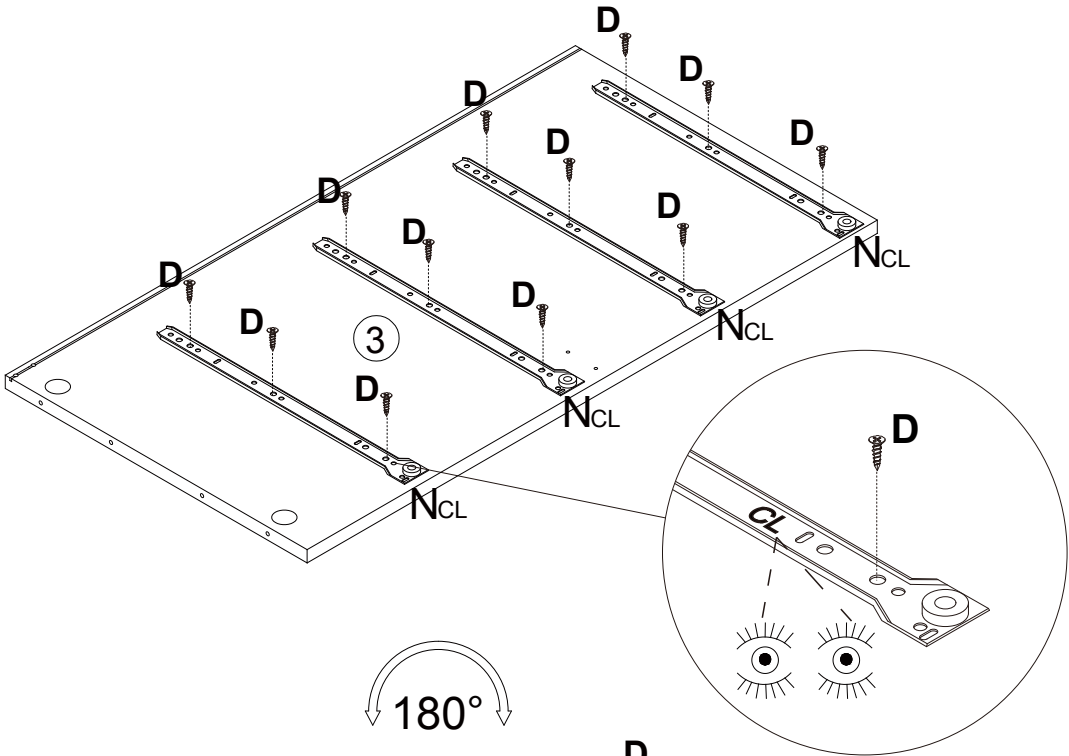



180°

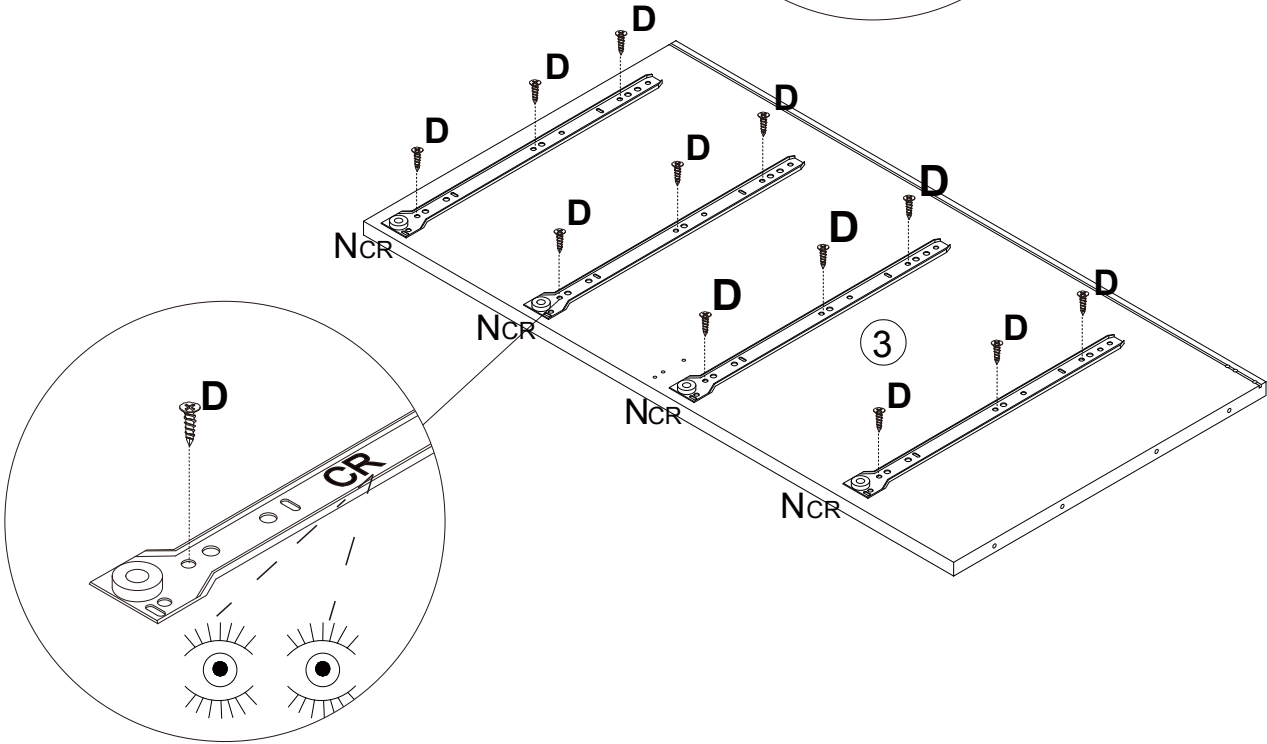


Step 3


C	x 2
	

H	x 2
	

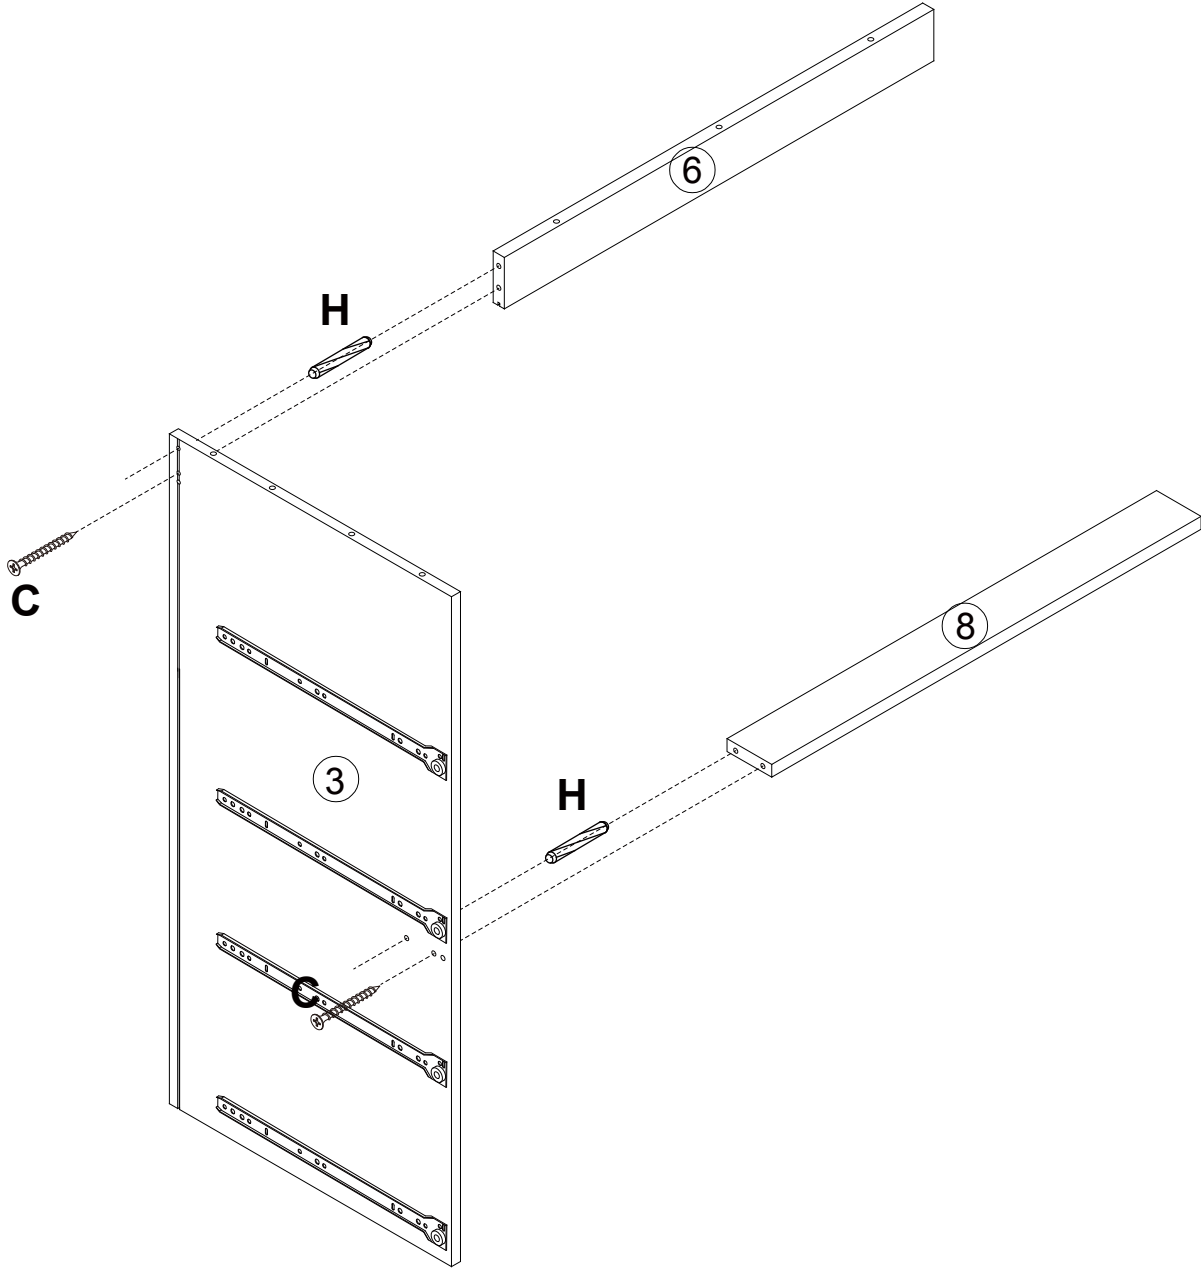



Step 4

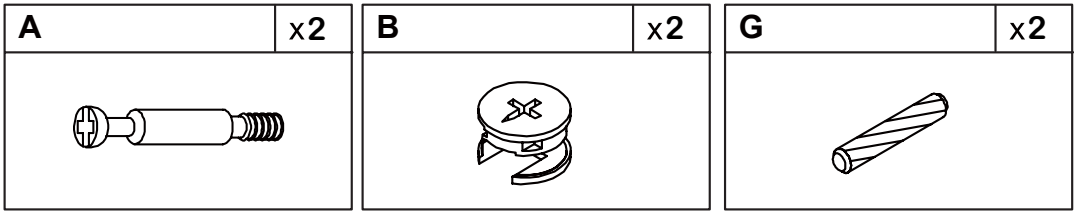A	x2	B	x2	G	x2
					


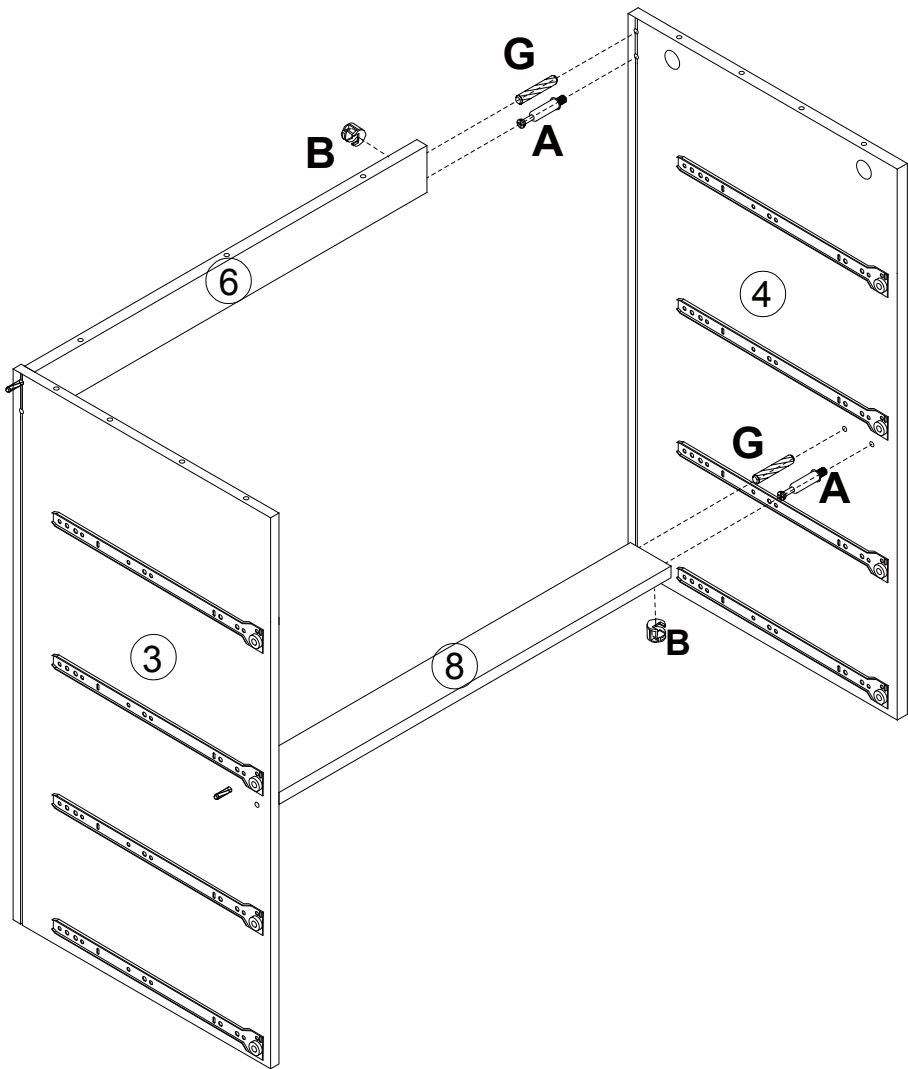



Step 5

A	x2	B	x2
			

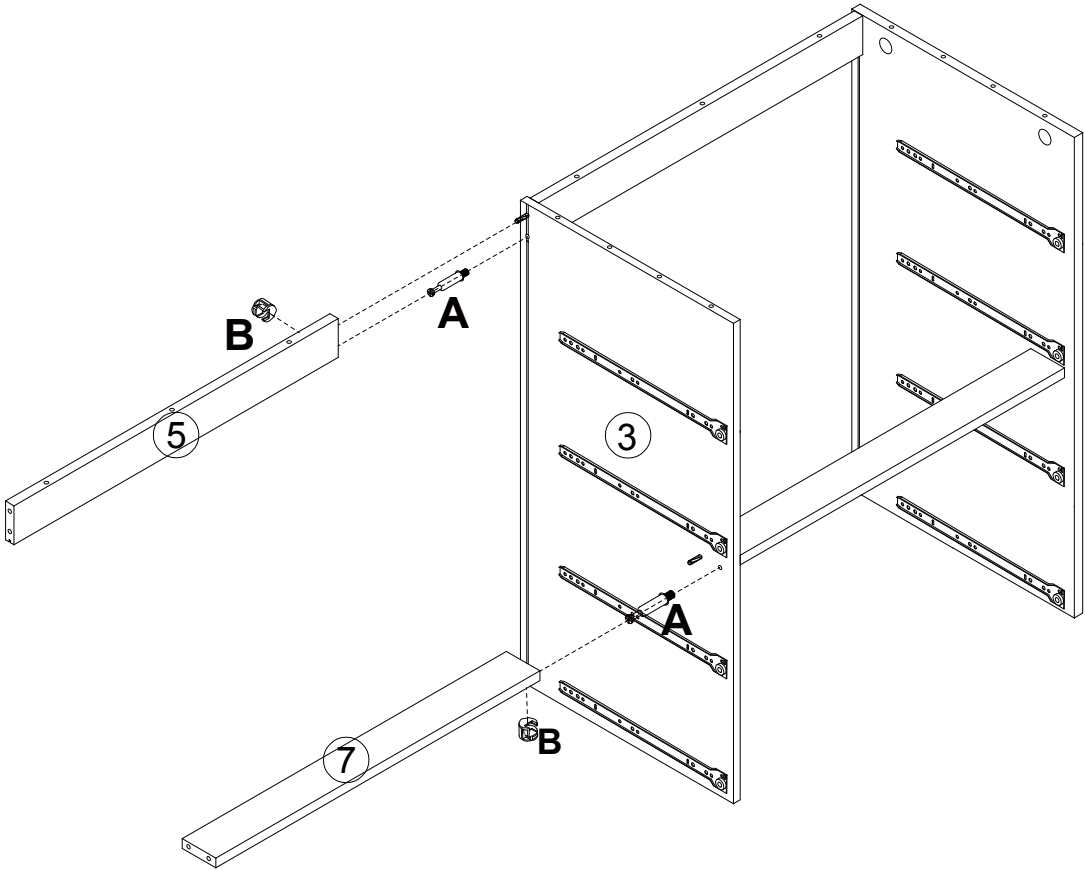


Step 6

A	x2	B	x2	G	x2
					


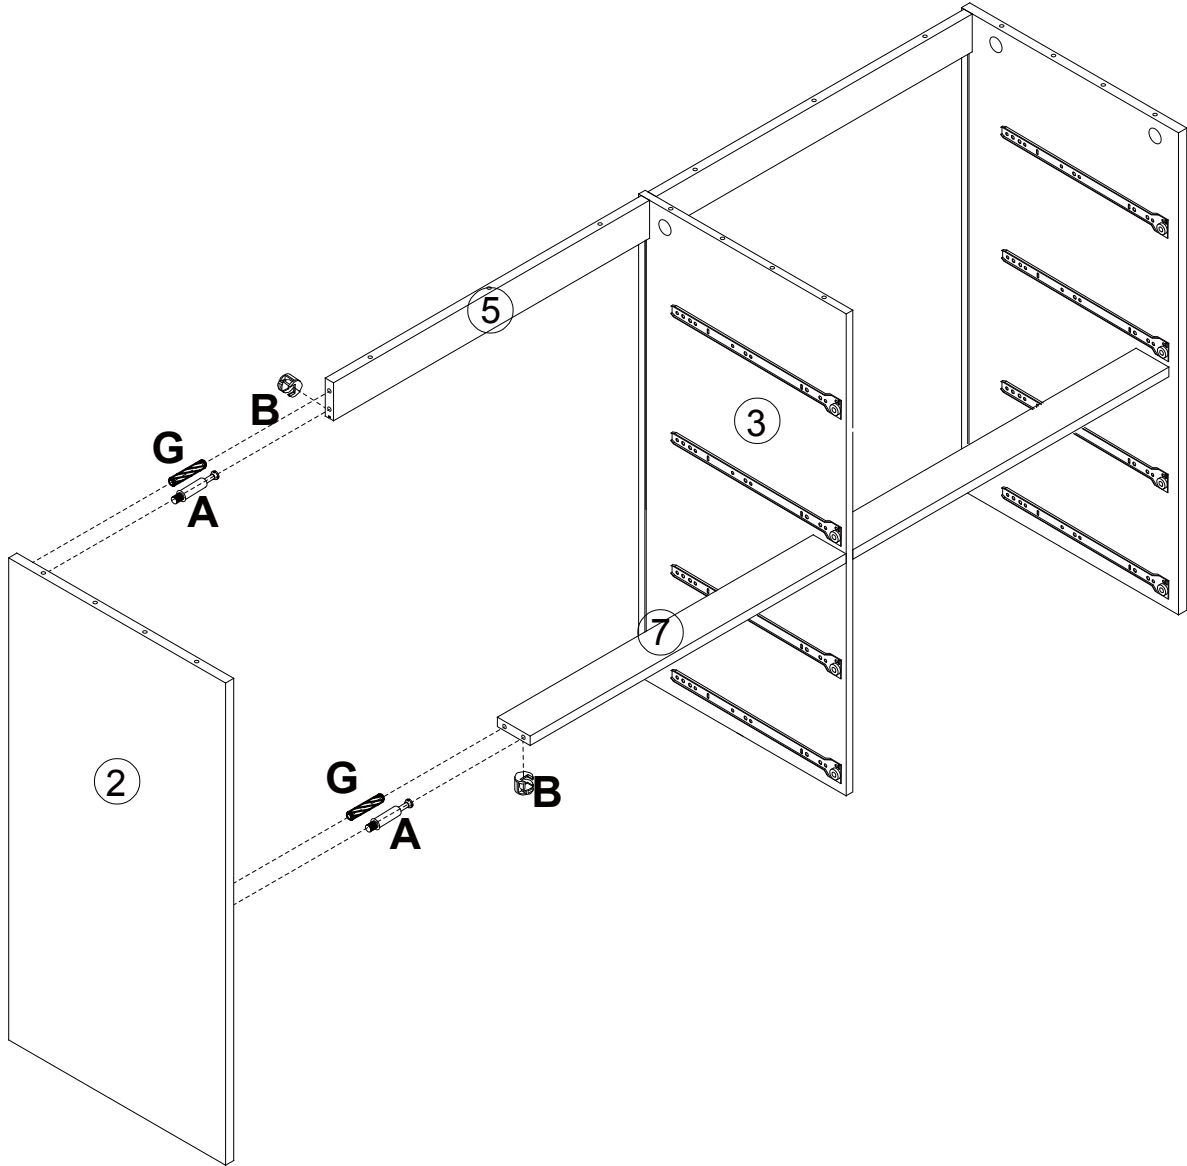


Step 7


A	x8	B	x8	G	x10

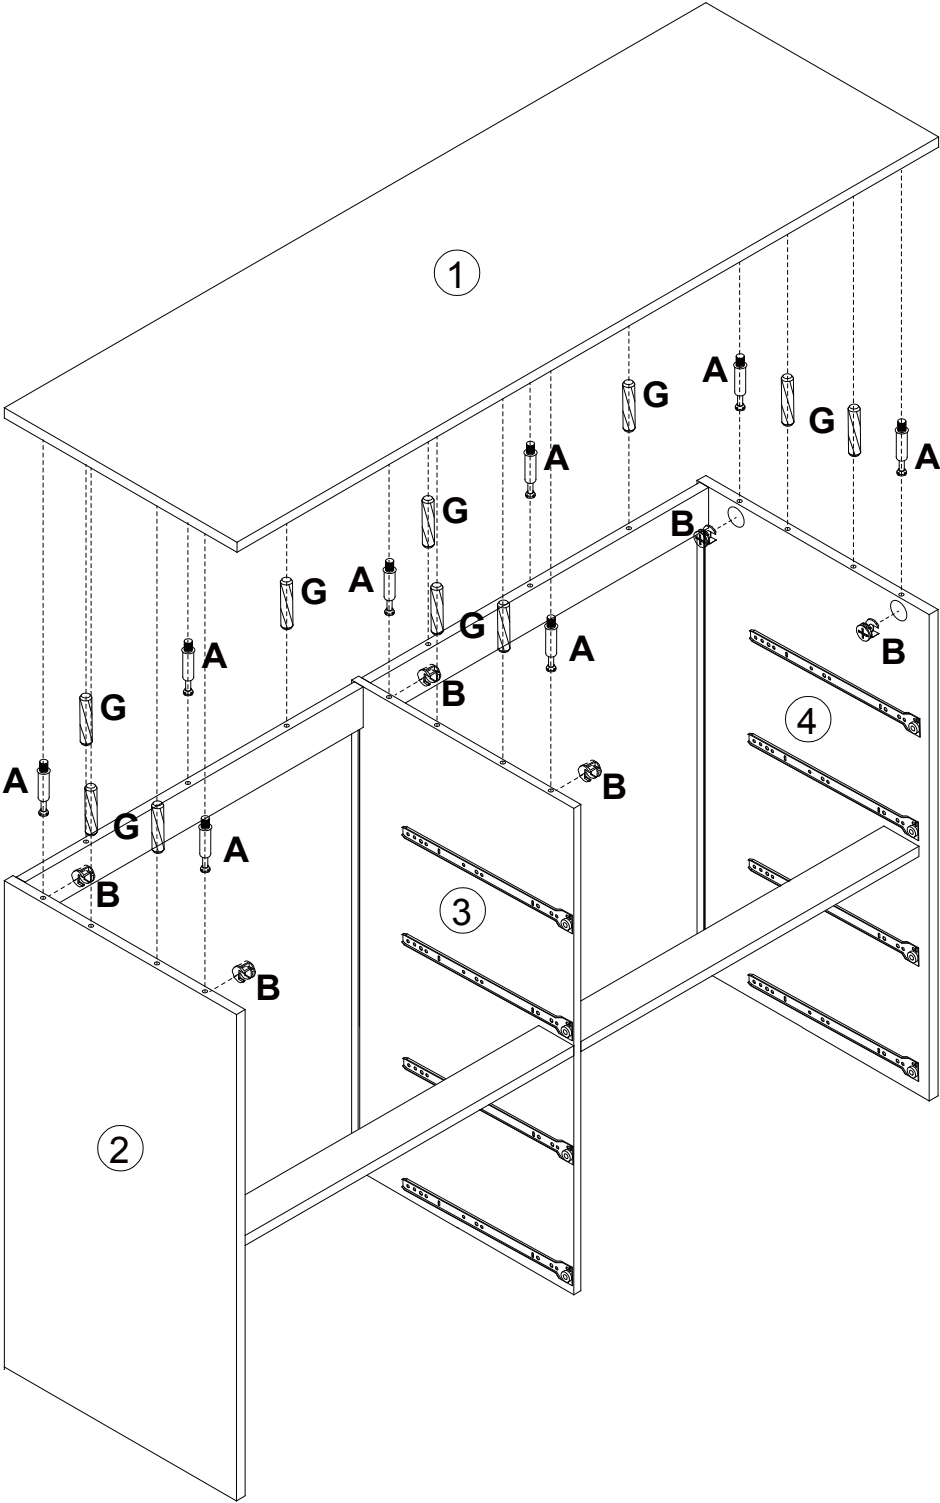

Step 8

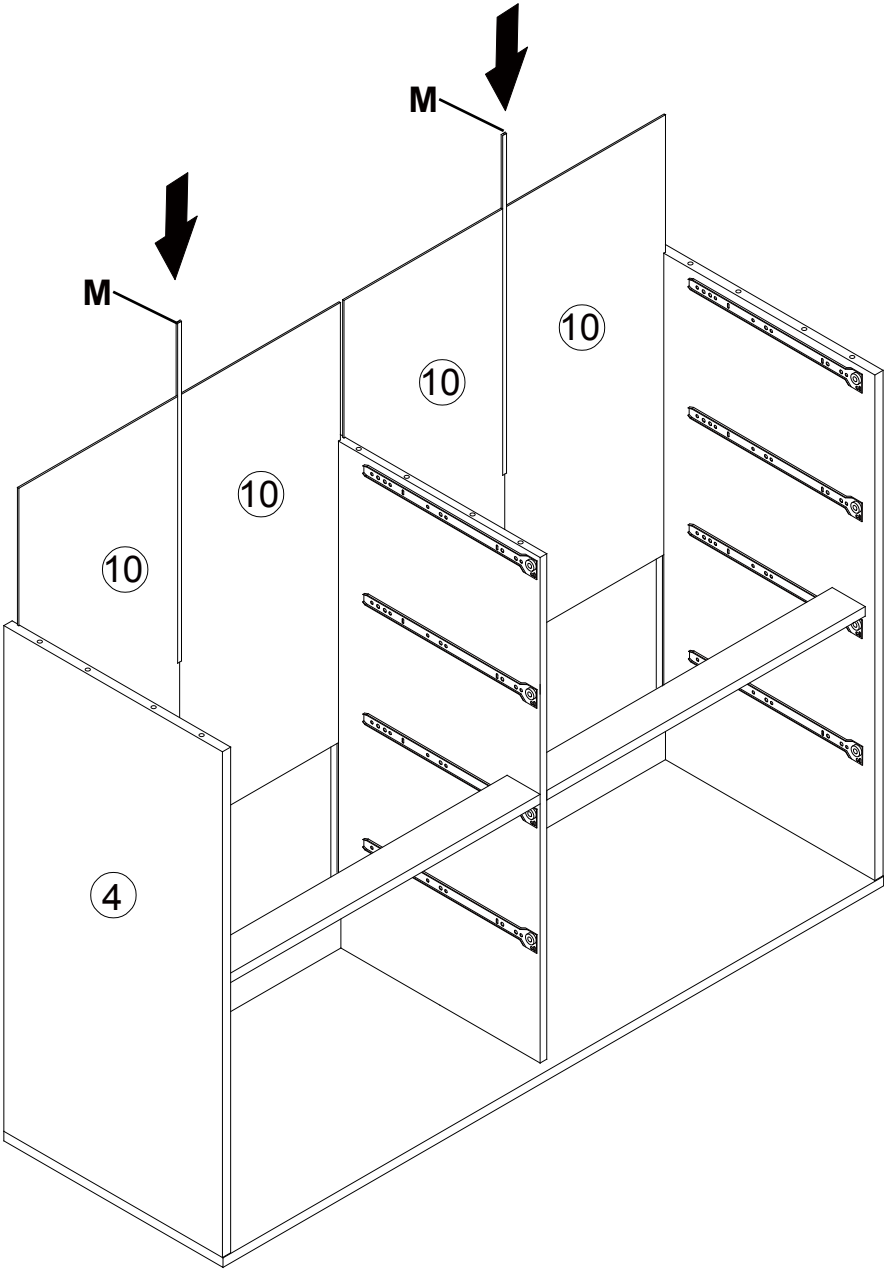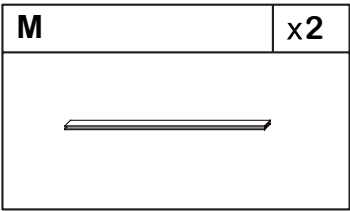



Step 9

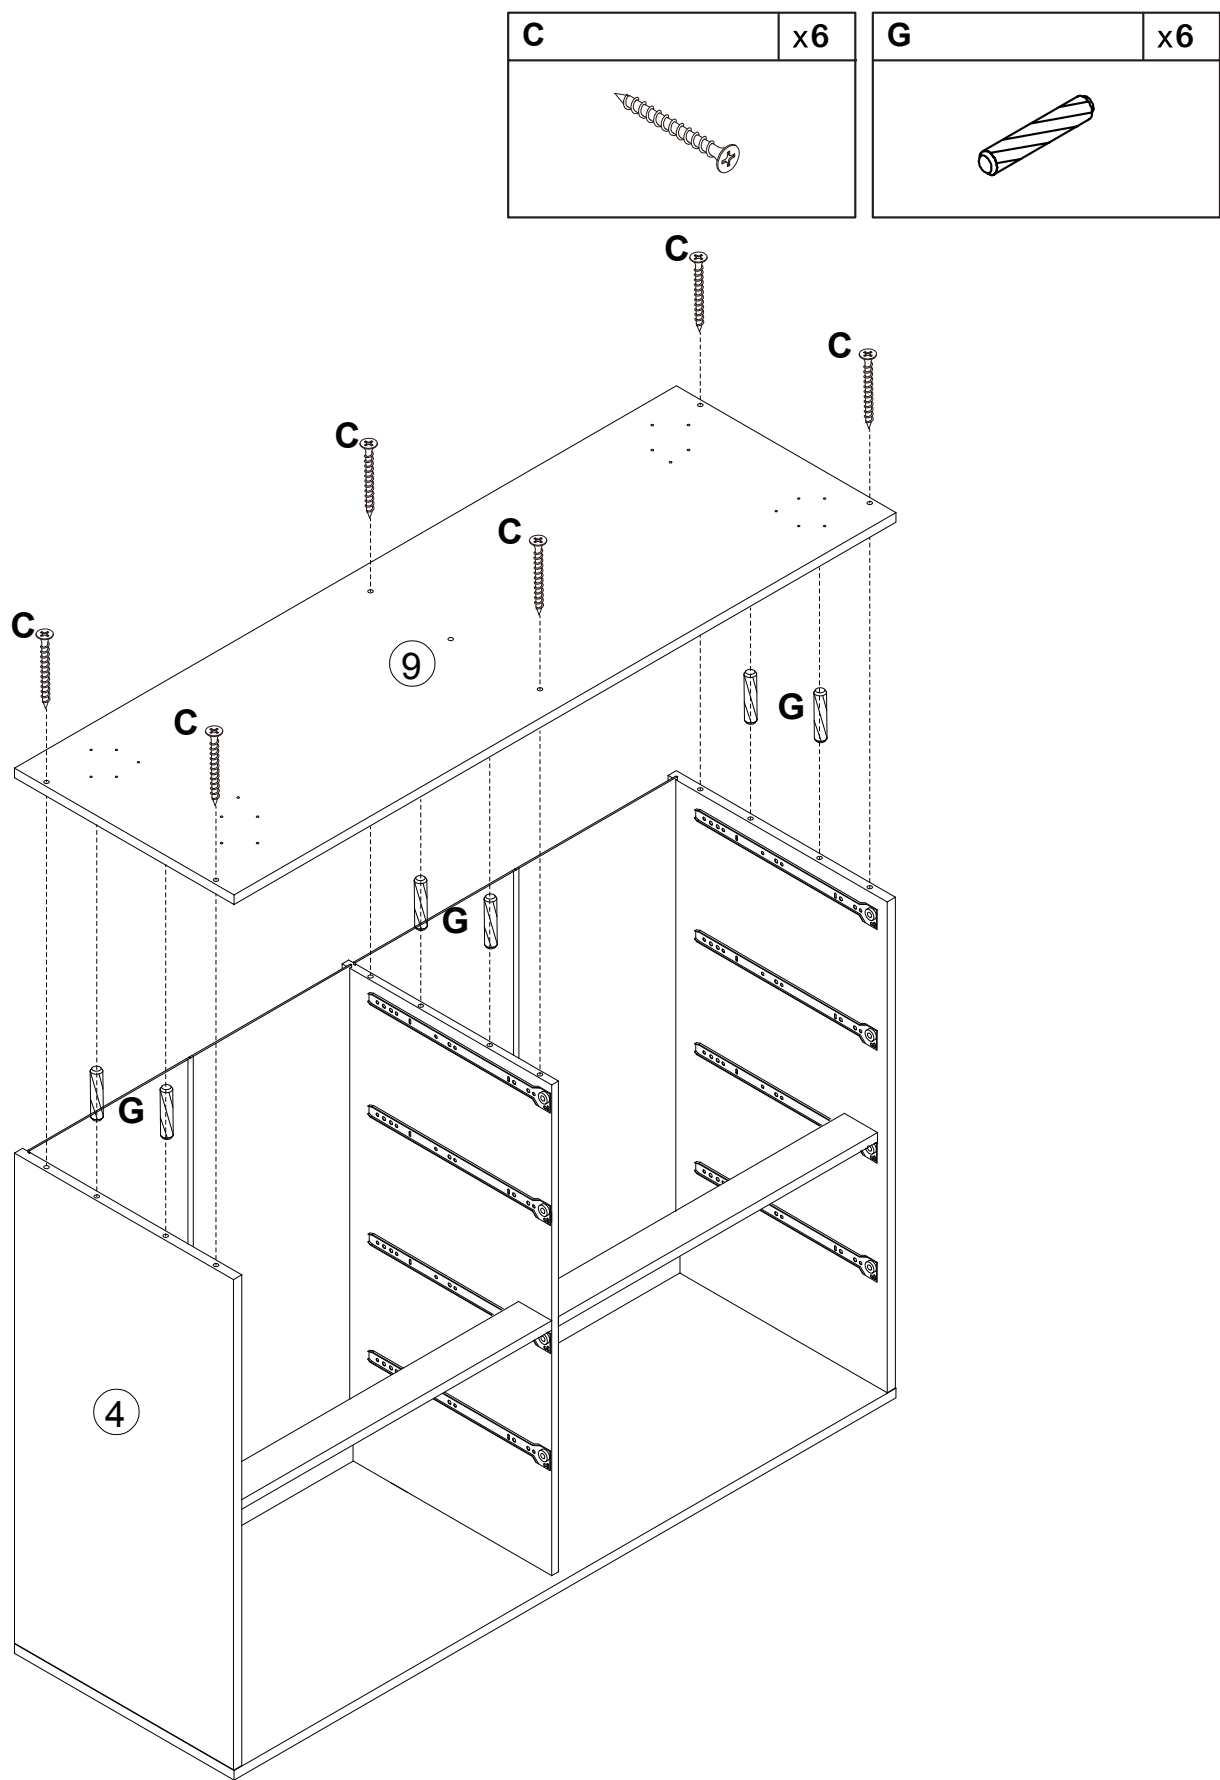

Step 10


E	x20
	

Q	x4
	

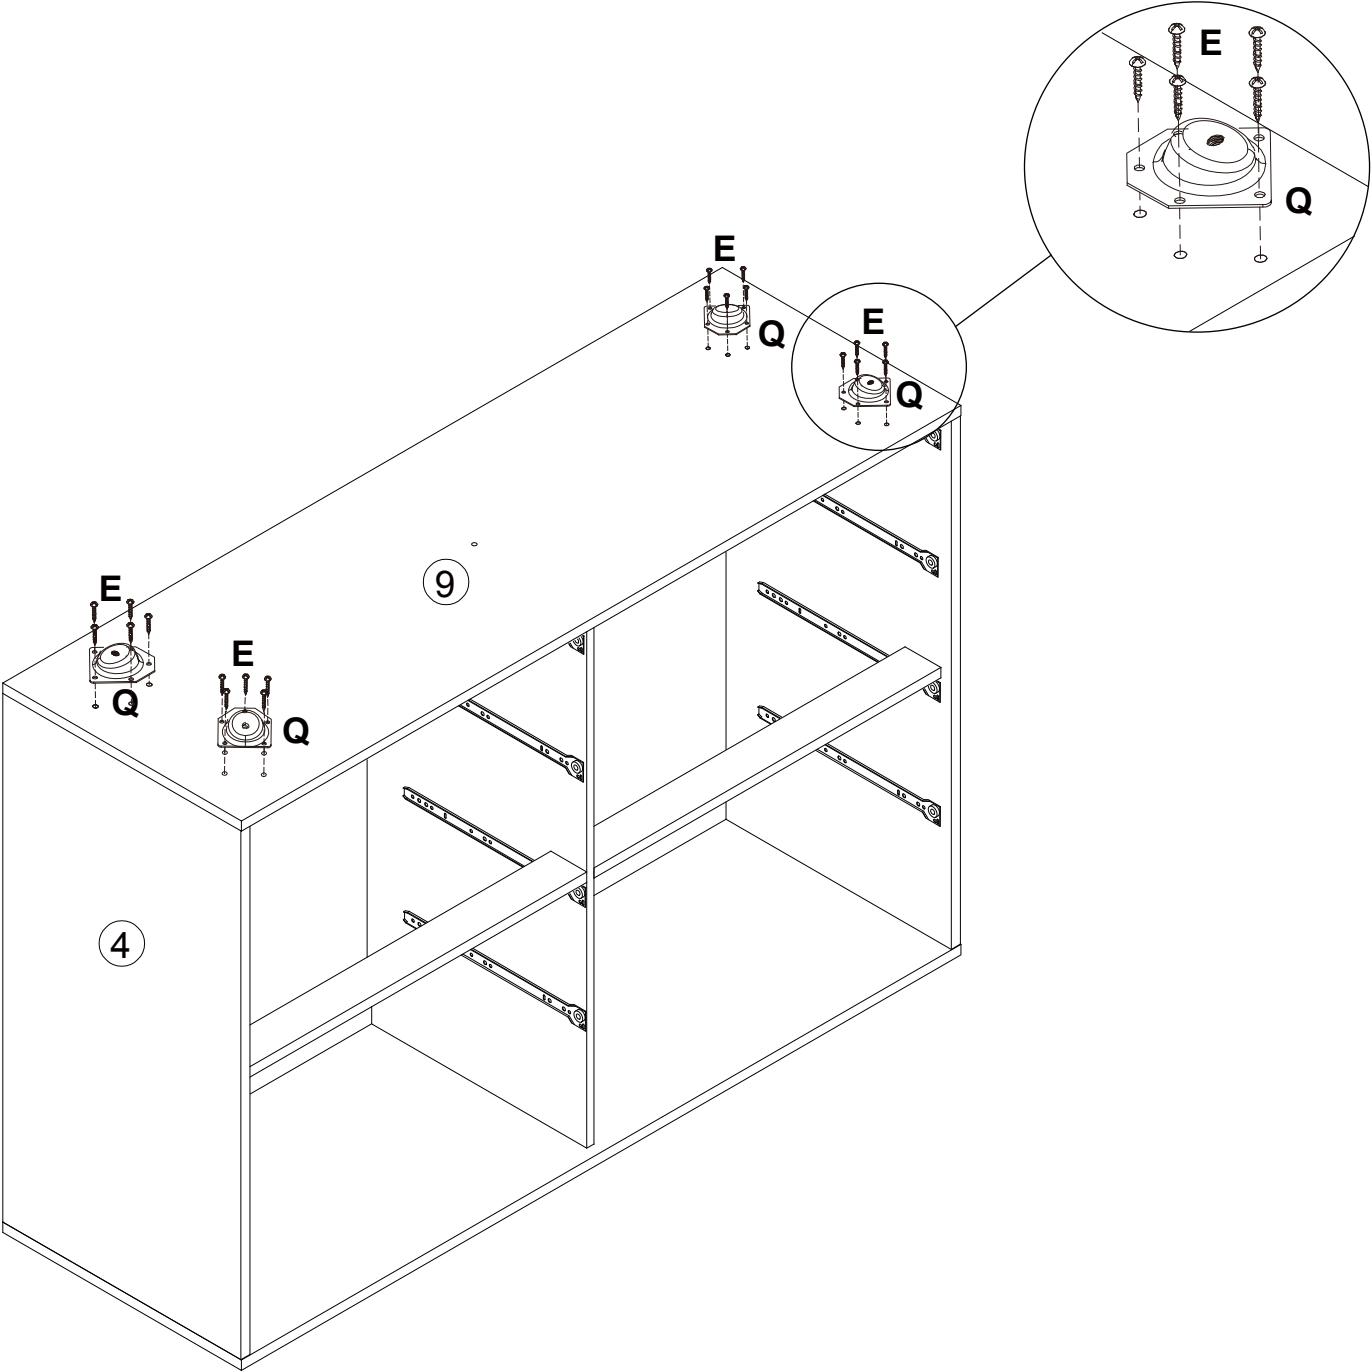

Step 11


R	x1
	

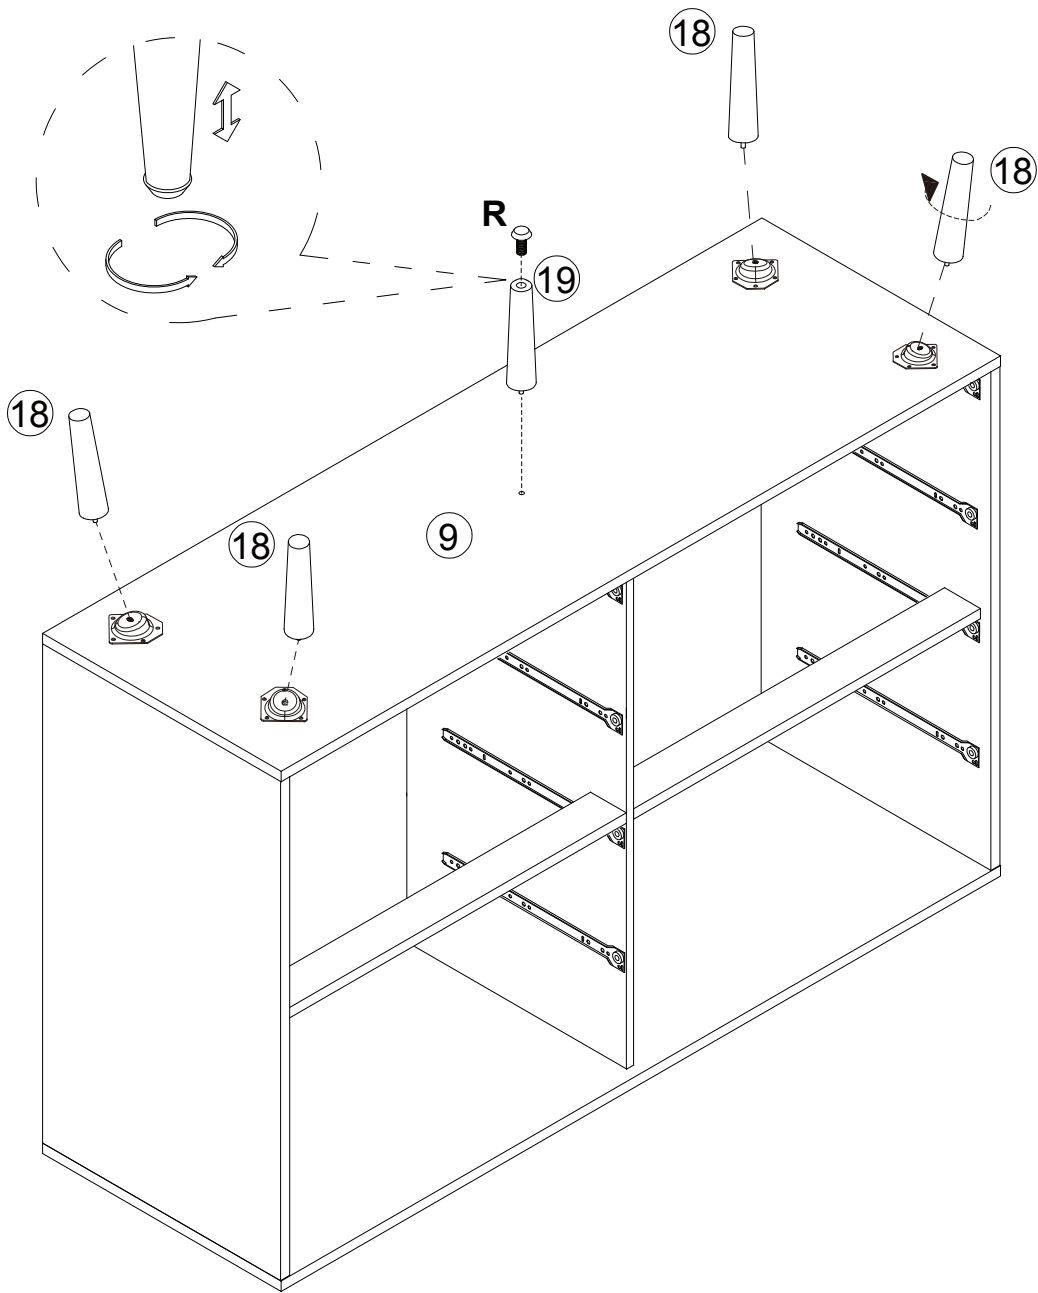


Step 12


O	x16
	

P	x16
	

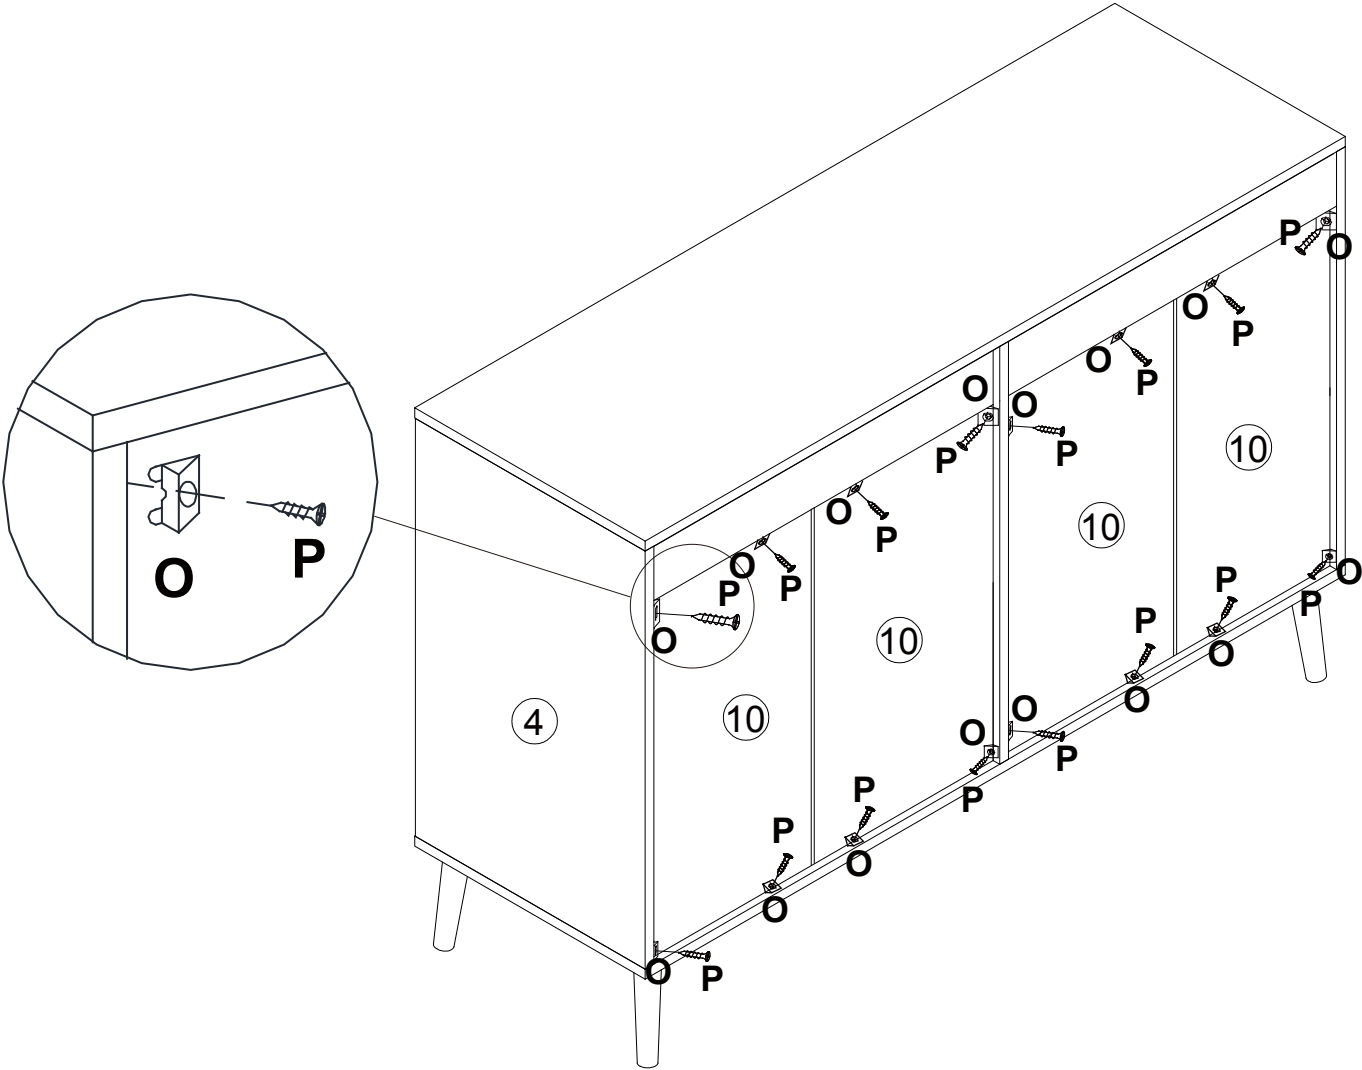







Step 13

C	x48
	

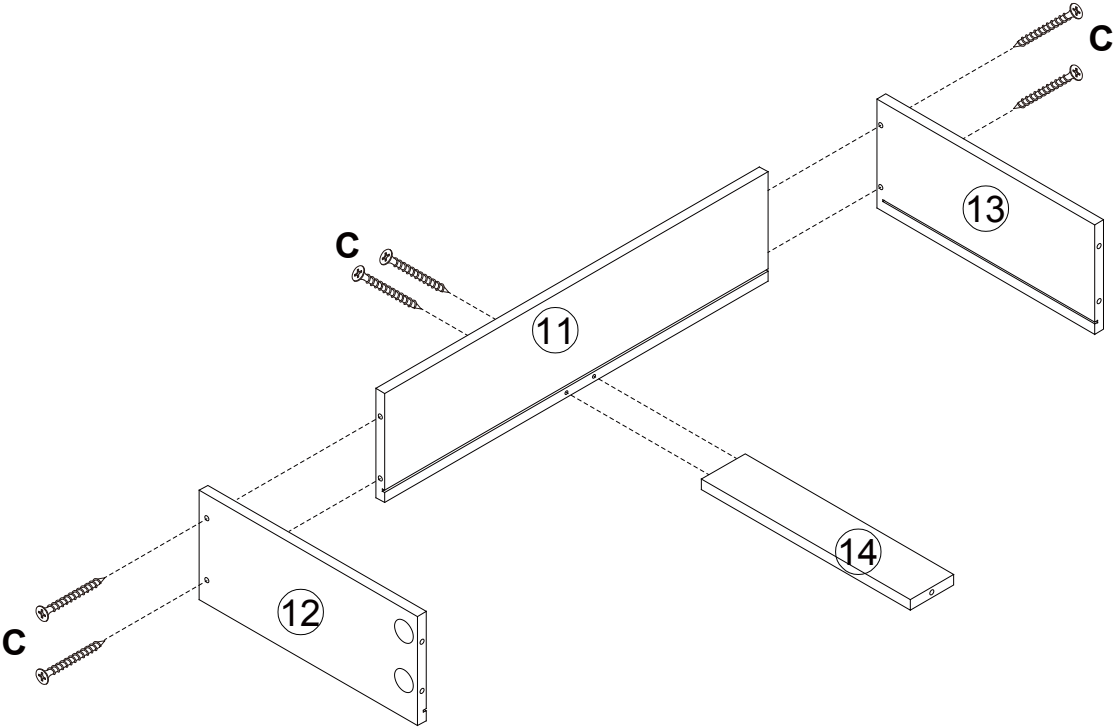

x8

Step 14

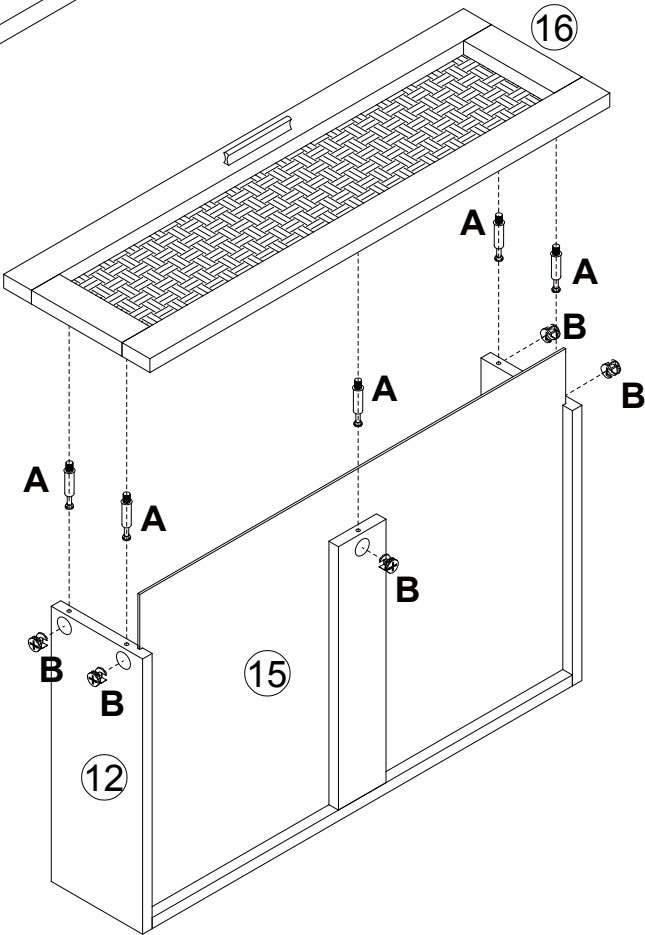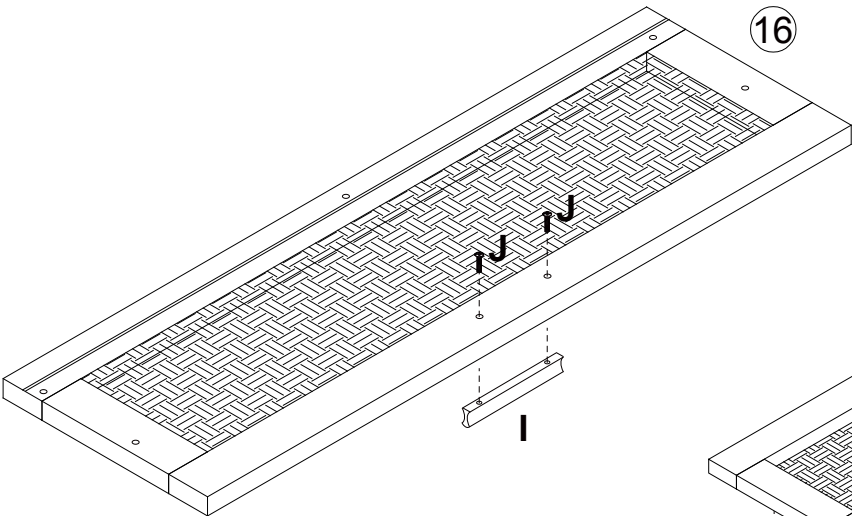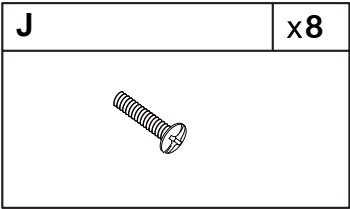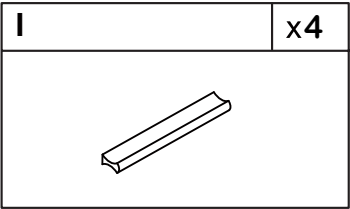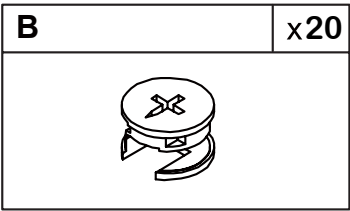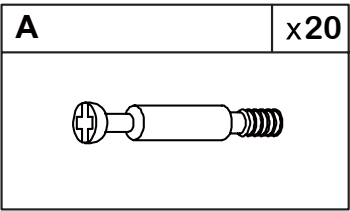

x4


Step 15

A	x20

B	x20

I	x4


J	x8

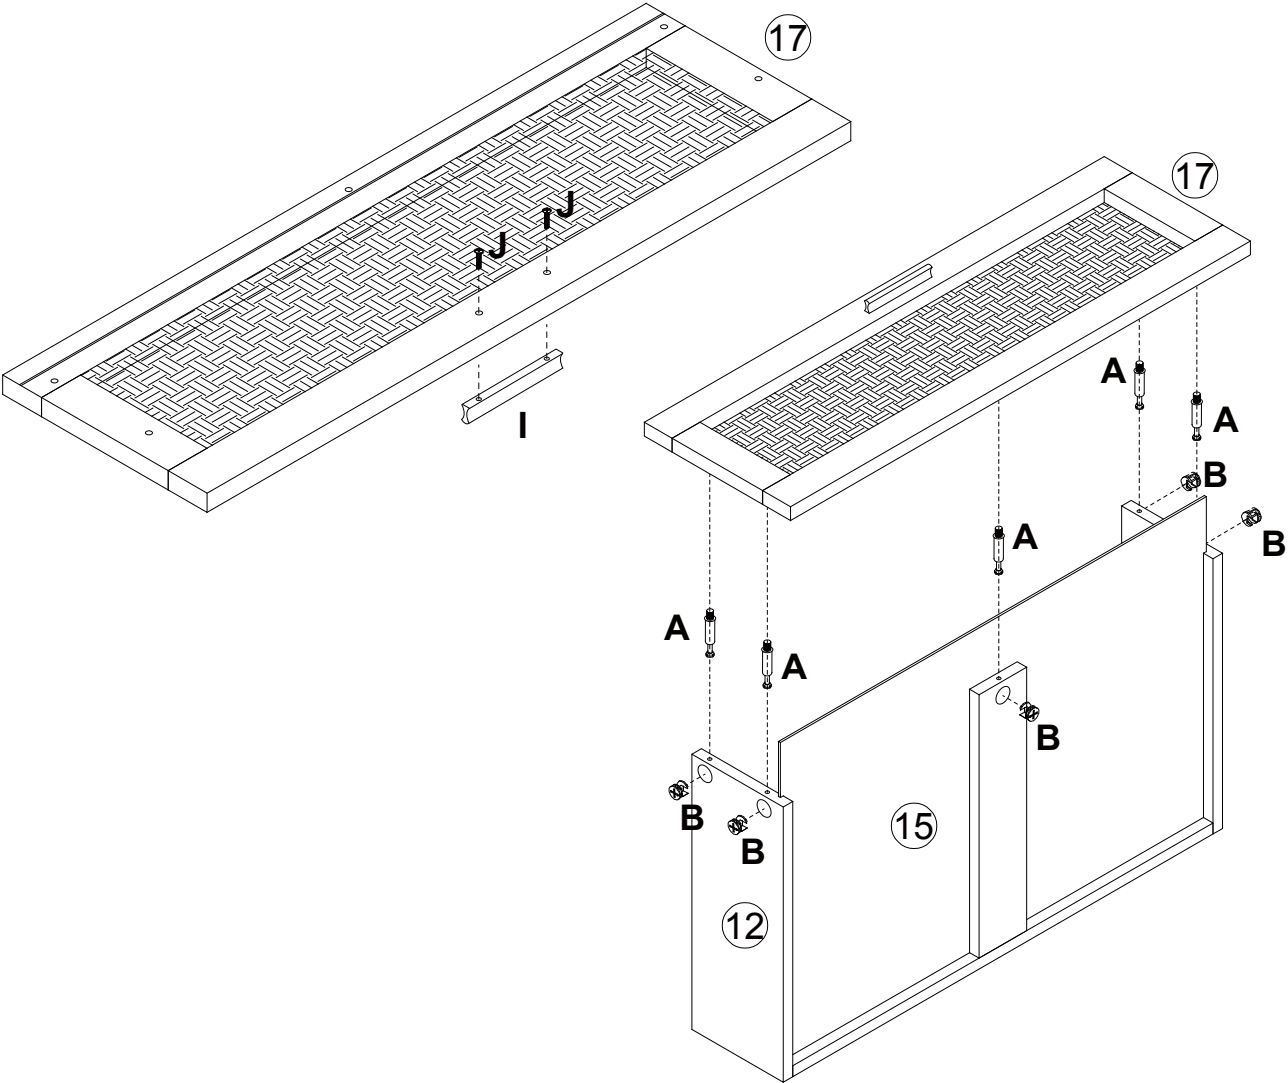


x4

Step 16

D	x24
	


N	x4
 CL DL DR CR	

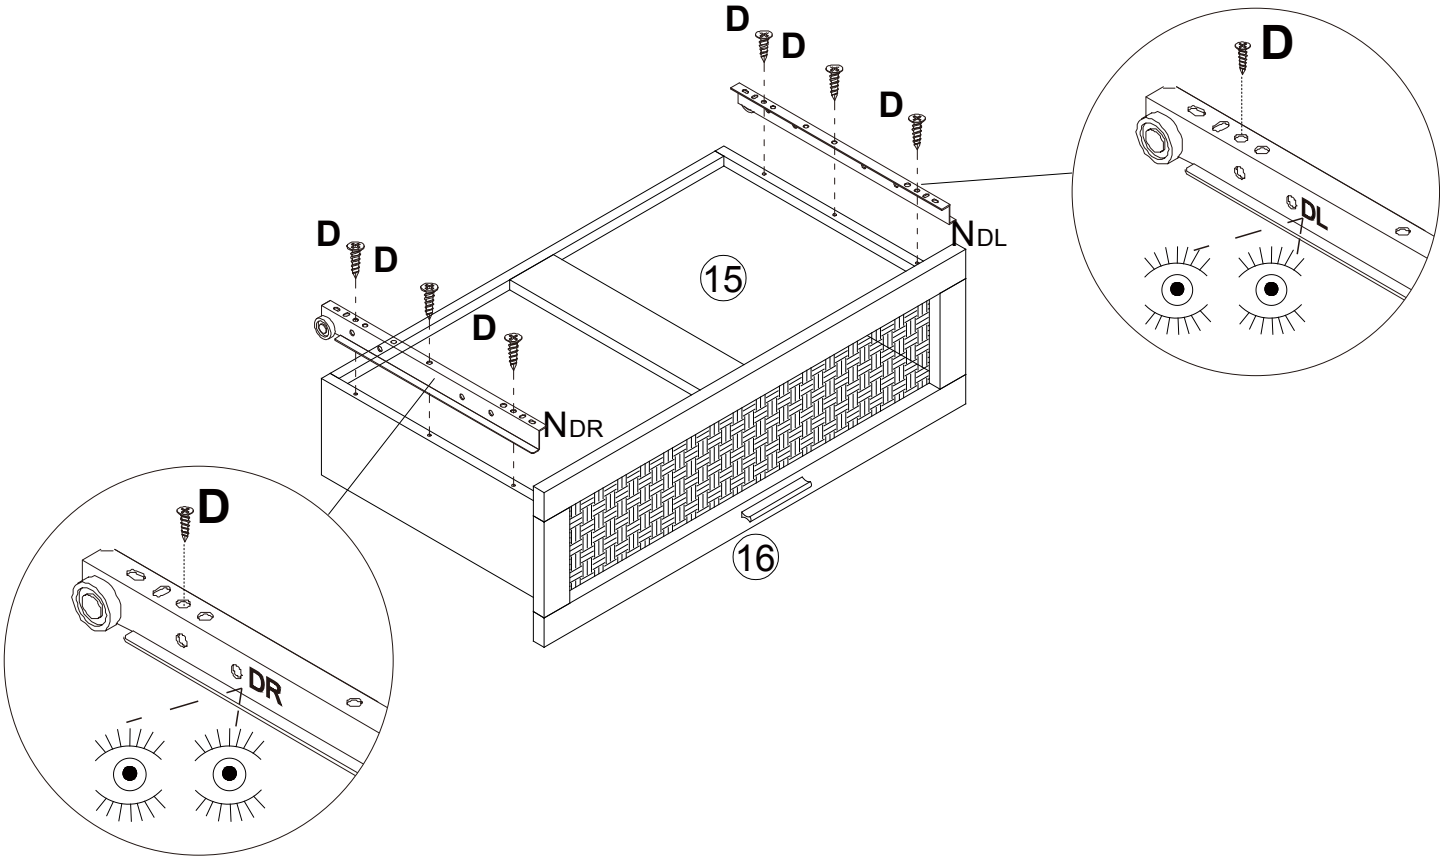


x4

Step 17



D	x24
	

N	x4
 CL DL DR CR	

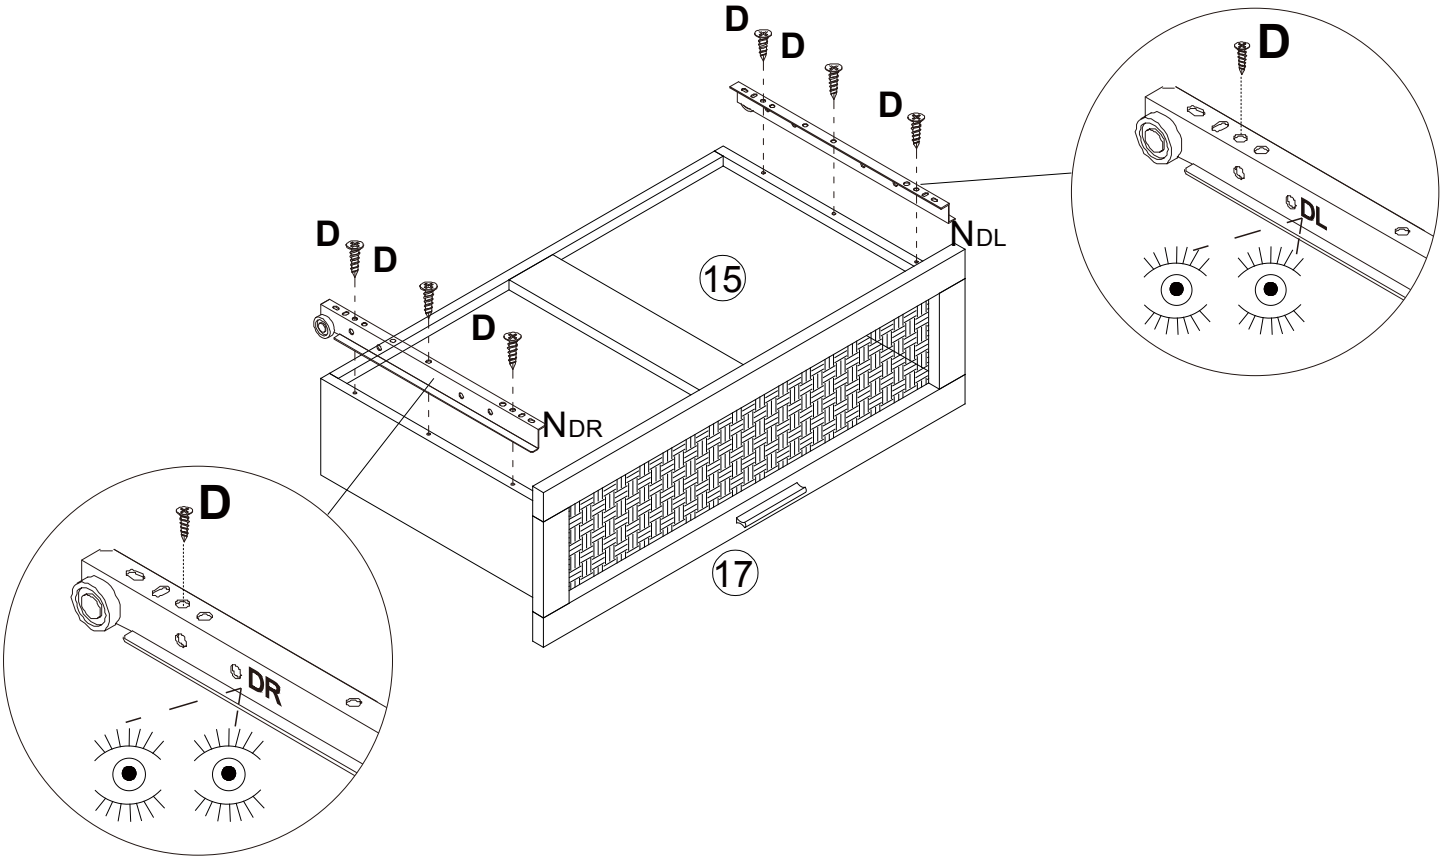


x4

Step 18

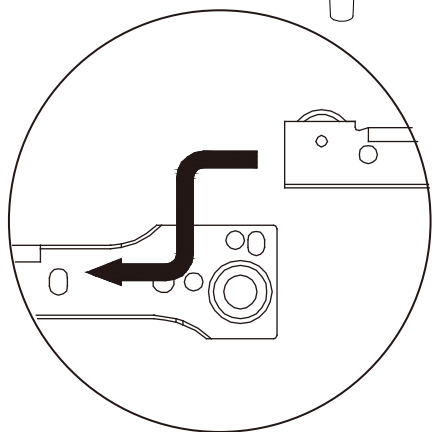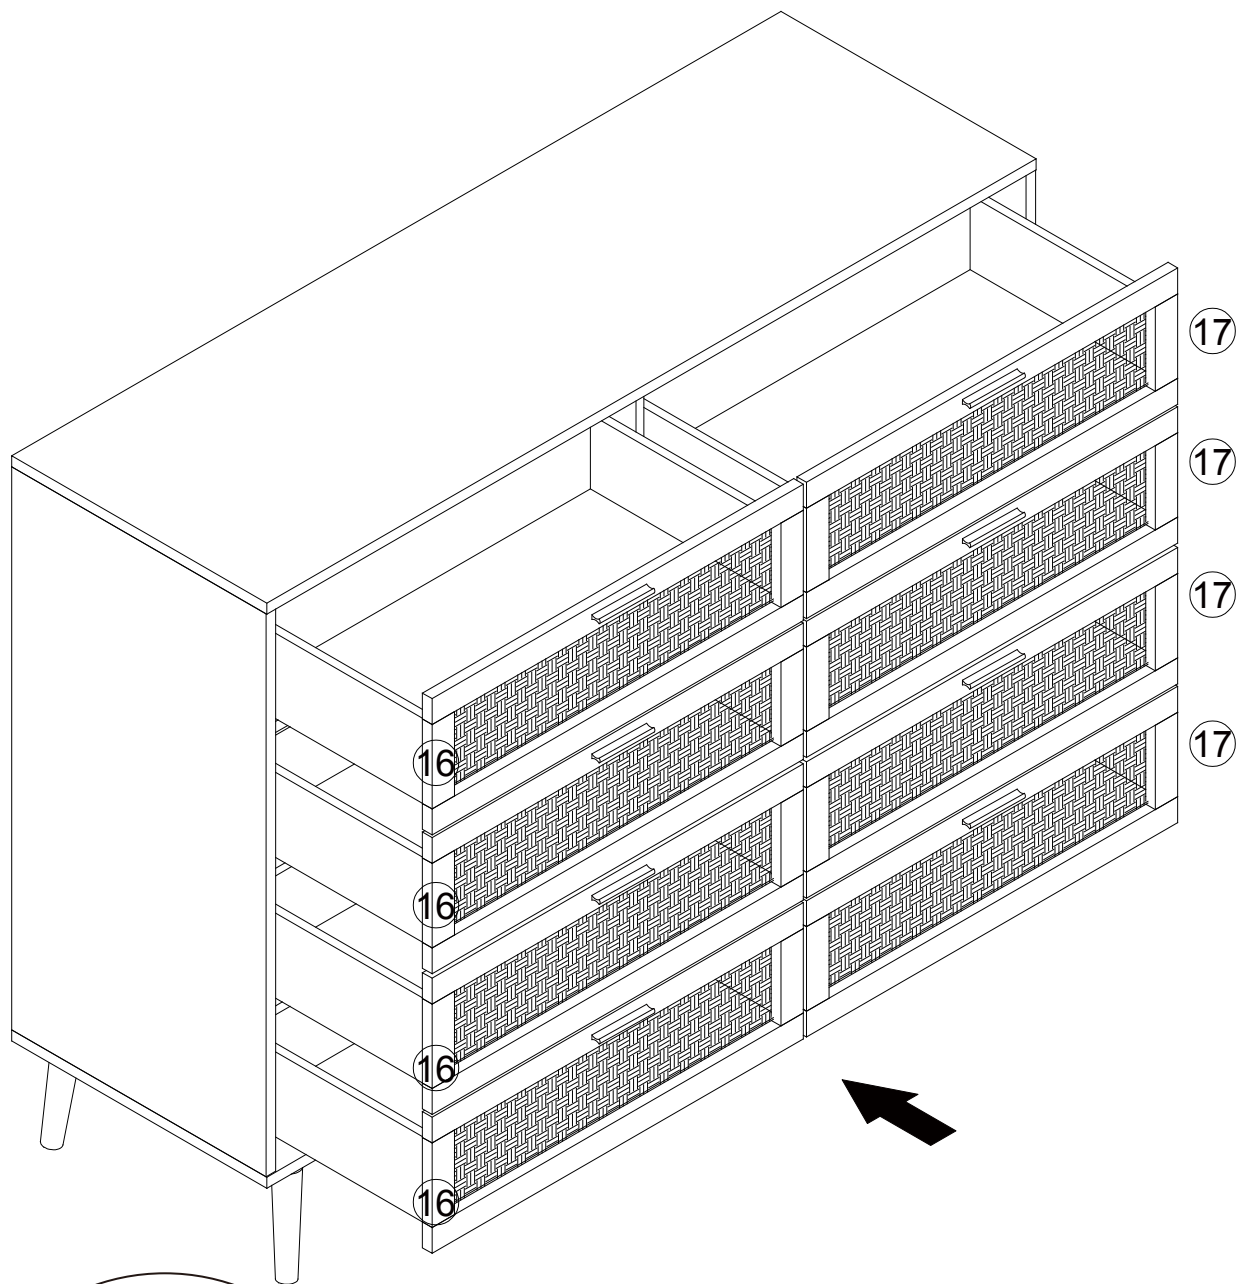



Step 19

E	x2	K	x2
			

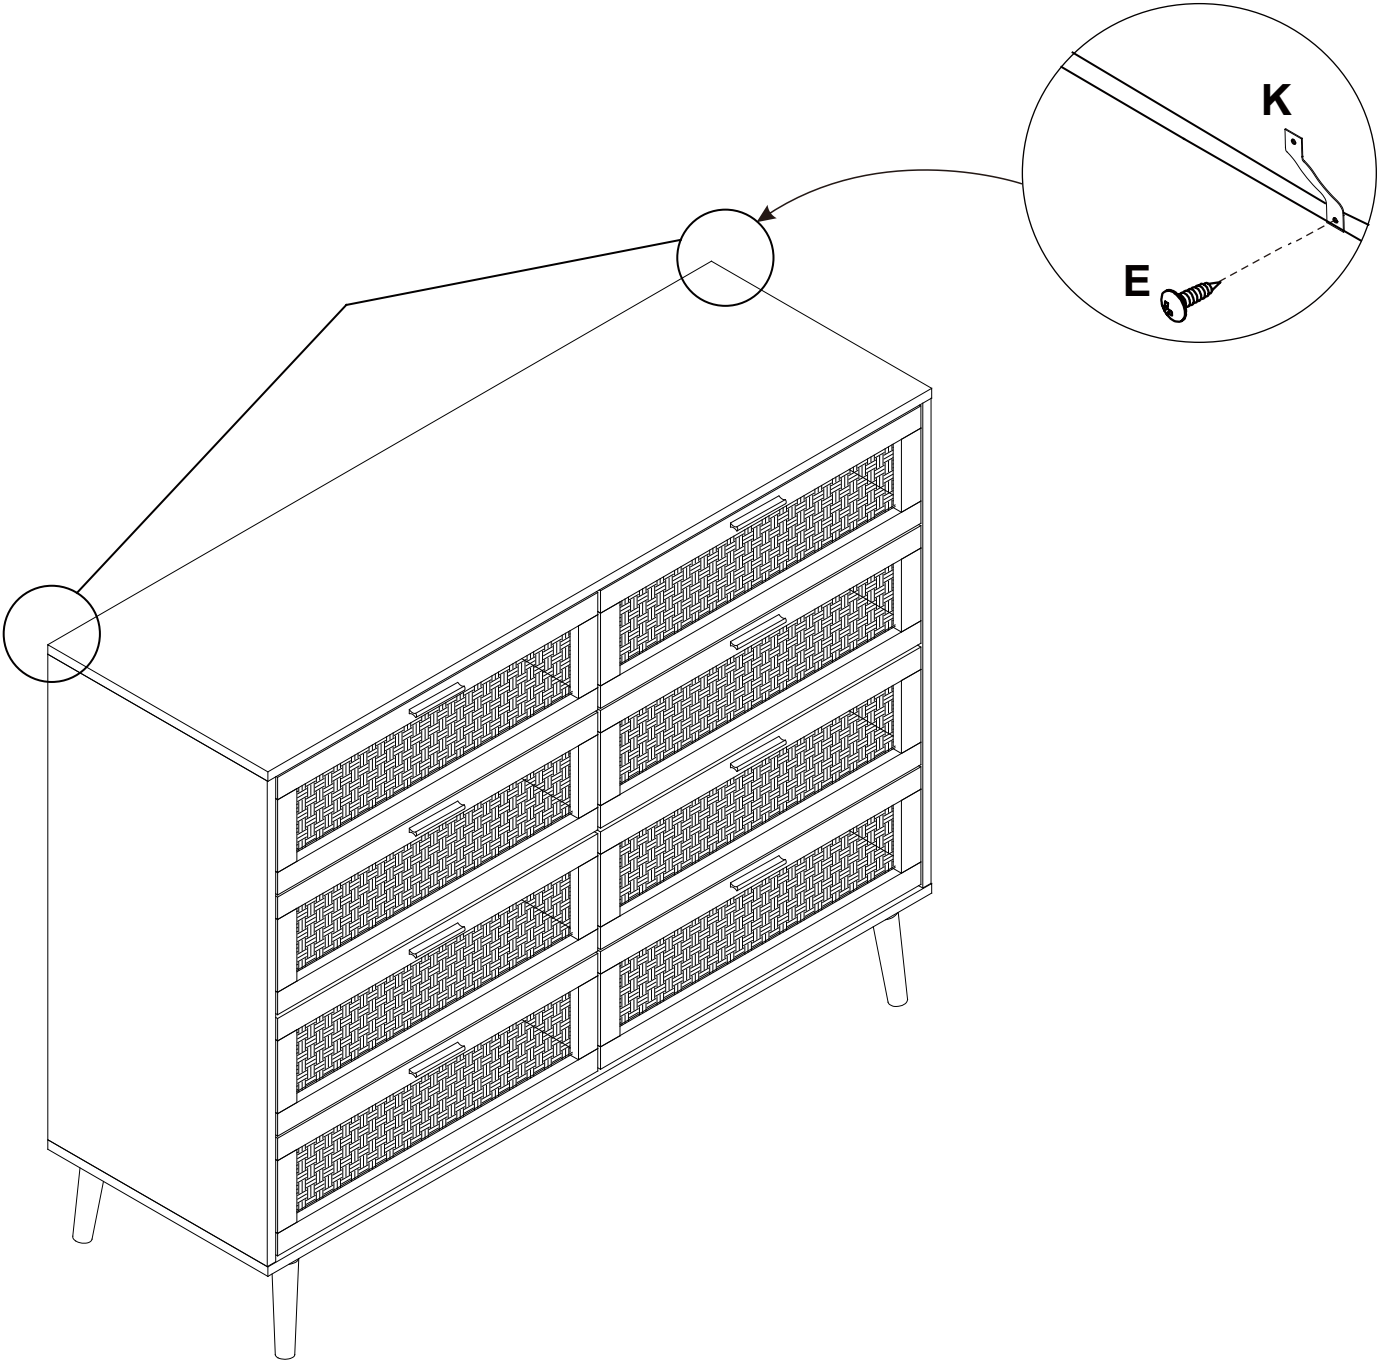

Step 20

F	x2	L	x2
			

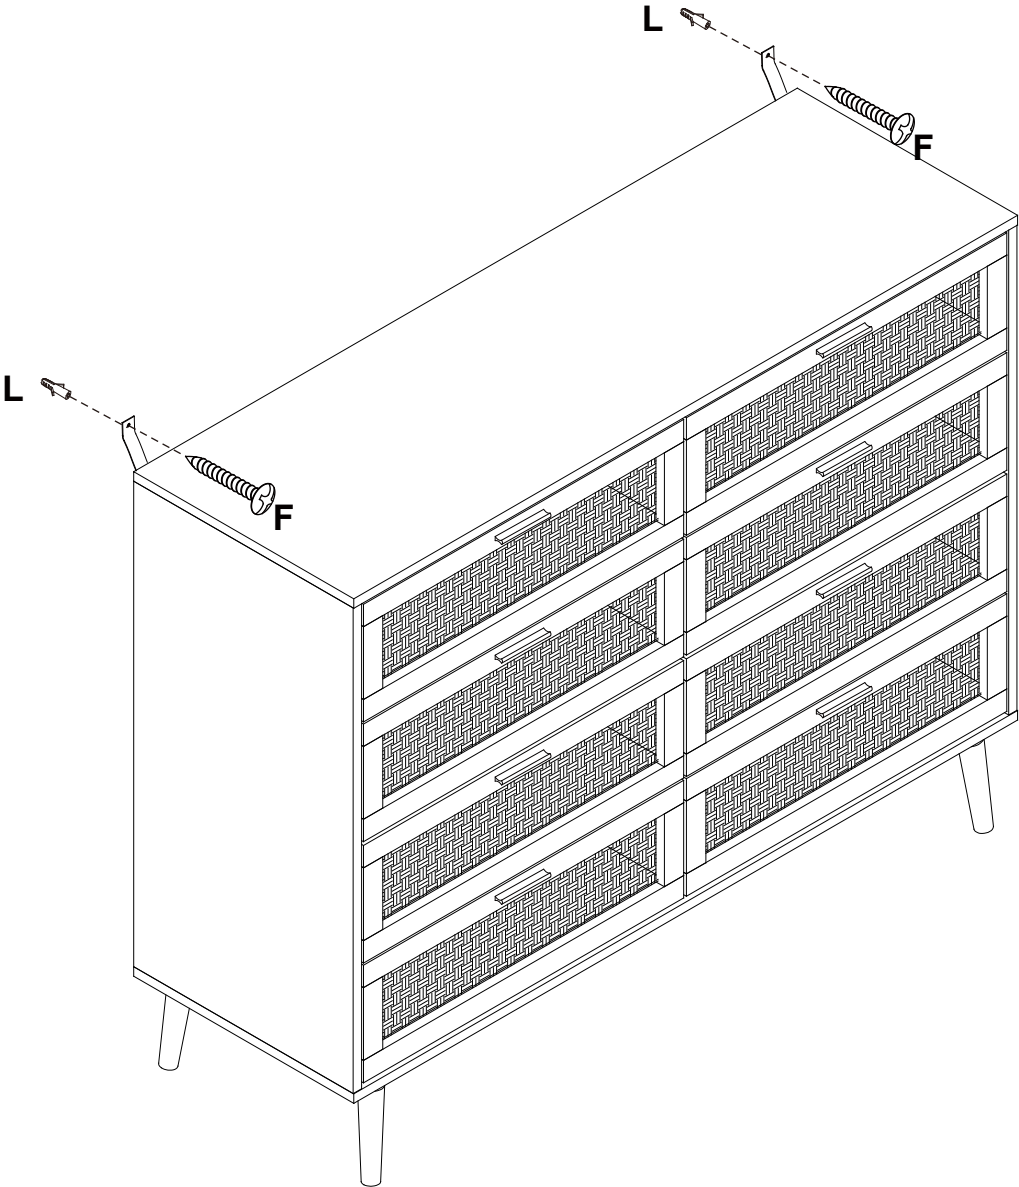

Step 21

