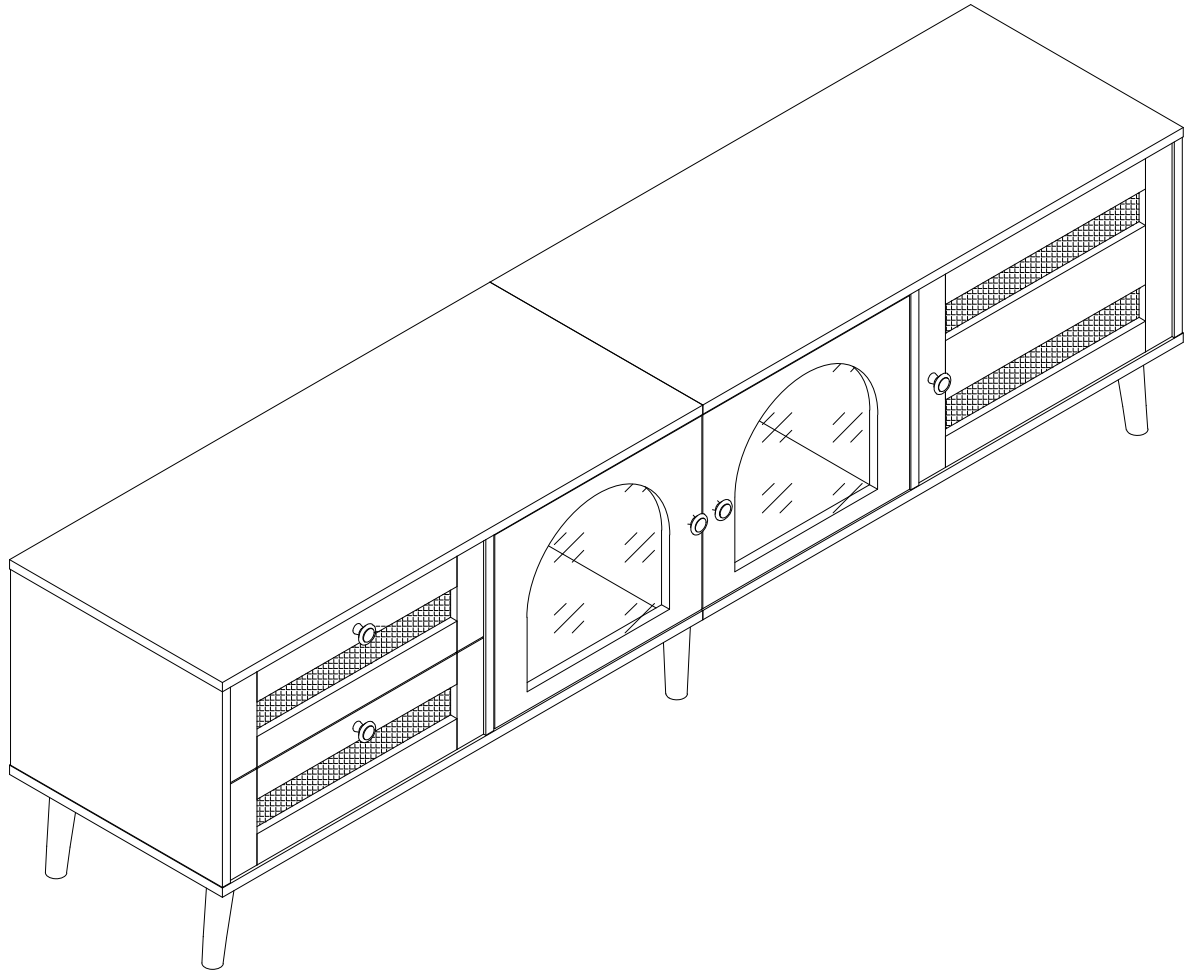
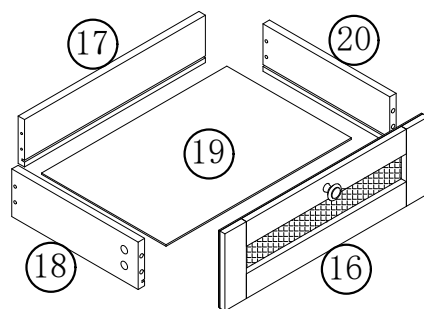
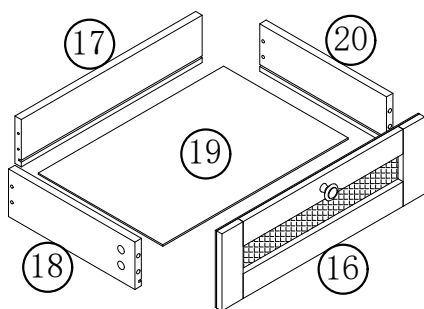
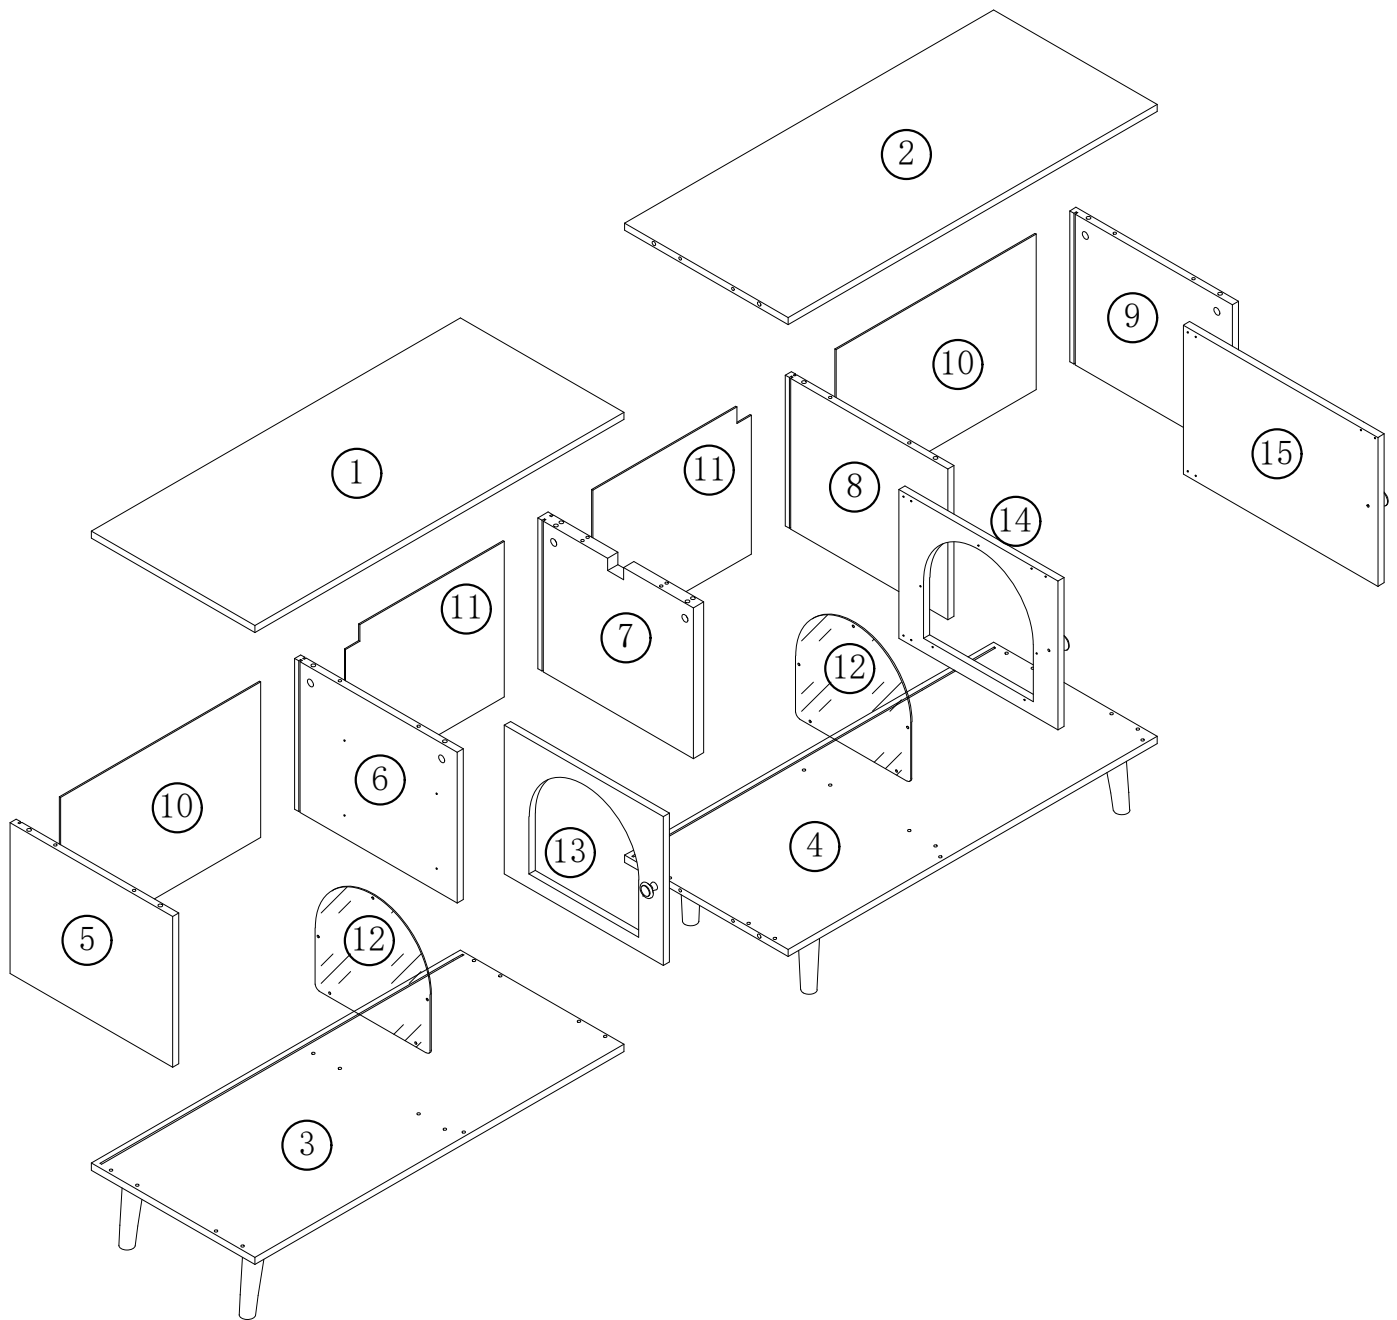


ASSEMBLY INSTRUCTION





















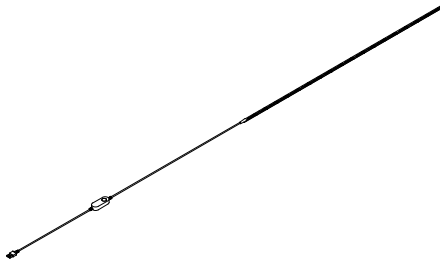






If you encounter any difficulties (e.g., missing parts, damaged parts, unsuccessful assembly, etc.) during assembly, do not hesitate to contact the seller directly. Replacement parts are available for any damage or missing parts. The after-sales team will get back to you within 24 hours.

ASSEMBLY INSTRUCTION




ASSEMBLY INSTRUCTION

<div>A</div> KM6x40mm  X20	<div>B</div> M6x64mm  X4	<div>C</div> M15x11mm  X28	<div>D</div> M5x40mm  X20
<div>E</div> M4x18mm  X5	<div>F</div> M4x14mm  X40	<div>G</div> M3.5x14mm  X51	<div>H</div> 6x50mm  X28
<div>I</div>  X3	<div>J</div> L 300mm  X2	<div>CL</div>  <div>DL</div>  <div>CR</div>  <div>DR</div>  X2	<div>K</div>  X5
<div>L</div> 140mm  X6	<div>M</div> 134mm  X2	<div>N</div>  X6	<div>O</div>  X2
<div>P</div>  X1	<div>Q</div>  X1	<div>R</div> Left  X3	
<div>S</div> right  X3	<div>T</div>  M4  X1		


ASSEMBLY INSTRUCTION

①

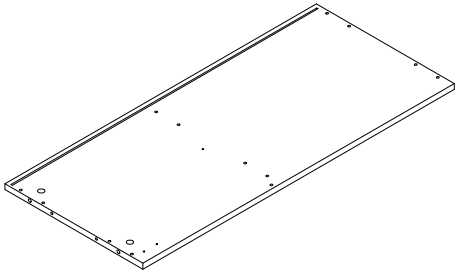


X1

②

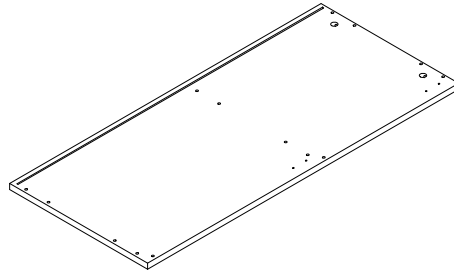


X1

③

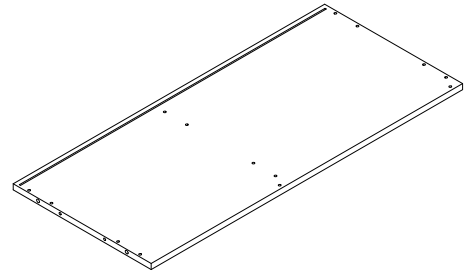


X1

④

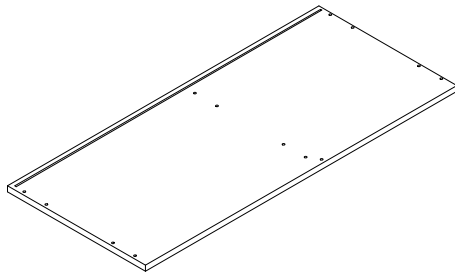


X1

⑤

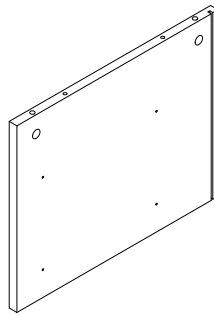


X1

⑥

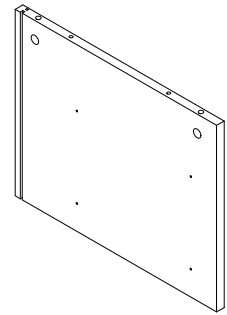


X1

⑦

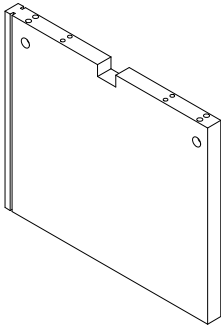


X1

⑧

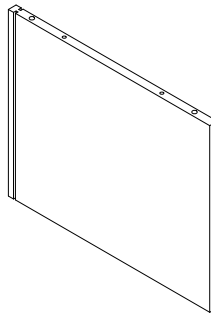


X1

⑨

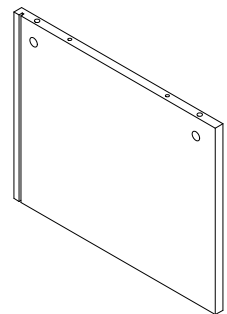


X1

⑩

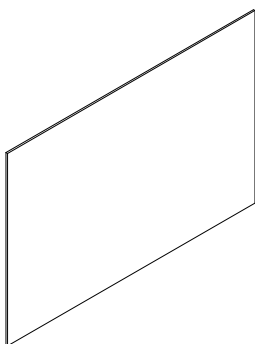


X2

⑪

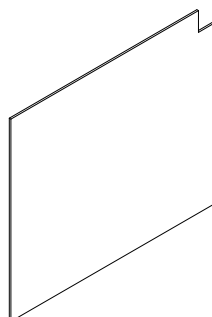

X2


⑫

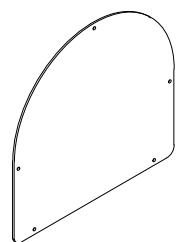

X2


ASSEMBLY INSTRUCTION

⑬

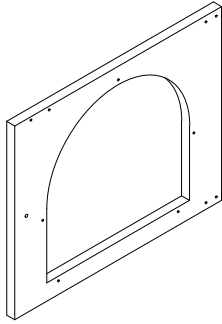


X1

⑭

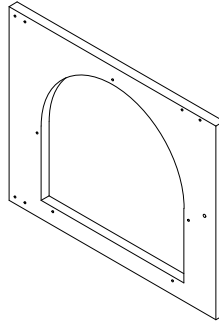


X1

⑮

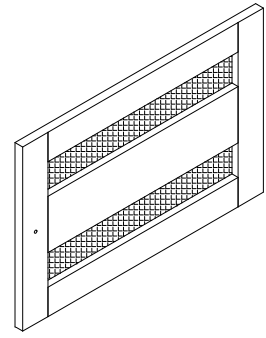


X1

⑯

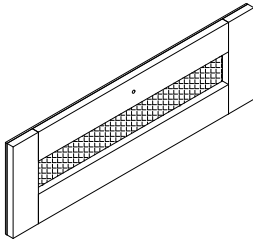


X2

⑰

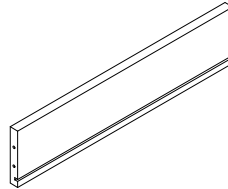


X2

⑱

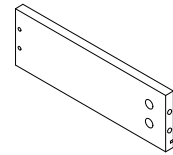


X2

⑲

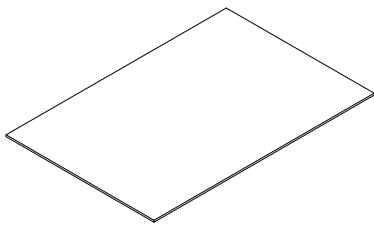

X2

⑳

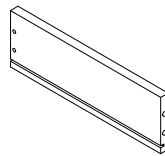


X2

ASSEMBLY INSTRUCTION




STEP 1

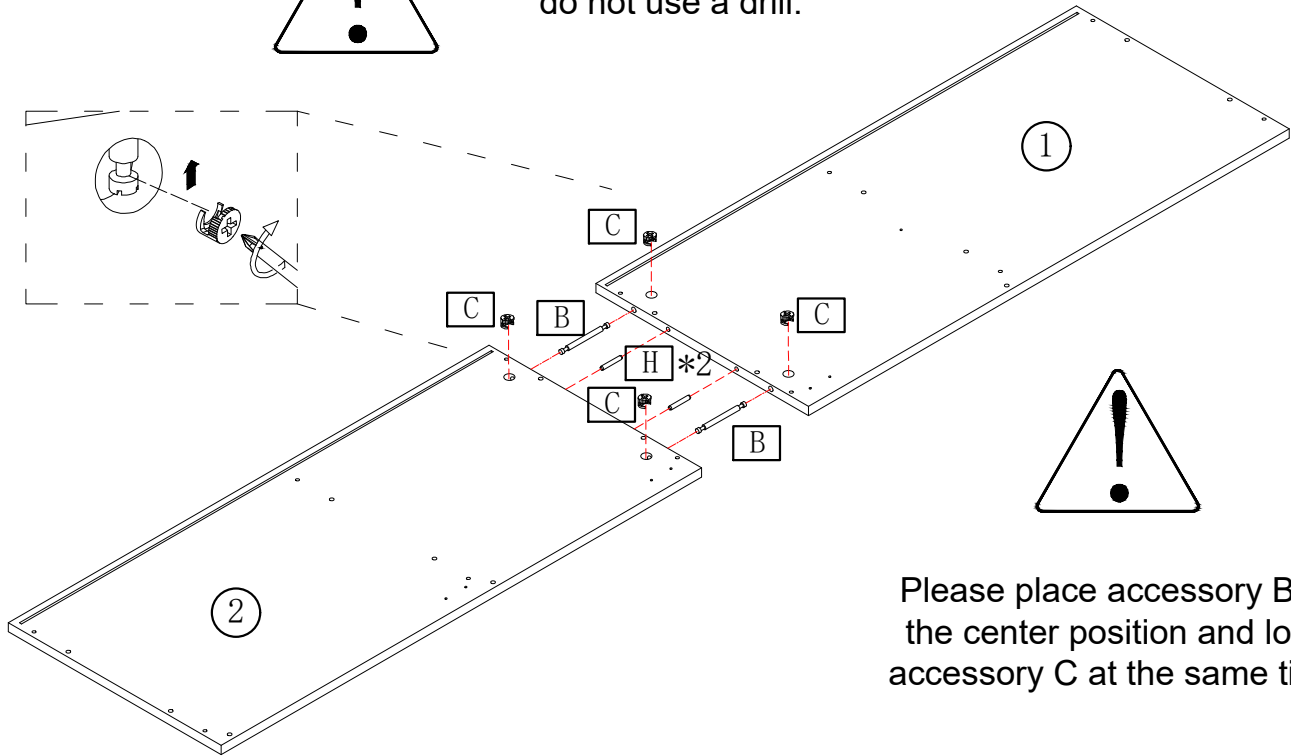

Tighten accessory C manually;
do not use a drill.







Please place accessory B in
the center position and lock
accessory C at the same time

[B] M6*64  *2	[C] M15*11  *4	[H] 8*50  *2
---	---	---

STEP 2


We need to divide
accessory I into two.

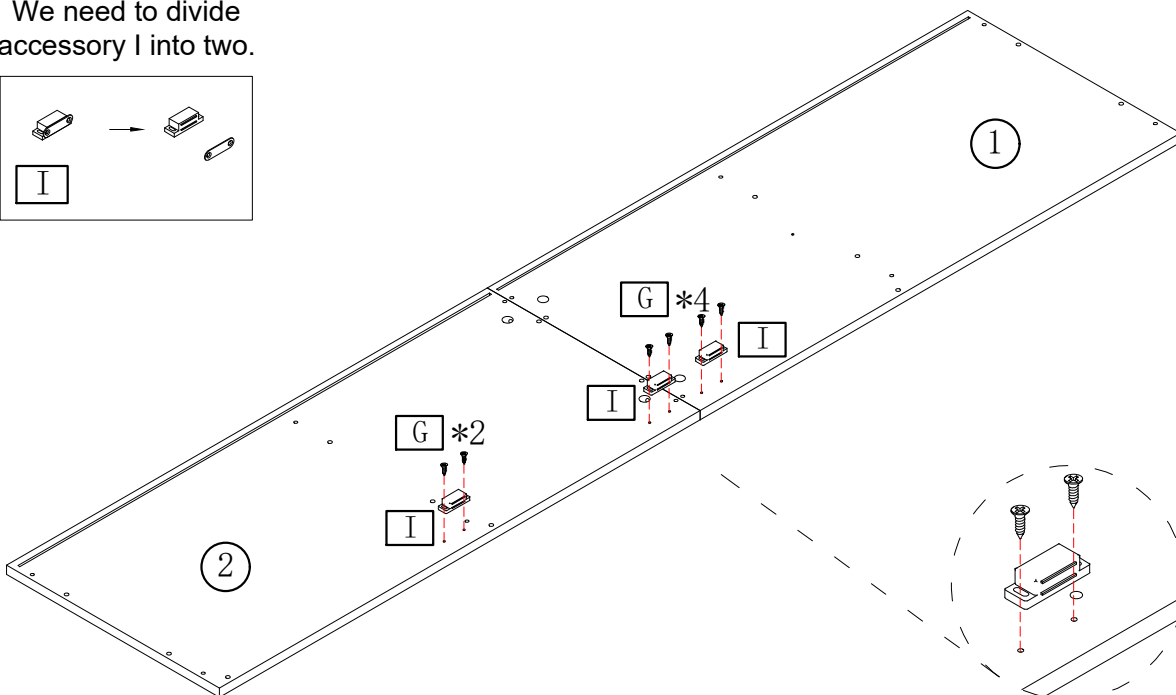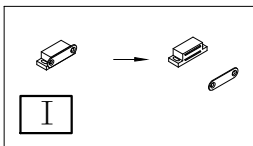

[G] M3. 5*14  *6	[I]  *3
---	---

ASSEMBLY INSTRUCTION

STEP 3

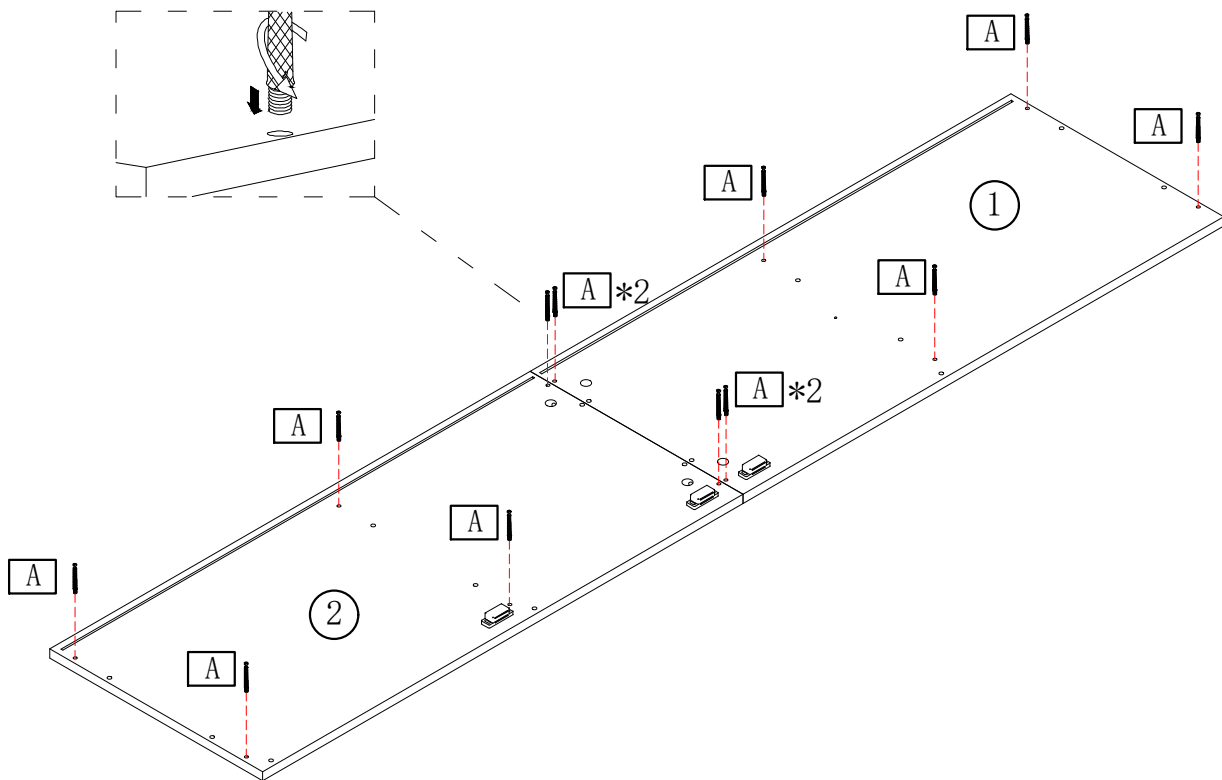


A M6*40



*12

STEP 4

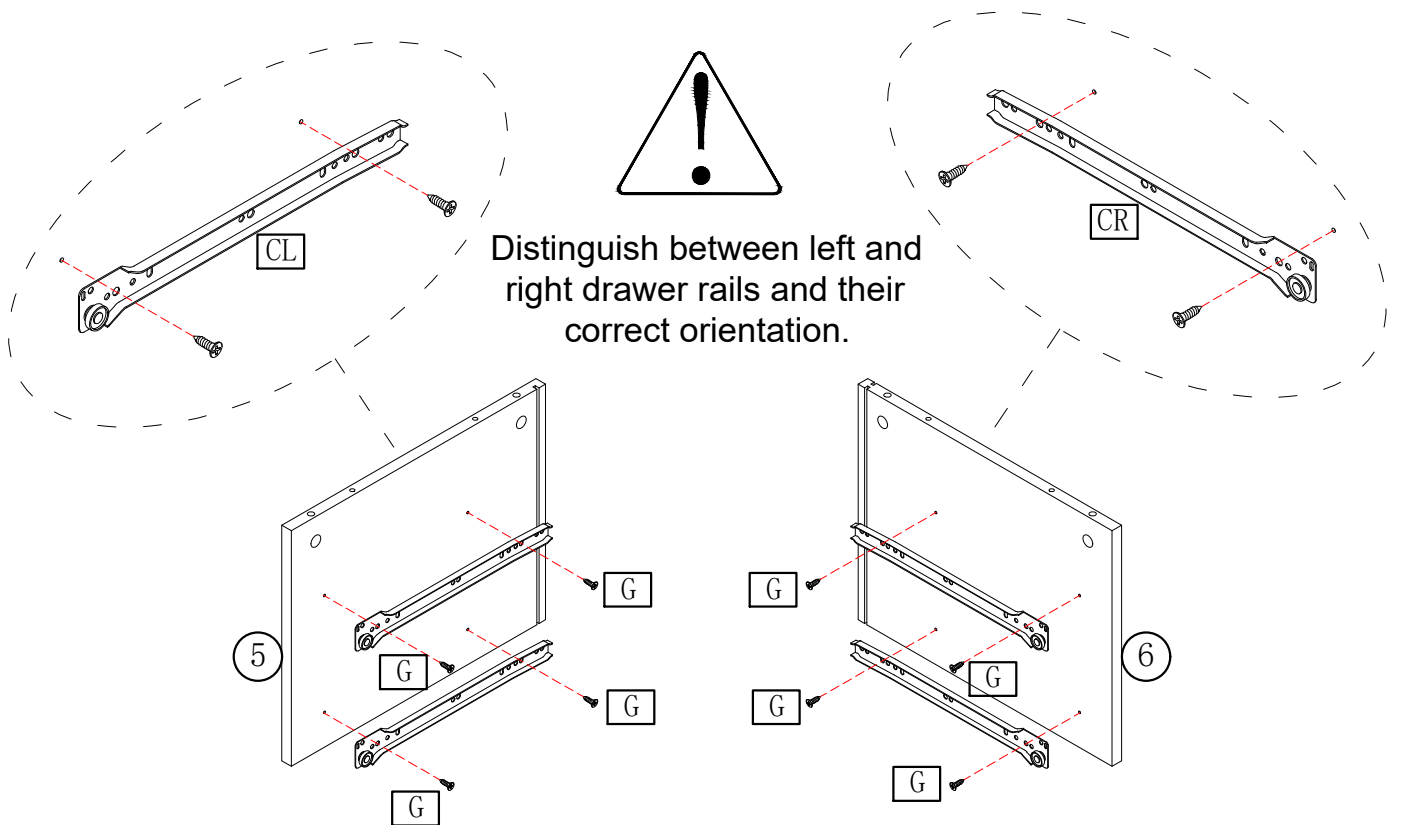


Distinguish between left and right drawer rails and their correct orientation.

G M3. 5*14



*8


J L 300MM



*2


ASSEMBLY INSTRUCTION

STEP 5

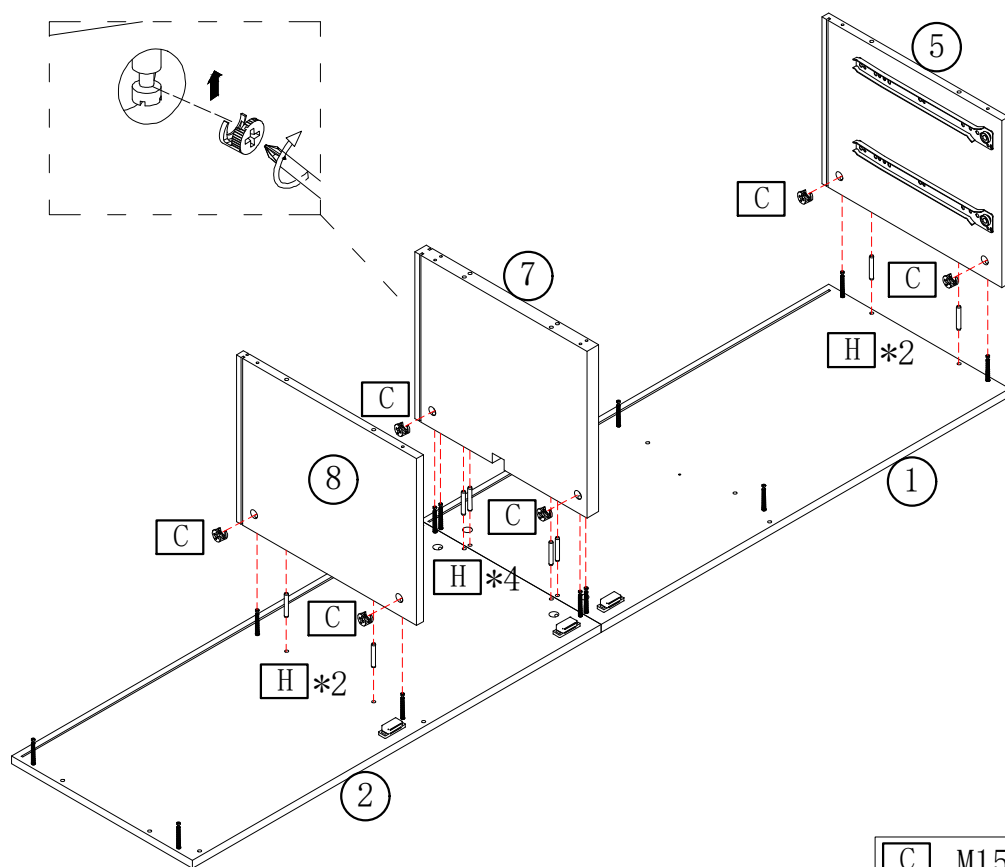

[C] M15*11	[H] 8*50
*6	*8


STEP 6

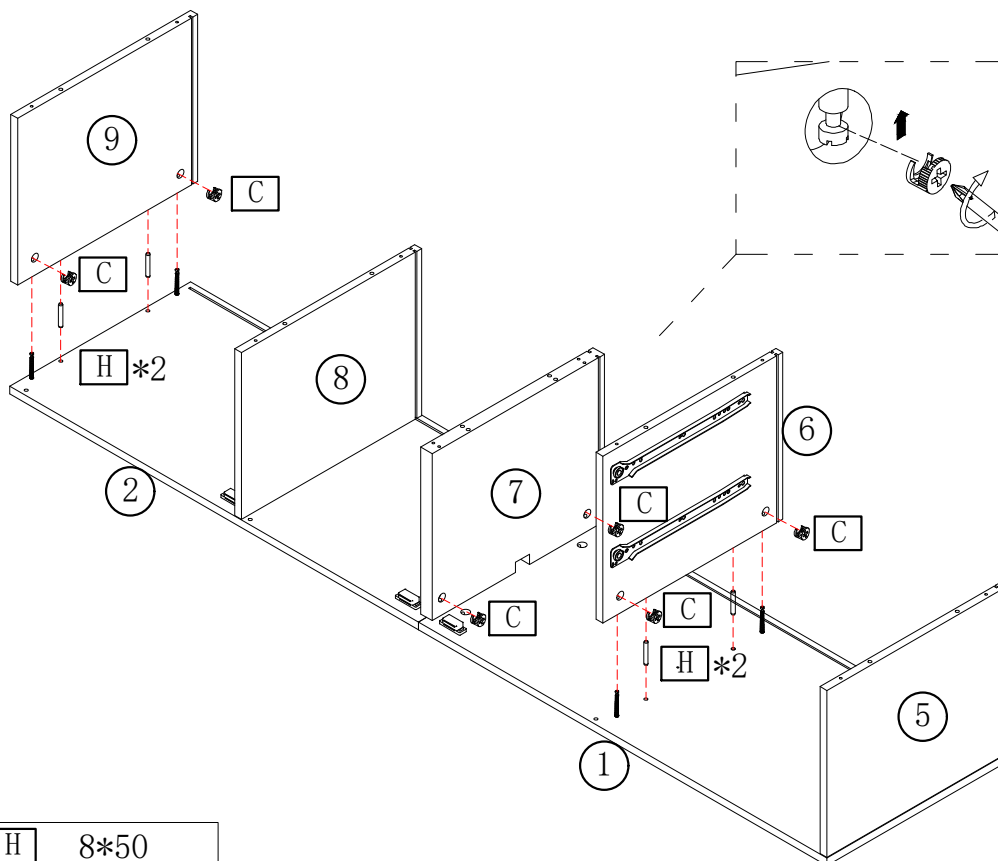


[C] M15*11	[H] 8*50
*6	*4

ASSEMBLY INSTRUCTION

STEP 7

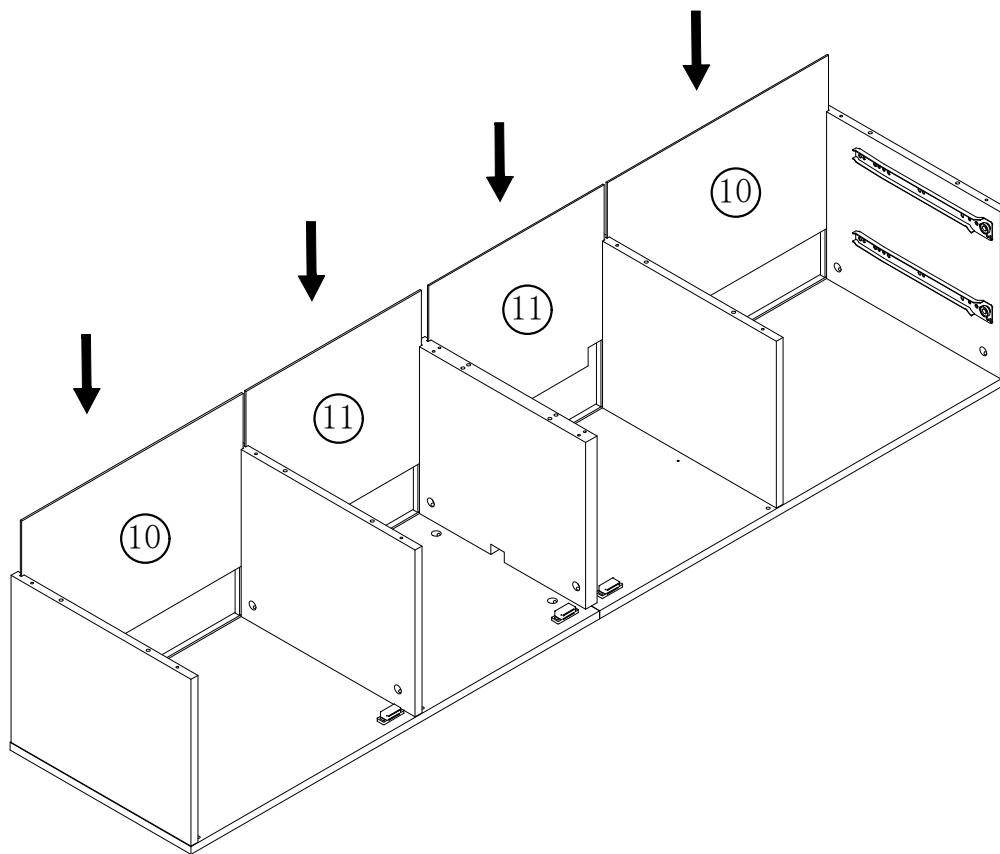

STEP 8

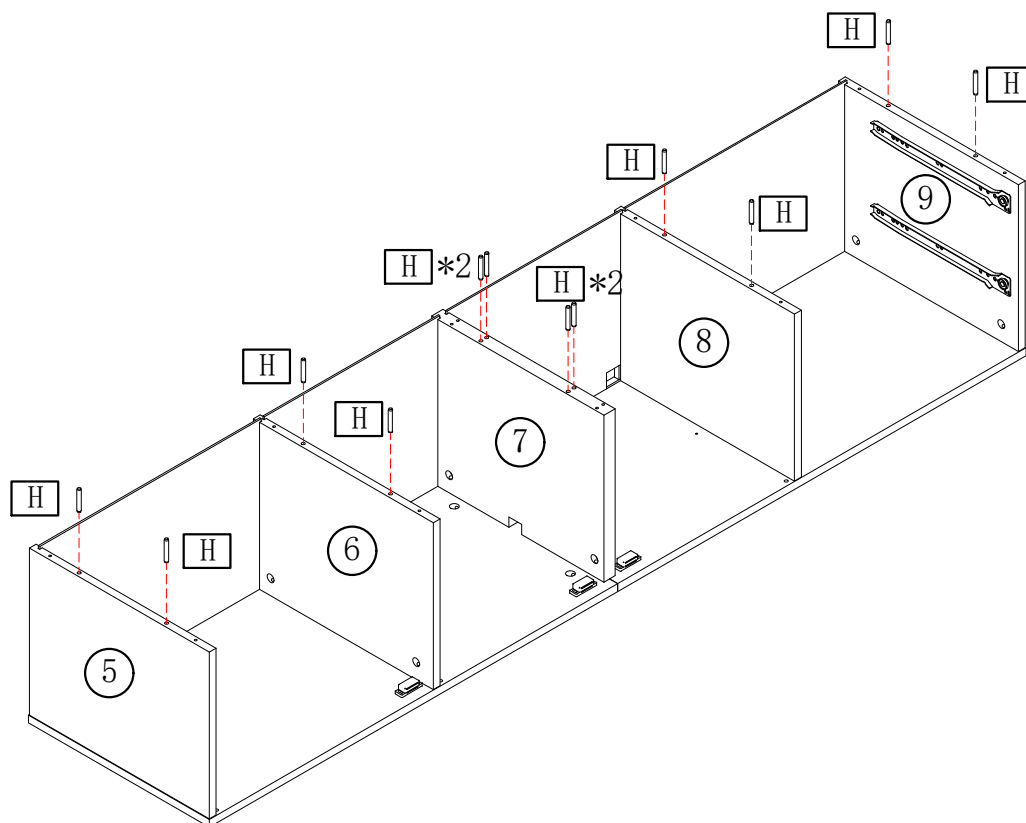


ASSEMBLY INSTRUCTION



STEP 9




Tighten accessory C manually;
do not use a drill.

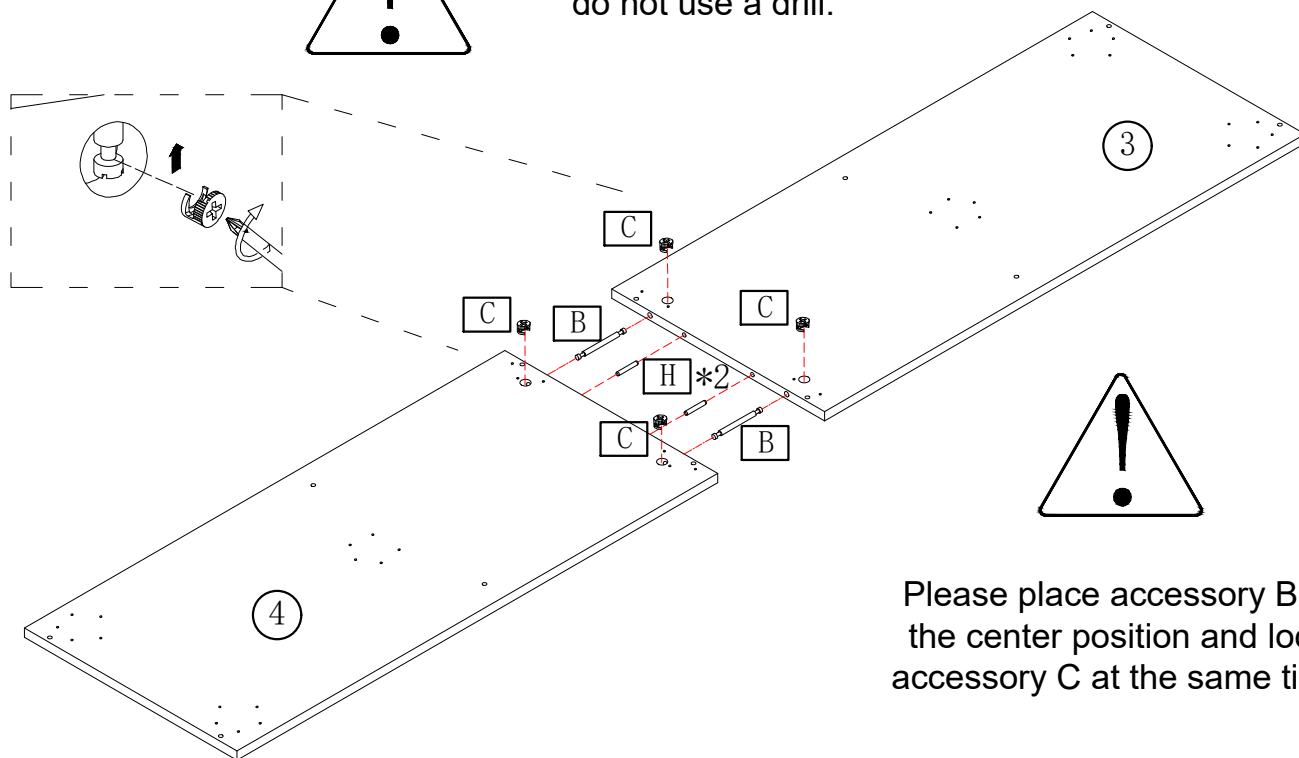


Please place accessory B in
the center position and lock
accessory C at the same time


B	M6*64	C	M15*11
	*2		*4

STEP 10

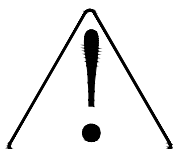


Support the middle connection when
moving the top and bottom plates to
prevent breakage.

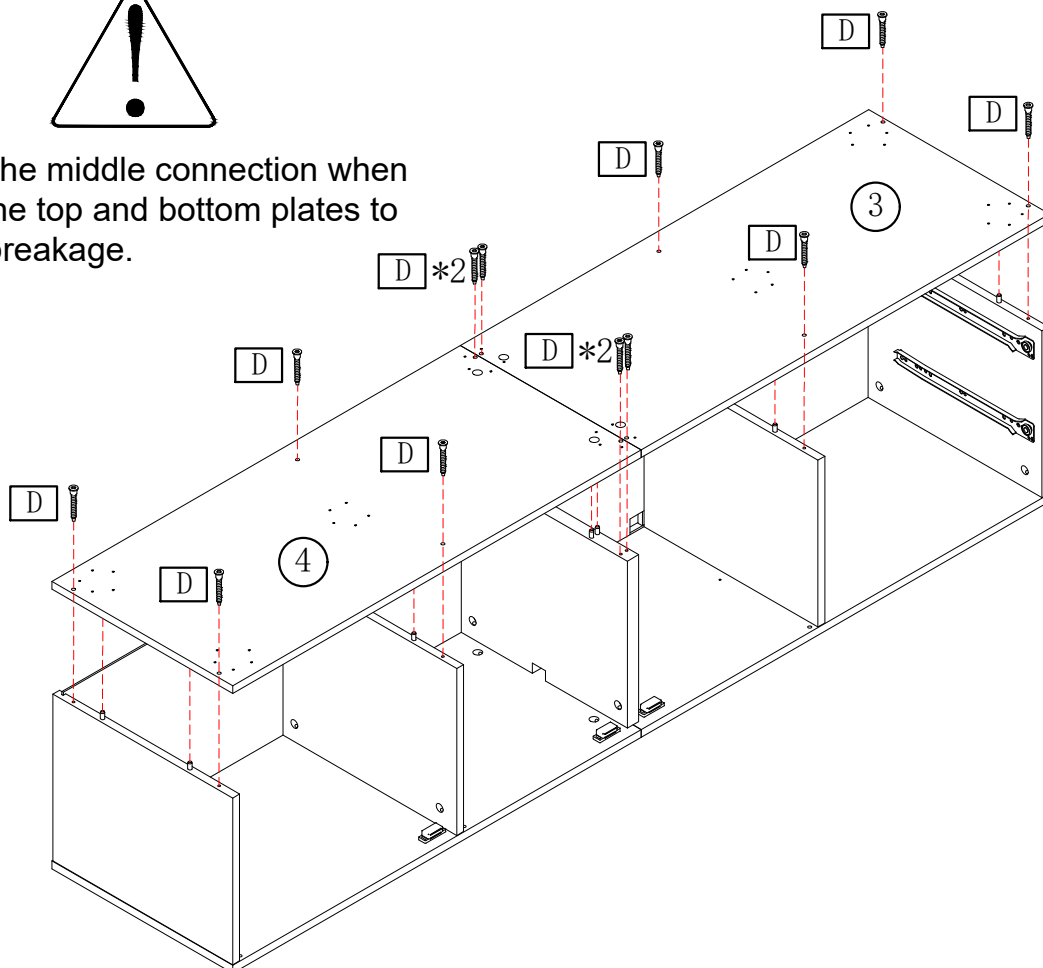



D	M5*40
	*12


ASSEMBLY INSTRUCTION

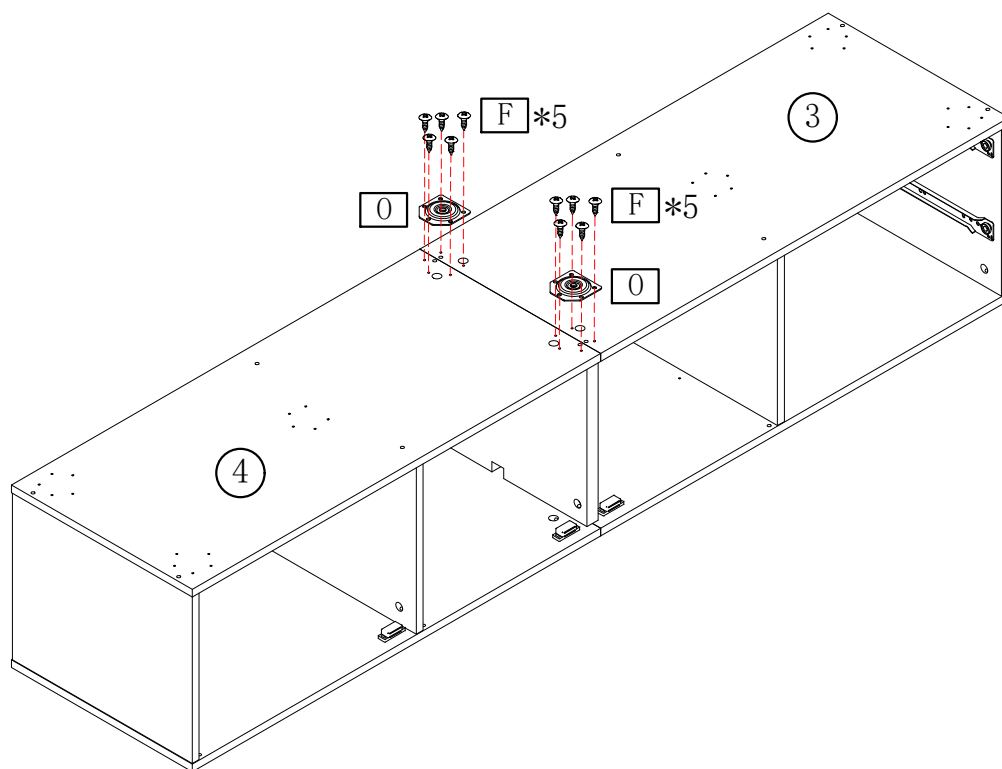

STEP 11



<div>F</div> <div>M4*14</div>	<div>O</div>
 <div>*10</div>	 <div>*2</div>


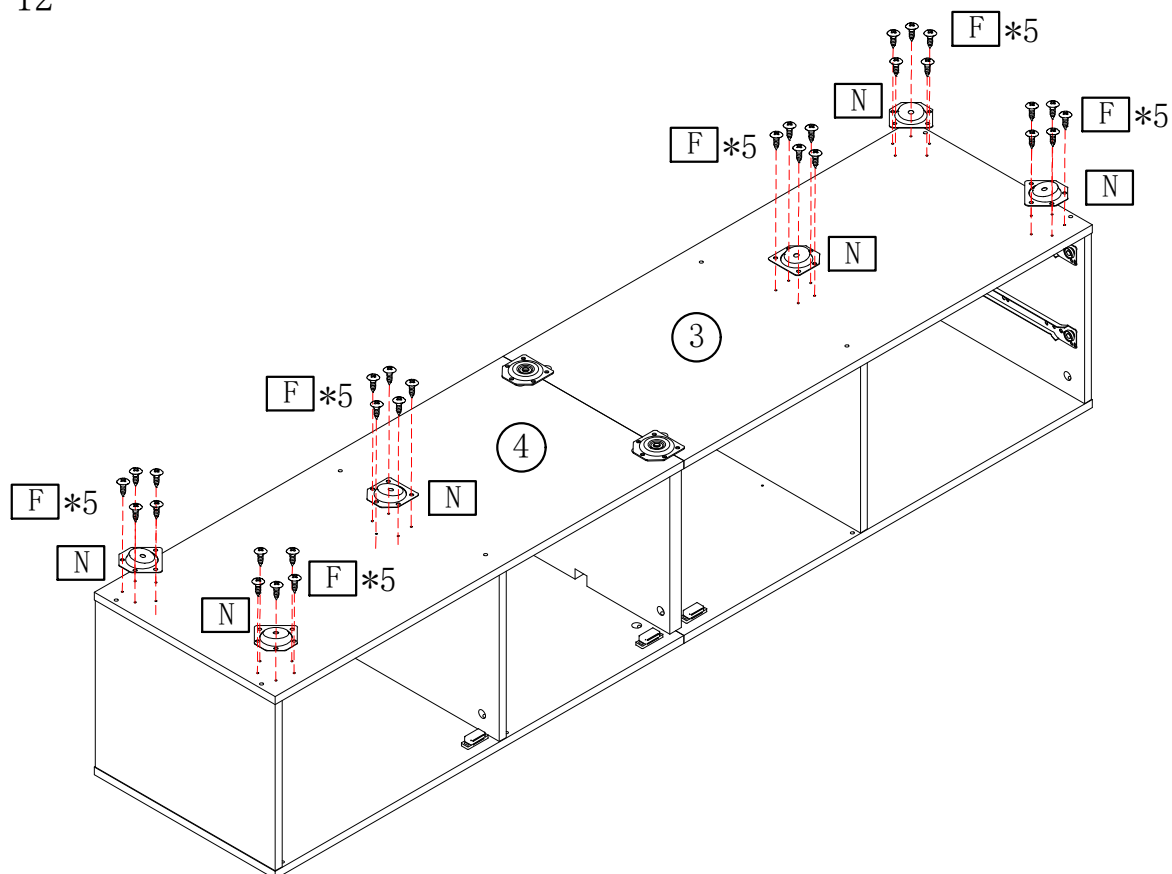
STEP 12




<div>F</div> <div>M4*14</div>	<div>N</div>
 <div>*30</div>	 <div>*6</div>

ASSEMBLY INSTRUCTION

STEP 13

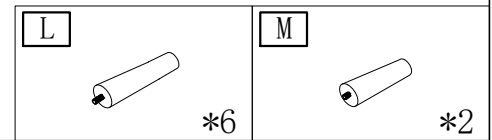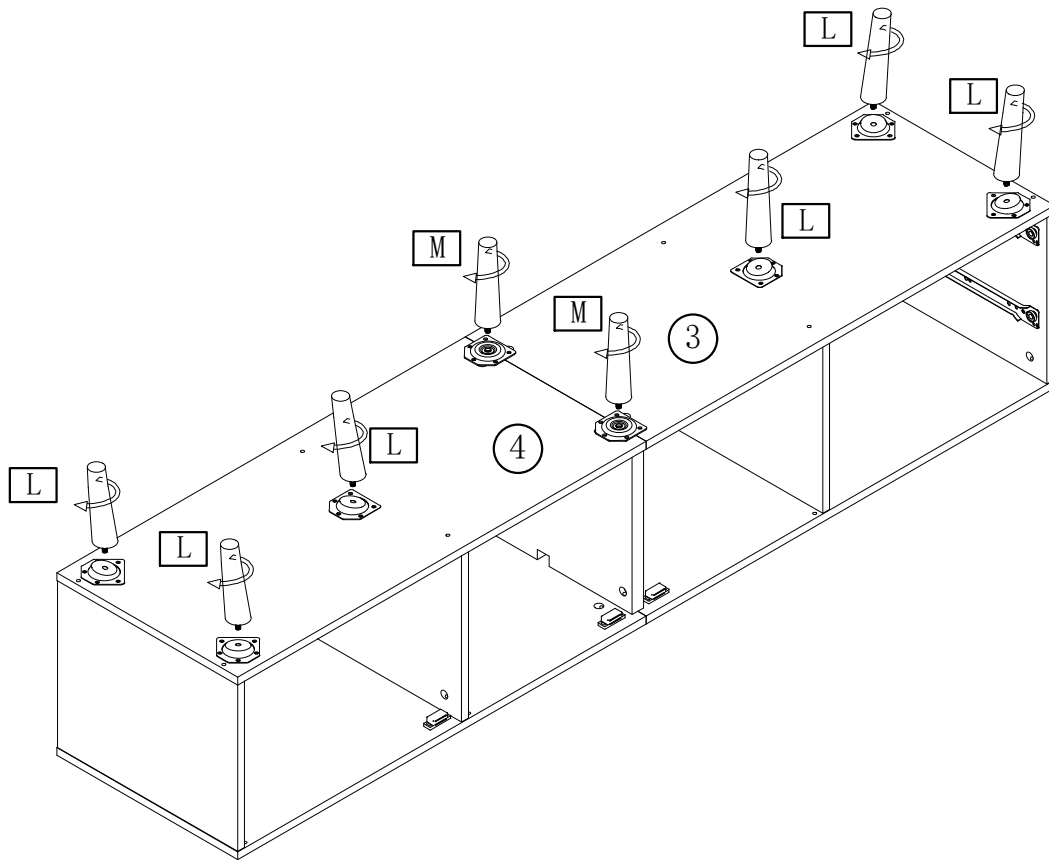


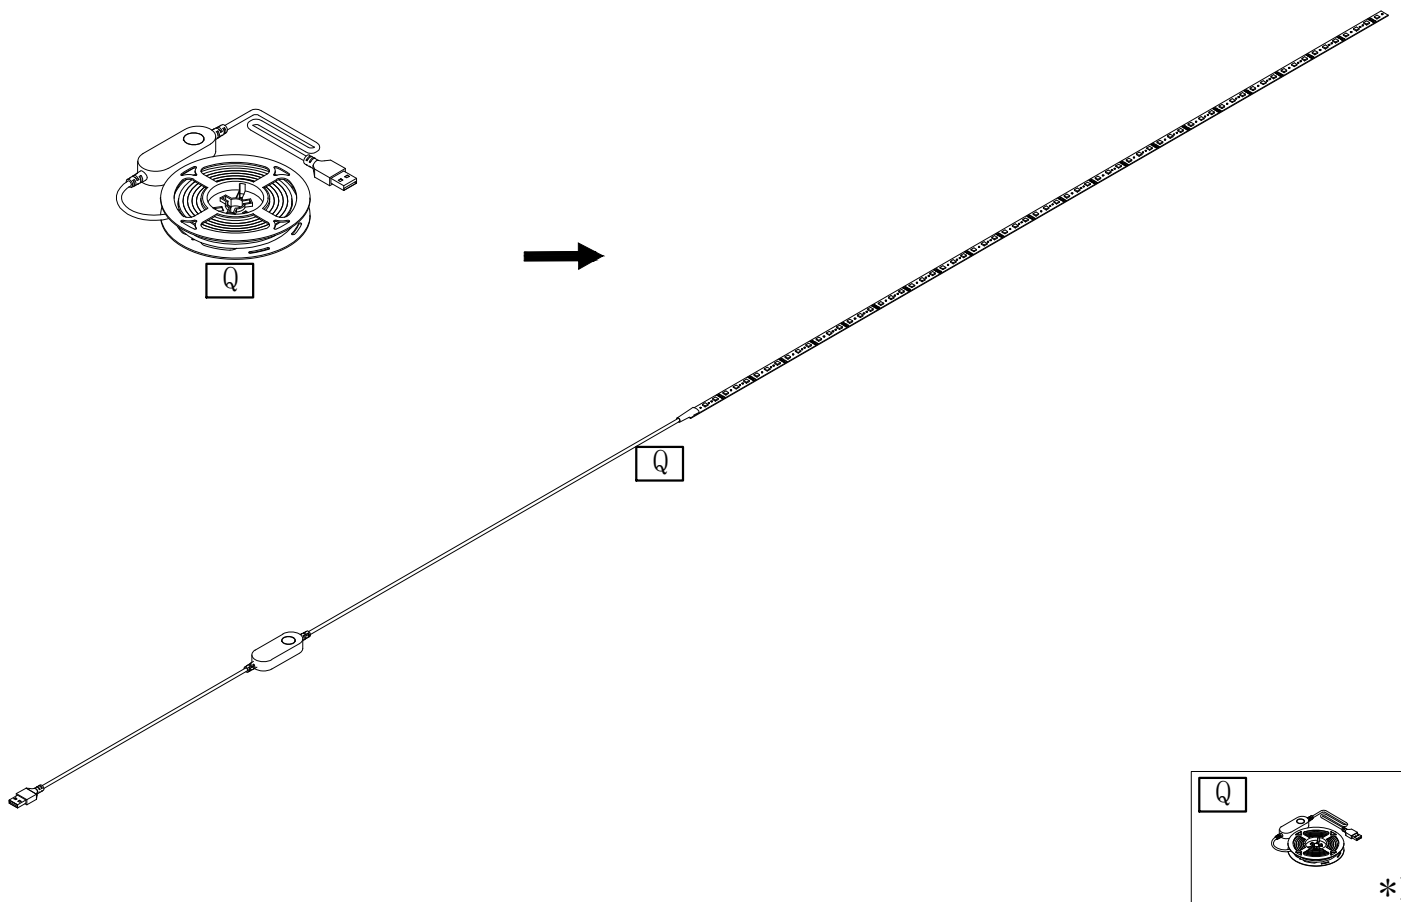

STEP 14




ASSEMBLY INSTRUCTION

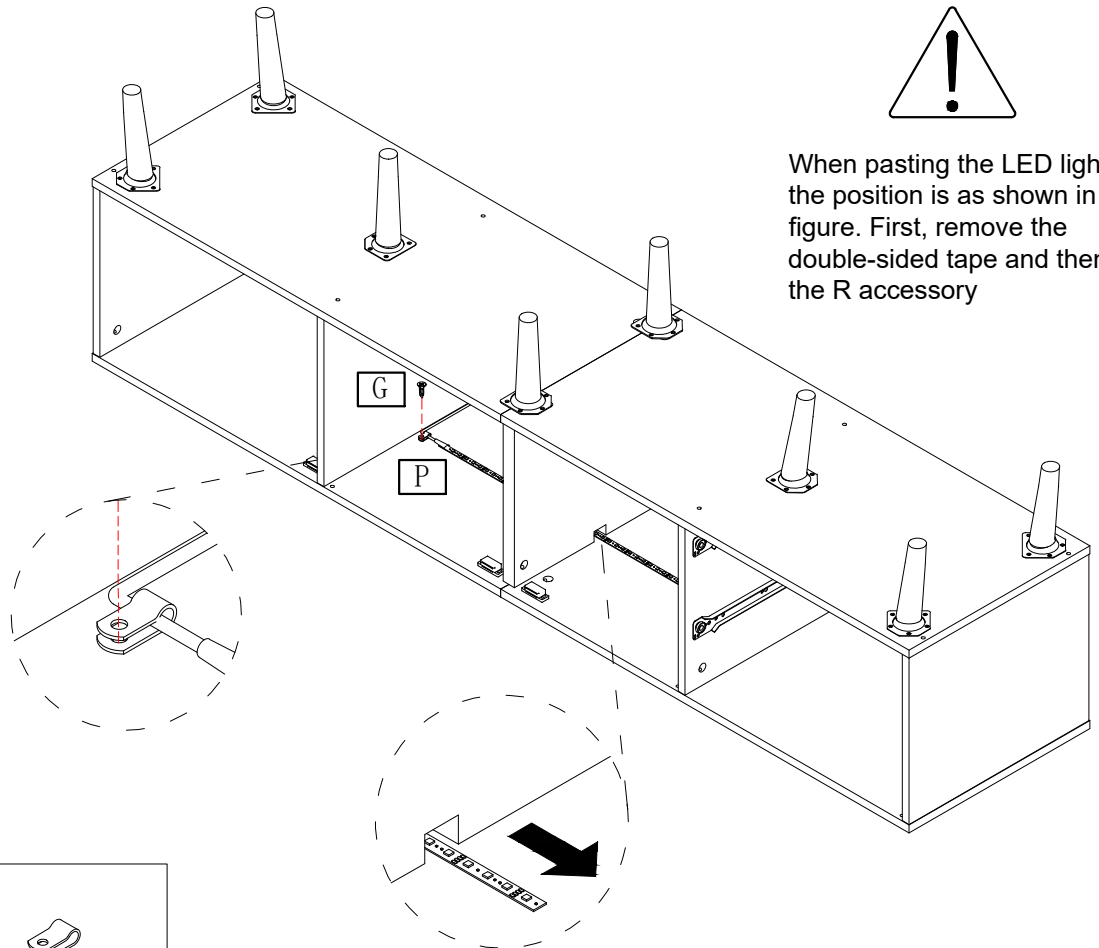

STEP 15



G M3.5*14	P
	
*1	*1


STEP 16

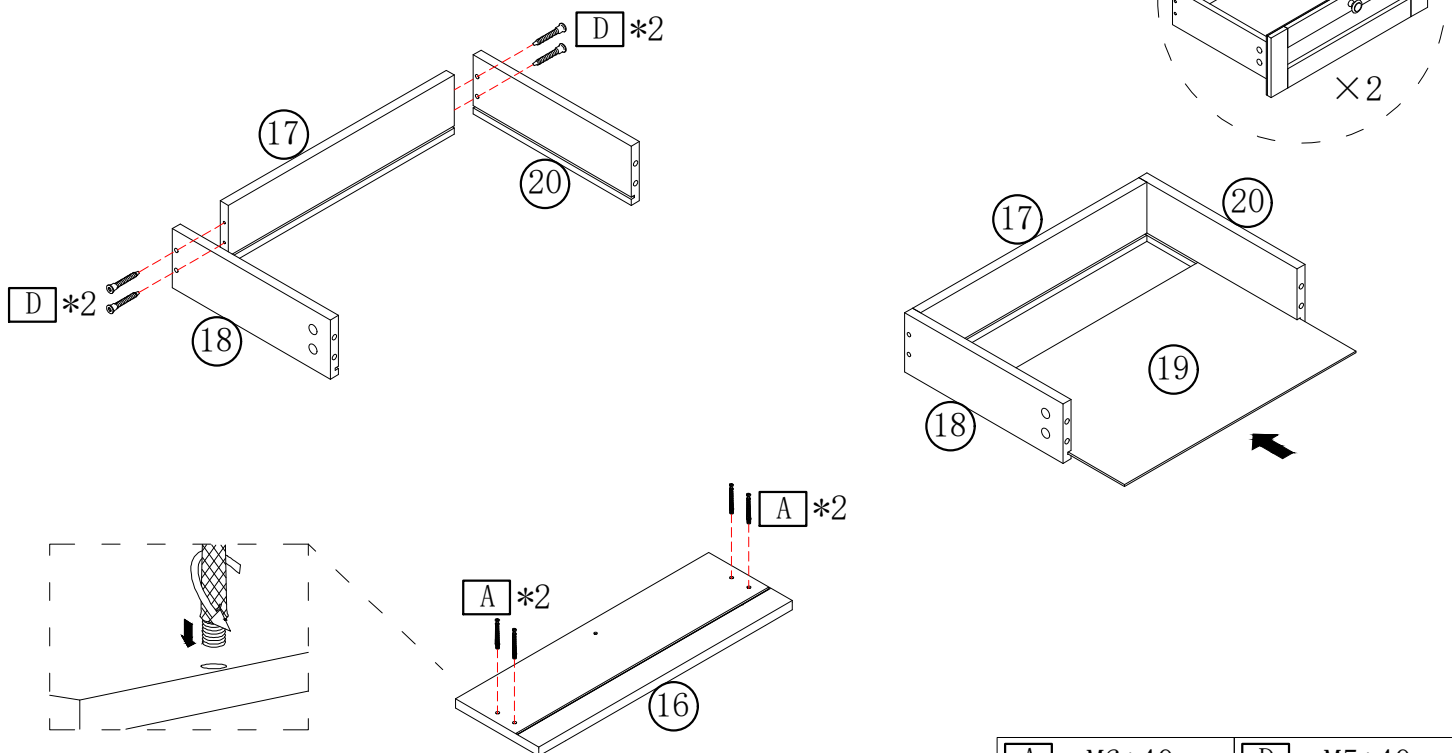

A M6*40	D M5*40
	
*8	*8

ASSEMBLY INSTRUCTION


STEP 17

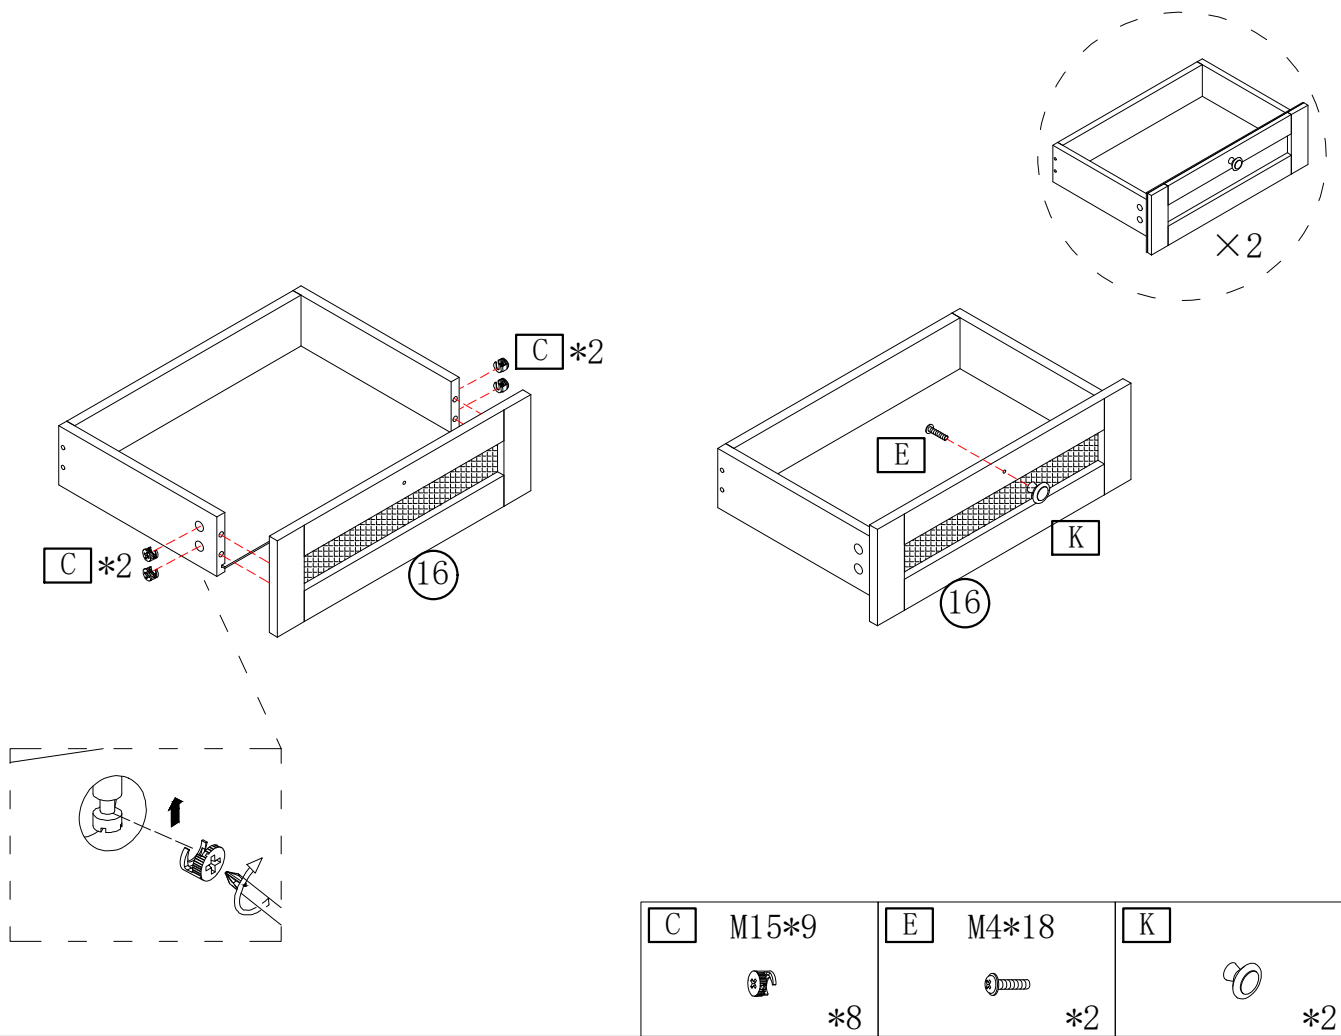

STEP 18




Distinguish between left and right drawer rails and their correct orientation.

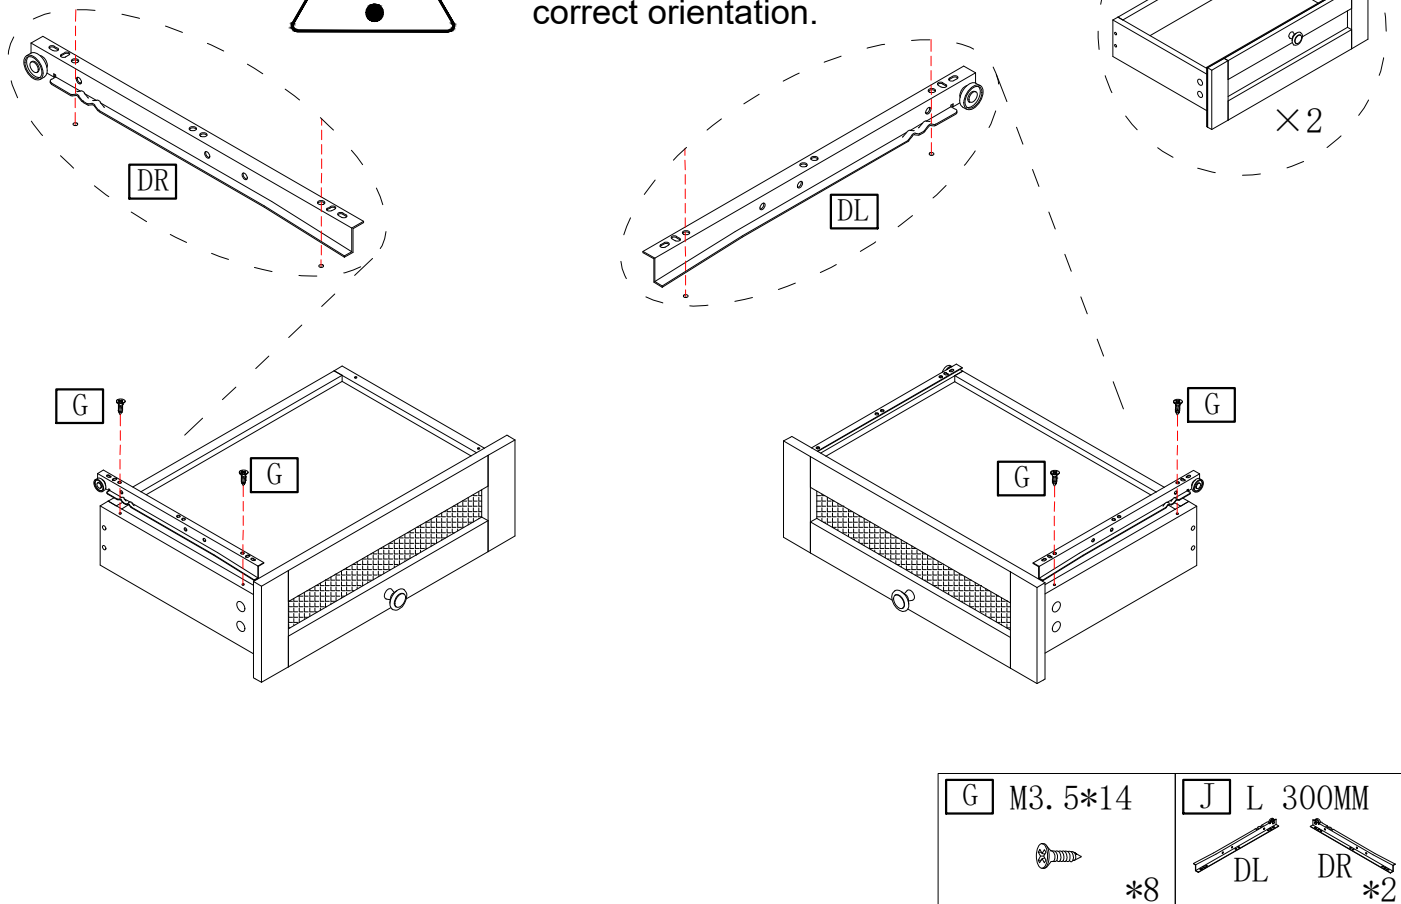



ASSEMBLY INSTRUCTION

STEP 19

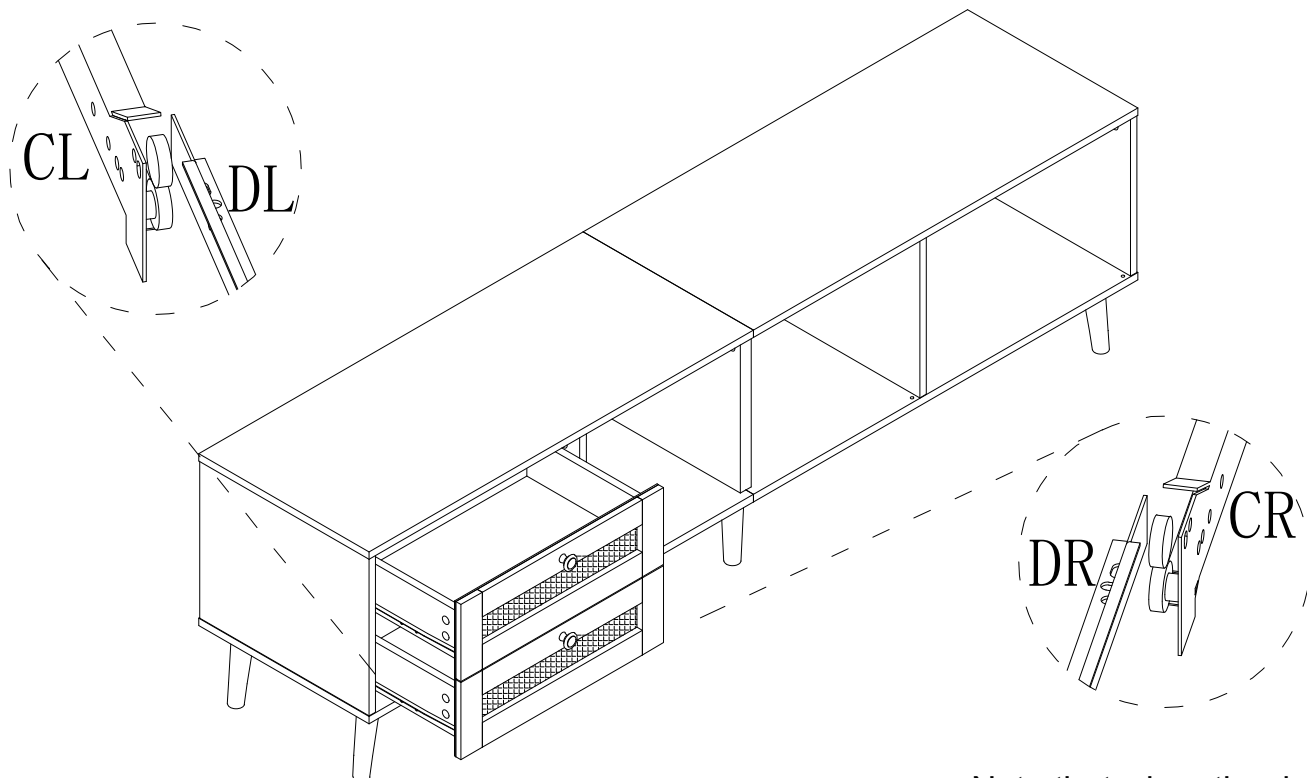







Note that when the drawer is installed, it is inclined upward and the bottom wheel of the drawer is stuck in the CR and CL rail grooves.

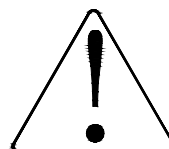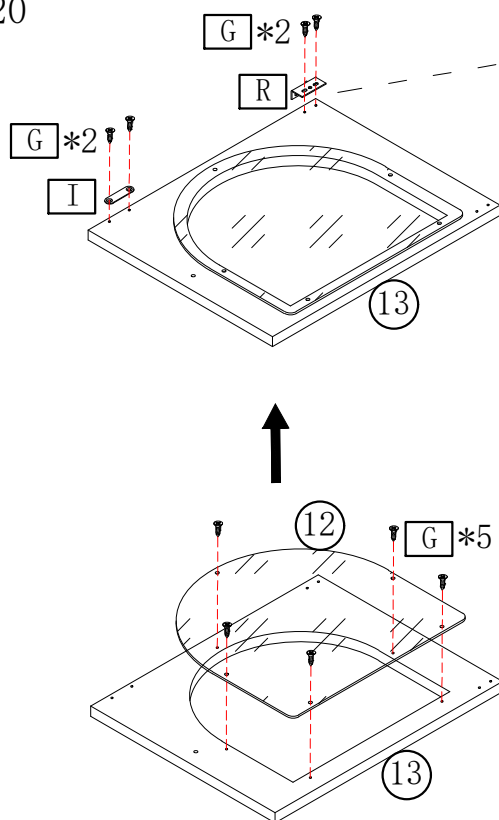STEP 20

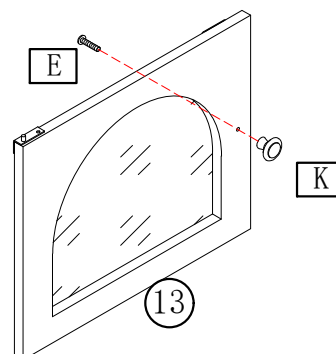



Remove the protective film from the acrylic door before assembly.




[E] M4*18 	[G] M3. 5*14 	[I] 	[K] 	[R] Left 
*1	*9	*1	*1	*1






ASSEMBLY INSTRUCTION

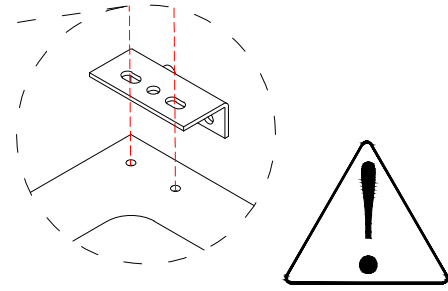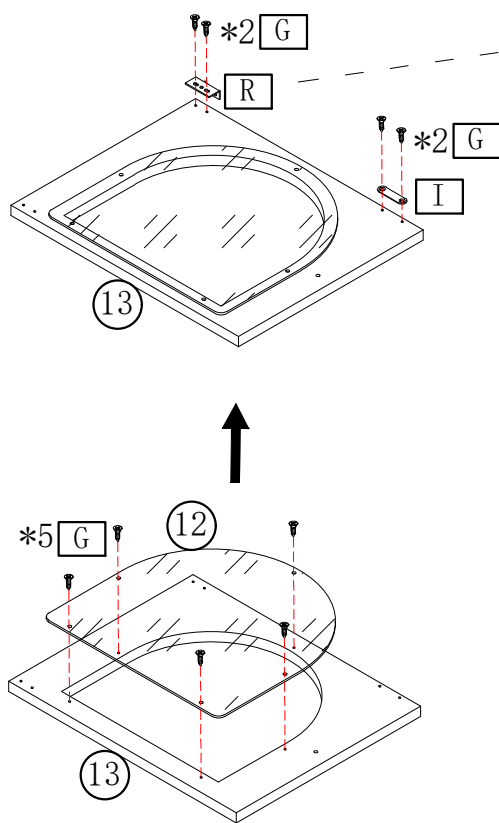STEP 21

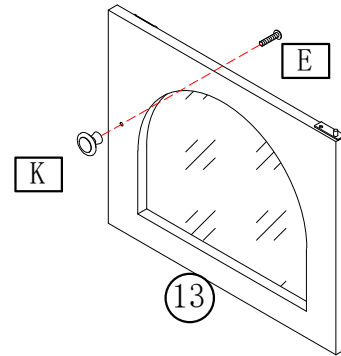



Remove the protective film from the acrylic door before assembly.



E M4*18  *1	G M3.5*14  *9	I  *1	K  *1	S right  *1
---	---	---	---	---


STEP 22

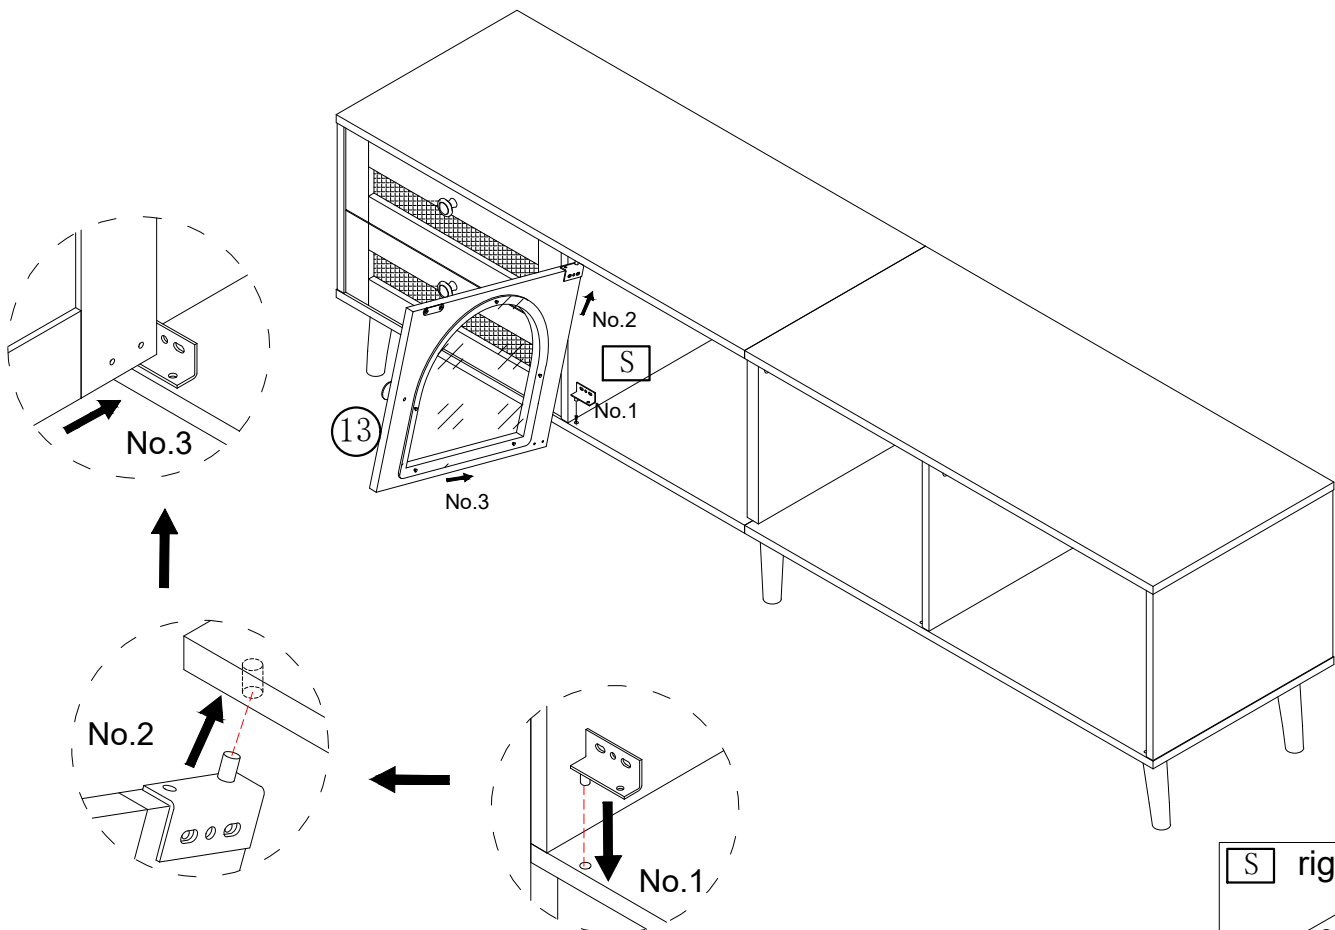


S right  *1

ASSEMBLY INSTRUCTION

STEP 23

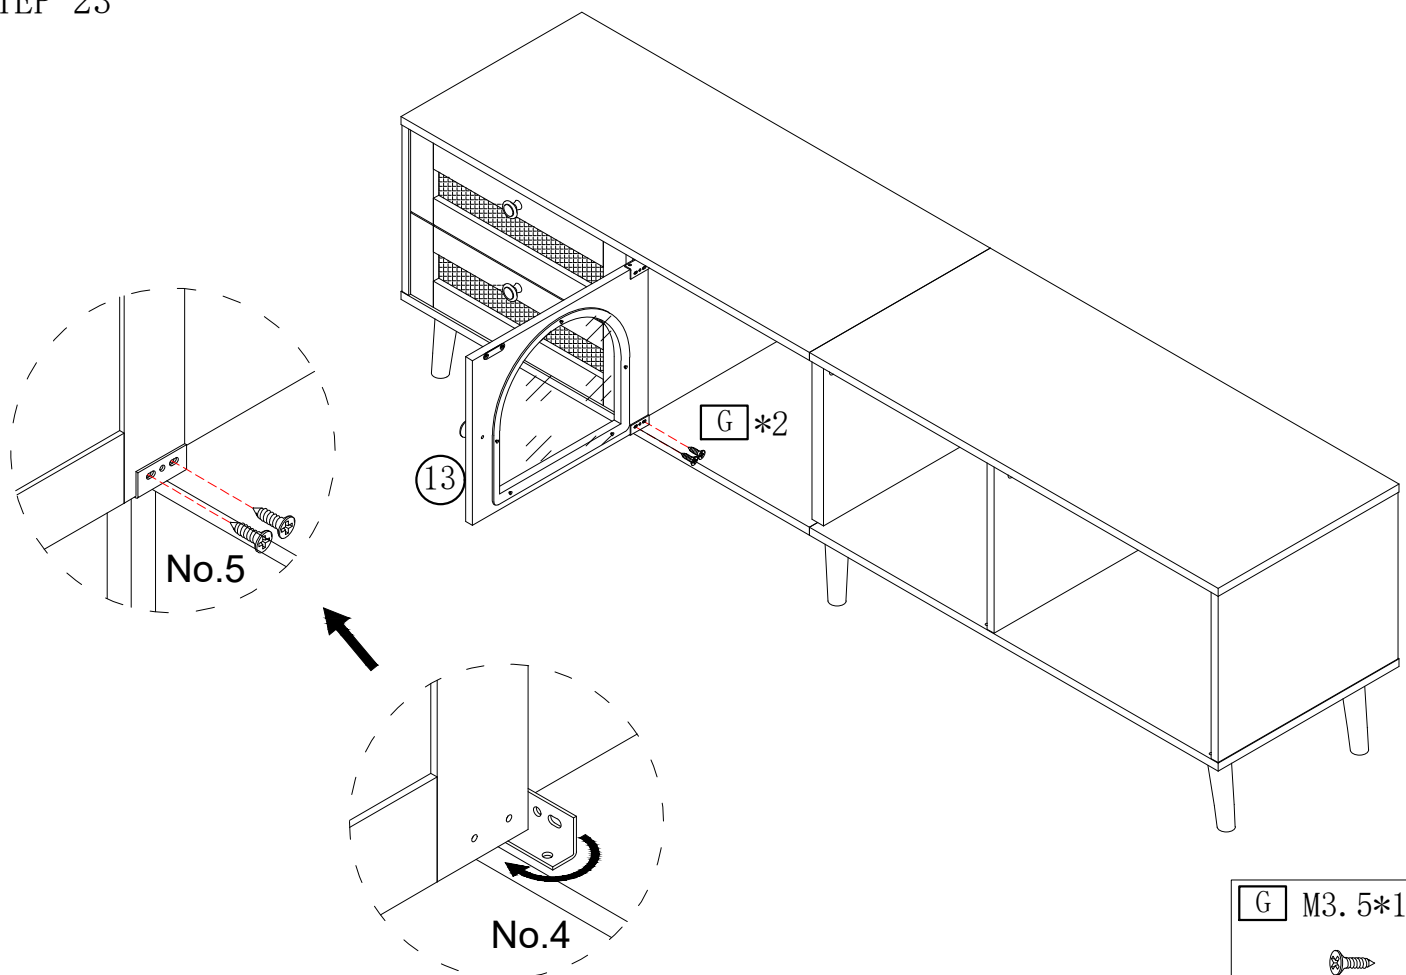


STEP 24

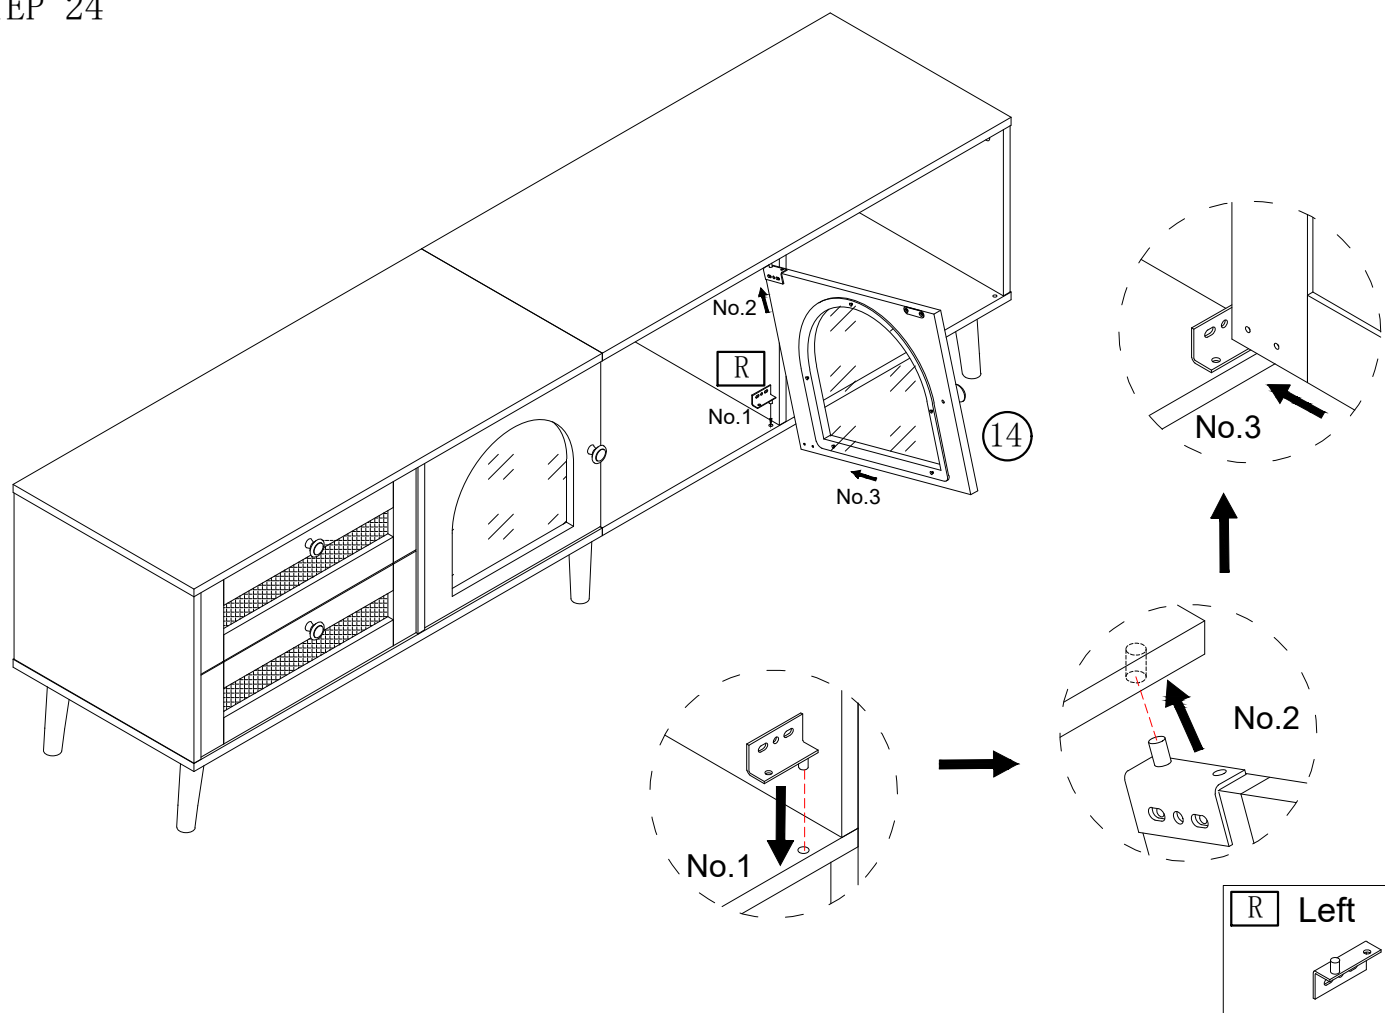







ASSEMBLY INSTRUCTION

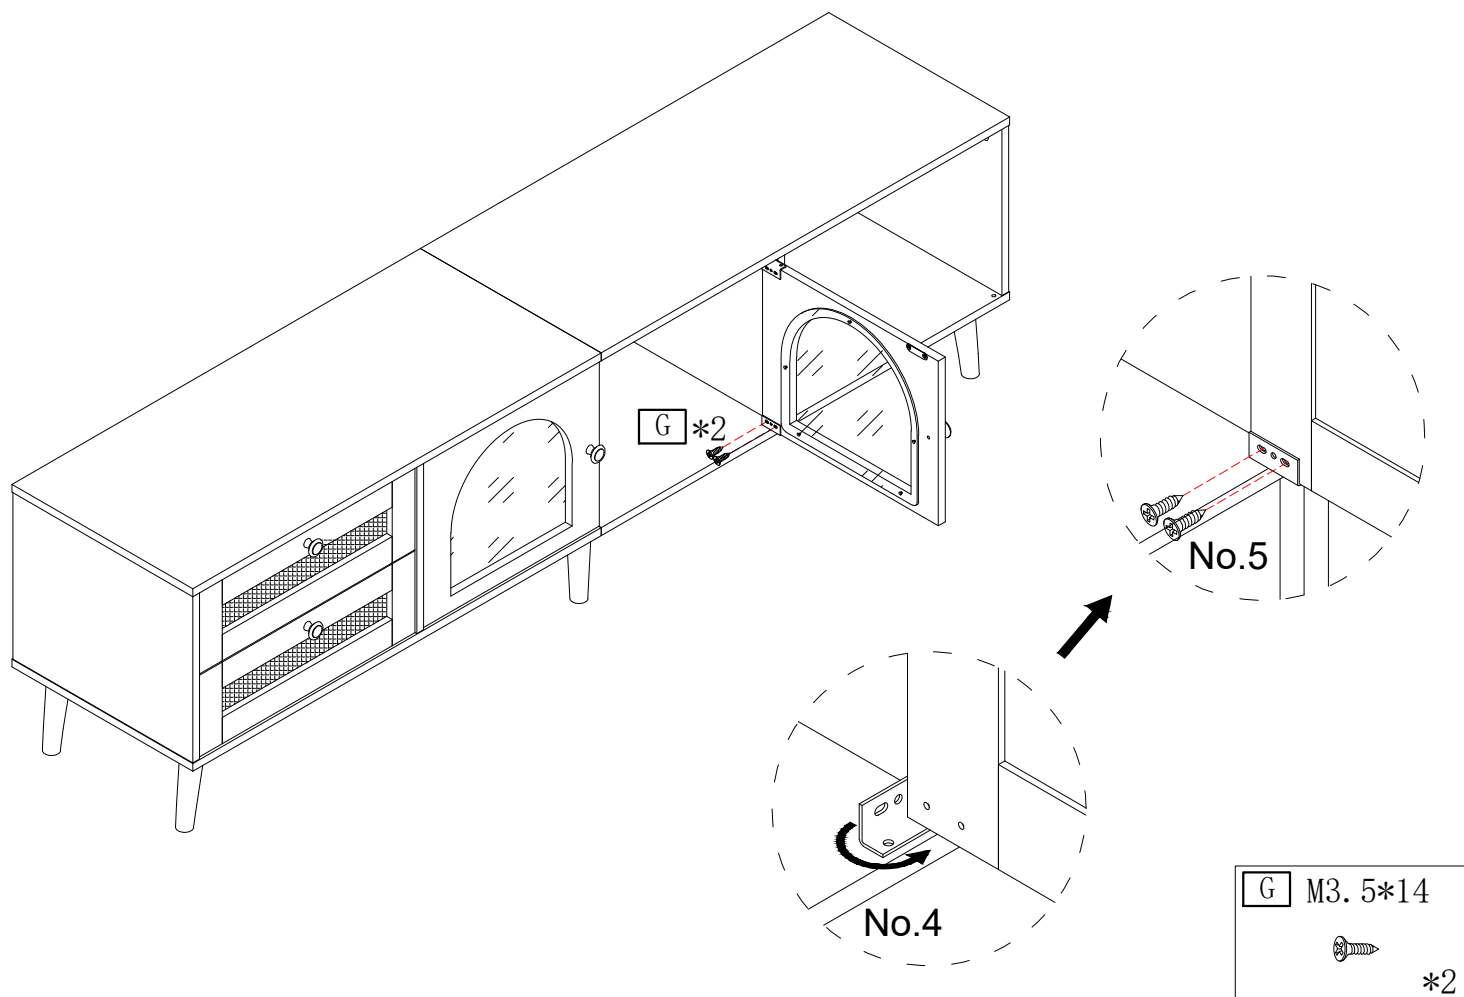STEP 25

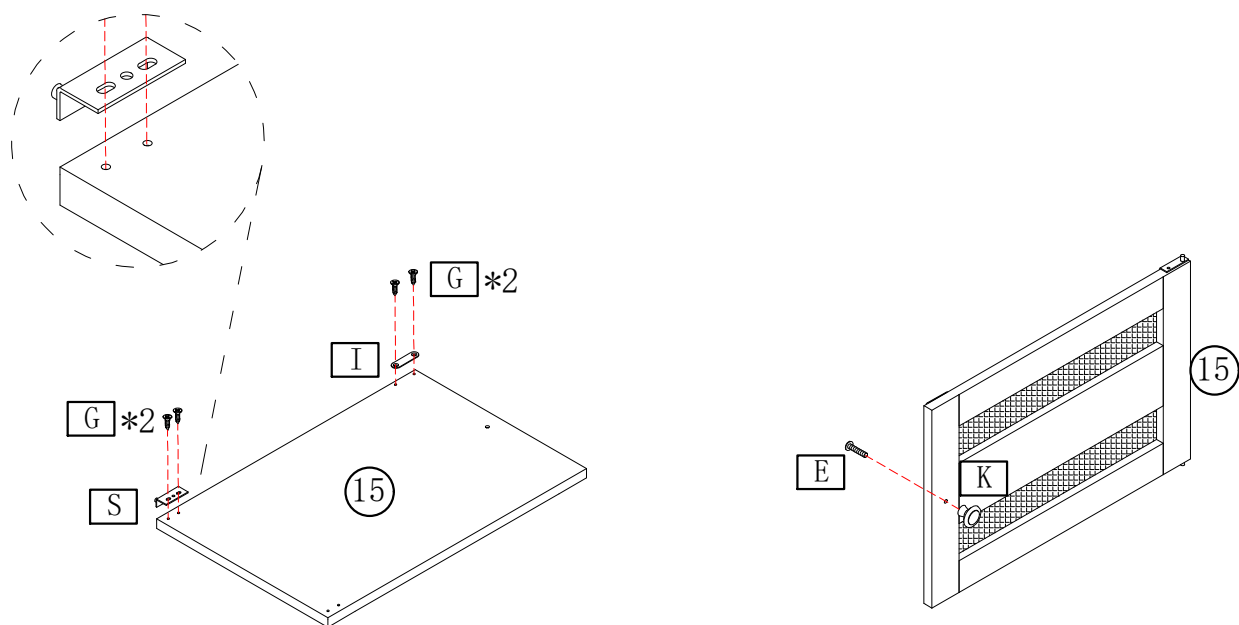


STEP 26



E M4*18  *1	G M3.5*14  *4	I  *1	K  *1	S right  *1
---	---	---	---	---

ASSEMBLY INSTRUCTION

STEP 27

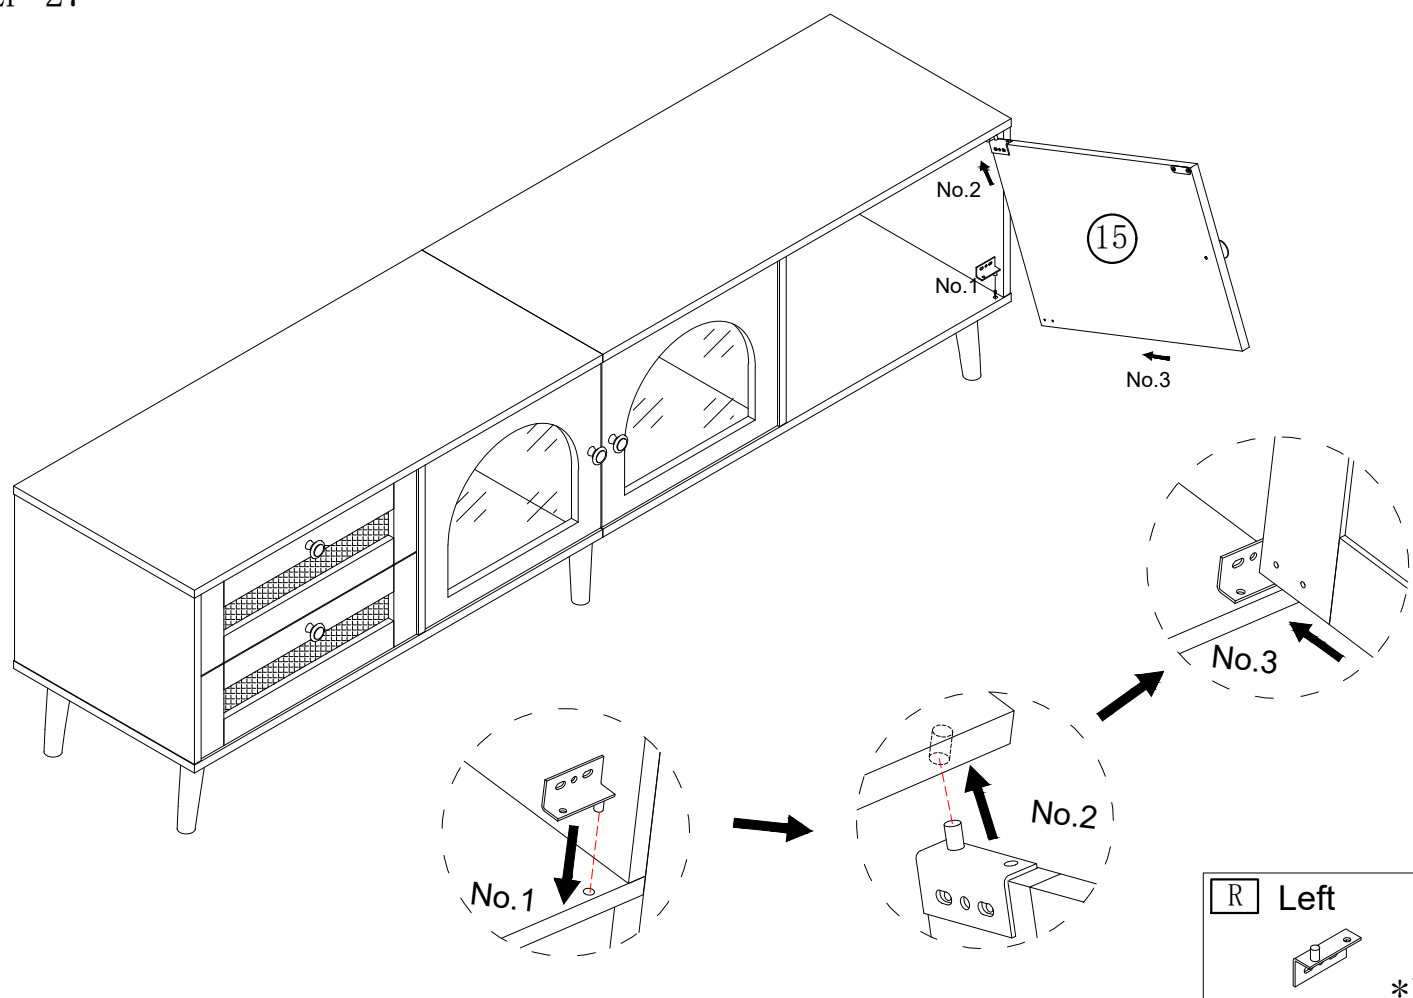

STEP 28

