













INSTALLATION INSTRUCTION

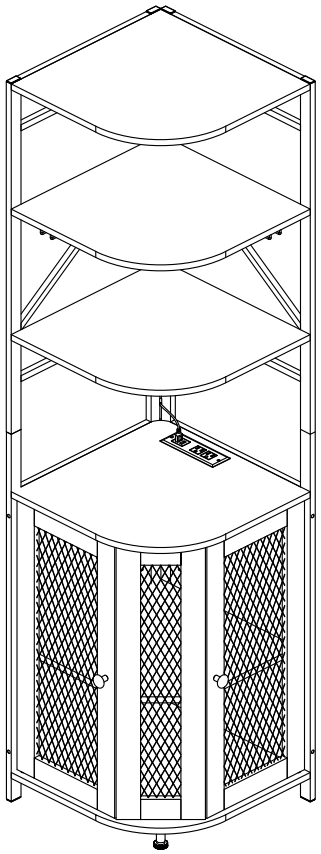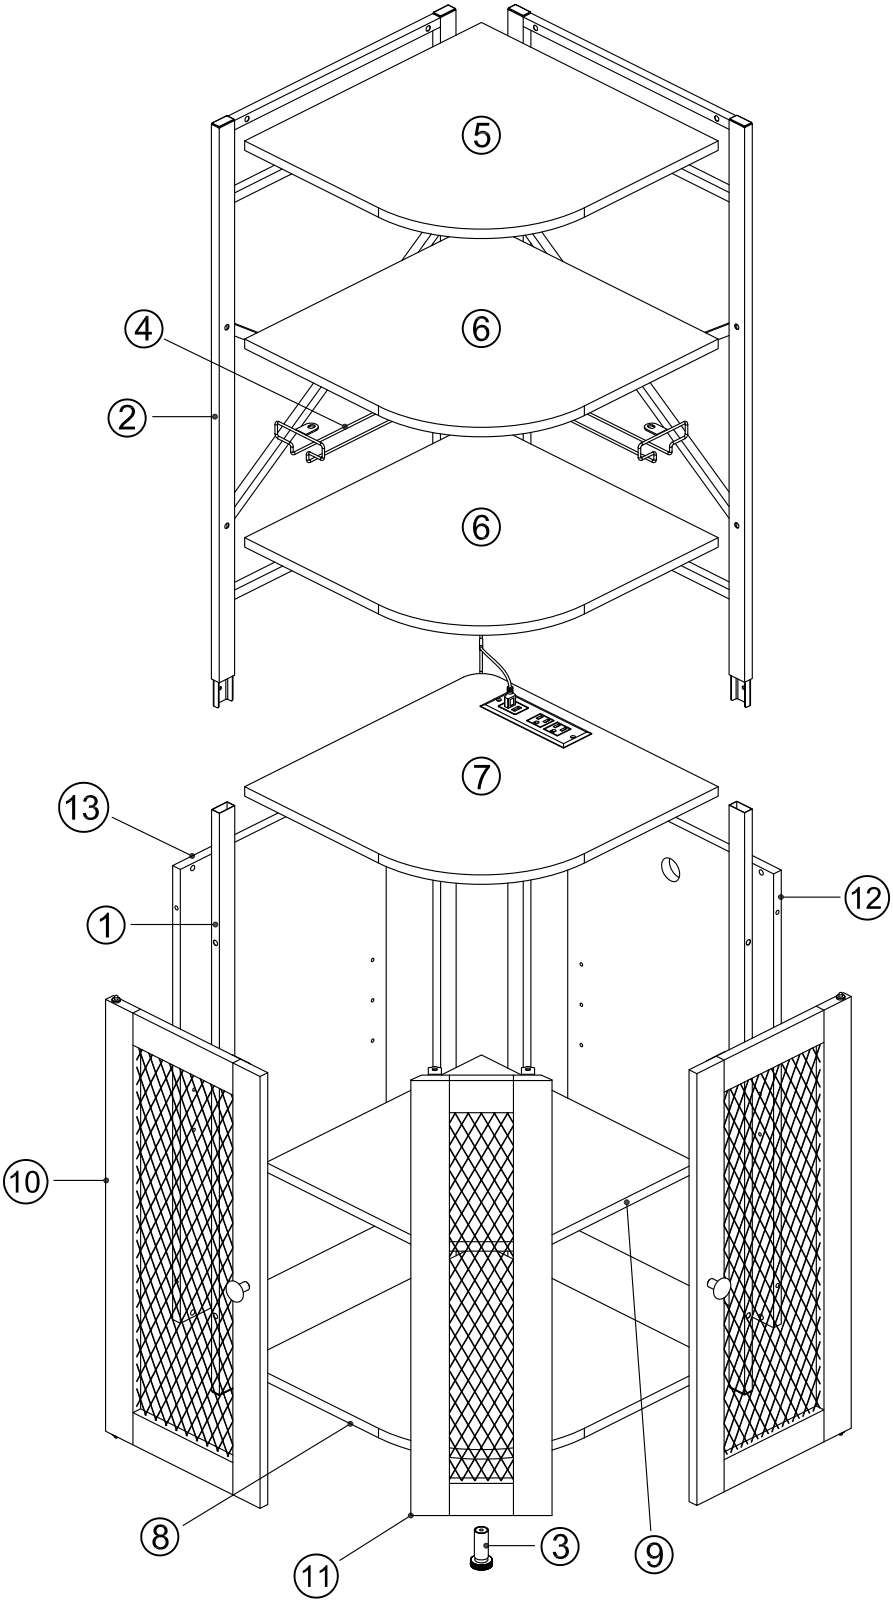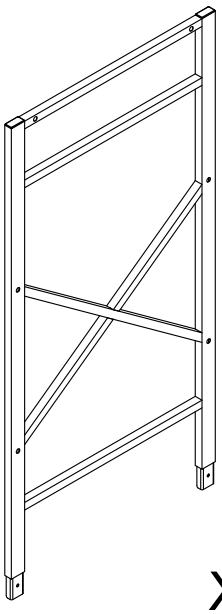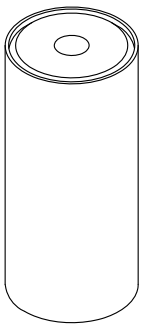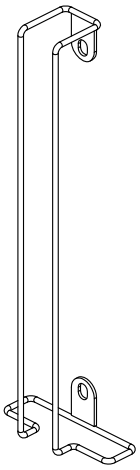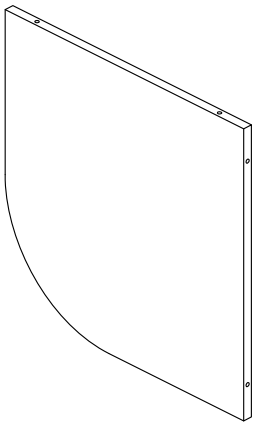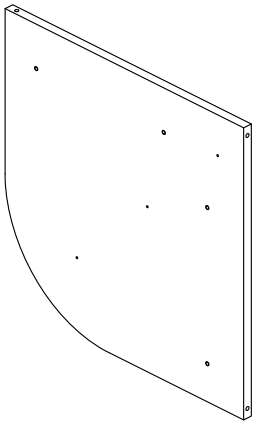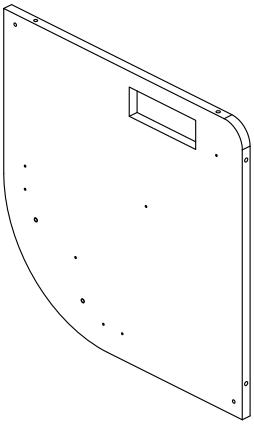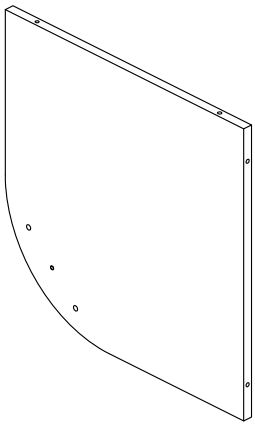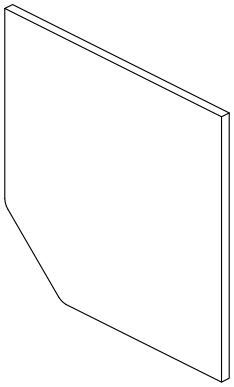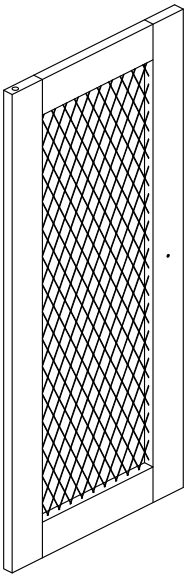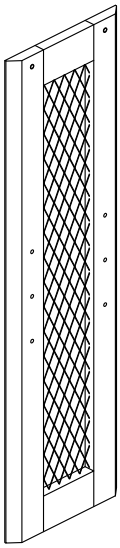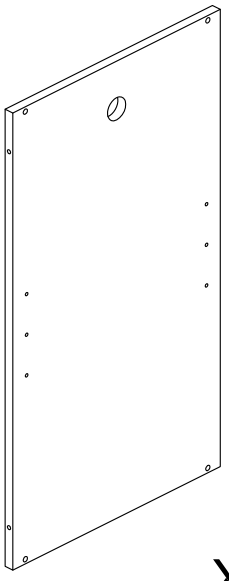

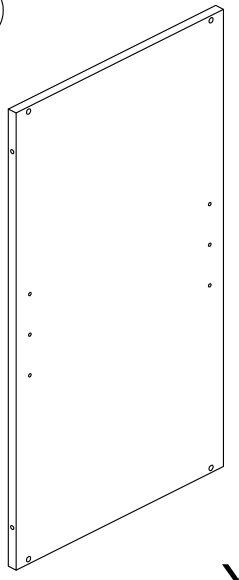


NO.	PICTURE	SIZE	QTY
A		Ø30	1
B		Ø6X12L	12
C		Ø7X48L	20
D		Ø7X58L	8
E		Ø3.5X14	4
F		Ø3.0*12L	4
G		Ø4.0*11.6L	2
H			2
I			4
J			2
K			2
L			2
N			6
M		Ø4X15L	2
O		Ø6X30L	1
P			1
Q		M4	1
R			1
S	X1 X6 X6		1
T	X1 X1 X1		1

ASSEMBLY INSTRUCTION

①  X4	②  X2	③  X1	④  X2	⑤  X1
⑥  X2	⑦  X1	⑧  X1	⑨  X1	
⑩  X2	⑪  X1	⑫  X1	⑬  X1	


INSTALLATION INSTRUCTION

STEP 1

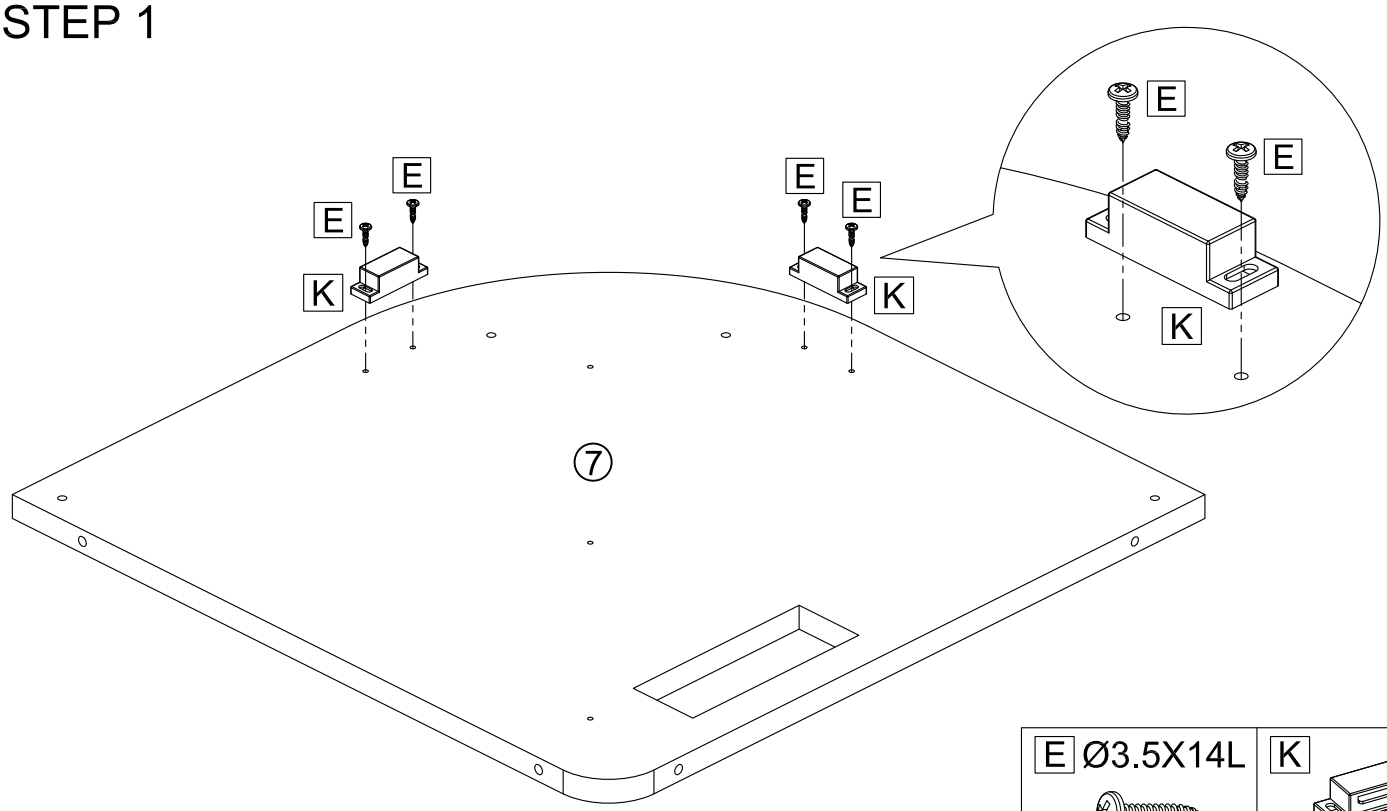

E Ø3.5X14L	K
X4	X2


STEP 2

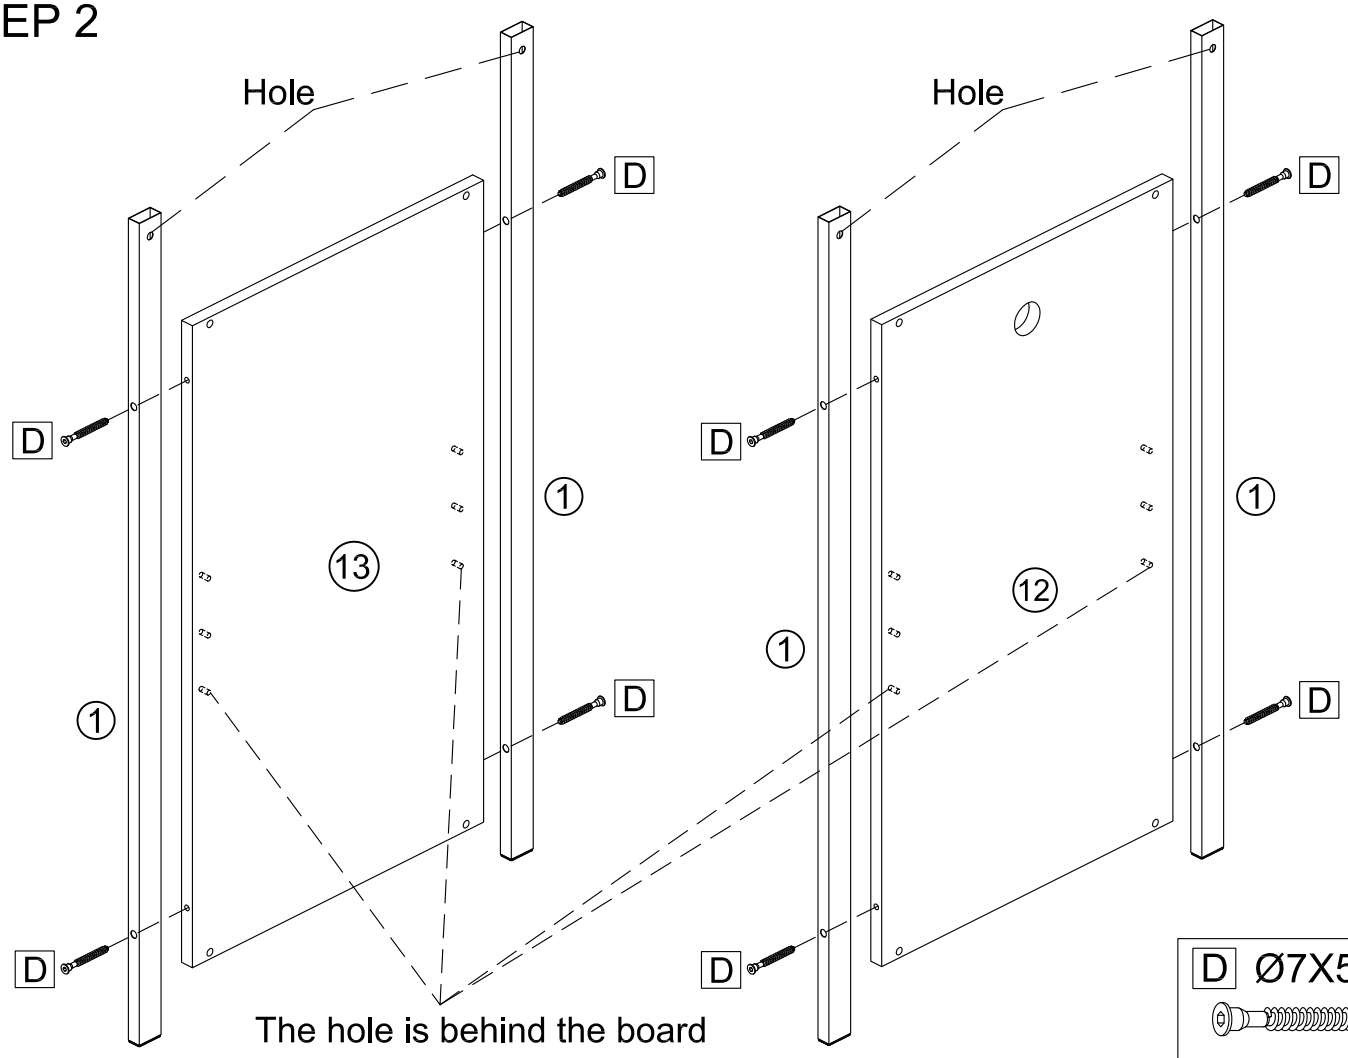

D Ø7X58L
X8

INSTALLATION INSTRUCTION


STEP 3

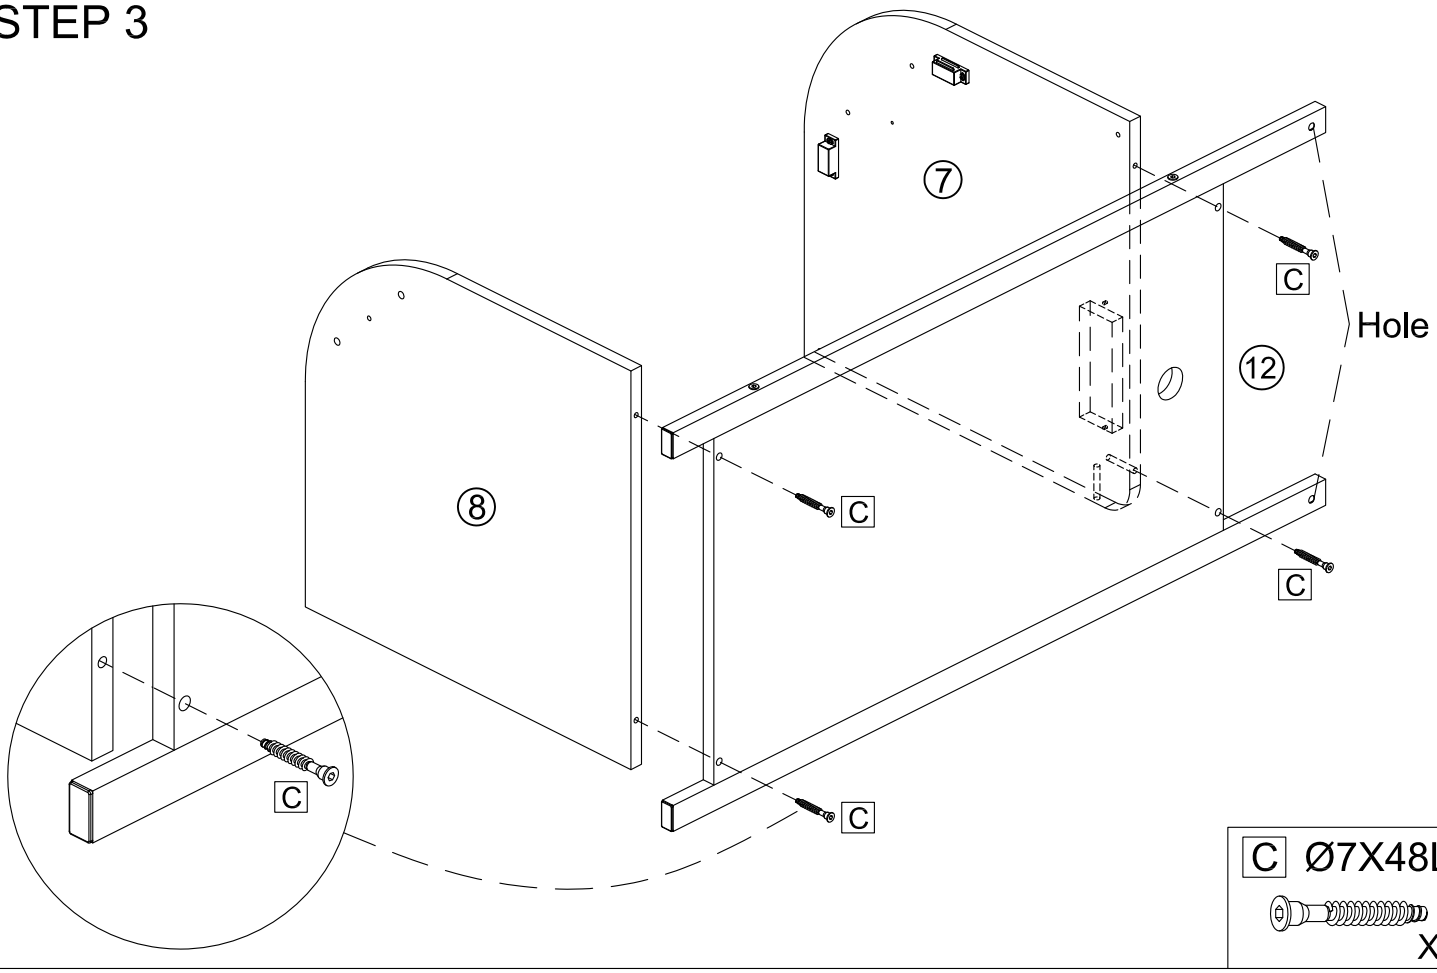

C Ø7X48L

X4

STEP 4

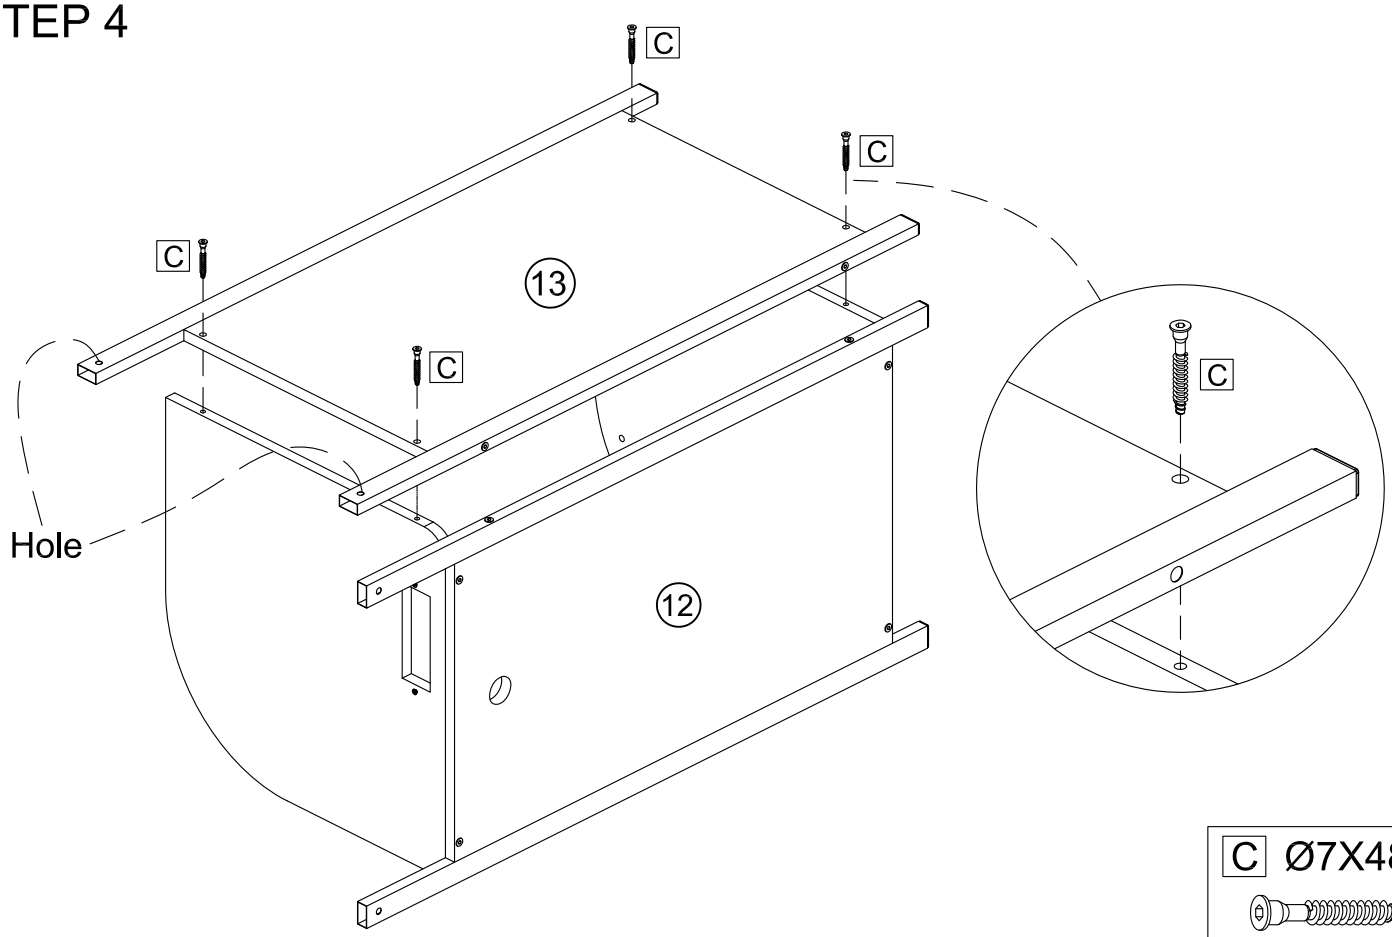


C Ø7X48L

X4

INSTALLATION INSTRUCTION


STEP 5

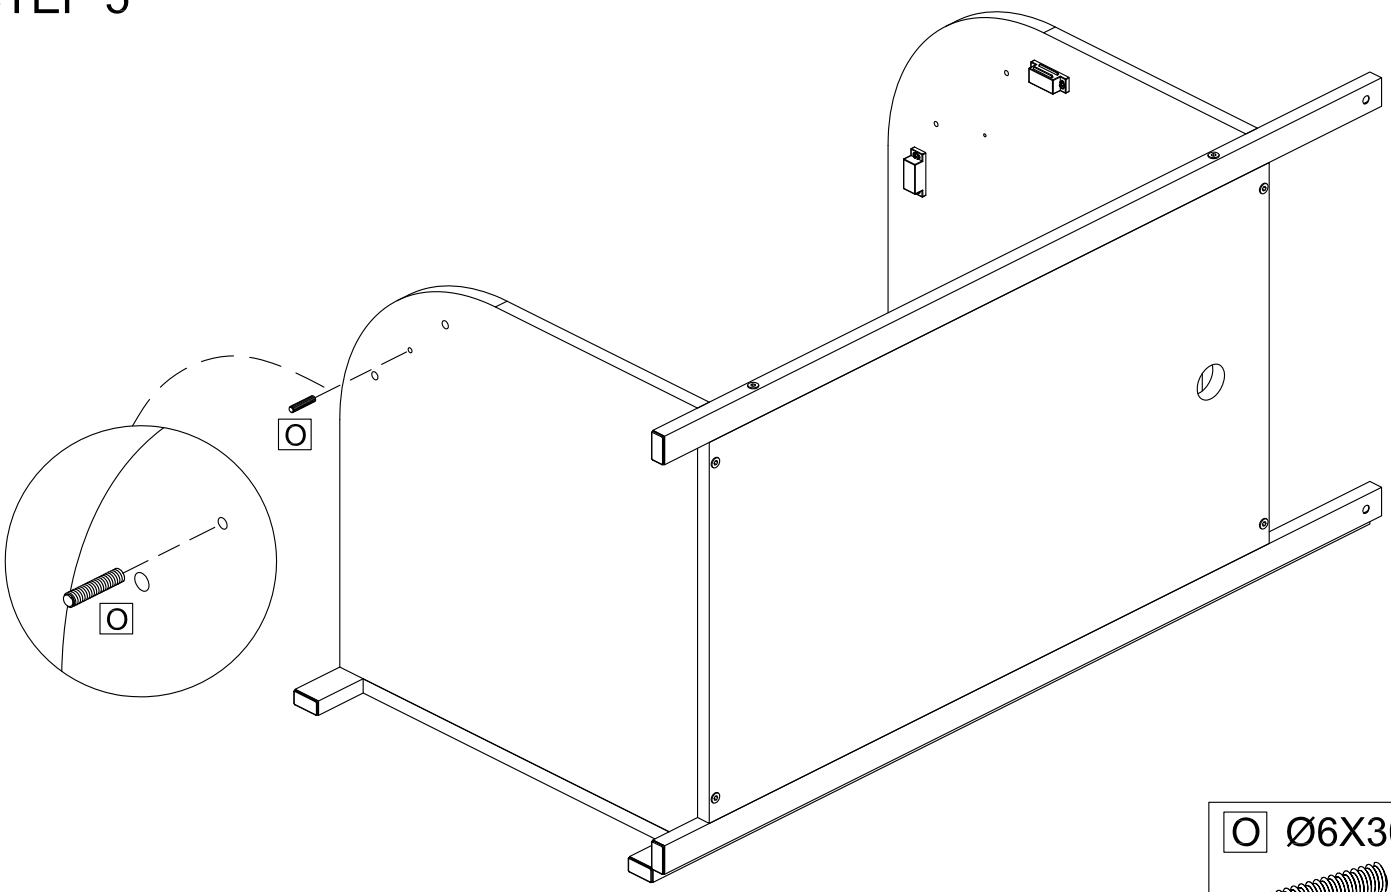

O Ø6X30L

X1

STEP 6

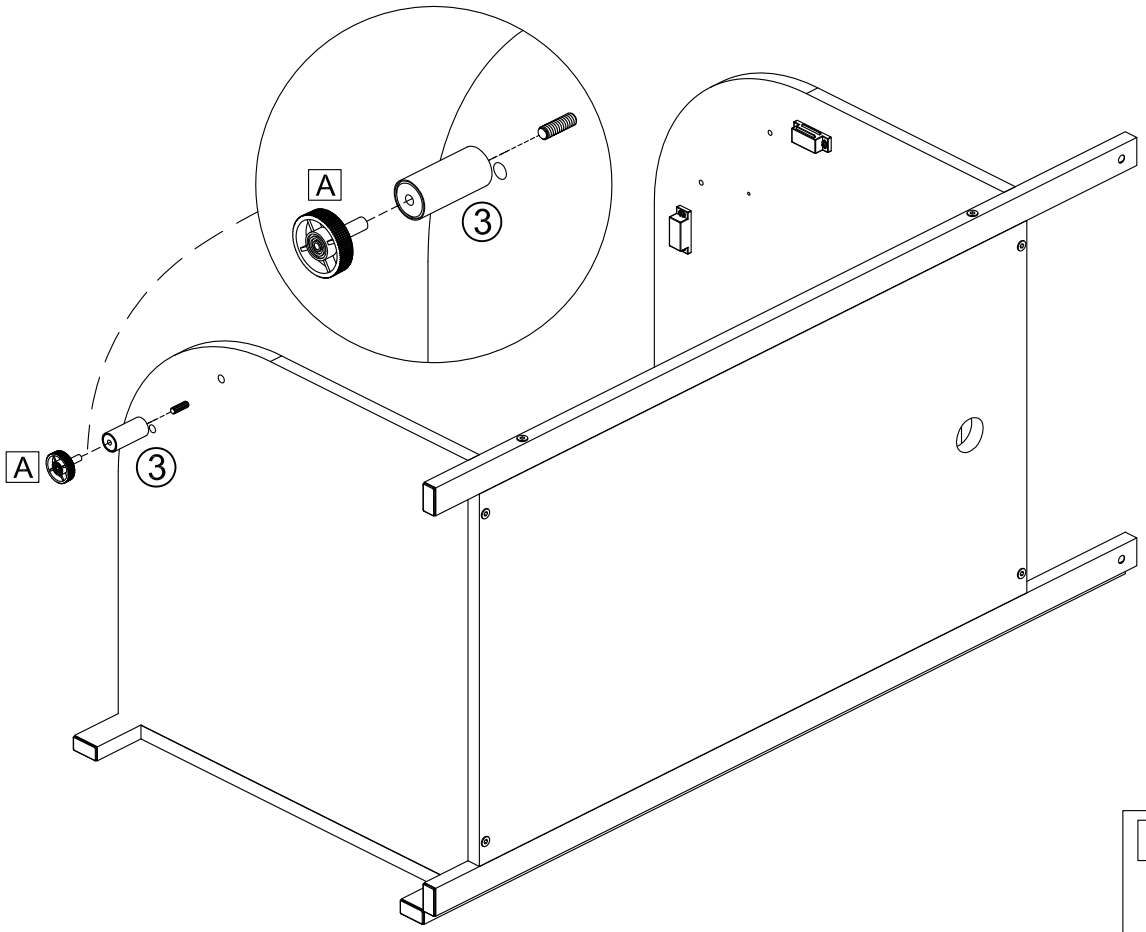


A Ø30

X1

INSTALLATION INSTRUCTION

STEP 7

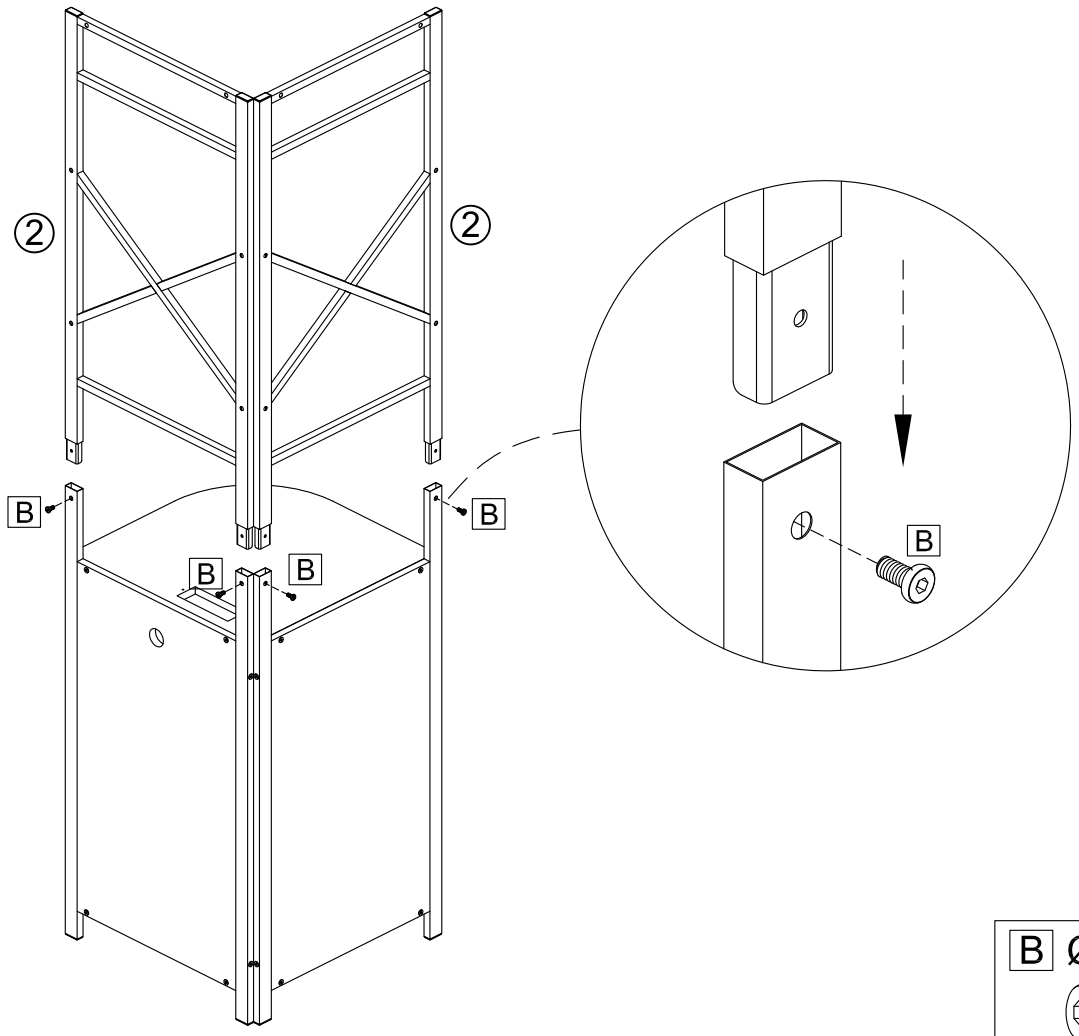


B Ø6X12L



X4

STEP 8

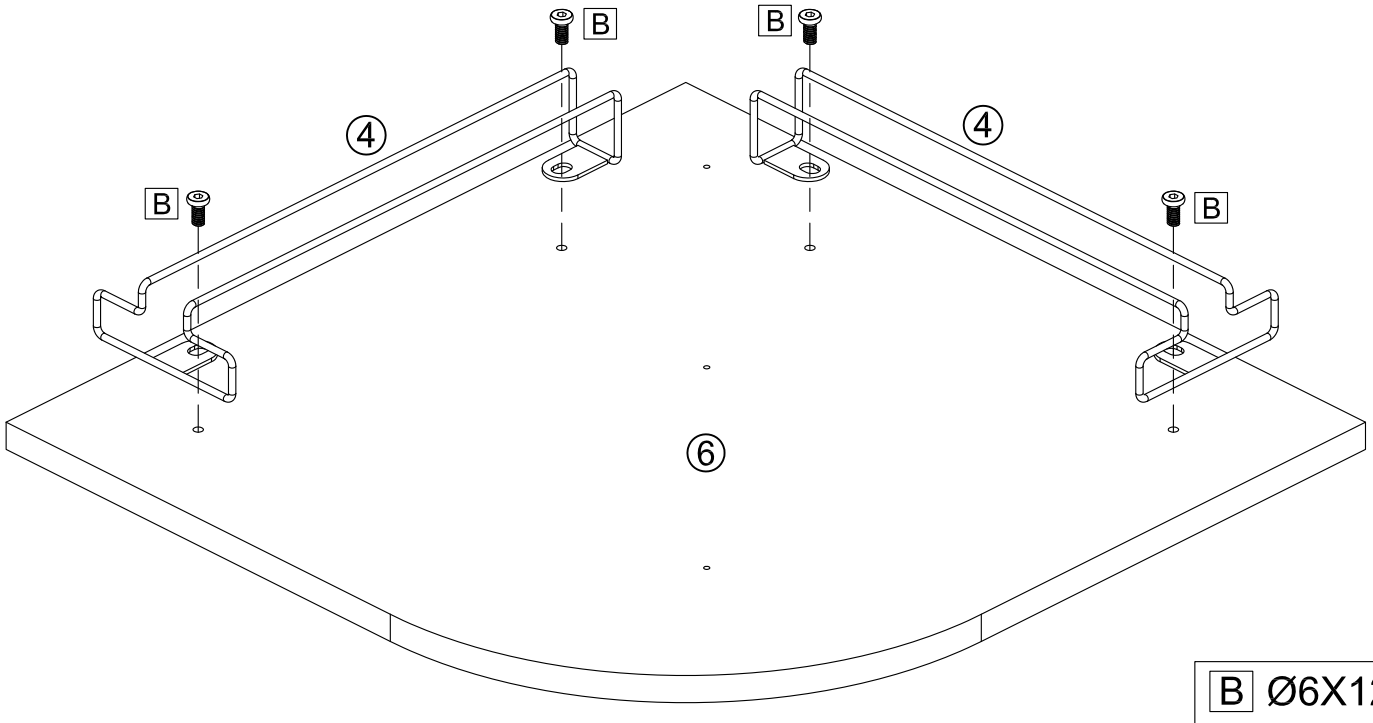


B Ø6X12L



X4

INSTALLATION INSTRUCTION


STEP 9

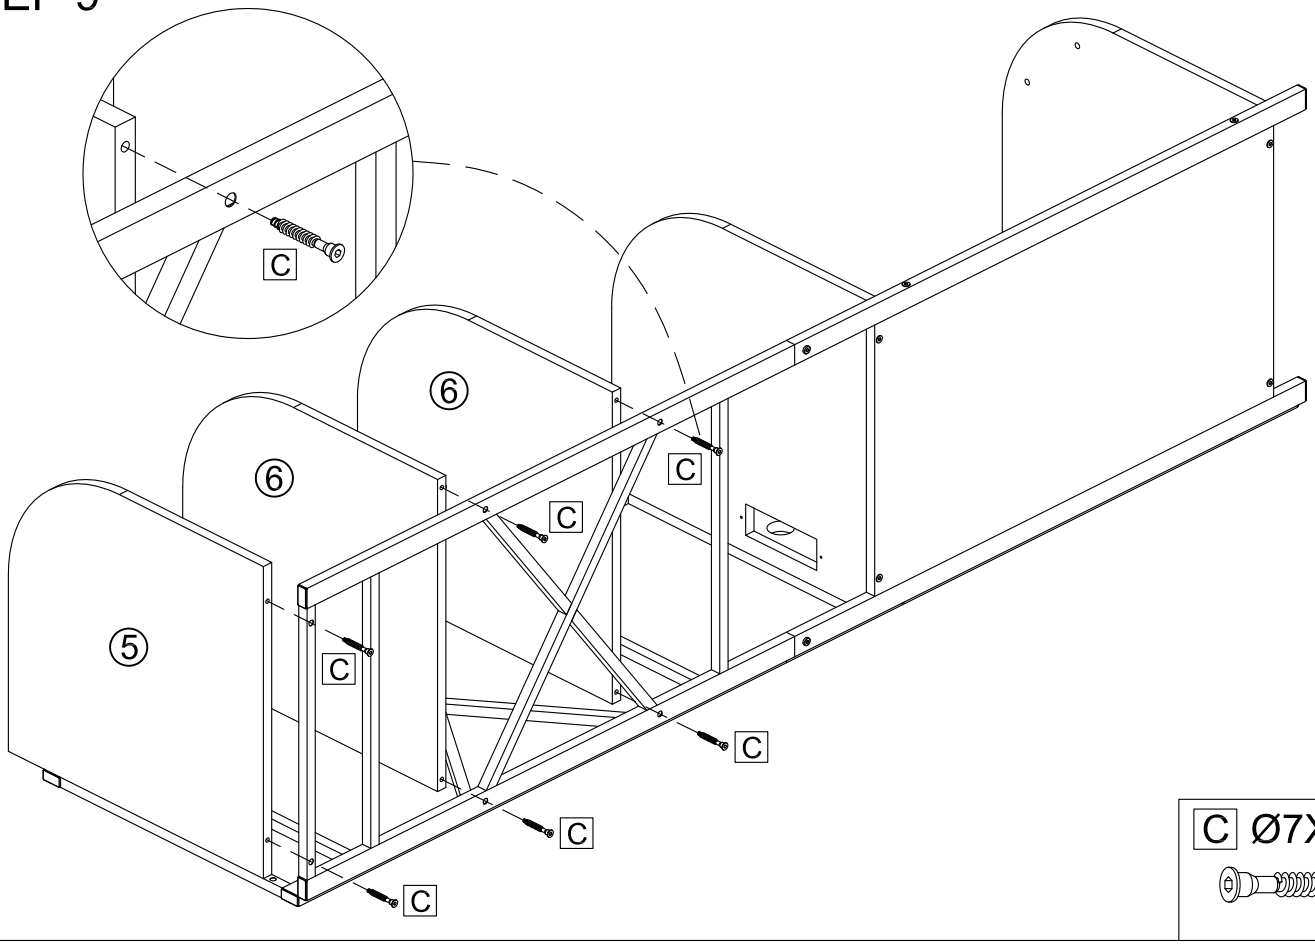


C Ø7X48L

X6

STEP 10

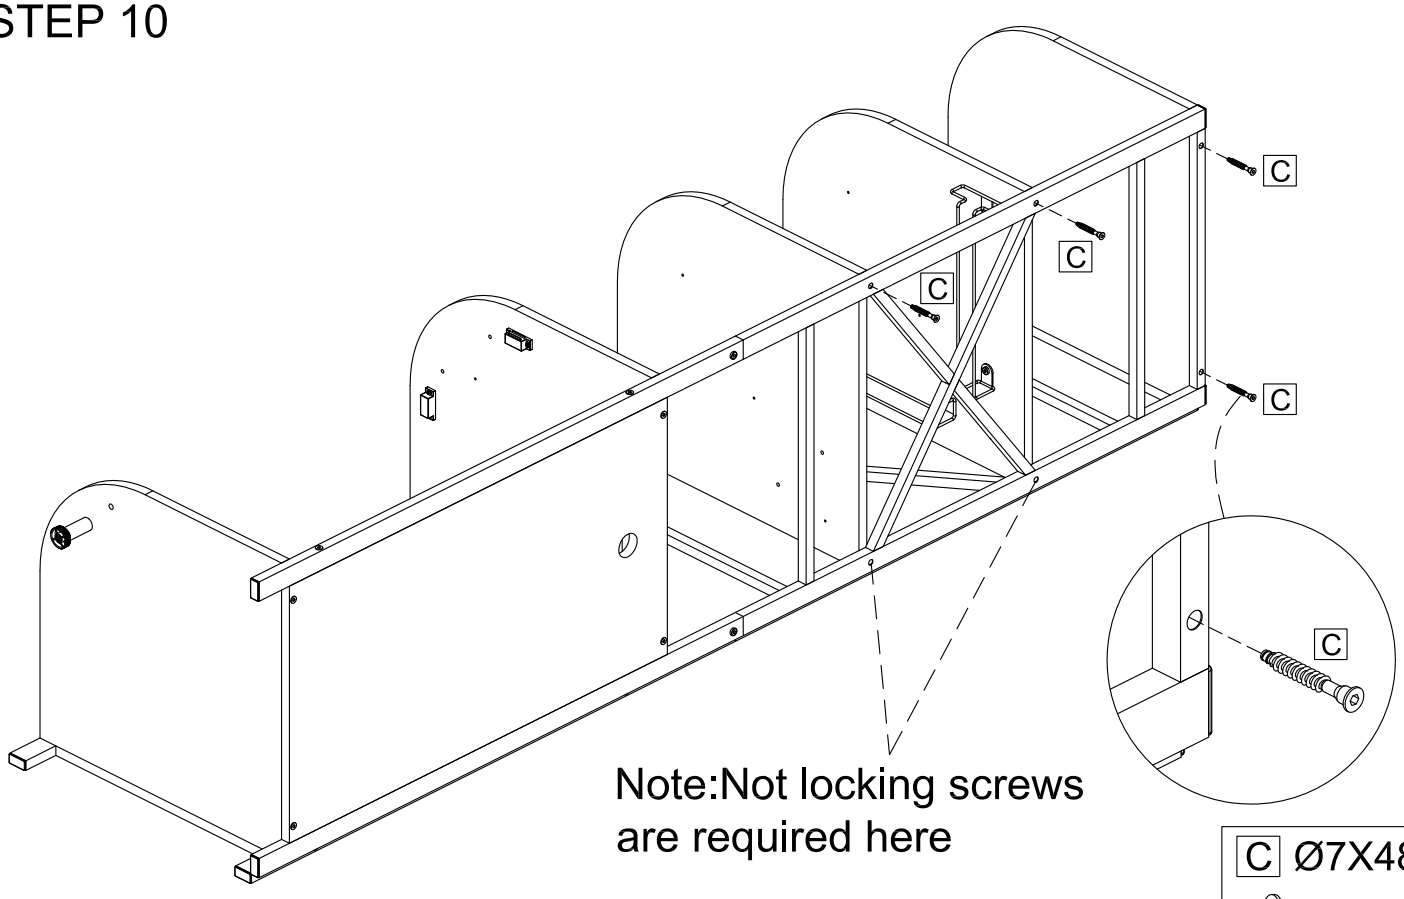


C Ø7X48L



X4

INSTALLATION INSTRUCTION


STEP 11

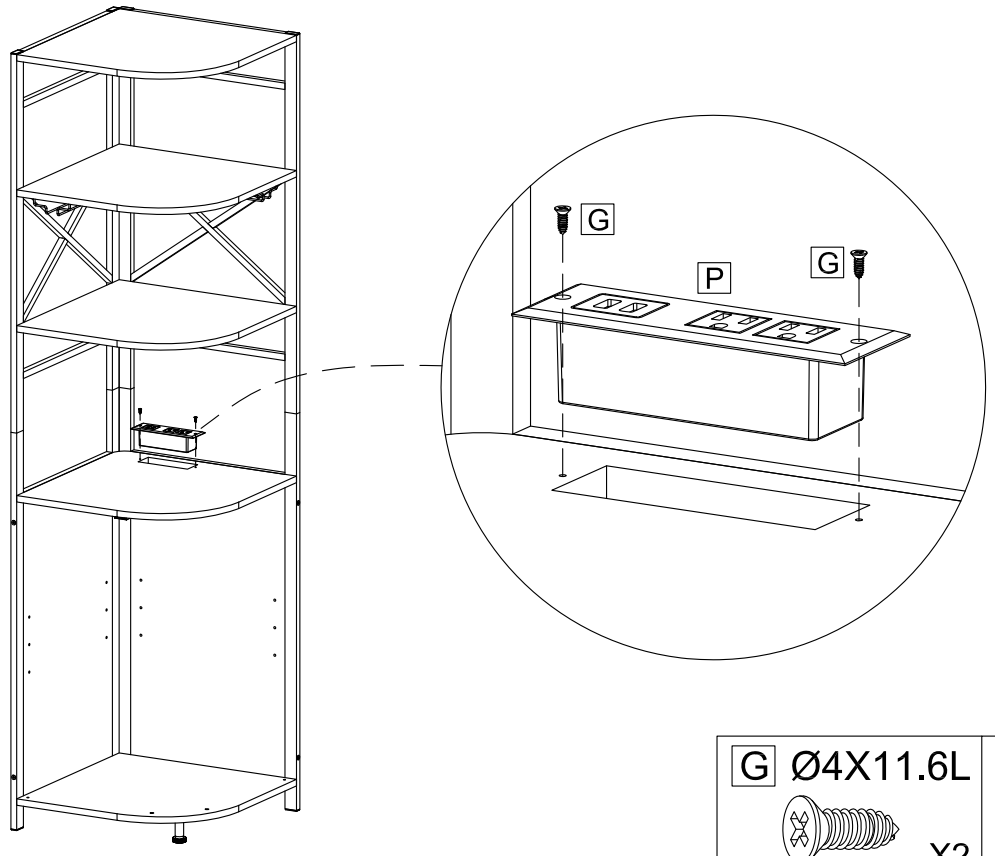

G Ø4X11.6L	P
X2	X1

STEP 12


First rip off the tape, then attach it to the board,alone the holes.

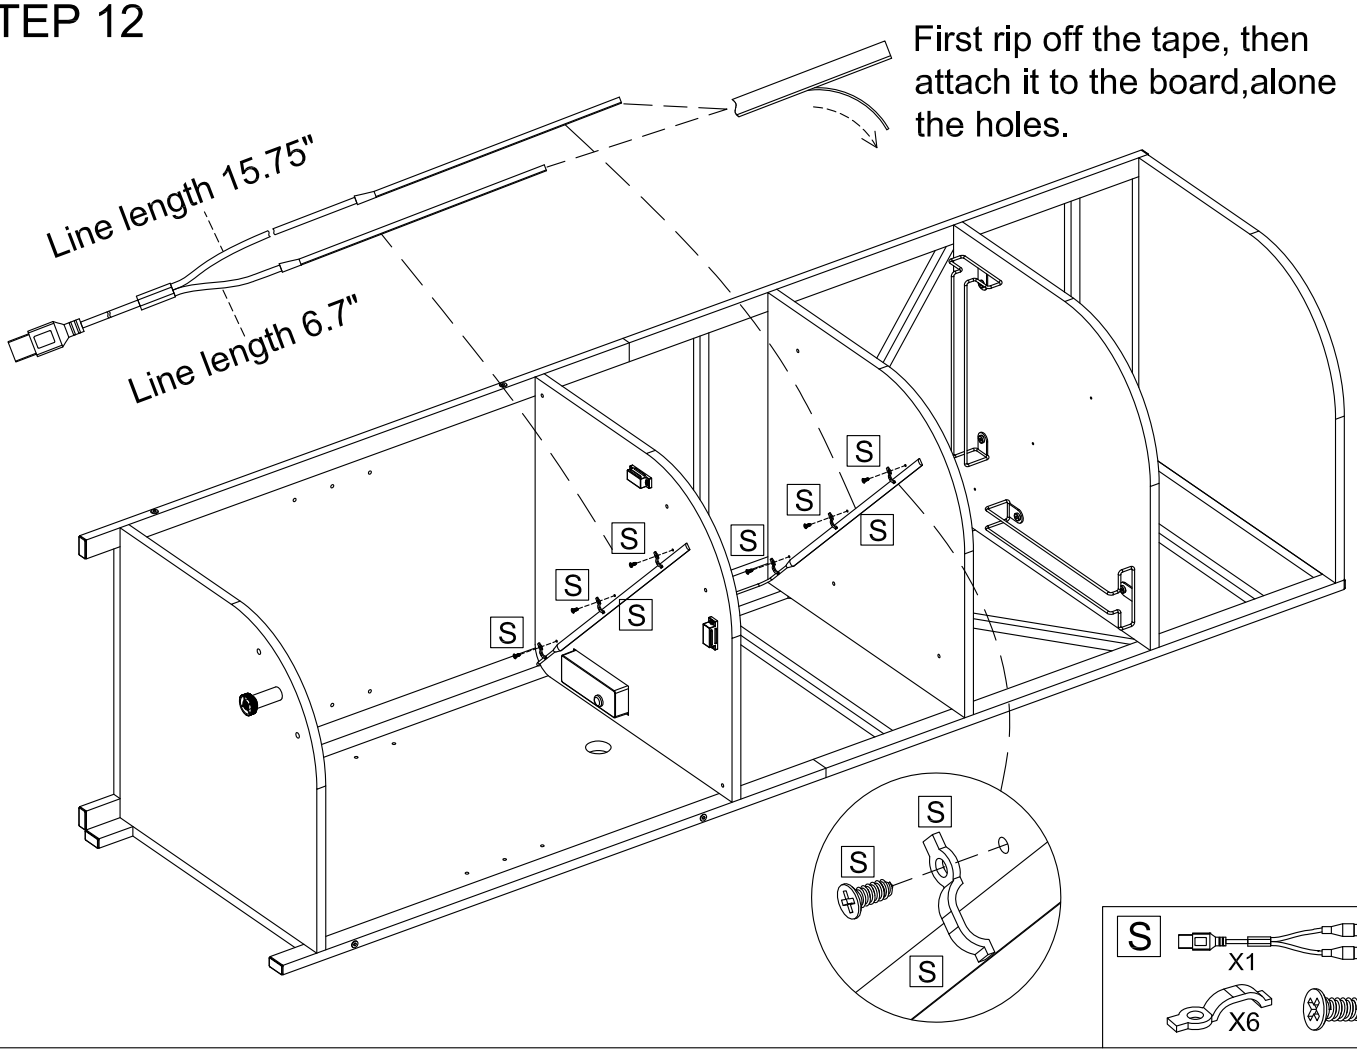

S	
X1	
X6	X6


INSTALLATION INSTRUCTION

STEP 13

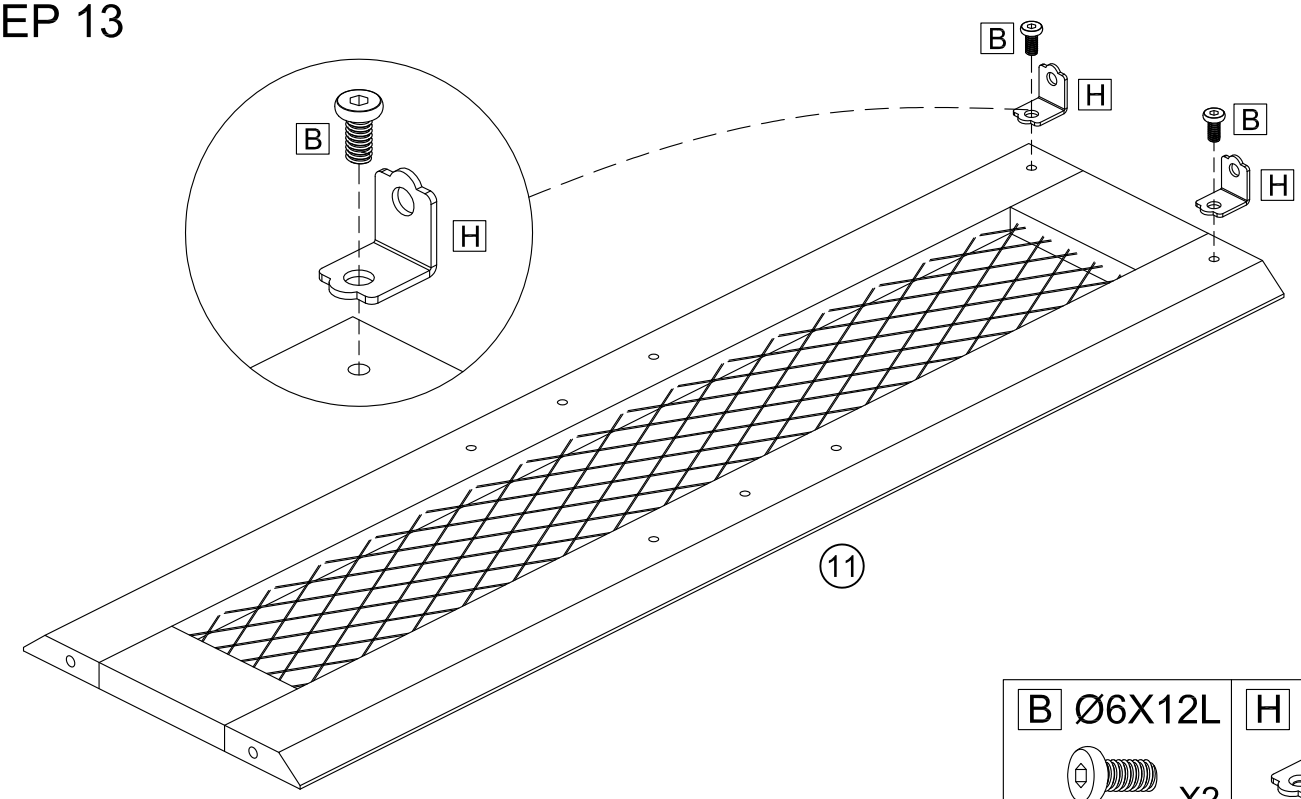

B Ø6X12L	H
X2	X2


STEP 14

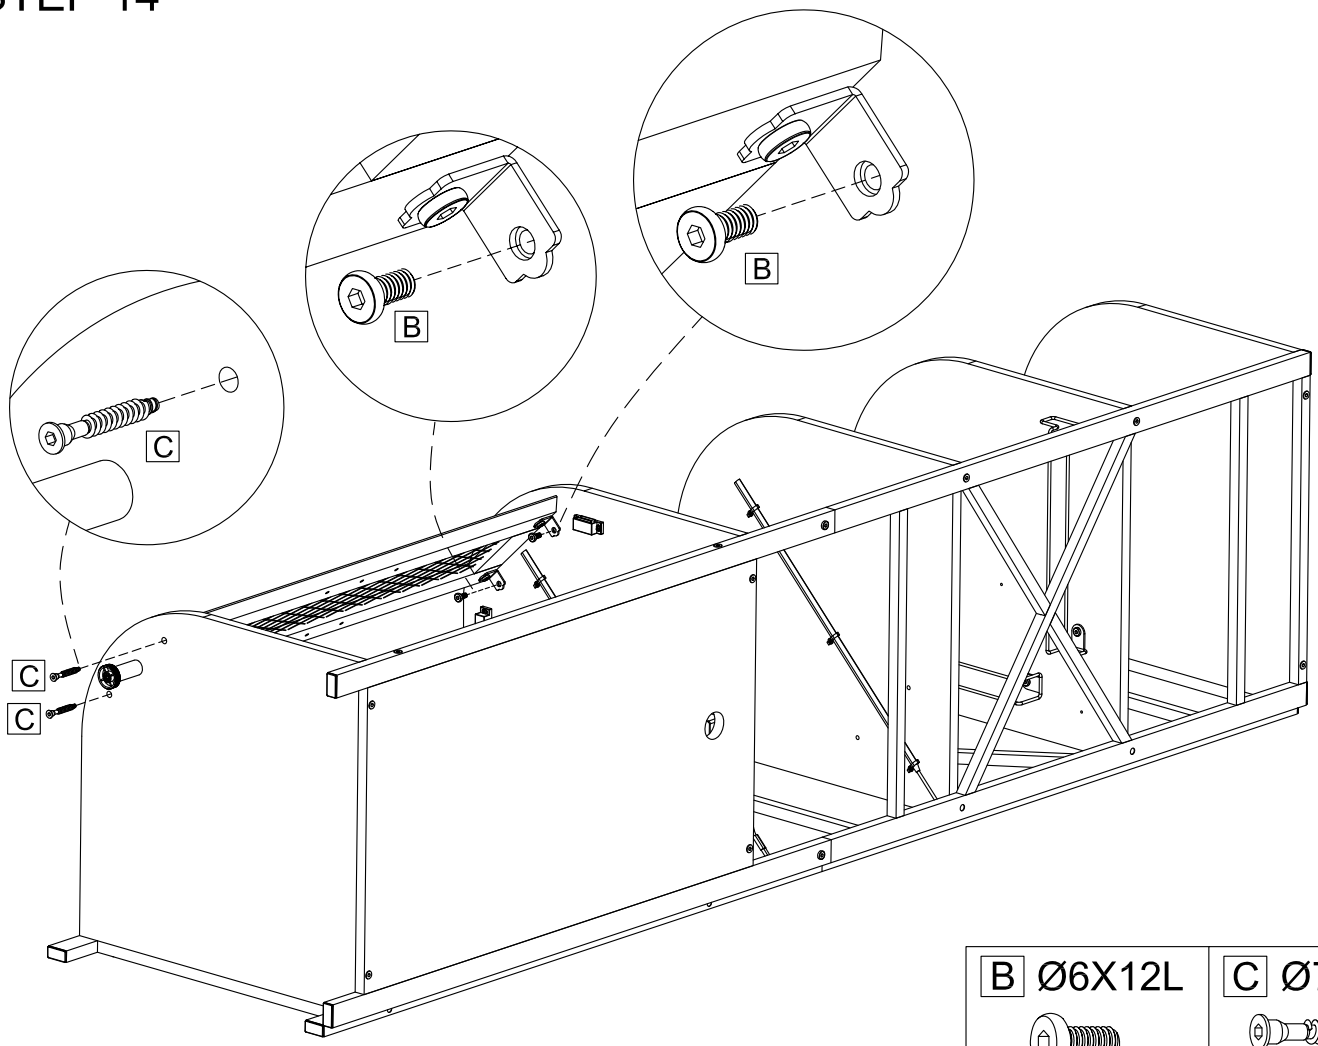

B Ø6X12L	C Ø7X48L
X2	X2


INSTALLATION INSTRUCTION

STEP 15

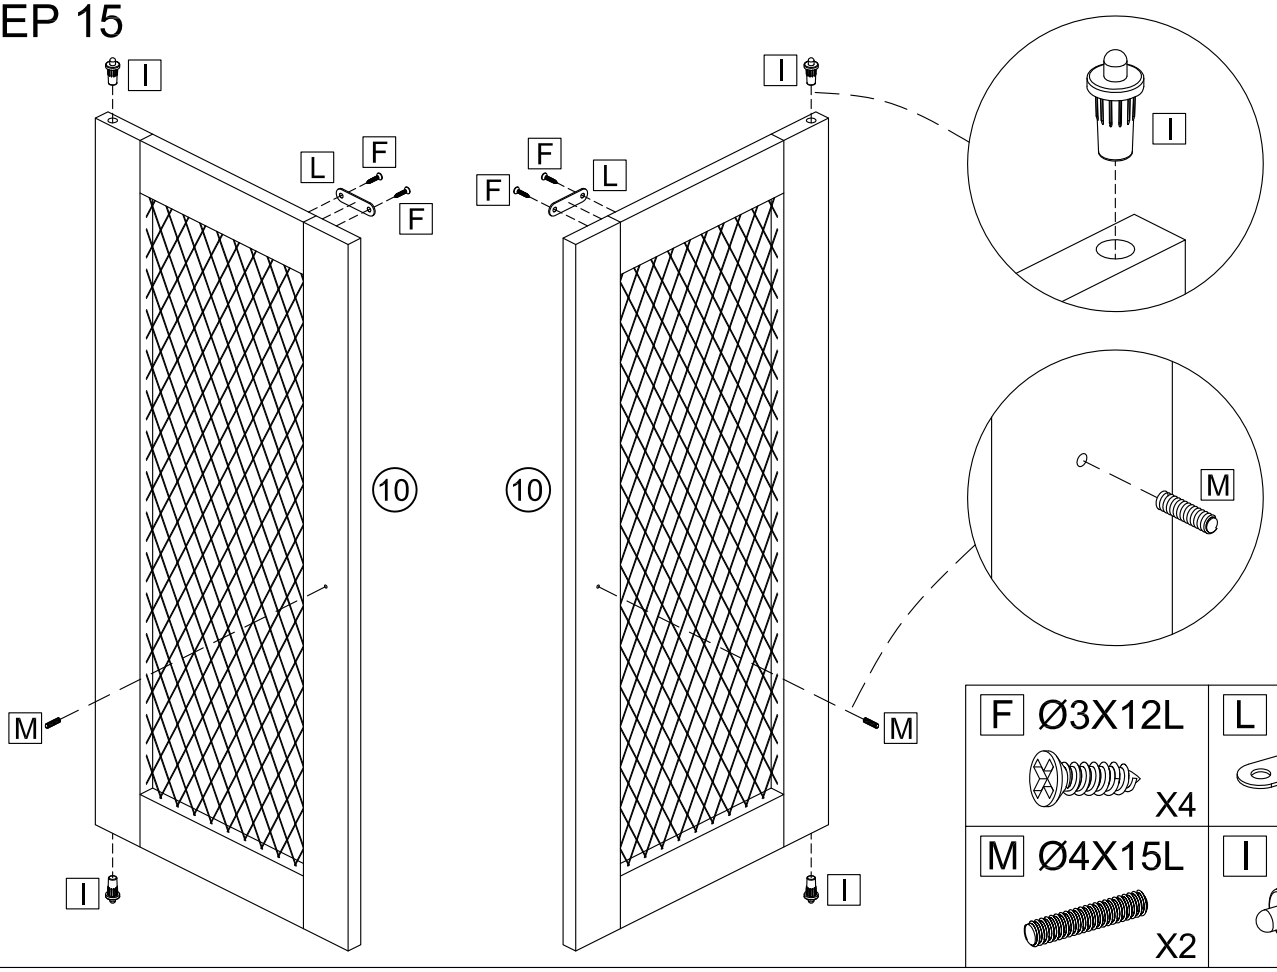

F Ø3X12L X4	L X2
M Ø4X15L X2	I X4


STEP 16

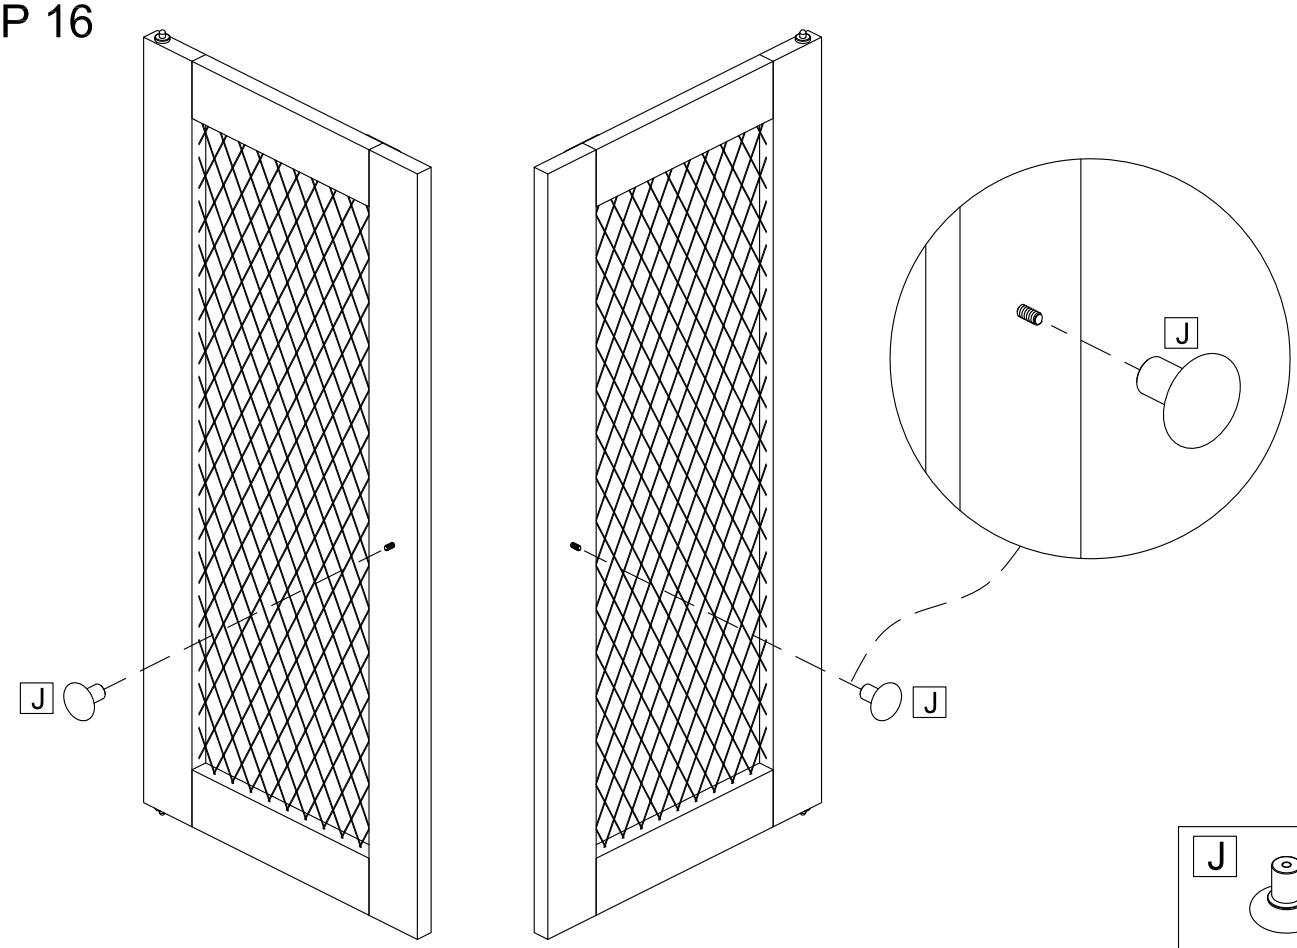


J X2


INSTALLATION INSTRUCTION

STEP 17

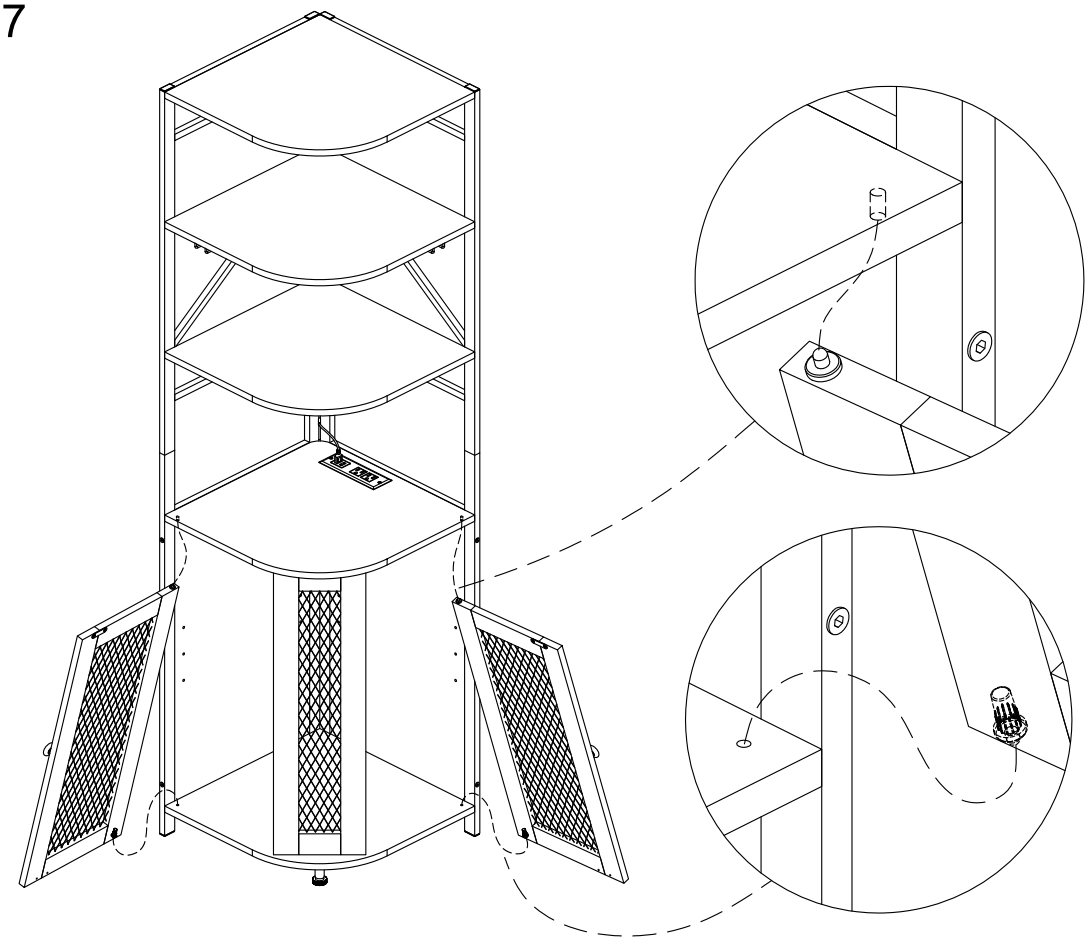


STEP 18

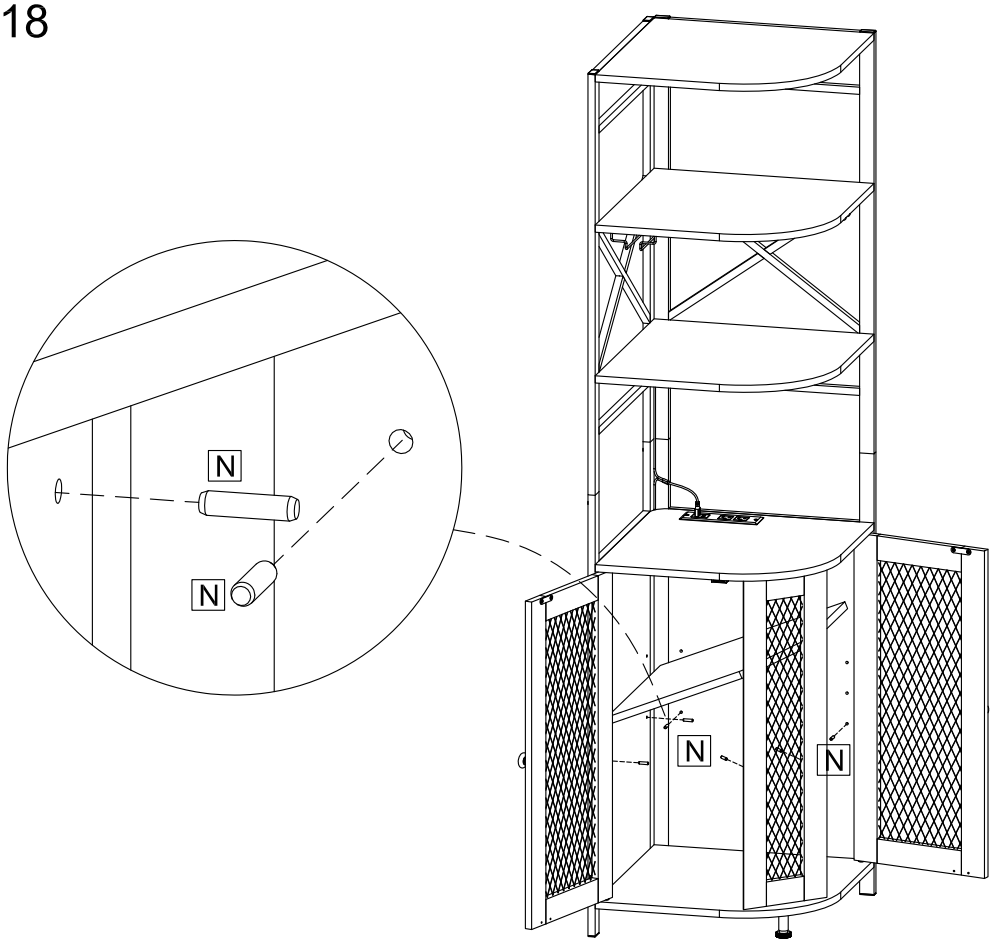

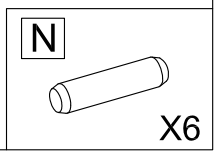


INSTALLATION INSTRUCTION

STEP 19

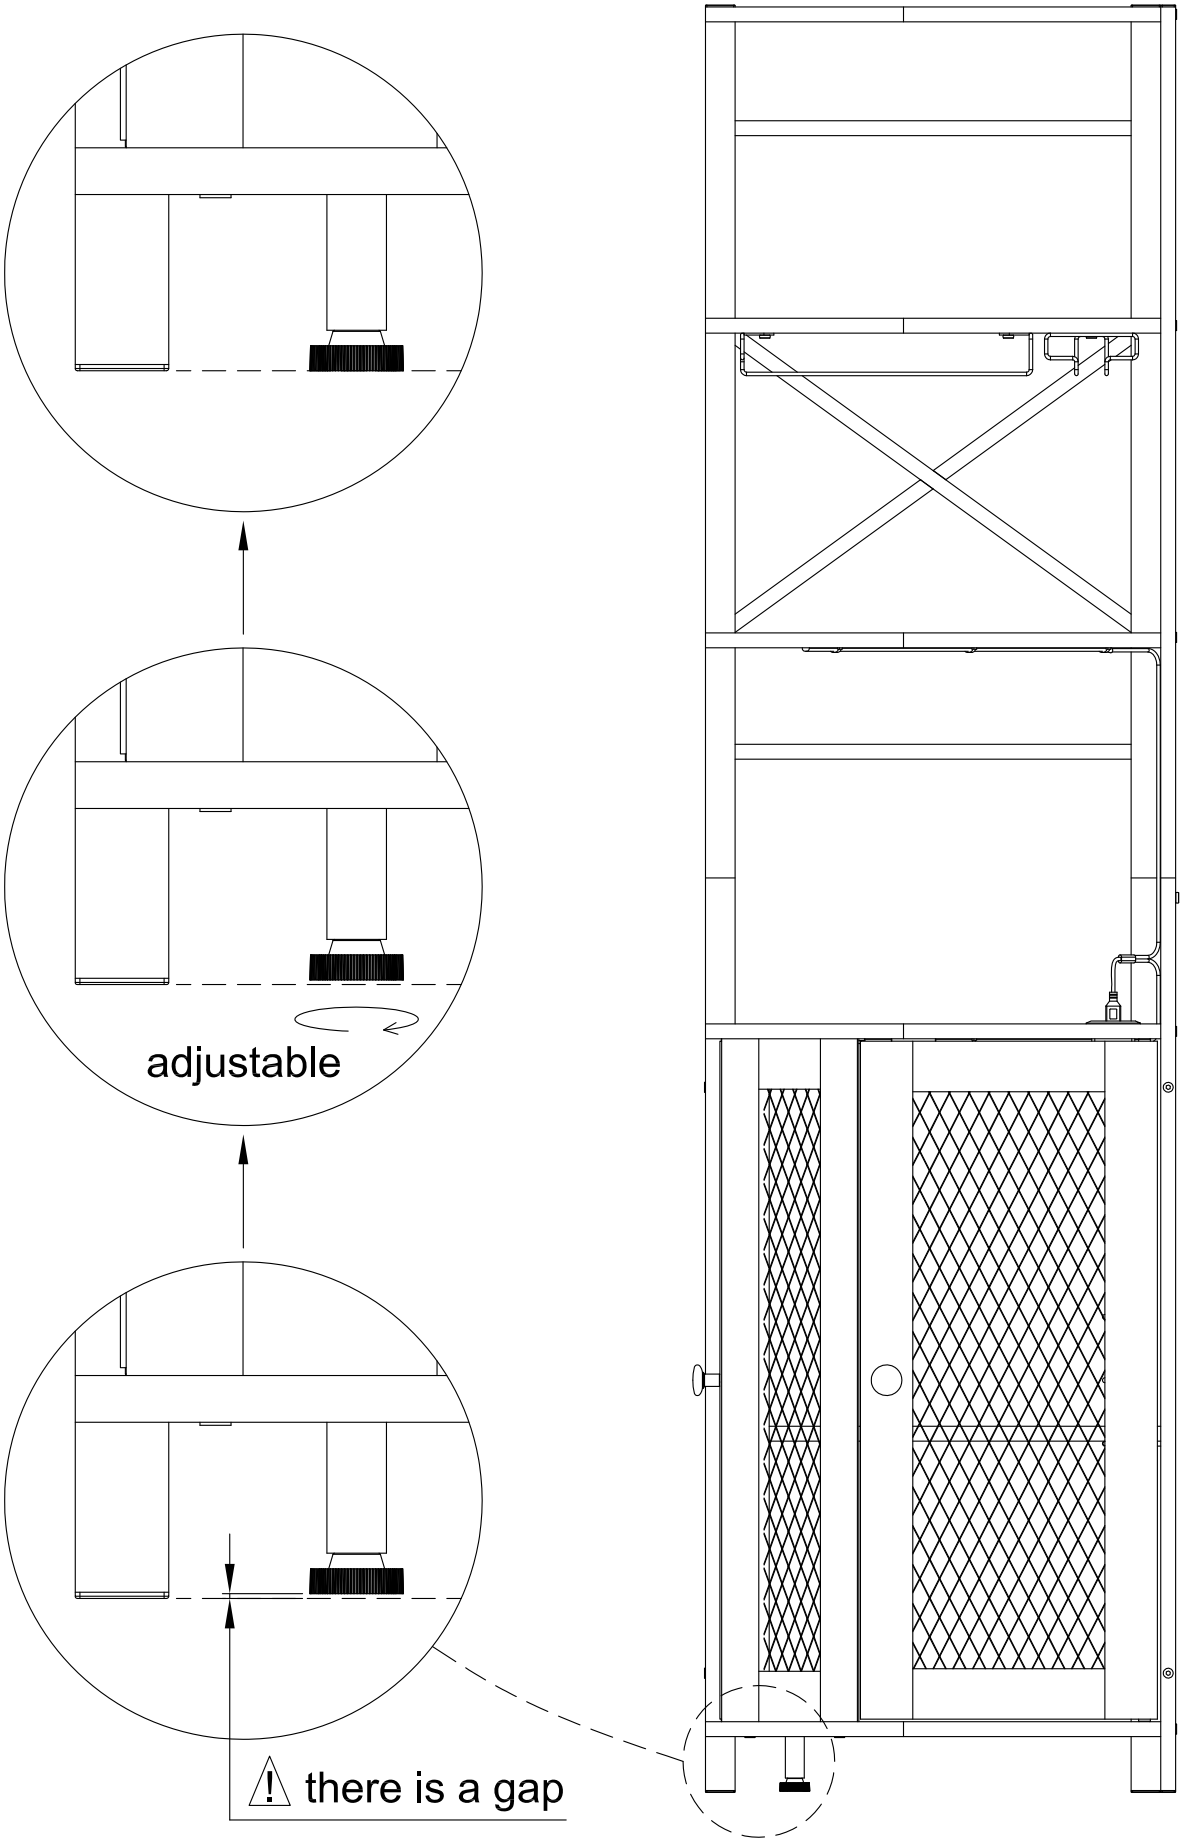


INSTALLATION INSTRUCTION

STEP 20

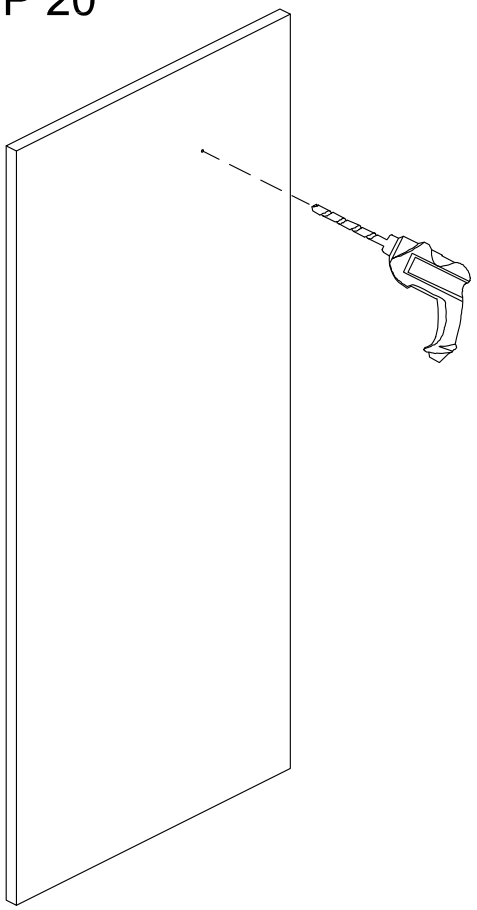


STEP 21

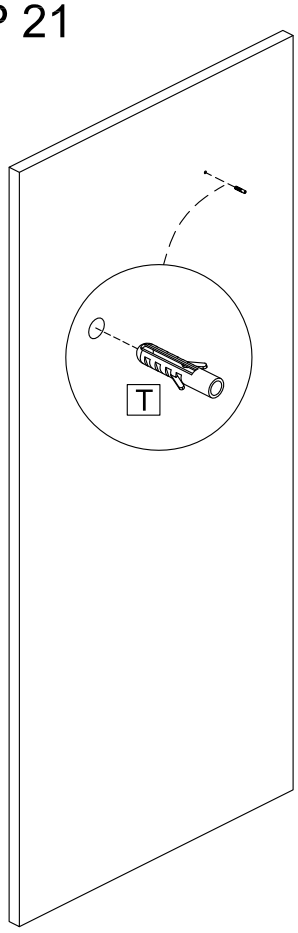

T X1

STEP 22

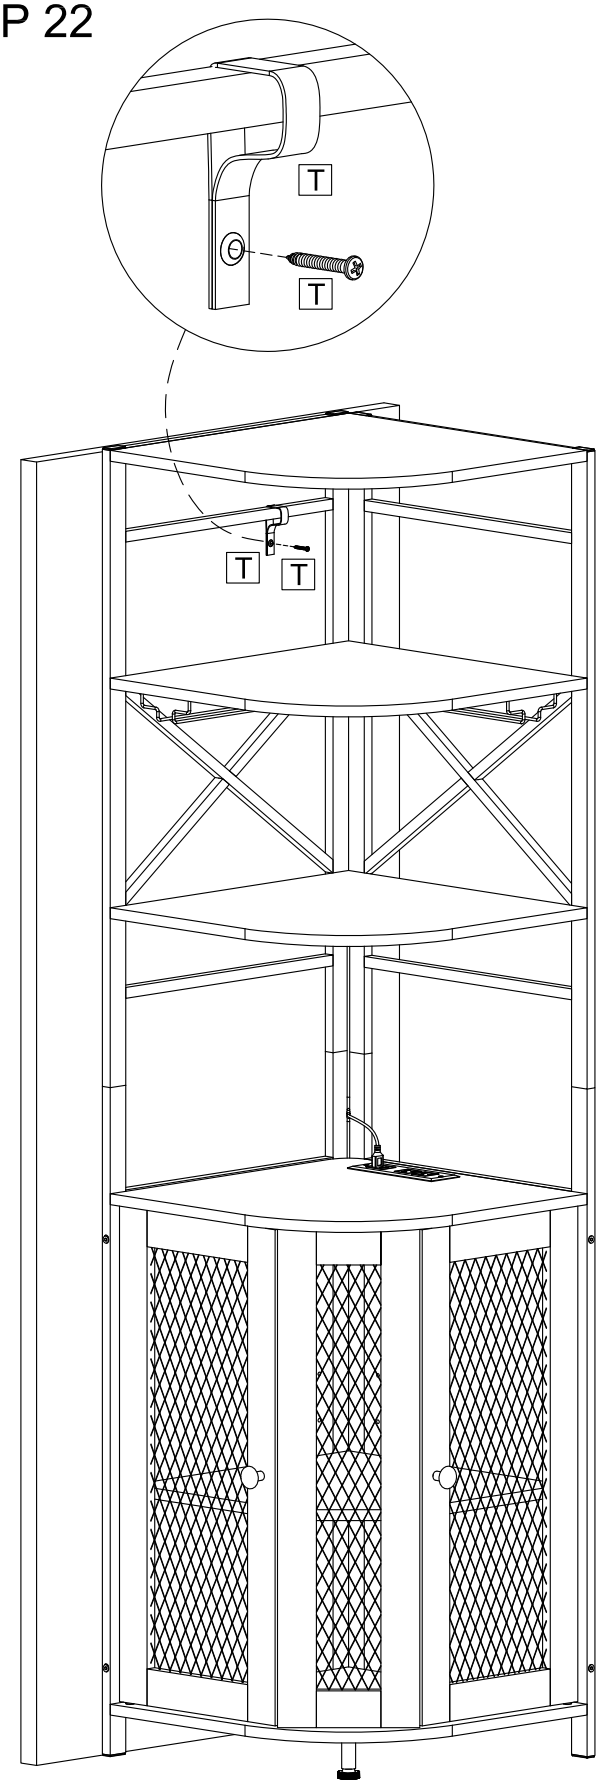

T X1

T X1