

Assembly Instructions


BSDSN-015

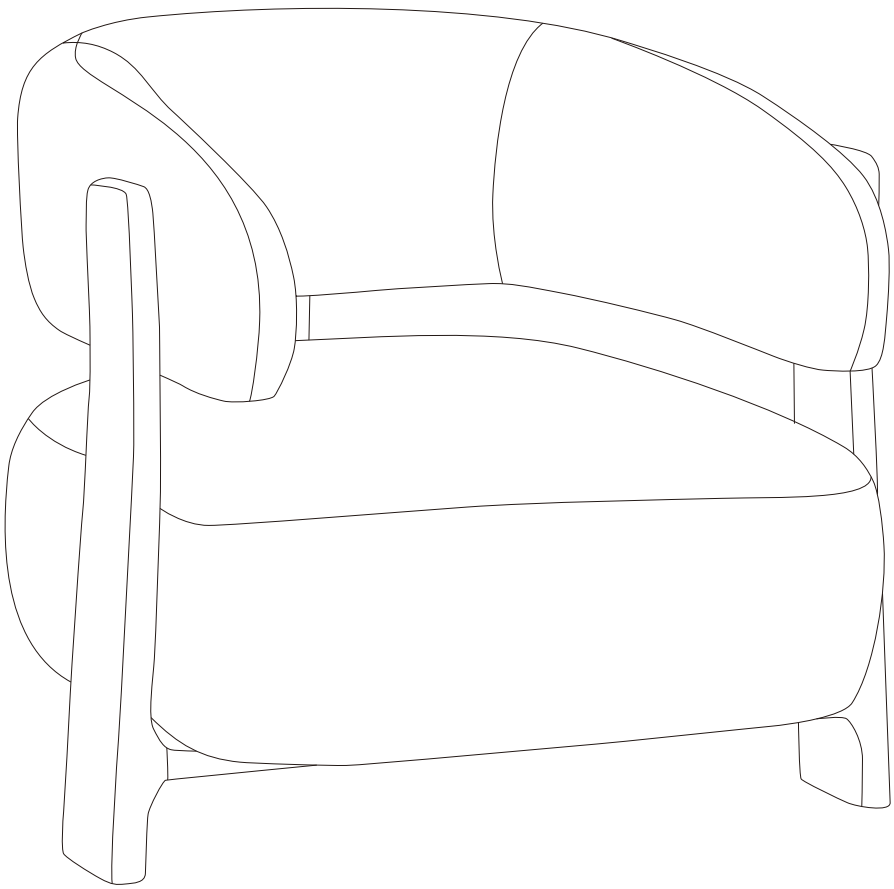


PARTS CHECKLIST



Ax1PC

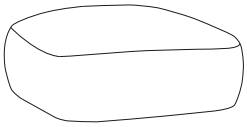

Bx1PC




Cx1PC



Dx1PC



Ex1PC




Fx1PC




Gx1PC



Hx3PCS



8*90
Ix4PCS



M8*65
Jx3PCS




M8
Kx4PCS



Lx4PCS




M8
Mx1PC




8*22*1.5
Nx1PC




Ox1PC



Px1PC




Qx3PCS



M6*18
Rx6PCS




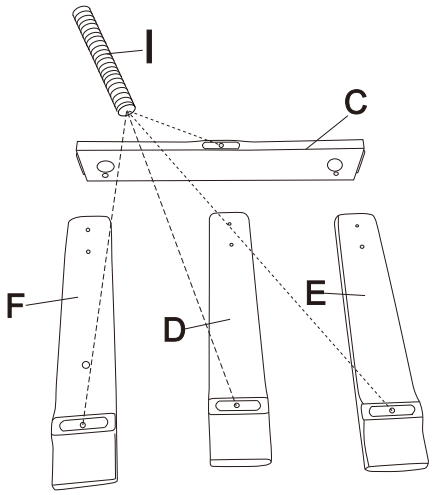

Tighten by 100%

Step 1 ： Install the screws in wood parts ,tighten by 100%.




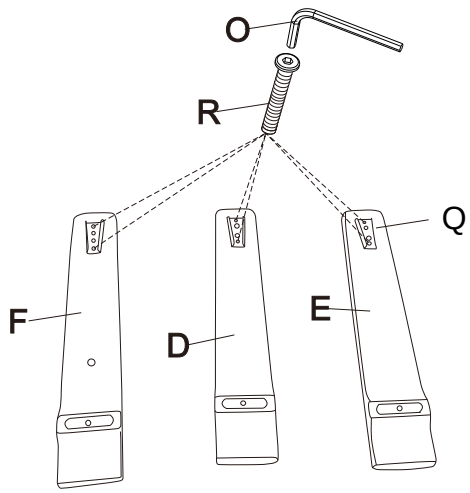

Tighten by 100%

Step 2 ： Install the metal insert with screws,tighten by 100%.




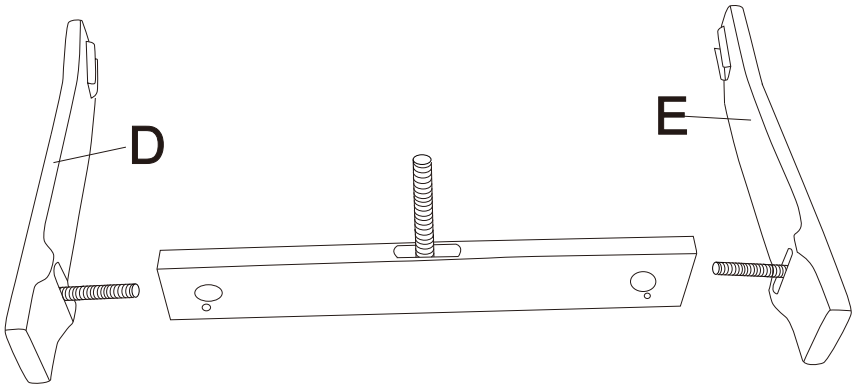

Step 3: Combine the corssbar [C] into legs[D] ,[E] with screws ,tighten by 80%.




Tighten by 80%

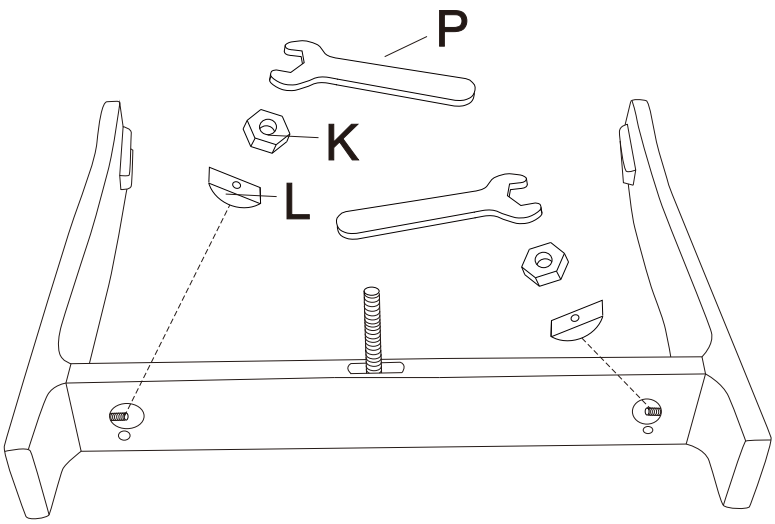

Step 4: Combine the corssbar [C] into legs[D] ,[E] with screws ,tighten by 80%.




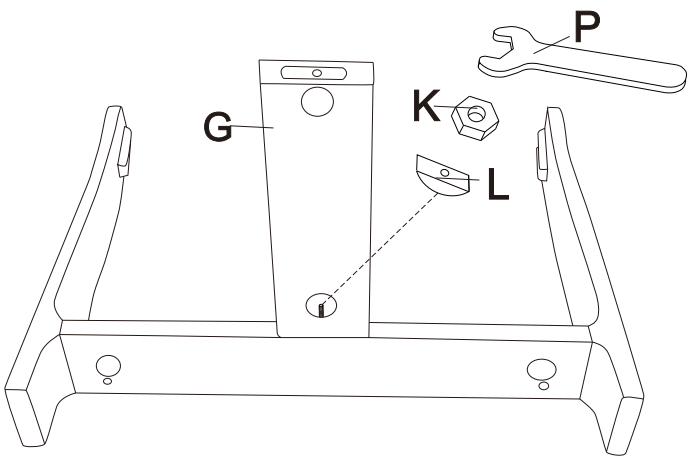

Step 5: Install the crossbars[G] to woodframe with screws .




Tighten by 80%

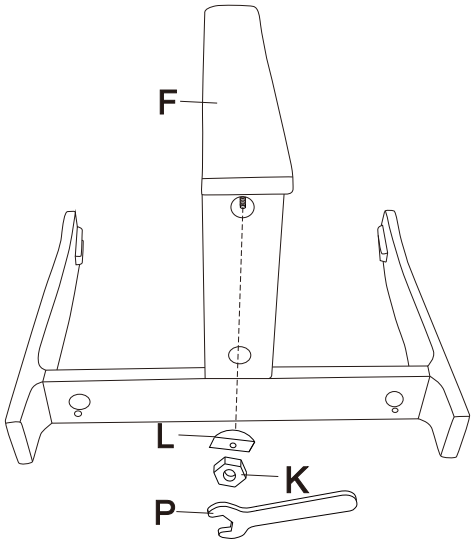

Step6：Install the crossbars[F] to woodframe with screws .




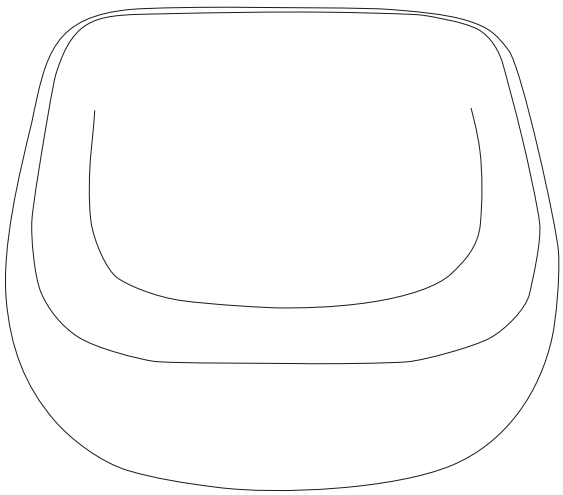

Step 7：Open the zip in the bottom of seat.




Tighten by 80%

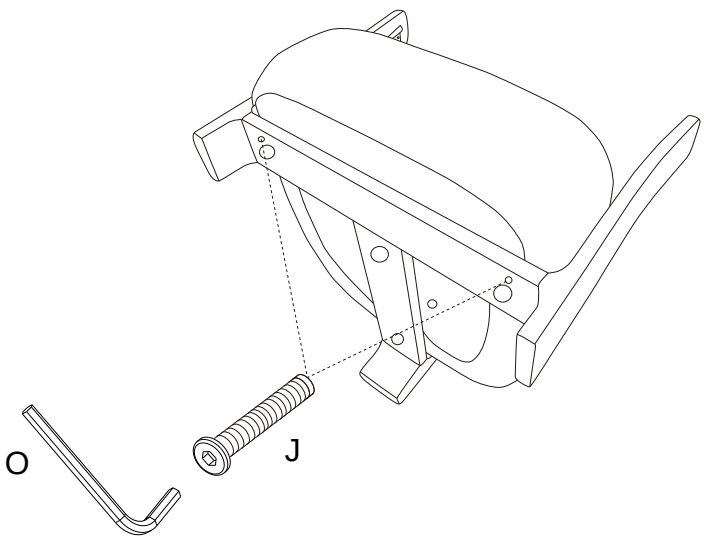

Step 8：Install the screws between the seat and woodframe.




Tighten by 80%

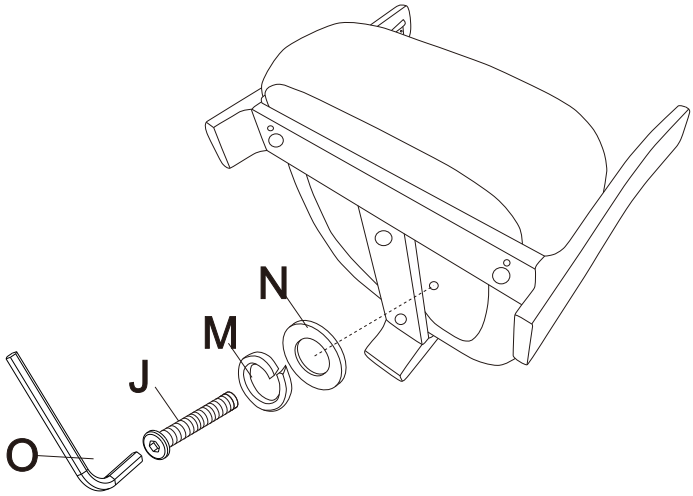

Step 9:Install the screws between the seat and woodframe.




Tighten by 100%

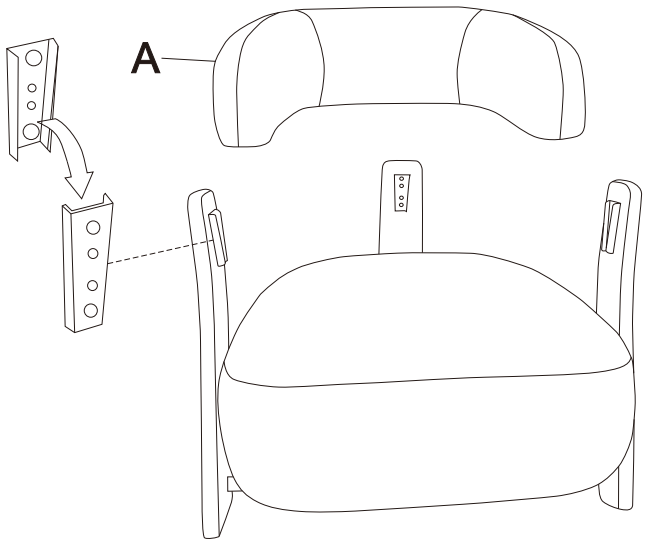

Step 10:Keep balance and tighten all the screws by 100%,insert the back [A] .



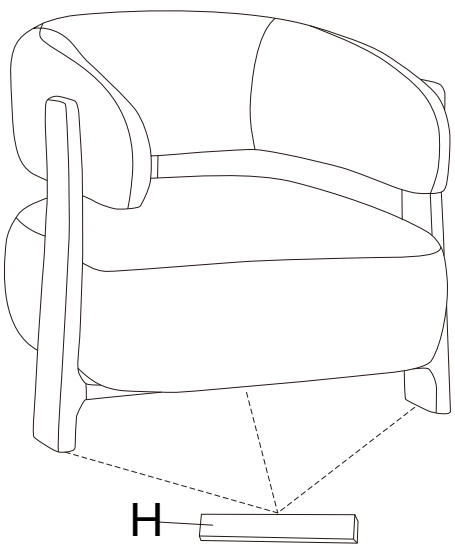

Step 10:Install the footpads [H] into the bottom of woodframe .