
Shoe Storage Bench

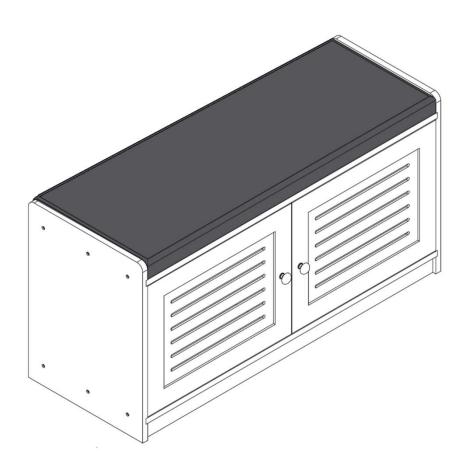

Product Information

Specifications					
Color	White and Gray				
Construction	Wood				
Cushion Fabric	Polyester				
Length	35.83" (91cm)				
Width	13.78" (35cm)				
Height	18.5" (47cm)				
Unit Net Weight	40lbs (18kgs)				
Shoe Capacity (with shelves)	8 pairs for Men 10-12 pairs for Women/Children				
Tested Seating Load Capacity	330lbs (150kgs)				

Features				
Shelves	2 x Adjustable/Removable			
Hinges	Soft Close			
Cushion	Removable/Washable Fabric			

Table of Contents

List of Components Enclosed for Assembly	
List of Panels & Parts for Assembly	5
Step 1: Assemble Top & Middle Panels	6
Step 2: Assemble Bottom Panel	
Step 3: Assemble Front Leg	8
Step 4: Assemble Back Leg & Right-Sided Panel	<u>C</u>
Step 5: Assemble Backboard	10
Step 6: Assemble Left-Sided Panel	11
Step 7: Assemble Shelves	12
Step 8: Door Preparation	13
Step 9: Assemble Doors	14
Step 10: Cushion Seat	15

Note to Customer: In the event that you have any questions or issues with the assembly of this product, please don't hesitate to contact us and we will be more than happy to assist with your questions and provide you with the best possible outcome.

List of Components Enclosed for Assembly

Description of Parts	Part No.	Quantity	Picture
Cam Bolt	Α	8	
Cam Lock	В	8	
Long Screw	С	12	8 mm
Hinge Screw	D	24	Butter
Door Hinge	E	4	
Door Handle Screw	F	2	(g) Ithin
Door Handle	G	2	
Shelf Support Pin	н	8	
Wood Dowel Pin	I	2	


List of Panels & Parts for Assembly

Description of Parts	Step Reference	Part No.	Quantity	Picture
Top Panel	Step 1	1	1	
Bottom Panel	Step 2	2	1	
Middle Panel	Step 1	3	1	
Backboard	Step 5	4	1	
Front Leg	Step 3	5	1	
Back Leg	Step 4	6	1	
Right-Sided Panel	Step 4	7	1	
Left-Sided Panel	Step 6	8	1	
Removable / Adjustable Shelf	Step 7	9	2	
Door	Step 8 & 9	10	2	
Cushion Seat	Step 10	11	1	

Step 1: Assemble Top & Middle Panels

- Screw cam bolts (A x 2) to the top panel (part 1)
- Insert cam locks (B x 2) to the middle panel (part 3)
- Place part 3 into the cam bolts on part 1 and turn the cam locks on part 3 clockwise to lock them together.


Description of Parts	Part No.	Qty	Picture
Cam Bolt	Α	2	
Cam Lock	В	2	×
Top Panel	1	1	
Middle Panel	3	1	

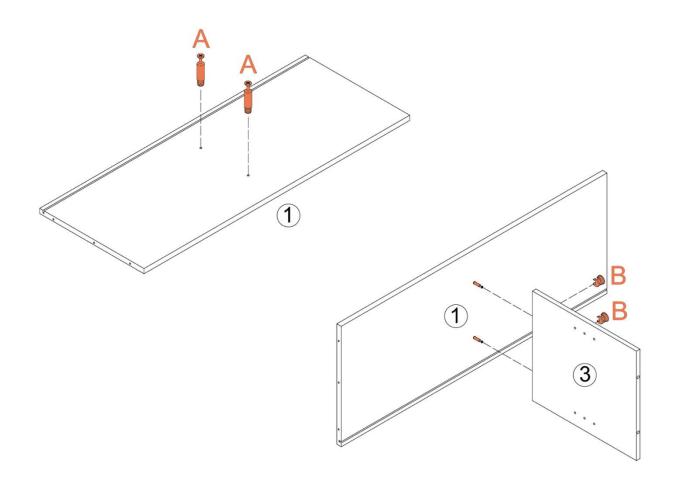

Step 2: Assemble Bottom Panel

- Screw cam bolts (A x 2) to the bottom panel (part 2)
- ➤ Insert cam locks (B x 2) to part 3
- ➤ Insert the cam bolts on part 2 into part 3 and turn the cam locks on part 3 clockwise to lock them together.


Description of Parts	Part No.	Qty	Picture
Cam Bolt	Α	2	
Cam Lock	В	2	X
Bottom Panel	2	1	

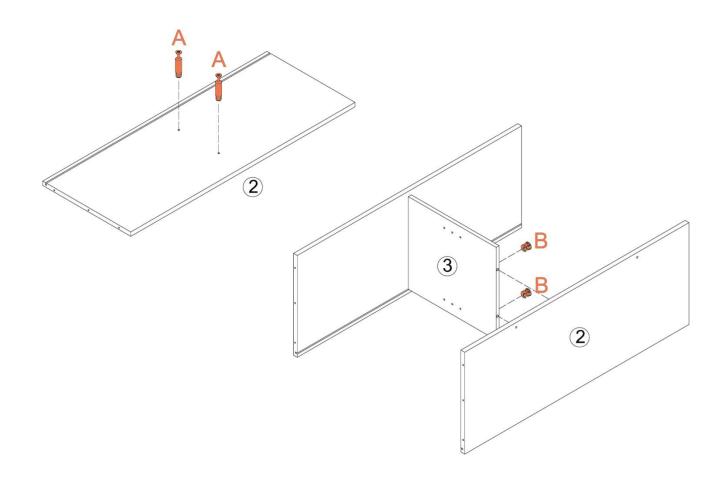

Step 3: Assemble Front Leg

- Insert the wooden dowel pins (I x 2) to the bottom of part 2 as shown on the diagram
- Attach the front leg (part 5) to part 2 by inserting part 5 onto the wooden dowel pins on part 2.


Description of Parts	Part No.	Qty	Picture
Wood Dowel Pin	ı	2	
Front Leg	5	1	

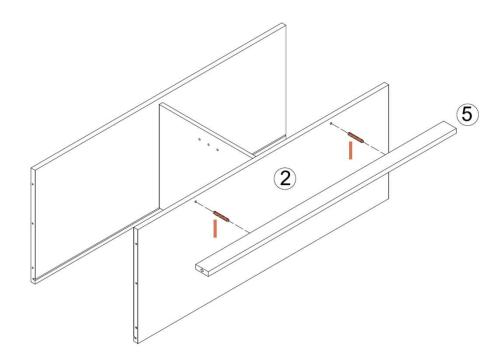

Step 4: Assemble Back Leg & Right-Sided Panel

- Screw cam bolts (A x 2) into the right-sided panel (part 7)
- Insert cam lock (B x 1) into the right side of part 5
- ➤ Insert cam lock (B x 1) into the right side of the back leg (part 6)
- ➤ Insert the cam bolts on part 7 into parts 5 and 6 and insert the grooves on part 7 into parts 1 and 2
- ➤ Turn the cam locks on parts 5 and 6 clockwise to lock parts 5 and 6 to part 7
- Screw the long screws (C x 6) from part 7 into parts 1 and 2 to lock them together


Description of Parts	Part No.	Qty	Picture
Cam Bolt	Α	2	
Cam Lock	В	2	×
Long Screw	С	6	(A) Ittitutus
Back Leg	6	1	
Right-Sided Panel	7	1	

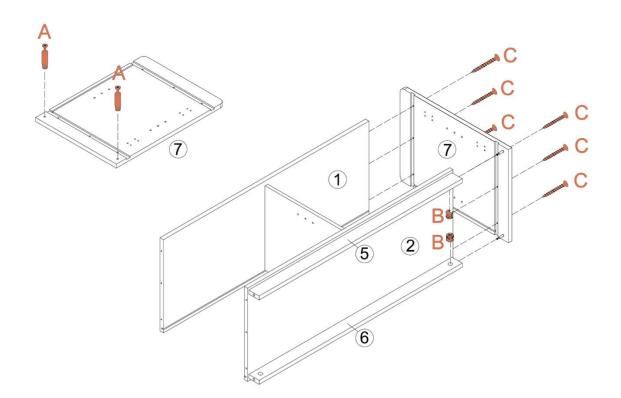

Step 5: Assemble Backboard

➤ Insert the backboard (part 4) into the grooves of parts 1, 2 and 7


Description of Parts	Part No.	Qty	Picture
Backboard	4	1	

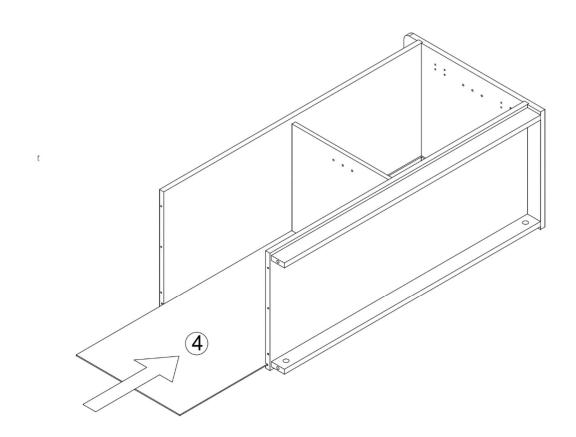

Step 6: Assemble Left-Sided Panel

- Screw cam bolts (A x 2) into the left-sided panel (part 8)
- Insert cam lock (B x 1) into the left side of part 5
- Insert cam lock (B x 1) into the left side of part 6
- ➤ Insert the cam bolts on part 8 into parts 5 and 6 and insert the grooves on part 8 into parts 1 and 2
- Turn the cam locks on parts 5 and 6 clockwise to lock parts 5 and 6 to part 8
- Screw the long screws (C x 6) through part 8 into parts 1 and 2 to lock them together


Description of Parts	Part No.	Qty	Picture
Cam Bolt	Α	2	
Cam Lock	В	2	<u> </u>
Long Screw	С	6	Dummin.
Left-Sided Panel	8	1	

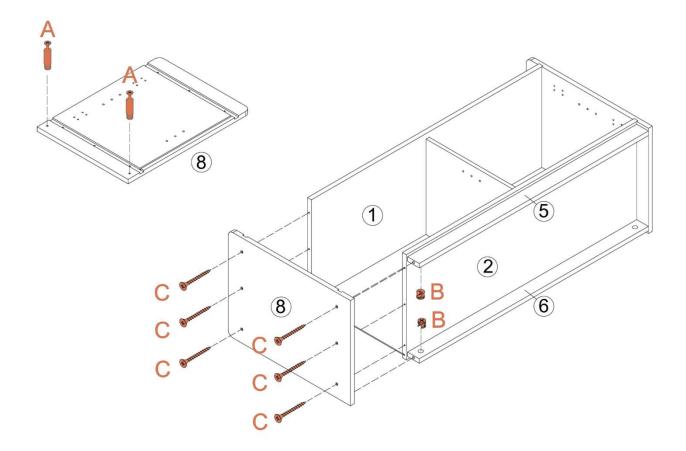

Step 7: Assemble Shelves

- ➤ Insert shelf support pins (H x 8) into parts 3, 7 and 8 as per diagram below
- ➤ Insert shelves (part 9 x 2) into the shoe storage bench as per diagram below and place them on top of the shelf support pins


Description of Parts	Part No.	Qty	Picture
Shelf Support Pin	н	8	
Removable / Adjustable Shelf	9	2	

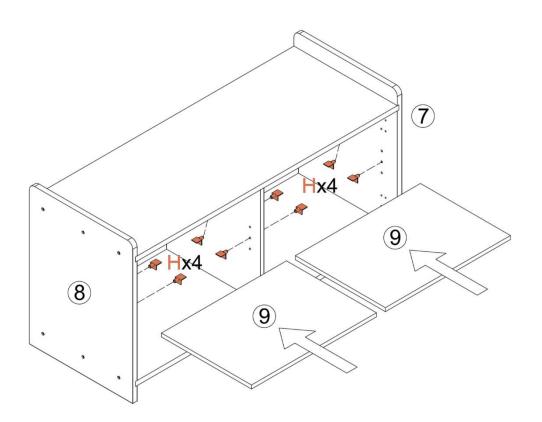

Step 8: Door Preparation

- ➤ Install the door hinges (E x 4) with the hinge screws (D x 8) into the door (part 10 x 2)
- ➤ Install the door handles (G x 2) with the door handle screws (F x 2) onto part 10 x 2


Description of Parts	Part No.	Qty	Picture
Hinge Screw	D	8	ENTITUE
Hinge	E	4	The state of the s
Door Handle Screw	F	2	(A) TITITLE
Door Handle	G	2	
Door	10	2	

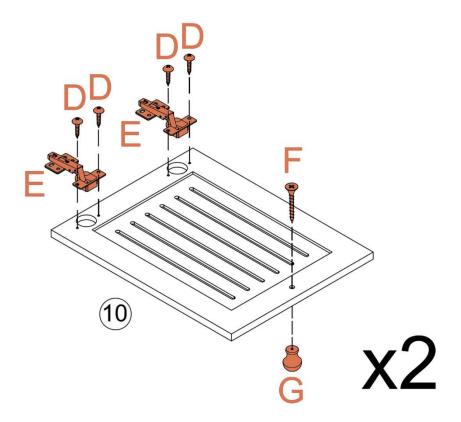


Step 9: Assemble Doors

- ➤ Install doors (part 10 x 2) onto the shoe storage bench by screwing the hinges (E x 4) with the hinge screws (D x 16)
- Use the guide below to adjust the position of the doors using the 3 hinge adjustment options below to ensure the doors are installed correctly

Description of Parts	Part No.	Qty	Picture
Hinge Screws	D	16	Matter

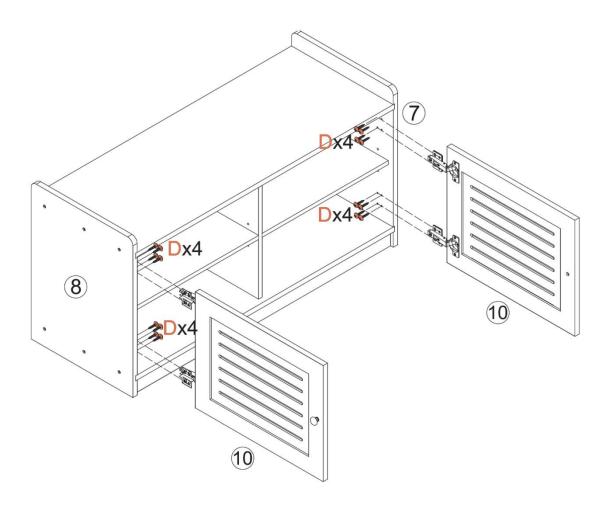

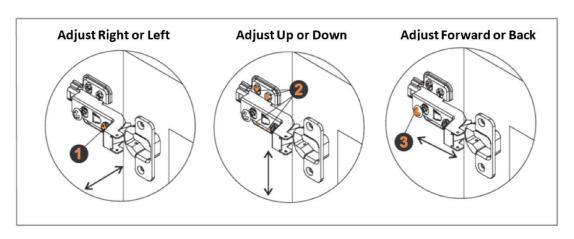

Step 10: Cushion Seat

Place the cushion seat (part 11) on top of part 1 as shown in the diagram below to complete the assembly.

Description of Parts	Part No.	Qty	Picture
Cushion Seat	11	1	

