


Installation Manual

Any question please contact us:
support@jubest.com


MYBD2P-36ST+HD

What's in the box

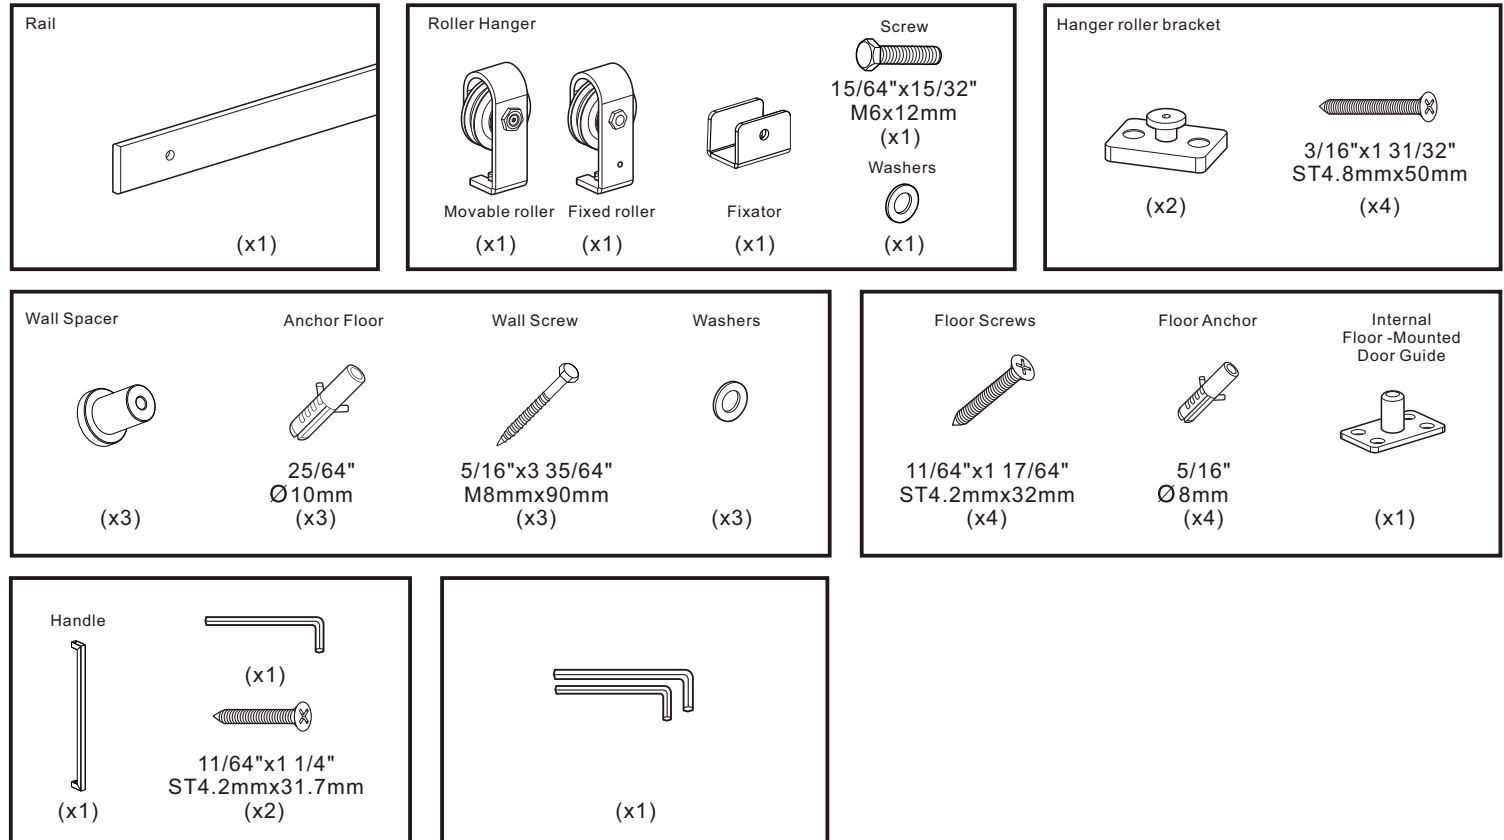

To provide feedback on a particular part, please mark it by circling in the instruction manual and kindly send us a photo.

Tools Required

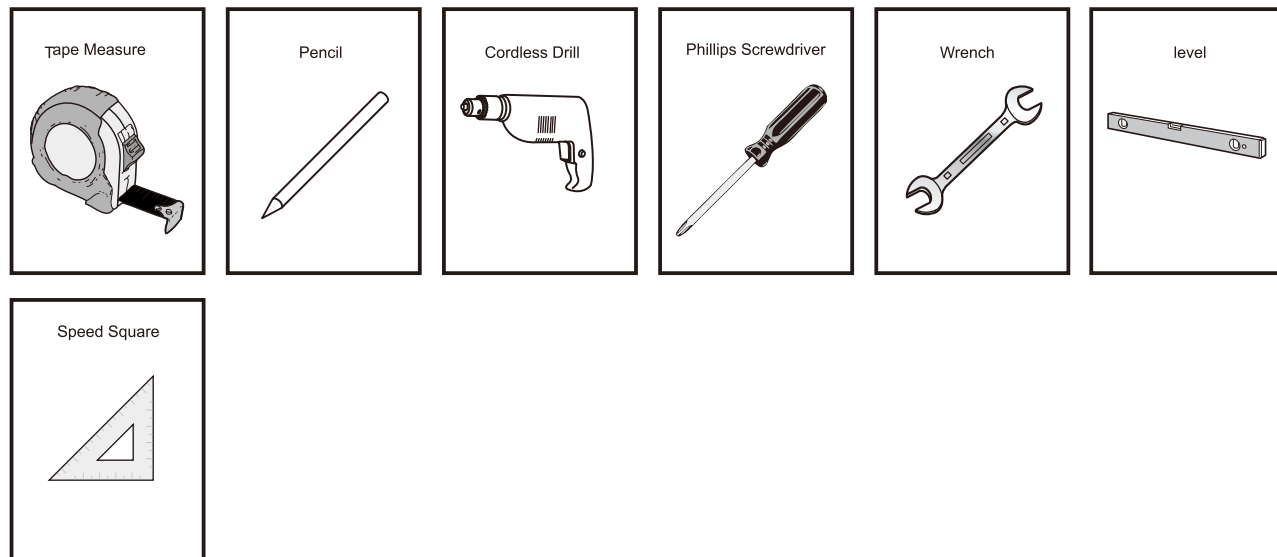


IMPORTANT: BEFORE YOU BEGIN

IF INSTALLING DIRECTLY INTO A NON-CONCRETE WALL, DO NOT ATTEMPT TO INSTALL THE RAIL SOLELY TO THE DRYWALL OR ANY WALL SURFACE AS THIS MAY NOT SUPPORT THE WEIGHT OF THE RAIL AND MOUNTED DOOR. THE RAIL MUST BE INSTALLED ONTO A PIECE OF SOLID WOOD BLOCKING (PACKAGE NOT INCLUDED) USING MOUNTING SCREWS (PACKAGE NOT INCLUDED). ENSURE THE SOLID WOOD BLOCKING IS SECURED INTO THE STRUCTURAL SURFACE. USE A STUD FINDER WHERE NECESSARY TO LOCATE STUDS AND SECURE SAFELY. TYPICAL SOLID WOOD BLOCKING SHOULD BE 8 1/4" (2076mm) x 5 1/2" x 7/8" (22mm).

NOTE, SEPARATE BOLTS ARE PROVIDED FOR 13/8" (41mm) DOORS AND LONGER BOLTS PROVIDED FOR 13/4" (82mm) DOORS. IF INSTALLING WITH THE INTERNAL FLOOR-MOUNTED DOOR GUIDE, THE DOOR MUST BE MORTISED 1/4" (6mm) WIDE X 3/4" (2mm) DEEP CENTRALLY.



Step1.concrete Wall Preparation1

Position the rail by measuring up from the door height (H)+1 17/32" (39mm) to the centre of the track. Also ensure a gap of 25/64"(10mm) at the bottom. Ensure the rail is level and leave a minimum of 2"(5.08mm) from the end of the rail to the side of the opening.

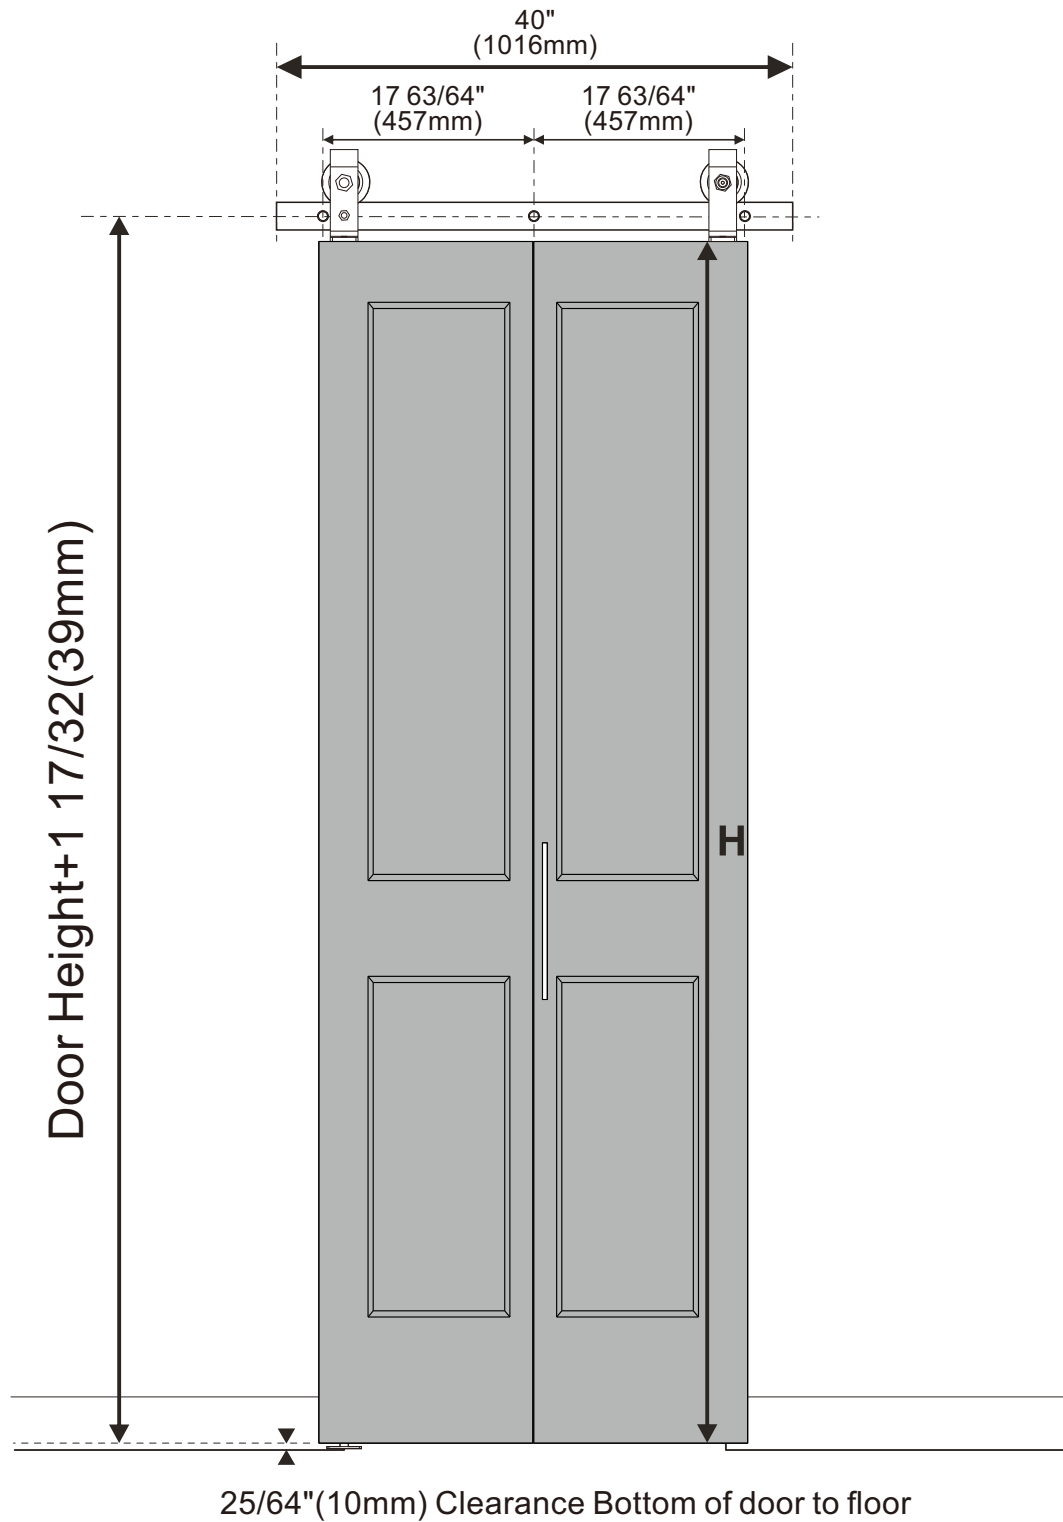

Step2.concrete Wall or solid wood wall mounting

Position the track in place ensuring it is level and mark the holes, drill $3/8"$ (10mm) holes into the marked location.

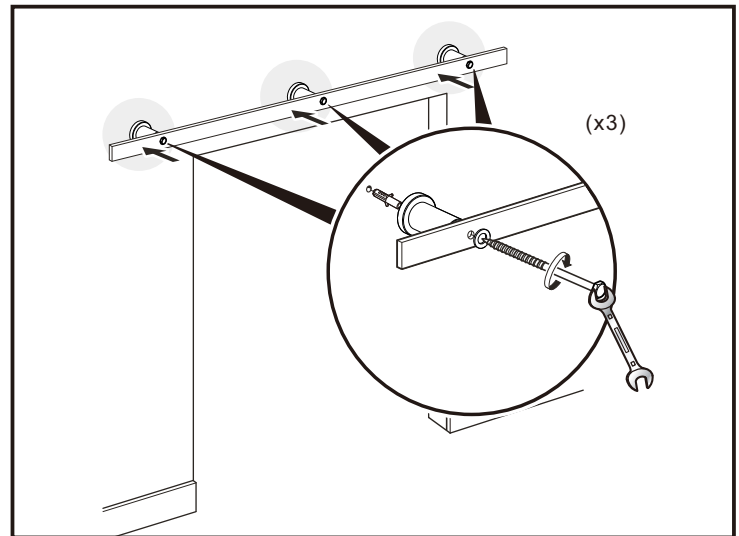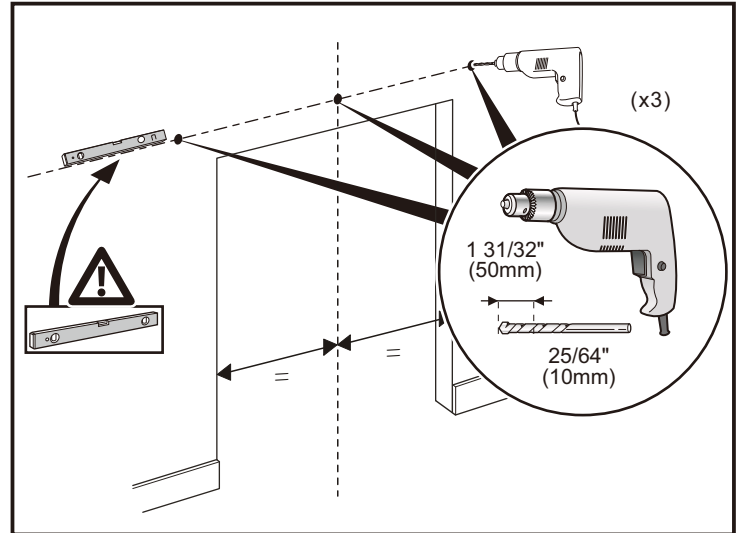

Step3.Drywall mounting

1. Locates wall studs


Use a stud finder to locate wall studs above door and in direction of door travel.

Mark locations of three studs onto the wall where you will be installing your mounting board.

2. Mark stud locations onto mounting board (not provided)


With an assistant holding mounting board in place, mark stud locations onto mounting board, with two marks per stud, above and below center.

3. Attach mounting board to wall. drill holes on mounting board for track and attach track to mounting board

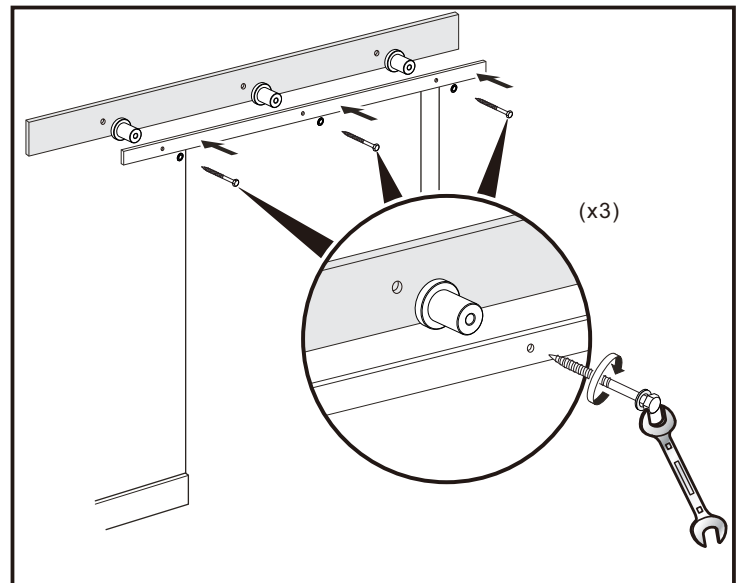


Step4.Hanger base mounting

Drill hole and fasten the screw
top of door by $\frac{3}{16}$ "(4.8mm)x1 $\frac{31}{32}$ "(50mm) screw.

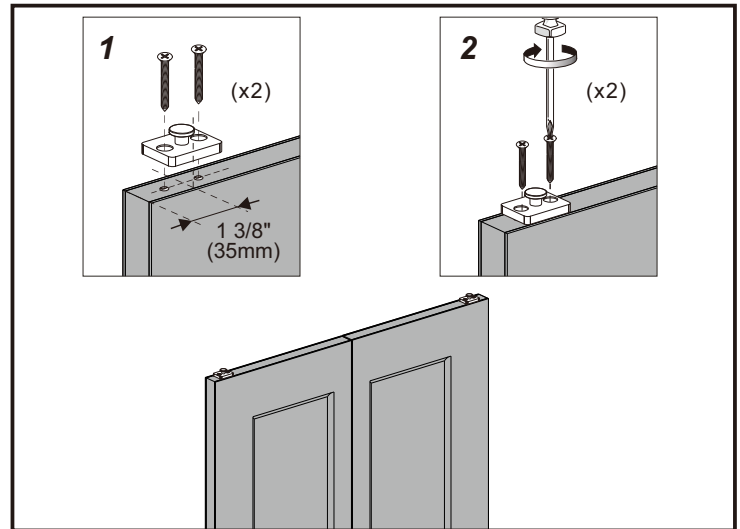





Step5.Put the 2 rollers onto track and mount floor guide

Mark the hole position on the bottom of the door with a pen,punch a hole with diameter $\frac{5}{16}$ "(8mm)depth $\frac{29}{32}$ "(23mm)Then put the socket on the hole,and knock it in with a wooden hammer.Finally,put the floor guide intothe socket.

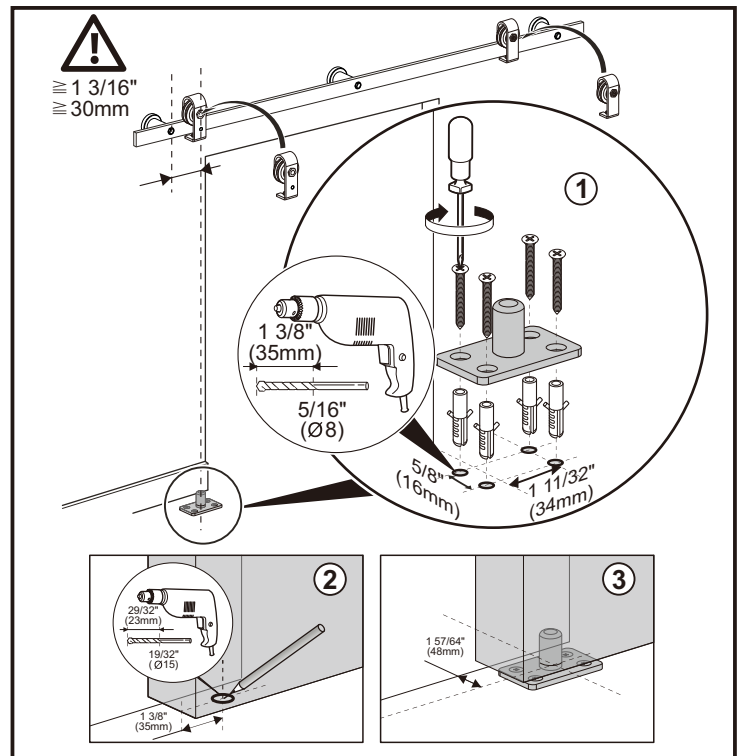








Step6.Install hanger roller 1

Unscrew the screw,adjust the position of the door and the floor guide,then push in the hanger roller slot,and fix it with screw.

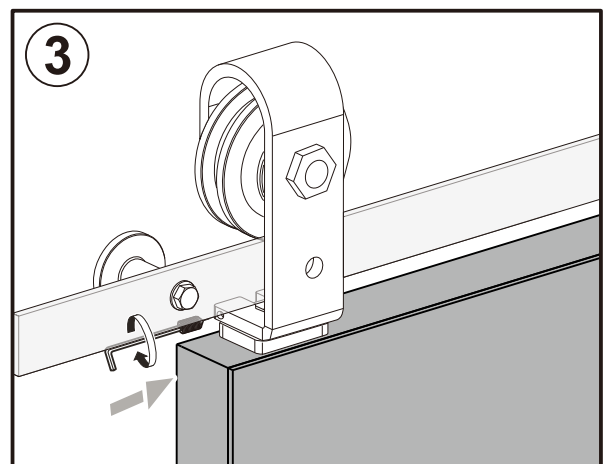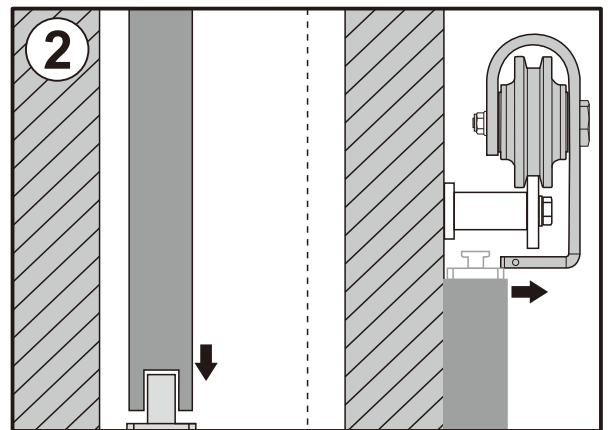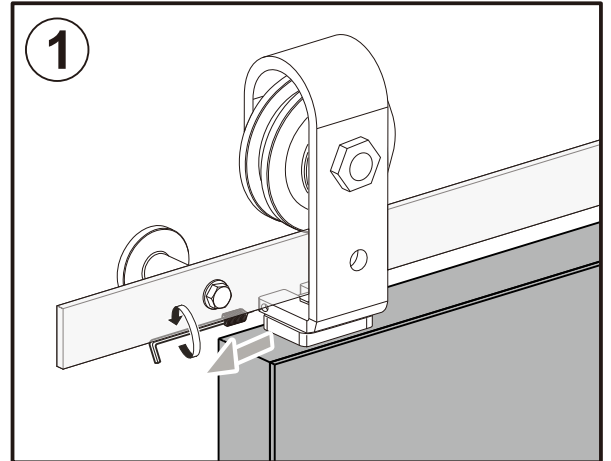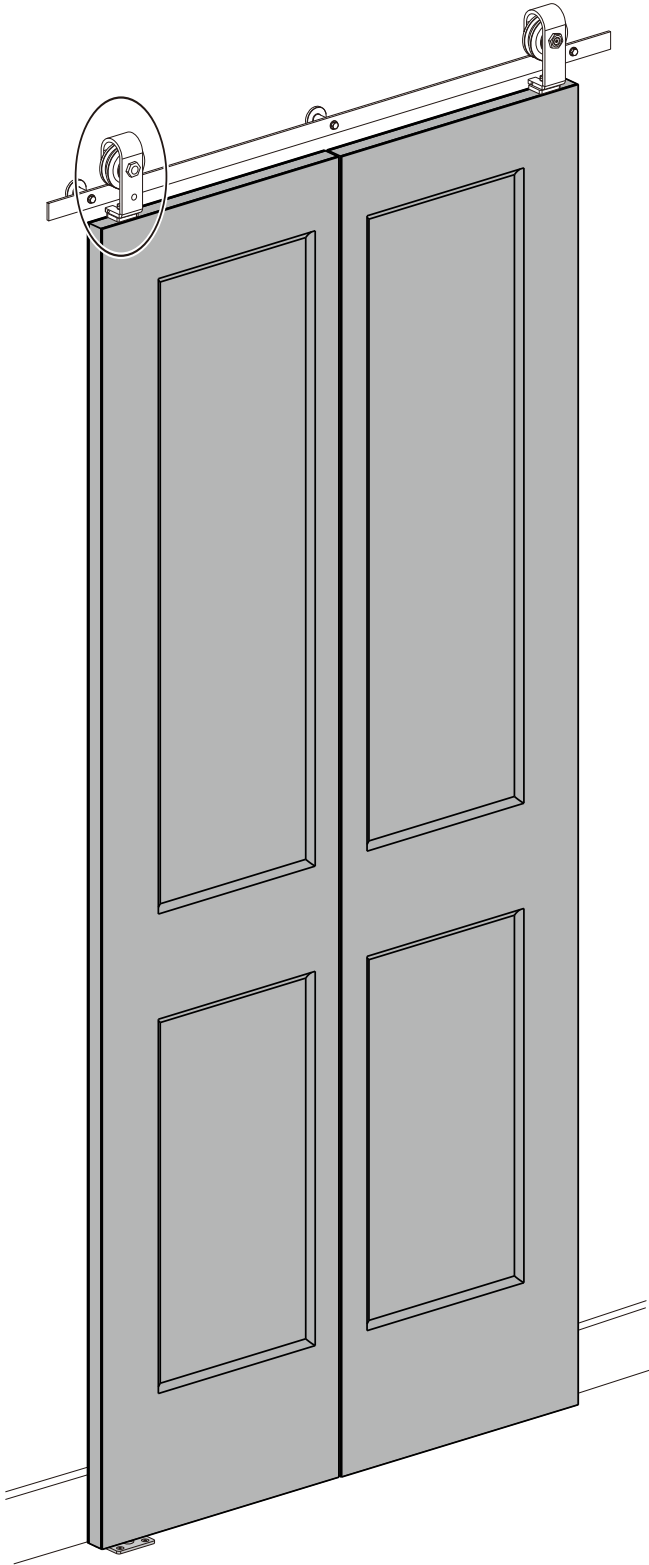

Step 7. Install hanger roller 2

Using a wrench to adjust the height of the hanger roller to a suitable position, and tighten it.

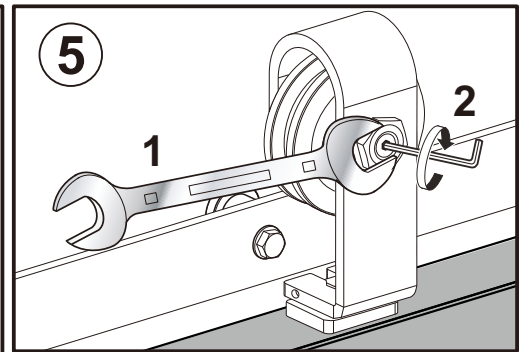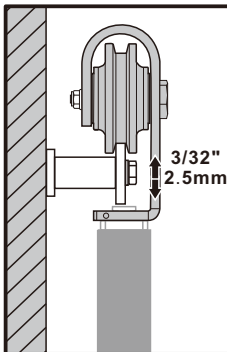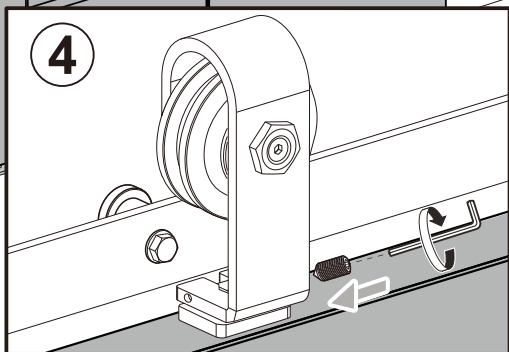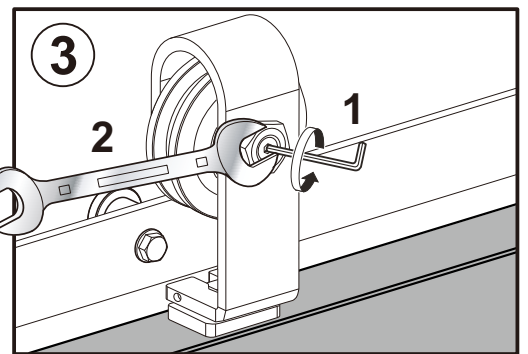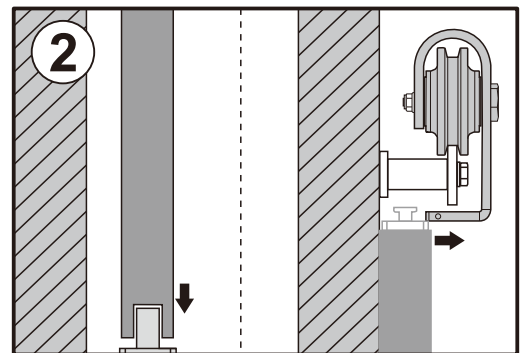
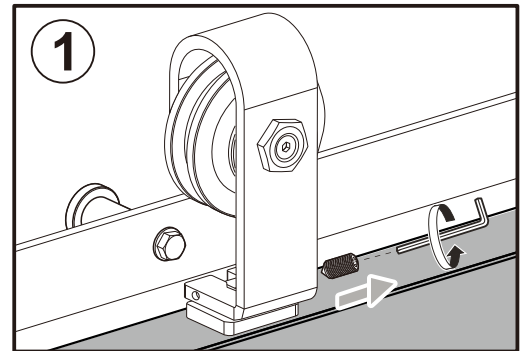
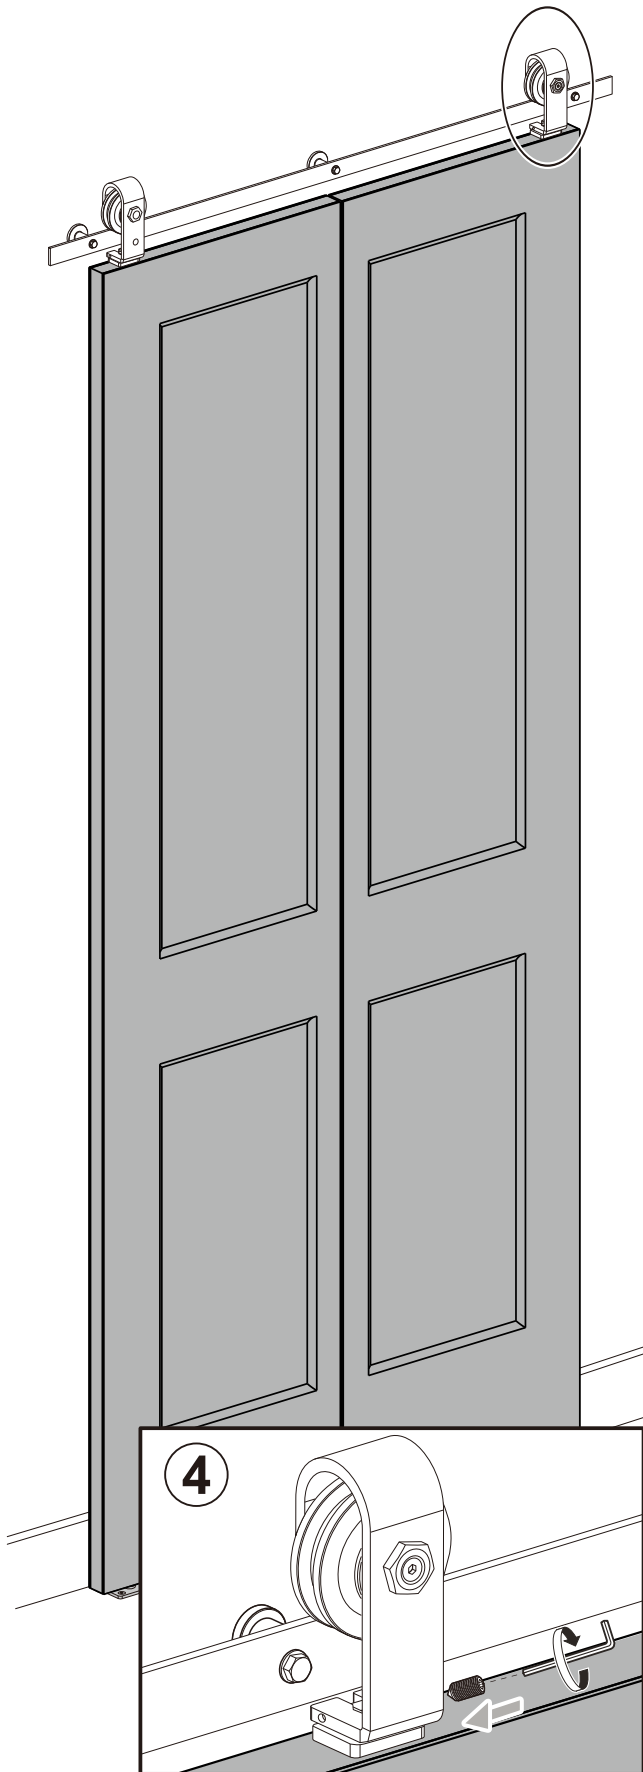


Step 8. Install the fixed connector

Align the hole of the connecting piece with the lower hole of the hanger roller plate.

Using a wrench to pass through the hanger roller plate and the connecting piece.

Tighten the other two holes of the connector with a screw. Then install the nut with the wrench.

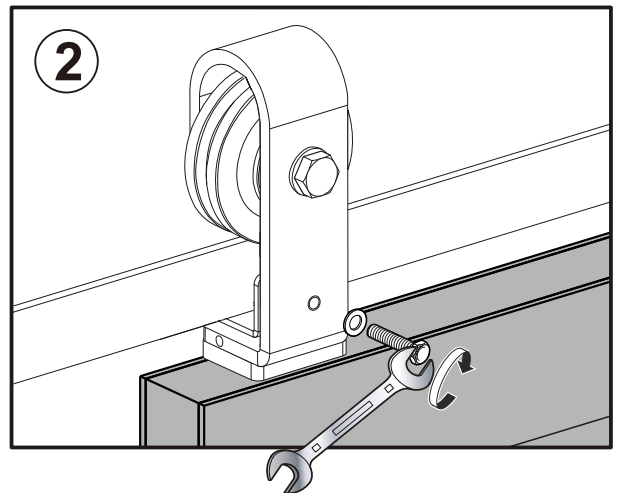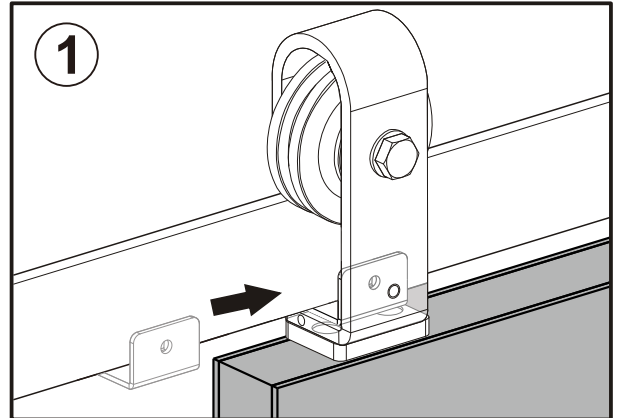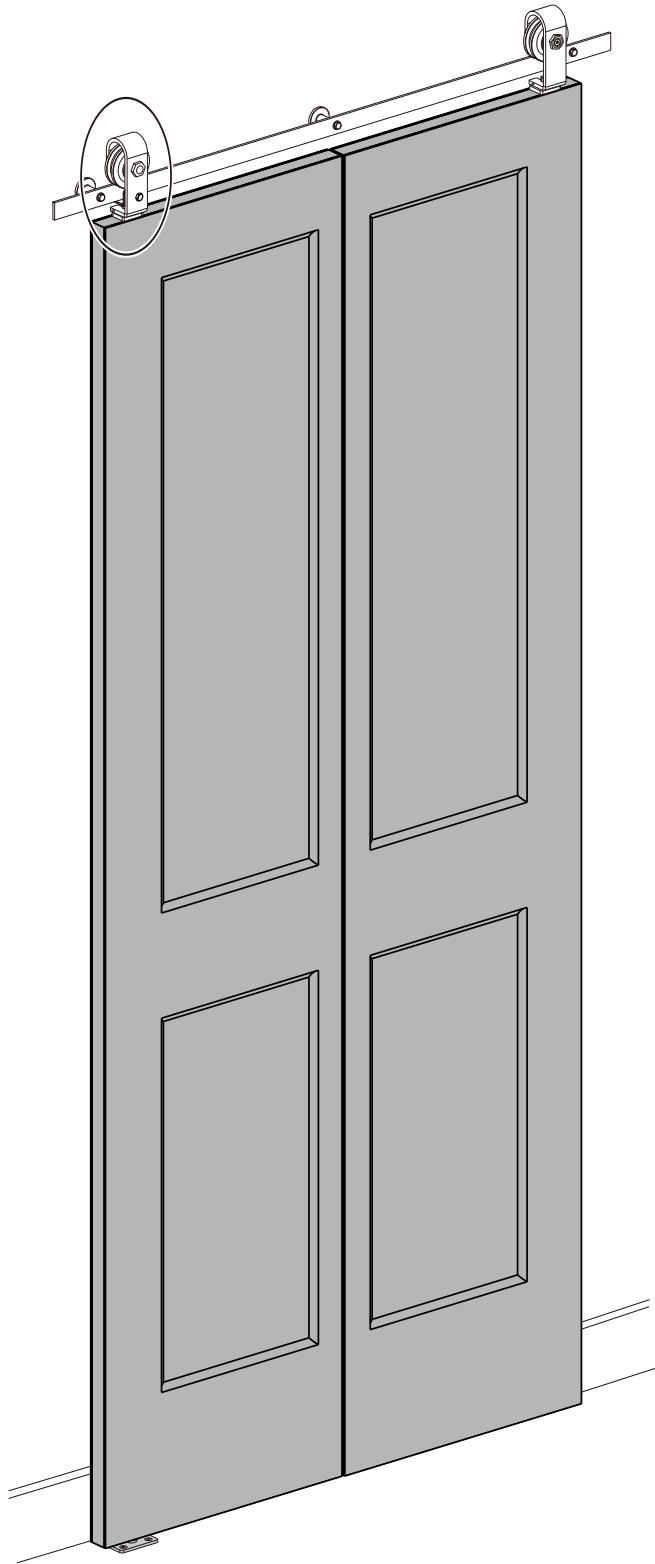

Step9.Handle Installation

Install the handle on the door with screws as shown in the picture.

