


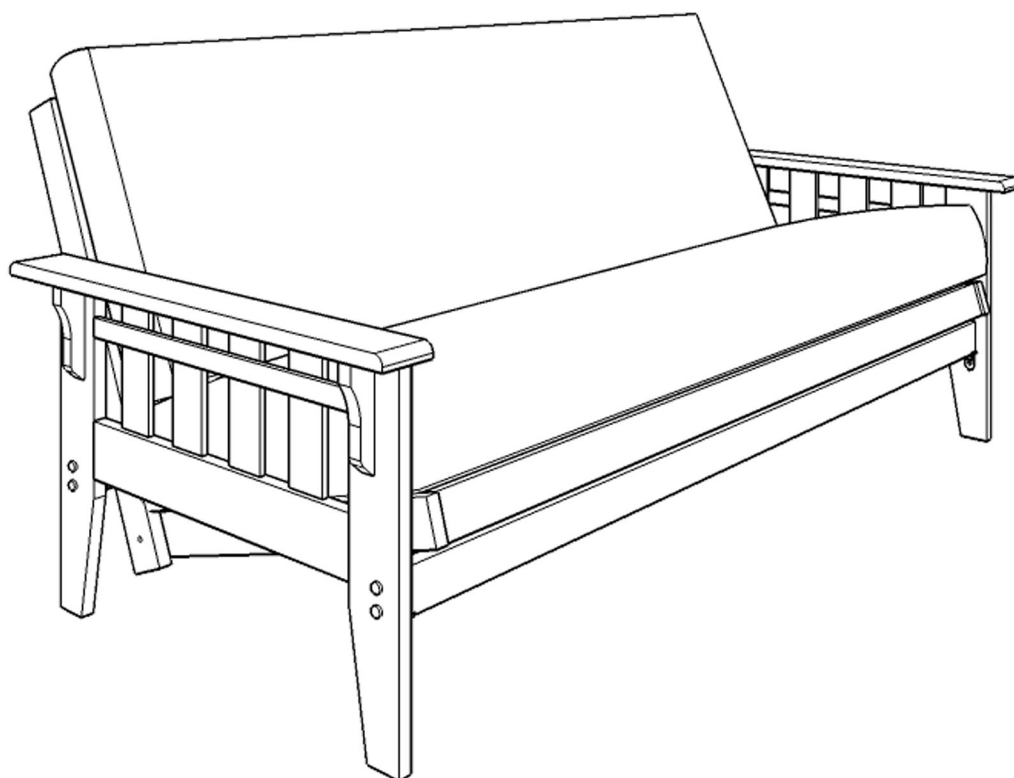


Assembly Instructions

Frame



Required:

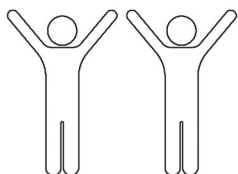

Tools Needed:




Allen Key provided

Please cover floor with corrugated cardboard / paper / carpet
to avoid scratches / damages to floor




Assembly Instructions

Body

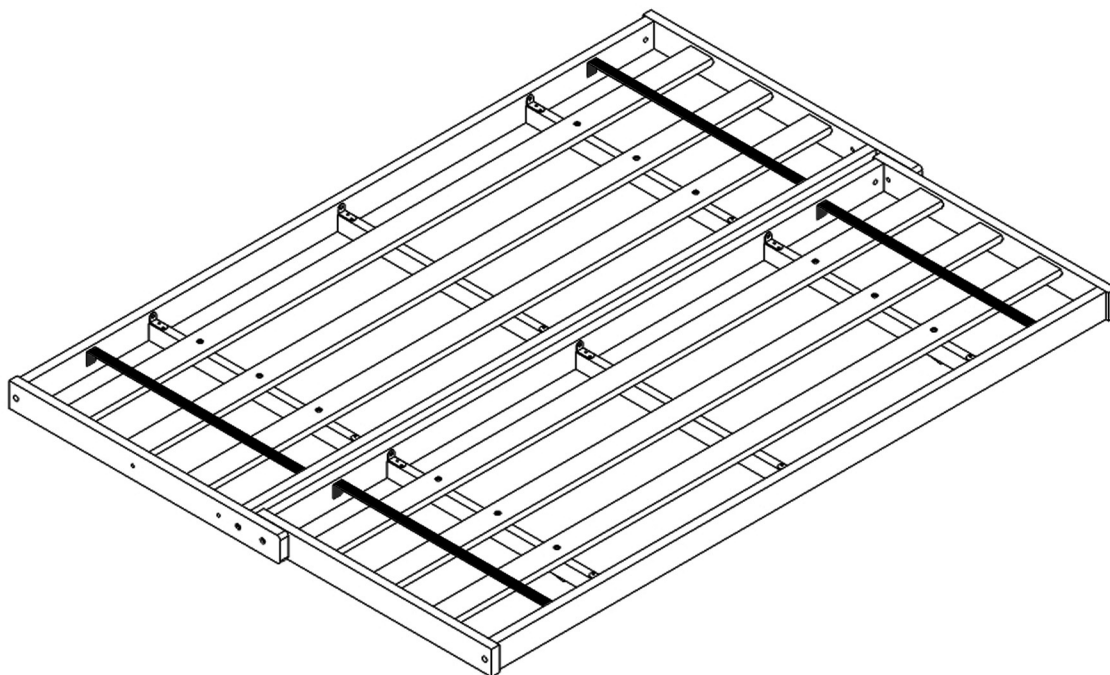

Recommended:

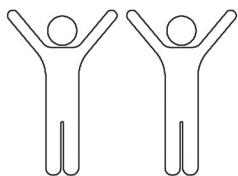

Tools Needed:



Allen Key provided

Please cover floor with corrugated cardboard / paper / carpet
to avoid scratches / damages to floor


Assembly Checklist

Please make sure that you have all of the below items before you start. If any are missing, please contact us for a replacement.




Parts supplied for assembly

Box A

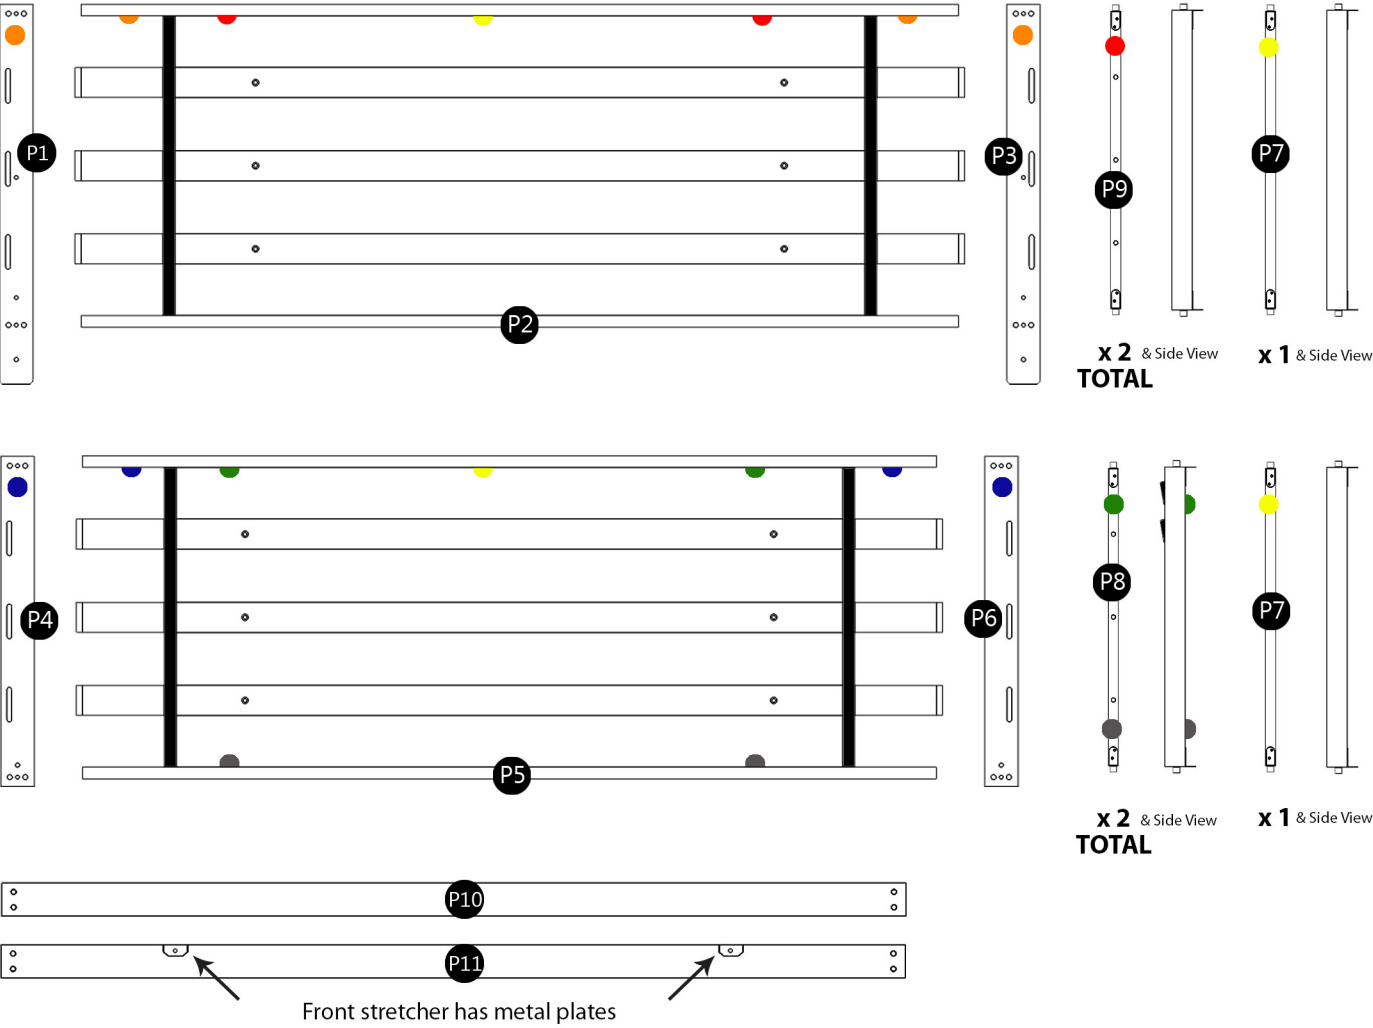



Hardware supplied for assembly

Tools required for assembly:
- Allen Key (supplied)

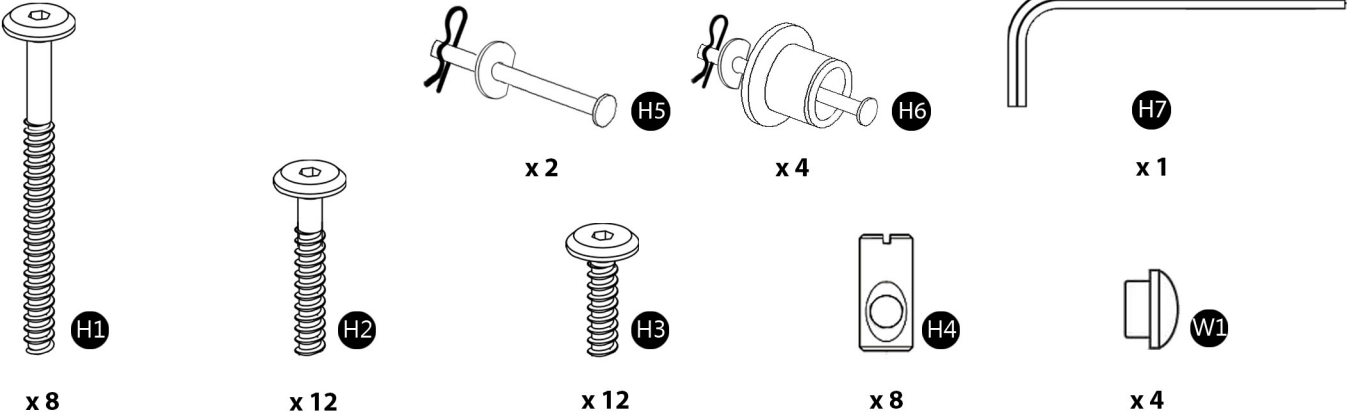


Step 1: Locate parts P2, P9(2), & P7


Use colored dots to align parts for connection.

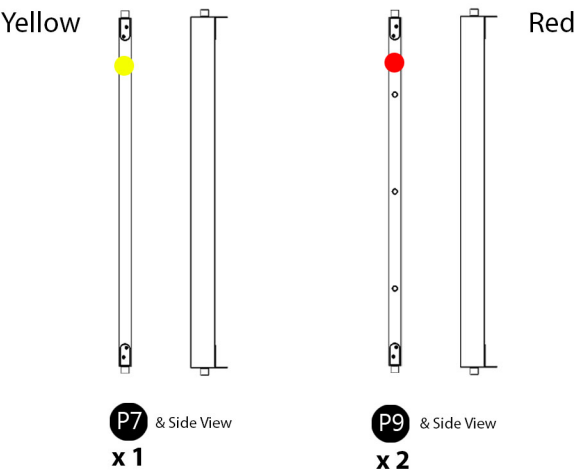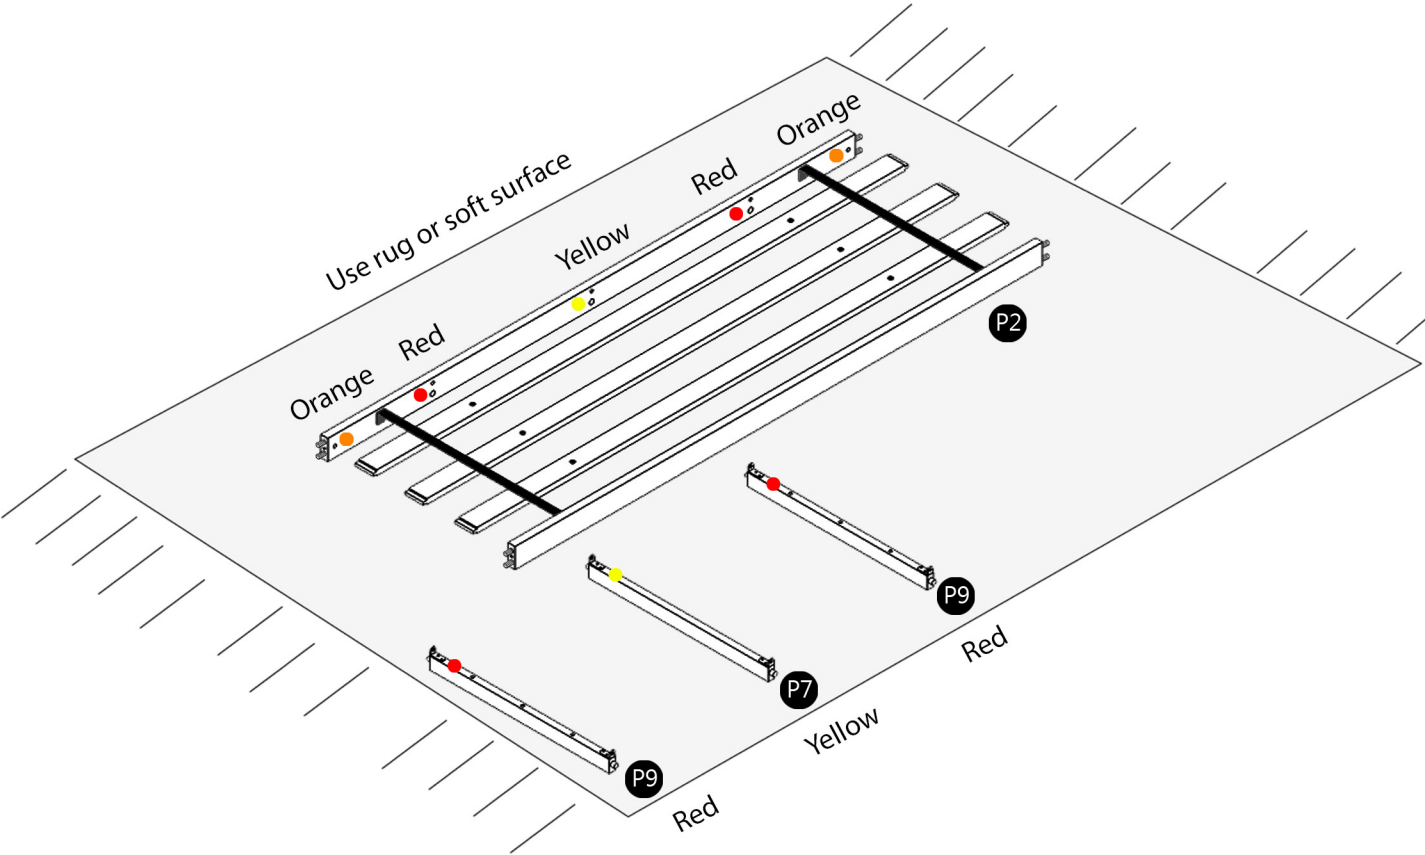



Step 2: Attach P7 and P9(2) to P2 with hardware as shown

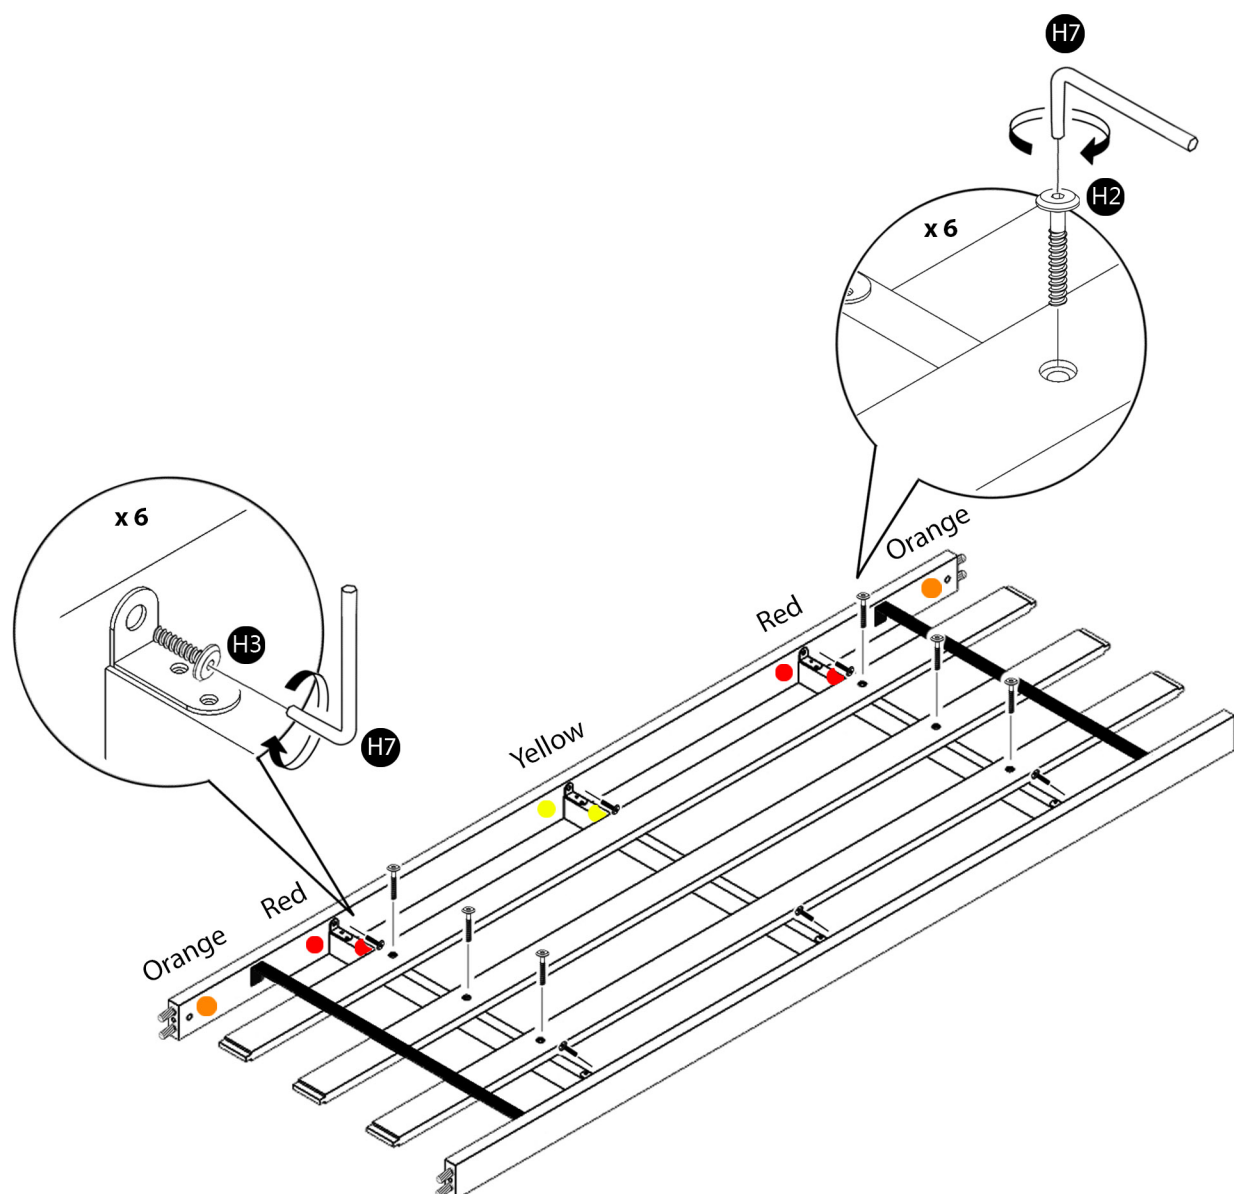

Loosely attach H2 and H3 bolts.

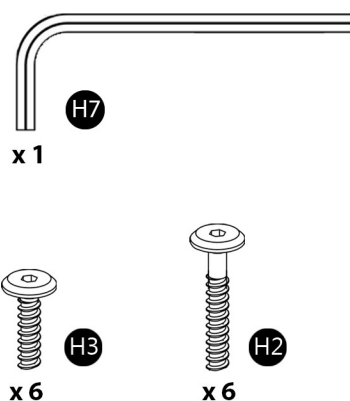


Step 3: Attach four nylon guides (H6) as shown

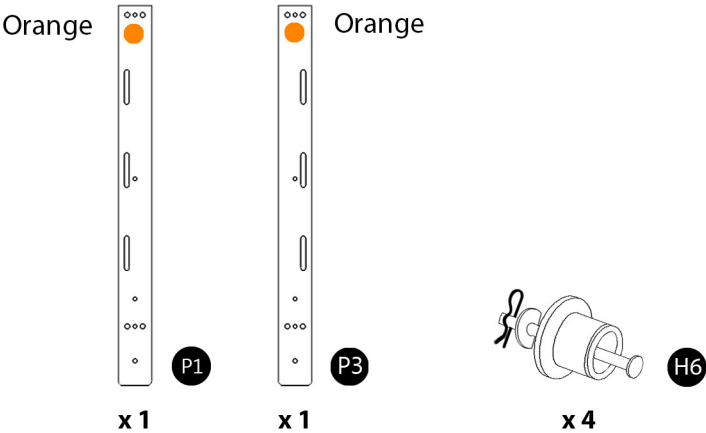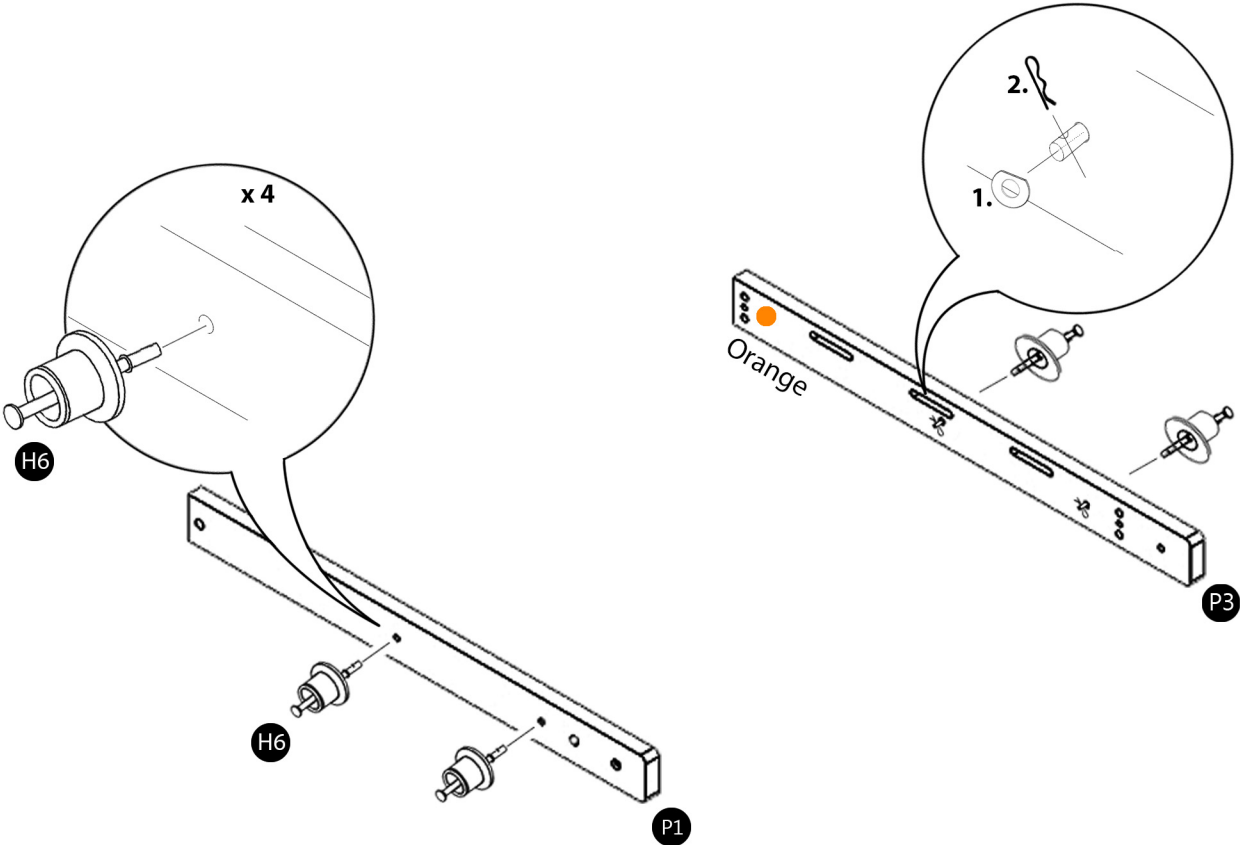


Step 4: Attach P1 & P3 to back deck P2

Use colored dots to align parts for connection.

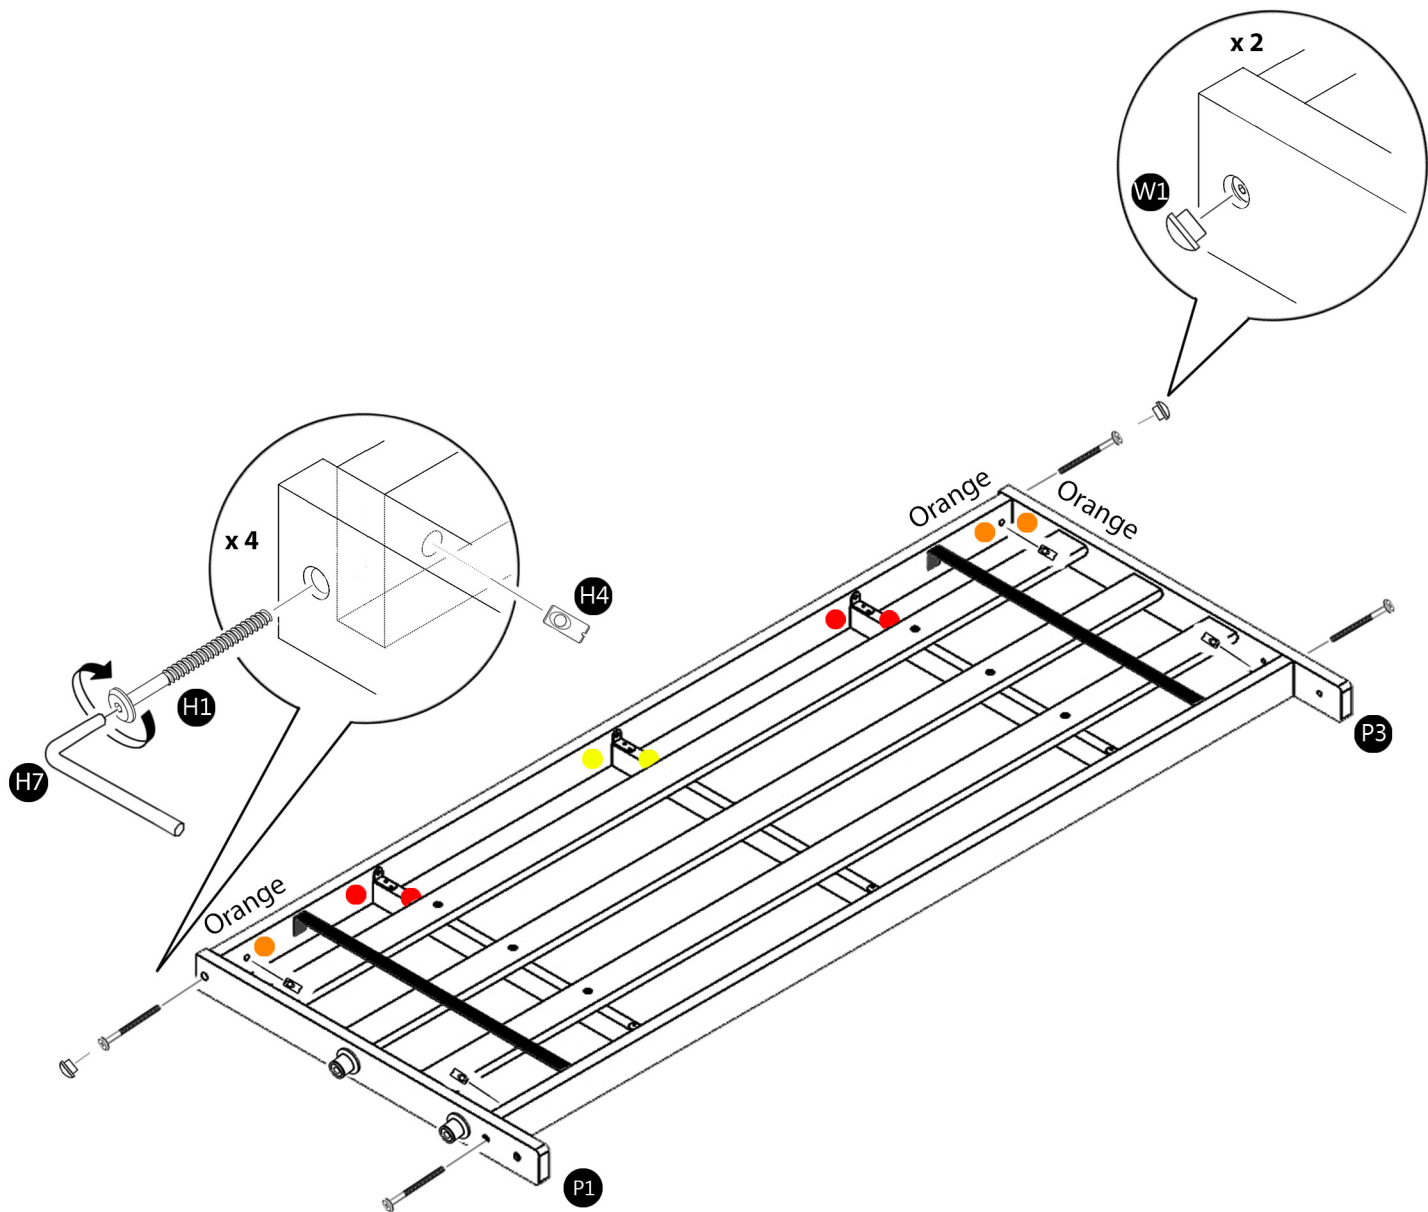


All bolts can be tightened at this point.



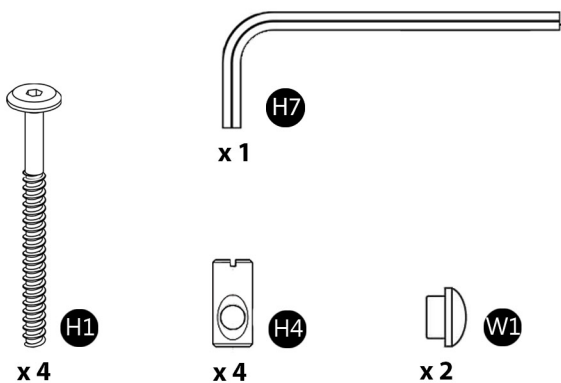


Queen Size Frames

If your frame is queen size, you will need to attach part P12(2)



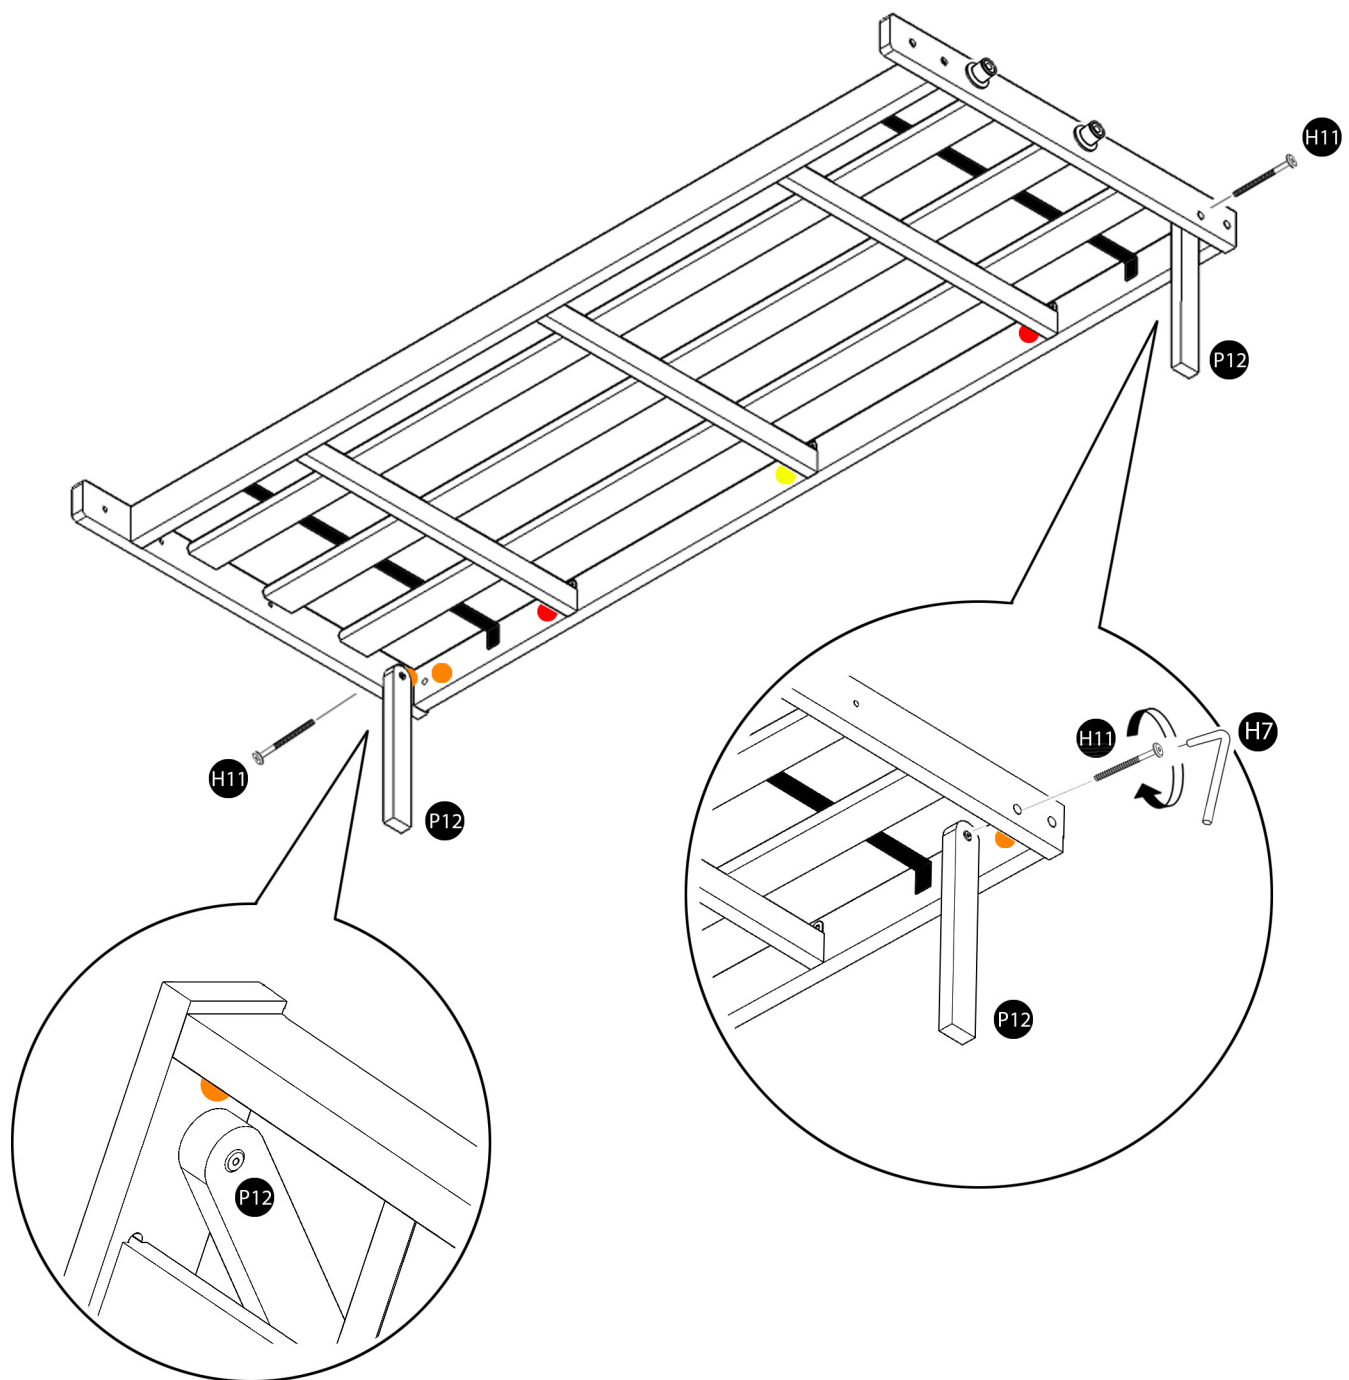


These parts are for a QUEEN SIZE FRAME ONLY

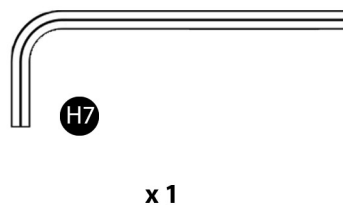


Step 5: Locate parts P5, P8(2), & P7


Use colored dots to align parts for connection.

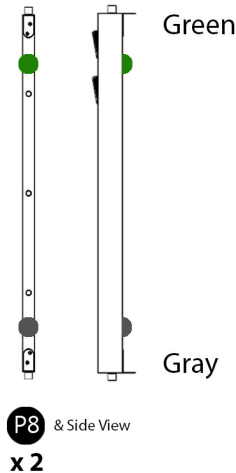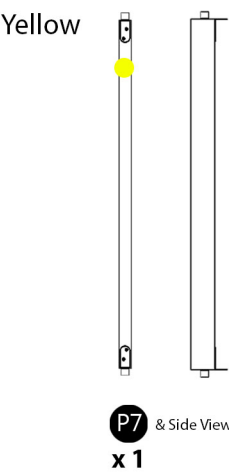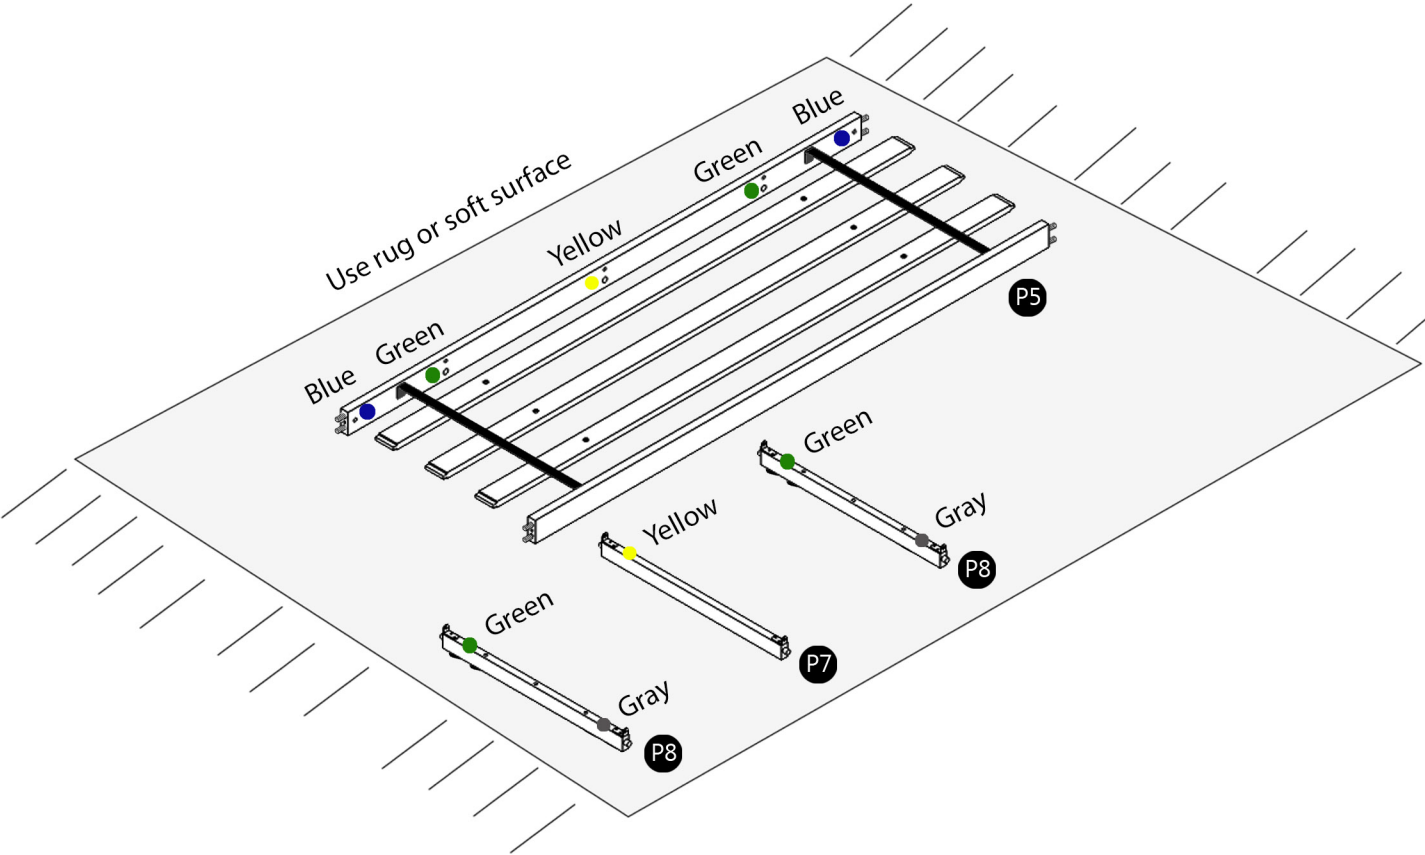


Step 6: Attach P7 and P8(2) to P5 with hardware as shown

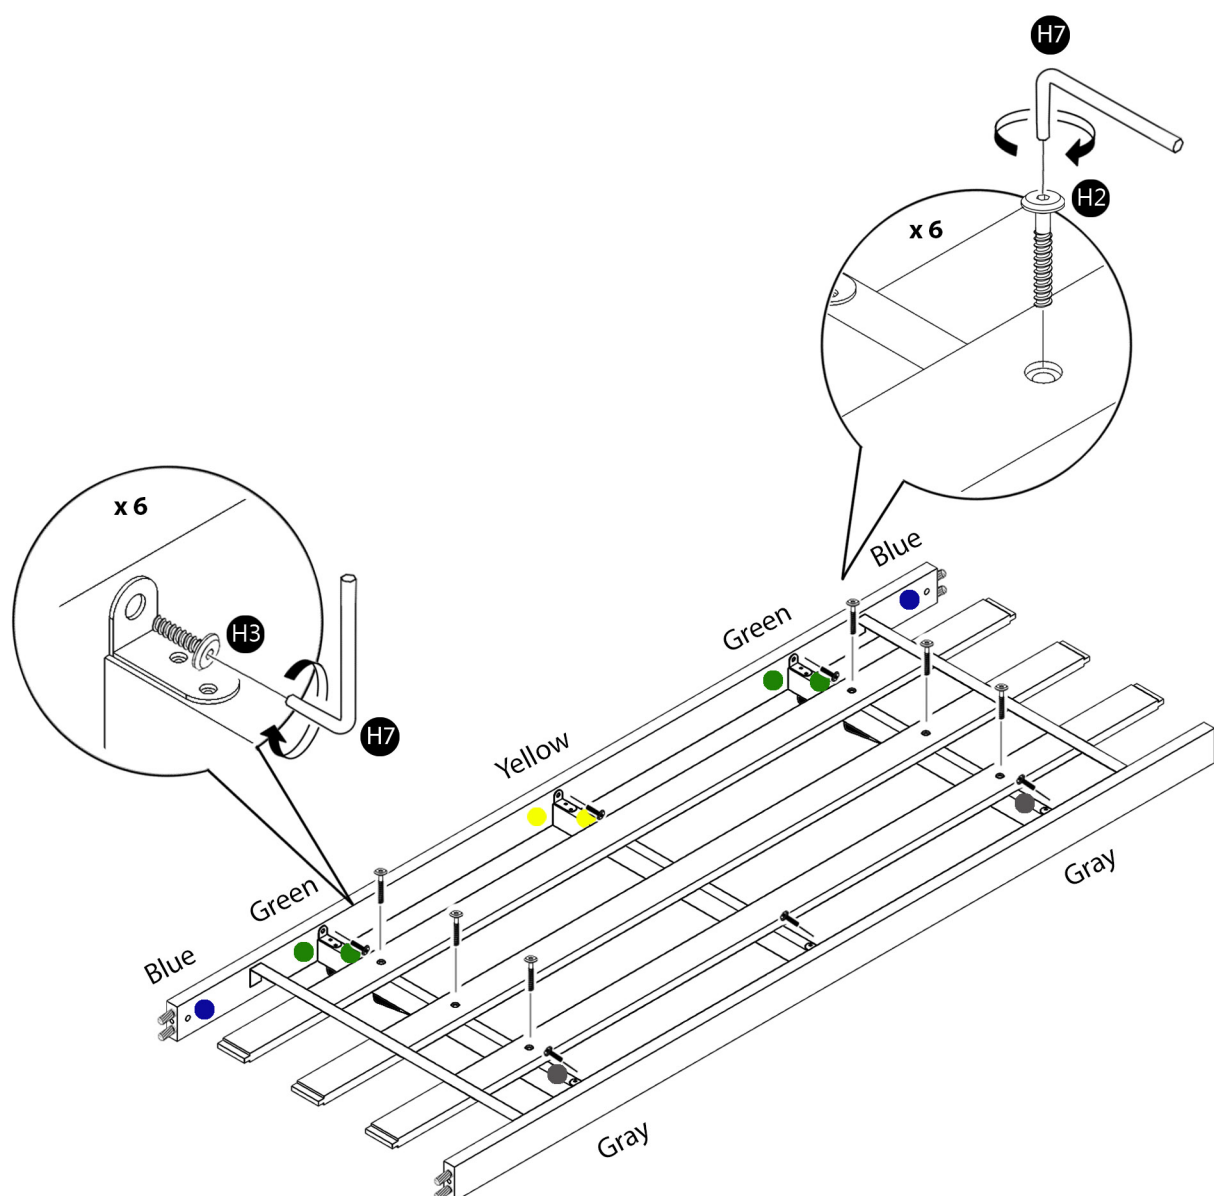



Loosely attach H2 and H3 bolts.

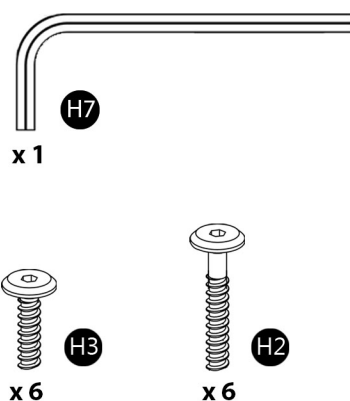

Use colored dots to align parts for connection.

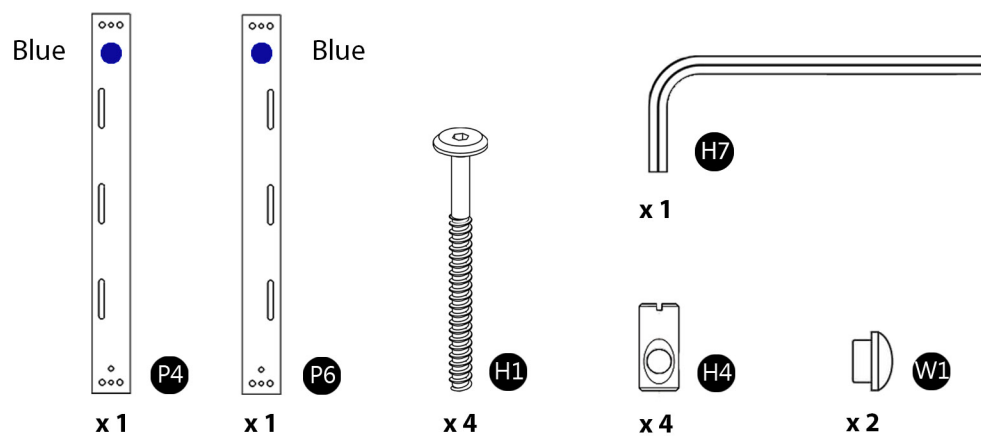

Step 8: Connect the fully assembled seat and back decks using hardware H5 (x2) as shown below

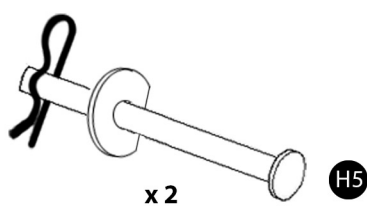
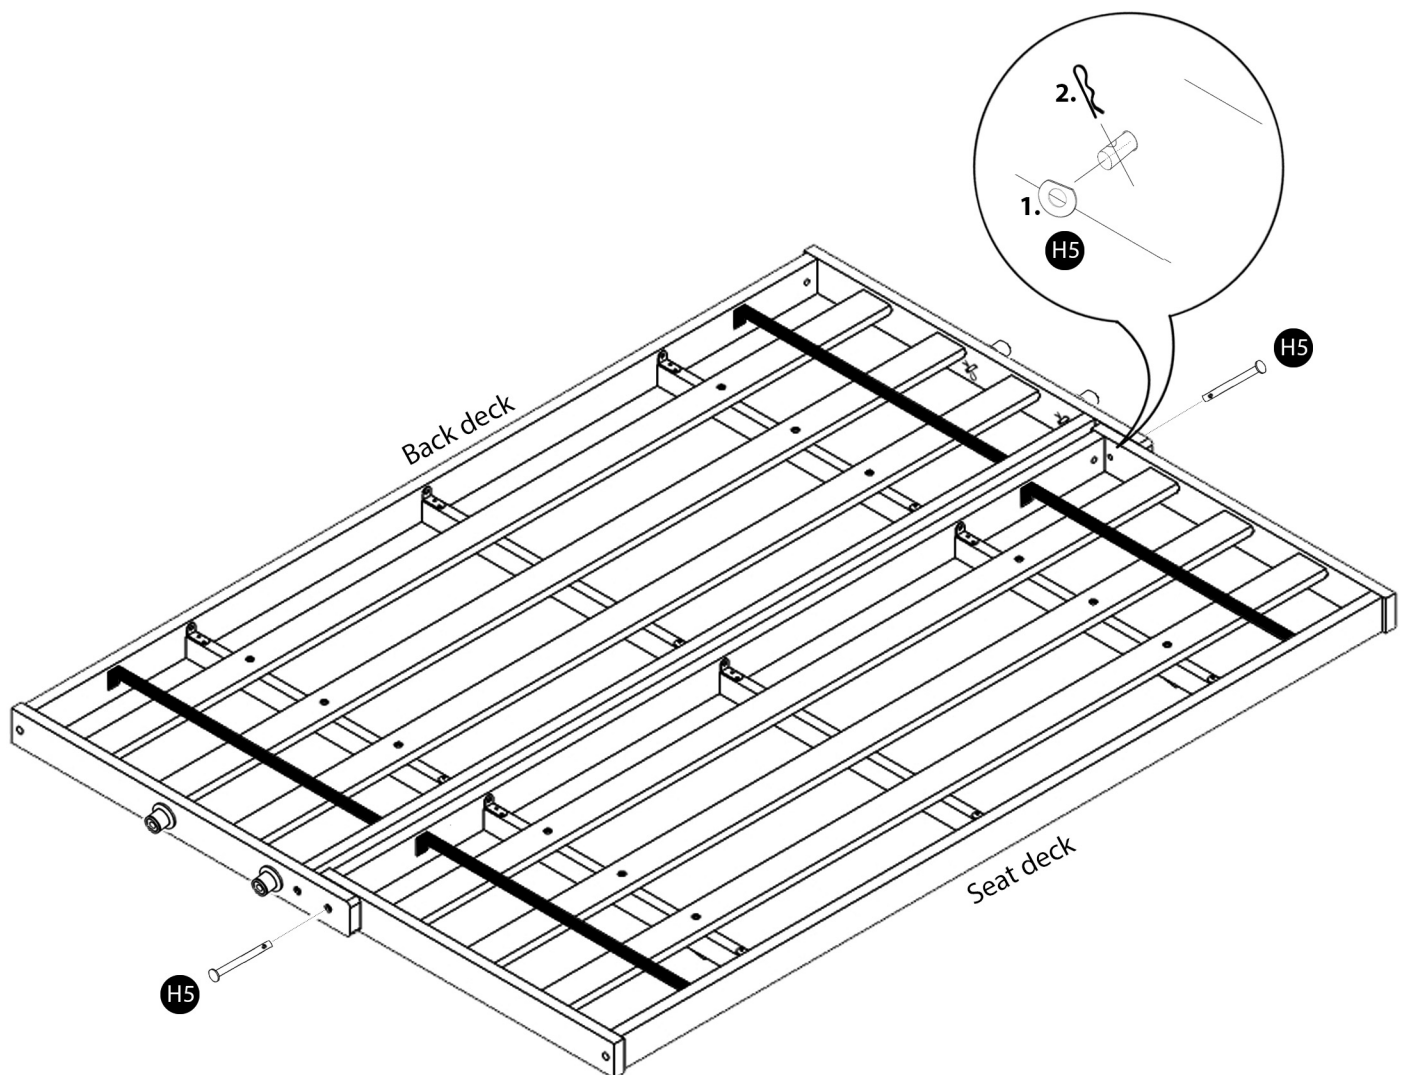


Assembly Checklist


Please make sure that you have all of the below items before you start. If any are missing, please contact us for a replacement.




arms

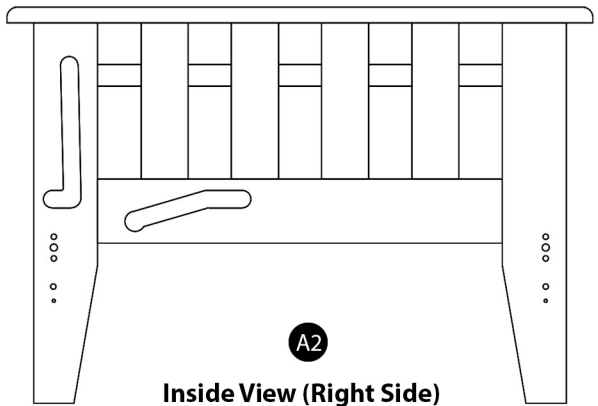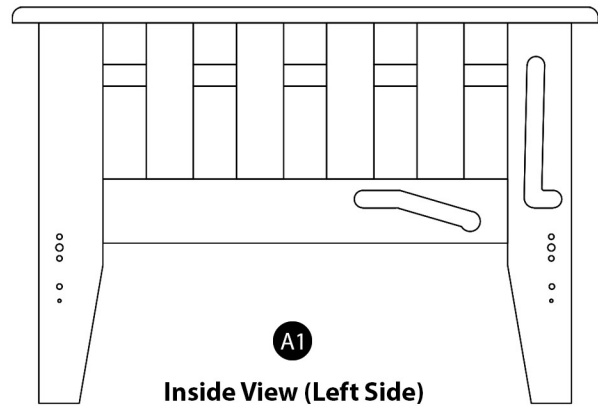


Hardware supplied for arm assembly

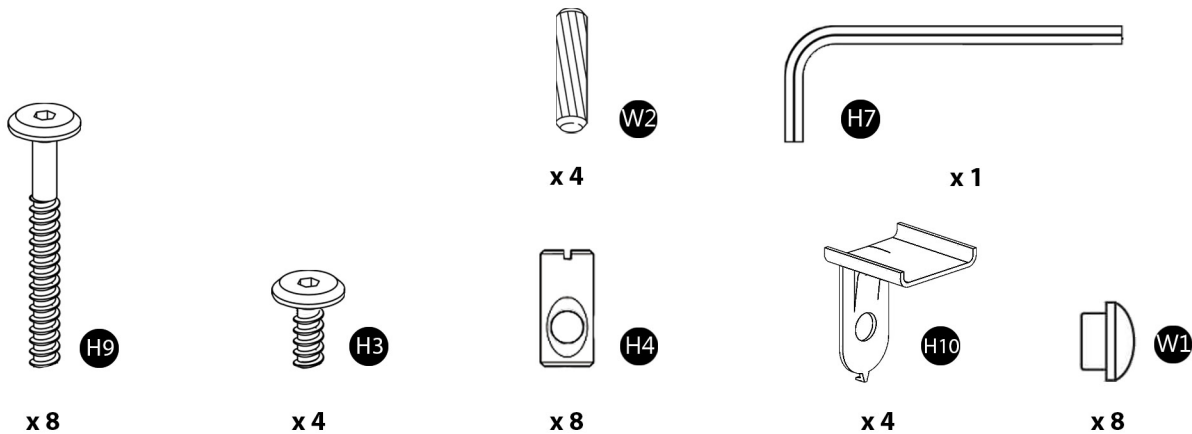



Step 9: Locate 4 legs, parts A1 & A2

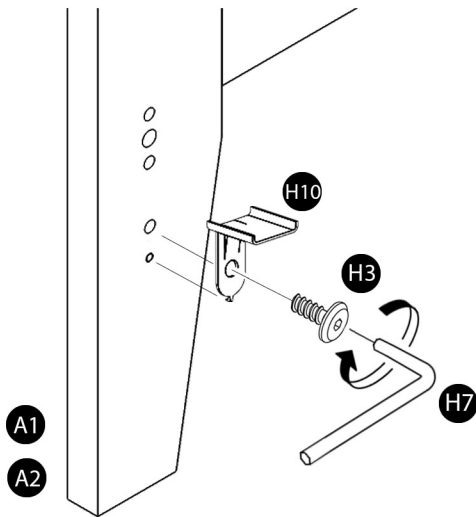

Do not tighten the bolts before finishing all steps.

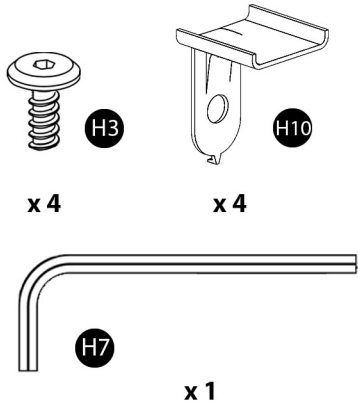


Step 10: Insert wood dowels (W2) into stretchers (P10) and (P11) as shown

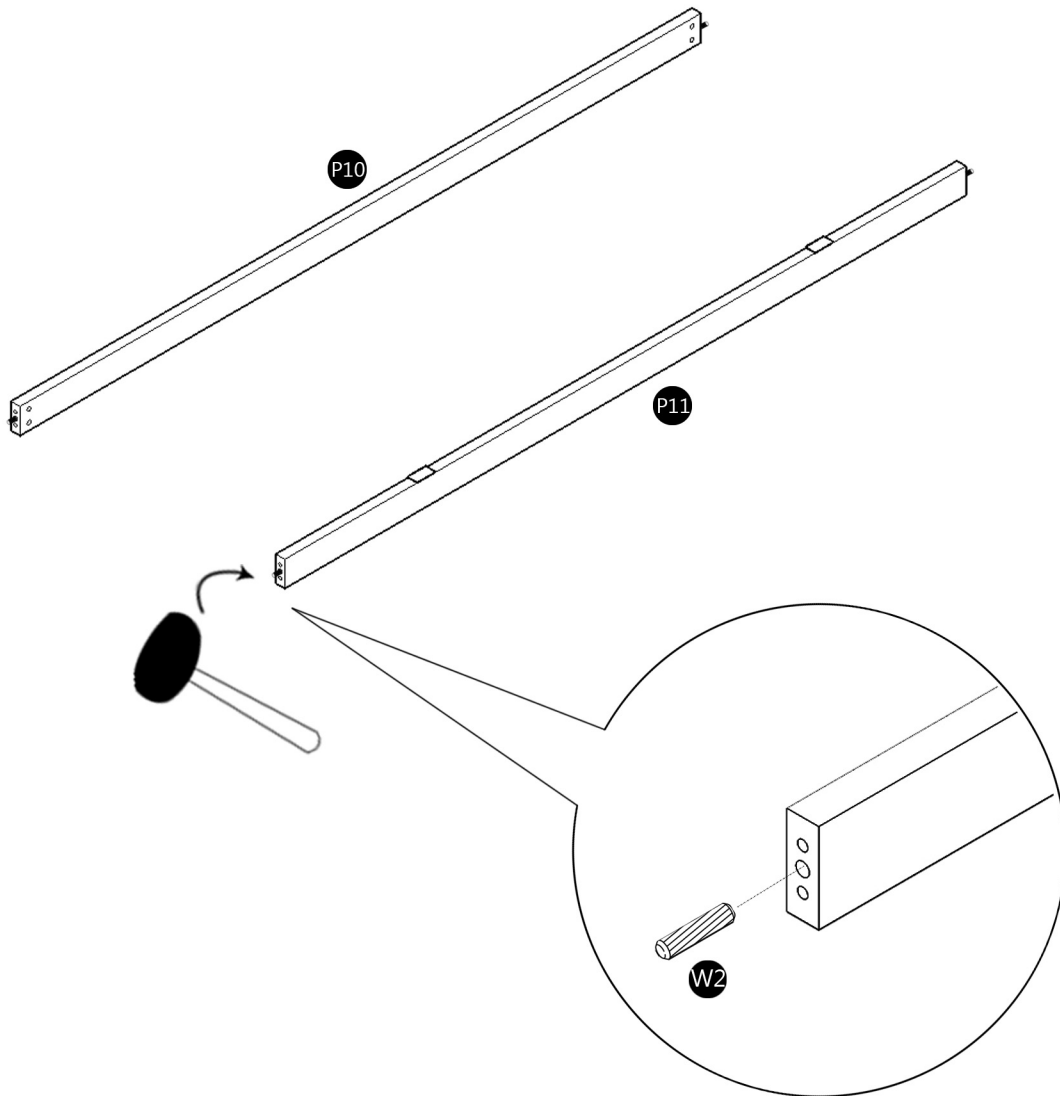


x 4

Step 11: Attach P10 & P11 to A1 & A2 with hardware as shown

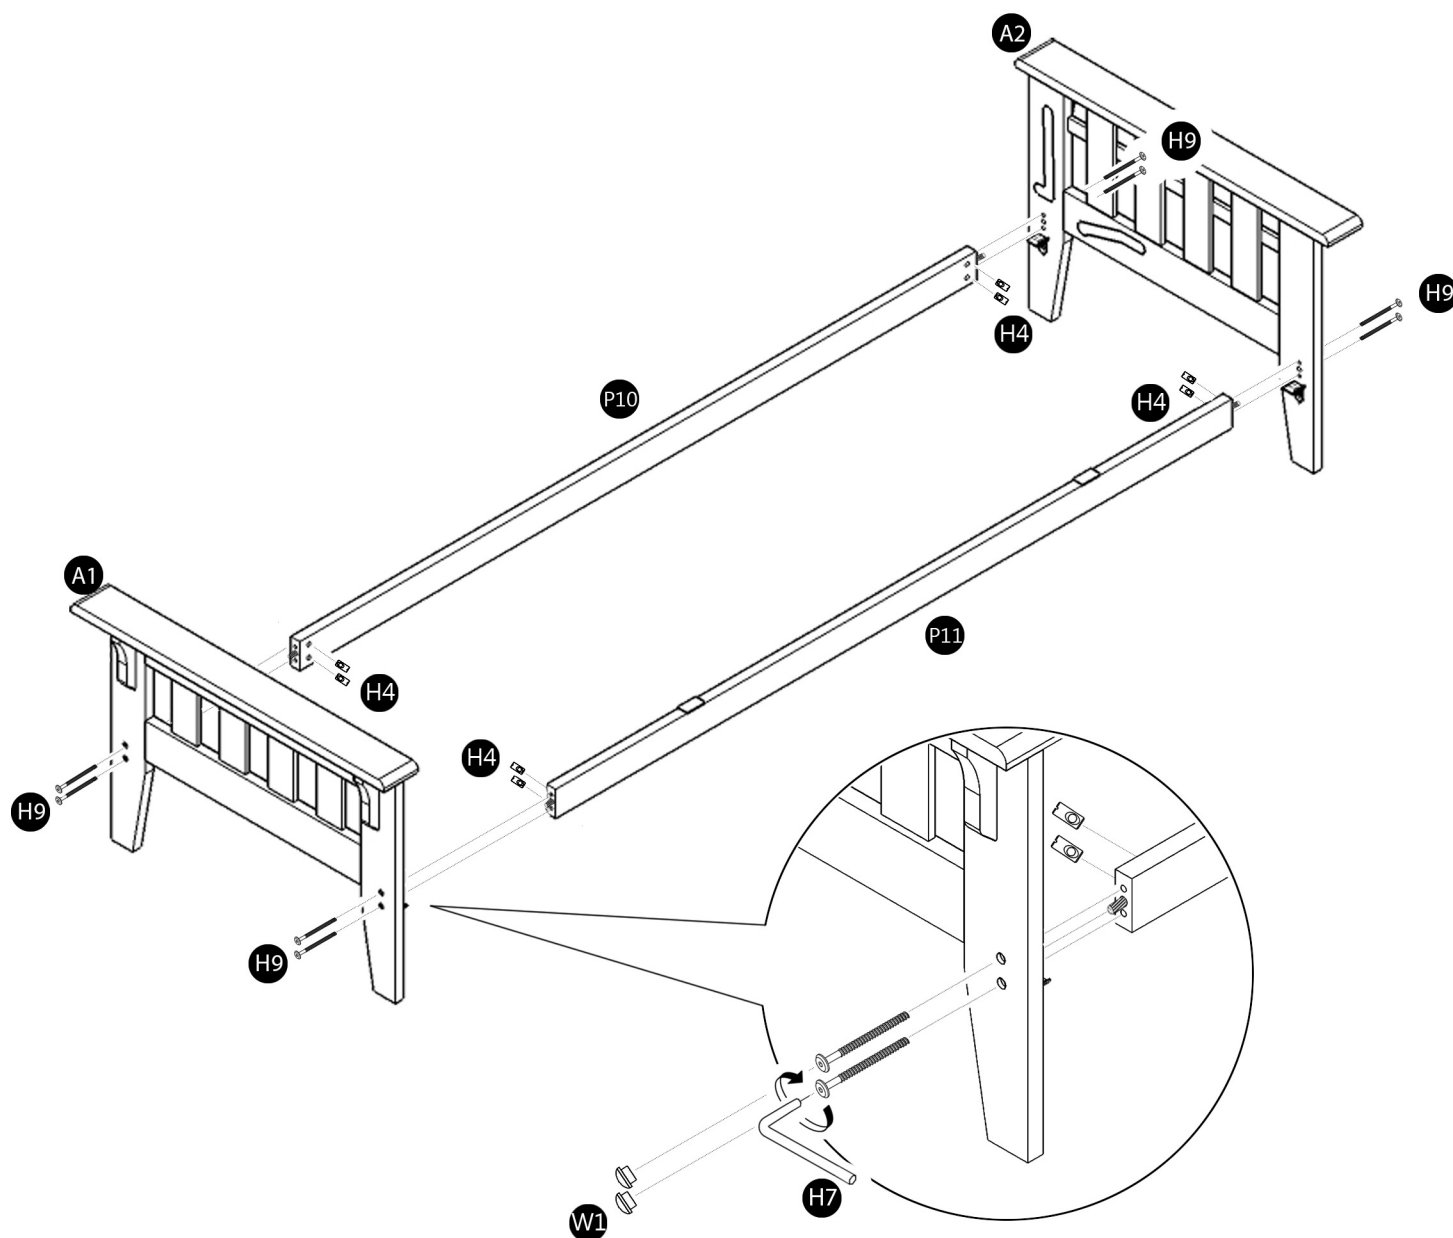

The bolts need to be very loosely attached at this point. Your arm may vary.



H9

x 8




H4

x 8



W1


x 8

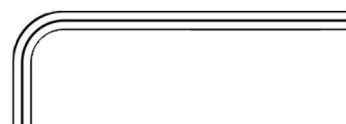


H7

x 1

Step 12: Align H6(4) into grooved out slots on A1 & A2.

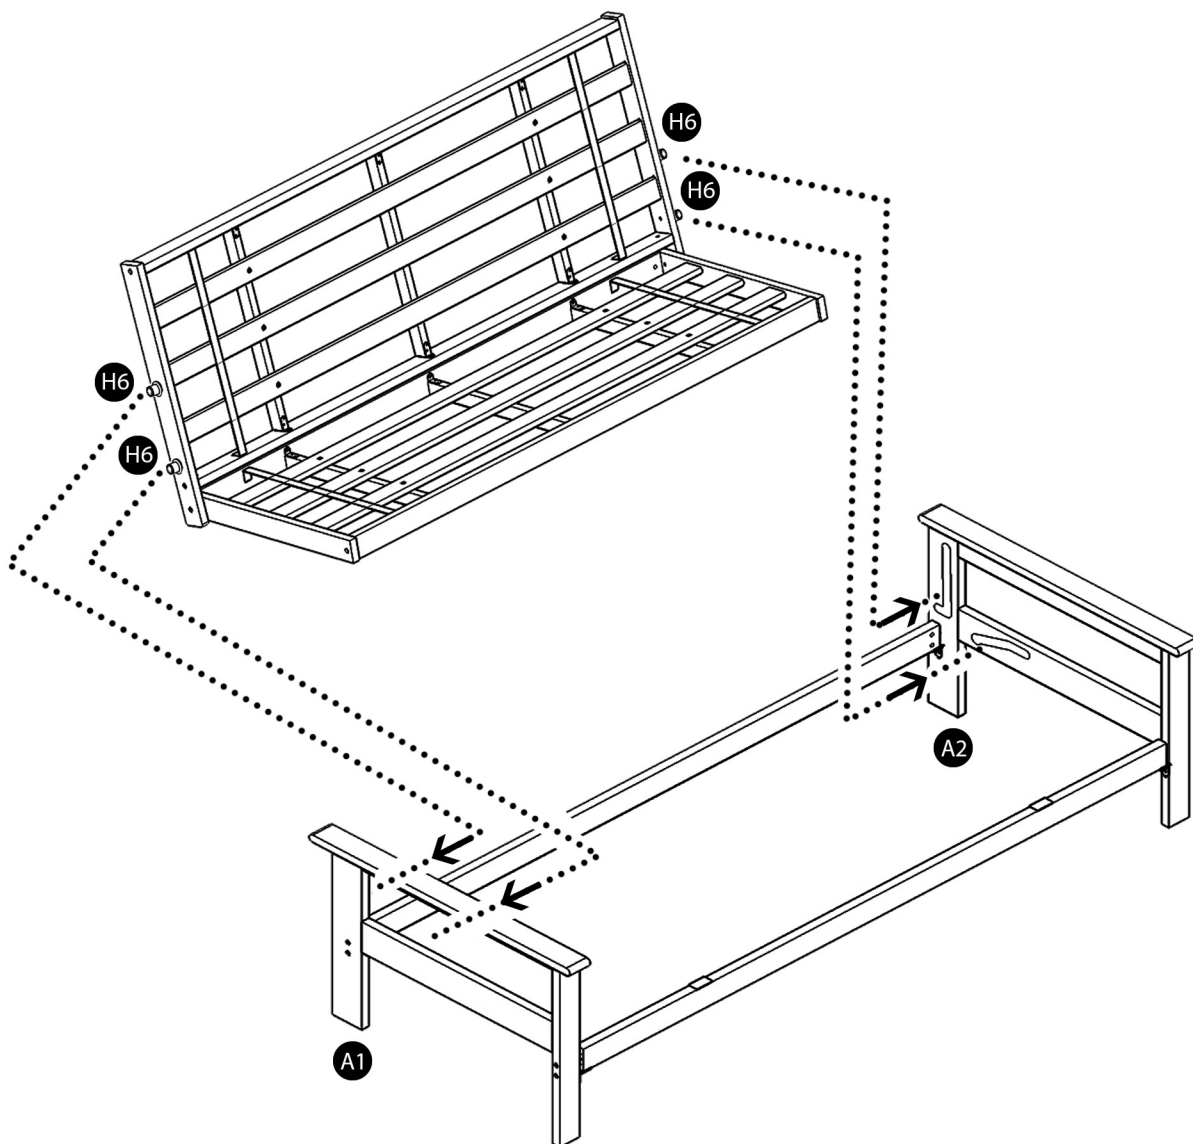


The bolts need to be very loosely attached at this point. Tighten all bolts after everything is in place.

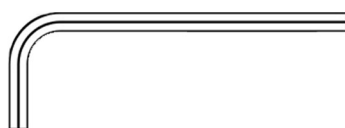


H7
x 1

Assembled views


Your arm may vary.

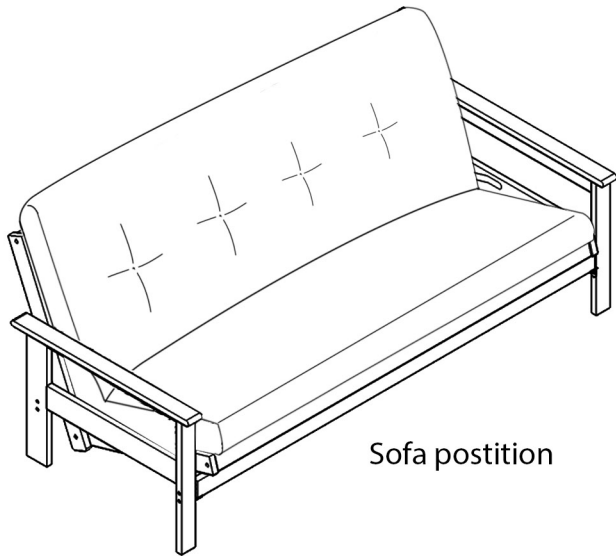


Sofa position

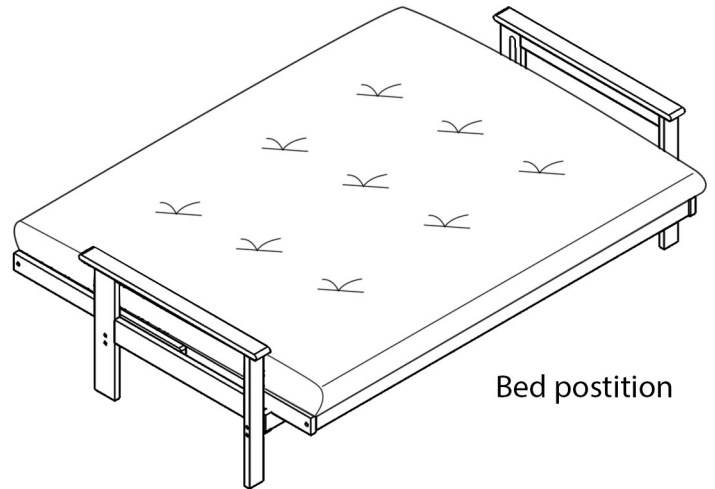

Bed position

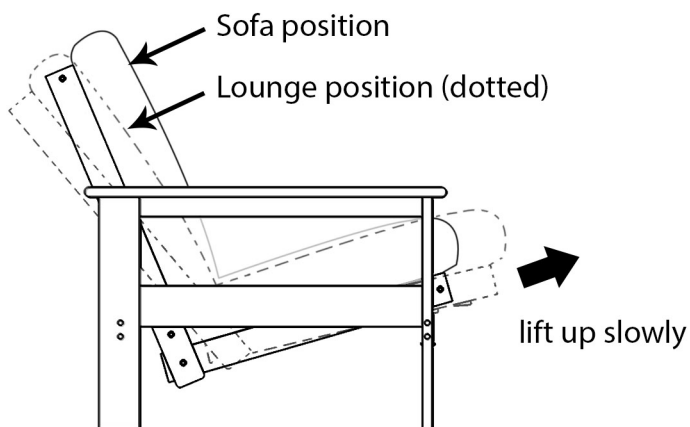

Sofa position to Lounge position.

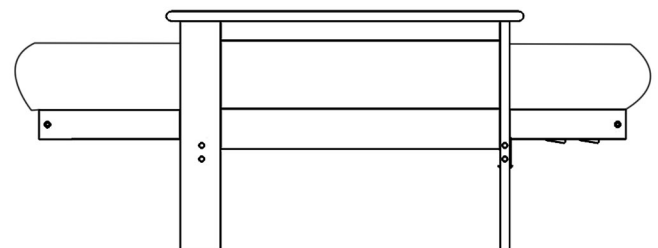

Bed position