



# PADDED & UPHOLSTERED HARDSIDE WATERBED FRAME

## ASSEMBLY INSTRUCTIONS



## Parts Included:

- 2 Black, Brown, or Ivory Upholstered **Side Rails** for the Waterbed Frame. Length: 86.5"
- 1 Black, Brown or Ivory Upholstered **Footboard** for the Waterbed Frame. Length Depends on Bed Size:
  - King: 78.25"
  - Queen: 66.25"
  - Super Single: 54.25"
- 1 Yellow or Blue Fabric Covered **Headboard 'Dummy'**. Length Depends on Bed Size:
  - King: 72"
  - Queen: 60"
  - Super Single: 48"
- 1 Black, Brown, or Ivory Upholstered **Headboard** *\*\*If Included (some models do not include a headboard)*
- 2 **Headboard Attachments Supports** with 8 **Large Screws** (#10 x 1 ¼")
- 1 Set of **Wood Decking**. Total pieces for decking depends on bed size:
  - King: 5 Pieces (15x87" each)
  - Queen: 4 Pieces (15.75x87" each)
  - Super Single: 3 Pieces (17x87" each)
- Parts for Black **Pedestal** (a detailed parts list for the pedestal is listed in the **Black Pedestal Assembly Instructions** manual)
- Pedestal Hardware Kit & Assembly Instructions
  - Hardware Included: 4 **Large Corner Brackets**, 28 **Small Screws** (#10 x ½"), and 1 Phillips Drill Bit
- Waterbed Frame Hardware Kit & Assembly Instructions
  - Hardware Included: 4 **Large Corner Brackets**, 4 **Small "L" Brackets**, 36 **Large Screws** (#10 x 1 ¼"), and 8 **Small Screws** (#10 x ½")
- **Waterbed Mattress**
- **Stand Up Safety Liner**
- **Hardside Waterbed Heater** with Controller & Manufacturer's Instructions
- **Fill & Drain Kit** with Waterbed Conditioner & Instructions

You will Need a **Power Drill** or **Phillips Screwdriver** for this Assembly.


Read the instructions in full before starting. We also recommend watching our FULL ASSEMBLY DEMONSTRATION Video on YouTube:

**"Strobel Padded Waterbed Assembly"**

**<https://youtu.be/wdzT4SvRTLc>**

## Assembly Instructions:


1. Before you begin building your waterbed frame, assemble the **Pedestal** and **Deck**. Refer to the separate instructions included: “**Black Pedestal Assembly Instructions**” These instructions can be located inside the small hardware box labeled “Pedestal”
2. Once your **Pedestal** and **Deck** are fully assembled, start building your frame by placing one **Side Rail** on its side and ensure the black, brown, or ivory upholstered side is facing the outside. Stand the yellow or blue fabric covered **Headboard ‘Dummy’** on its side and line it up with the INSIDE edge of the **Side Rail**. Screw the **Large Corner Bracket** into the inside corner of these 2 pieces using the **Large Screws** to secure them together.
3. Stand the other **Side Rail** up on its side and ensure the black, brown, or ivory upholstered side is facing the outside. Line up the **Side Rail** to the other end of the **Headboard ‘Dummy’**. The side that is fully covered with Yellow or Blue fabric should be facing the outside. Screw the **Large Corner Bracket** into

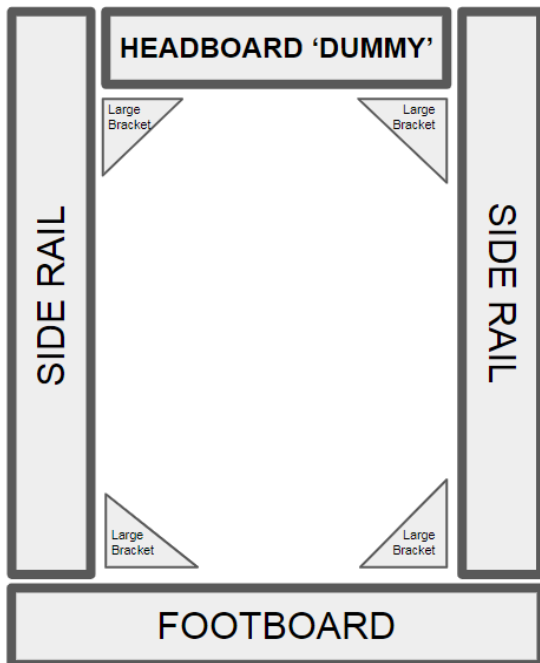


the corner of the 2 **Side Rails** using the **Long Screws** to secure them together

4. Stand the **Footboard** up on its side and place at the bottom of the two **Side Rails**, ensuring the **Footboard** is on the OUTSIDE edge of the **Side Rails** as shown in the reference image above.
5. Connect the **Footboard** to both **Side Rails** using the **Large Corner Brackets** and the **Long Screws** to secure them together.

THE HEADBOARD DUMMY SHOULD BE INSIDE  
THE TWO SIDE RAILS AND THE FOOTBOARD  
SHOULD BE OUTSIDE THE TWO SIDE RAILS:

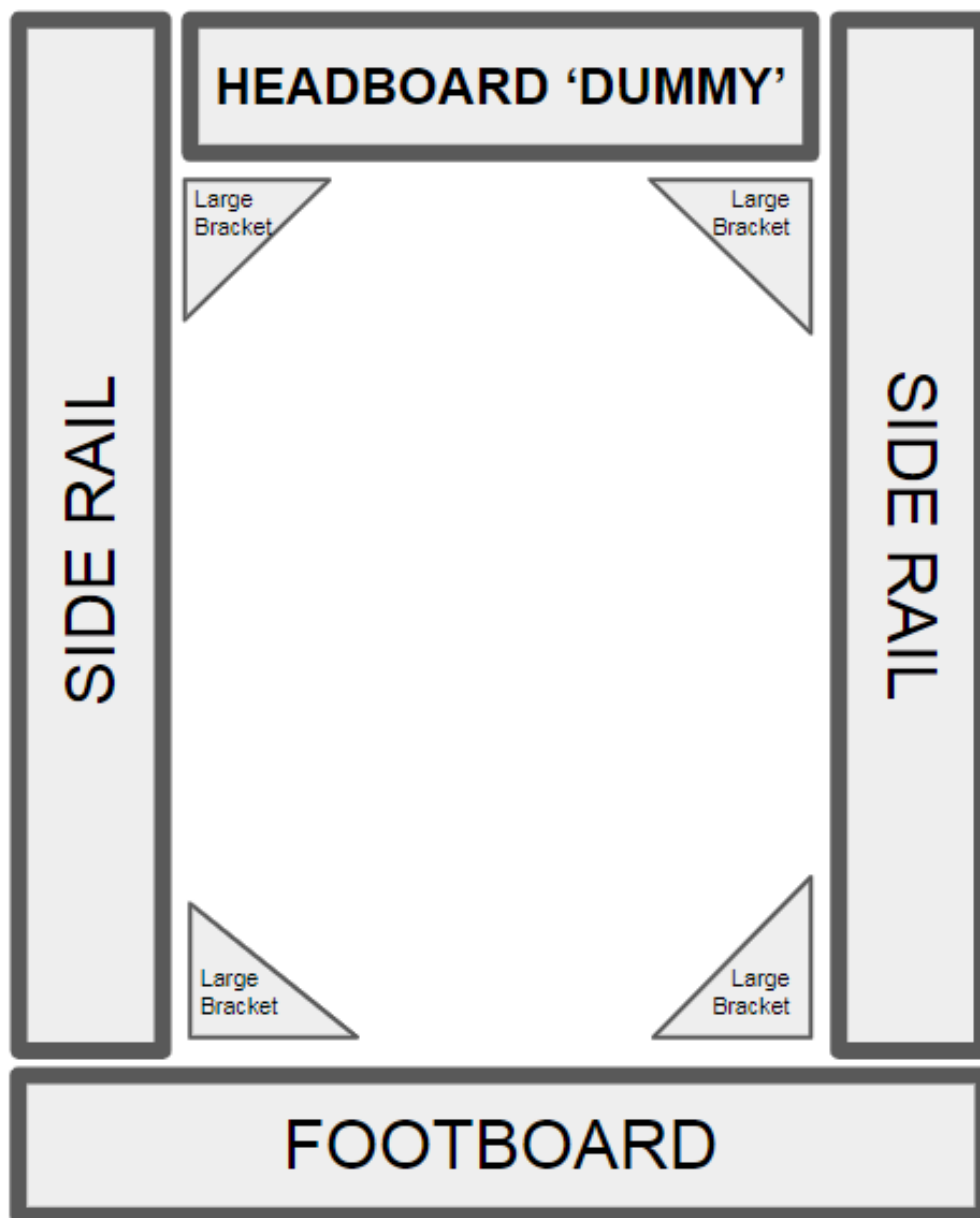

6. Secure the **Side Rails**, **Headboard 'Dummy'**, and **Footboard** to the **Wood Decking** (on top of the **Pedestal**) using the **Small "L" Brackets** and **Short Screws** to secure them together. The **Small "L" Brackets** should be placed in the center of each rail as shown in the reference image below..

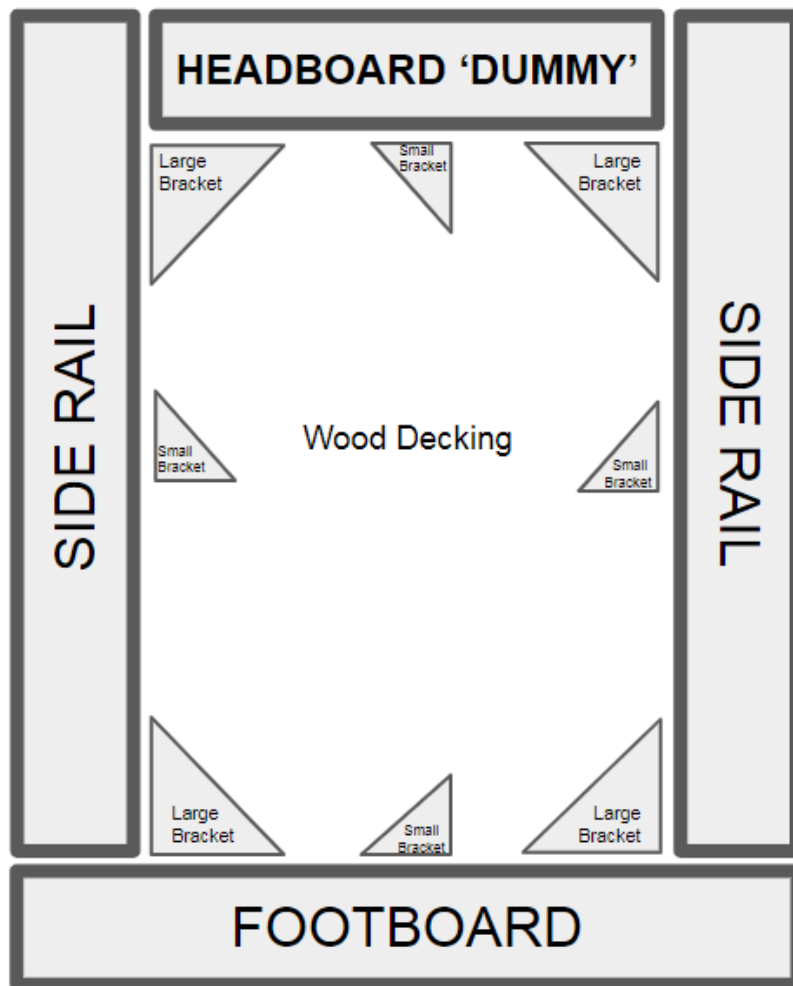

7. If your purchase includes a **Headboard**, install the **Headboard** to the **Headboard 'Dummy'** using 2 **Headboard Attachment Supports** and 8 **Large Screws** to secure them together.

-Place the **Headboard** so that it is resting on top of the '**Headboard Dummy**', ensuring that the black, brown, or vinyl upholstered side is facing the front and that both sides of the **Headboard** are evenly lined up with the outside edges of the upholstered **Side Rails**.

-Place one wooden **Headboard Attachment Support** piece onto the back side of the **Headboard** about  $\frac{1}{3}$  away from the edge on the left side. The **Headboard Attachment Support** piece should be placed vertically so that half of it is on the **Headboard** and the other half is on the **Headboard 'Dummy'**. Screw 2 **Large Screws** into the top half of the **Headboard Attachment Support** so that it is secured into the **Headboard**. Then, screw 2 **Large Screws** into the bottom half of the **Headboard Attachment Support** so that it is secured into the **Headboard 'Dummy'**.

-Repeat on the other side, securing the other **Headboard Attachment Support** into the **Headboard** and **Headboard 'Dummy'** about  $\frac{1}{3}$  of the way from the edge on the right side using the remaining 4 **Large Screws**.



8. Install the **Hardside Waterbed Heater** per the manufacturer's instructions included.
9. Evenly place the **Stand Up Safety Liner** on top of the decking (inside the frame rails).
10. Install the **Waterbed Mattress** using the **Fill & Drain Kit** and instructions included.

11. Do not fill the **Waterbed Mattress** above the top of the bed frame.
12. Add Waterbed Conditioner.
13. Burp the Waterbed Bladder.
14. **Your Padded & Upholstered Hardside Waterbed Frame is Now Assembled!** Please note, Waveless Waterbed Mattresses that have the addition of internal fiber layers could take up to 4 weeks to reach its maximum level of wave reduction. Please allow time for the fiber to fully expand. Your water mattress can still be used during this time, but it may be wavier than expected at first.

**Thank you for your purchase!**



**If you have any questions regarding your purchase, please contact Strobel Technologies directly (not your retailer)**

**[LEADS@STROBEL.COM](mailto:LEADS@STROBEL.COM)**

**812-280-6000**