


Installation Manual

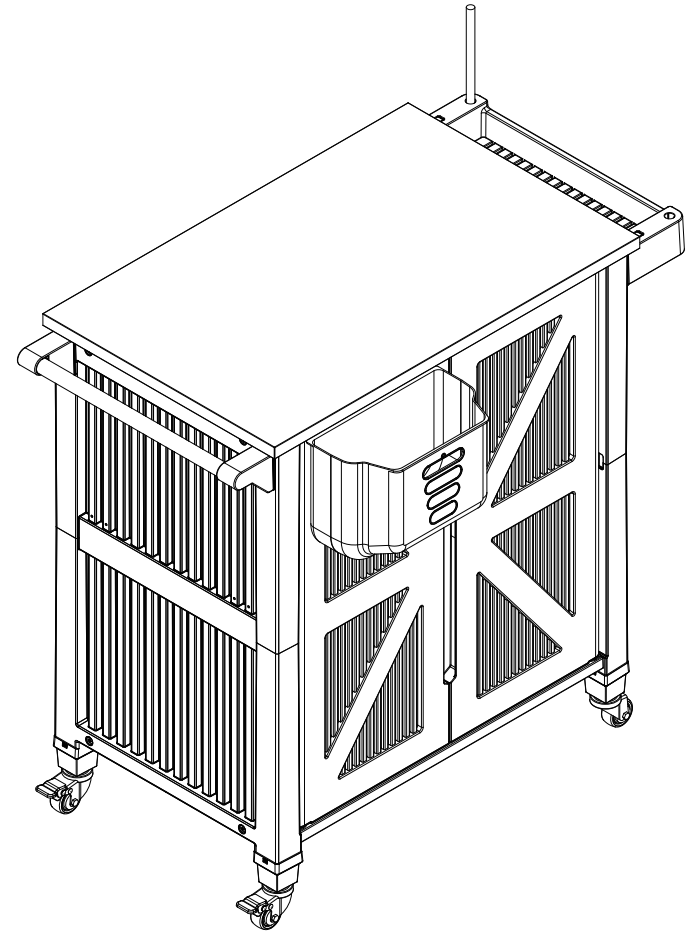


Outdoor Grill Cart


Thanks to choose our product. Missing parts, Quality, Installation Questions, please contact with us.

Part List


Note identification

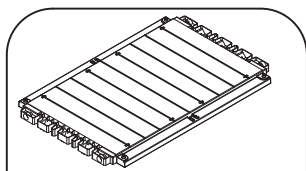


A x1

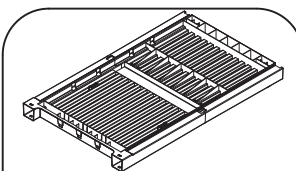


B x2

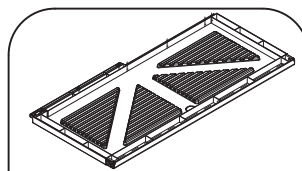


C x2

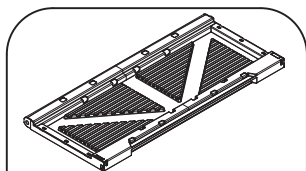


D x2

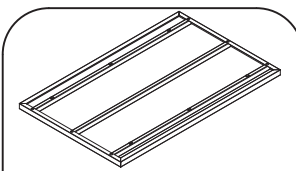


E x1

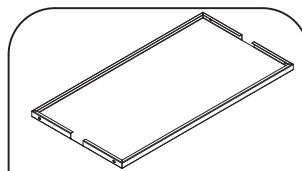


F x1

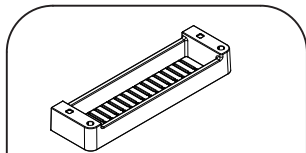

G x1

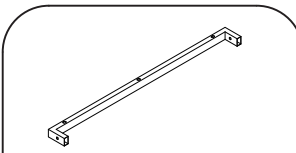


H x2

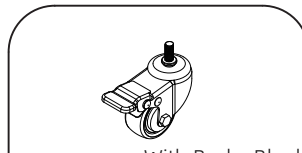


With Brake Block

I x2

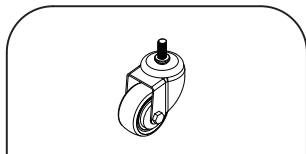


J x2

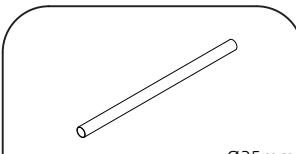


Ø25mm


K x1

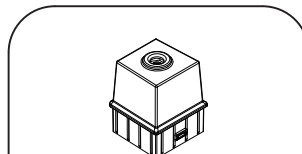


LA x4

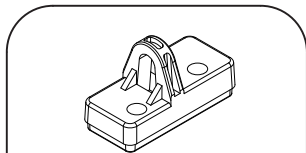

LB x1

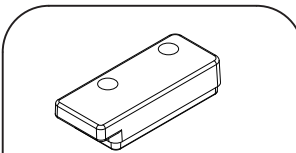


LC x1

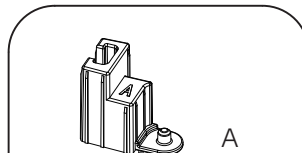


LD x2

Part List


Note identification

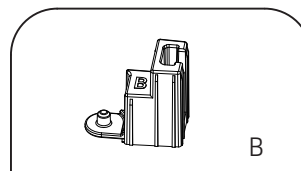


LE x2

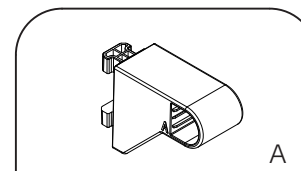


LF x1

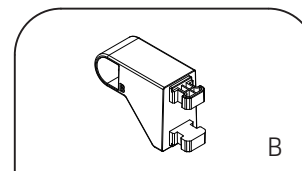

LG x1

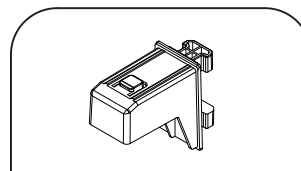


LH x2

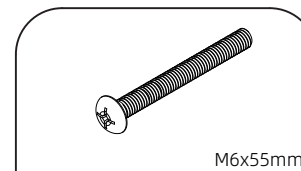


M6x55mm

MA x8

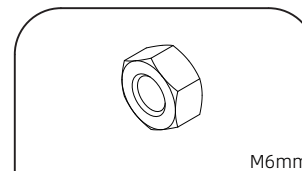


M6mm

MB x8

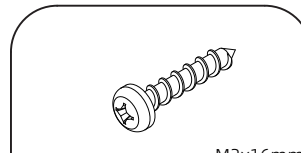


M3x16mm

MC x8

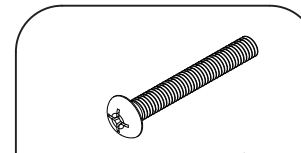


M6x45mm

MD x6

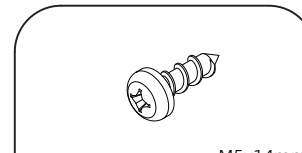


M5x14mm

ME x4

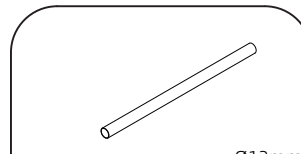


Ø13mm


NA x1

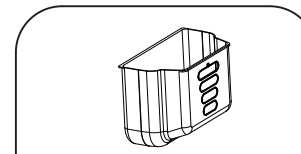

NB x1

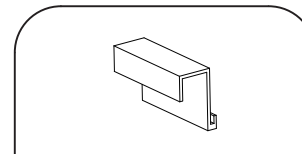


NC x1

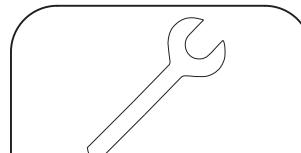


ND x1

Board Identification

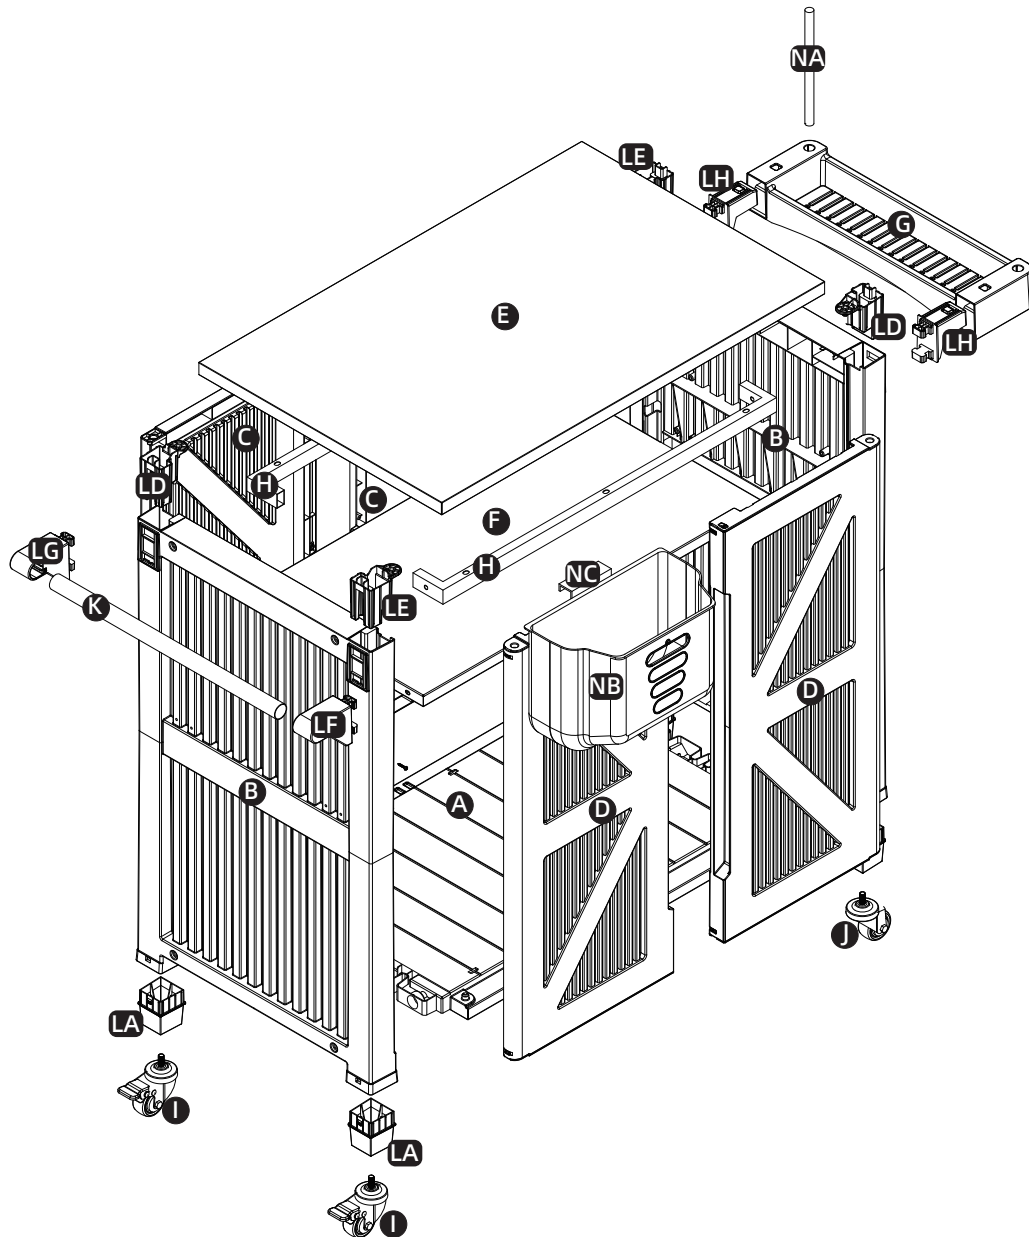


STEP1

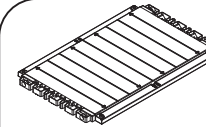


A

x1

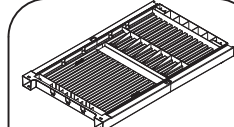


B

x2

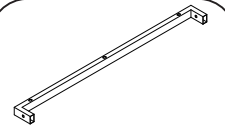

H

x2



M6x55mm

MA




x8



M6mm


MB

x8

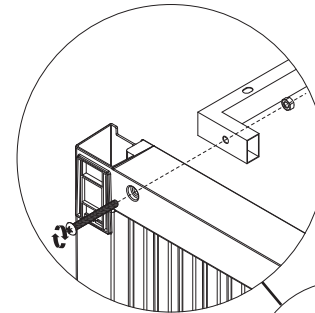


MA

M6x55mm

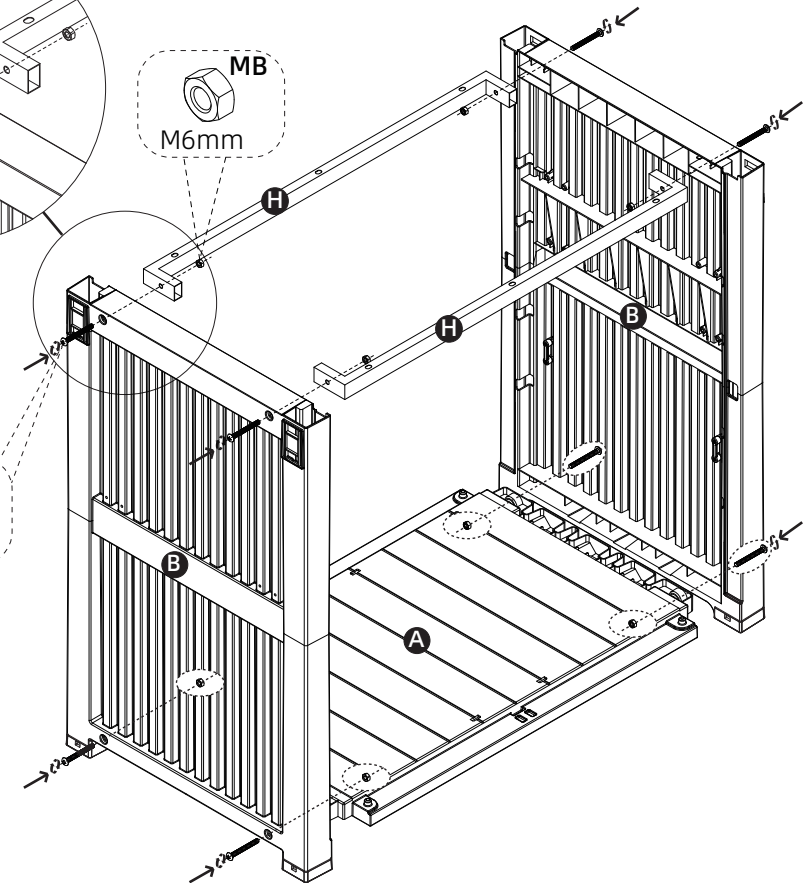

STEP2



With Brake Block


I

x2



J

x2




LA

x4




ND


x1

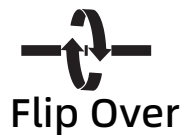

Tighten the wheels by "ND" into the bottom thread("ND" should be inserted from the arrow position)

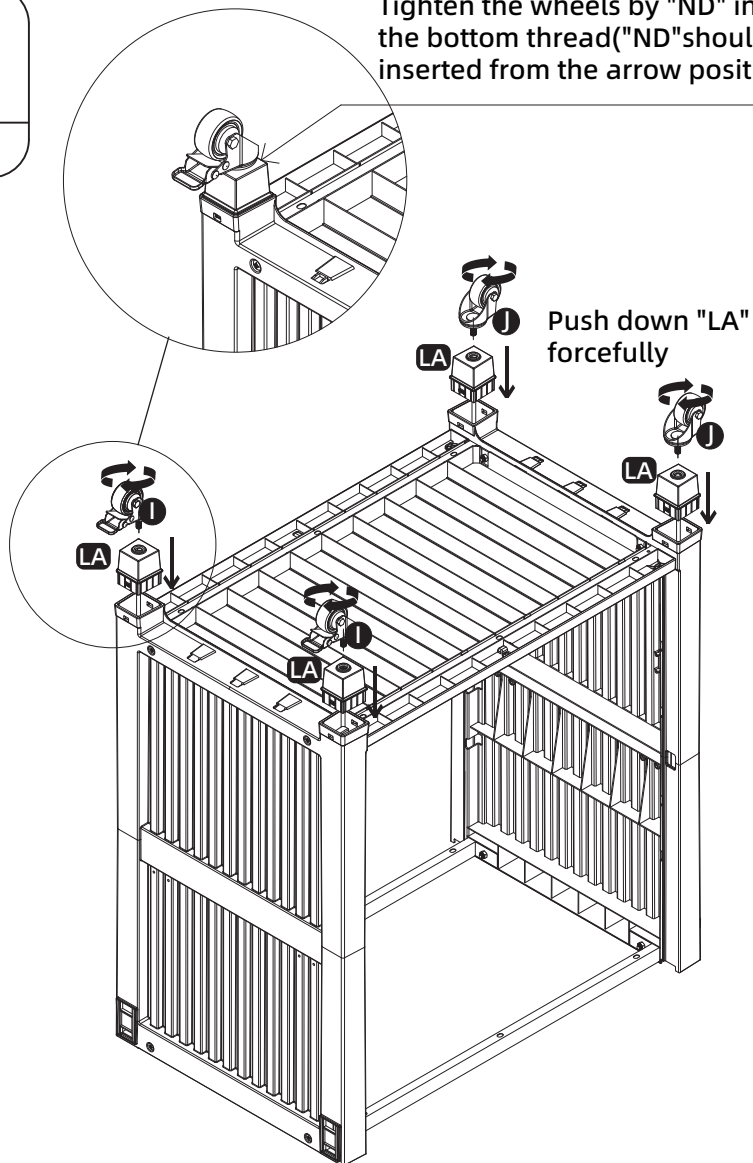


STEP3

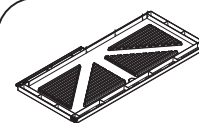


C

x2

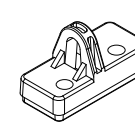


LB

x1

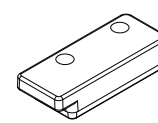

LC

x1



M3x16mm


MC

x8


MC




M3x16mm

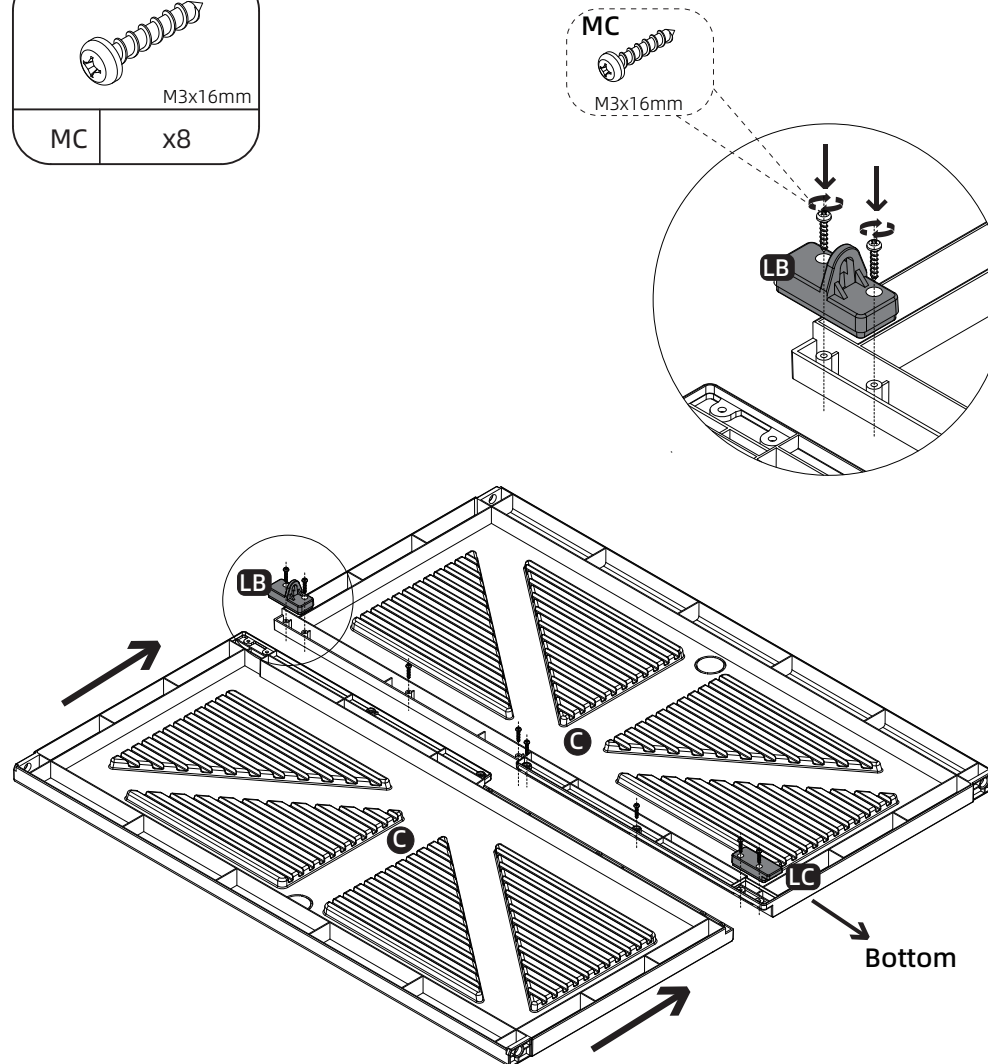


STEP4

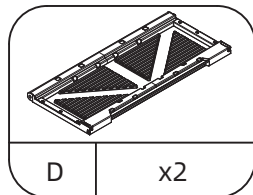











Flip Over

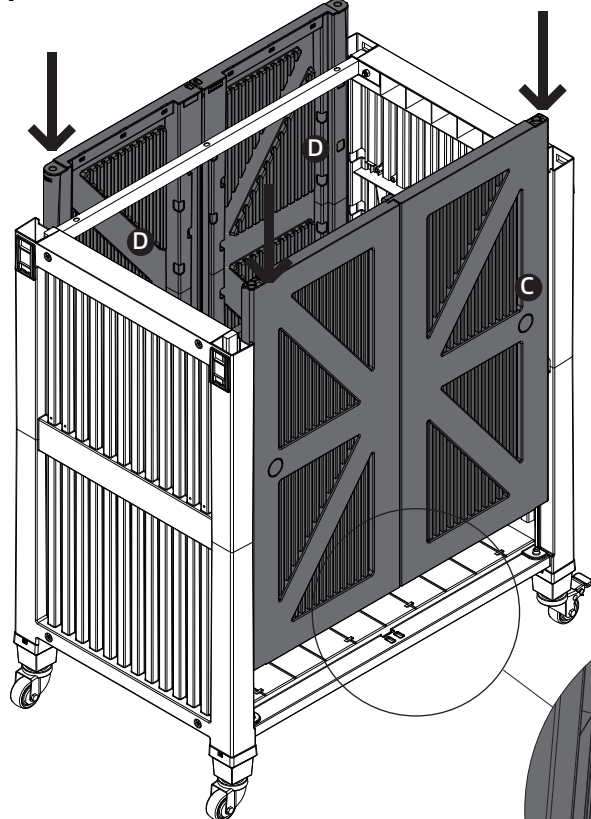


Note: Insert the raised part "LC" into the slot hole "A"

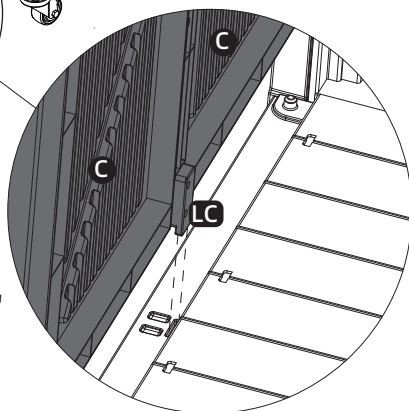

STEP5

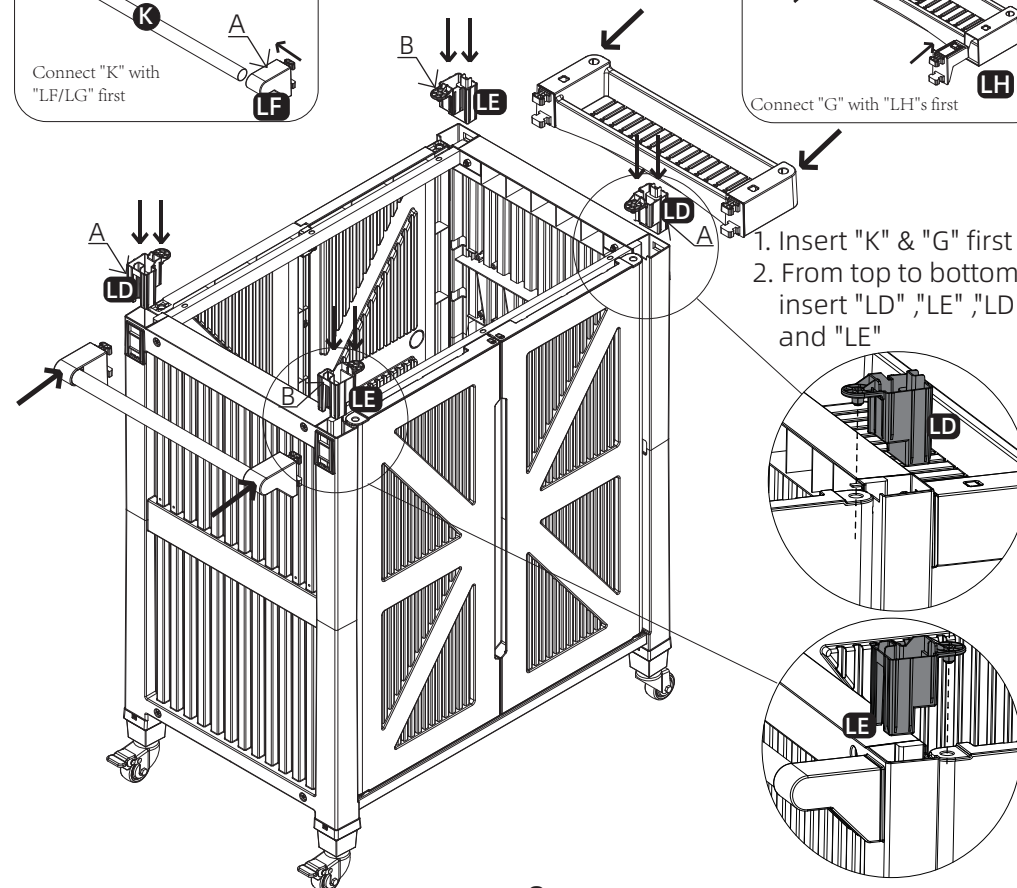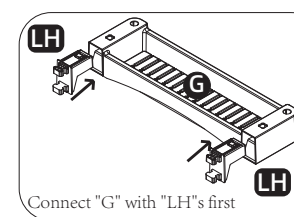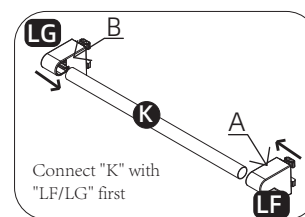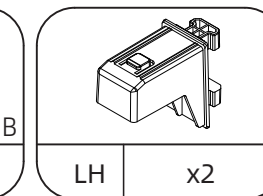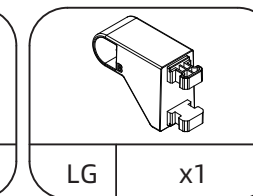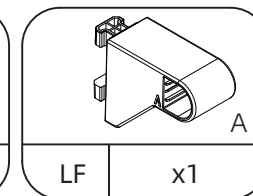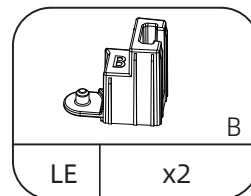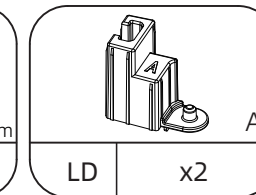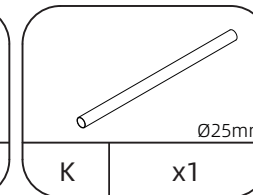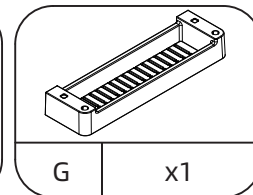


STEP6

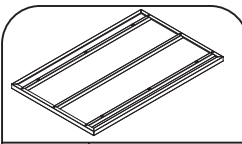

E

x1




M6x45mm


MD

x6

Remove the protection film before installation.

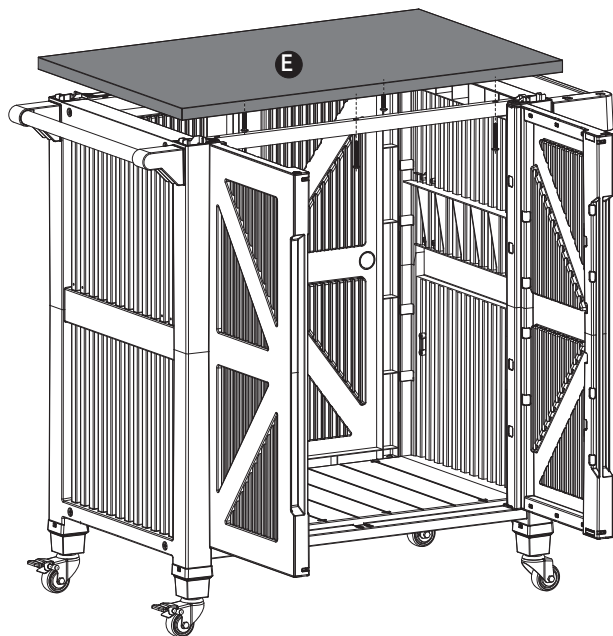


Place "E" on the relevant area and fix it by screws.

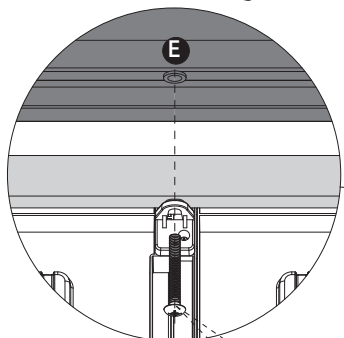


MD

M6x45mm

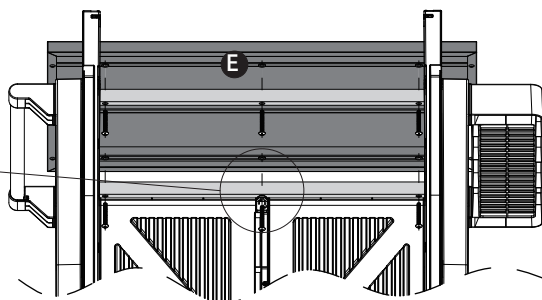


STEP7

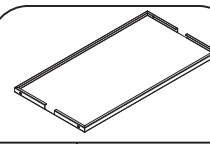

F

x1






M5x14mm

ME

x4


1. Place the "F" at an inclined angle in the cabinet first.
2. Put down the "F" and align with the installation holes
3. Fix the "F" with 4pcs screws.

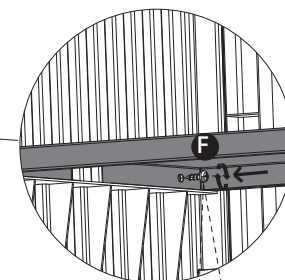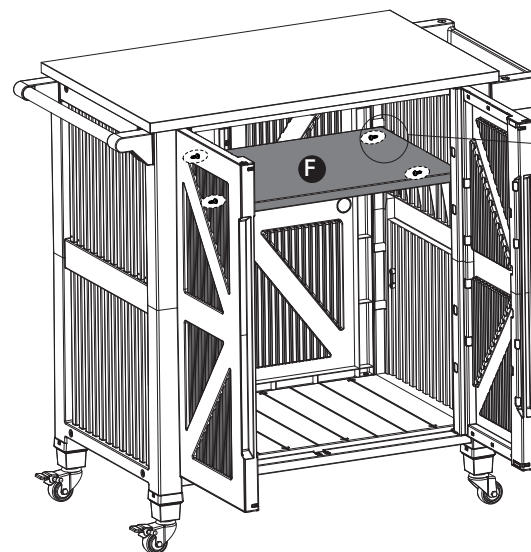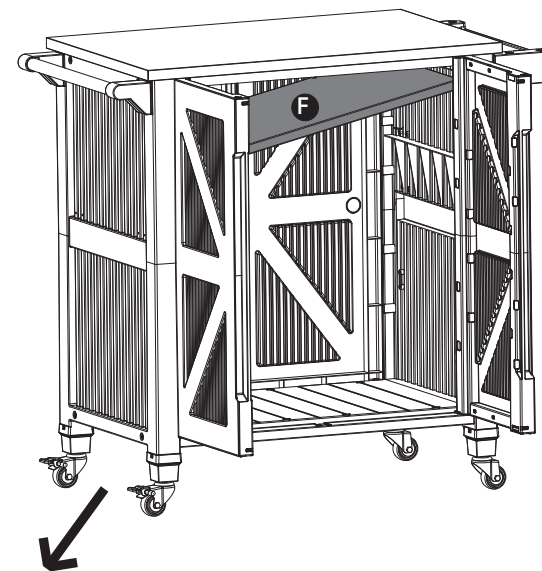

ME


M5x14mm

STEP8

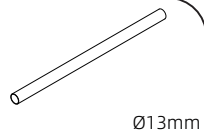


NA

x1




NB

x1



NC

x1

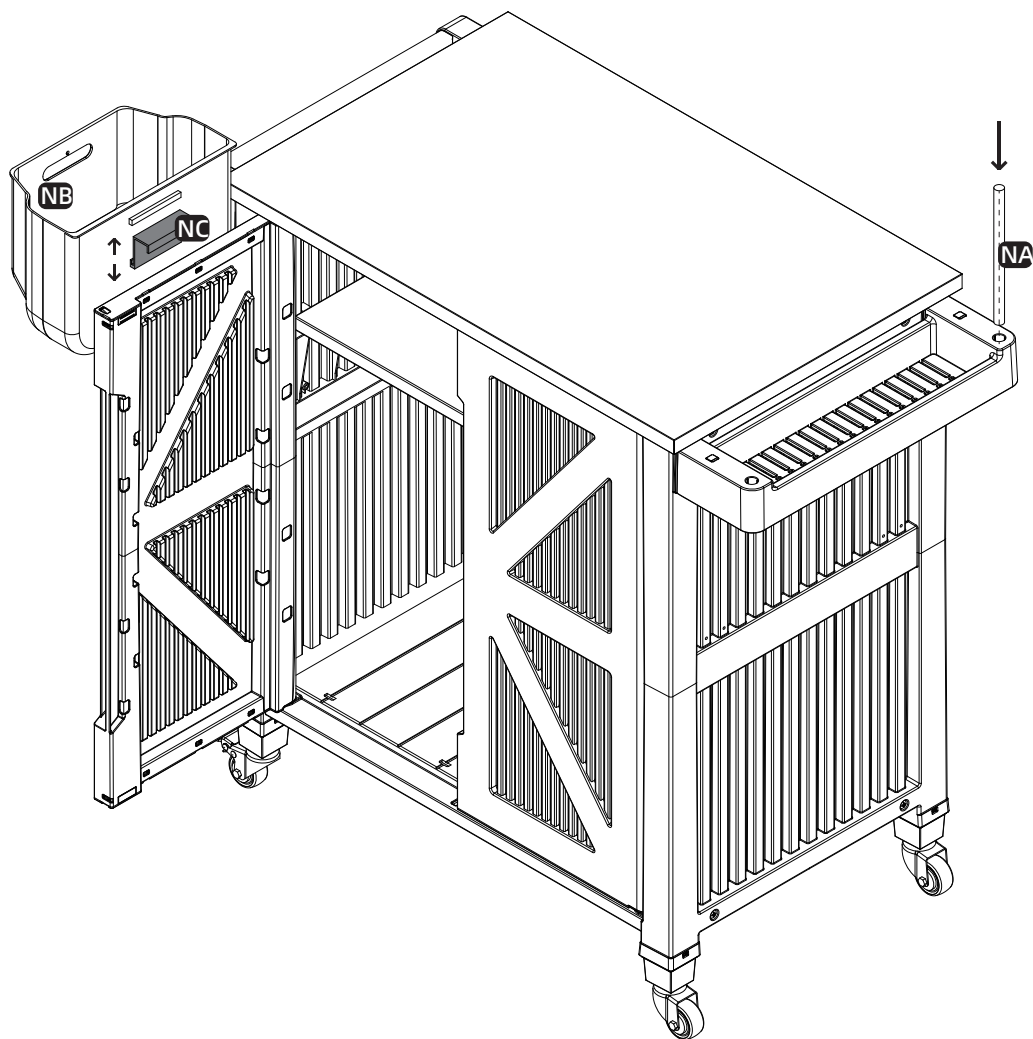

Congratulations! You have completed the installation of the dining car.

