


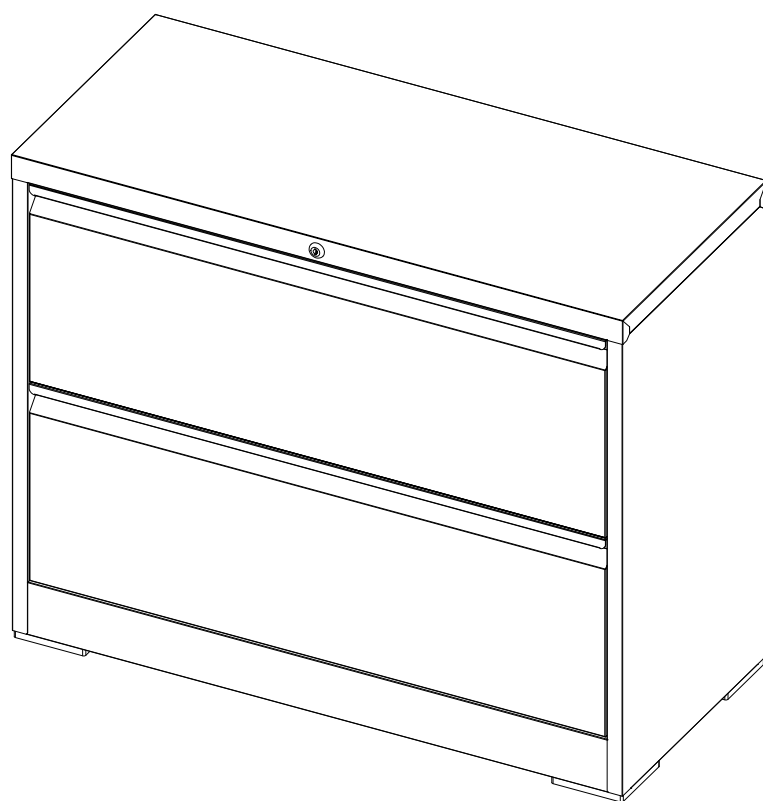
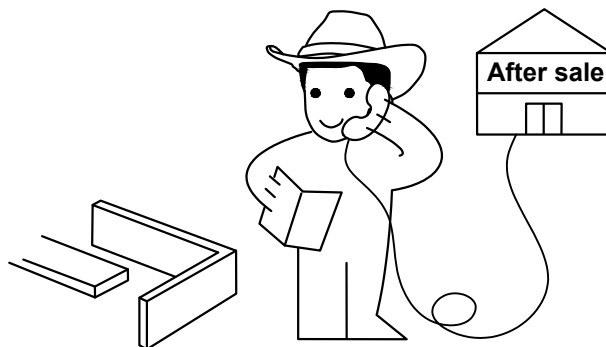
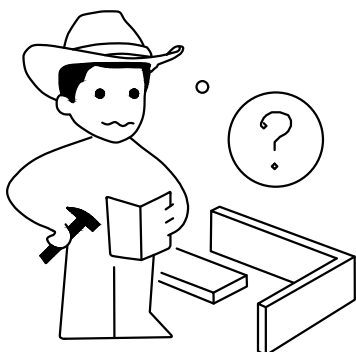
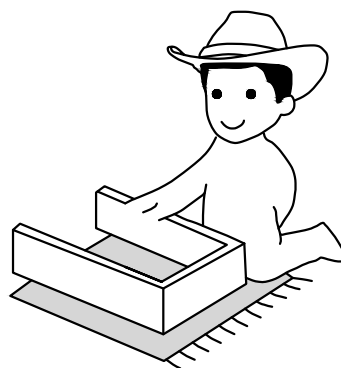
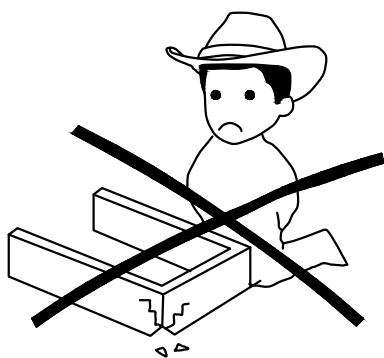
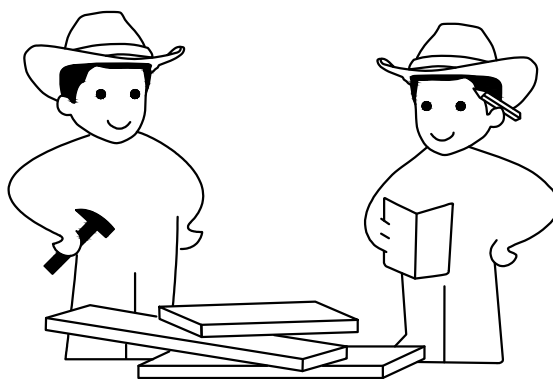
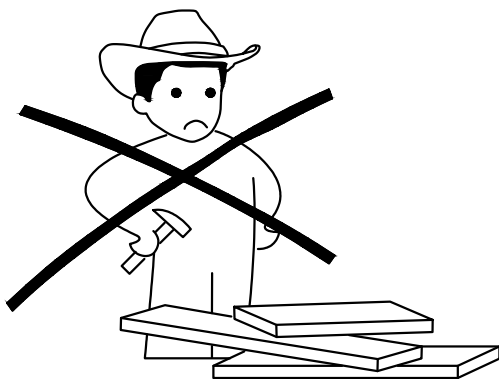





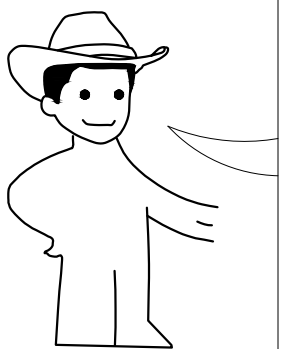


1x2

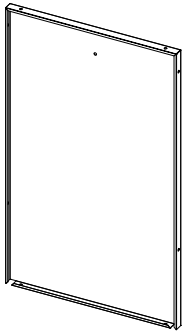


2x1

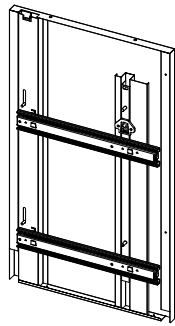


3x1

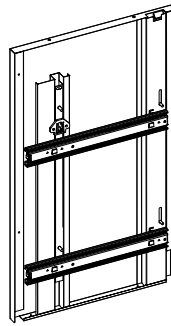


4x1

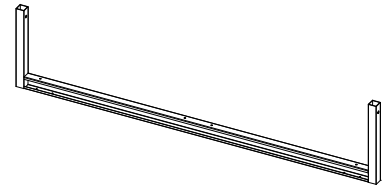


5x1

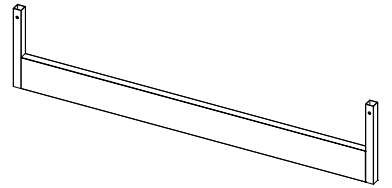


6x1

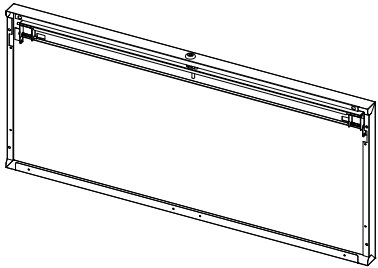


7x2

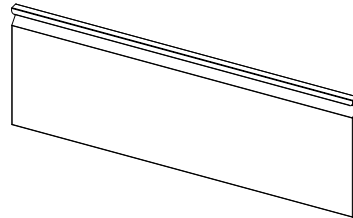

8x2

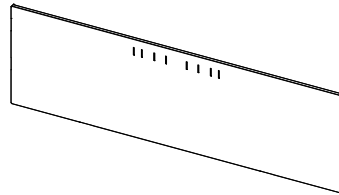


9x2



10x4



11x2

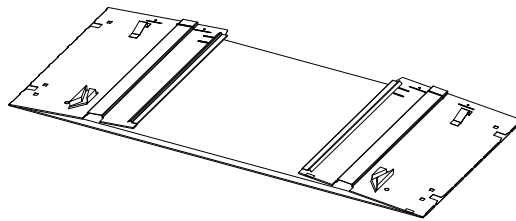

A×24



M4x $\frac{8\text{mm}}{0.3\text{inch}}$

Bx16



M4x $\frac{16\text{mm}}{0.6\text{inch}}$


Cx2



Dx2



E×4

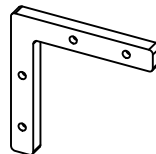

Gx2





M8






M5x $\frac{30\text{mm}}{1.18\text{inch}}$




M5

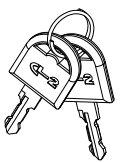

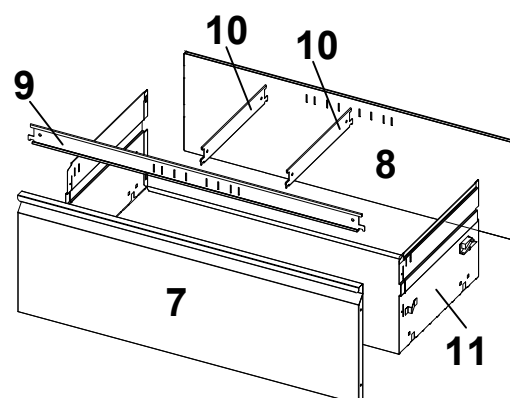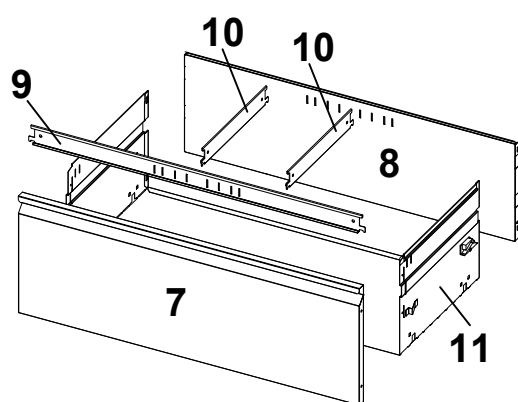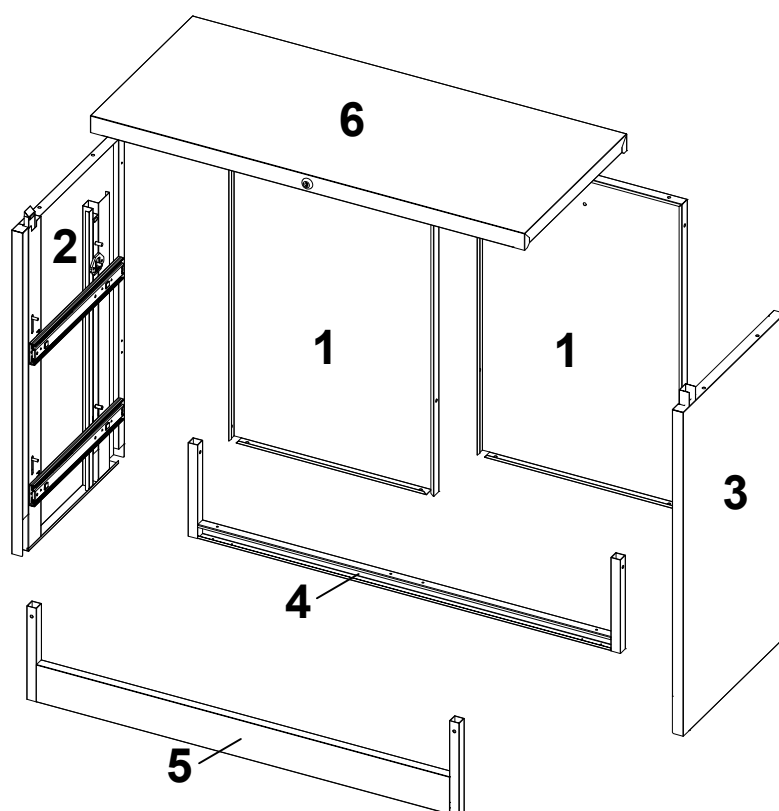


1

Insert part 4 into the channels of the two side panels

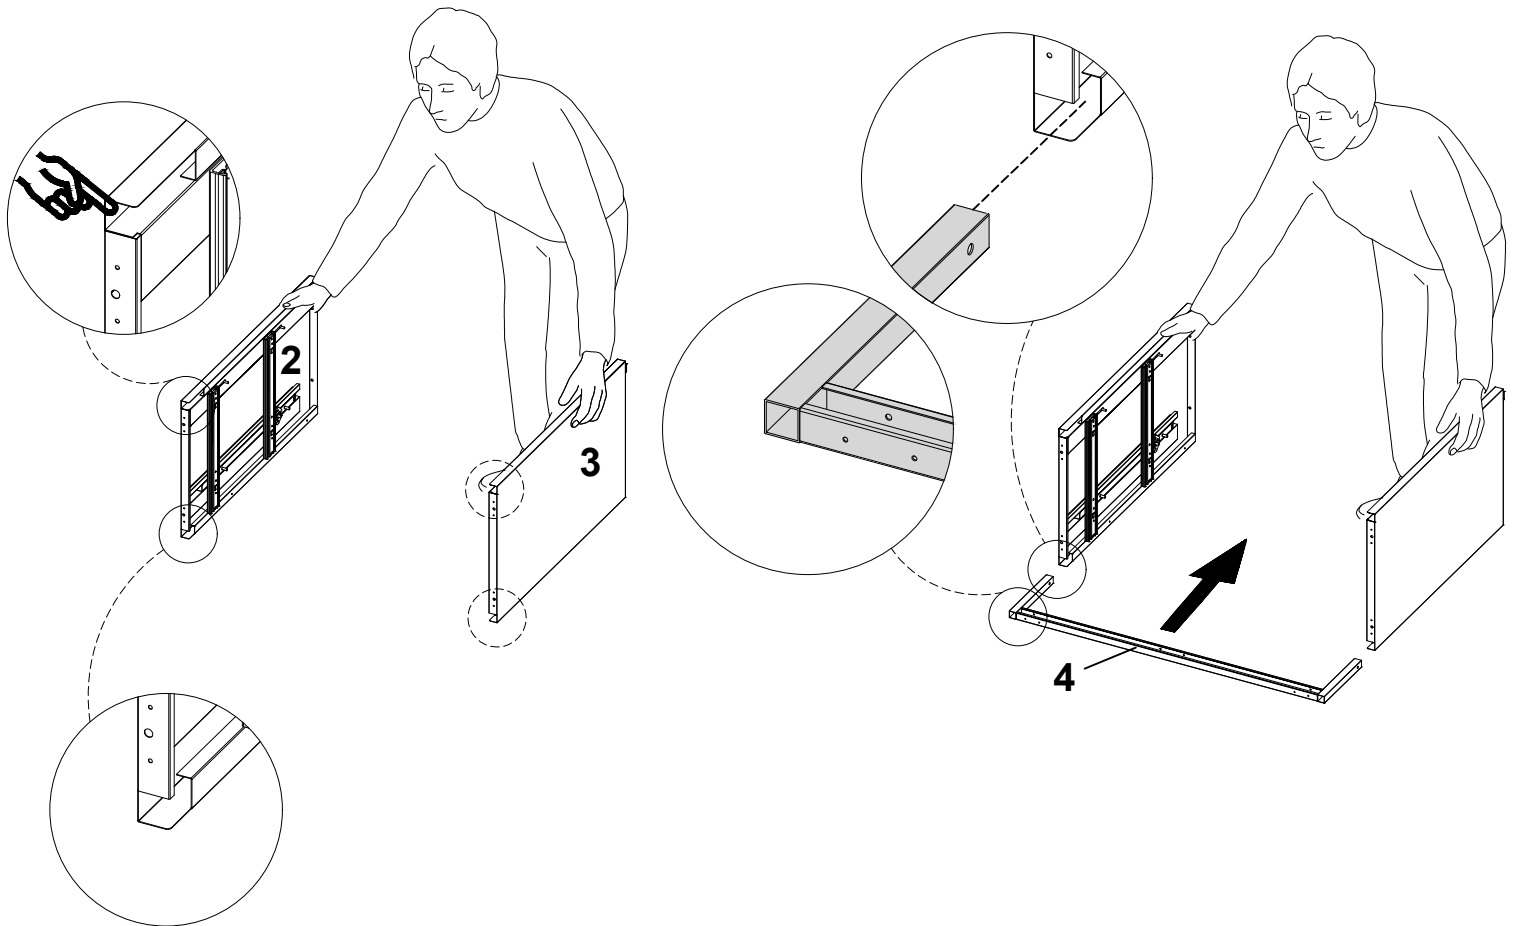


2


Insert part 5 into the channels of the two side panels

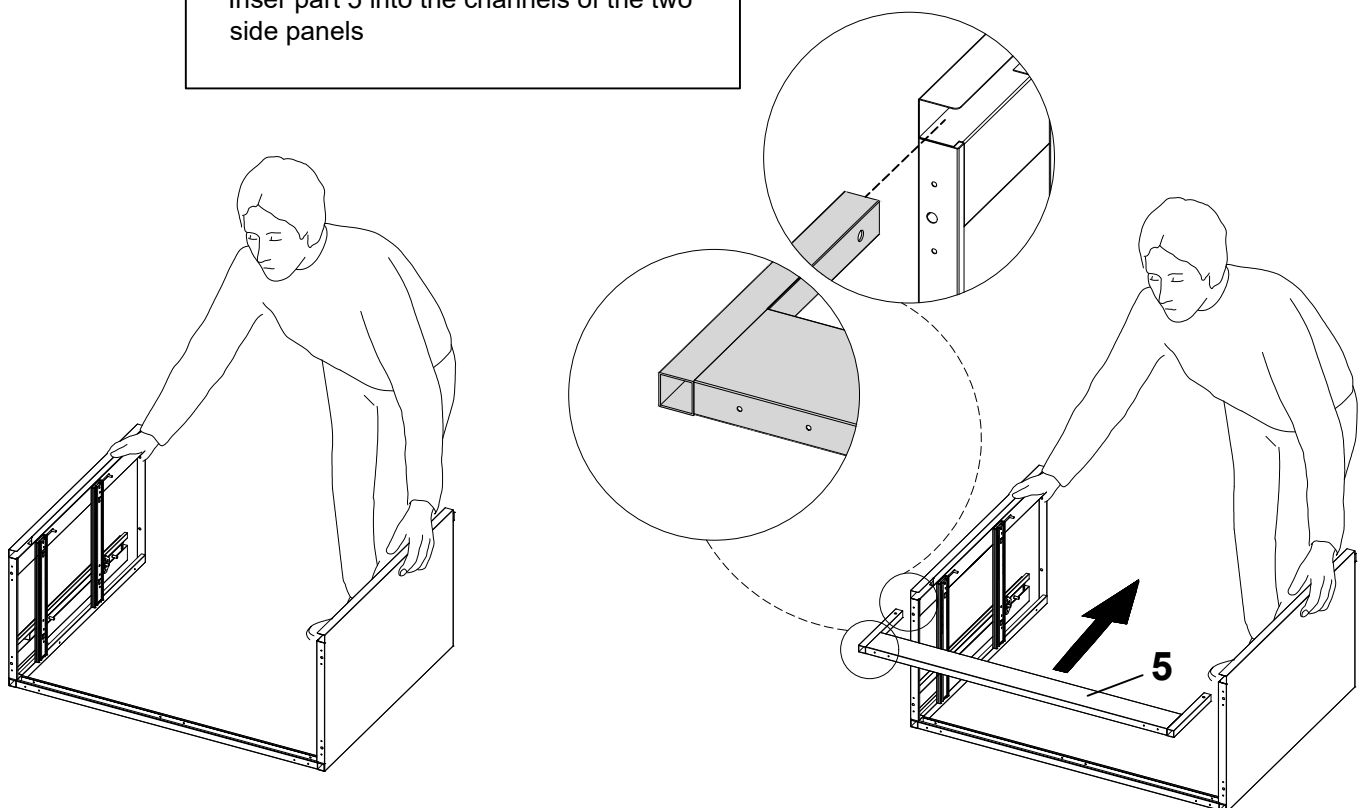


3

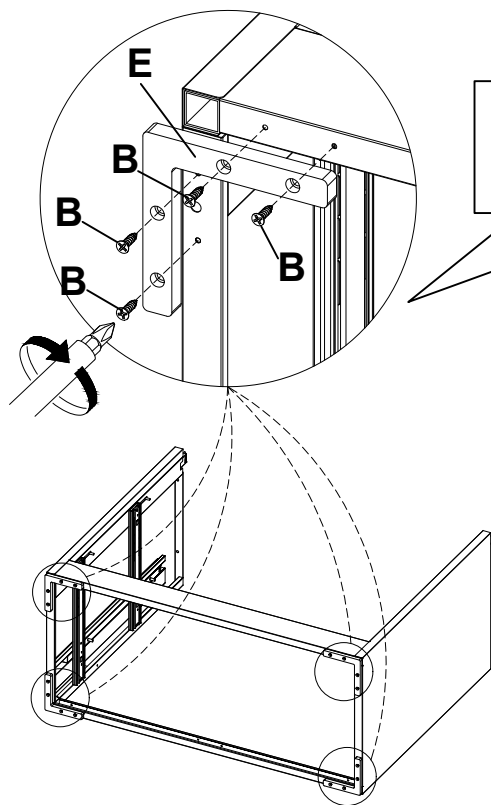


put sixteen screws to hold part E into place.

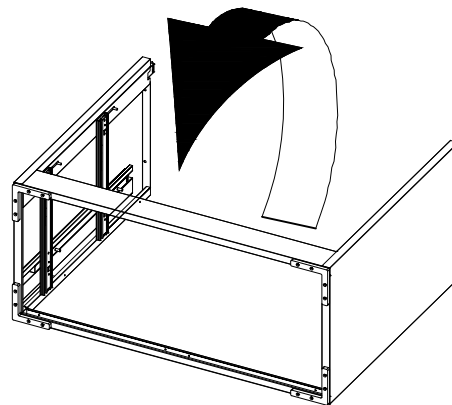

4

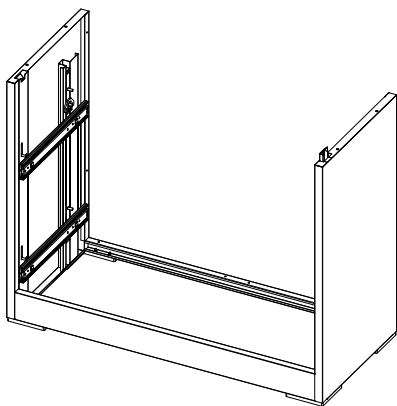


Place part 1 in position as shown in the diagram

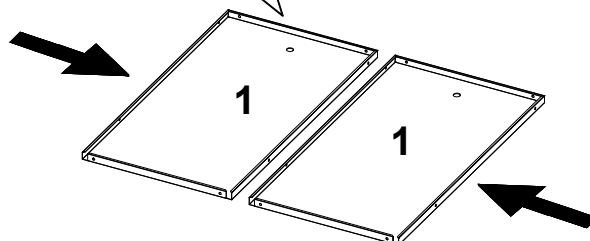

5

put two bolts and nuts to hold them in place

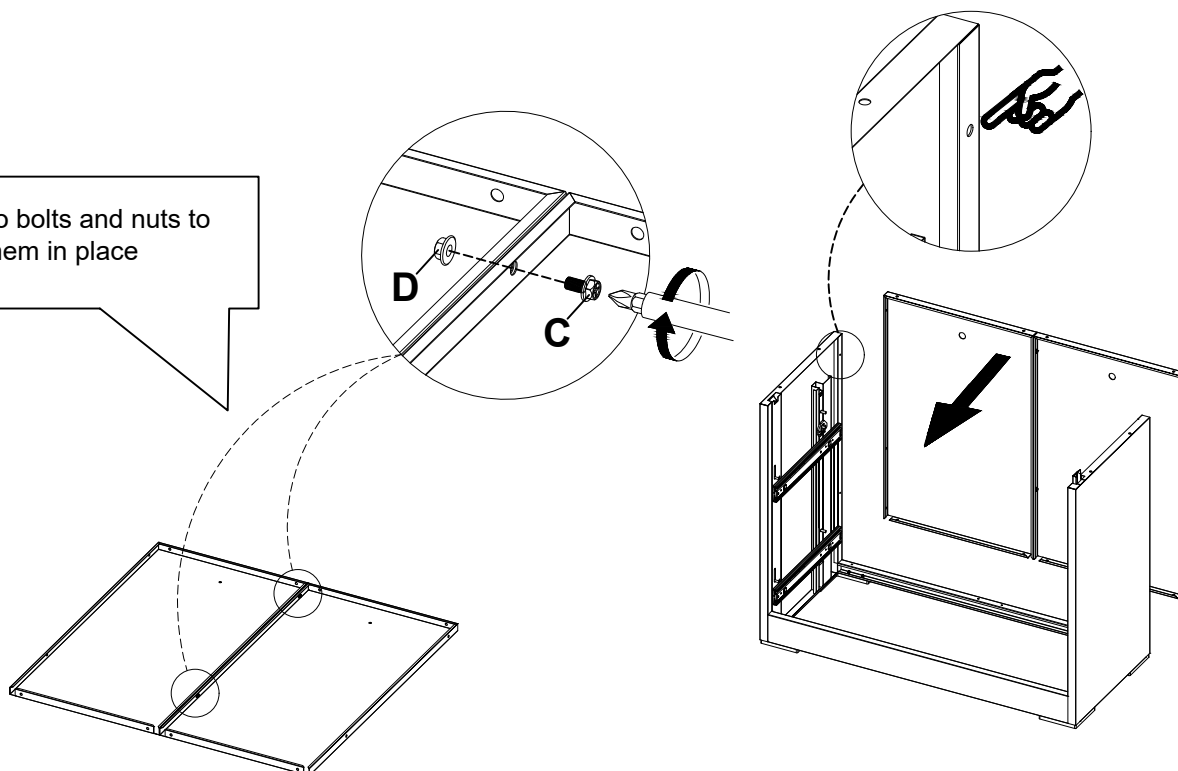


C×2



D×2

6



Put eight screws in the holes to make them in place.

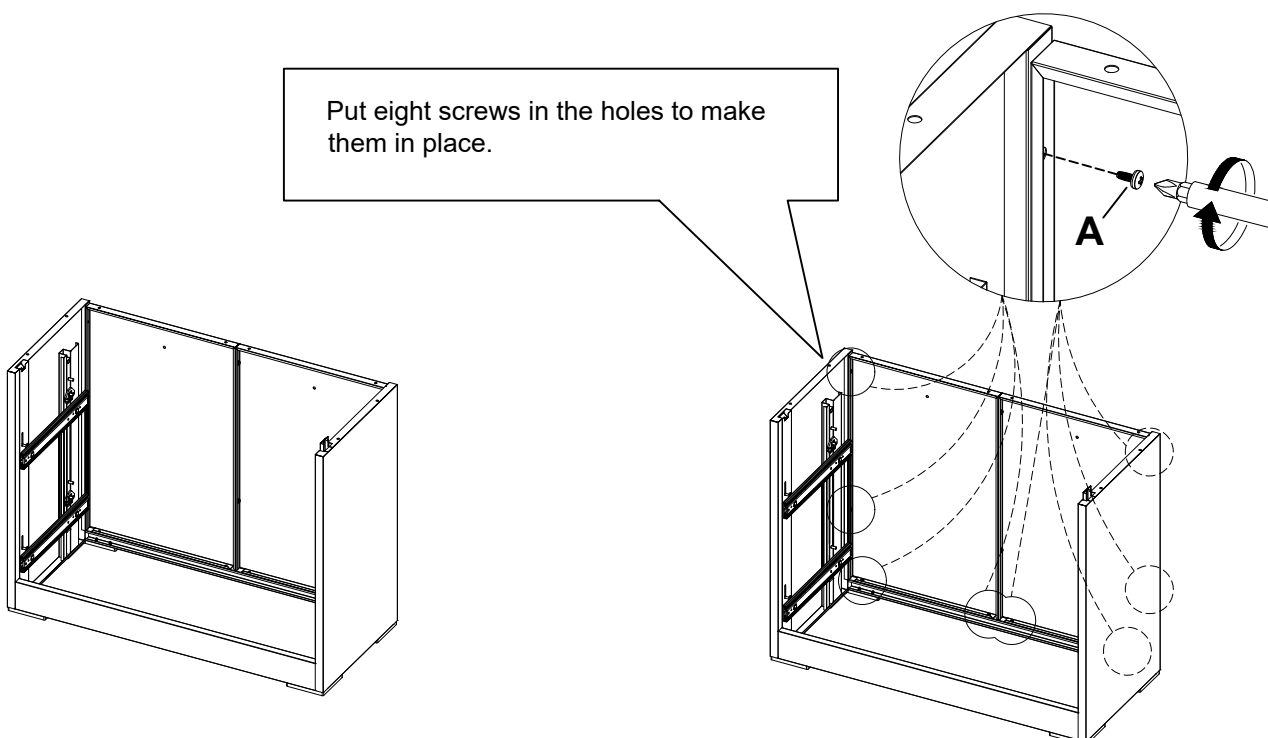

A×8


7

Noted if the spring shaft is right here

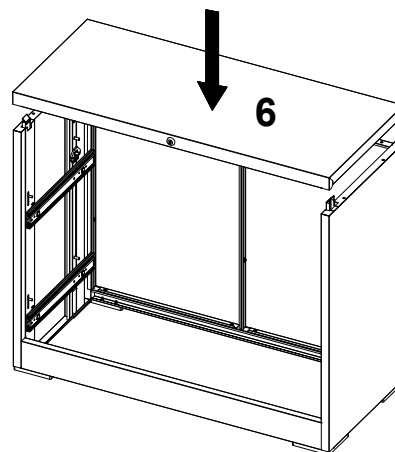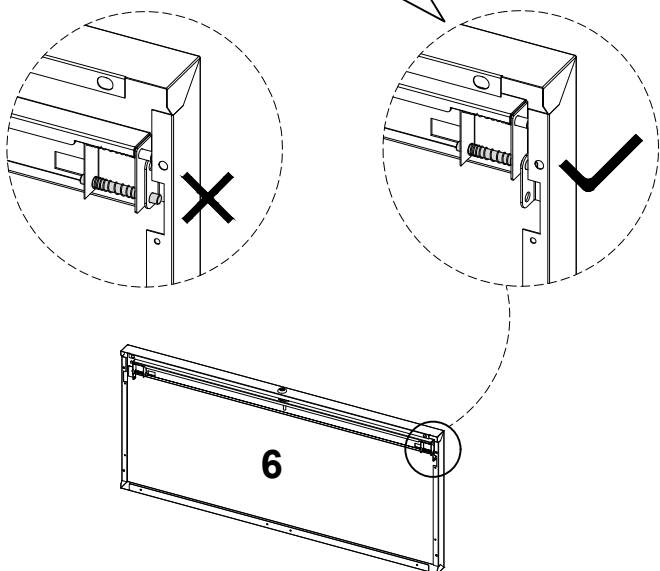


8

put eight screws to hold part 6 into place.

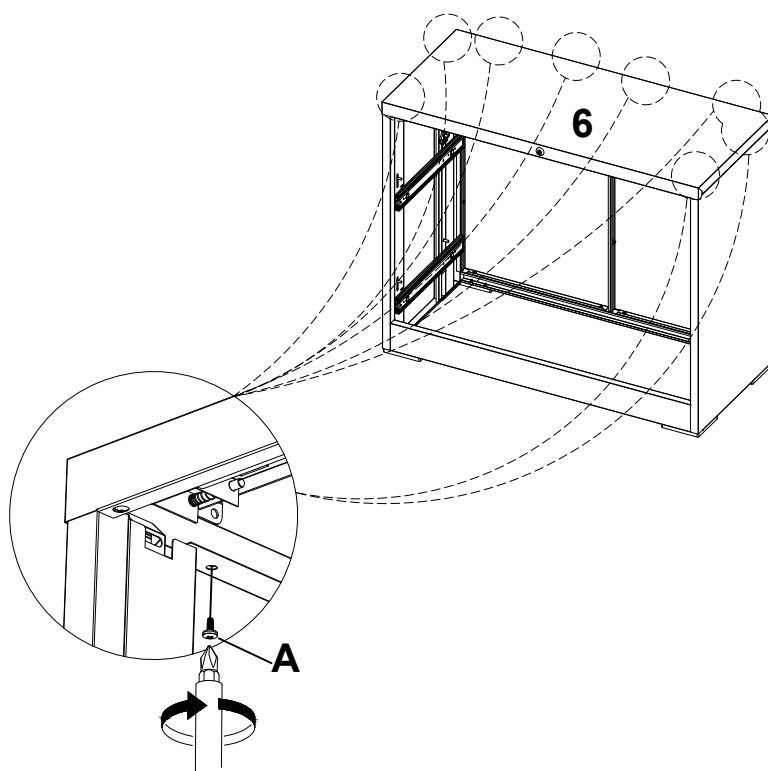


9

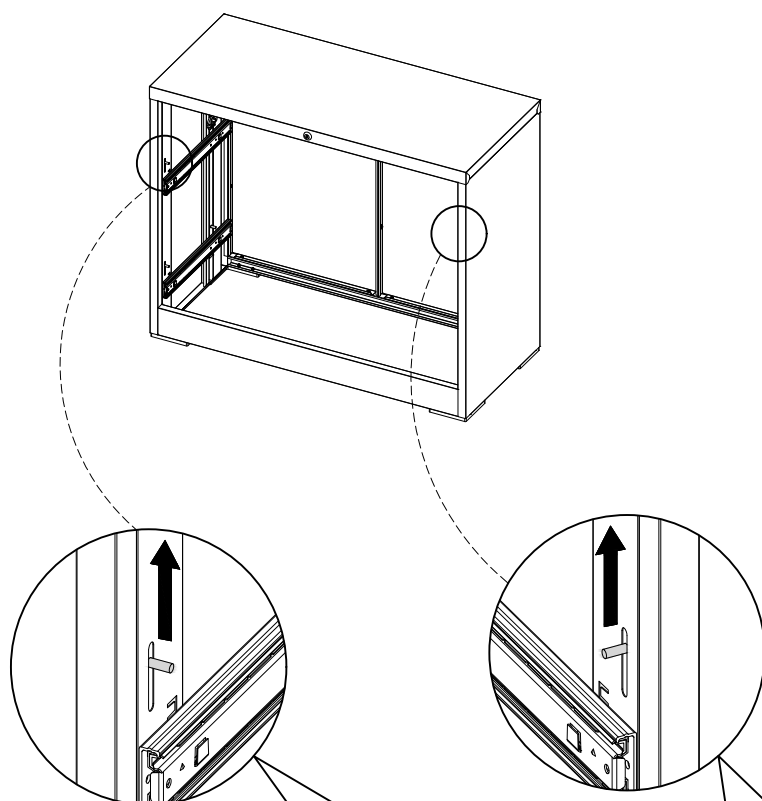

Lift the left and right Locking Rods upwards as shown

Ensure that the spring shaft is inserted into the lock bar hole





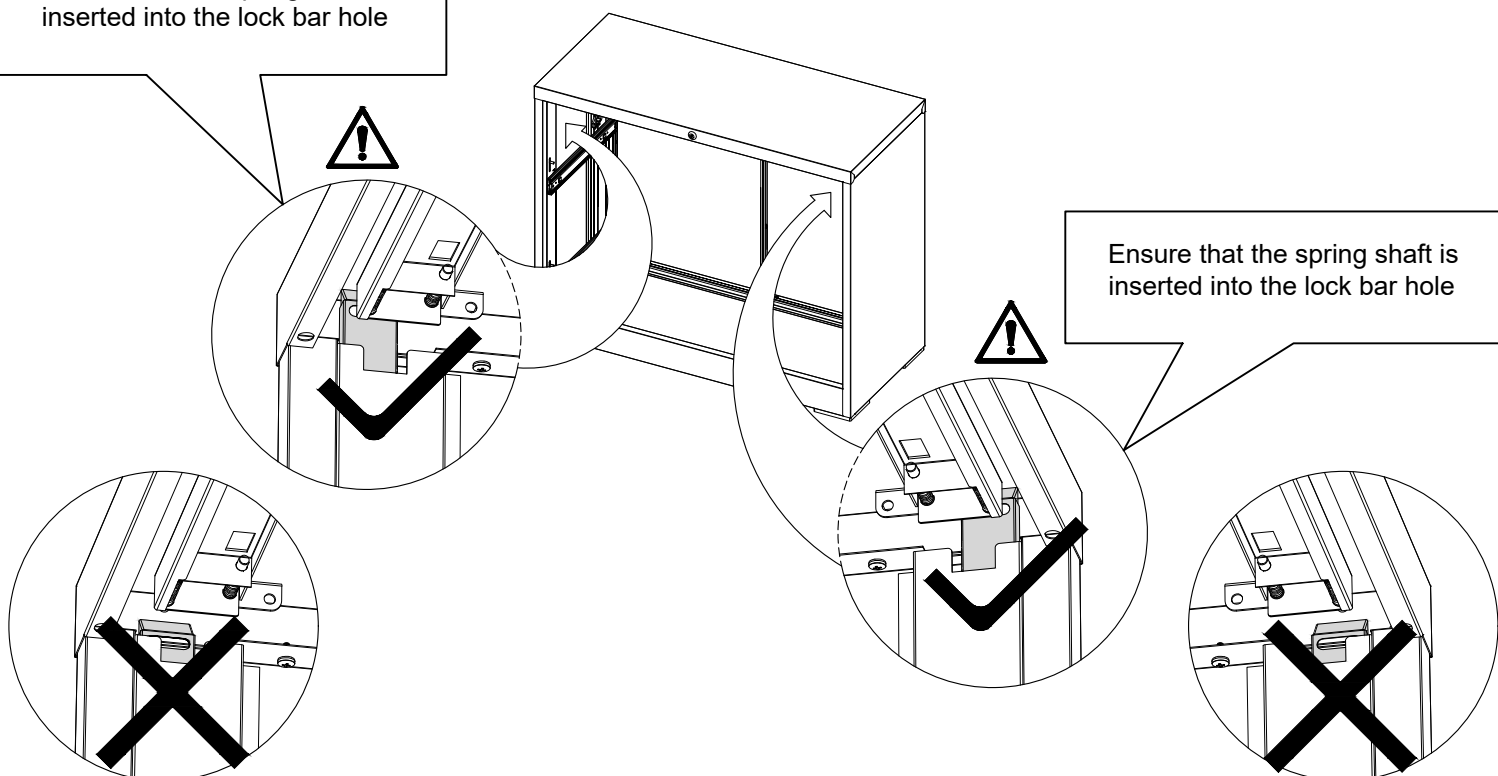


10










This step is to connect the cabinet to the wall, if you do not need to ignore it

back

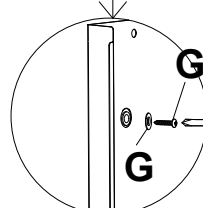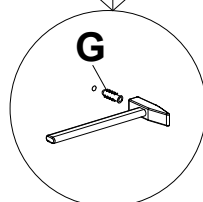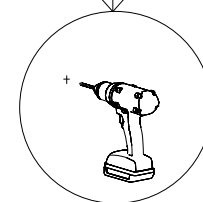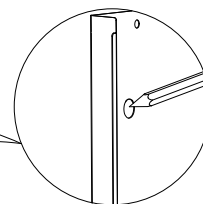
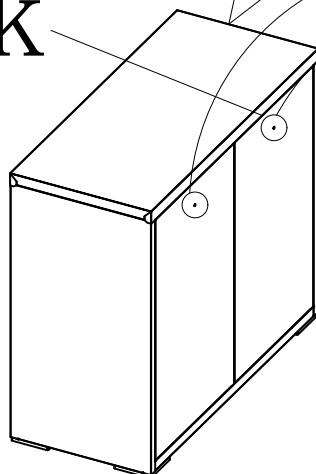


11

Insert the tabs at the bottom of the drawer faces 7 into the drawer body 11 and bend the tabs

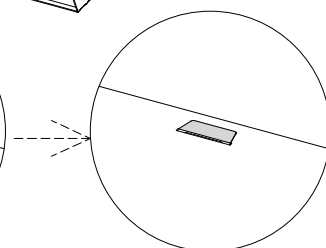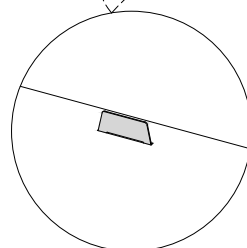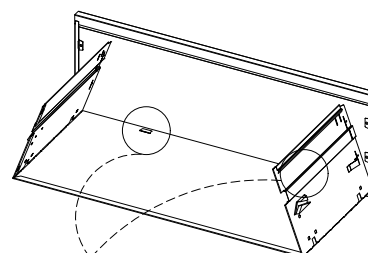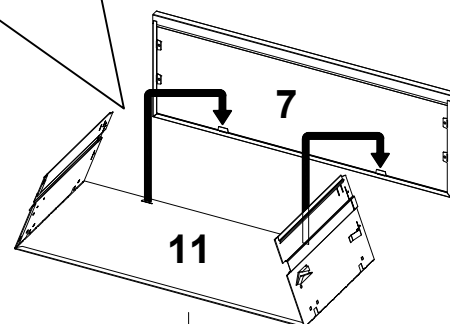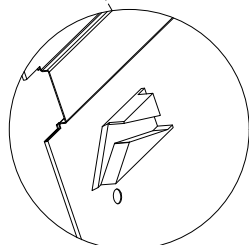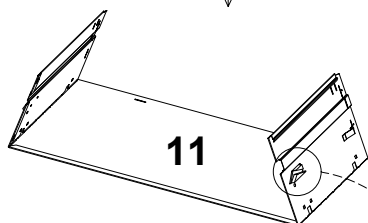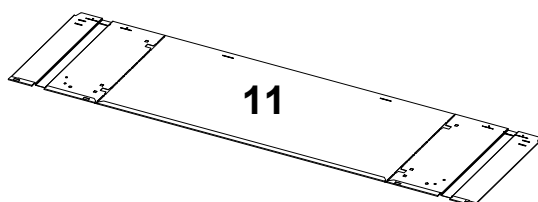


12

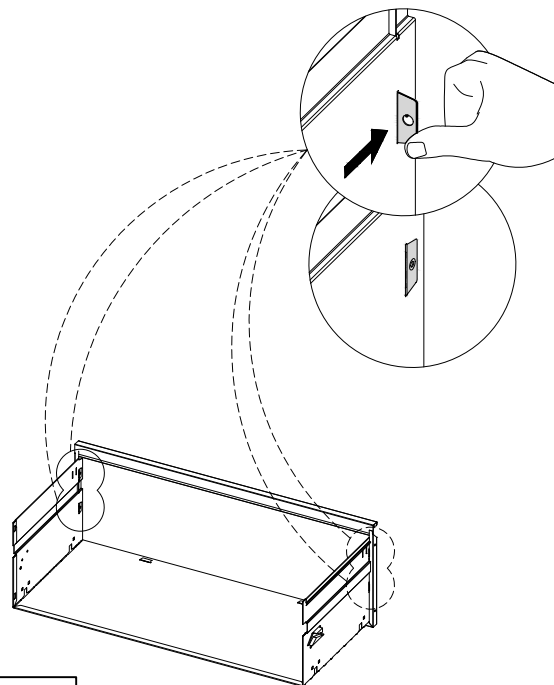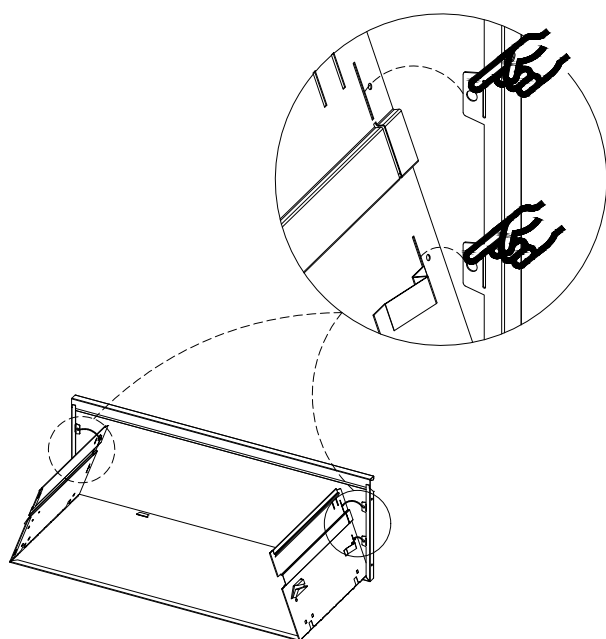


Bend the tabs on the drawer faces.

13

Put four screws to hold them in place


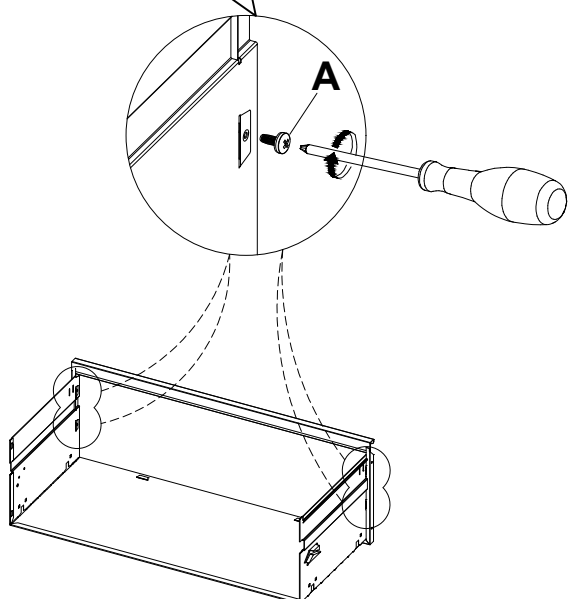


Make sure that the little bits protruding from part 8 are all inserted.
Note that the slots on the back wall of the drawer should face up.


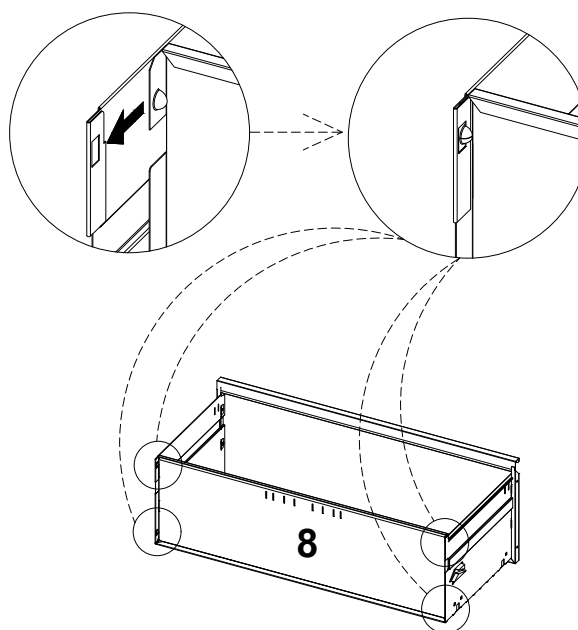


 A×8





14

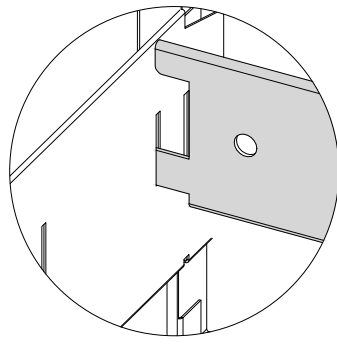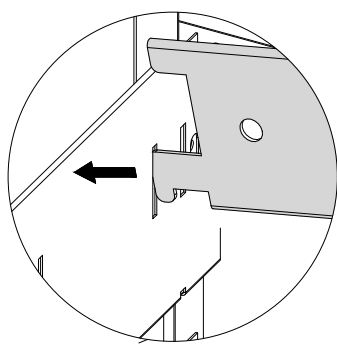





the file hanging bar can be put inside.

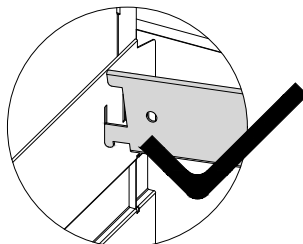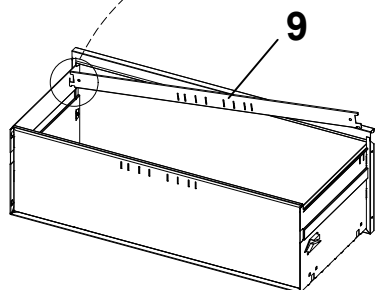

Choose the suitable hole according to the size of the folder

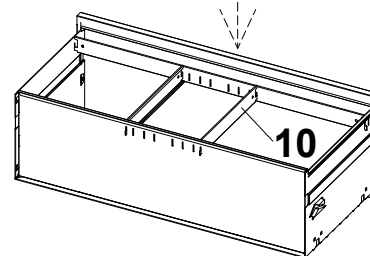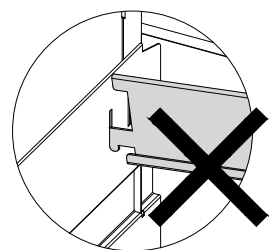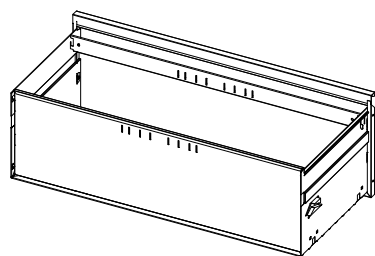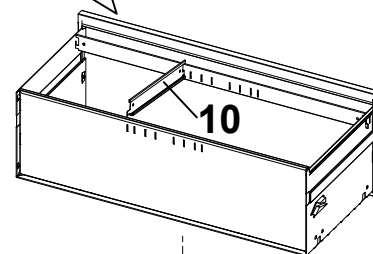


15

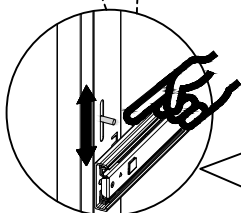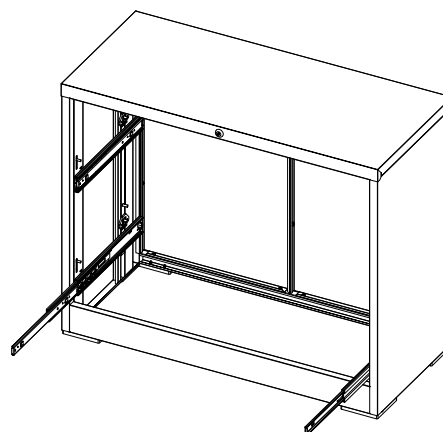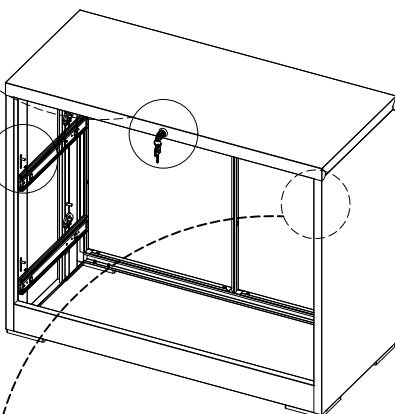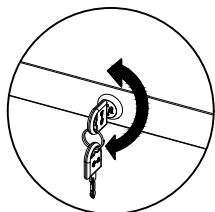

Note: Whether the lock can be moved up and down while rotating the lock. If not, please follow step 9 again.

1. pull out the small rails in the slide rails on the side walls completely.
with two people lifting each side of the drawer,
align the four divots on the bottom with the two rail clips on the rails on each side and insert them into the rail clips.

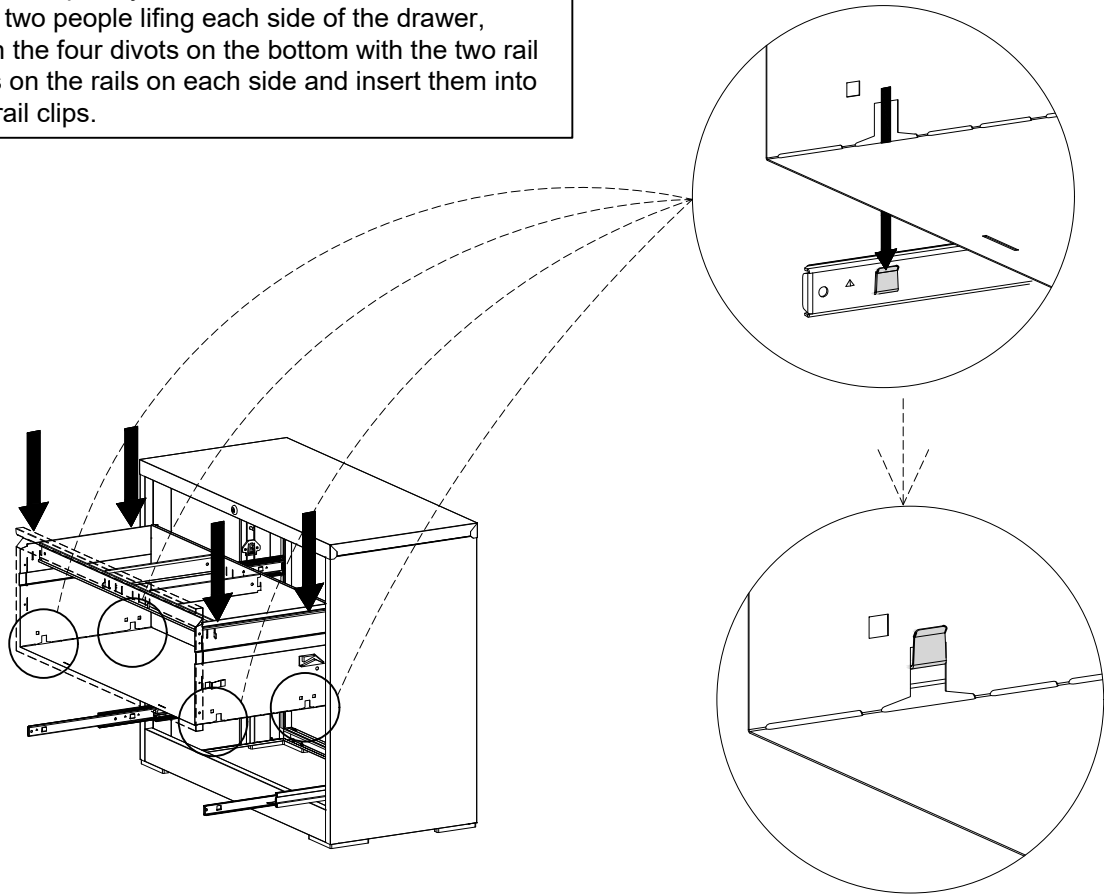

2. After placing the drawer on the rail, press the drawer base down hard enough, paying attention to check the position of the four clips inside until you hear a click four times, which means the drawer is in place

