



ASSEMBLY INSTRUCTION


A\*2

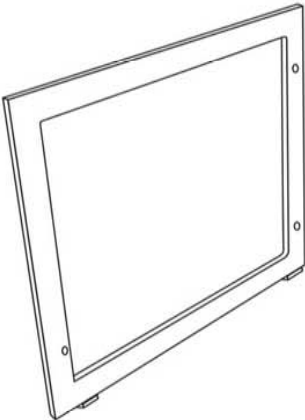

C\*1

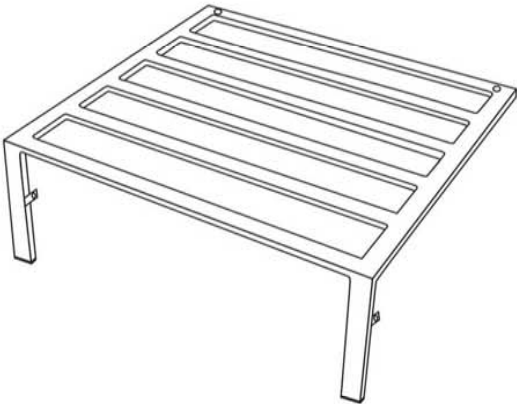


F (M6\*65)  
E(14\*6)

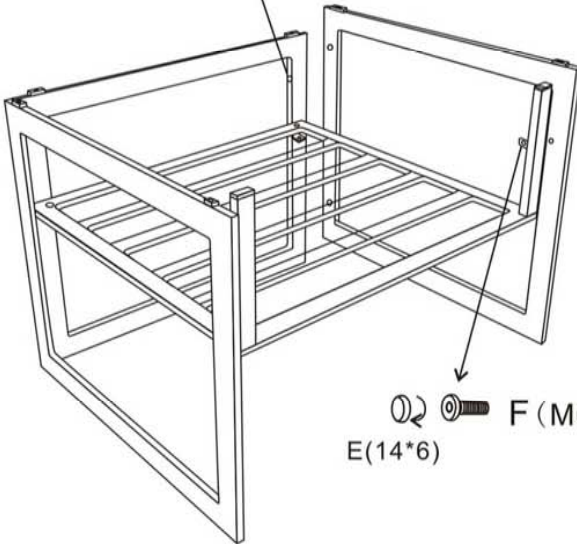

F (M6\*15)  
E(14\*6)

B\*1

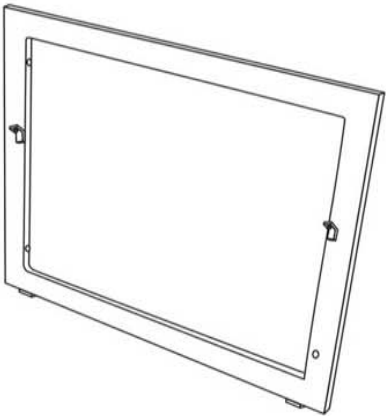

D\*1



D\*4 (M6\*15)





E\*4 (M6\*65)



F\*8(14\*6)




G\*1

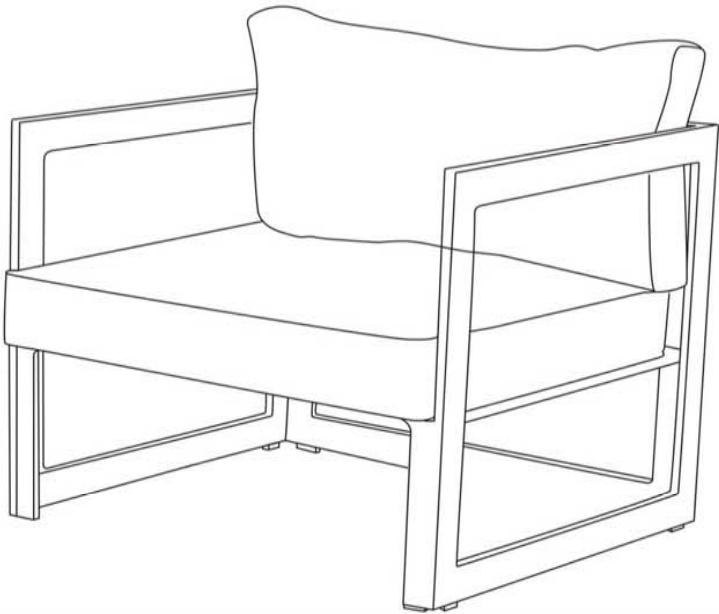


# ASSEMBLY INSTRUCTION


A\*2

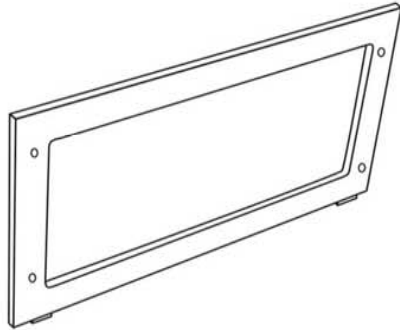

B\*1

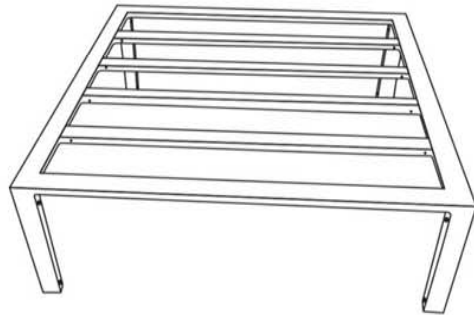

C\*1

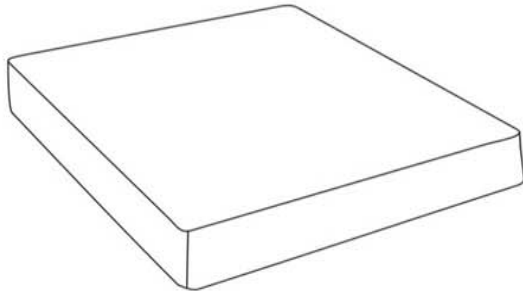


D\*8(M6\*50)




E\*8(14\*6)



F\*1

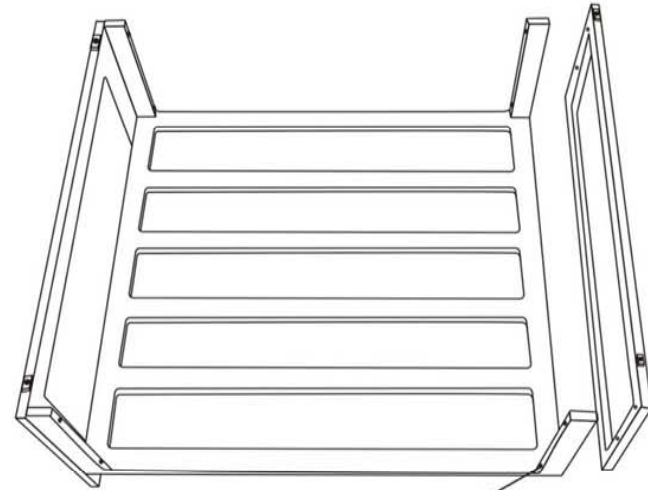


E(14\*6)  
D(M6\*50)

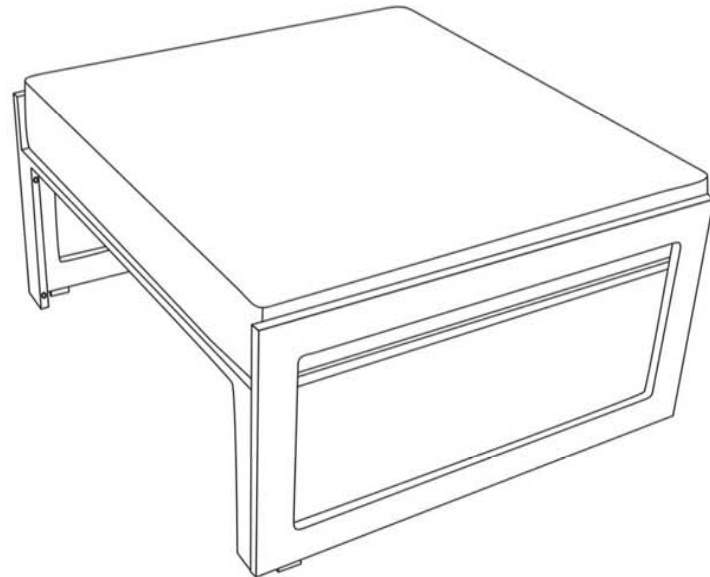


# ASSEMBLY INSTRUCTION


A\*1

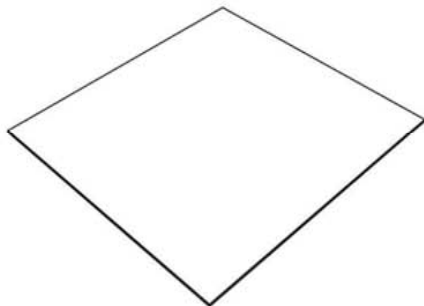

B\*2

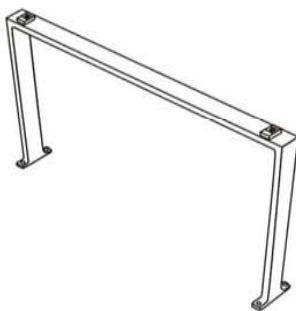





C\*1

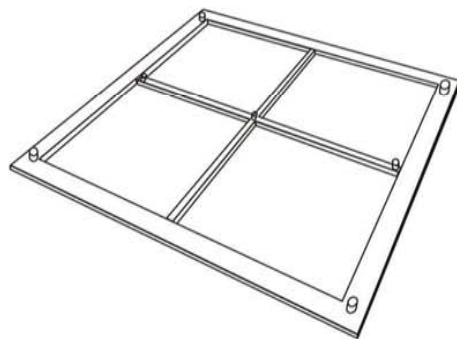

D\*8(M6\*18)




E\*1

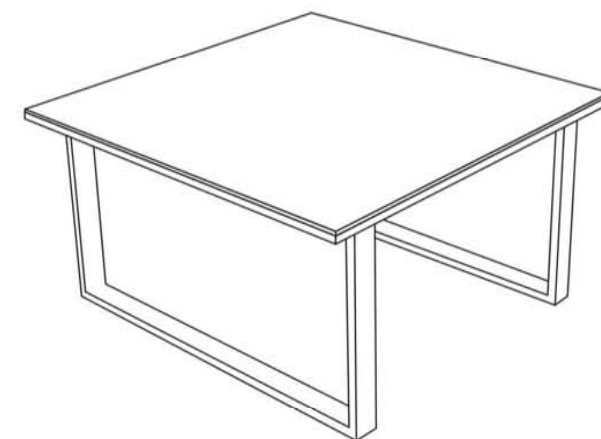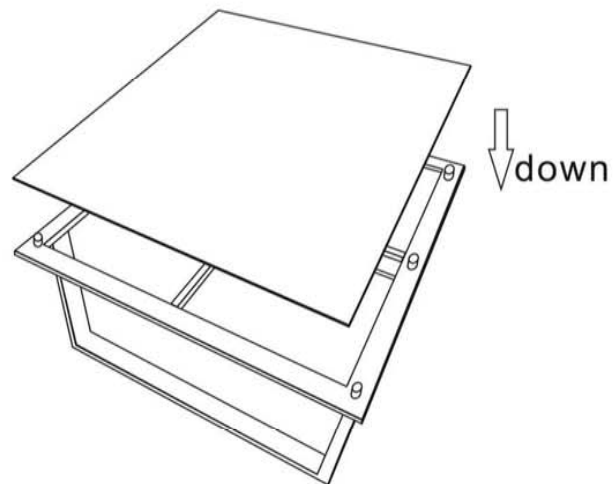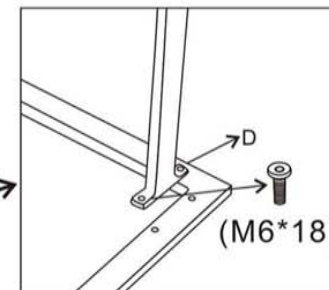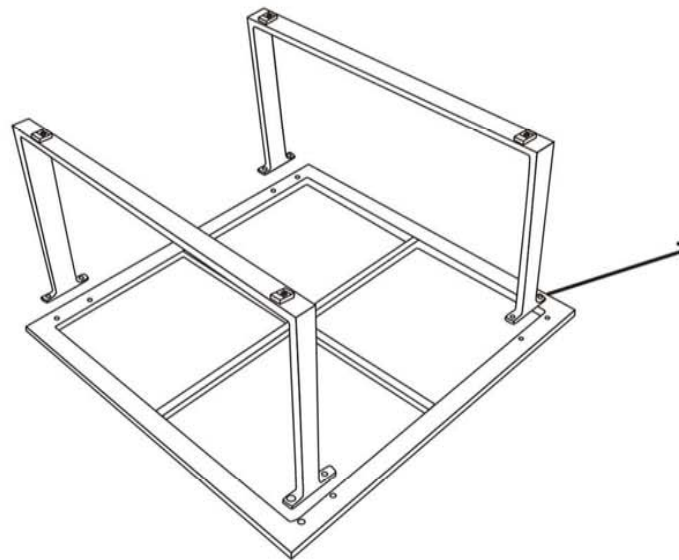


# ASSEMBLY INSTRUCTION


A\*1

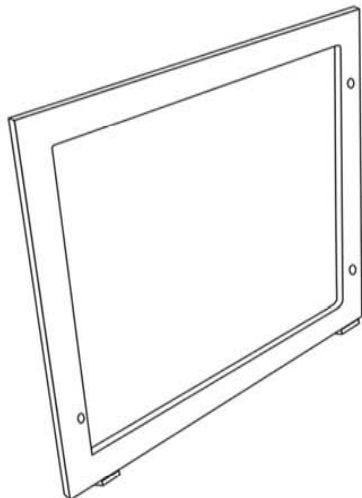


C\*1

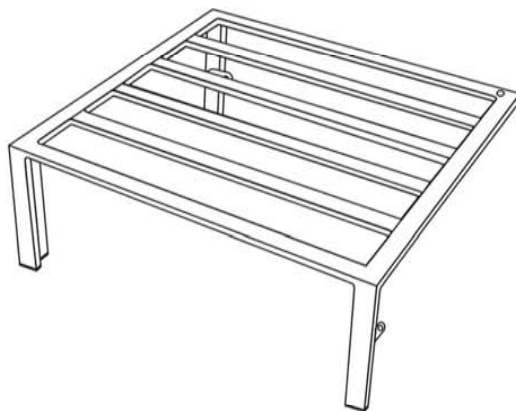


F (M6\*15)  
E(14\*6)

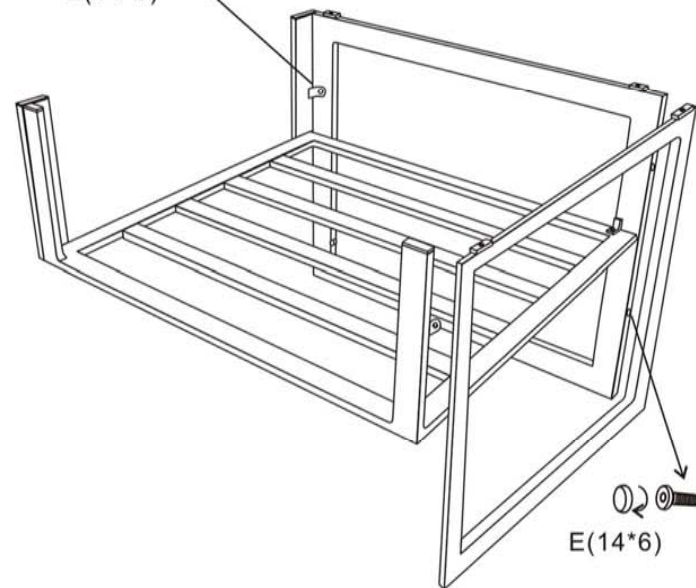


B\*1

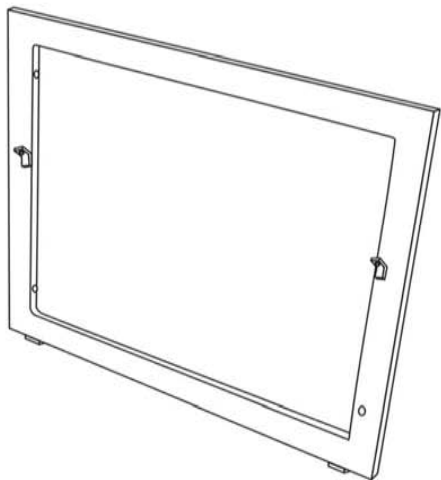

D\*1

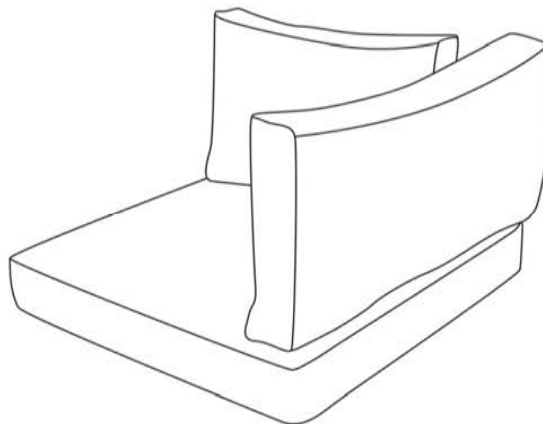

F (M6\*65)  
E(14\*6)

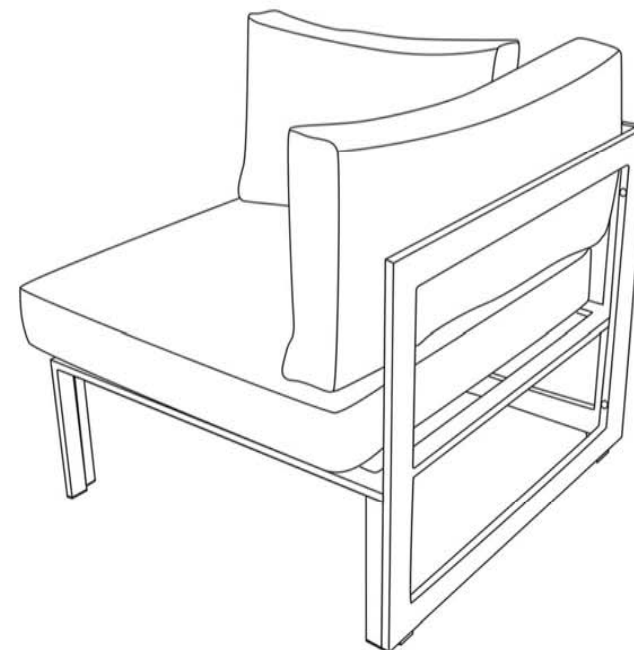

D\*3 (M6\*15)



E\*2 (M6\*65)



F\*5(14\*6)



G\*1

