

Barros Wood Planter Box



Parts List	
2	Long Panels
2	Short Panels
3	Bottom Panels
8	Short Wood Screws
8	Long Wood Screws

Please examine the contents of your package carefully before assembly.

Tools Needed:

1 screwdriver (manual or power)

If any parts are missing, **DO NOT RETURN THIS PRODUCT OR CALL THE RETAILER.**

Parts list




Step 1



Put the trimmed decorative molding side which with "TOP" label upwards.

Reminder: All top sides are trimmed molding, all bottom sides are flat.

Step 2

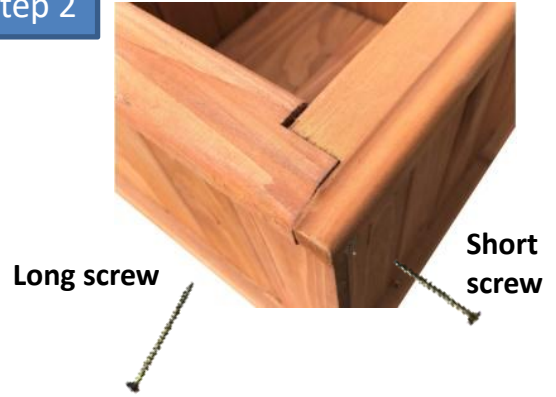

Place planter box corners of one Long Panel and one Short Panel together to form a tight seam.

(NOTE: Long wood screws go through long panels into short panels; short screws go through short panels into long panels. See picture.)

Step 3



Screw in two wood screws at the top and bottom of the planter box (4 screws total). Repeat the process for the other Long Panel and Short Panel of the planter box (4 corners total).

Step 4



Set planter box bottom panels (3) into place as shown. NOTE: Panels with holes should be placed at each end of the planter box as shown below.