


ASSEMBLY INSTRUCTIONS

BUNK BED WITH STAIR

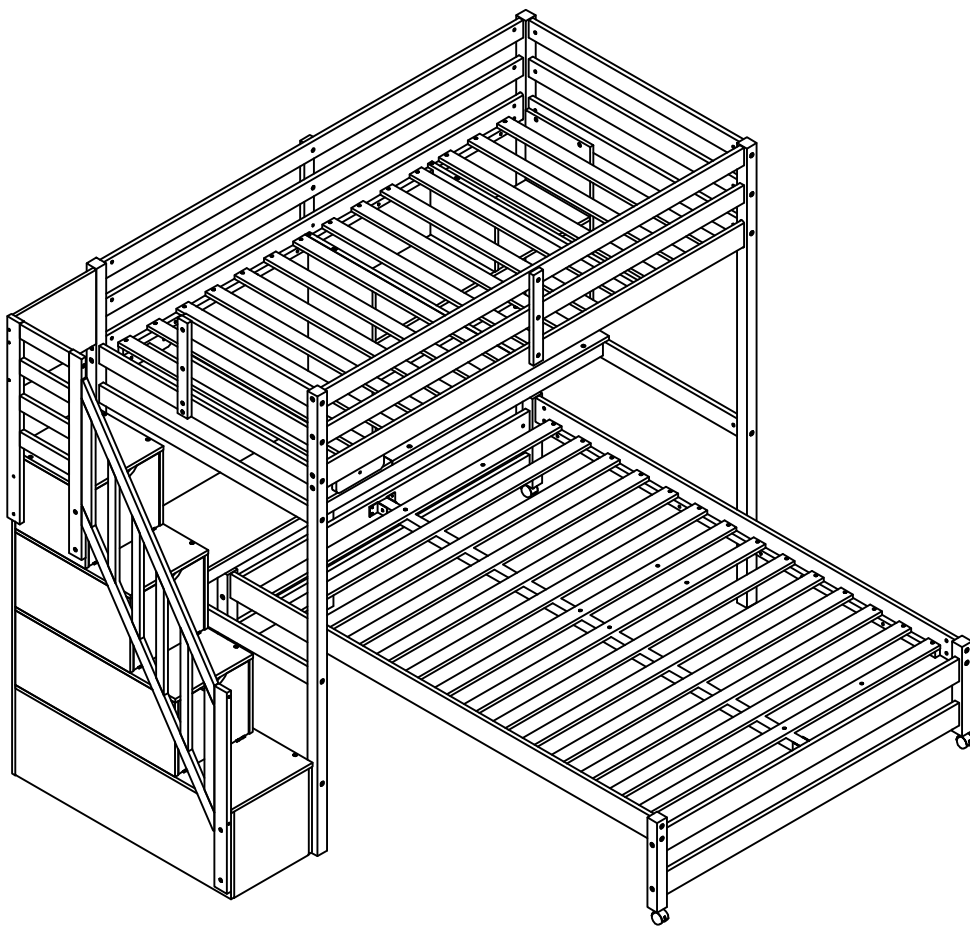

WF302686/302687/302688

SAFETY WARNINGS AND GENERAL NOTES:

Follow the information on the warnings on the bunk bed end structure and on the carton. Do not remove the warning label from the bed. Always use the recommended size mattress on mattress support, or both, to help prevent the likelihood of entrapment or falls.

The top surface of the mattress must be at least 5*inch (127mm) below the upper edge of the guardrail.

Do not allow children under 6 years of age to use the upper bunk.

Periodically check and ensure the guardrail, ladder and other components are in their proper position, free from damage, and all connectors are tight.

Do not allow horseplay on or under beds.

Always prohibit jumping on the bed.

Prohibit more than one person on upper bunk.

Always use the ladder for entering and leaving the upper bunk.

Do not use substitute parts. Contact the manufacturer or dealer for replacement parts.

Use of a night-light may provide added safety precaution for a child using the upper bunk.

Always use guardrails on both long sides of the upper bunk.

If the bunk bed will be placed next to a wall, the guardrail that runs the full length of the bed should be placed against the wall to prevent entrapment between the bed and the wall.

The use of water or sleep flotation mattresses is prohibited.

STRANGULATION HAZARD-Never attach or hang items to any part of the bunk bed that are not designed for use with the bed.

Keep these instructions for future reference.

We recommend assembling your bunk bed on the shipping carton to protect your floor or carpet.

Be certain all staples are out of the box before beginning assembly on the shipping carton.


THIS BED IS DESIGNED TO USE A TWIN MATTRESSES 38 1/2" WIDE X 74"-75" LONG WITH THE TOTAL THICKNESS NOT EXCEEDING 6" FOR UPPER BUNK, FOR THE LOWER FULL-SIZE SHOULD BE 54" WIDE X 74"-75" LONG, WIDE WITH 8" THICKNESS.

SURFACE OF MATTRESS MUST BE AT LEAST 5" (127MM) BELOW THE UPPER EDGE OF GUARDRAILS.

Replacement Parts:








Replacement Parts, including additional guardrails, may be obtained from any of our (GIGACLOUD TECHNOLOGY (USA) INC. 18961 ARENTH AVENUE, CITY OF INDUSTRY , CA, 91748.) dealers

Detail View

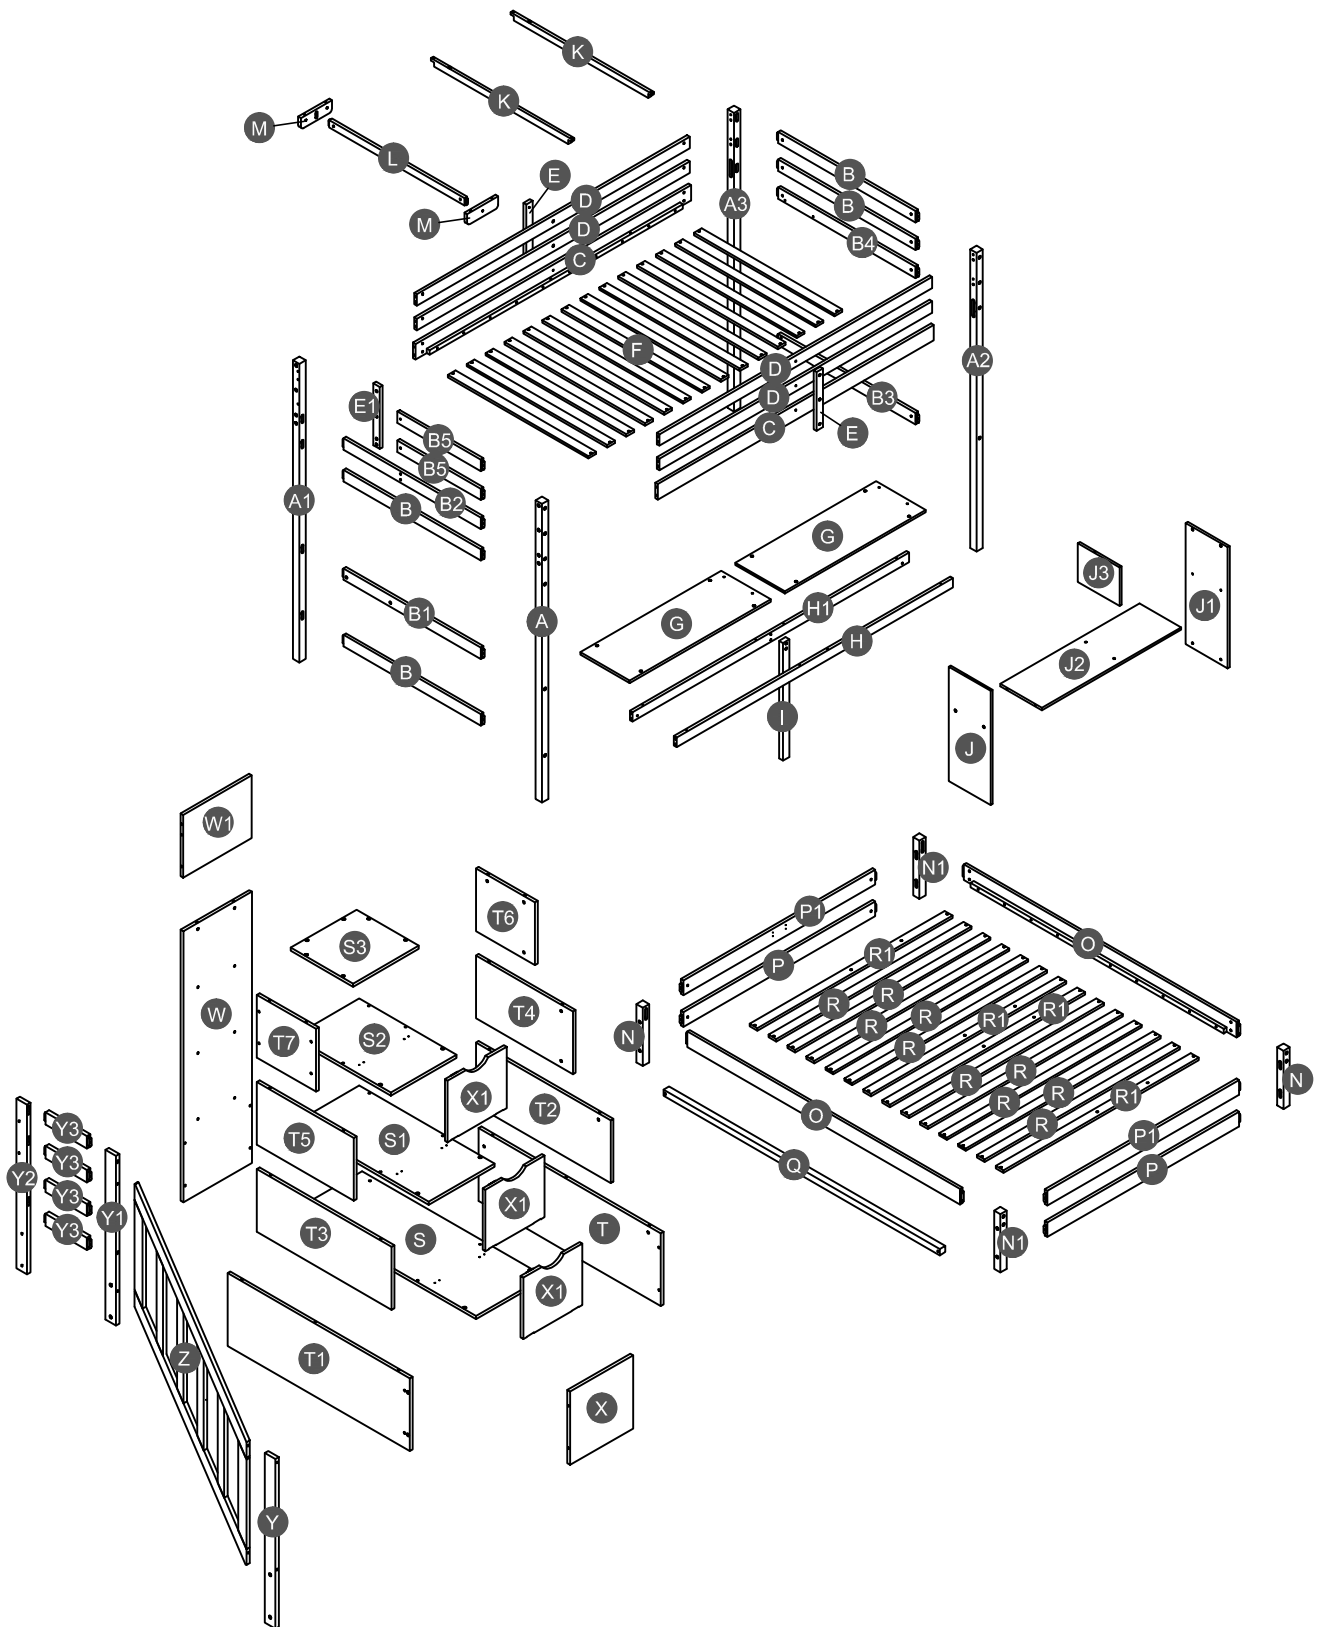









Part List

Hardware List WF302686

A  Leg (Left Front) - 1pc	A1  Leg (Left Back) - 1pc	A2  Leg (Right Front) - 1pc
A3  Leg (Right Back) - 1pc	C  Upper side rail - 2pcs	D  Upper long guard rail - 4pcs
H  Horizontal bar (Front) - 1pc	H1  Horizontal bar (Back) - 1pc	N  Leg (Left Front/Right Back) - 2pcs
N1  Leg (Left Back/Right Front) - 2pcs	O  Lower side rail (front-back) - 2pcs	P  Horizontal bar HB/FB - 2pcs
P1  Horizontal bar HB/FB - 2pcs	Q  Lower support slat - 1pc	R  Lower slat - 10pcs
R1  Lower slat - 4pcs	Y  Vertical guard rail - 1pc	Y1  Vertical guard rail - 1pc
Y2  Vertical guard rail - 1pc	Y3  Horizontal bar - 4pcs	Z  Guard rail - 1pc








Part List

WF302687







E1  Vertical guard rail - 1pc	G  Top panel (Back) - 2pcs	I  Support - 1pc
S  Lower step ladder panel -1pc	S2  Upper center step ladder panel -1pc	S3  Upper step ladder panel -1pc
T  Lower right side panel - 1pc	T1  Lower left side panel - 1pc	T2  Center right side panel - 1pc
T3  Center left side panel - 1pc	T5  Upper center left side panel - 1pc	T6  Upper right side panel - 1pc
T7  Upper left side panel - 1pc	W  Back panel - 1pc	W1  Upper back panel - 1pc
X  Lower front panel - 1pc	X1  Upper front panel - 3pcs	

Part List

WF302688


B  Horizontal bar HB/FB - 4pcs	B1  Horizontal bar HB - 1pc	B2  Horizontal bar HB - 1pc
B3  Lower horizontal bar FB - 1pc	B4  Divider horizontal bar FB - 1pc	B5  Upper horizontal bar HB - 2pcs
E  Vertical guard rail - 2pcs	F  Slat - 14pcs	J  Side panel (Left) - 1pc
J1  Side panel (Right) - 1pc	J2  Shelf panel - 1pc	J3  Divider panel - 1pc
K  Upper support - 2pcs	L  Upper horizontal bar - 1pc	M  Upper support - 2pcs
S1  Lower center step ladder panel -1pc	T4  Upper center right side panel - 1pc	

Hardware List WF302686

1  Ø10*40mm Wood dowel (8pcs)	2  Ø8*30mm Wood dowel (24pcs)	3  (Ø15)1/4"*100mm Hex-Head bolts (24pcs)
4  (Ø15)1/4"*80mm Hex-Head bolts (34pcs)	5  (Ø12)1/4"*70mm Hex-Head bolts (4pcs)	6  (Ø12)1/4"*60mm Hex-Head bolts (40pcs)
7  (Ø12)1/4"*40mm Hex-Head bolts (2pcs)	8  (Ø12)1/4"*35mm Hex-Head bolts (2pcs)	9  (Ø12)1/4"*30mm Hex-Head bolts (22pcs)
10  (Ø12)1/4"*65mm Hex-Head bolts (4pcs)	11  (Ø12)1/4"*40mm Hex-Head bolts (14pcs)	12  1/4"*15 (9.5mm) Horizontal-Hole bolts(102pcs)
13  Ø4*30mm Wood screws (60pcs)	14  (1/4")4.5*58mm Allen key (2pcs)	15  Ø4*15mm Wood screws (20pcs)
16  Ø3.5*12mm Wood screws (24pcs)	17  64*52*95mm Castor (2pcs)	18  64*52*95mm Castor (2pcs)
19  (Ø13)1/4"*14mm Connect bolt (2pcs)	20  116*40*27mm Metal bracket (2pcs)	21  40*18*18*1.6mm Metal bracket (3pcs)
22  42*12*1mm Metal magnet (3pcs)	23  45*17*13mm Door catch (3pcs)	




ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)




PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE
POSITION WHEN YOU USE POWER TOOLS !

STEP 1:

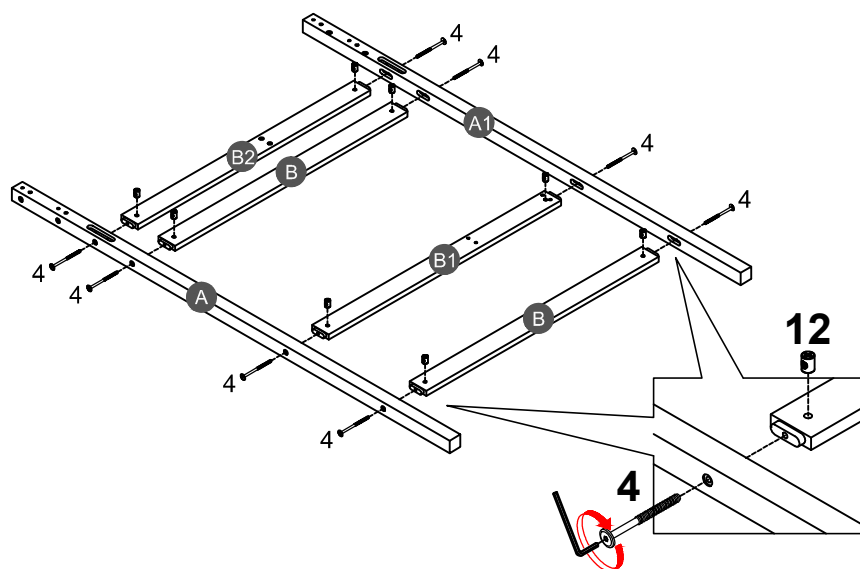


4		12	
8PCS		8PCS	

Note: Part 12 will face up with the "x" mark on it, otherwise it cannot be tightened

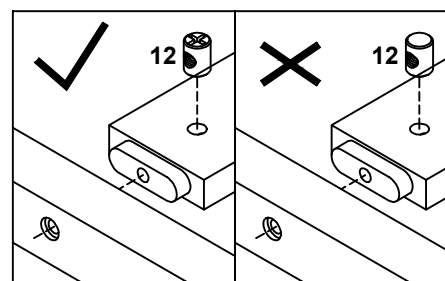


STEP 2:

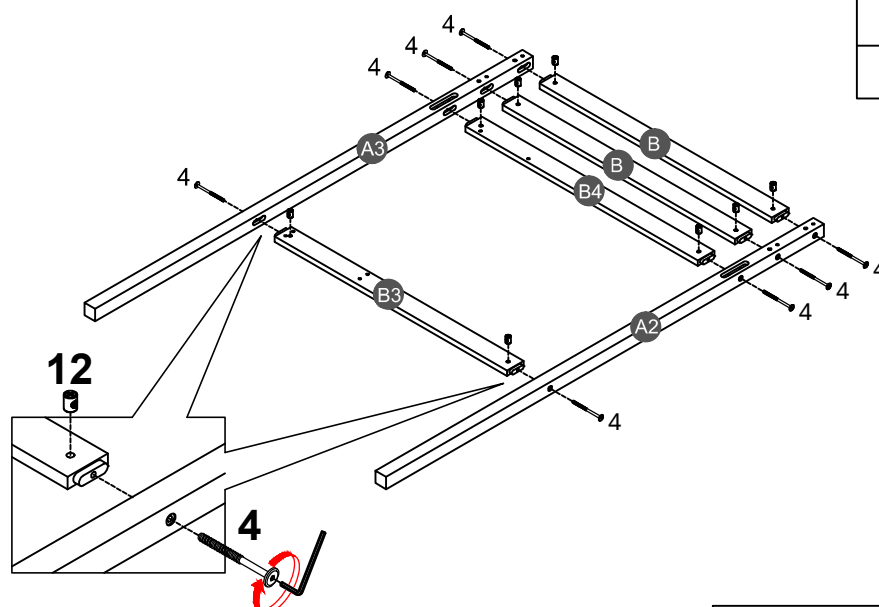


4		12	
8PCS		8PCS	

Note: Part 12 will face up with the "x" mark on it, otherwise it cannot be tightened

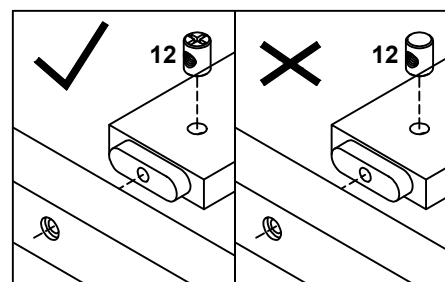


STEP 3:

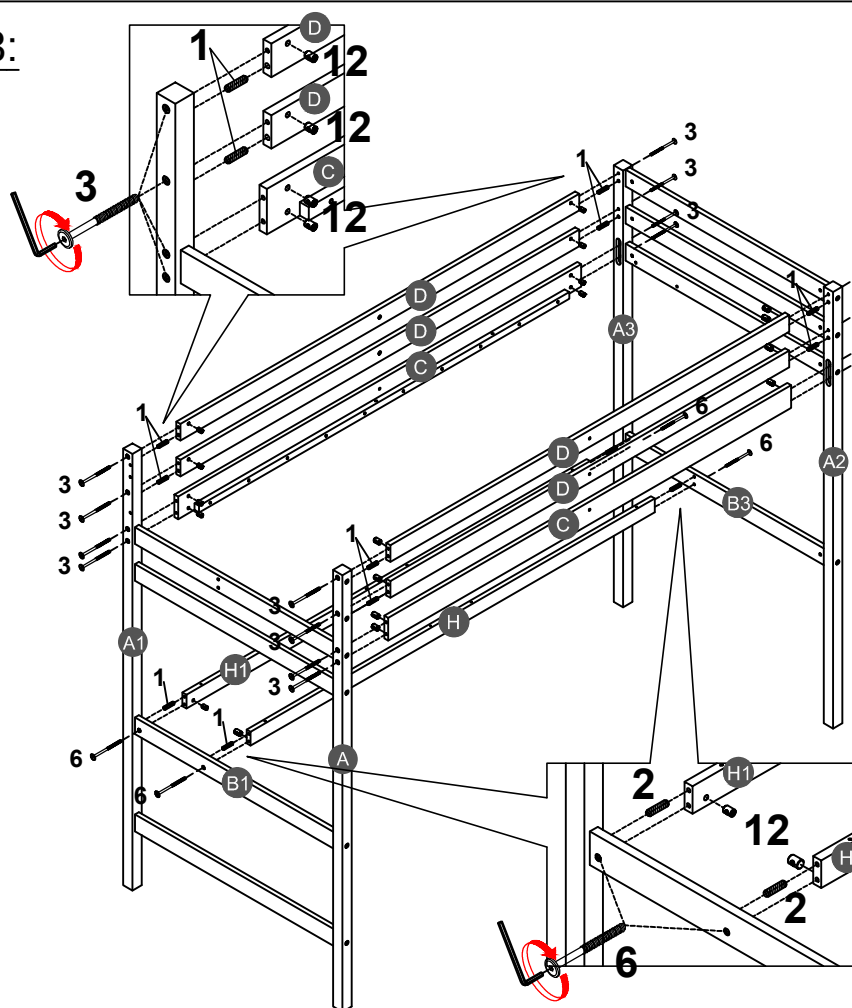


1		2	
8PCS		4PCS	
3		16PCS	
6		4PCS	
12		20PCS	

STEP 4:

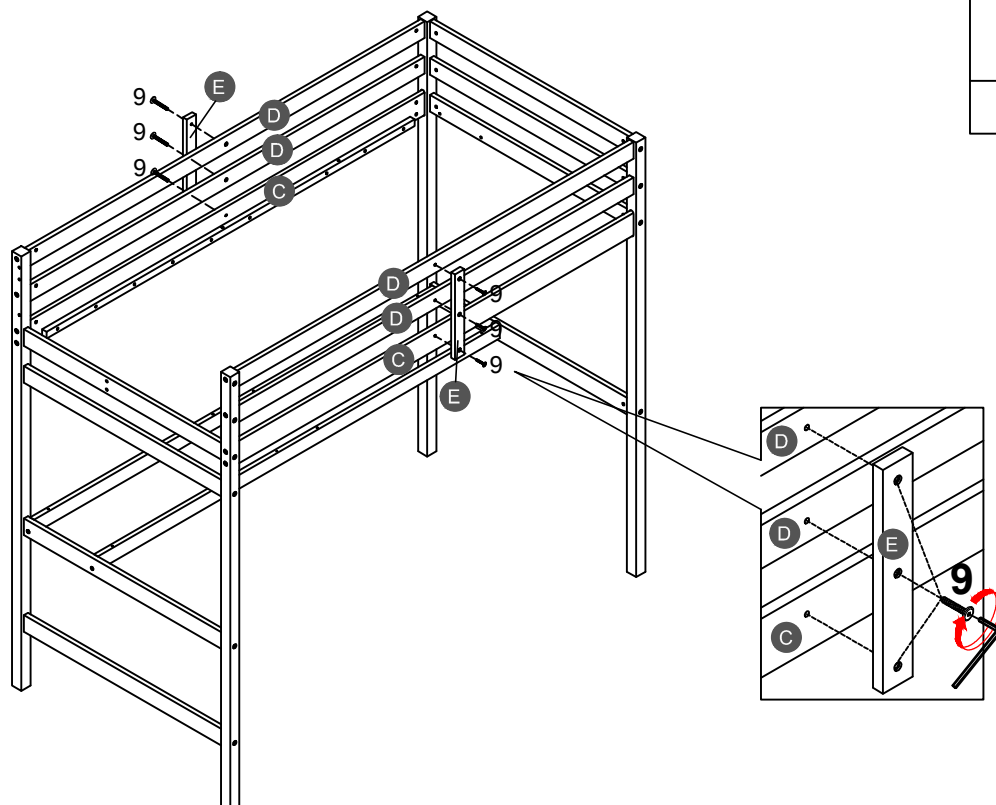


9	
6PCS	

STEP 5:

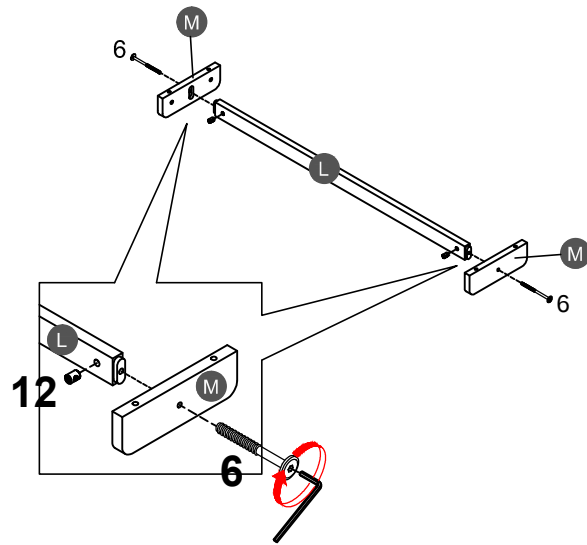


6		12	
2PCS		2PCS	

STEP 6:

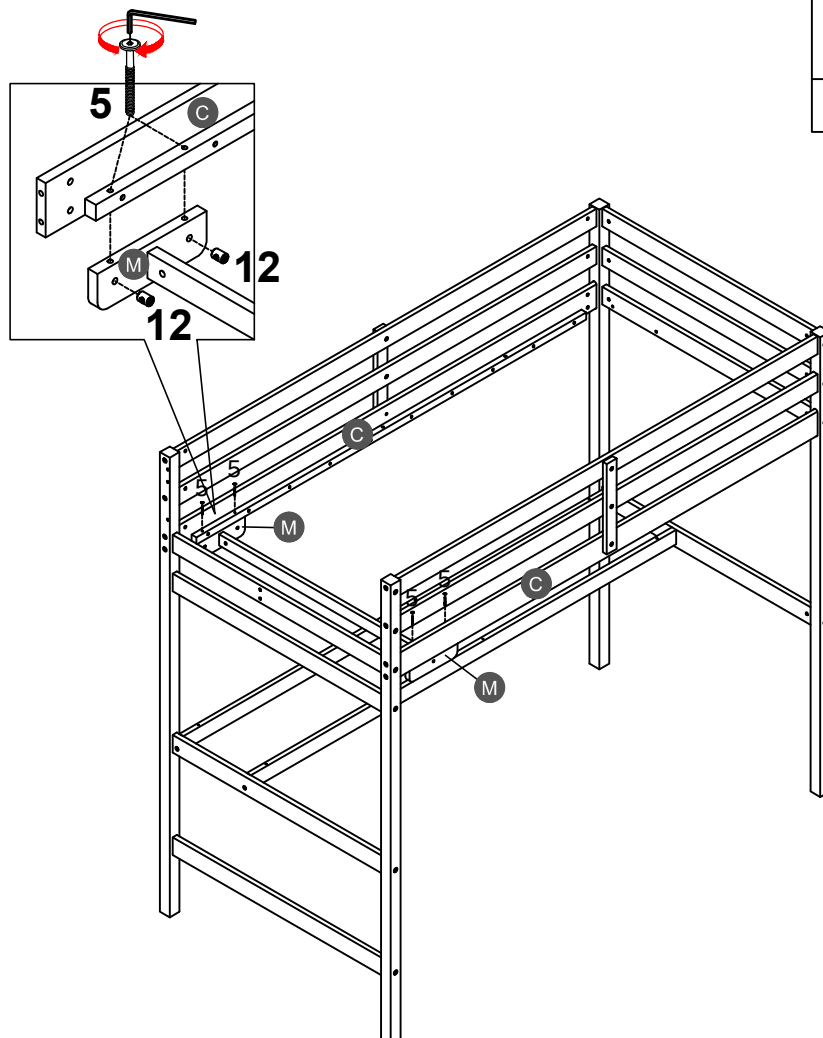


5		12	
4PCS		4PCS	

STEP 7:

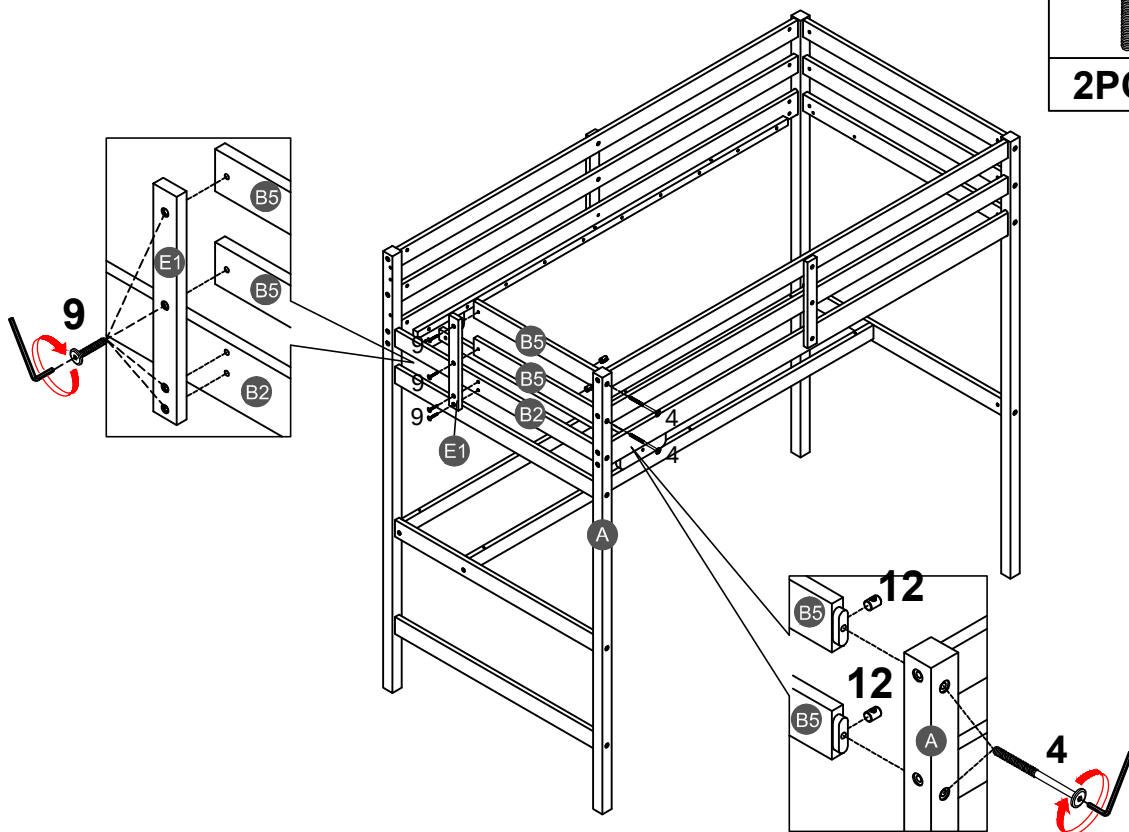

4		9	
2PCS		4PCS	
		12	
		2PCS	

STEP 8:

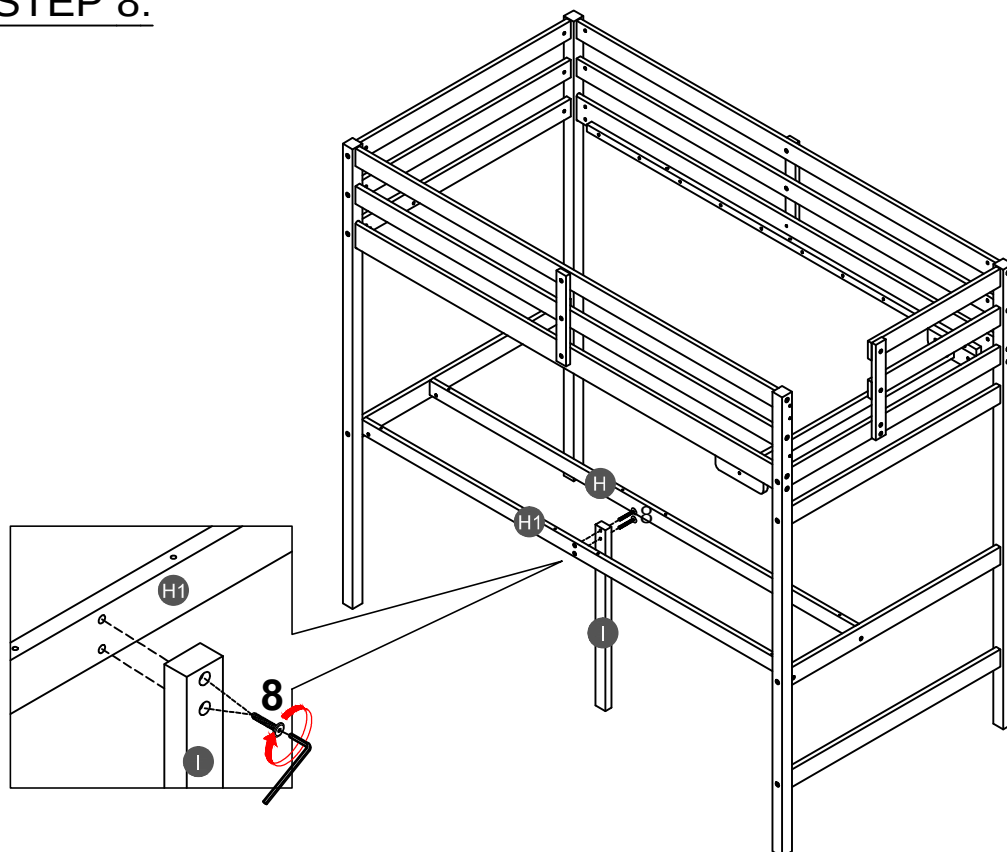


8	
2PCS	

STEP 9:

11



8PCS

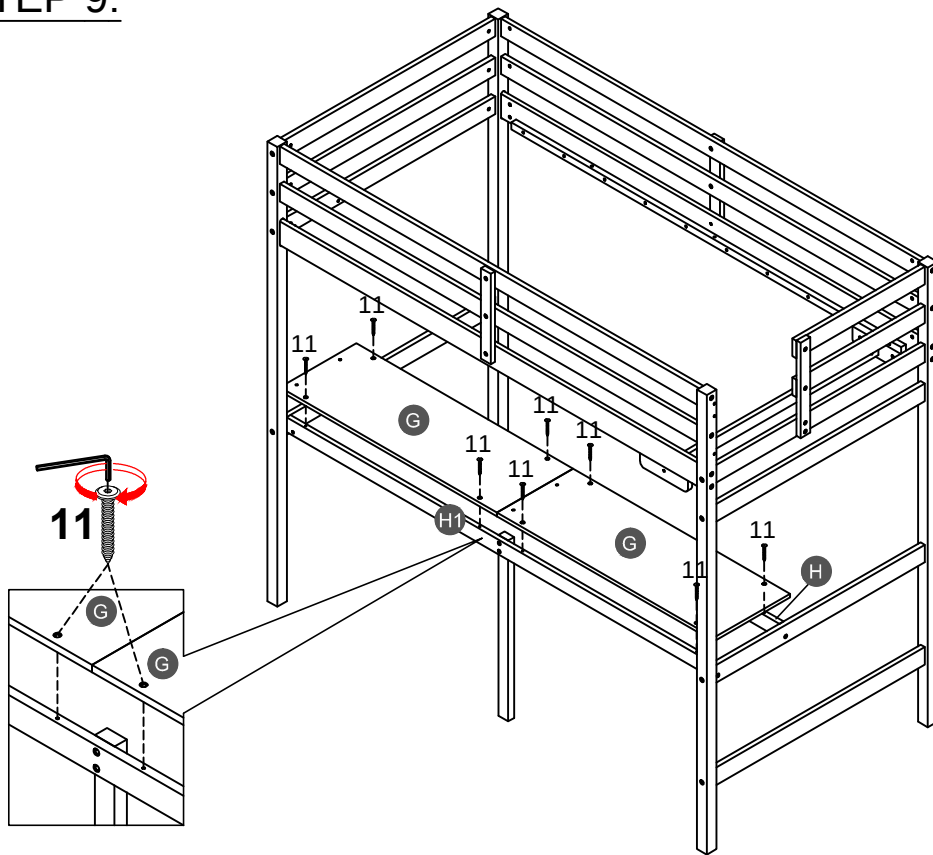

STEP 10:

6




6PCS


12




6PCS

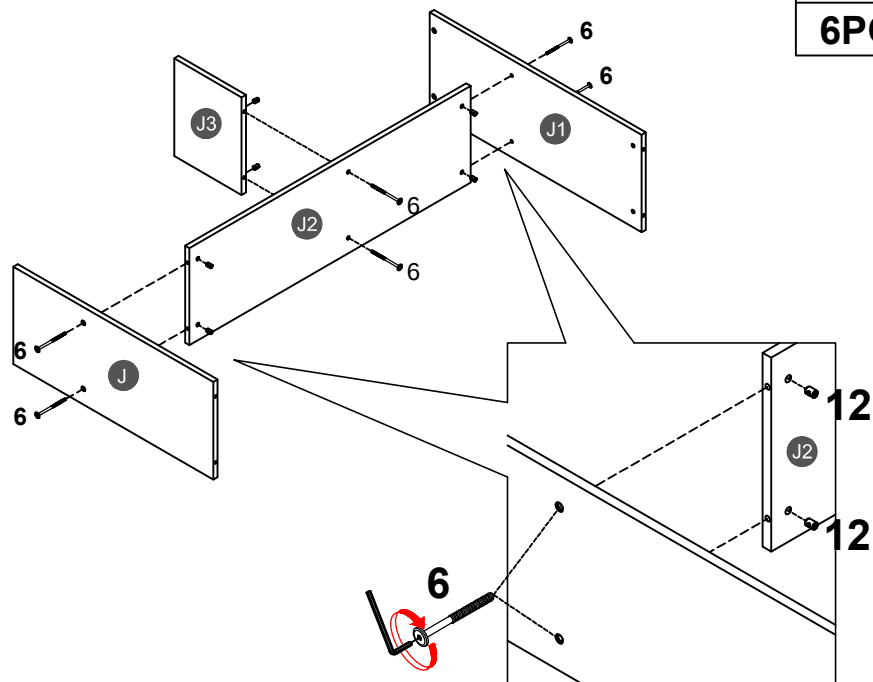


STEP 11:

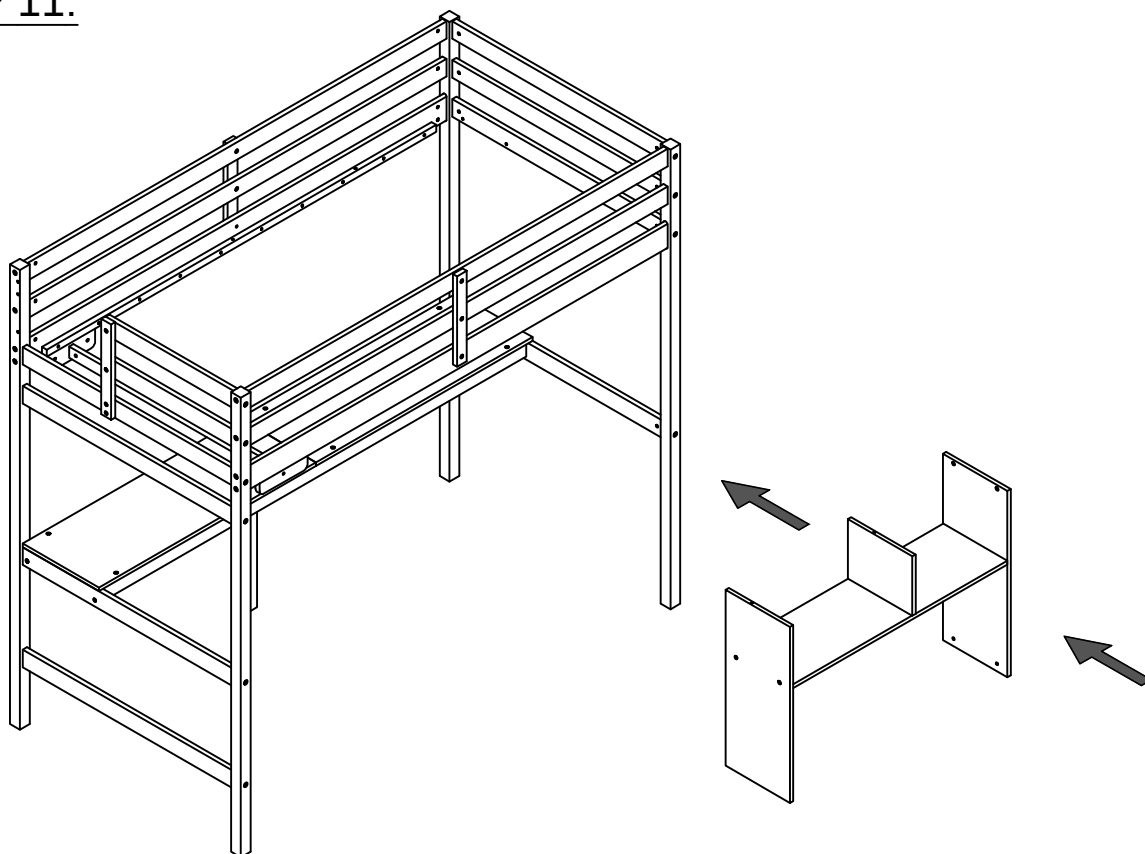



STEP 12:

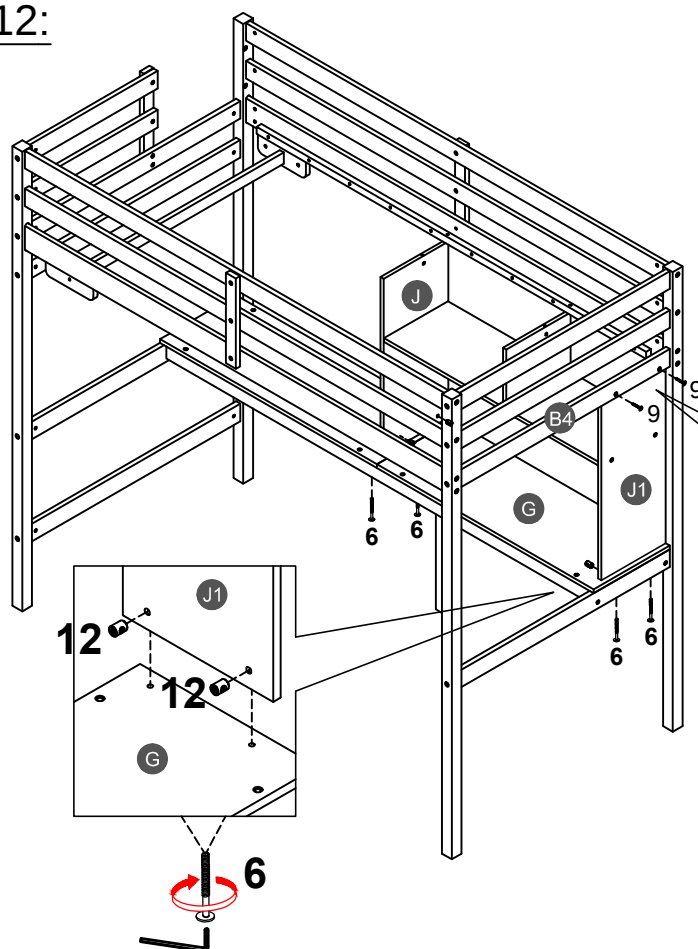

6		12	
4PCS		4PCS	
		9	
		2PCS	

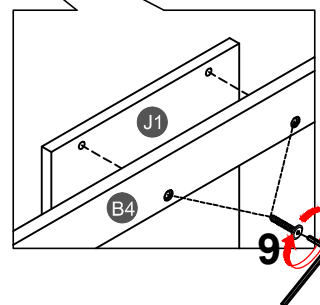

STEP 13:

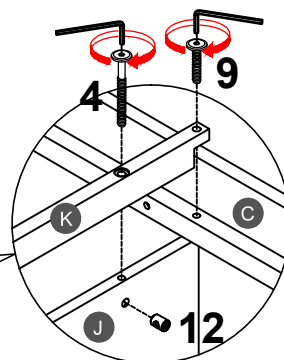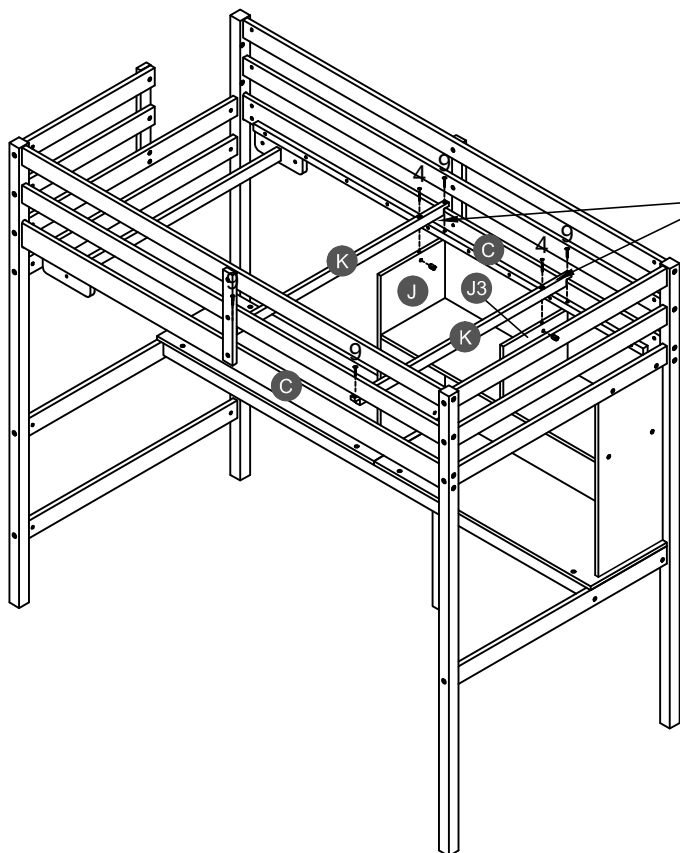

4



2PCS

9




4PCS

12



2PCS

STEP 14:

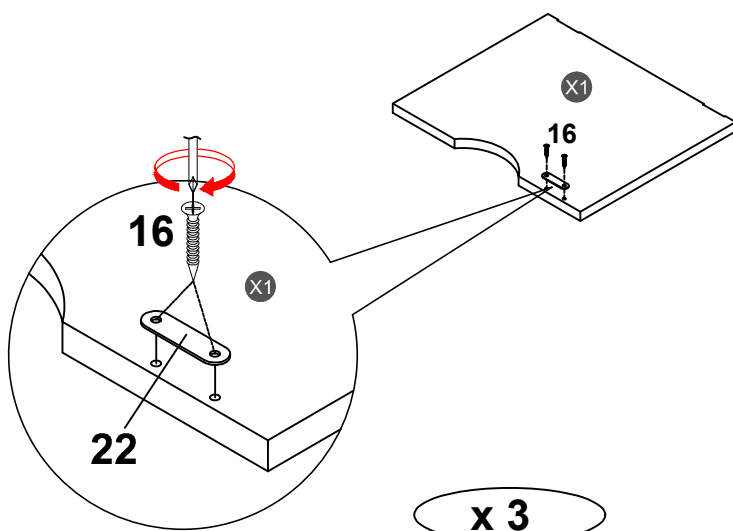

16




6PCS


22




3PCS


STEP 15:

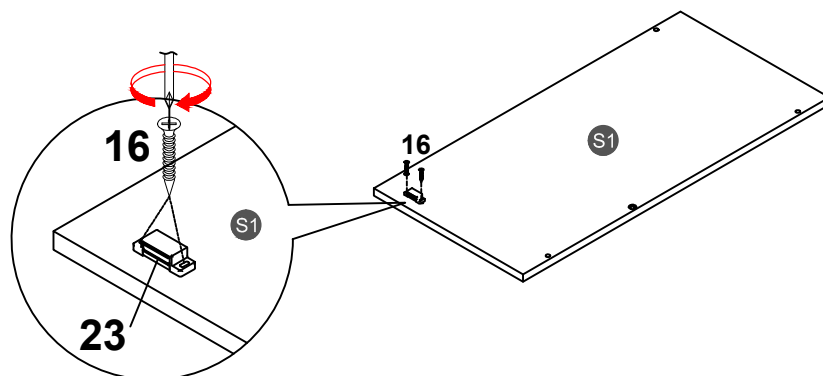


16	23
	
2PCS	1PC


STEP 16:

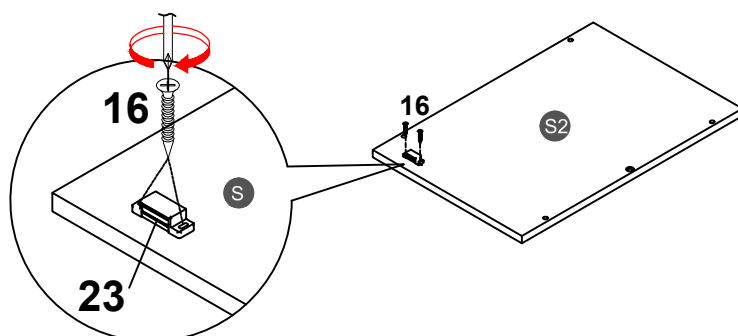


16	23
	
2PCS	1PC

STEP 17:

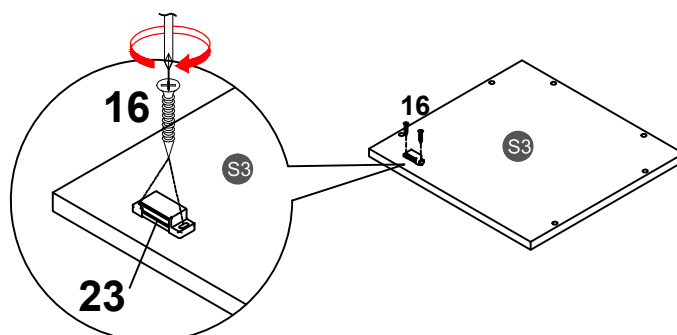


16	23
	
2PCS	1PC

STEP 18:

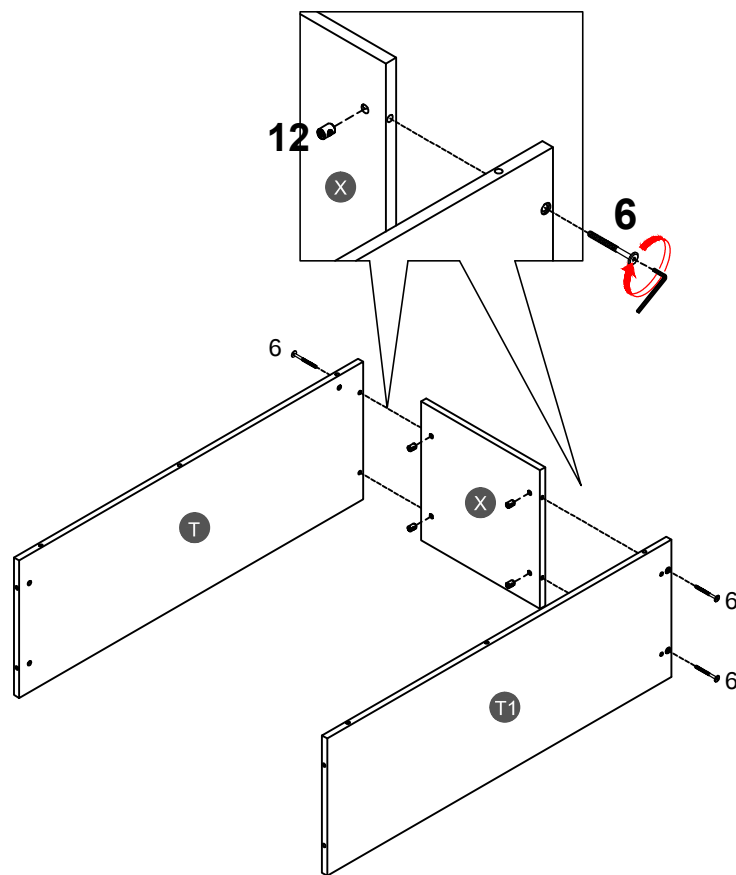

6		12	
4PCS		4PCS	


STEP 19:

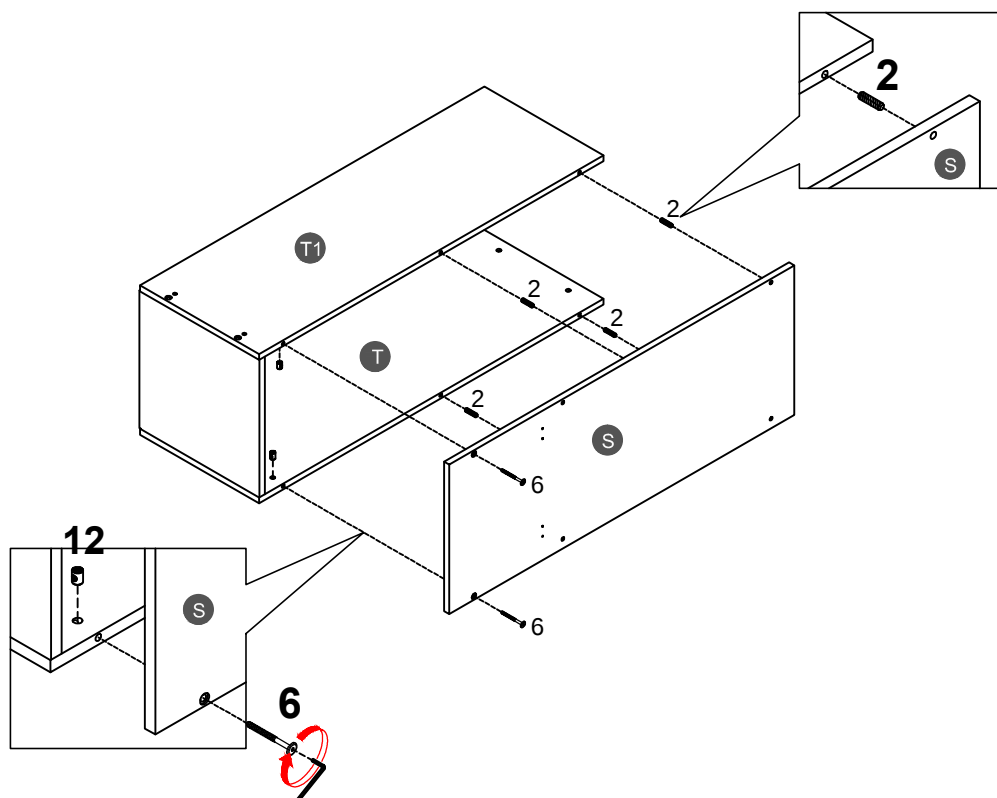

2		6		12	
4PCS		2PCS		2PCS	


STEP 20:

2		6		12	
3PCS		1PC		1PC	

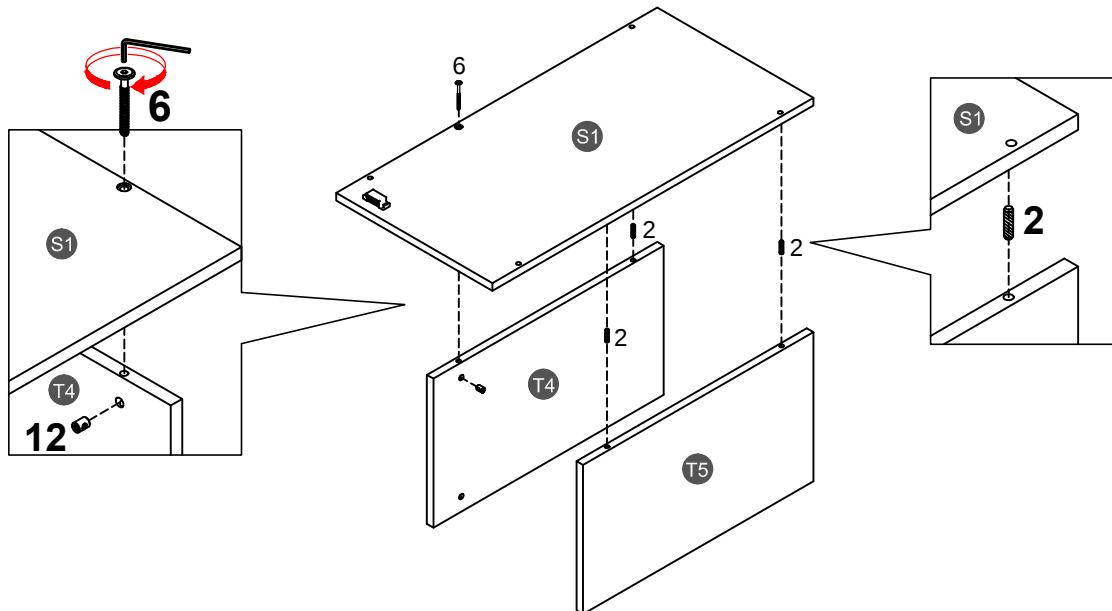


STEP 21:

6		12	
4PCS		4PCS	

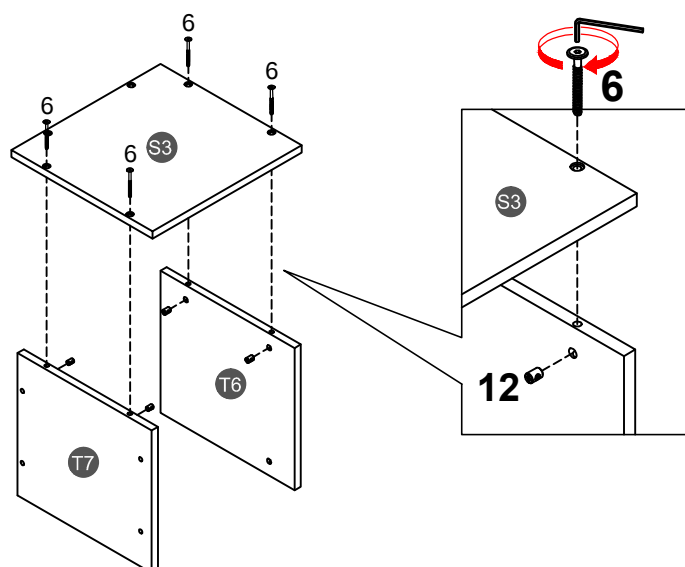

STEP 22:

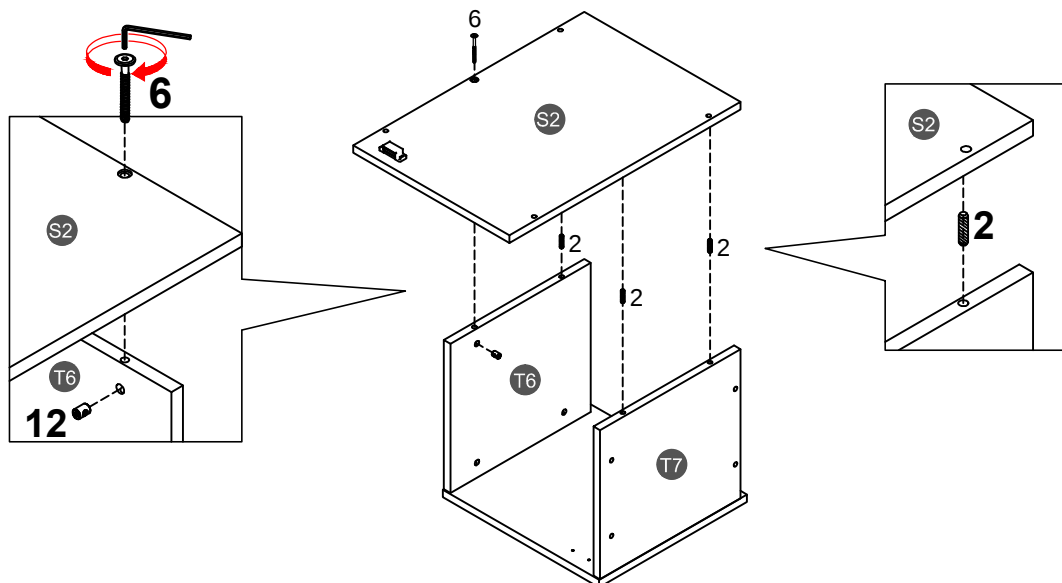

2



3PCS

6




1PC

12



1PC

STEP 23:

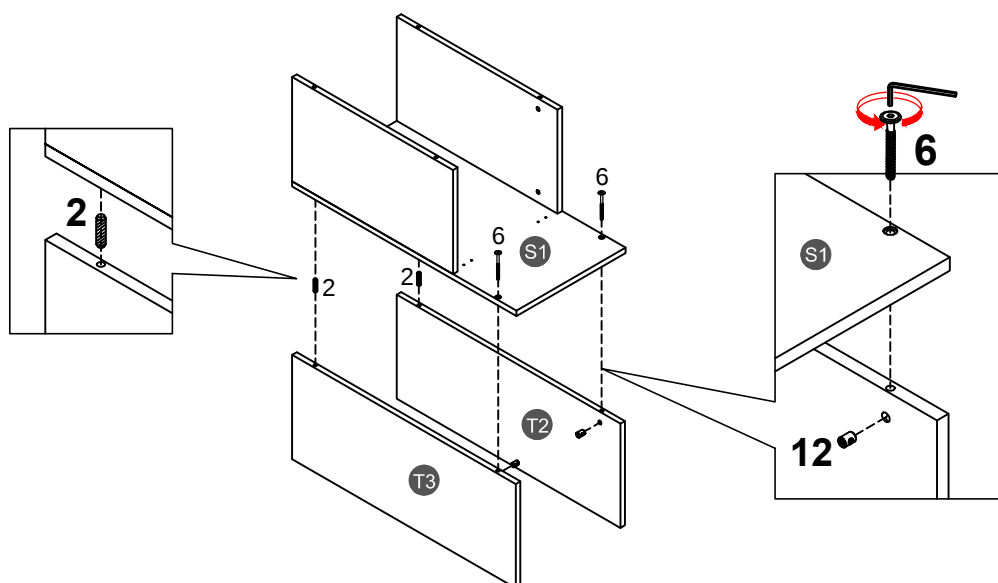

2



2PCS

6




2PCS

12




2PCS

STEP 24:

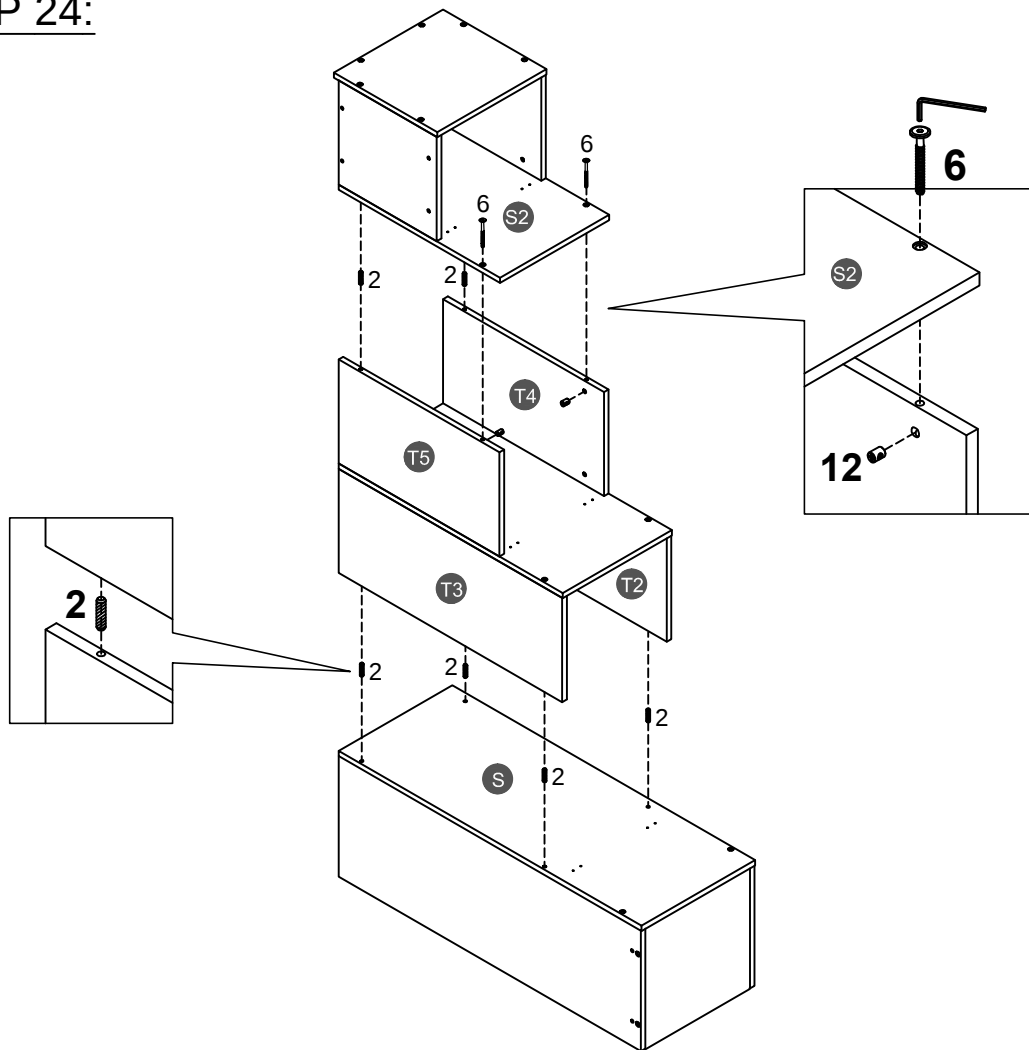

2	
6PCS	
6	
2PCS	
12	
2PCS	

STEP 25:

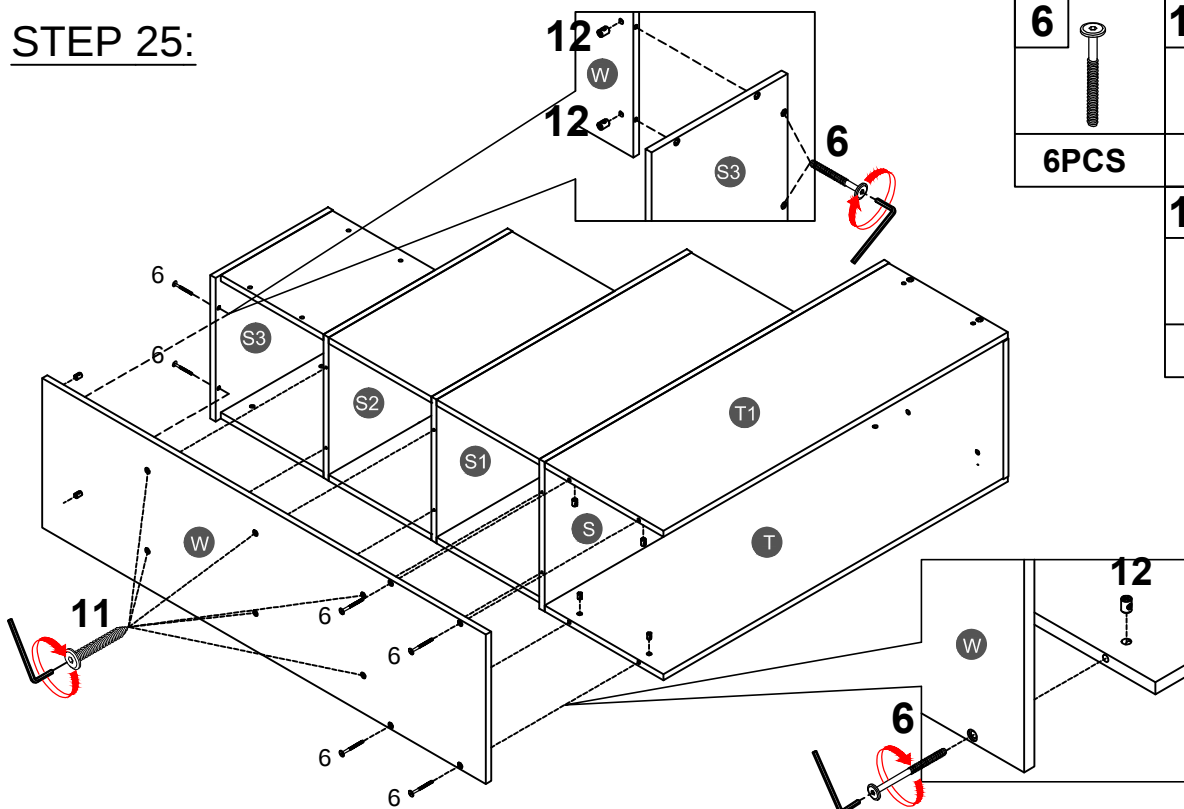


6		11	
6PCS		6PCS	
12		6PCS	

STEP 26:

16



12PCS

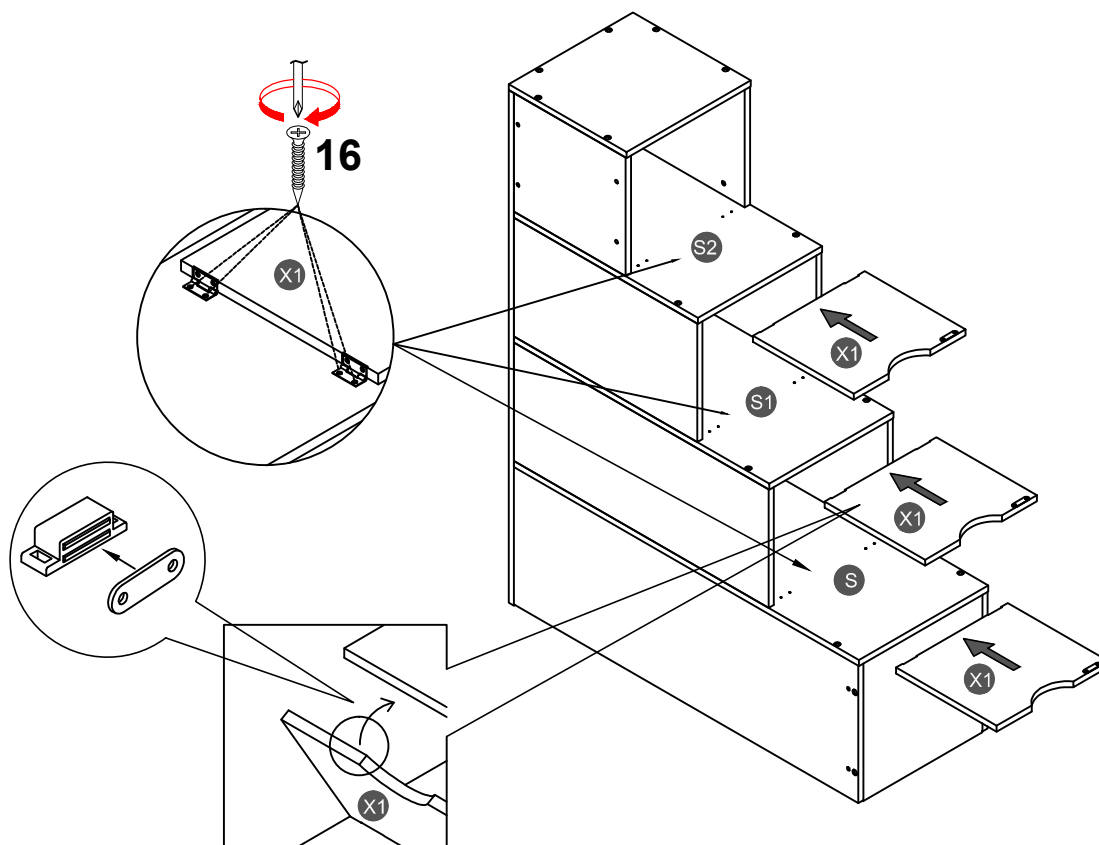


STEP 27:


10



4PCS

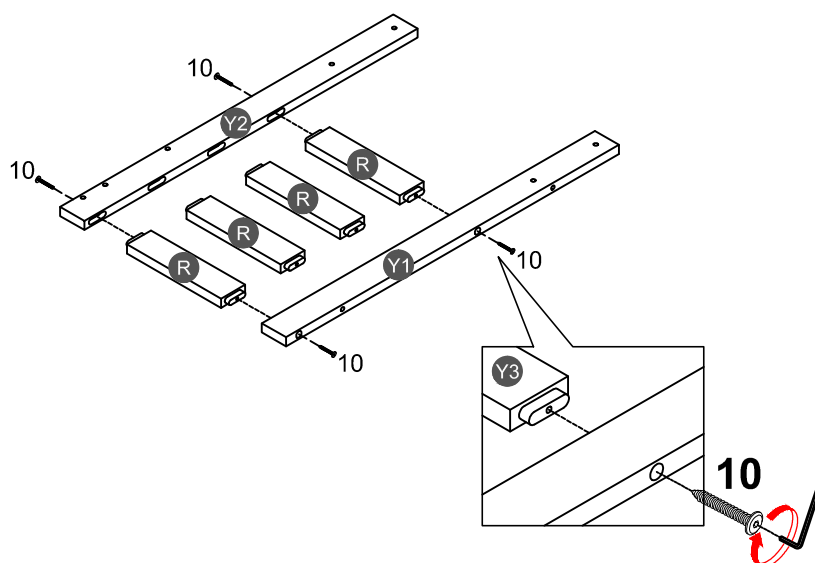


STEP 28:

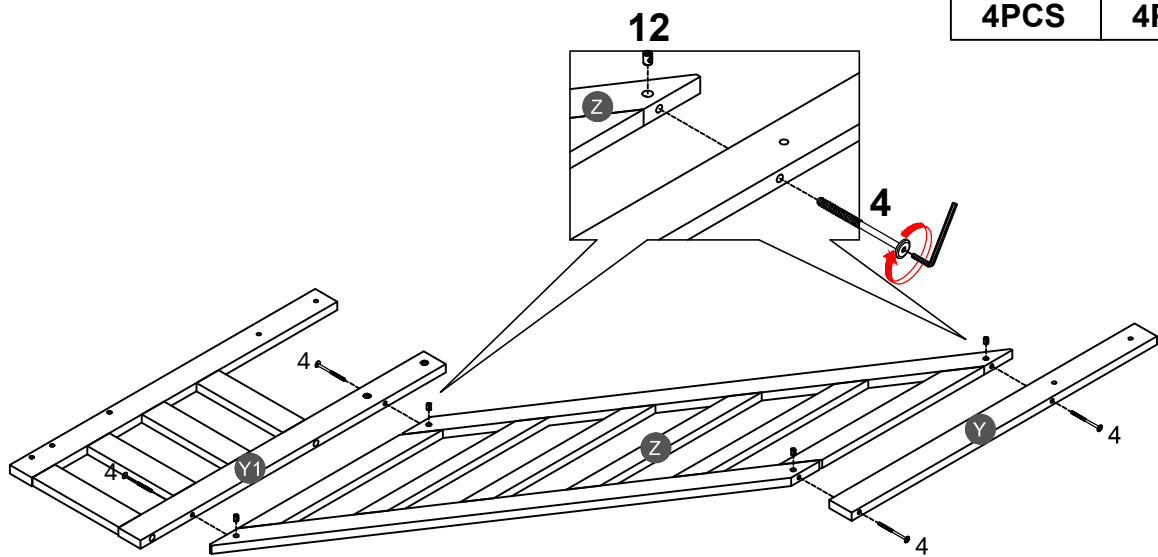


4		12	
4PCS		4PCS	

STEP 29:

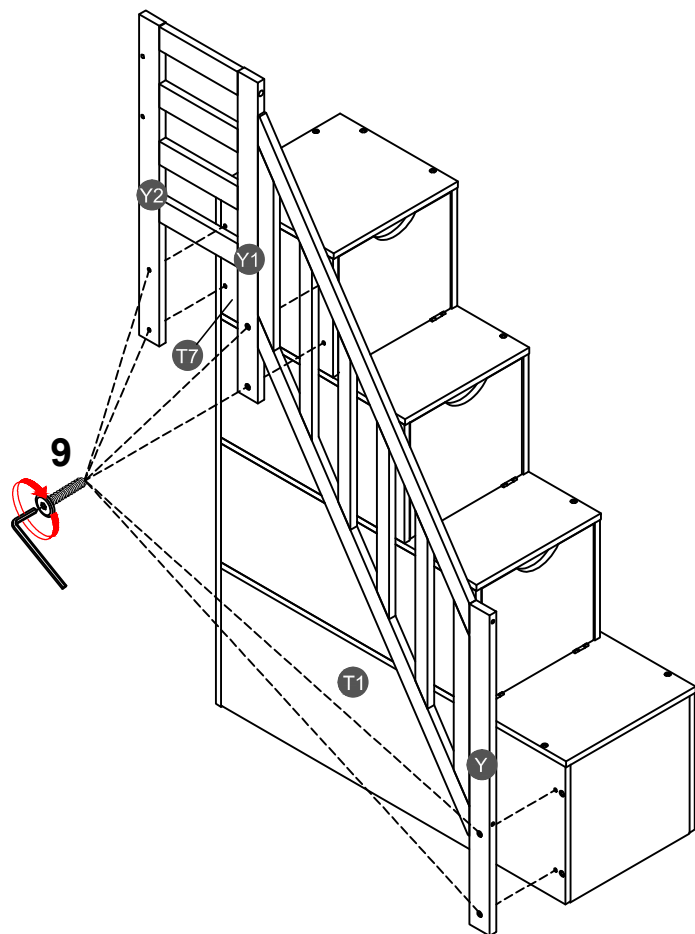


9	
6PCS	


STEP 30:

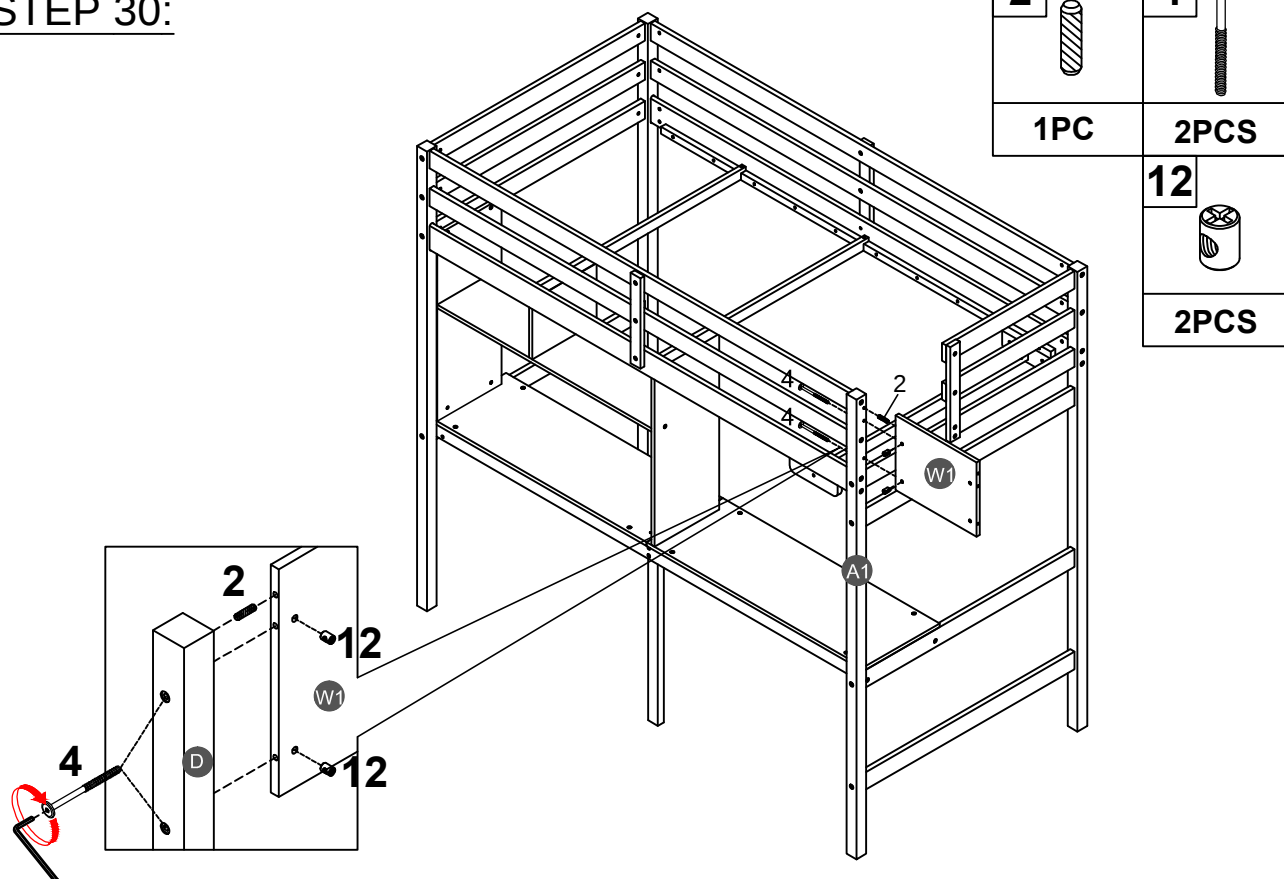

STEP 31:

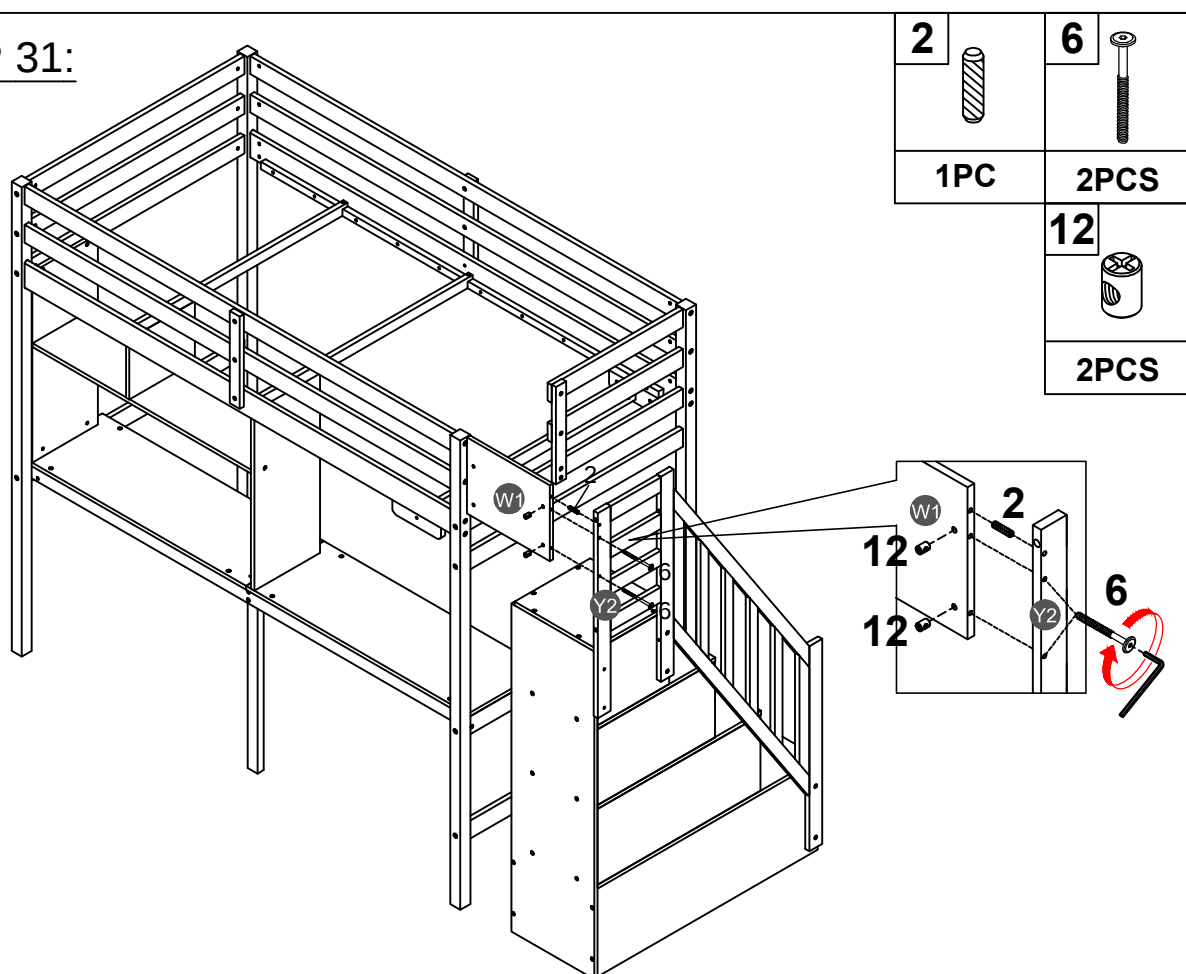


STEP 32:

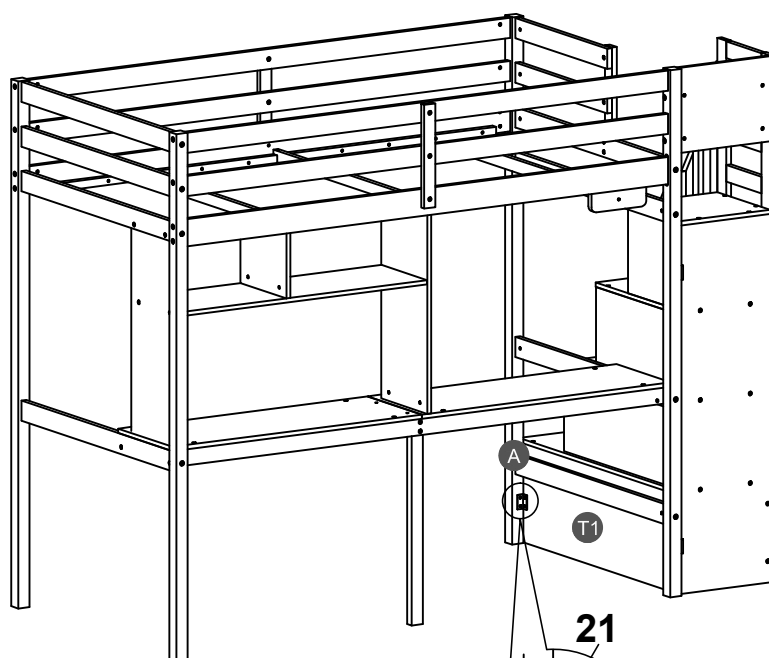

15		21	
4PCS		1PC	

STEP 33:

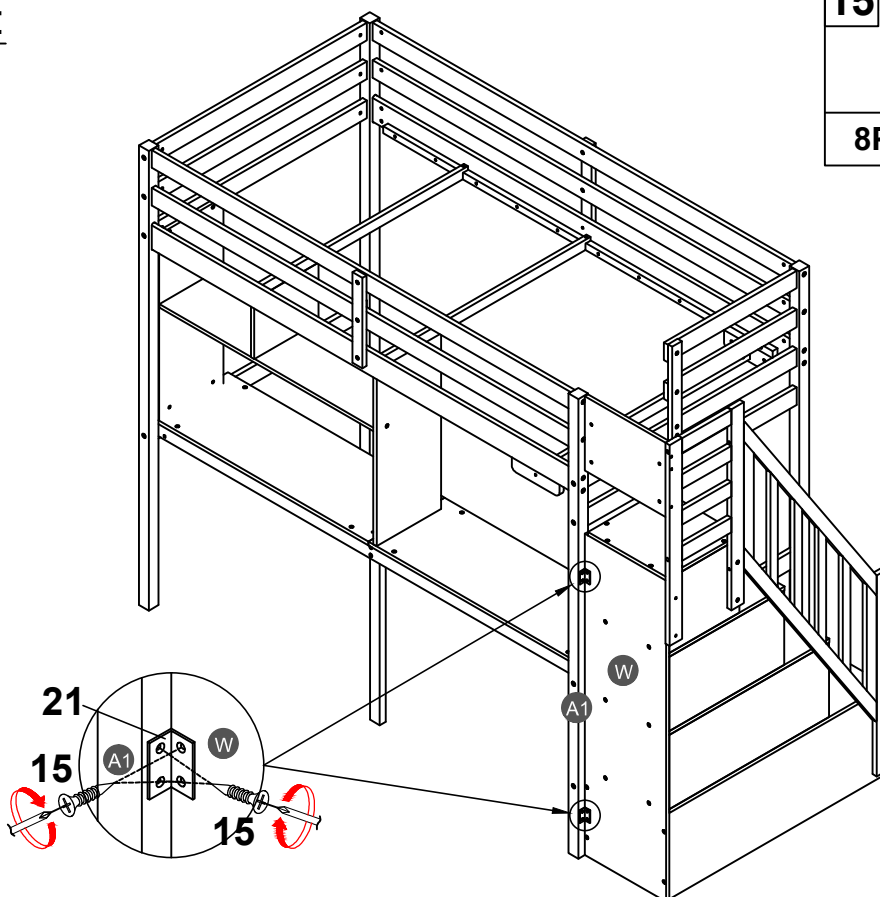



15		21	
8PCS		2PCS	

STEP 34:


13



28PCS

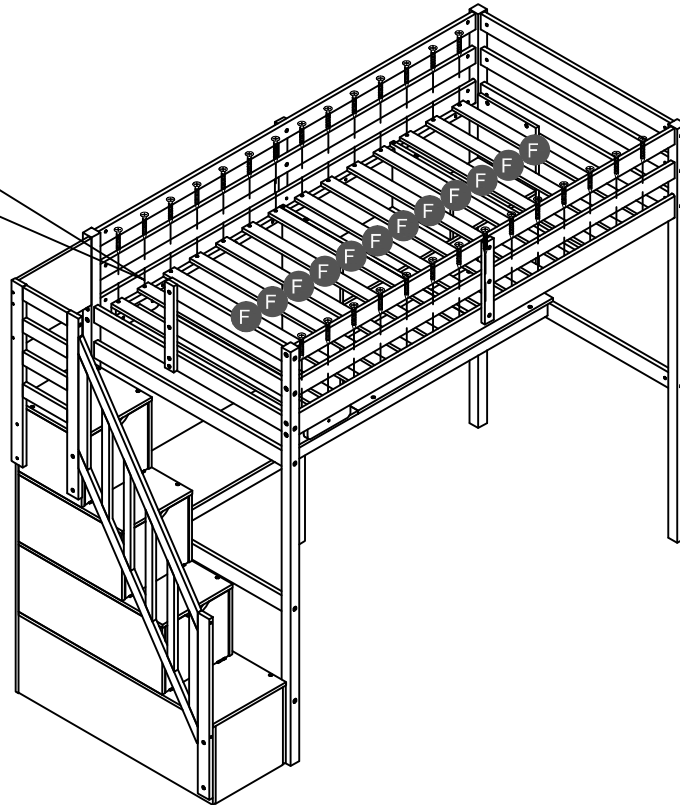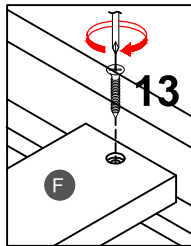

3.1 " 79mm 3.3 " 84.5mm 2.4 " 61mm

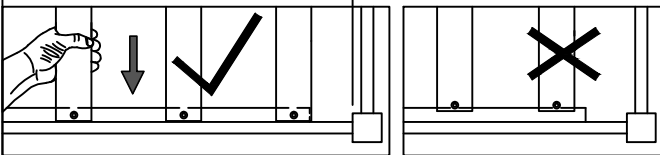

Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break. Do not lock the bed slats on the edge of the wood, please hold firmly before screwing , hold it in place with one hand, then lock the screw.

STEP 35:

17




2PCS


18



2PCS

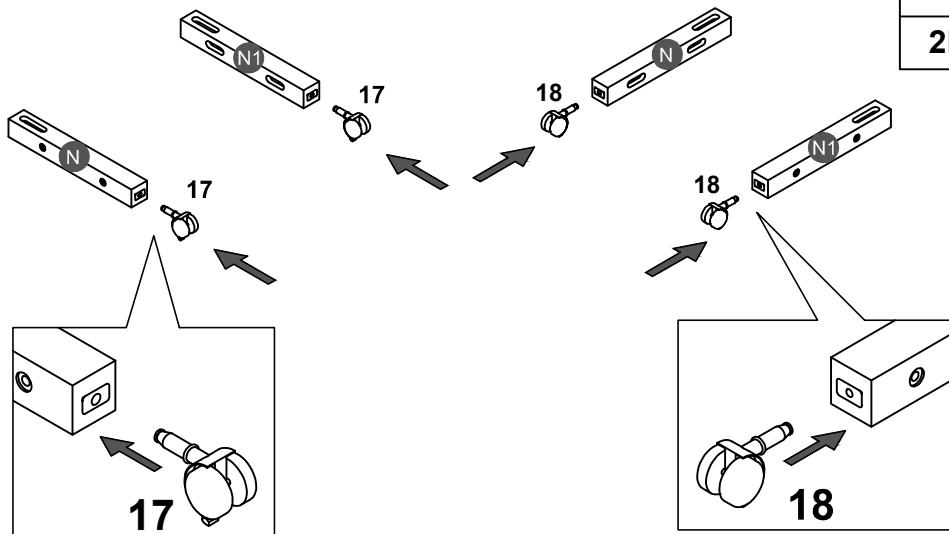


STEP 36:

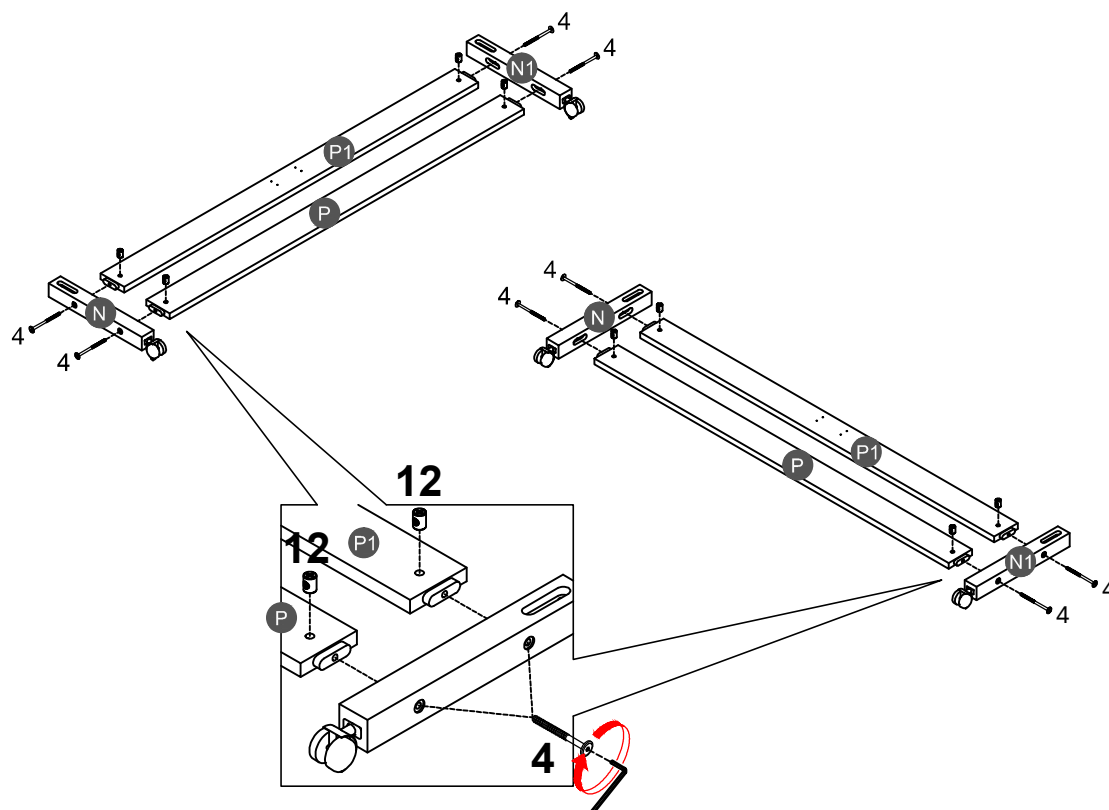


4		12	
8PCS		8PCS	

STEP 37:

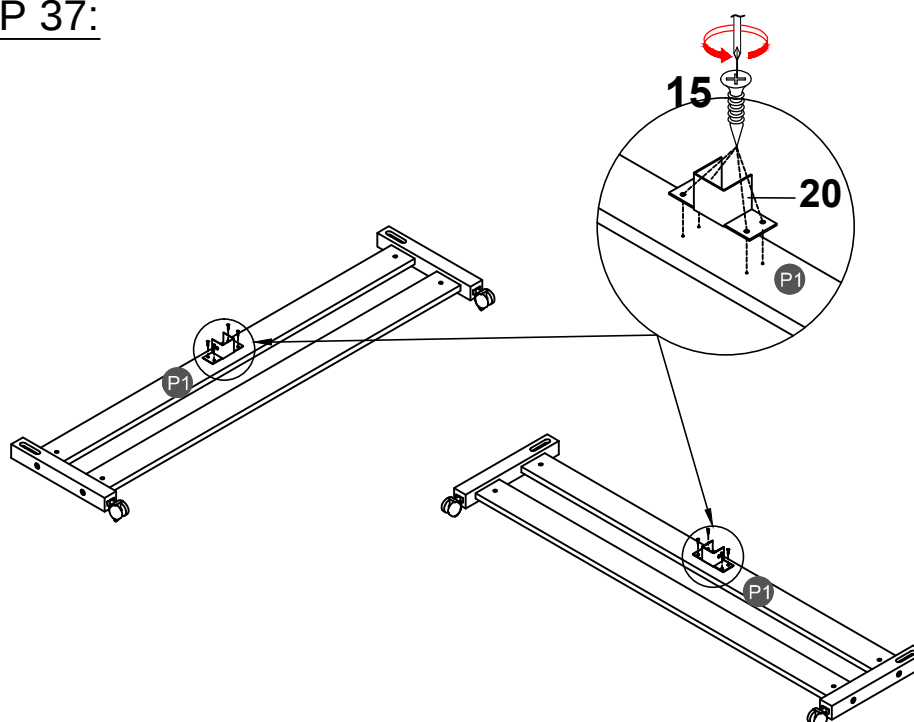


15		20	
8PCS		2PCS	

STEP 38:

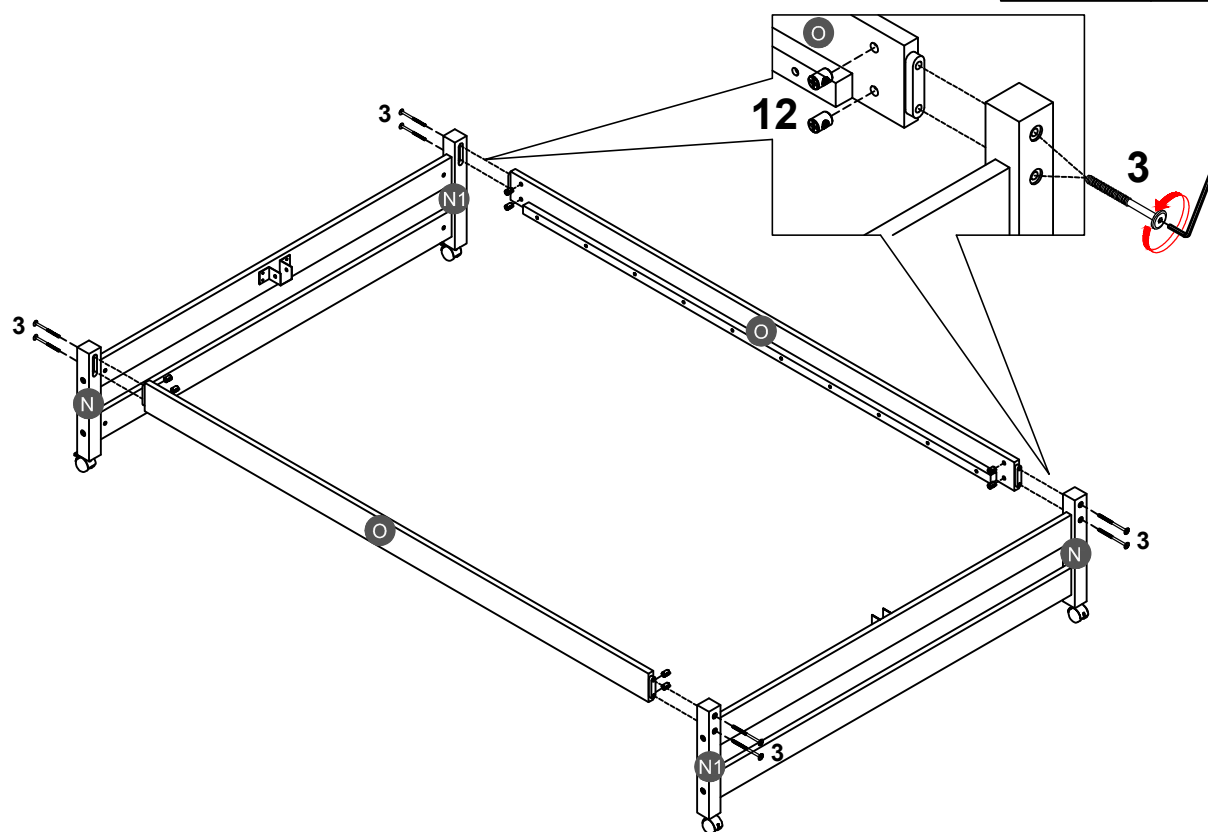

STEP 39:

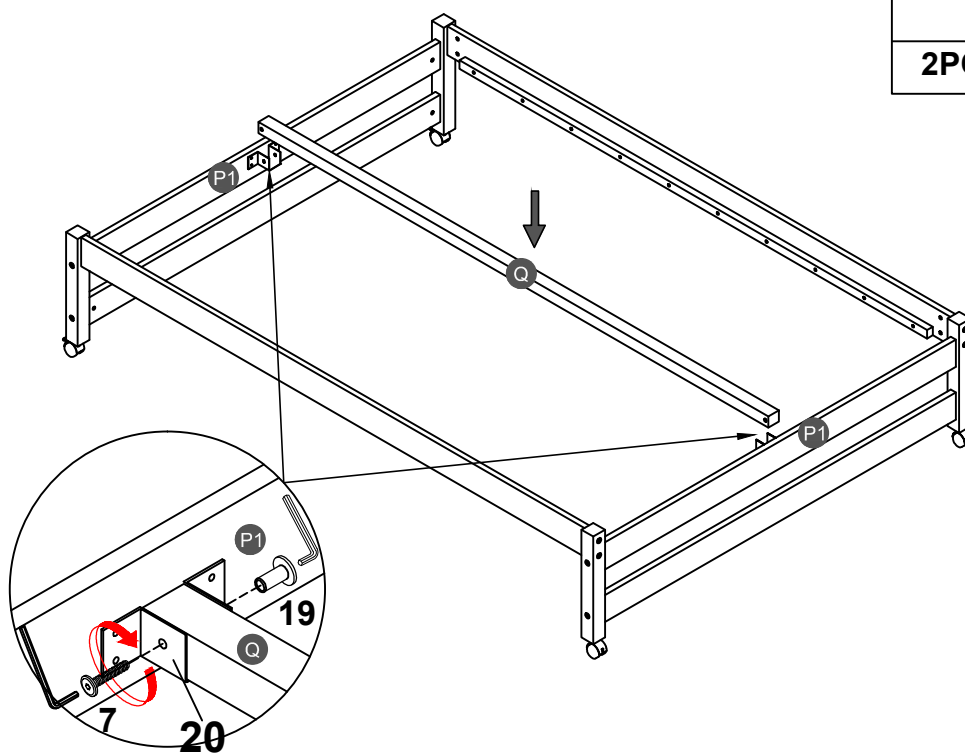


STEP 40:


13



32PCS

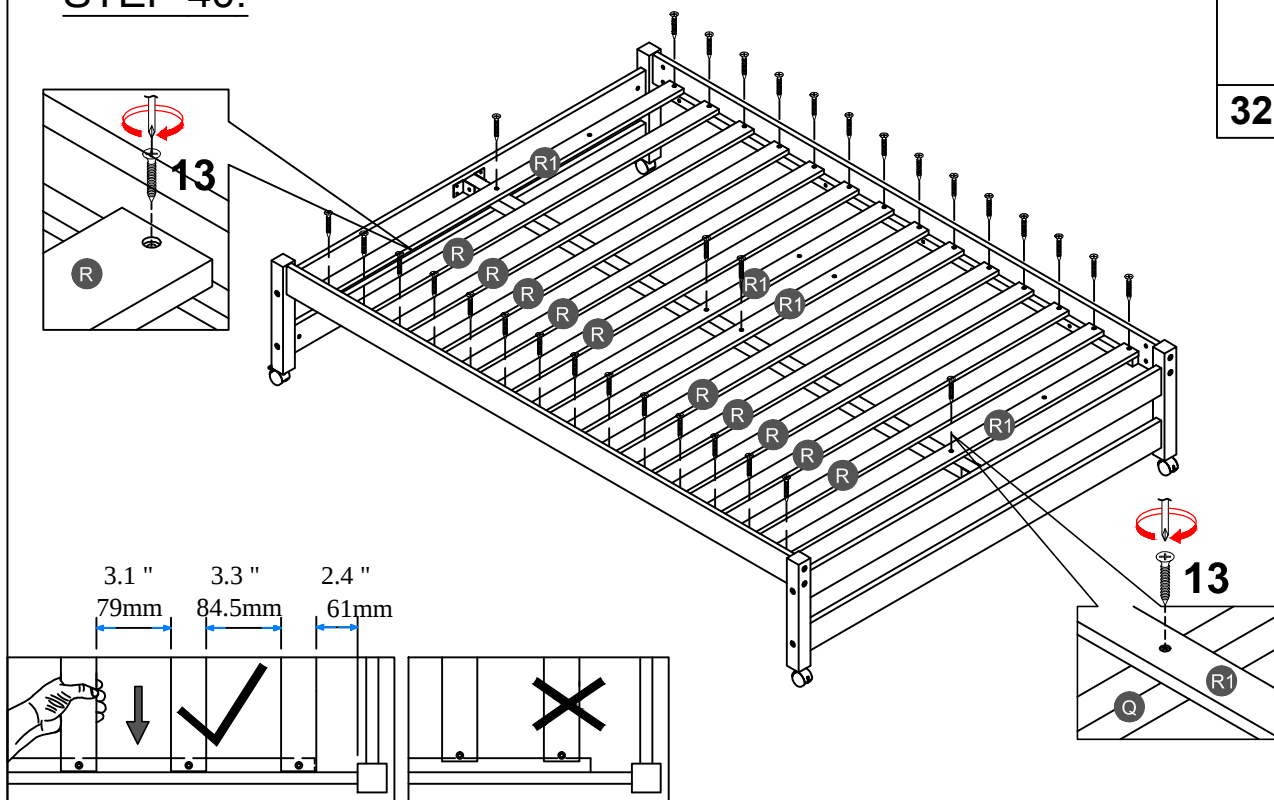

Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break. Do not lock the bed slats on the edge of the wood, please hold firmly before screwing, hold it in place with one hand, then lock the screw.

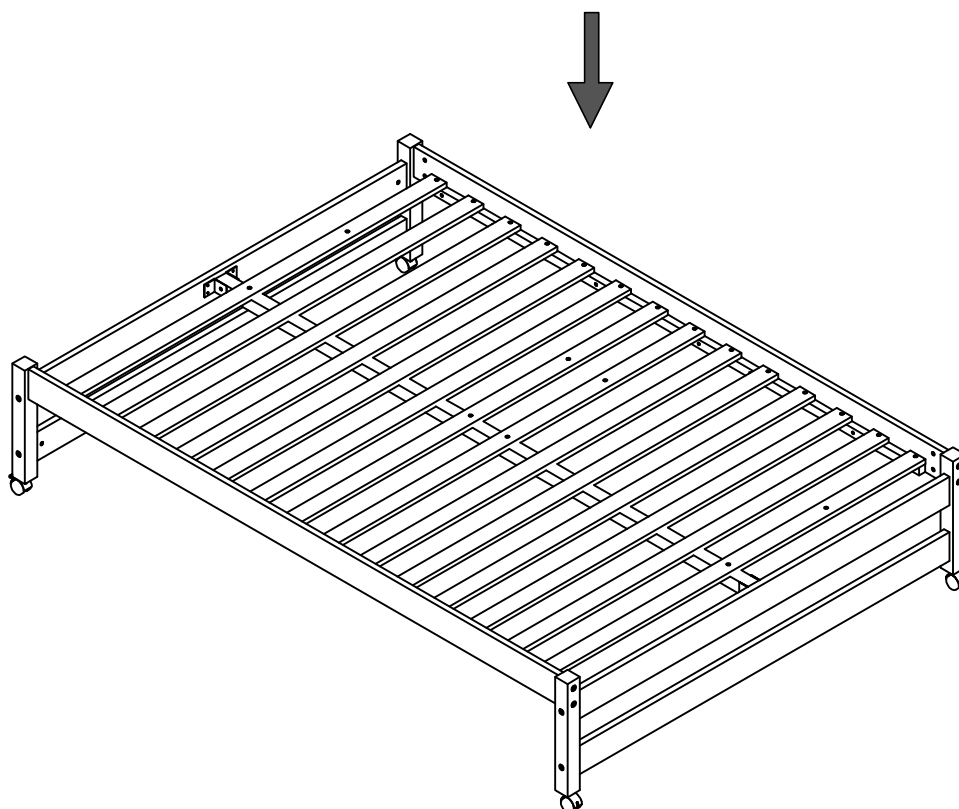

STEP 41:

