

DA0789

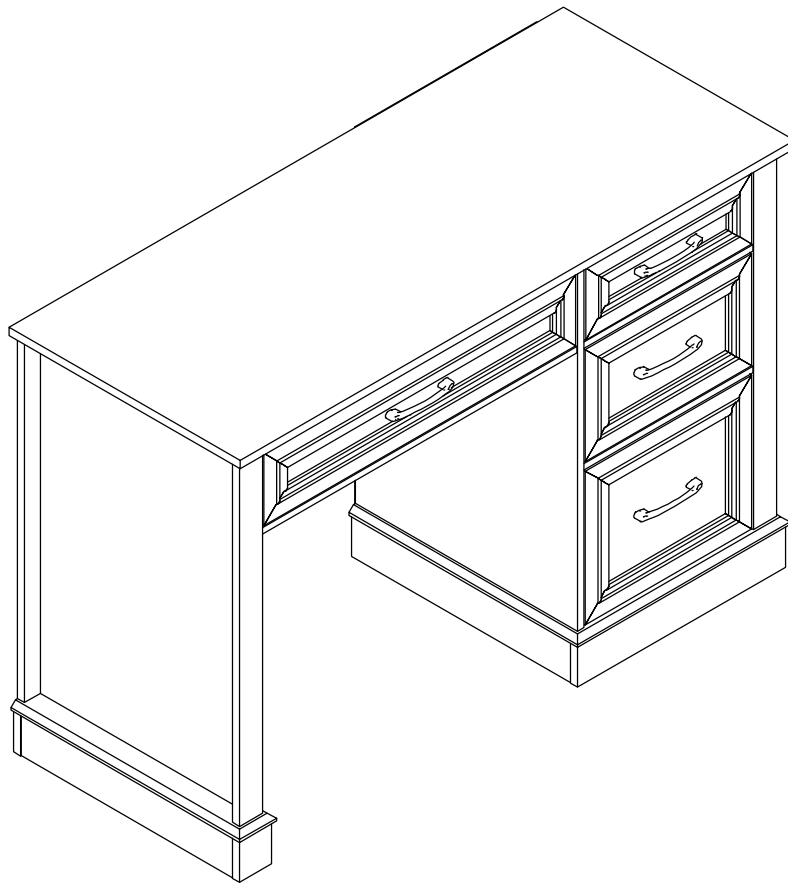


As this item contains many parts, please read the installation instruction carefully before installation . Please use tools properly and carefully. If you have any questions about the product and installation, please contact us.

hosoteservice@gmail.com

Our professional after-sales team will serve you online all day.

Before You Start

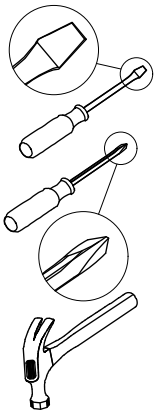

- ✓ Read through each step carefully and follow the proper order
- ✓ Separate and count all your parts and hardware
- ✓ Give yourself enough room for the assembly process
- ✓ Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer
- ✓ Caution: If using a power drill or power screwdriver for screwing, please be aware of to slow down and stop when screw is tight. (Assembly speed can be increased by using electric screwdriver)

Helpful Hints


PEOPLE NEEDED FOR ASSEMBLY: 1-2

- Open your item in the area you plan to keep it to avoid excessive heavy lifting.
- Identify, sort and count the parts before attempting assembly.
- Compression dowels are lightly tapped in with a hammer.
- Slides are labeled with an **R** (right) and **L** (left) for proper placement.
- Make sure to always face the point on the top of the Cam Lock towards the outer edge.
- If there is a back panel in the package, please install it to make sure your unit is complete and sturdy.
- Please fix all the screws provided for the back panel which can enhance product stability. If it is difficult to fix it when tightening, it can be fixed with the help of a hammer and then tightened.
- Do NOT use harsh chemicals or abrasive cleaners on this item.
- Never push, pull, or drag your furniture.




Board Identification


Not actual size

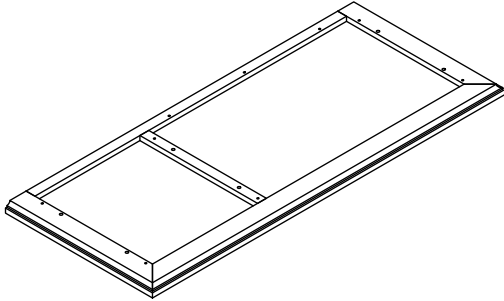


①
TOP
Qty:1

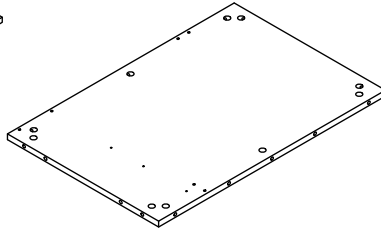


②
LEFT SIDE PANE
Qty:1

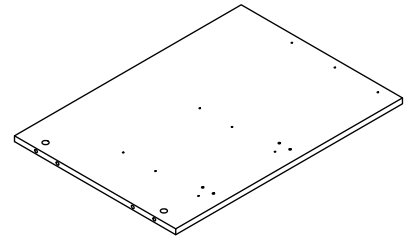


③
MIDDLE SIDE PANE
Qty:1

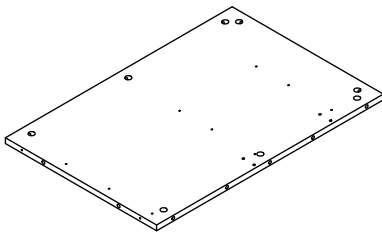


④
RIGHT SIDE PANEL
Qty:1

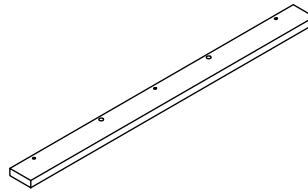


⑤
SLAT
Qty:3

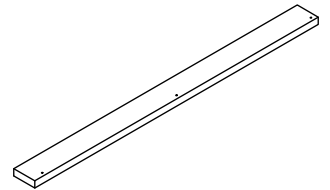


⑥
SLAT
Qty:1

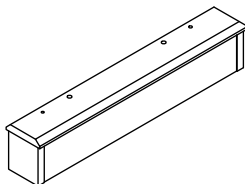

⑦
LEFT BOTTOM
Qty:1

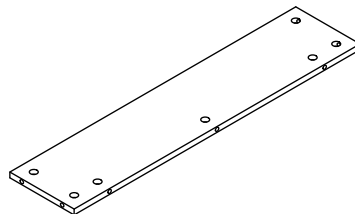


⑧
DESK BACK PANE
Qty:1

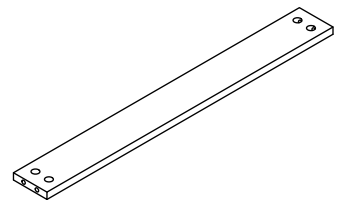

⑨
FIXED SHELF
Qty:1


Board Identification

Not actual size

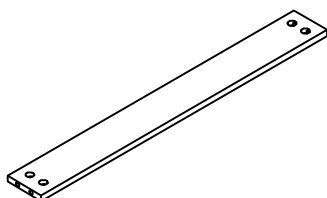


⑩

FIXED SHEL
Qty:1




⑪

FIXED SHELF
Qty:2

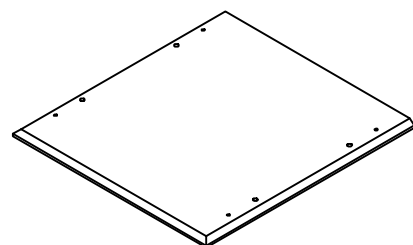


⑫

RIGHT BOTTOM
Qty:1

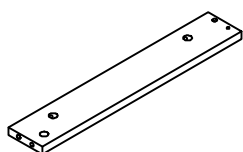


⑬

BOTTOM LEFT RAI
Qty:1

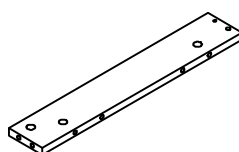


⑭

BOTTOM RIGHT RA
Qty:1

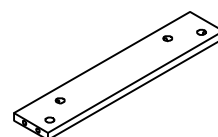


⑮

BOTTOM BACK RAI
Qty:1

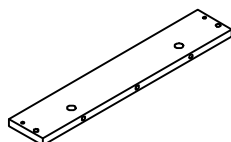


⑯

BOTTOM FRONT RAIL
Qty:1

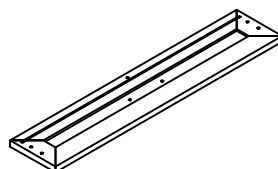

⑰

DRAWER FRONT
Qty:1

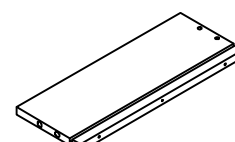


⑱

LEFT DRAWER SIDE
Qty:3


Board Identification

Not actual size

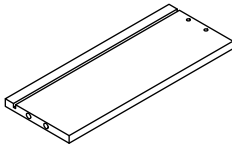


19

RIGHT DRAWER SIDE
Qty:3

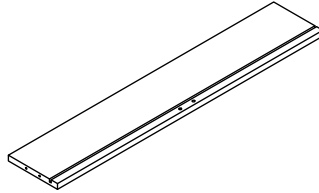


20

DRAWER BACK
Qty:1

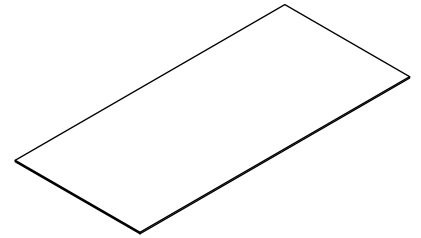


21

DRAWER BOTTOM
Qty:1

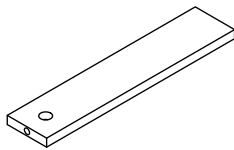


22

DRAWER SUPPORT
Qty:1

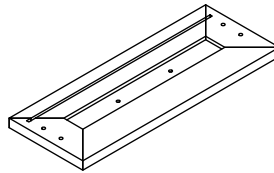


23

DRAWER FRONT
Qty:1

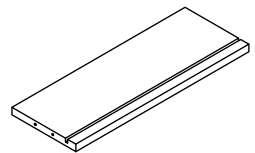


24

DRAWER BACK
Qty:2

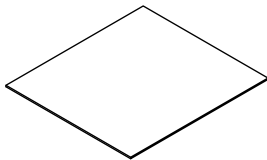


25

DRAWER BOTTOM
Qty:2

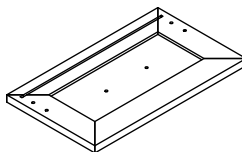

26

DRAWER FRONT
Qty:1

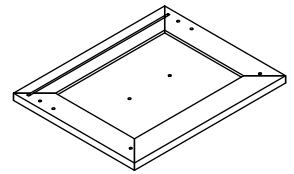


27

DRAWER FRONT
Qty:1


Board Identification

Not actual size

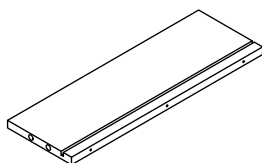


28

LEFT DRAWER SIDE
Qty:1

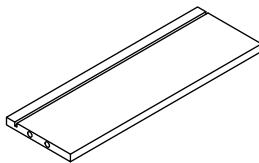


29

DRAWER FRONT
Qty:1

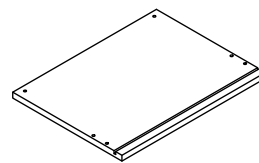


30

DRAWER BACK
Qty:1

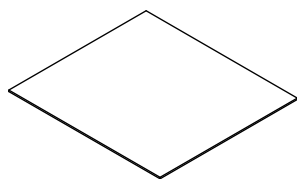

31


DRAWER BOTTOM
Qty:1

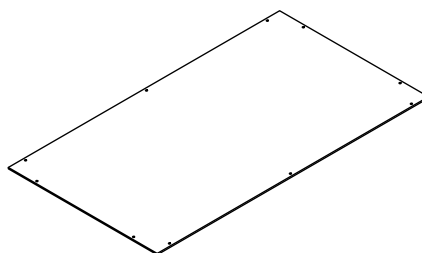


32

BACK PANEL
Qty:1


Part List

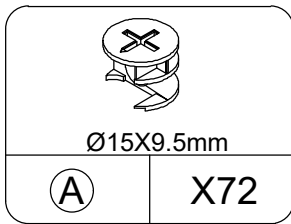


CAM LOCK
spare:3

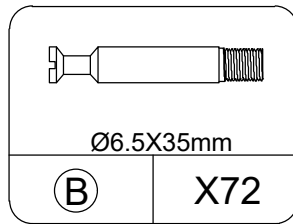


CAM BOLT
spare:3

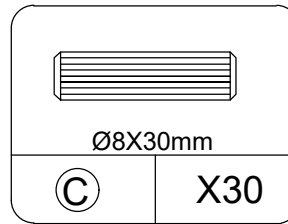


WOOD DOWEL
spare:3

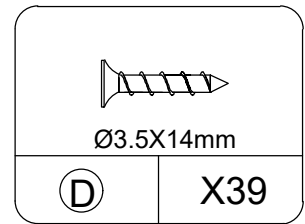


SCREW
spare:3

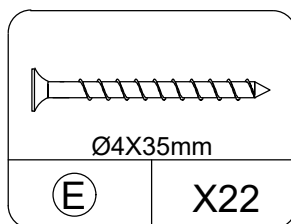


SCREW
spare:2

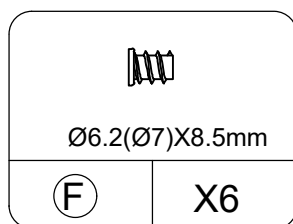


SCREW
spare:1

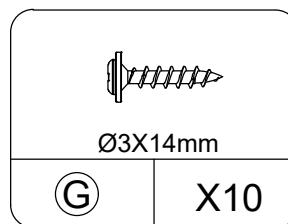


SCREW
spare:1

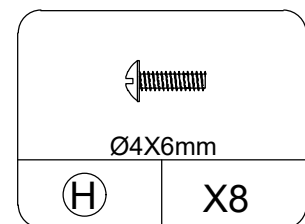


SCREW
spare:1

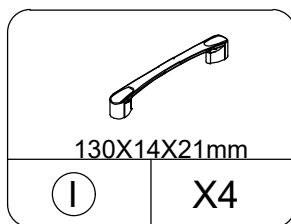


HANDLE

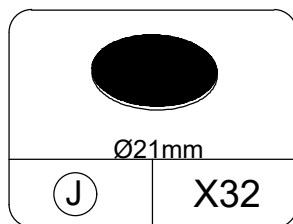


PERFECT STICKER
spare:3

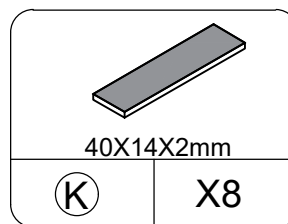


NON SLIP MATS
spare:1

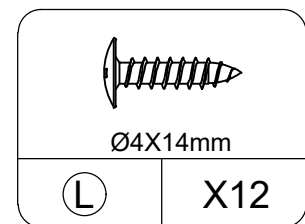


SCREW
spare:1

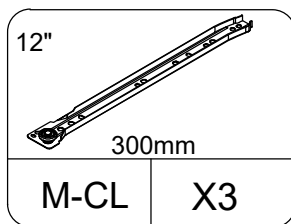


LEFT CABINET MEMBER

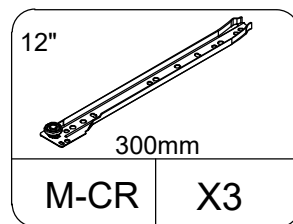


RIGHT CABINET MEMBER

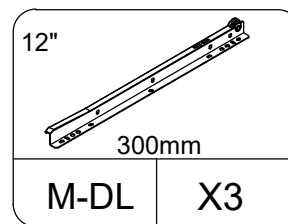


LEFT DRAWER RUNNER

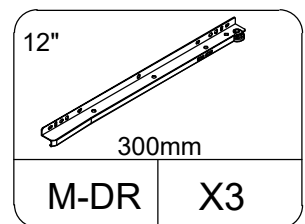


RIGHT DRAWER RUNNER

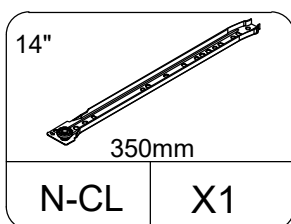


LEFT CABINET MEMBER

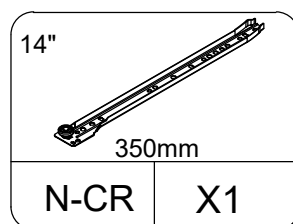

RIGHT CABINET MEMBER

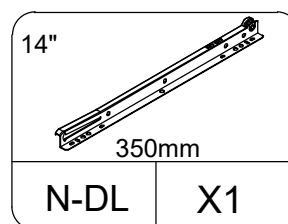


LEFT DRAWER RUNNER

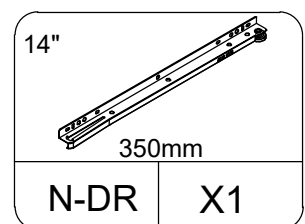


RIGHT DRAWER RUNNER


Part List

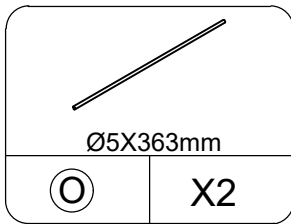

SOLID STEEL BARS

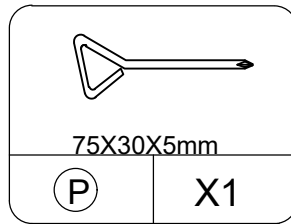


HEX KEY

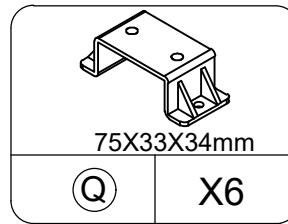

PLASTIC SPACER


Cam Lock Fastening System

Insert the cam bolt into the hole first, then insert the cam lock and lock it.

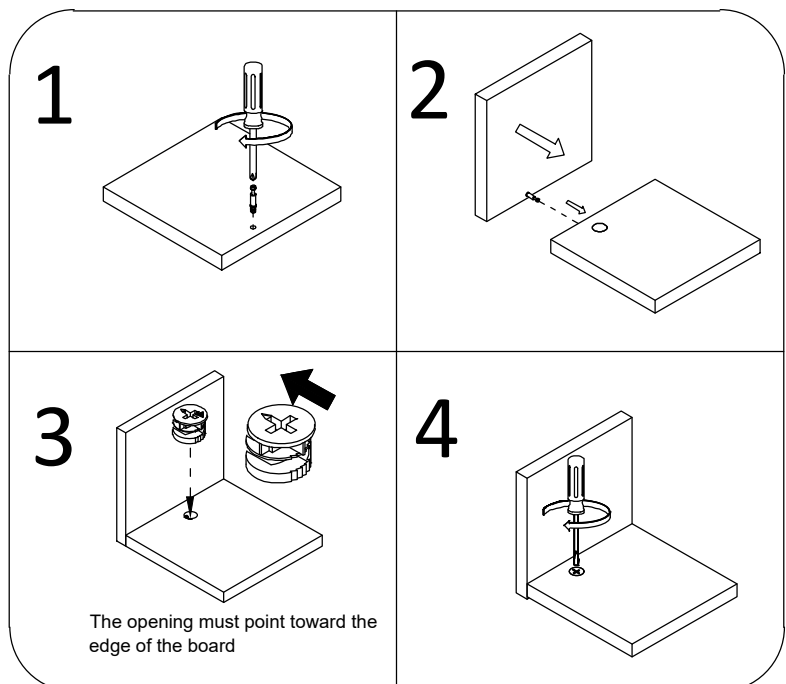



Board Identification


Not actual size

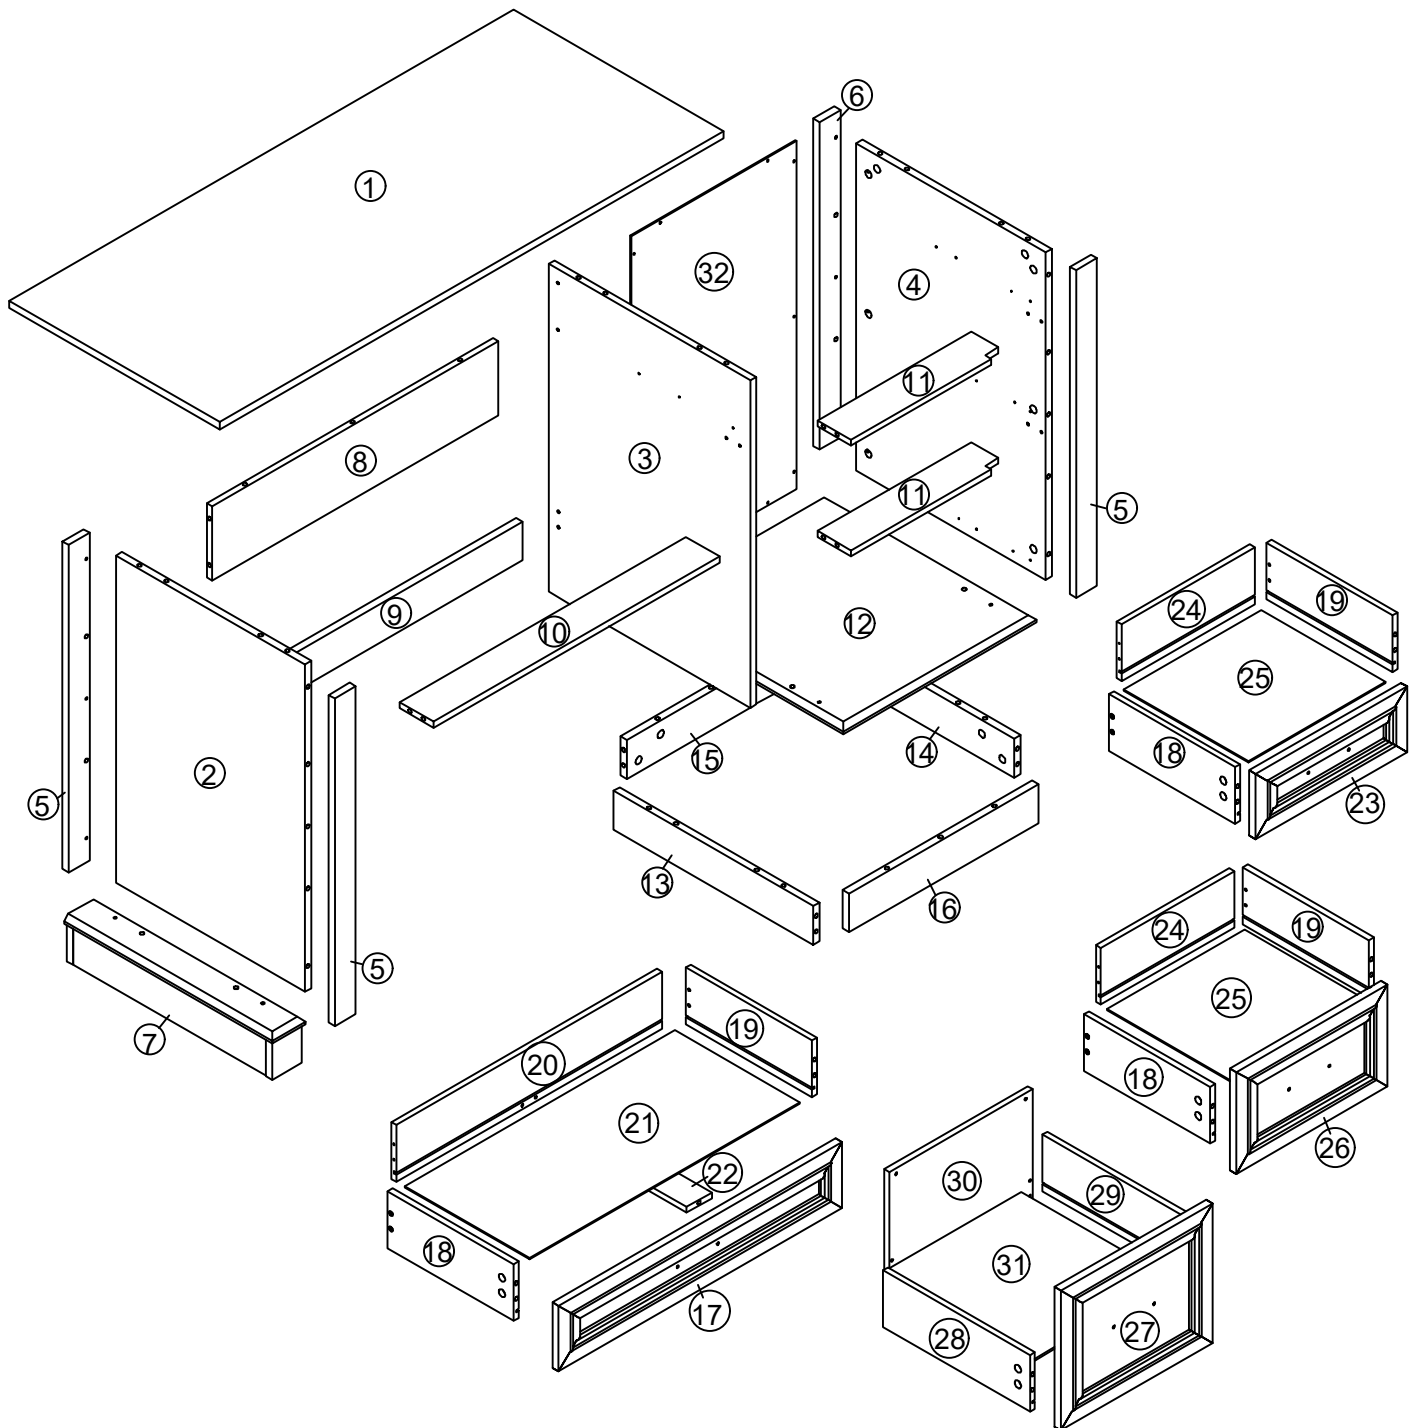



STEP1

 Ø15X9.5mm		 Ø6.5X35mm		 Ø4X35mm		 Ø4X7mm	
(A)		(B)		(E)		(H)	
X4		X4		X4		X2	


 130X14X21mm	
(I)	
X1	

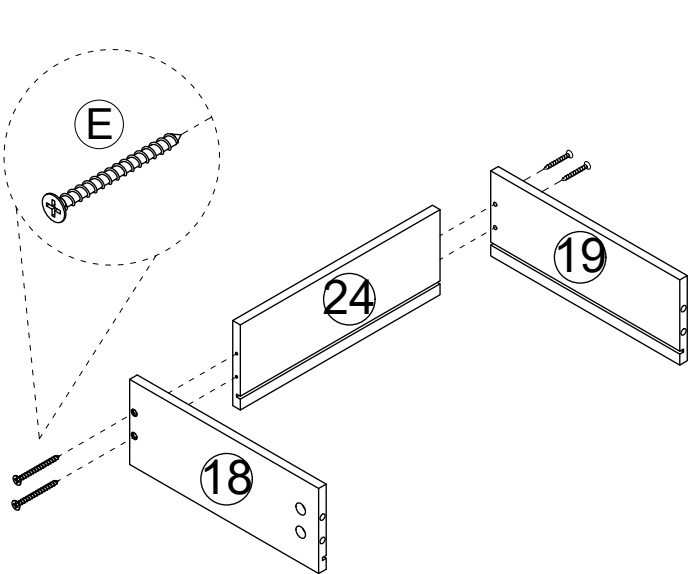


Step 1

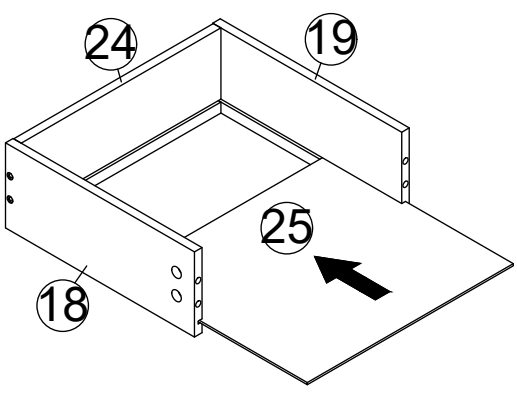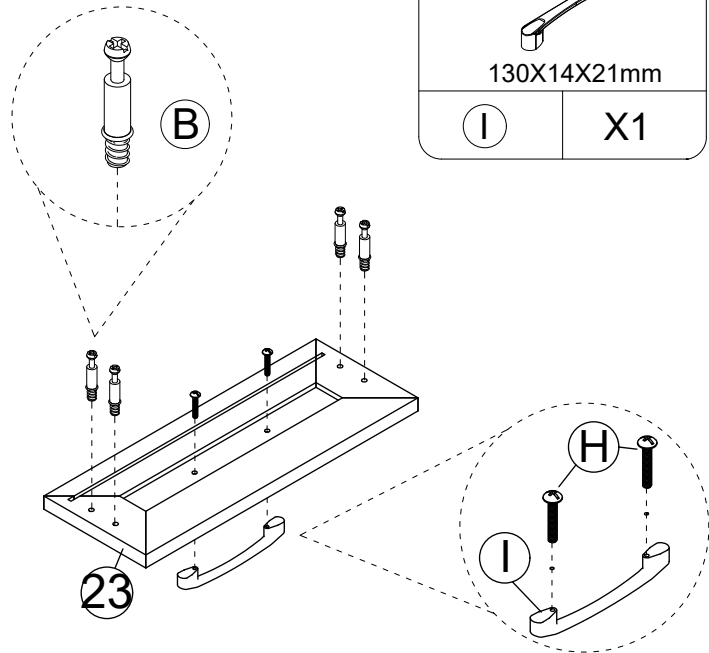

Step 2

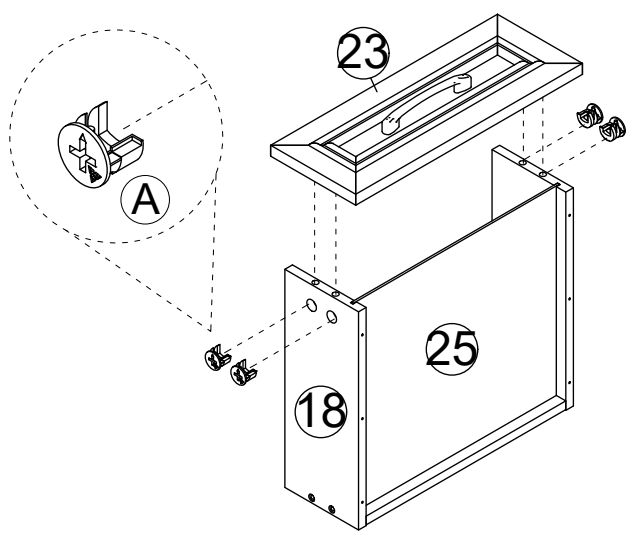



Step 3

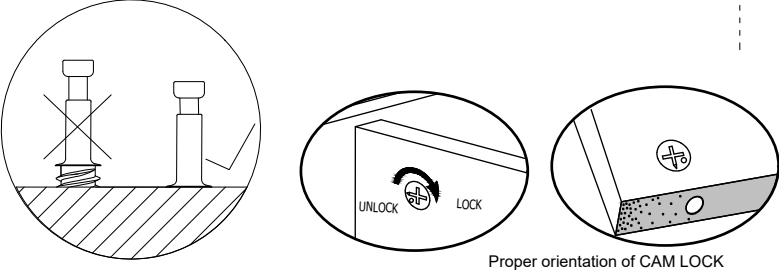



Insert the cam bolt into the hole first, then insert the cam lock and lock it.

STEP2


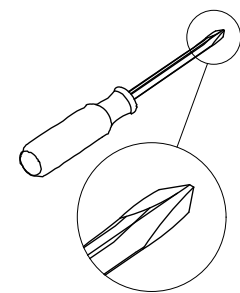


 Ø15X9.5mm	 Ø6.5X35mm	 Ø4X35mm	 Ø4X7mm
(A) X4	(B) X4	(E) X4	(H) X2


 130X14X21mm
(I) X1

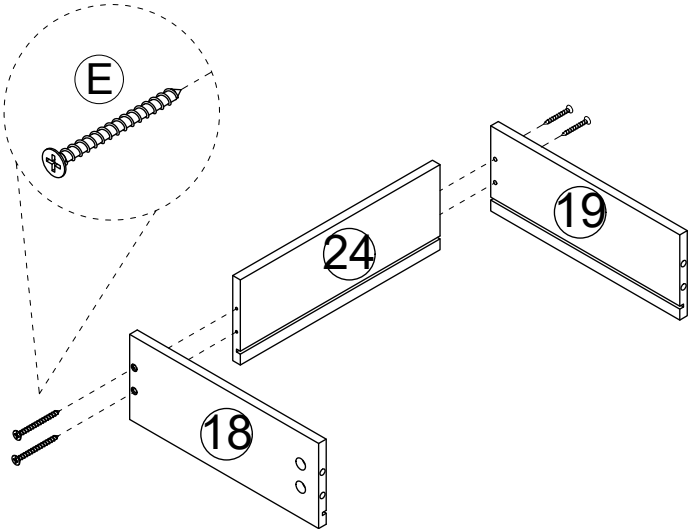




Step 1

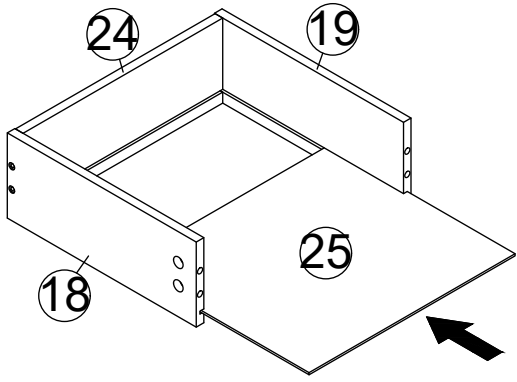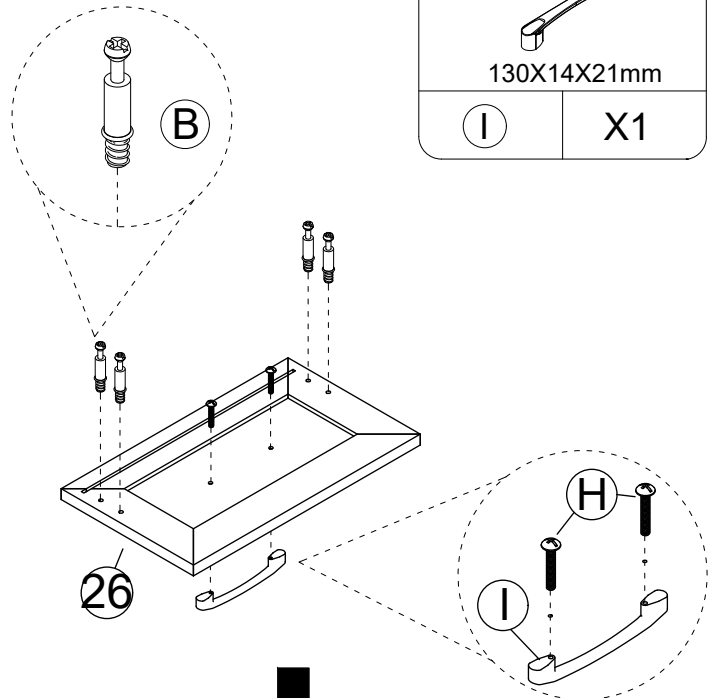

Step 2

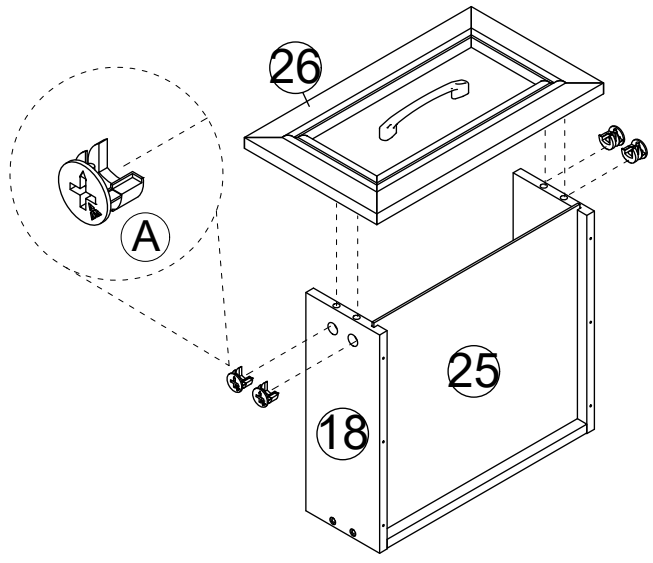



Step 3

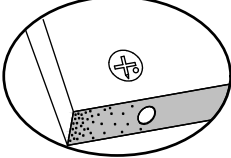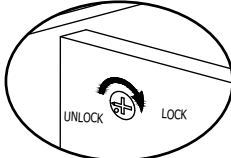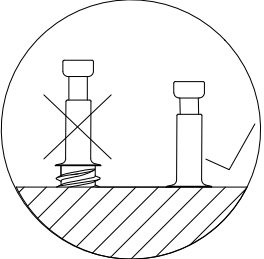

Proper orientation of CAM LOCK


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

STEP3

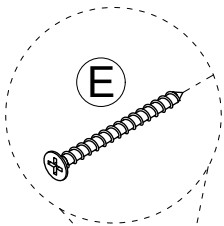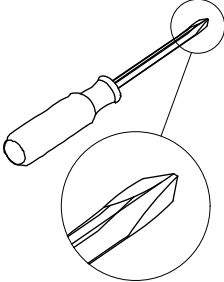


	Ø15X9.5mm
(A)	X4

	Ø6.5X35mm
(B)	X4

	Ø4X35mm
(E)	X4

	Ø4X7mm
(H)	X2

	Ø5X360mm
(O)	X2

	130X14X21mm
(I)	X1

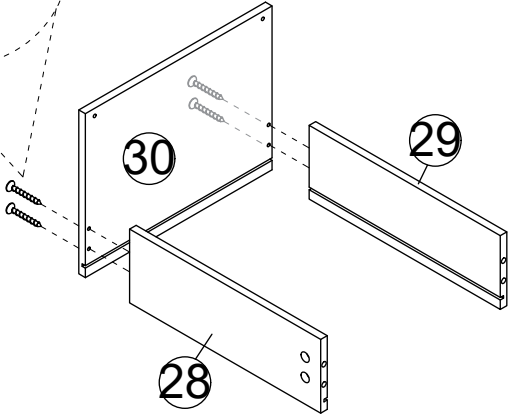


Diagram showing the assembly of the base frame. Part 28 is being attached to parts 29 and 30 using screws E and O.

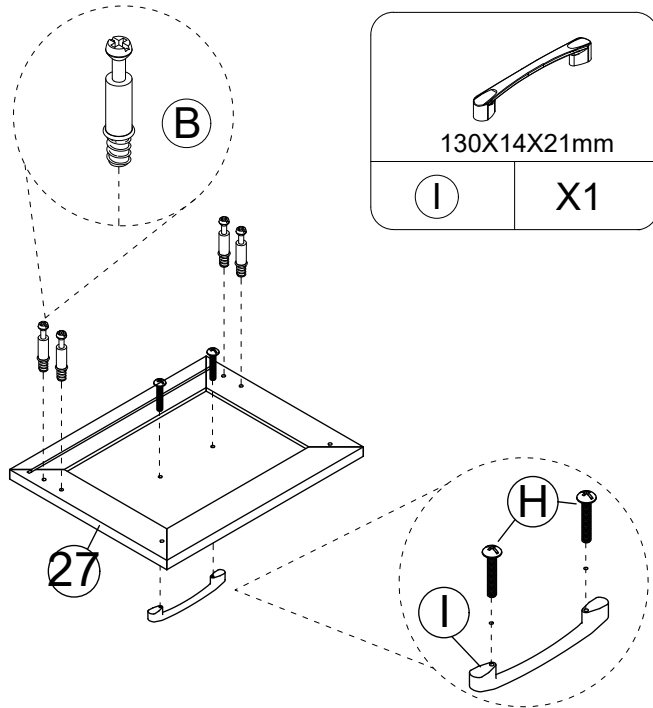


Diagram showing the assembly of the top frame. Part 27 is being attached to parts 29 and 30 using screws B and H. A bracket I is also shown being attached to part 27.

Step 1

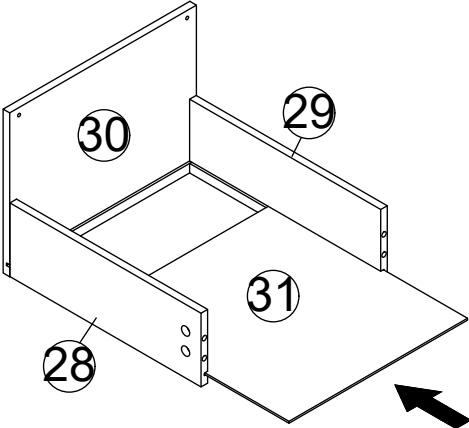


Diagram showing the assembly of the base frame. Part 31 is being attached to parts 28 and 29.




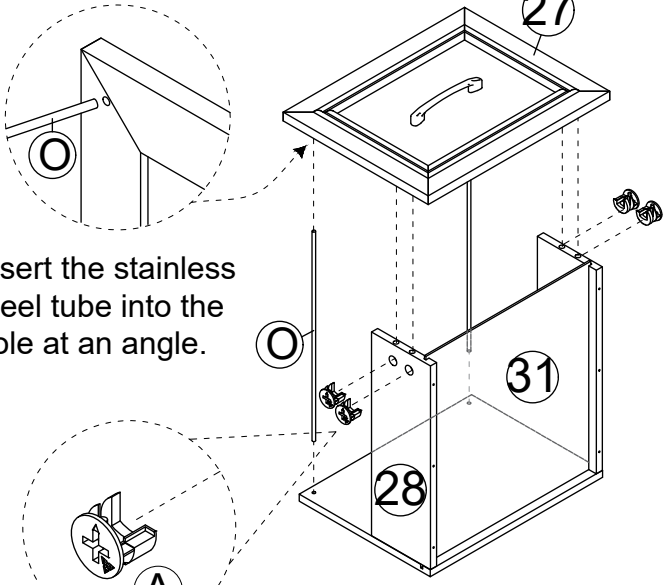


Diagram showing the assembly of the top frame. Part 27 is being attached to parts 28 and 31 using screws O and A. A stainless steel tube is being inserted into the hole at an angle.

Step 2

Step 3





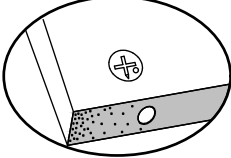
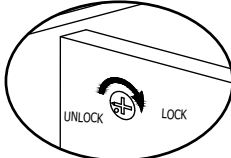
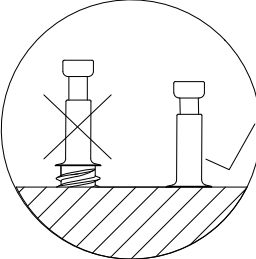


UNLOCK LOCK



Proper orientation of CAM LOCK

Insert the cam bolt into the hole first, then insert the cam lock and lock it.


STEP4

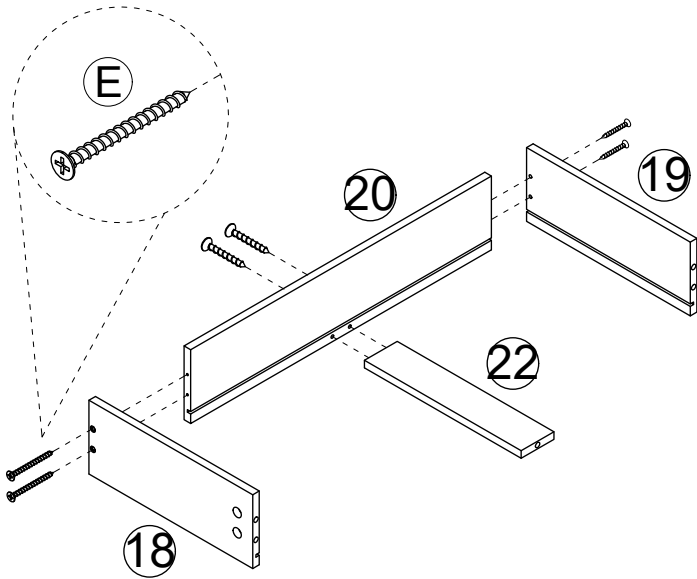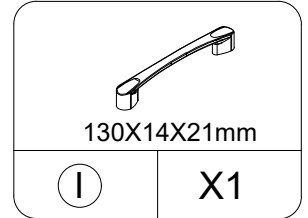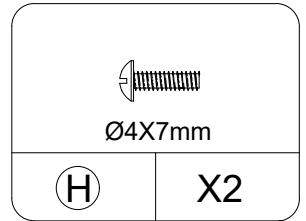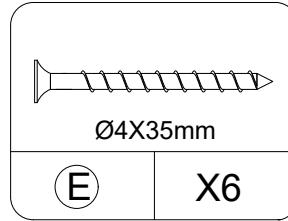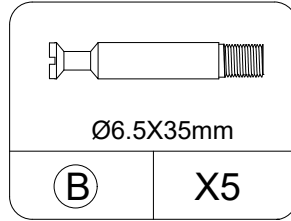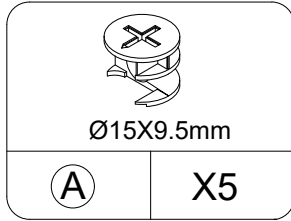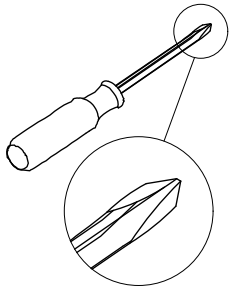




Step 1

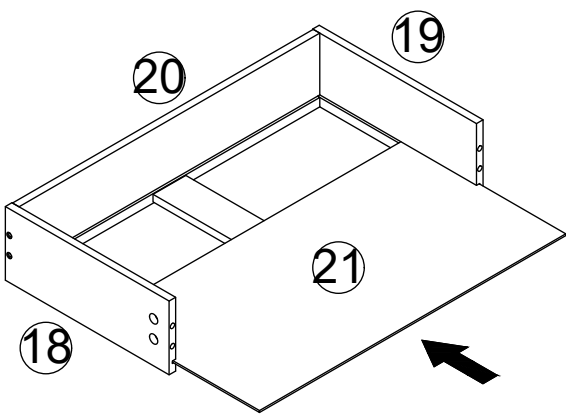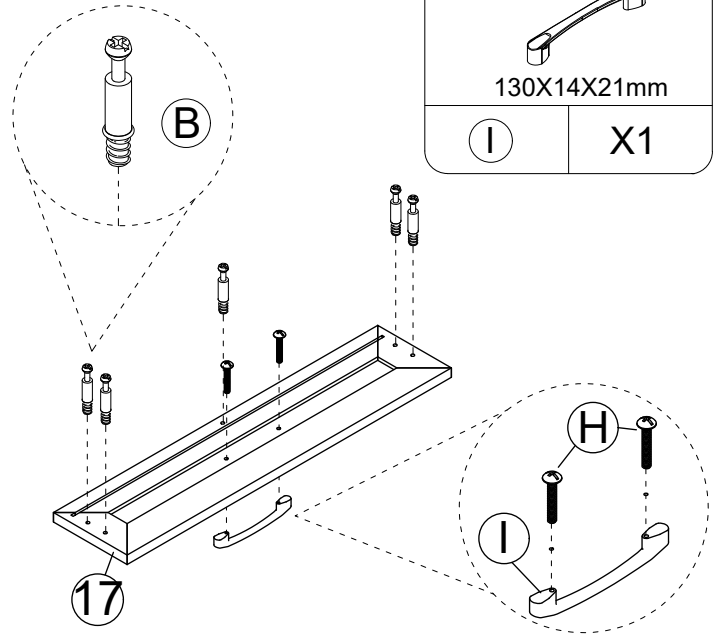

Step 2

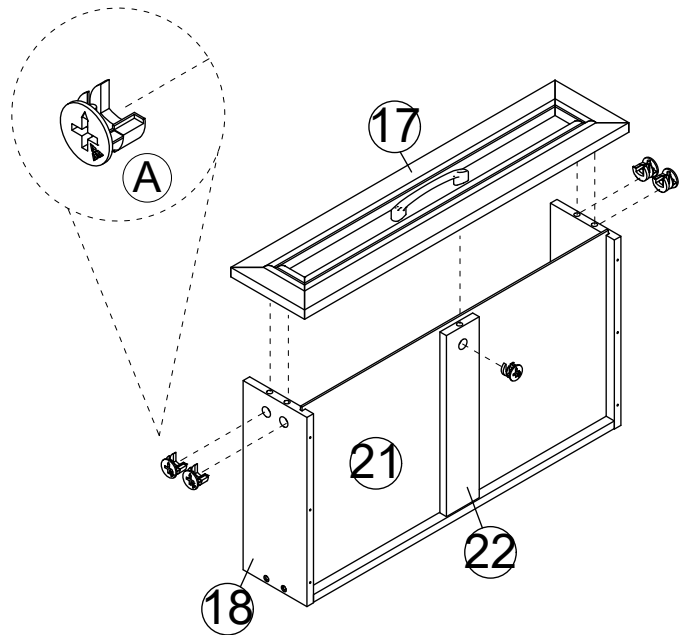


Step 3

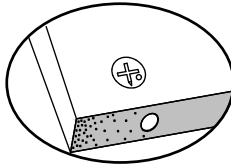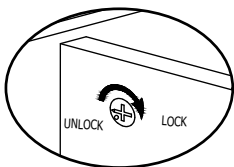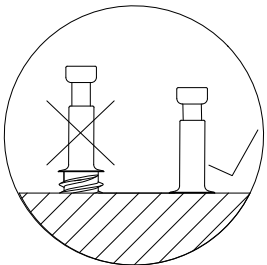



Insert the cam bolt into the hole first, then insert the cam lock and lock it.


Proper orientation of CAM LOCK


STEP5

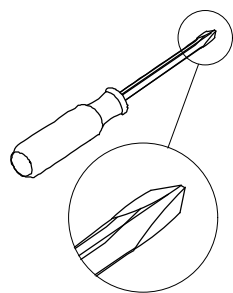


 Ø3.5X14mm	
(D)	X6

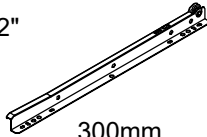12"  300mm	
M-DL	X1

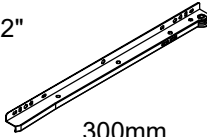
12"  300mm	
M-DR	X1

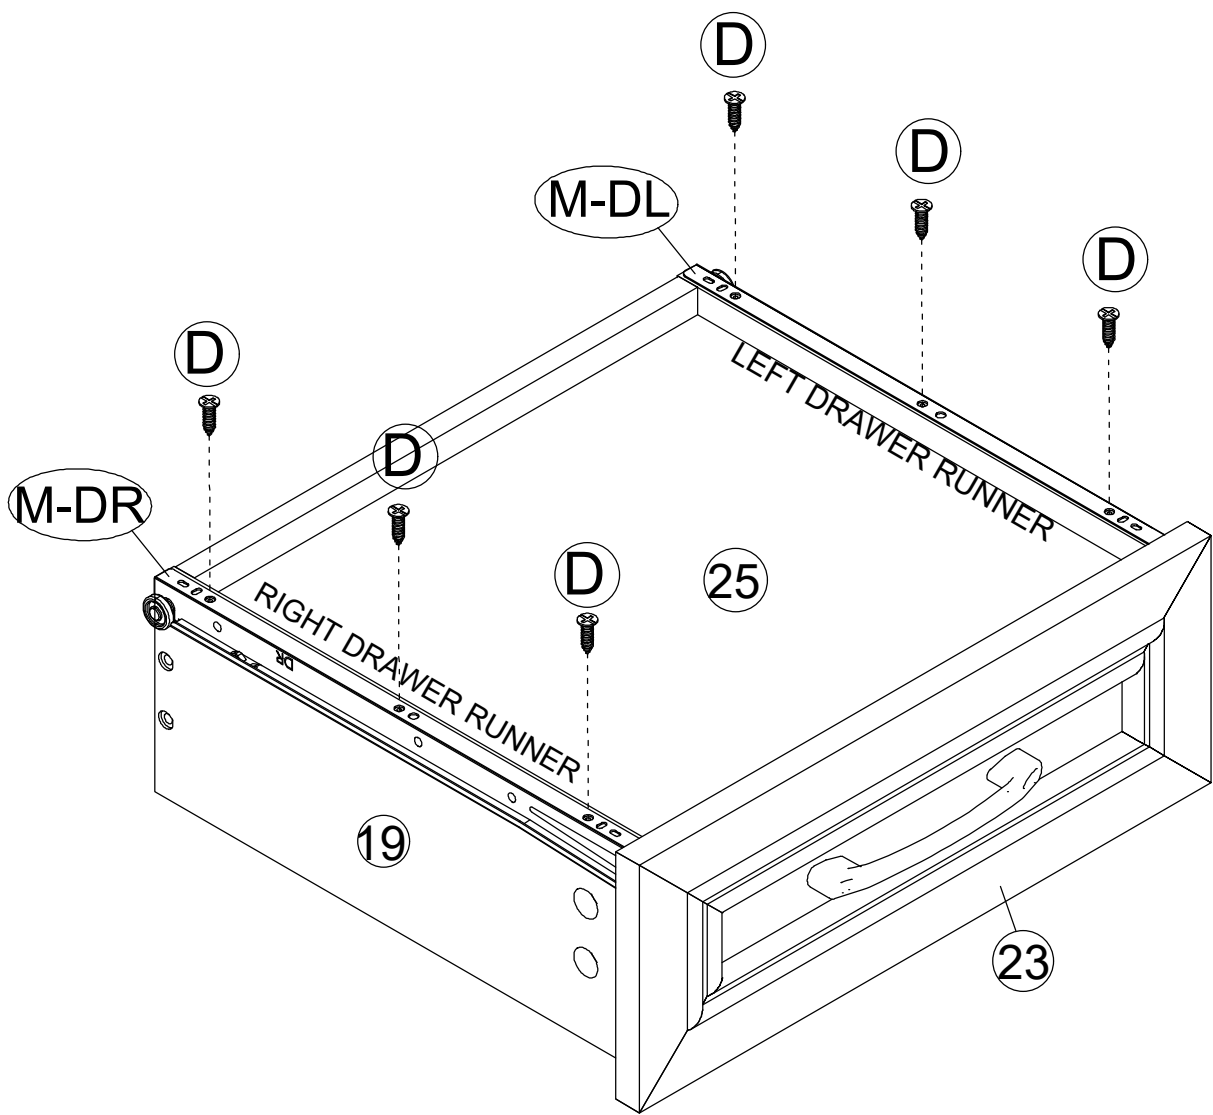



STEP6

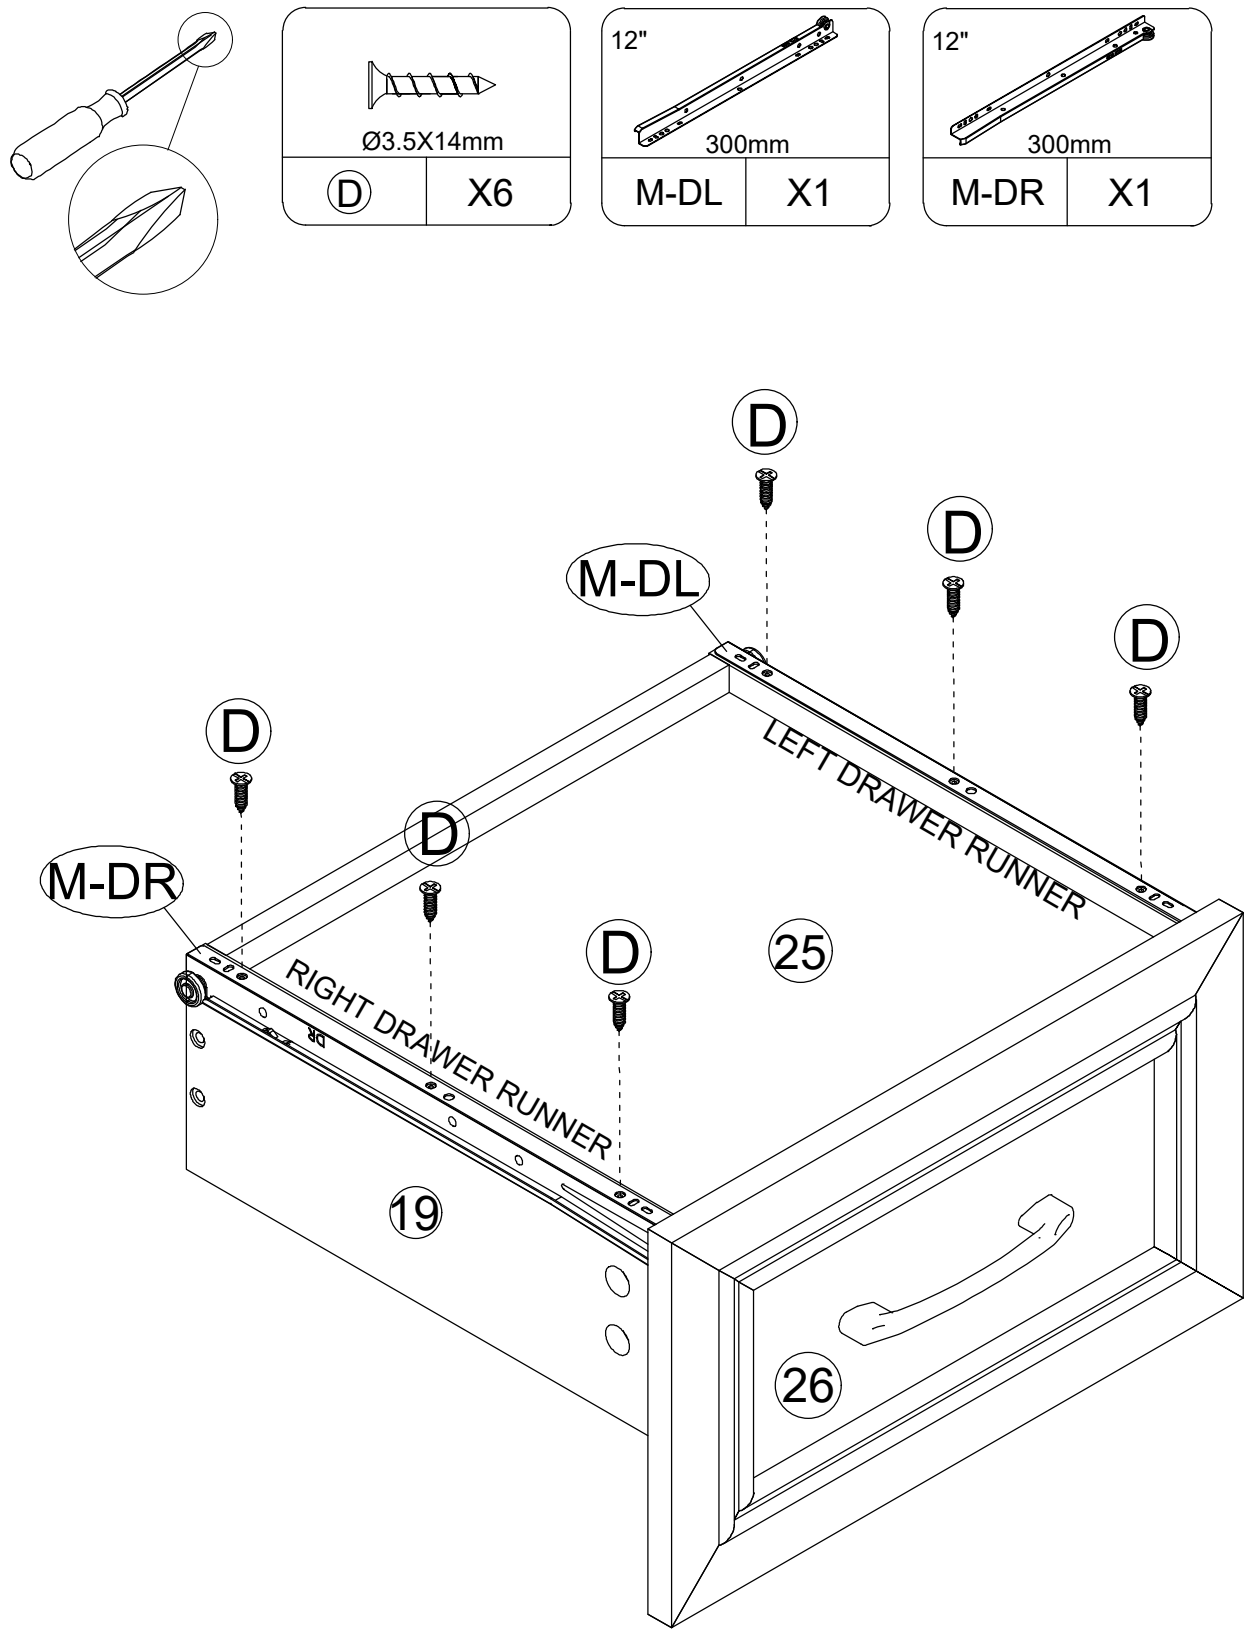



STEP7

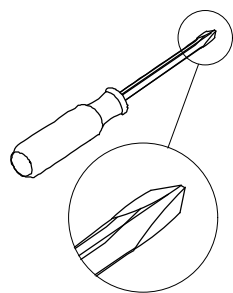


 Ø3.5X14mm	
(D)	X6

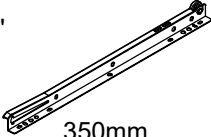
14"  350mm	
N-DL	X1

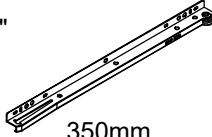
14"  350mm	
N-DR	X1

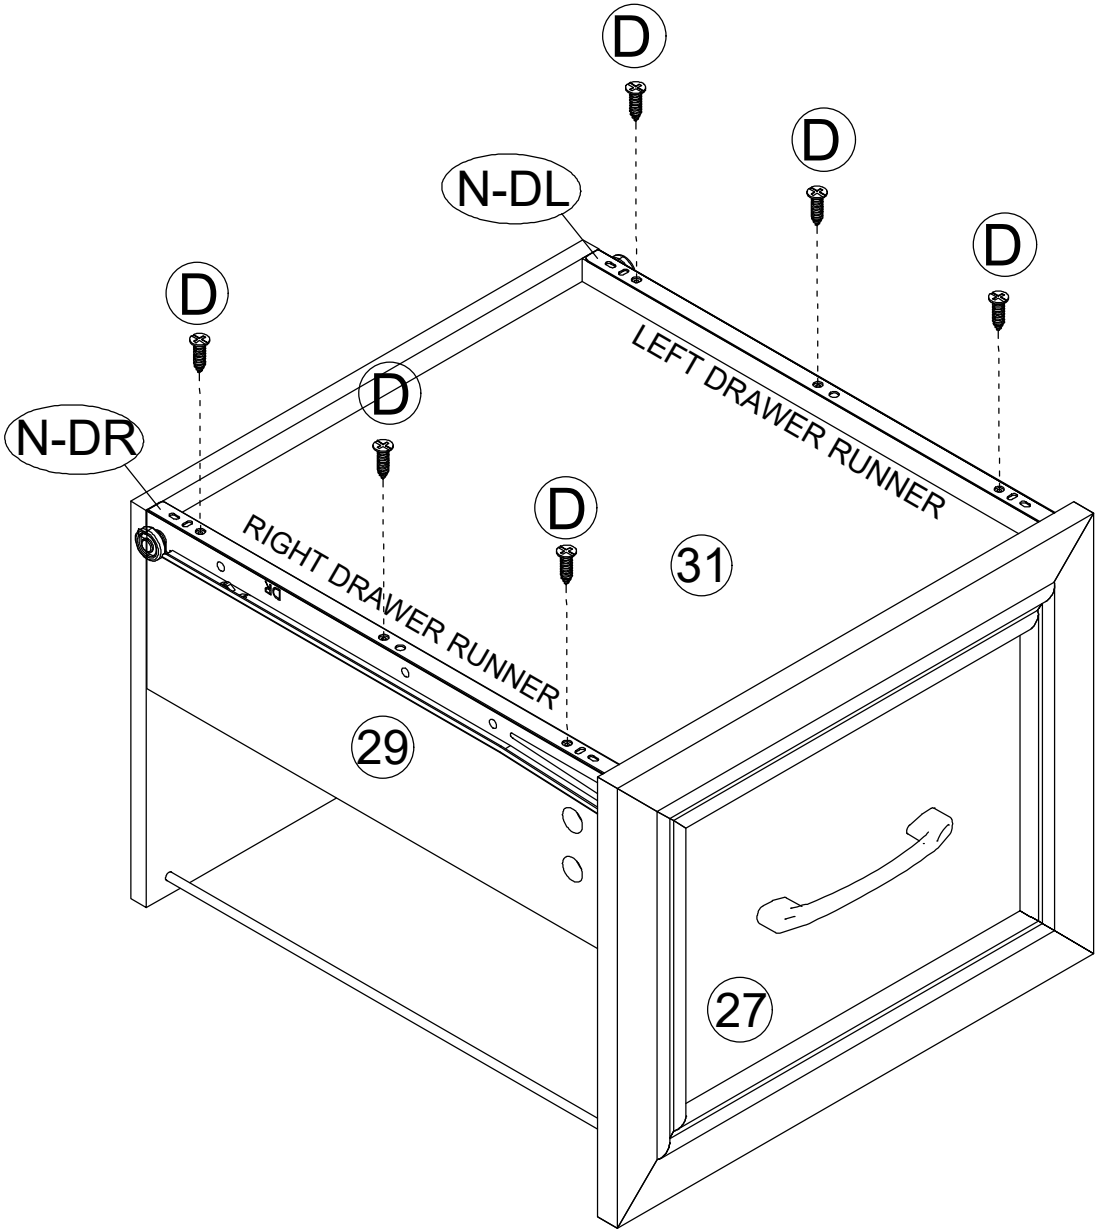



STEP8

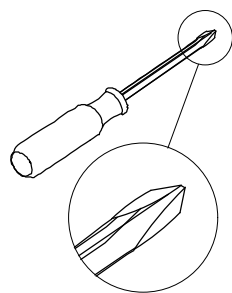






 Ø3.5X14mm	
(D)	X6

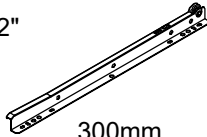12"  300mm	
M-DL	X1


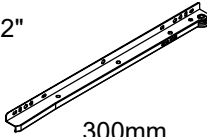
12"  300mm	
M-DR	X1

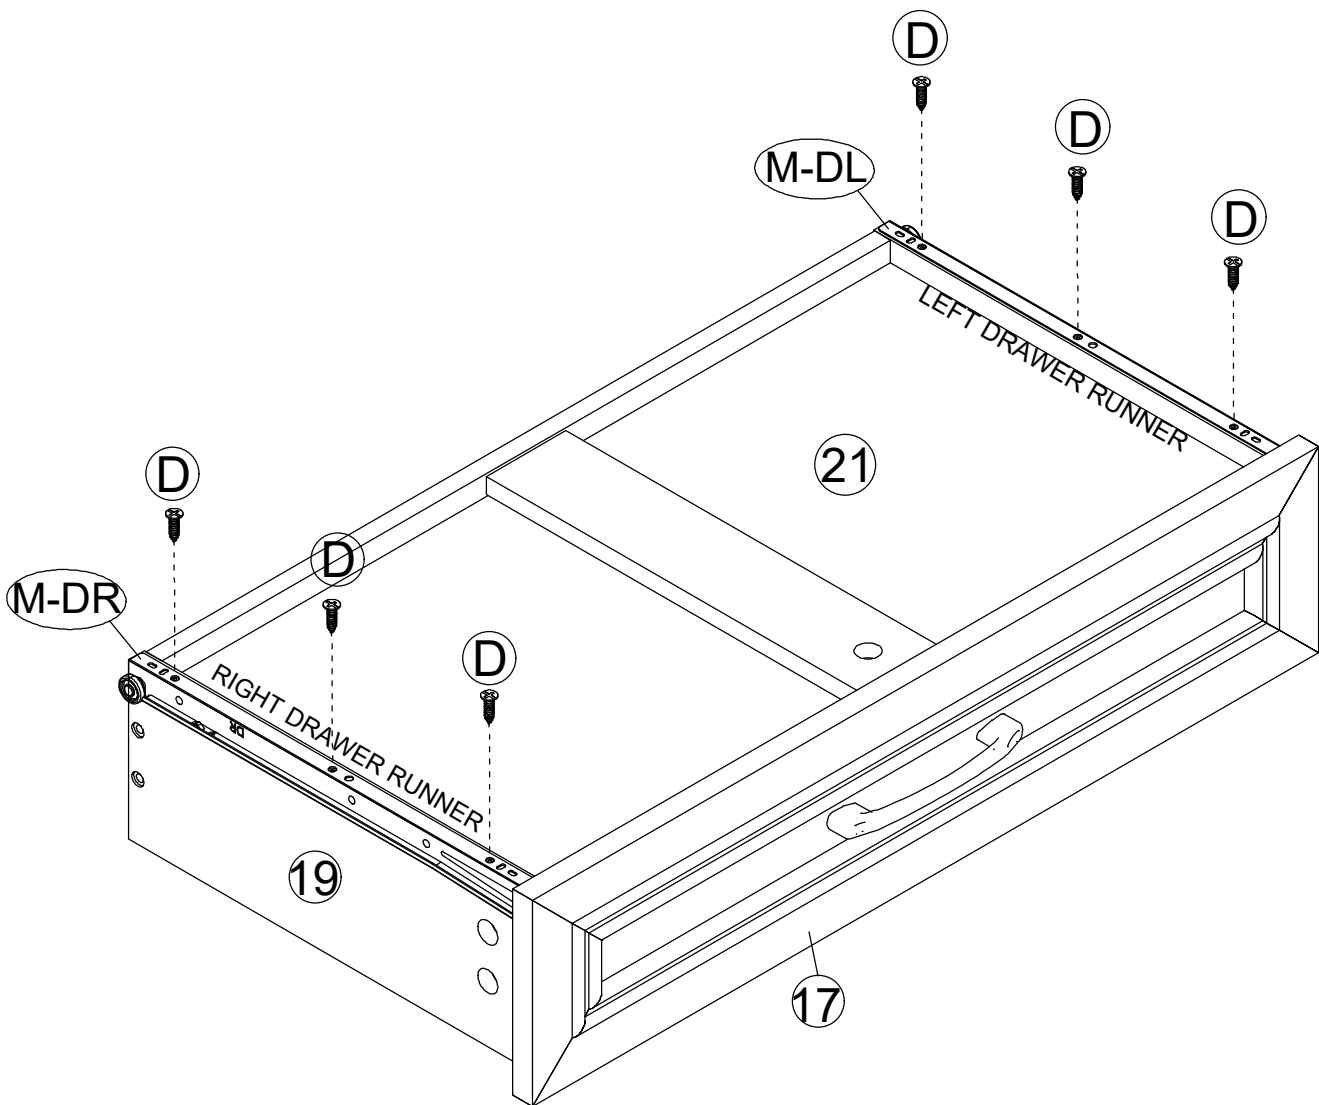







STEP9

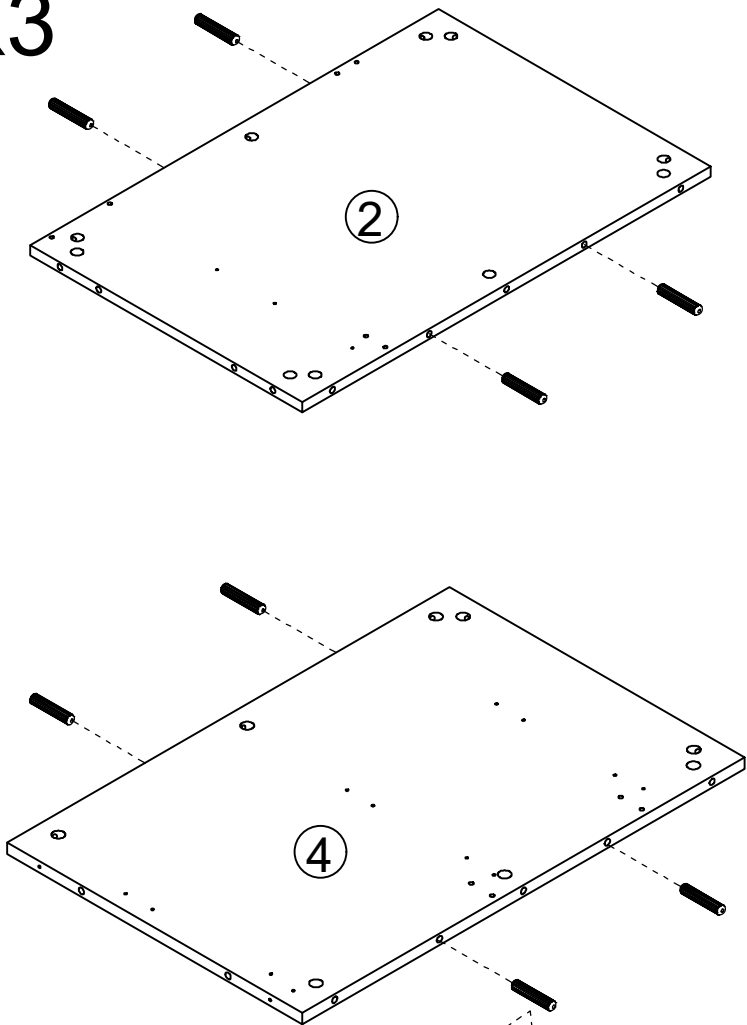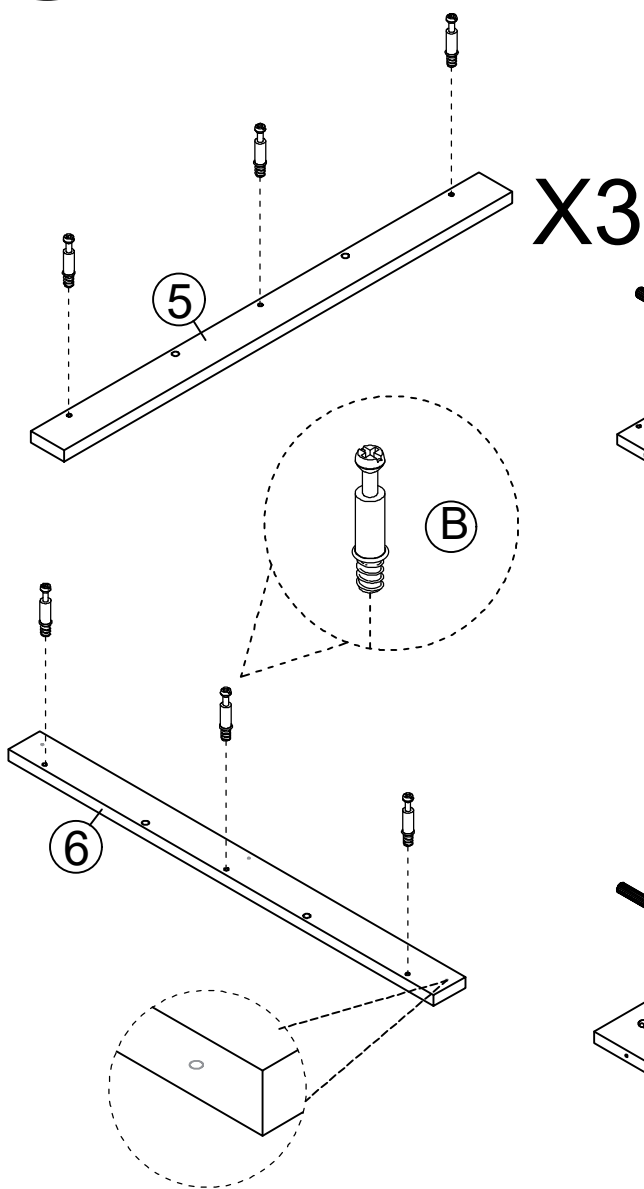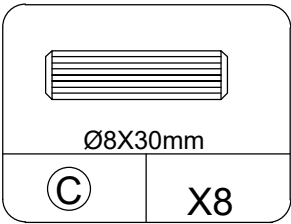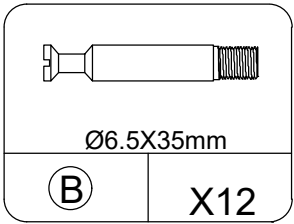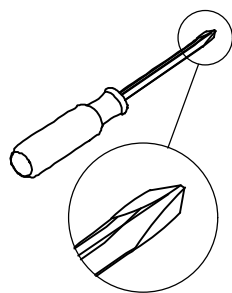


There are holes in the back.

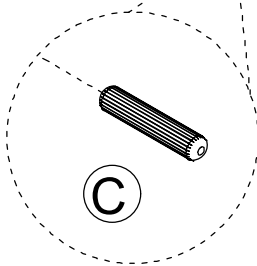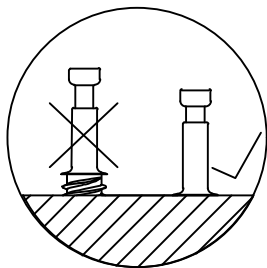

STEP10






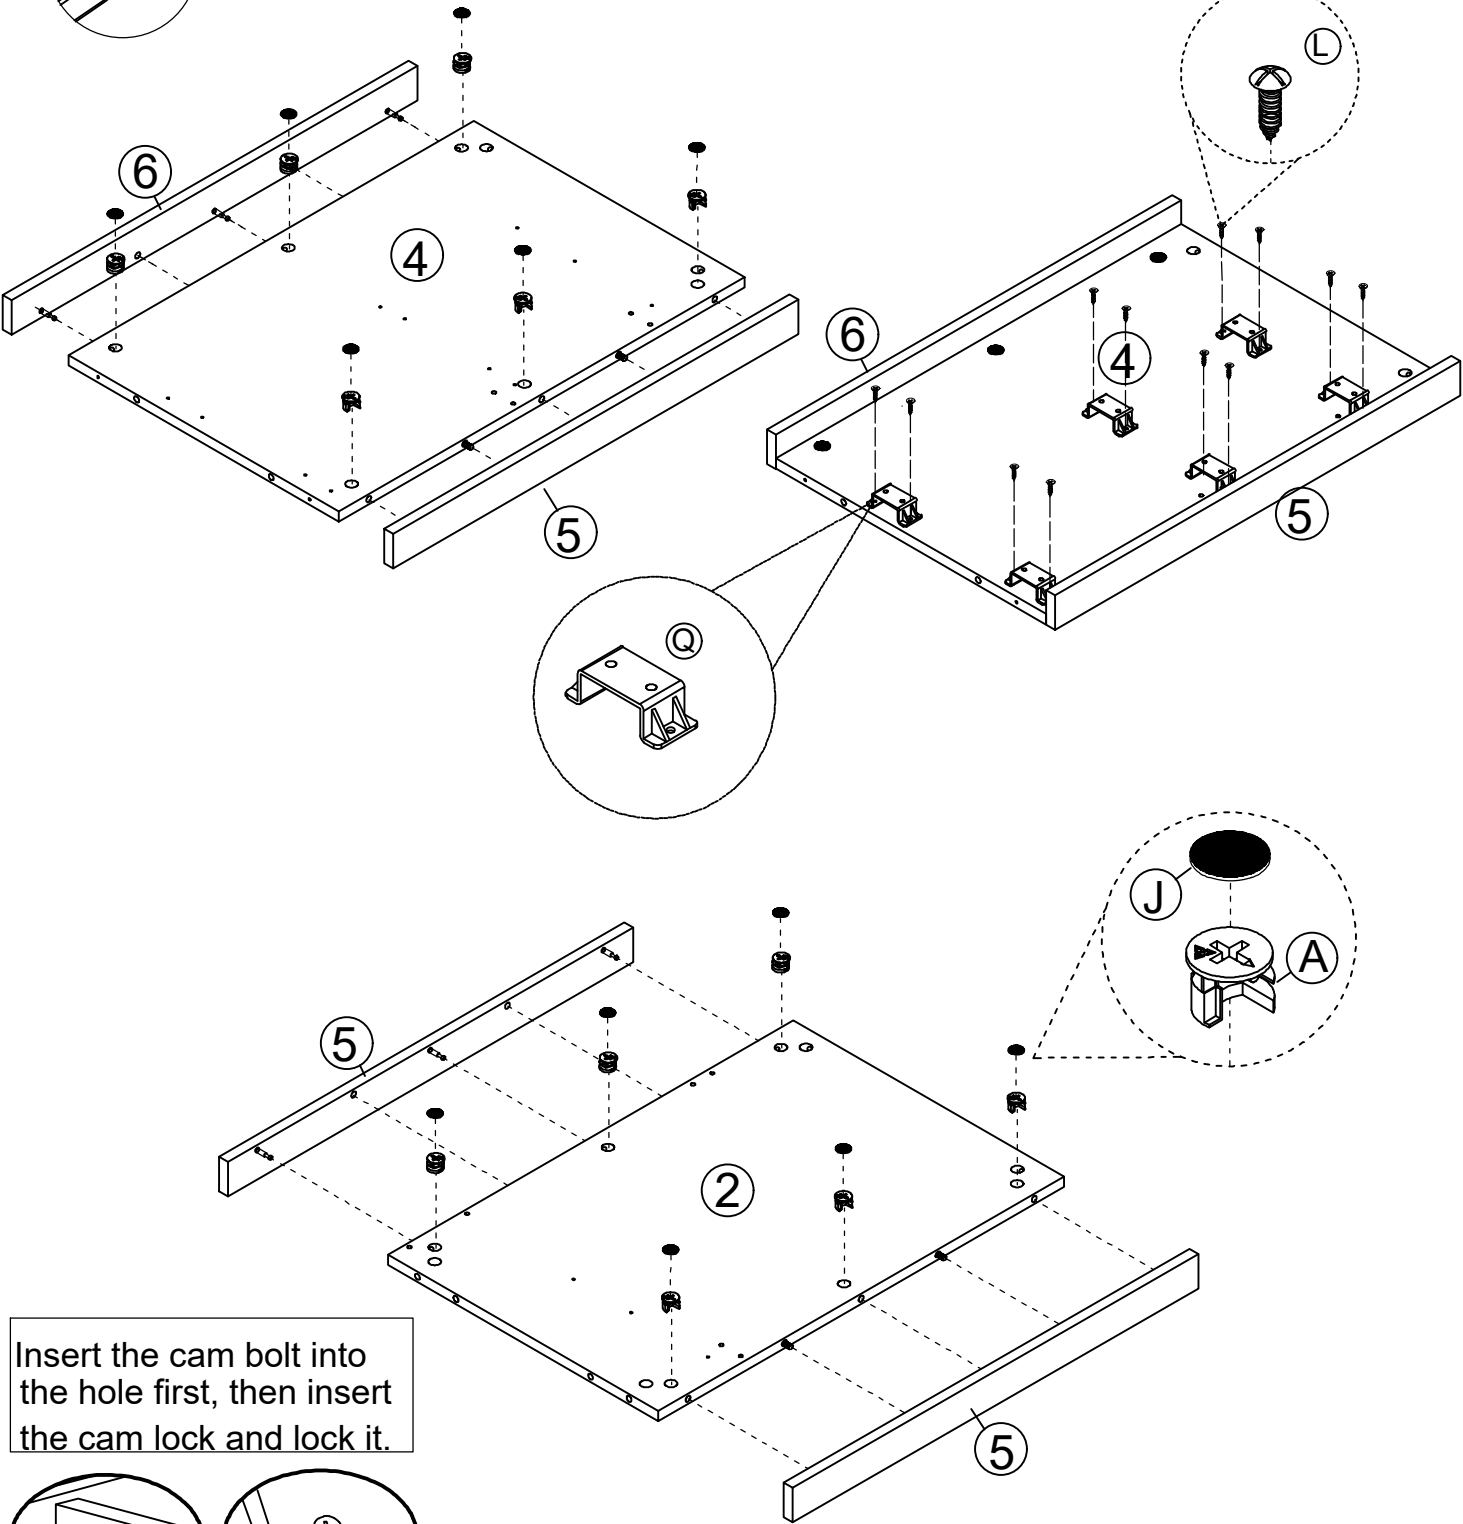
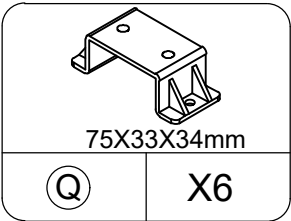
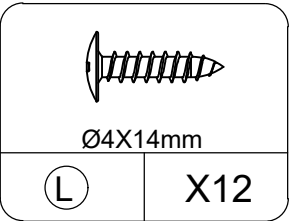
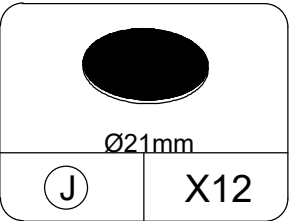
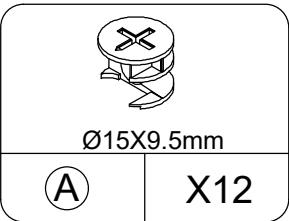
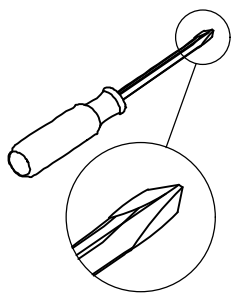


Insert the cam bolt into the hole first, then insert the cam lock and lock it.






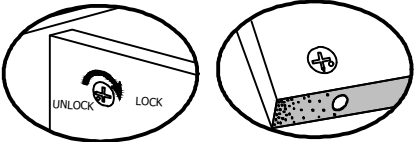


Proper orientation of CAM LOCK








STEP11

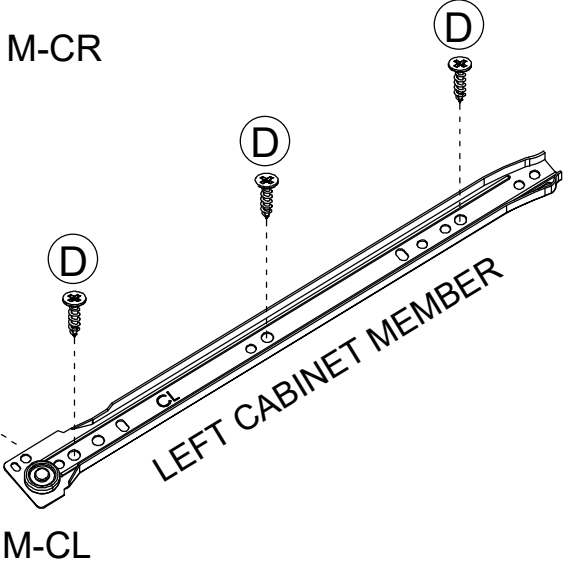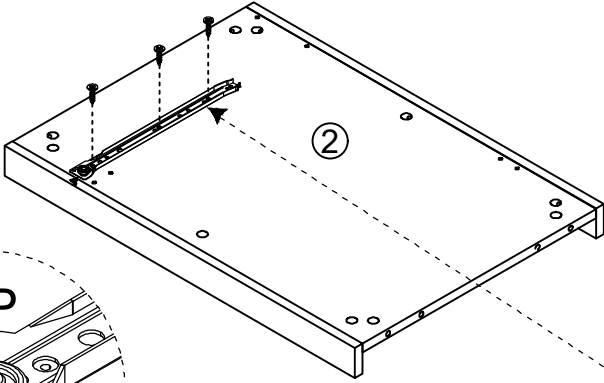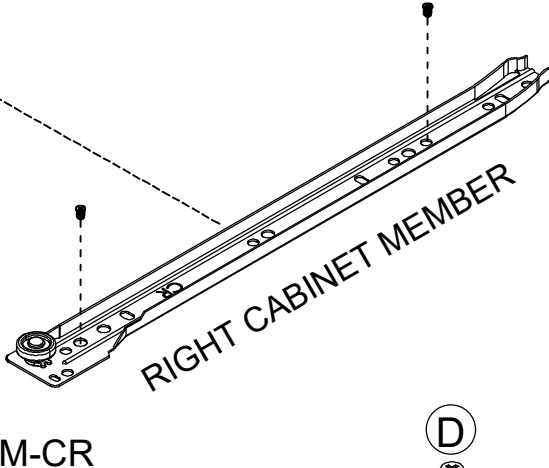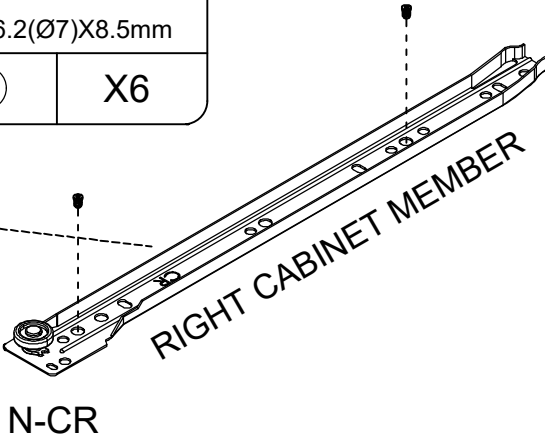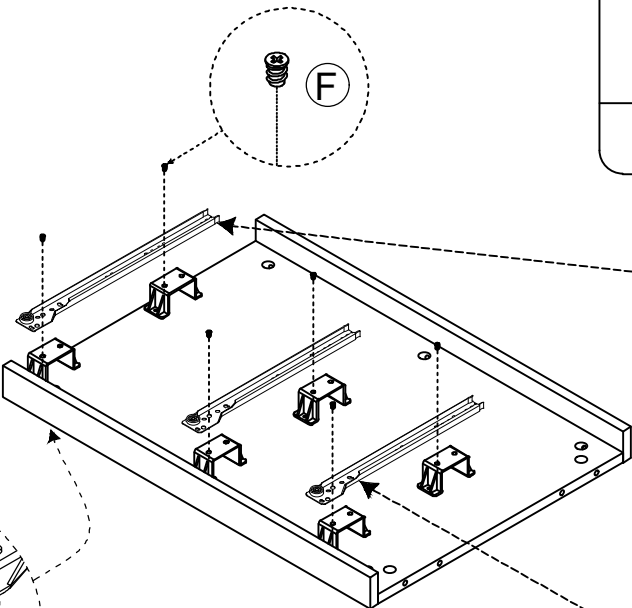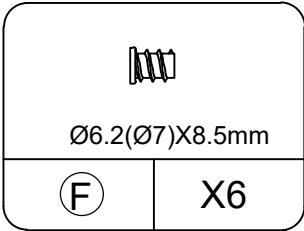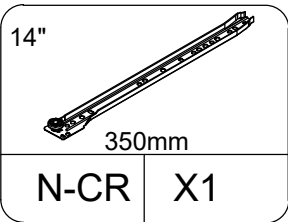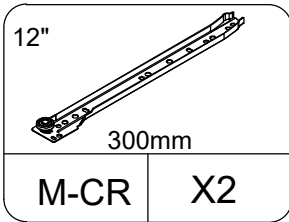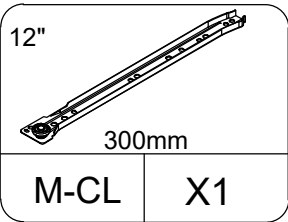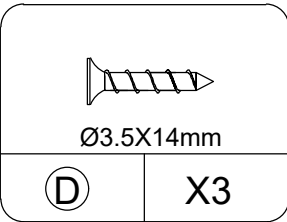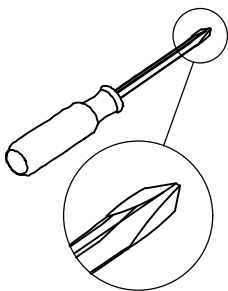


STEP12

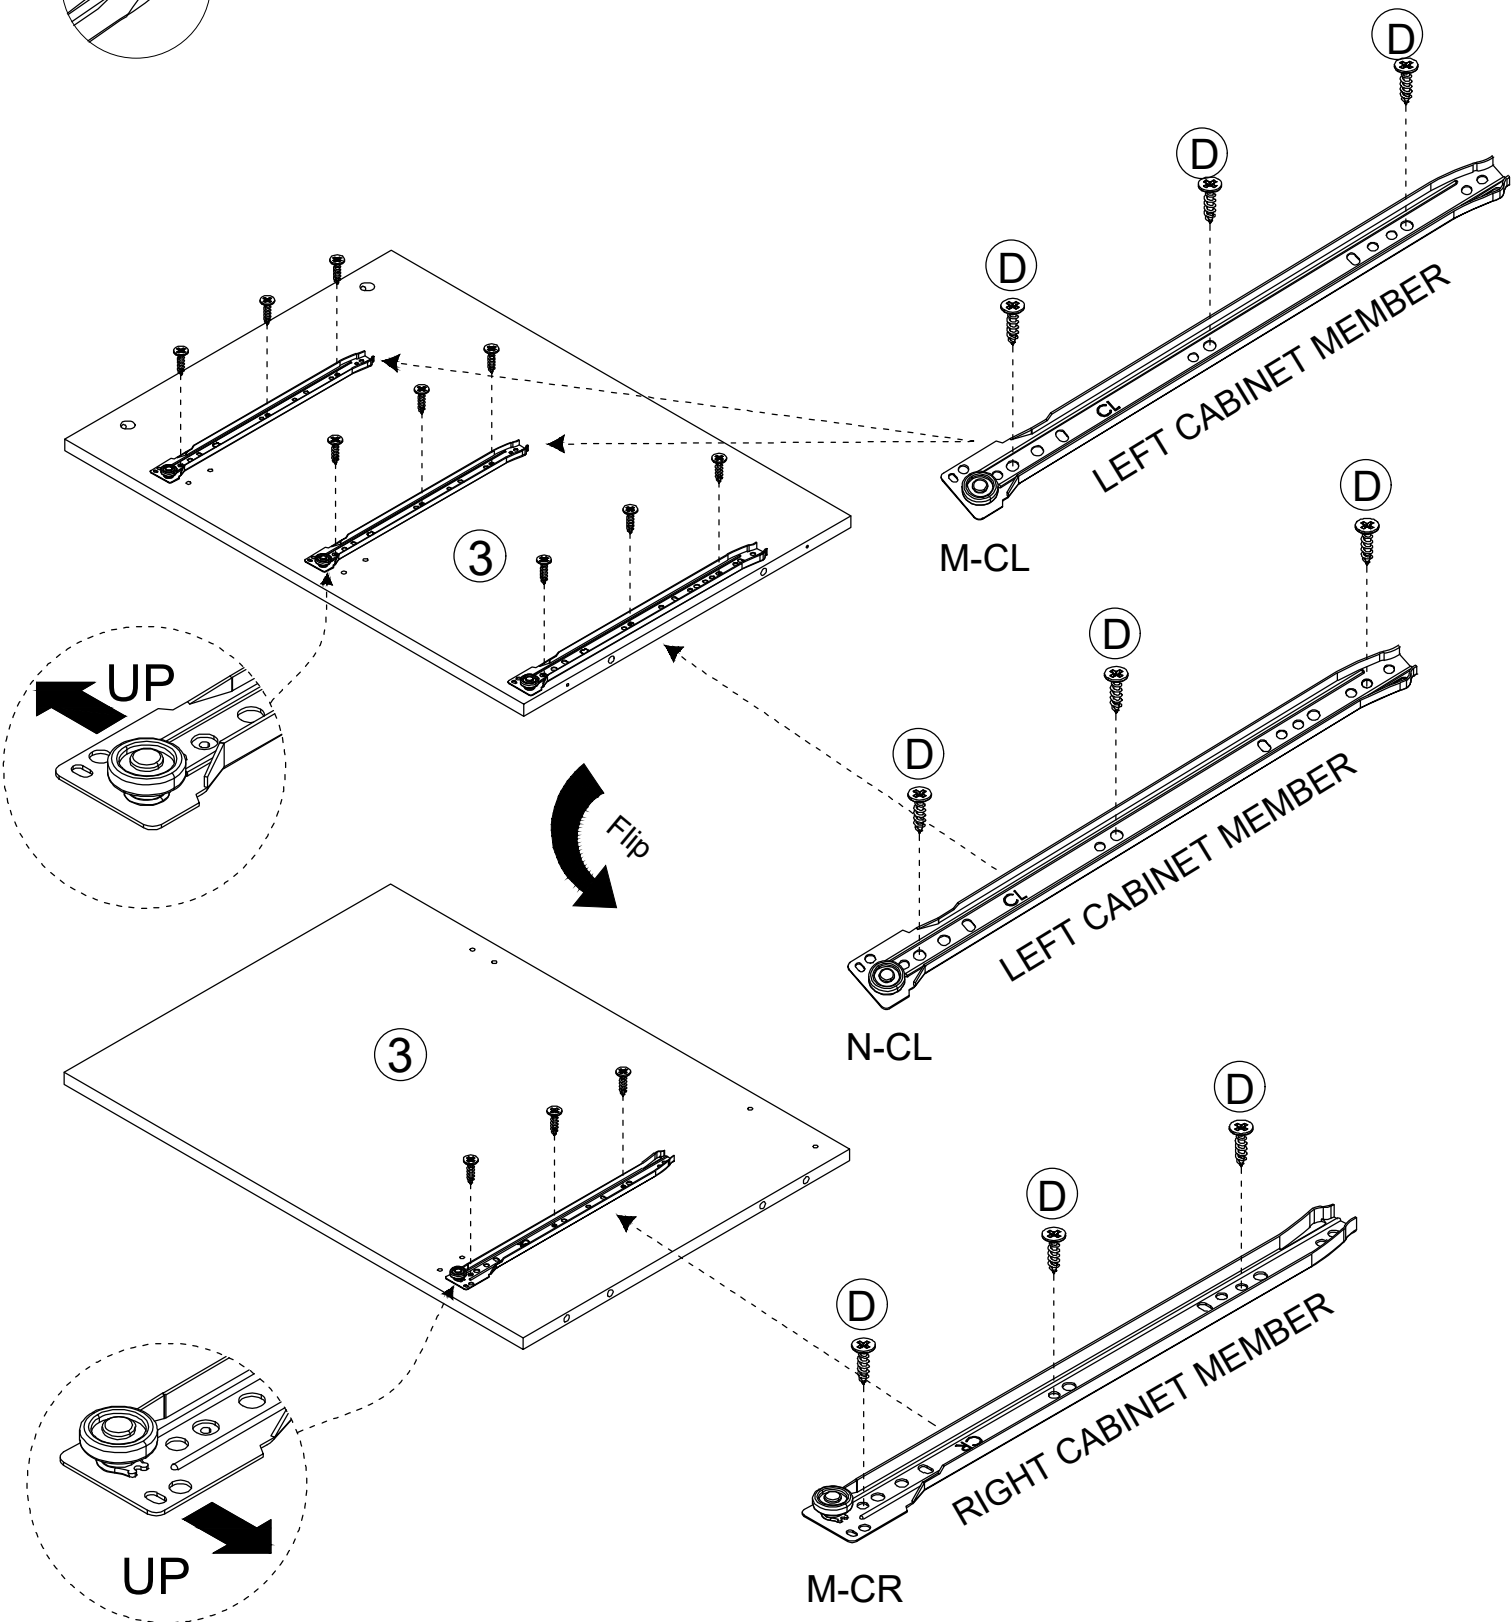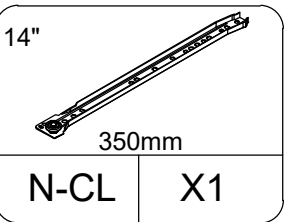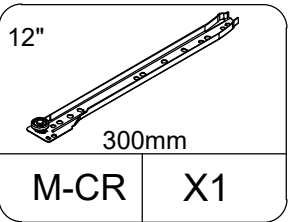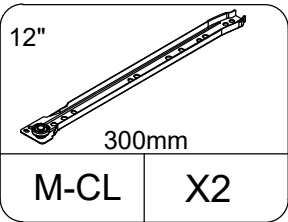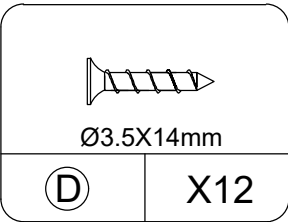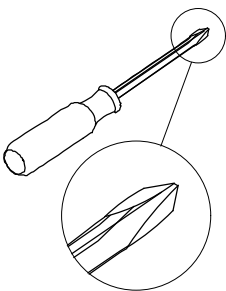

STEP13

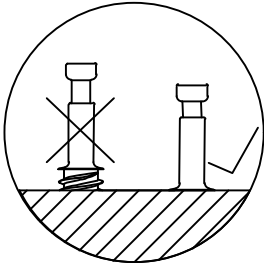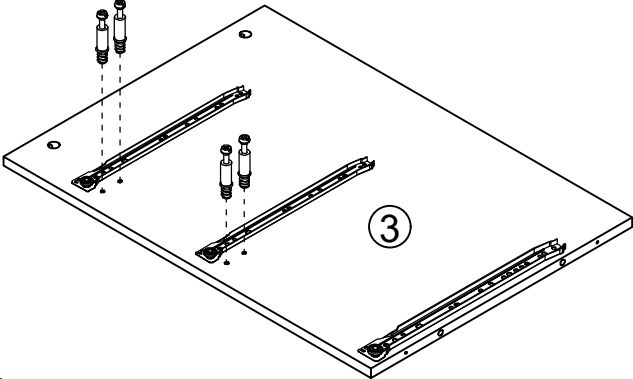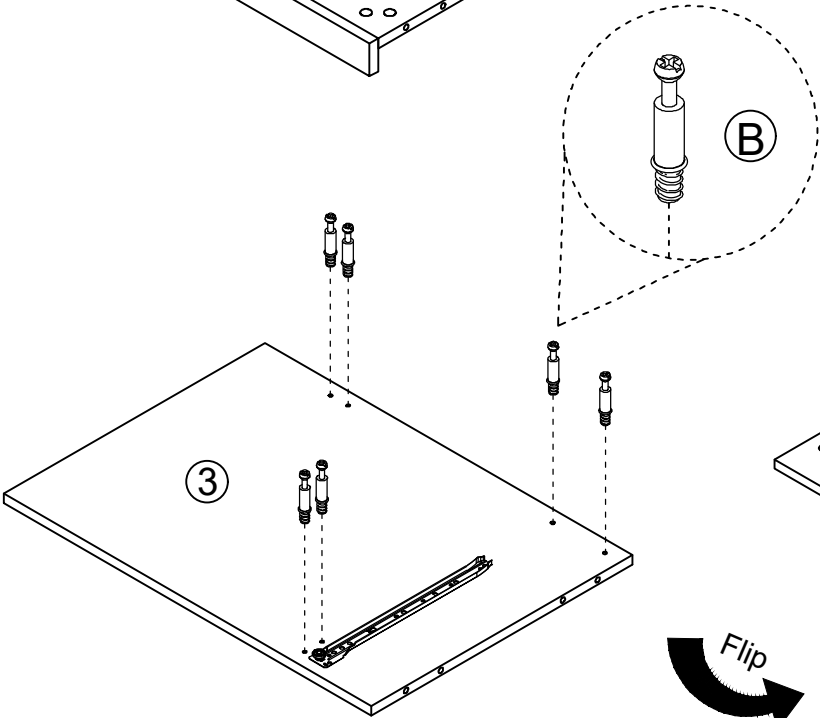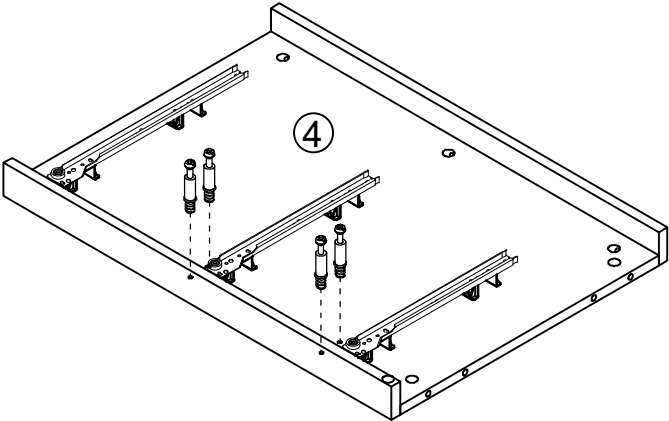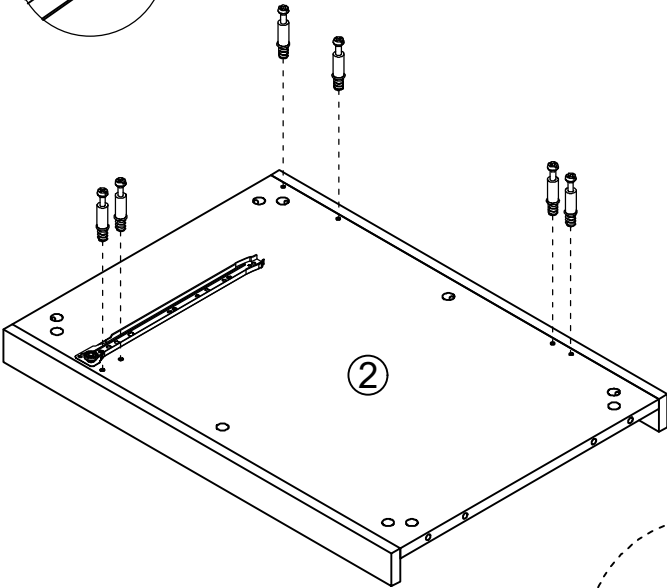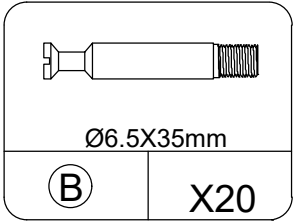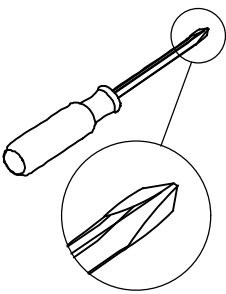


STEP14

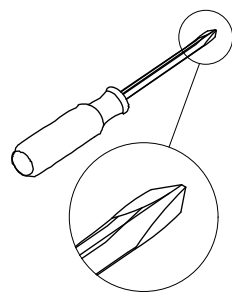


	
Ø15X9.5mm	
A	X12





	
Ø21mm	
J	X4

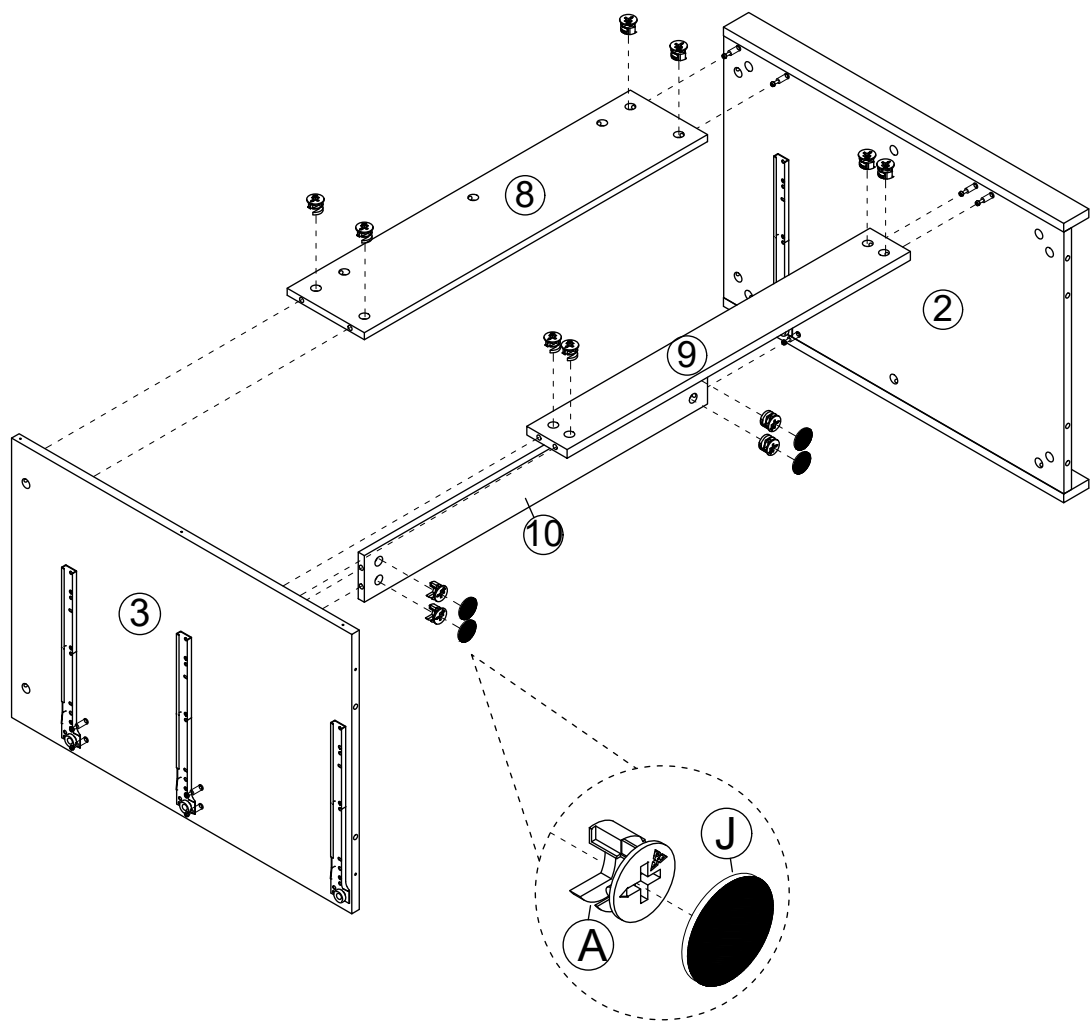


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

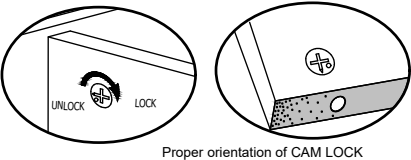

STEP15

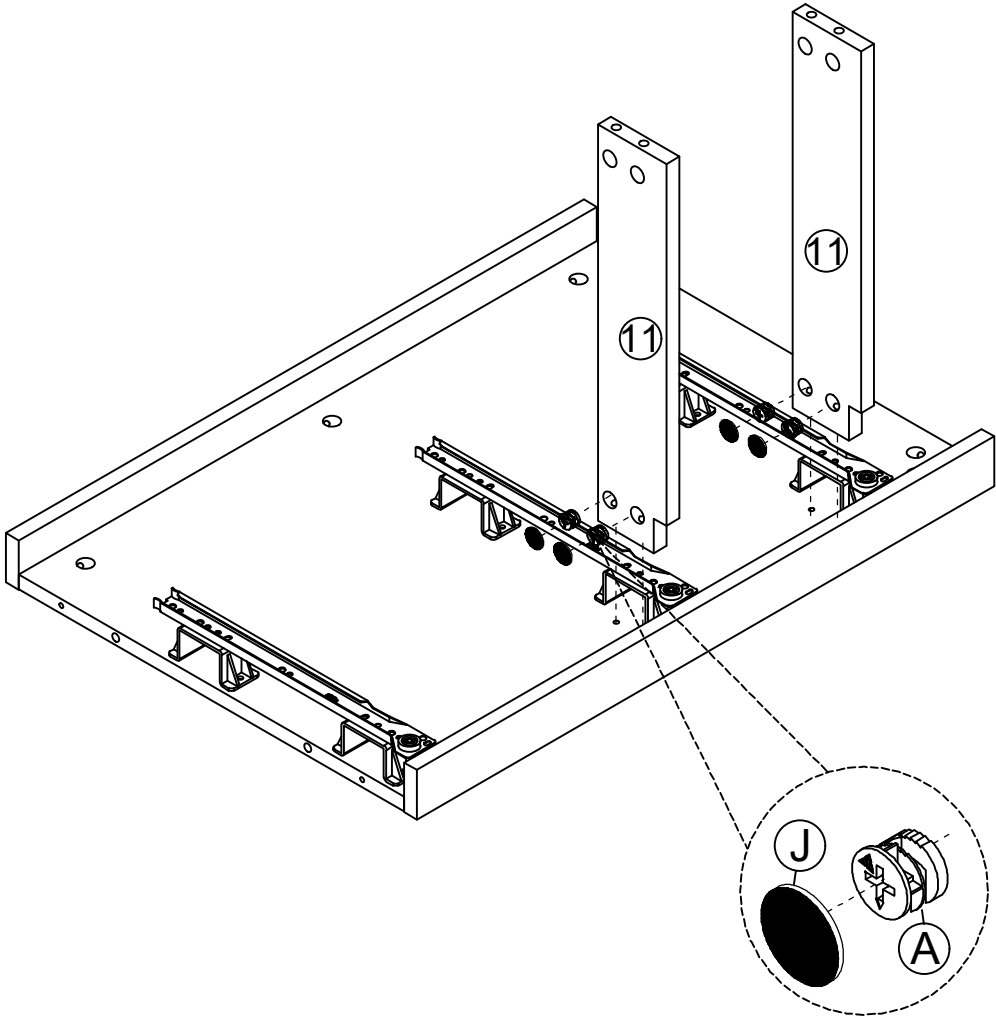
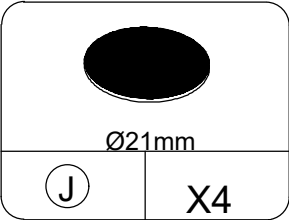
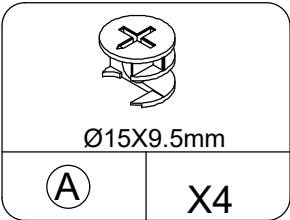
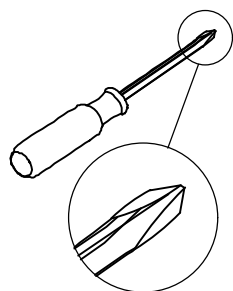


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

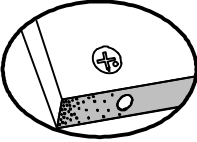


Proper orientation of CAM LOCK

STEP16

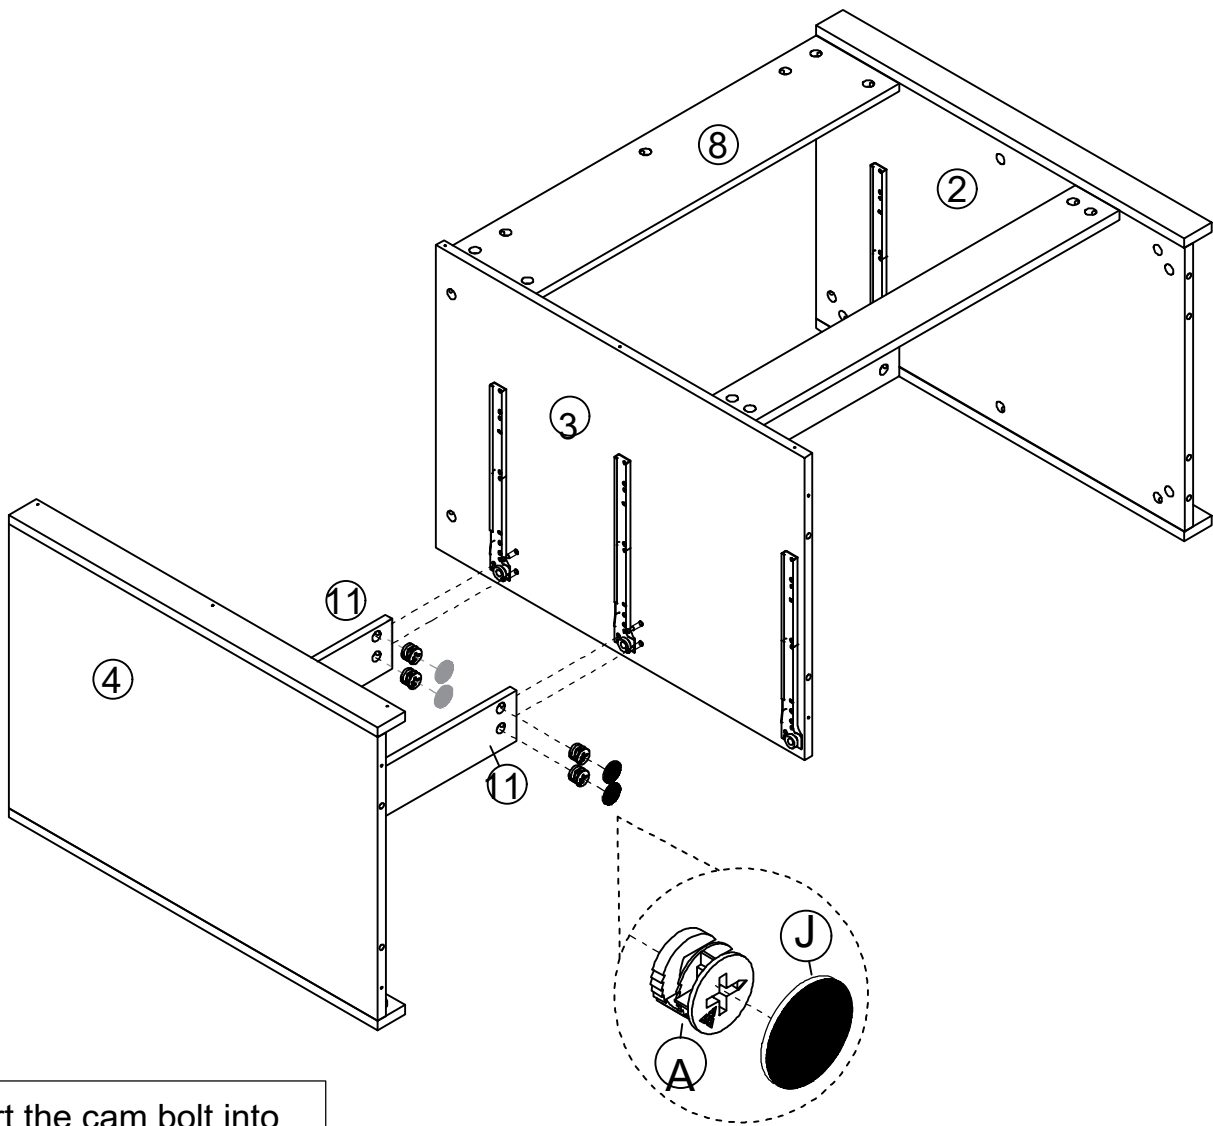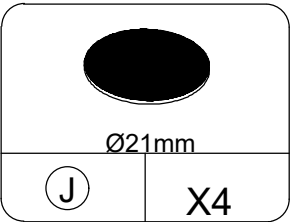
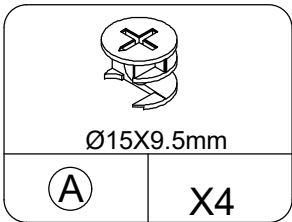
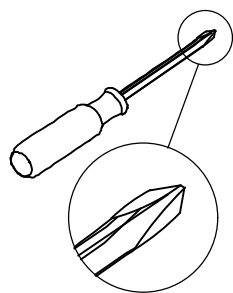


Insert the cam bolt into the hole first, then insert the cam lock and lock it.




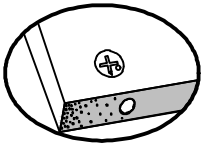


Proper orientation of CAM LOCK



STEP17

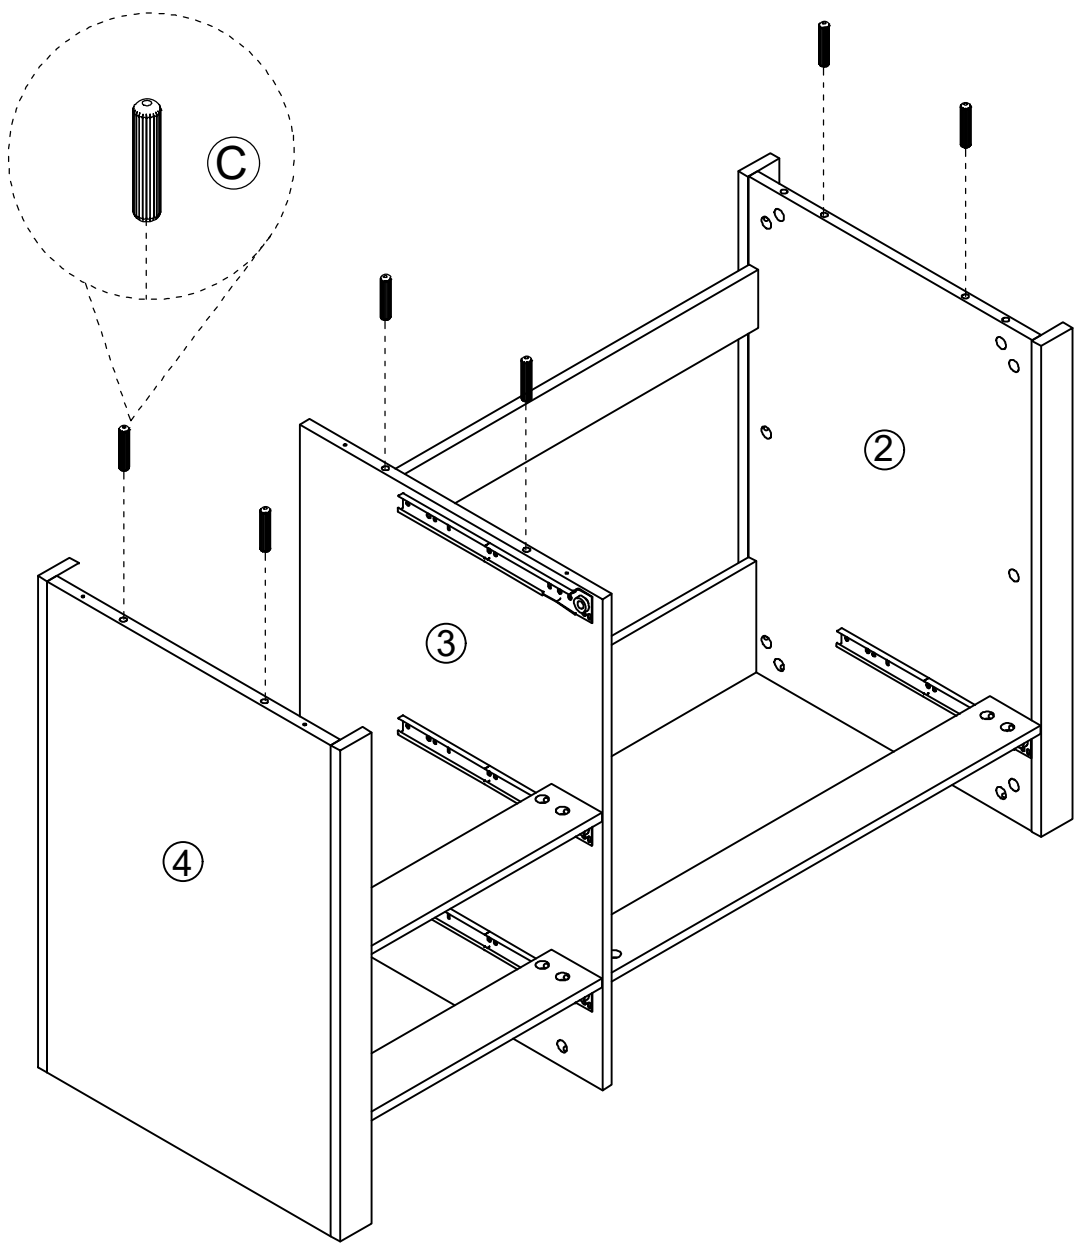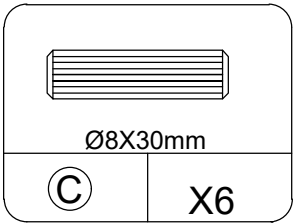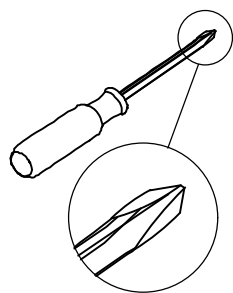






STEP18

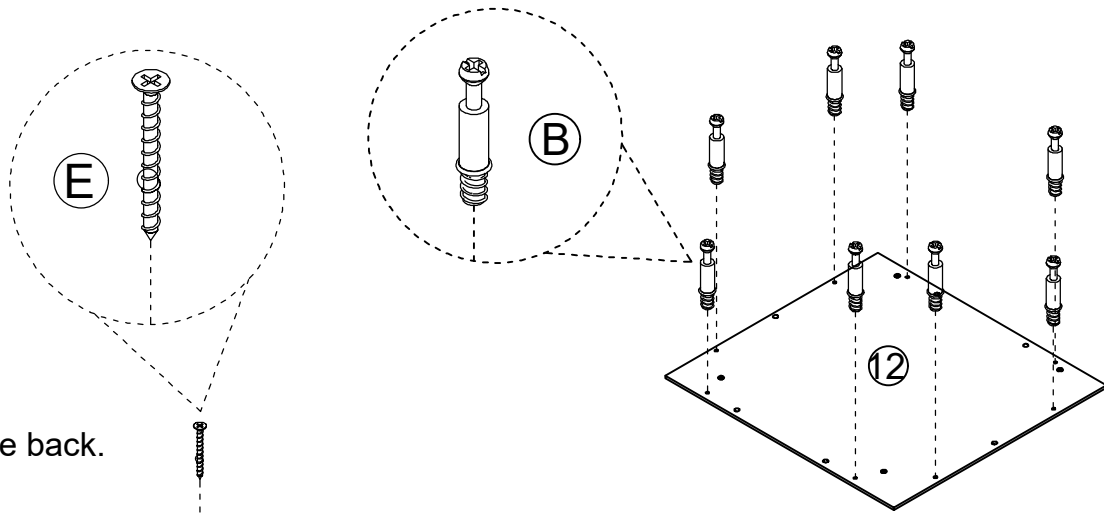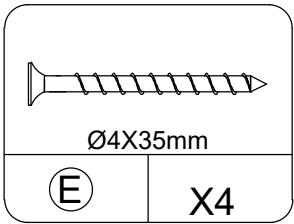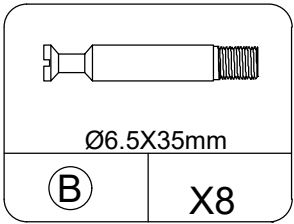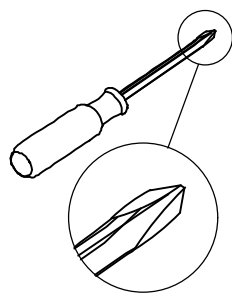











There are holes in the back.

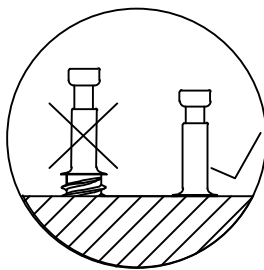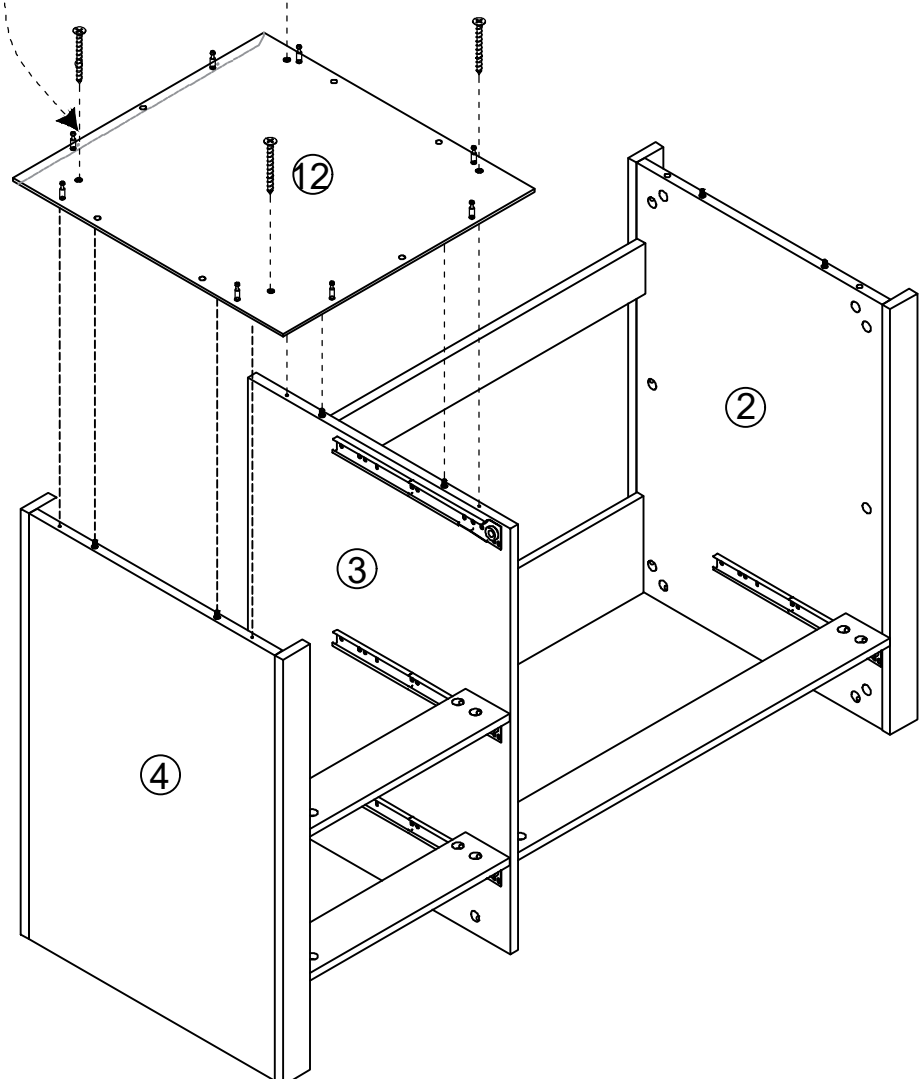





STEP19

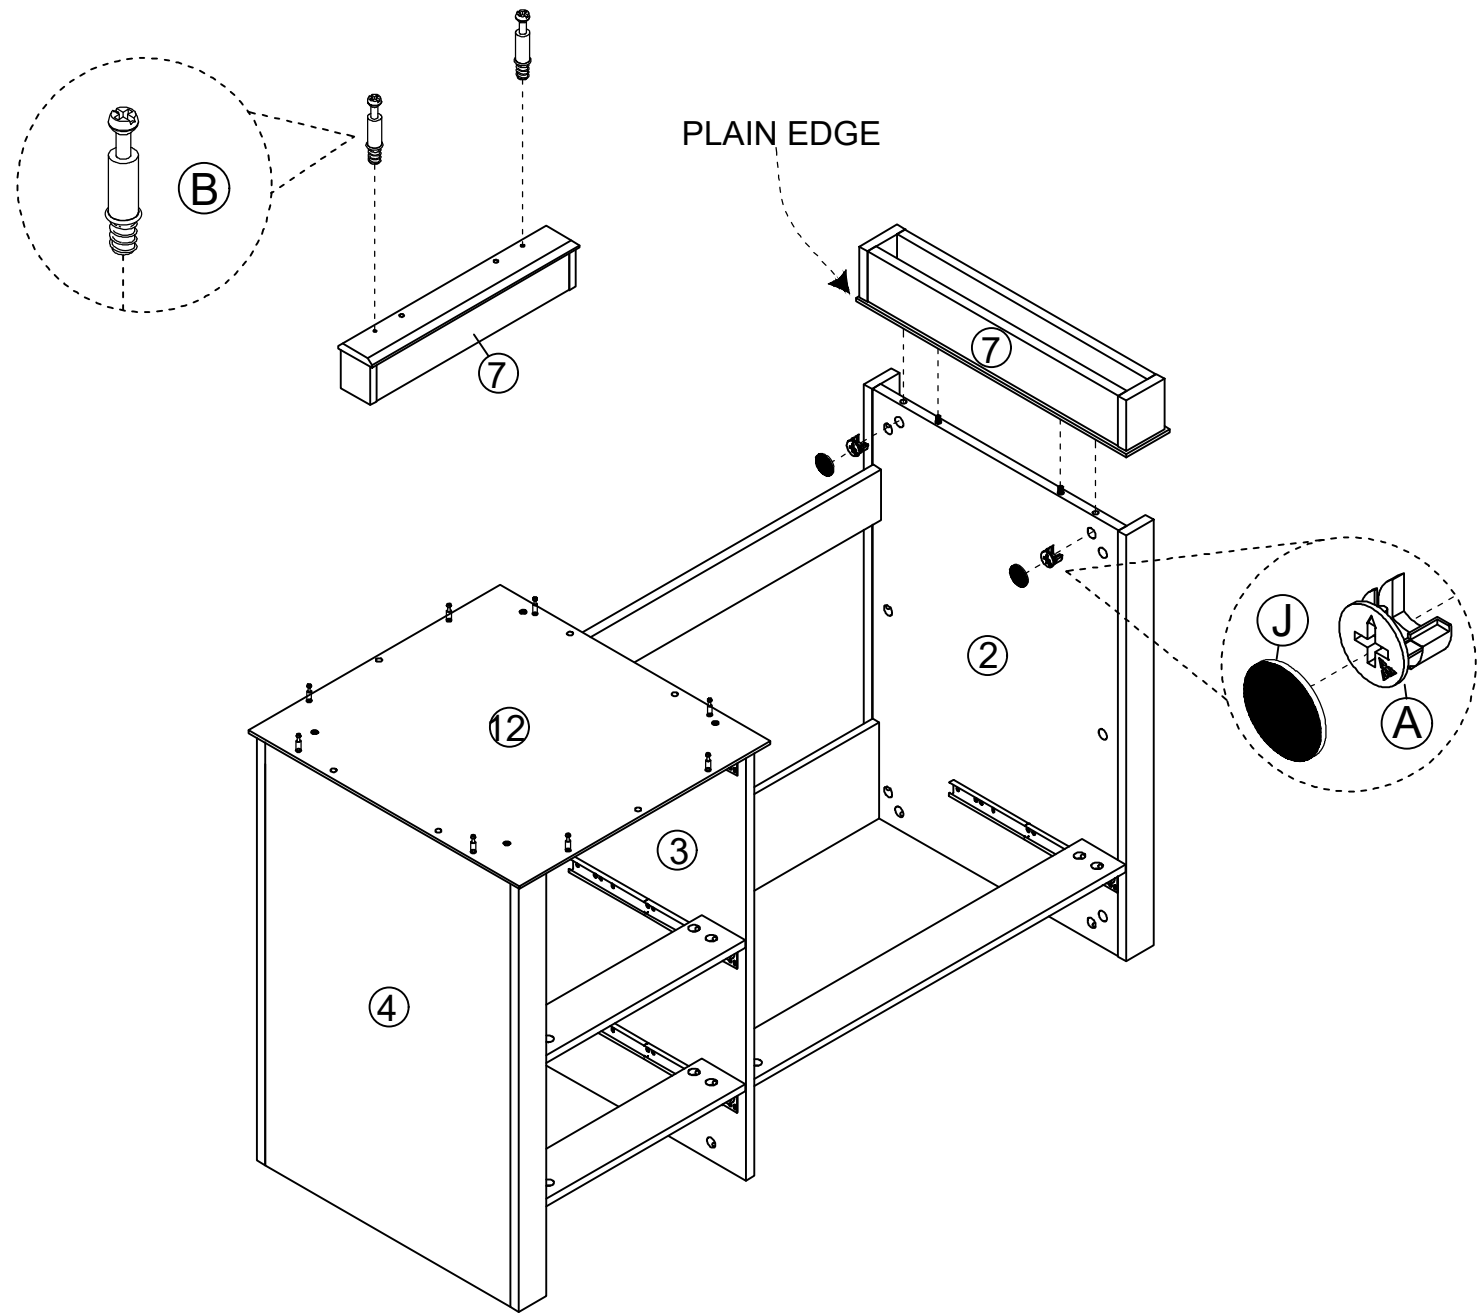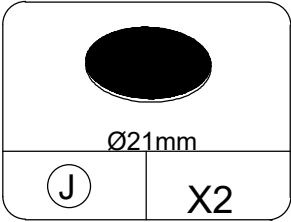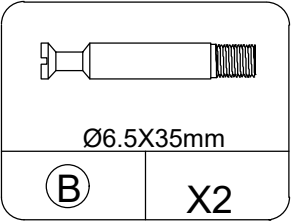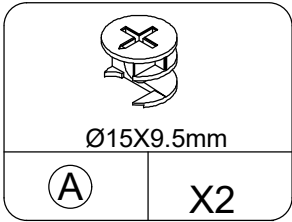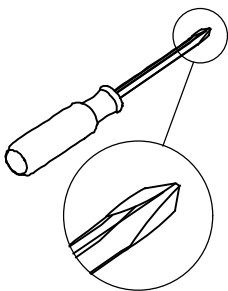


STEP20

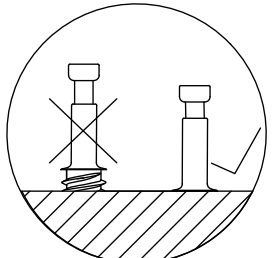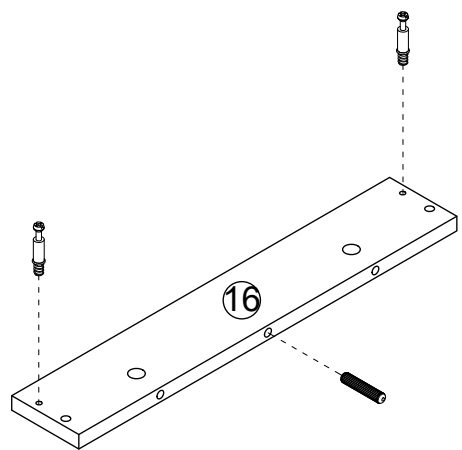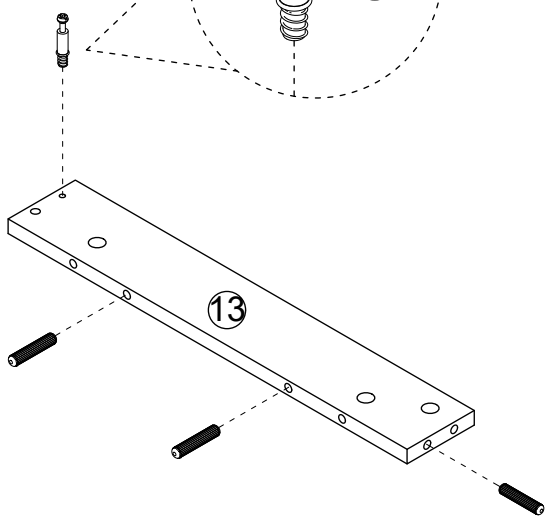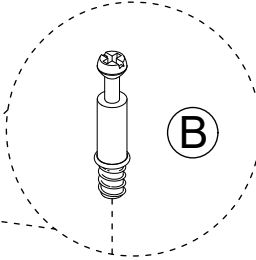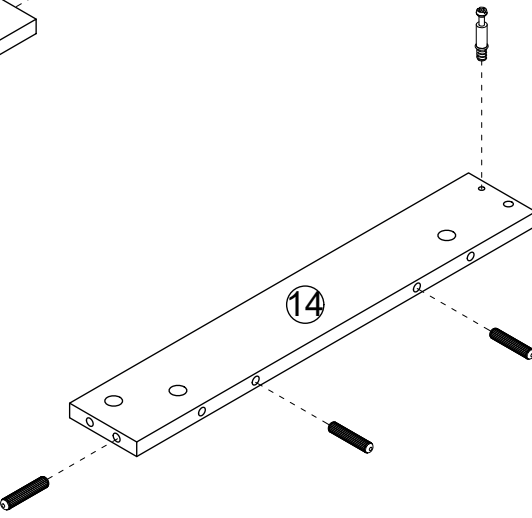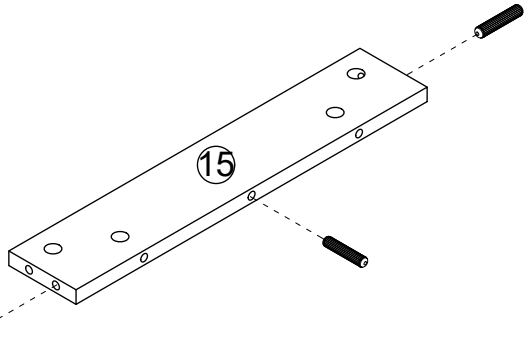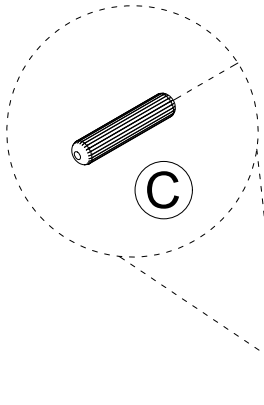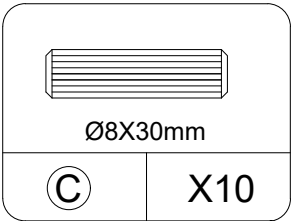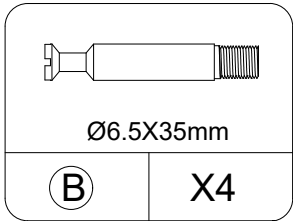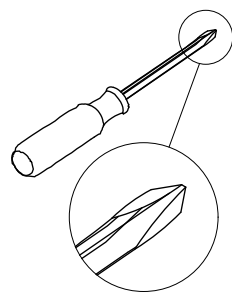

STEP21

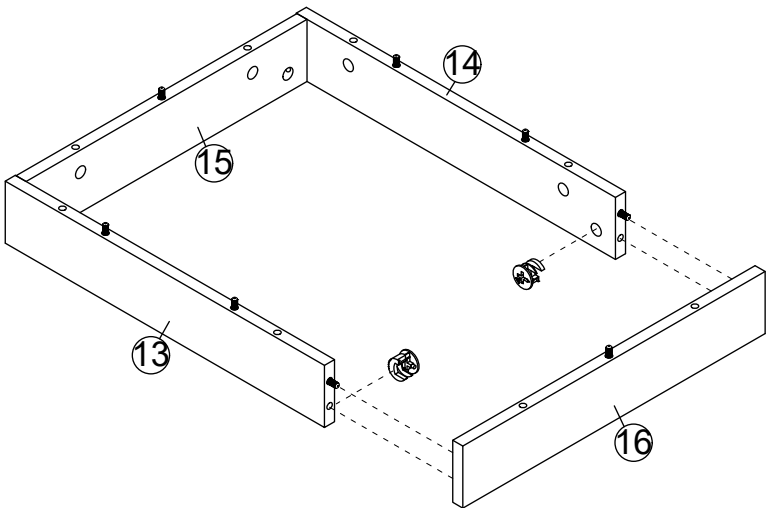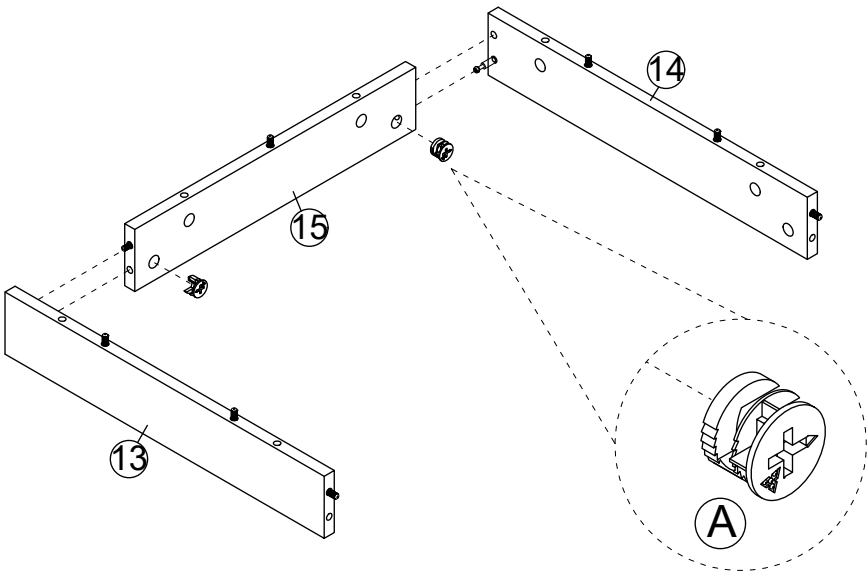
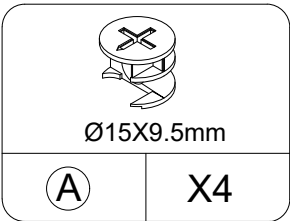
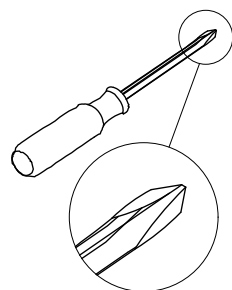


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

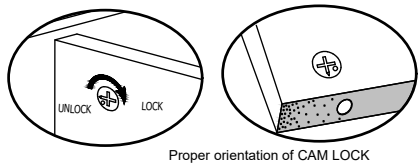


Proper orientation of CAM LOCK

STEP22

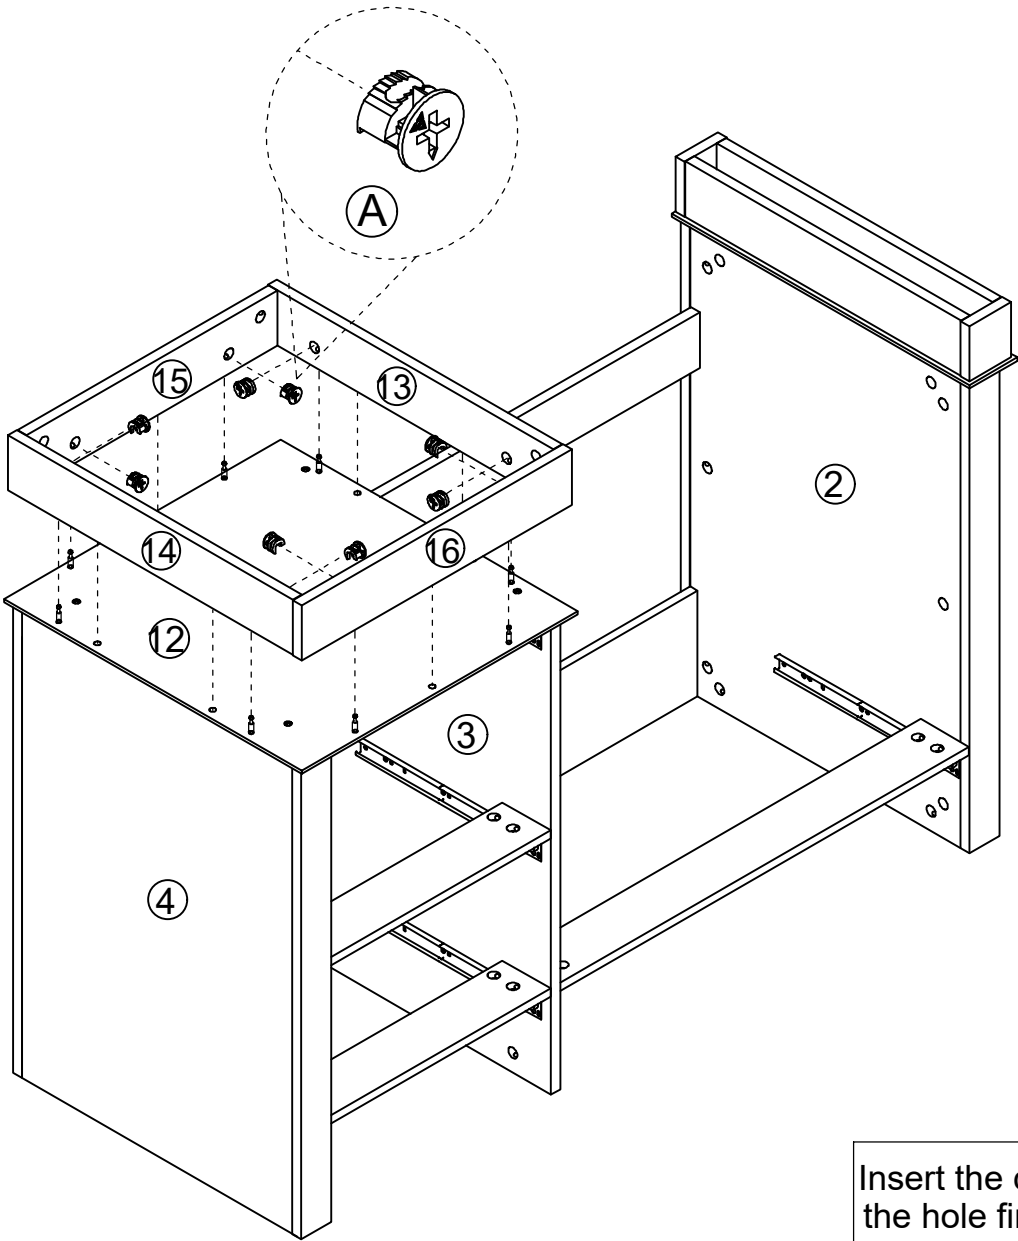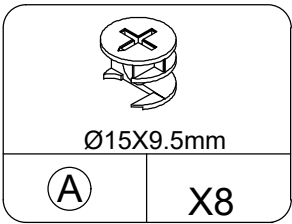
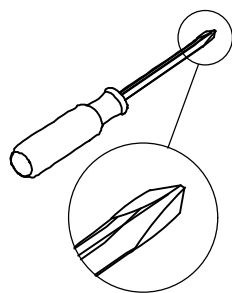


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

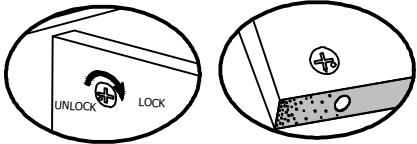




Proper orientation of CAM LOCK

STEP23

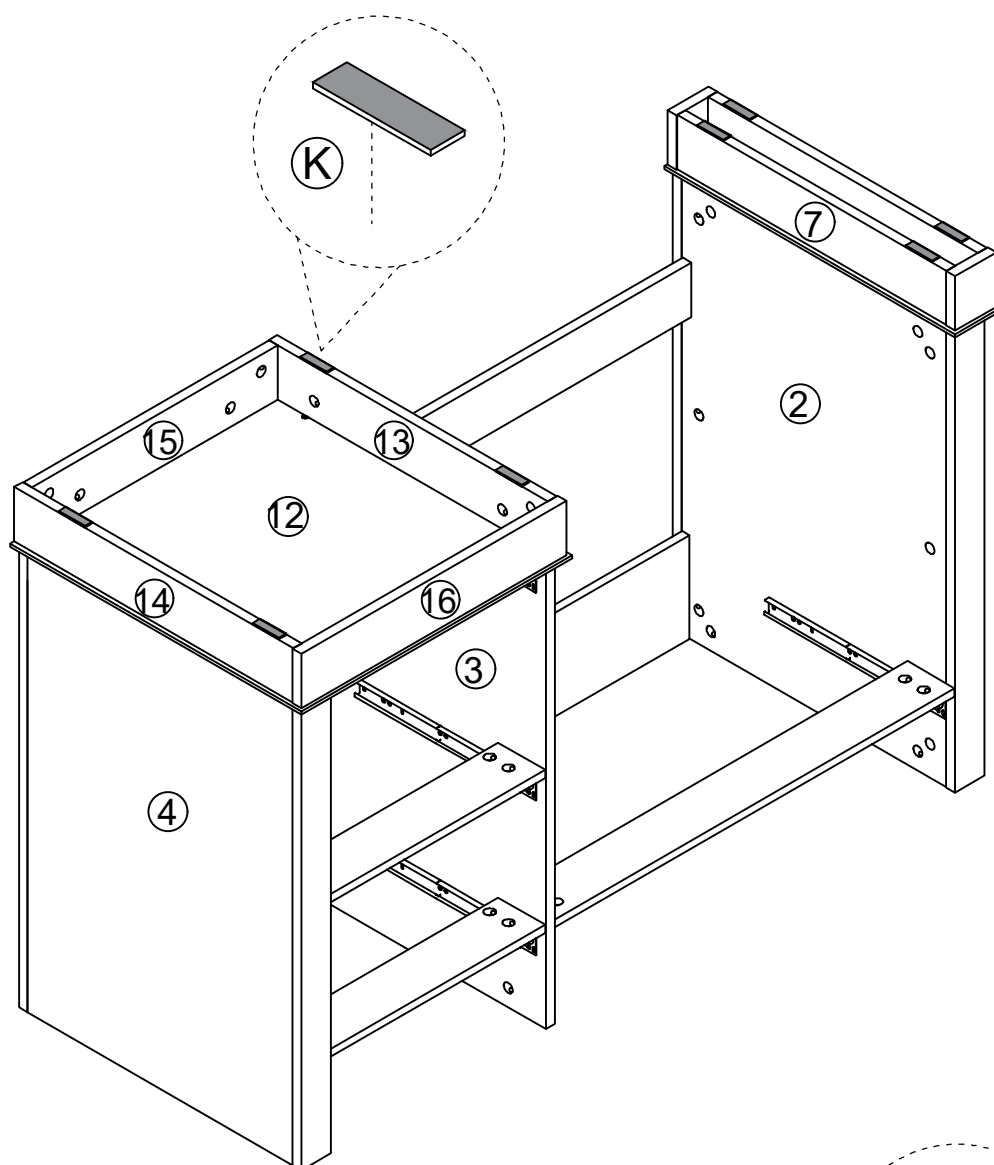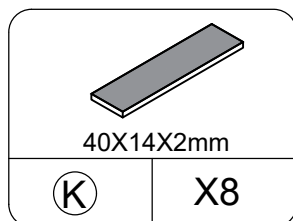


Tear off the protective film on the back of the part K and stick it to the bottom of the plate.





STEP24

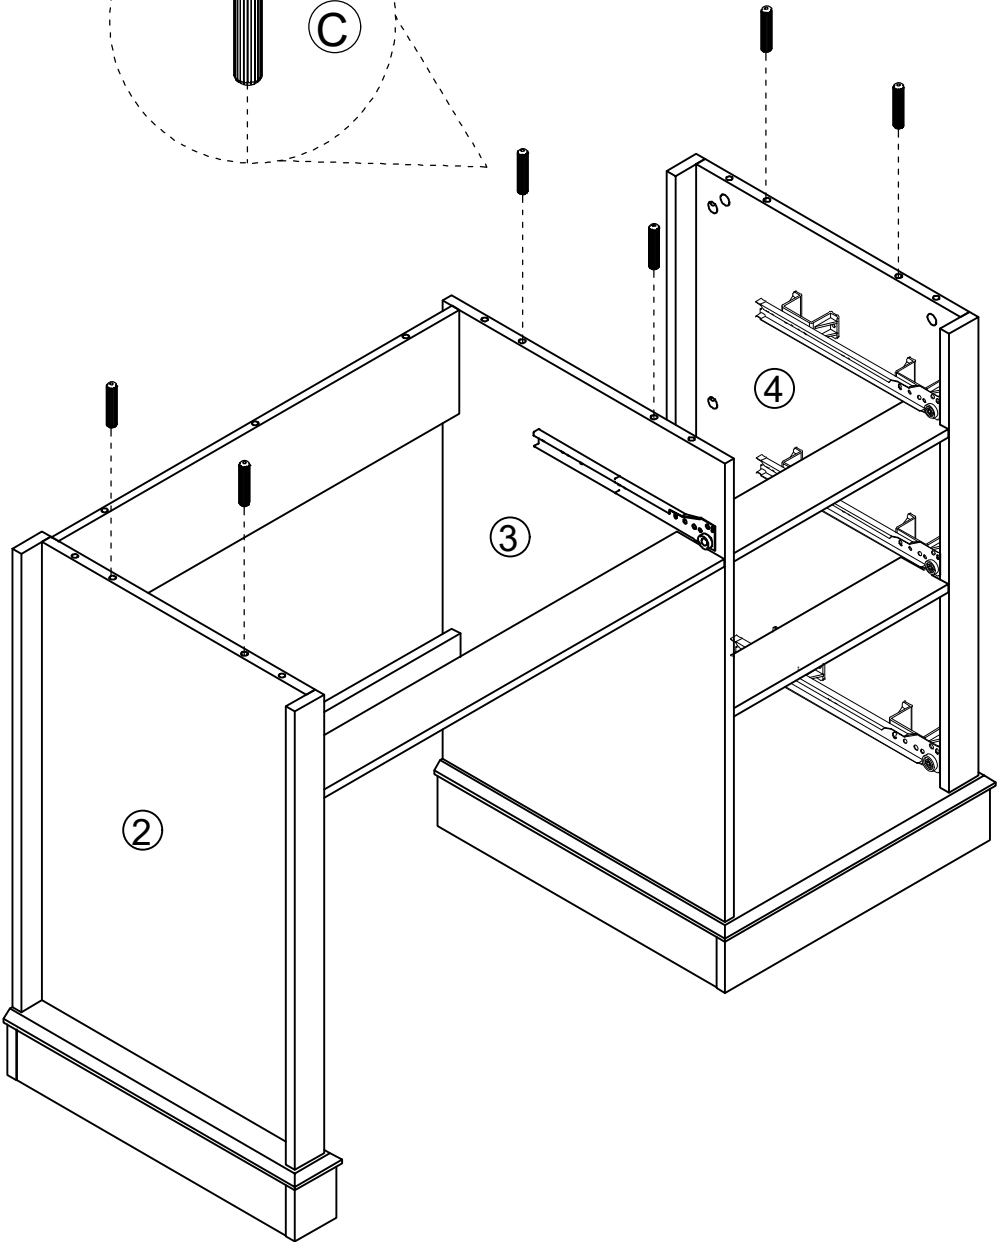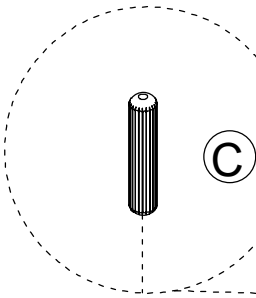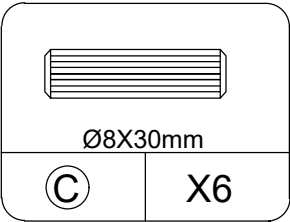

STEP25

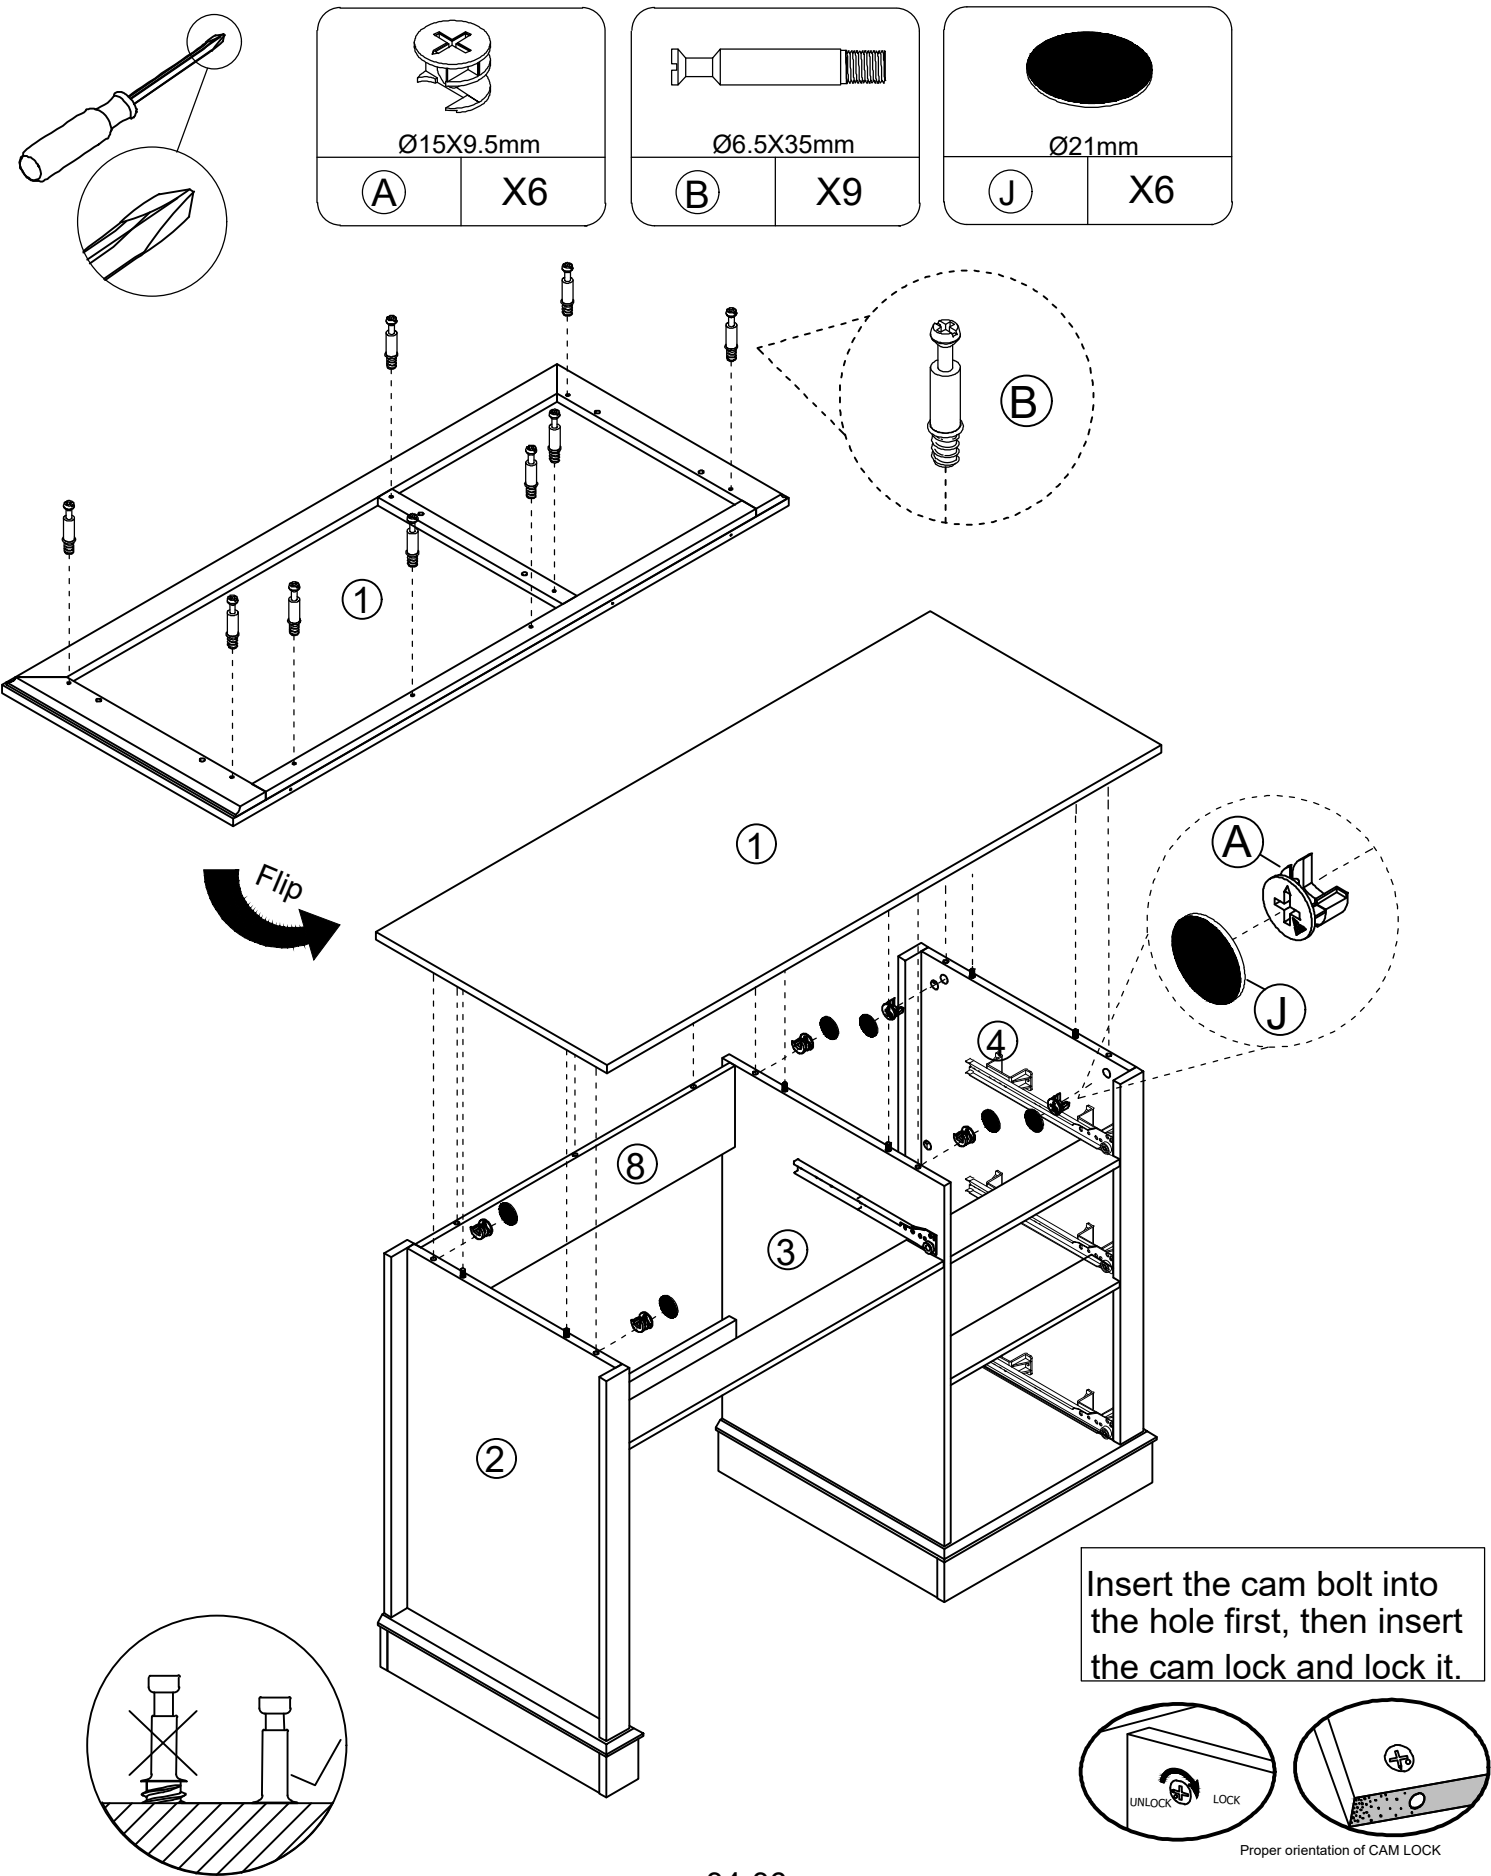

STEP26

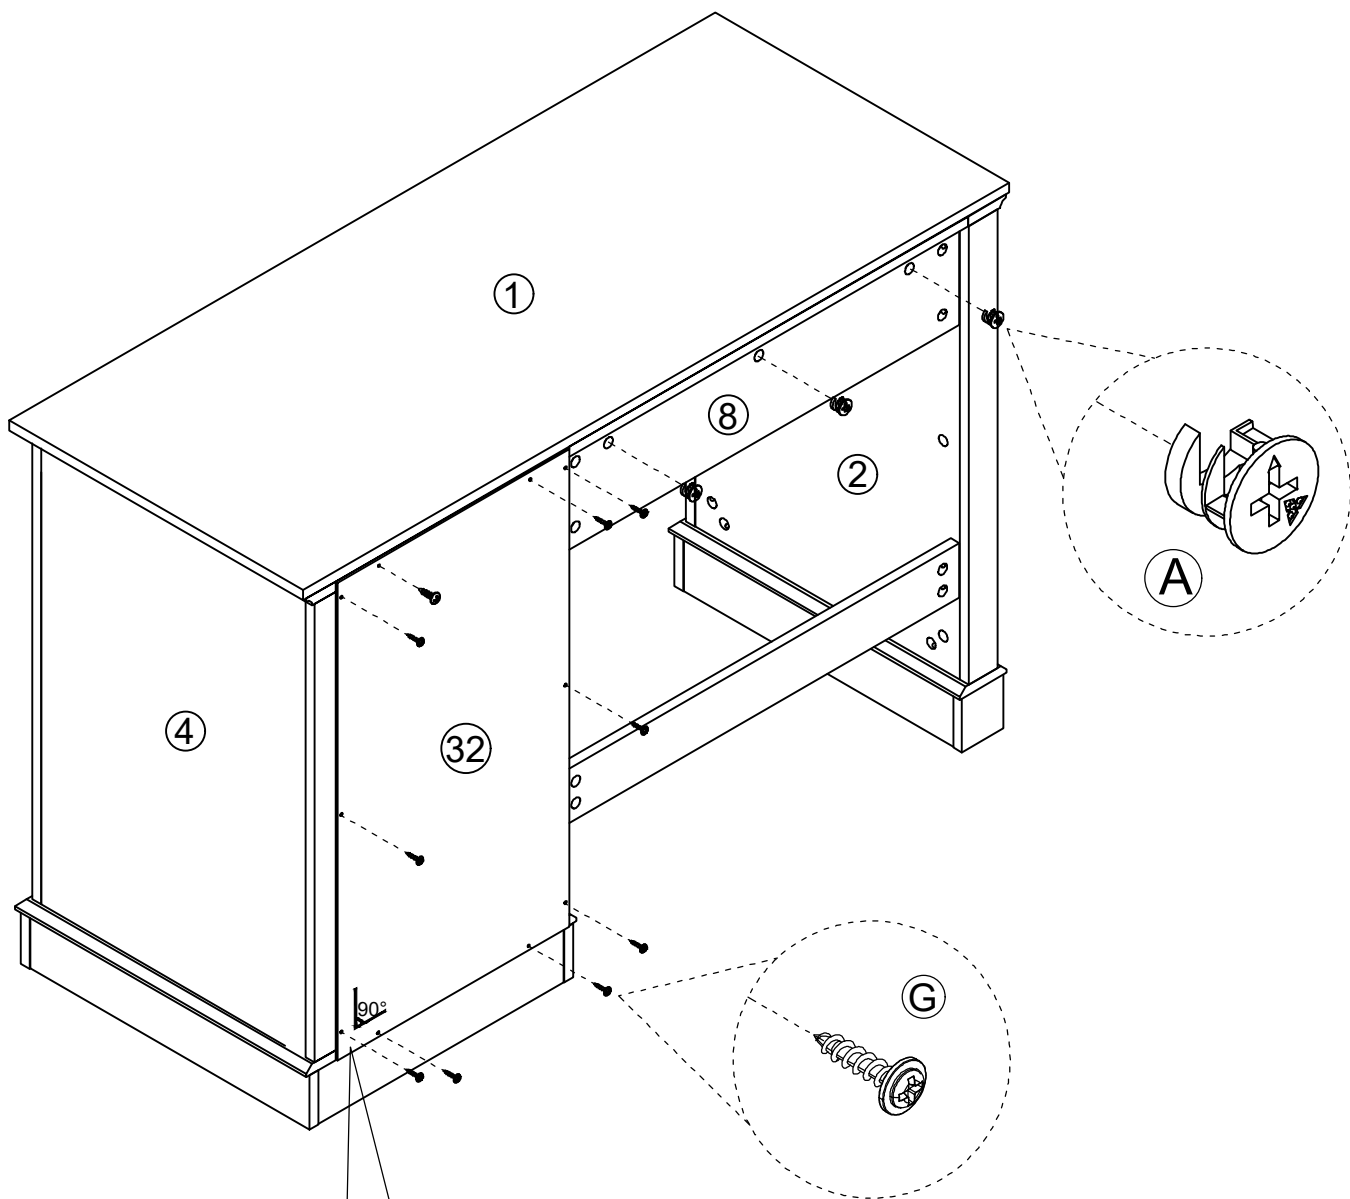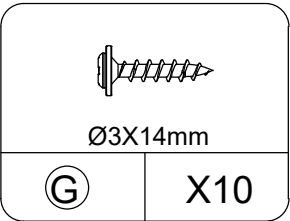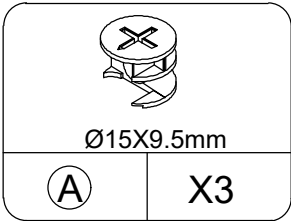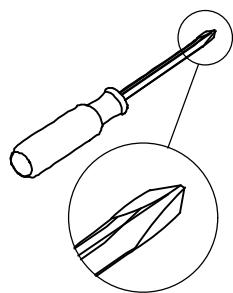

Before attaching the back panel,
be sure that the unit is at 90°.

STEP27

