


USER MANUAL

METAL BED FRAME WITH HEADBOARD

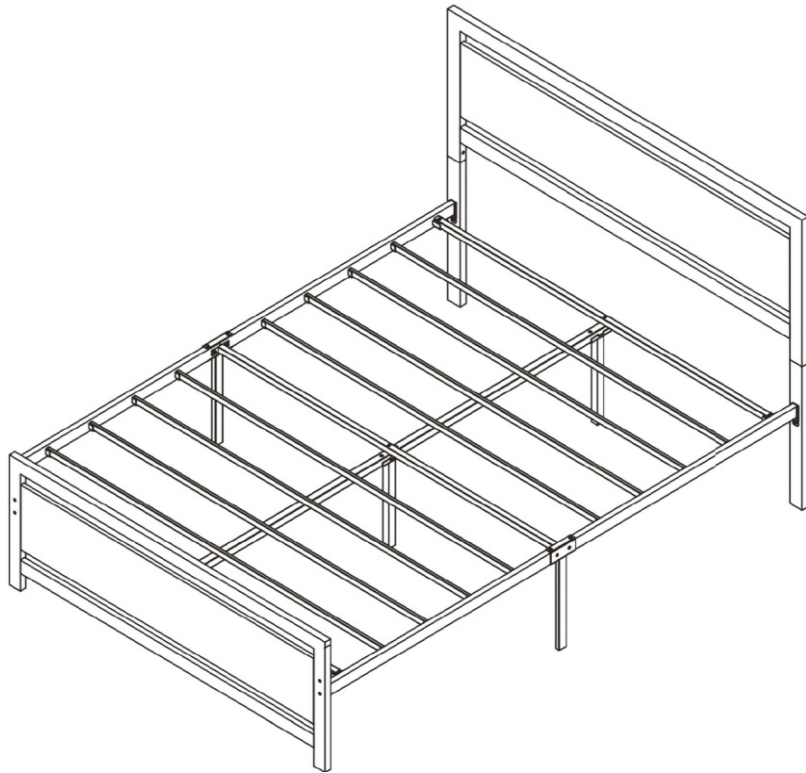

We are devoted to provide the best products and services for customers. Please contact us via the '**Contact seller**' button in the detail page of your order for any concern and we'll response as soon as possible.

Hardware List

M8*35	
	
A	16PCS

BOLT

M6*15	
	
B	6PCS

BOLT

M8*55	
	
C	7PCS

BOLT

M6*25	
	
D	4PCS


BOLT

4#	
	
E	1 PCS




HEX KEY

Becareful

This 7 # piece needs
to be finally installed

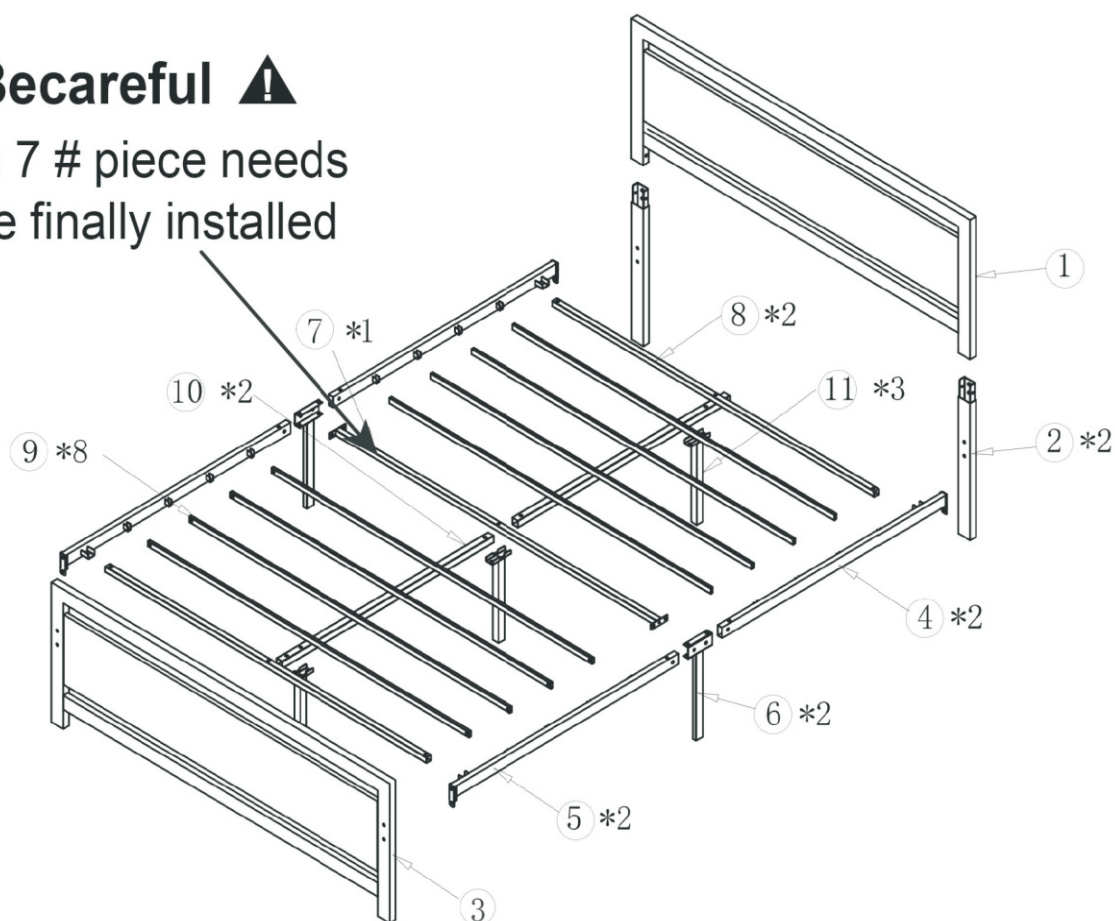


COMPONENTS

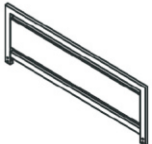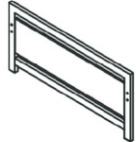	①	1PC
	②	2PC
	③	1PC
	④	2PC
	⑤	2PC
	⑥	2PC
	⑦	1PC
	⑧	2PC
	⑨	8PC
	⑩	2PC
	⑪	3PC

Step 1:	
B M6*15	6PCS
E 4#	1PCS

Remark: Before you attach Part 2 to Part 1,
remove caps of Part 1 first !
Attach Part (2) to Part (1)with bolt (B) using hex key (E).

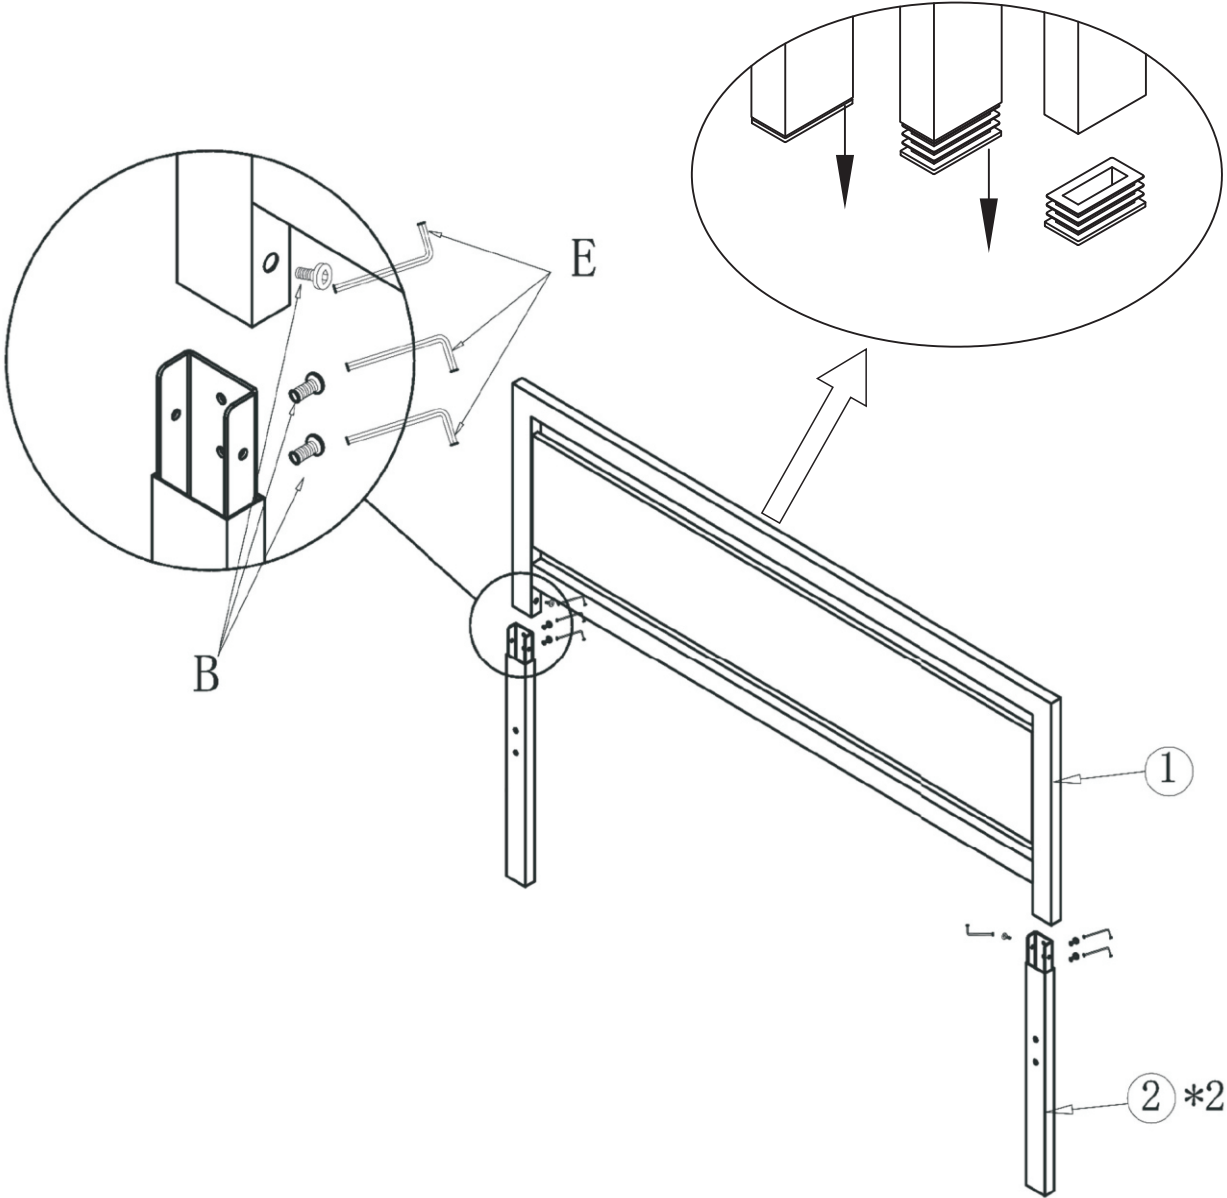

Step 2:

A M8*35

4PCS

C M8*55


4PCS

E 4#

1PCS

Attach Part (11) to Part (10) with bolt (A) using hex key (E).

Attach Part (4,5) to Part (6) with bolt (C) using hex key (E).

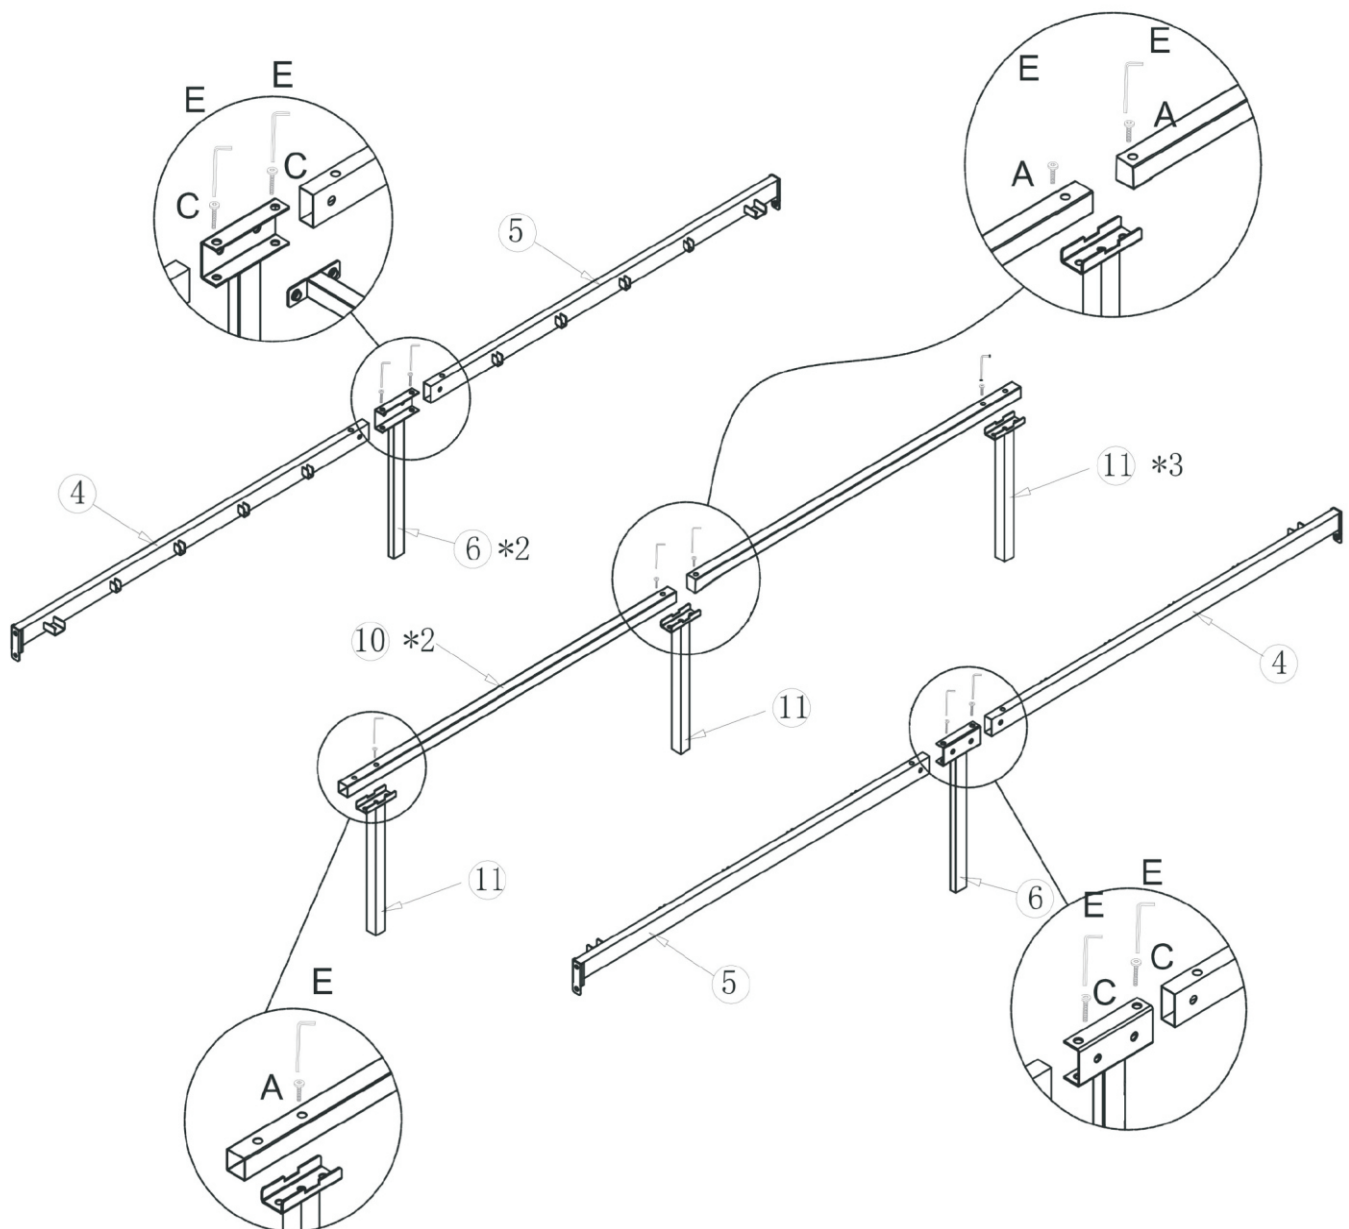

Step 3:

D M6*25

4PCS

C M8*55


2PCS

E 4#


1PCS

Attach Part (8) to Part (4,5) with bolt (D) using hex key (E).

Attach Part (8) to Part (10) with bolt (C) using hex key (E).

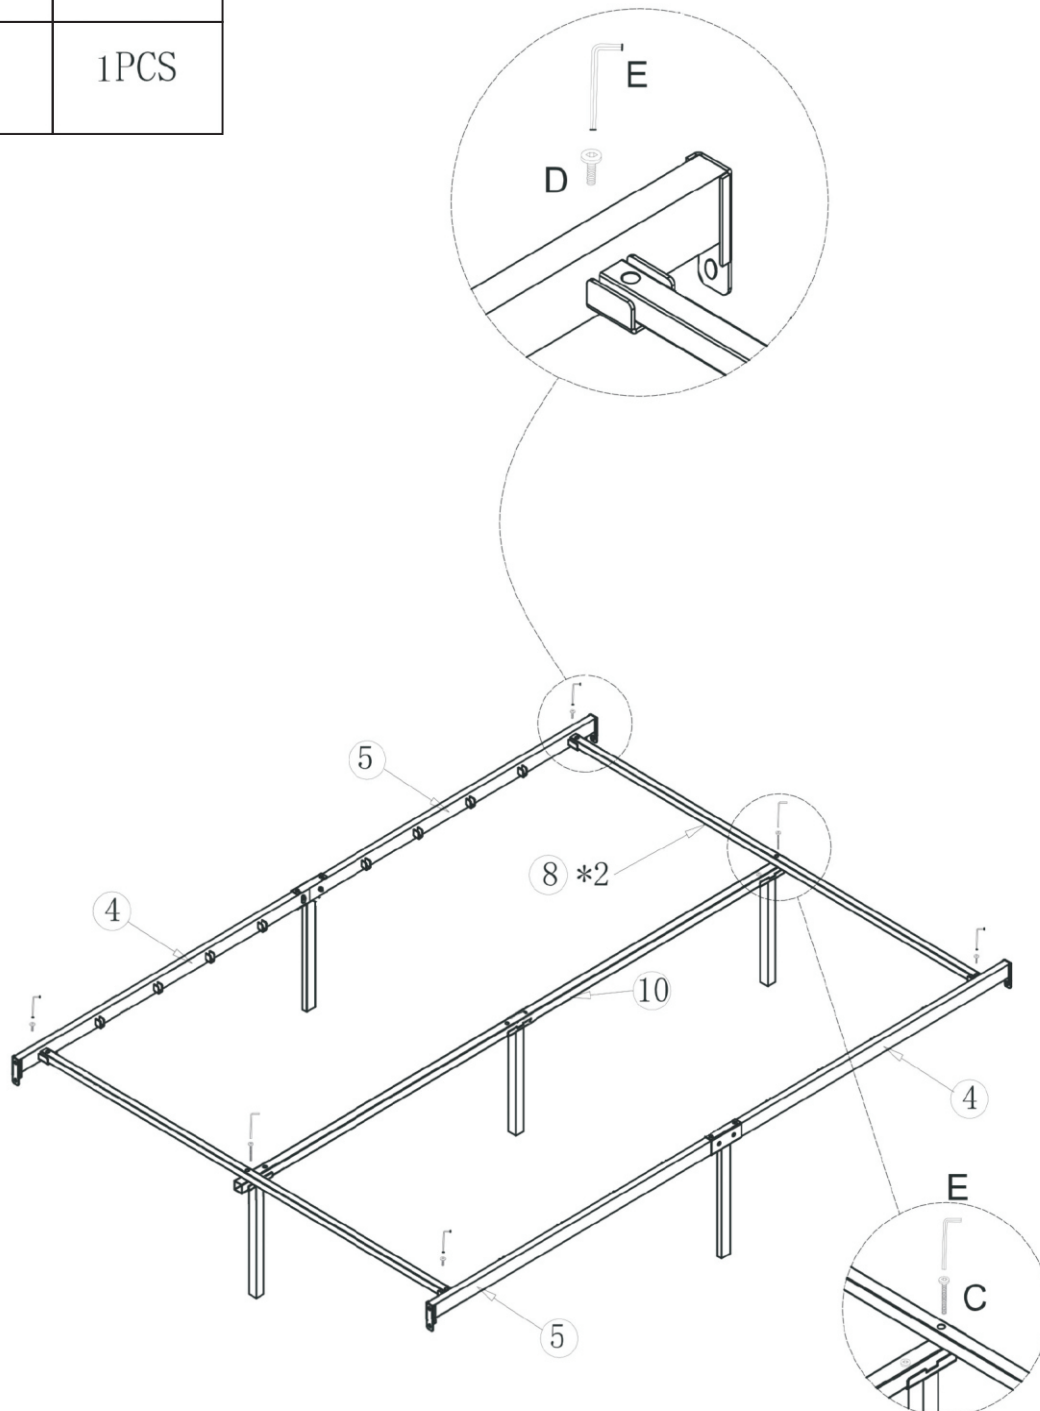


Step 4:		Attach Part (4,5) to Part (2,3) using bolt (A) with hex key (E).	
A M8*35	8PCS		
E 4#	1PCS		

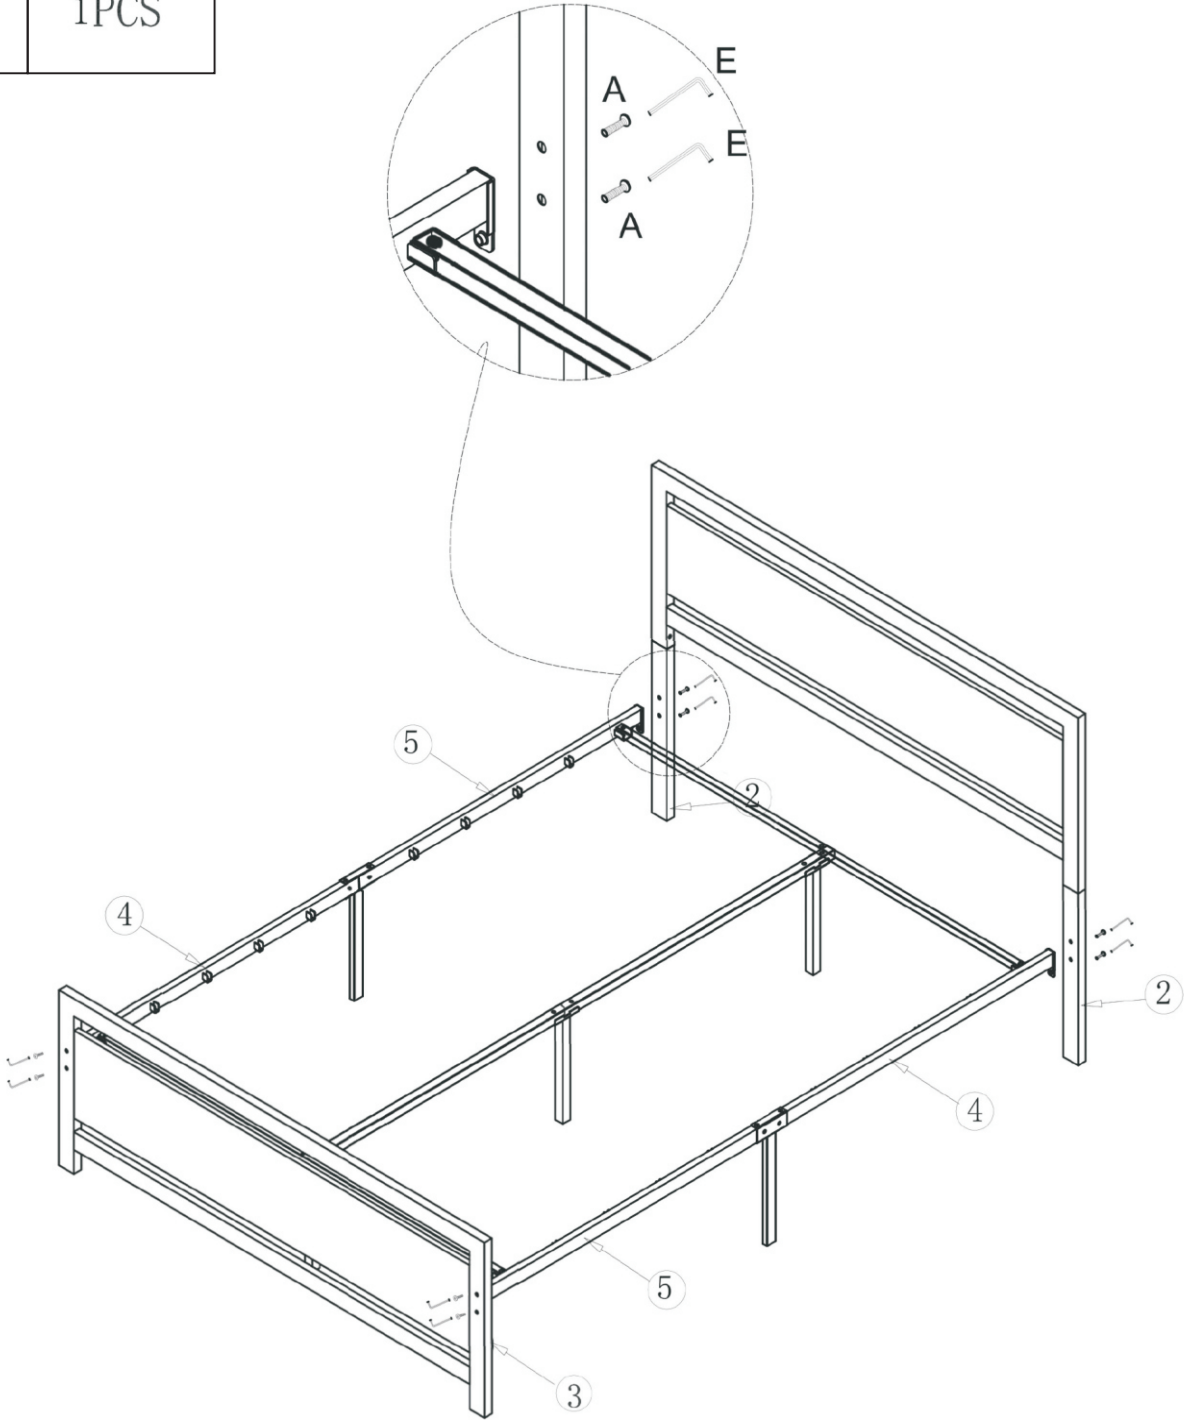

Step 5:

Insert and secure lock Part (9) to the bed frame.



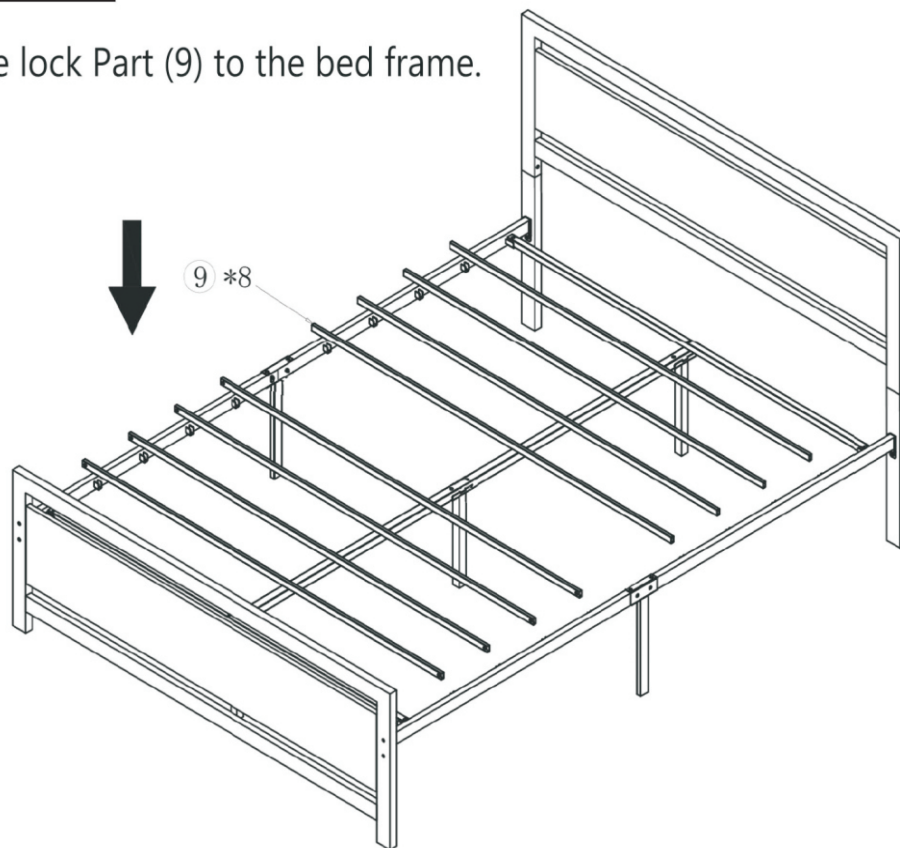


Step 6:

A M8*35 4PCS

C M8*55 1PCS

E 4# 1PCS

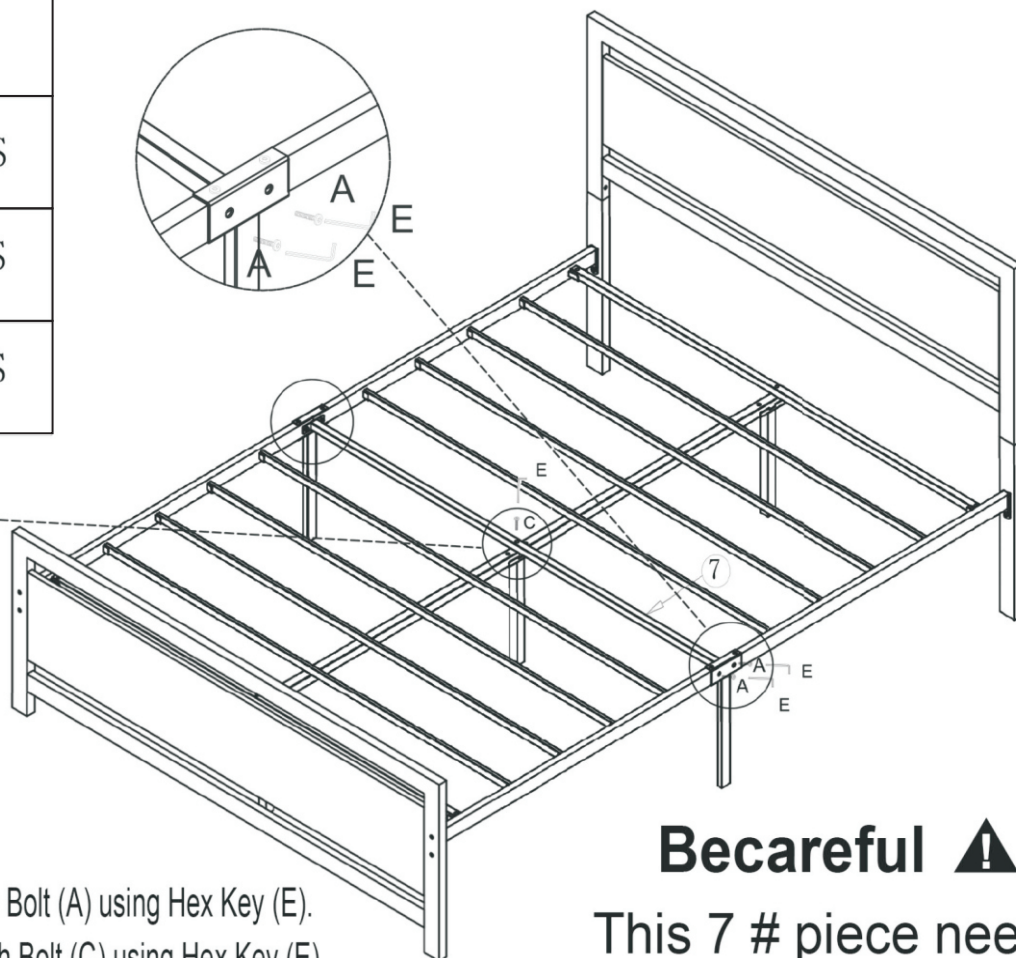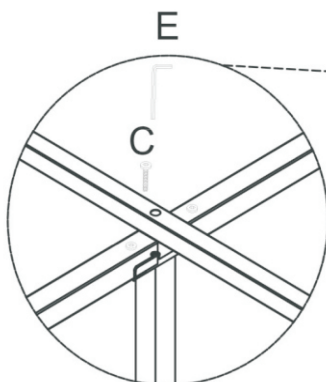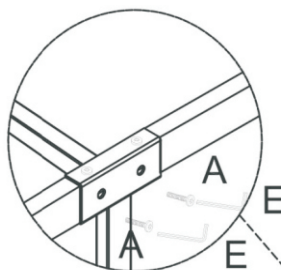

Attach Part (7) to Part(6) with Bolt (A) using Hex Key (E).
Attach Part (7) to Part(11) with Bolt (C) using Hex Key (E).

6

Becareful ⚠

This 7 # piece needs to be finally installed

Step 7:

