

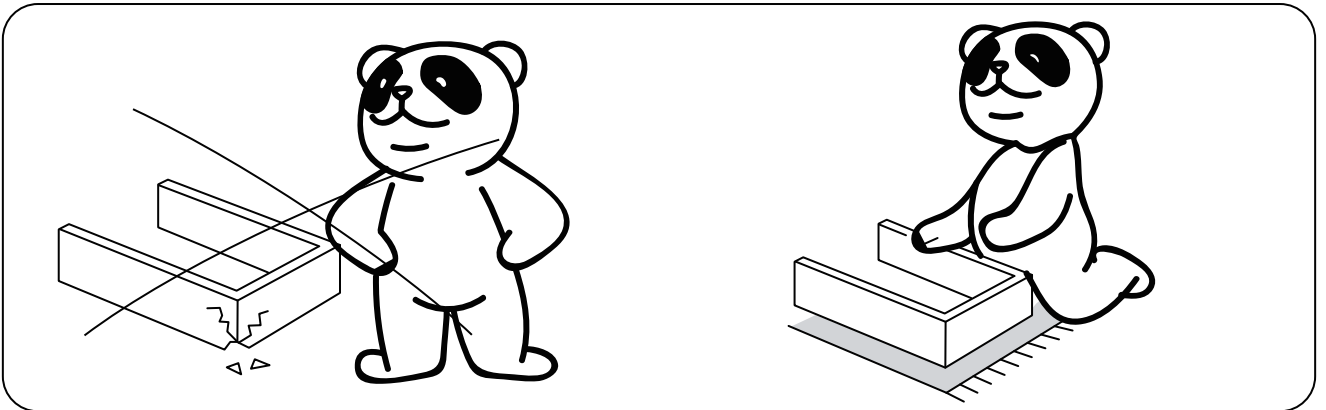


DJ504498
GJ-011-T


Version: 1.0

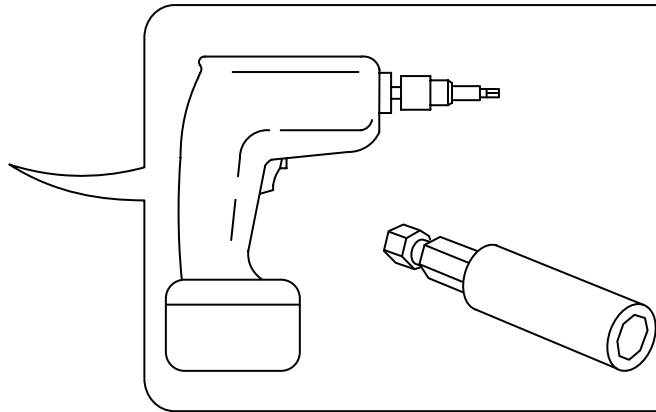

Violent installation is prohibited

















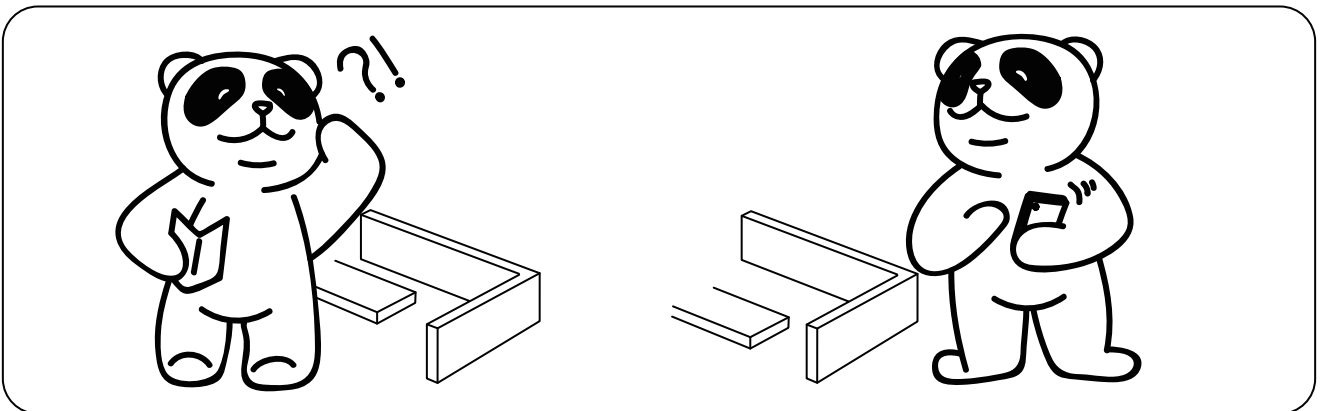


Please call if you need help

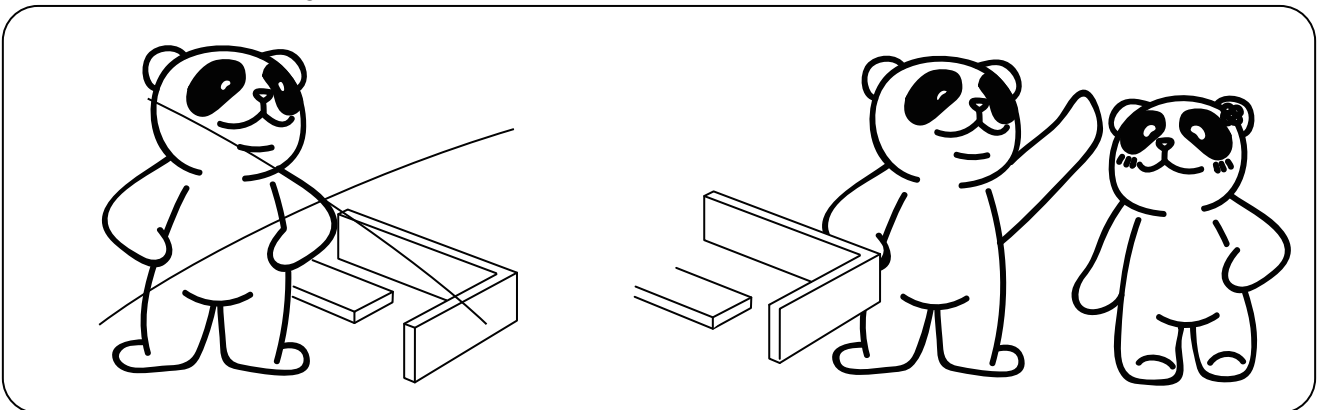


Multi-person cooperation is recommended


Assembly Instruction

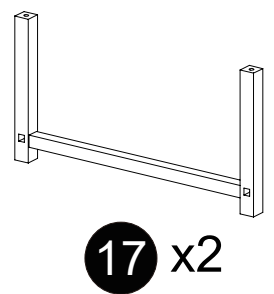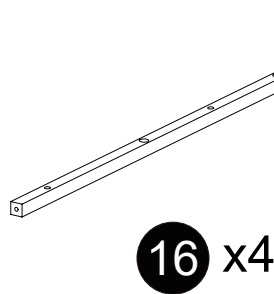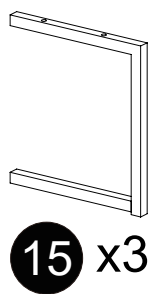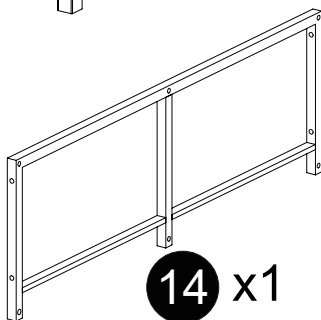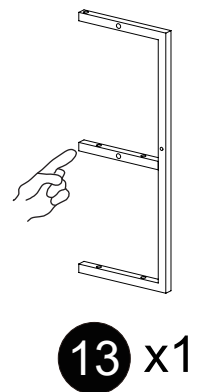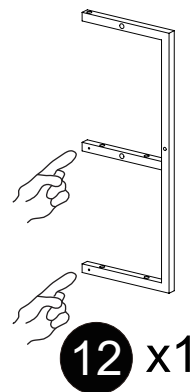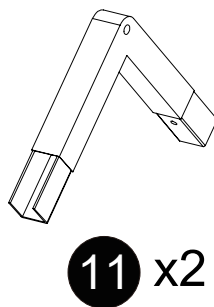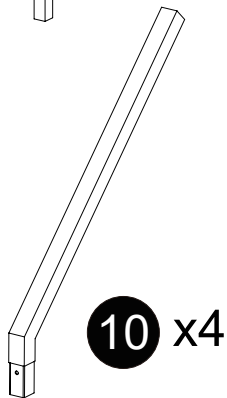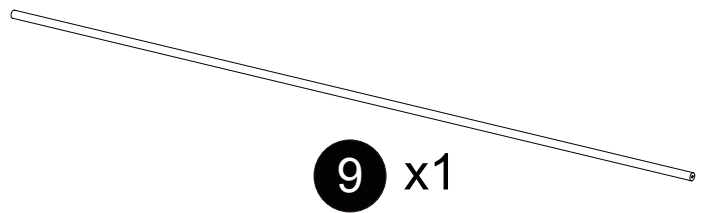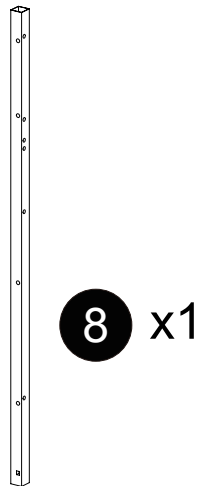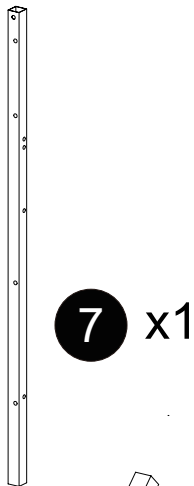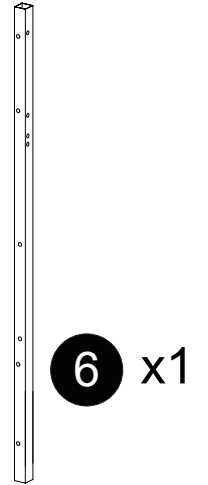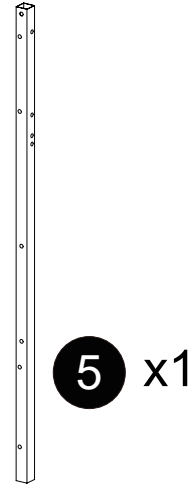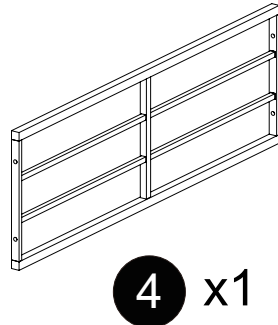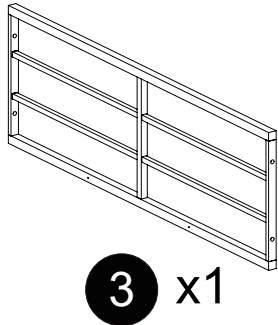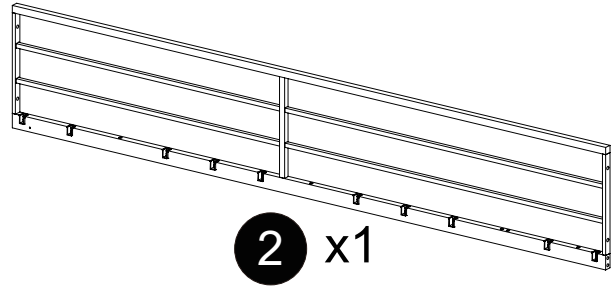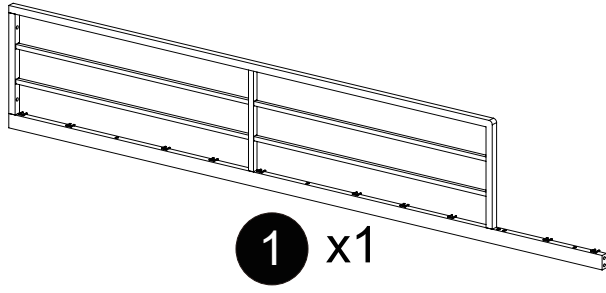


Assembly Instruction

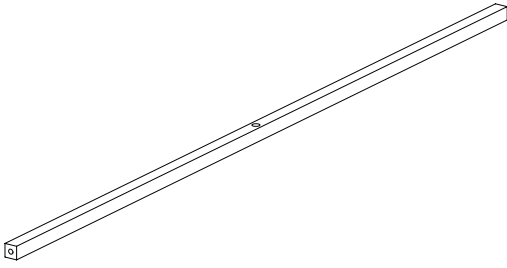


18 x1

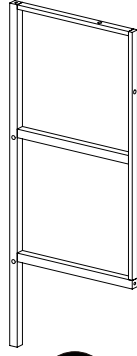


19 x1

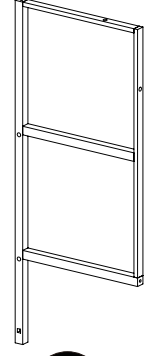


20 x1

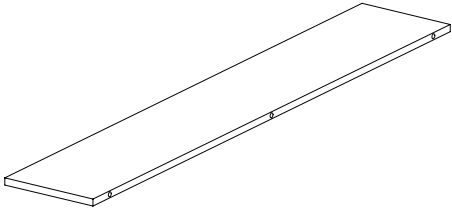


21 x1

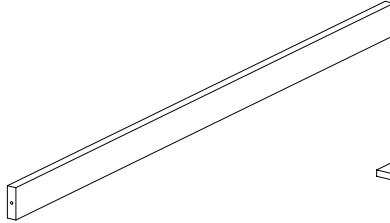


22 x1

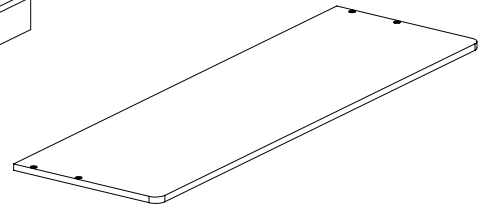


23 x1

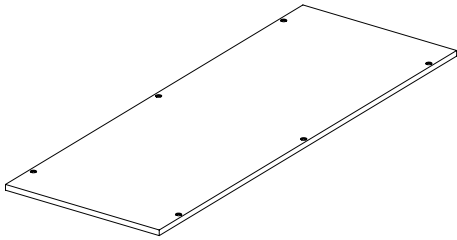


24 x2

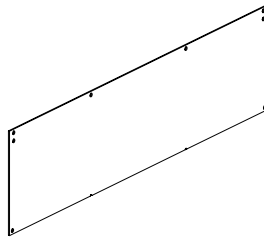


25 x1

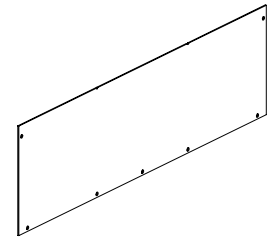


26 x1

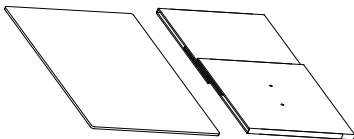


27 x3

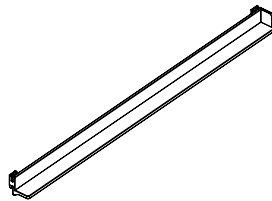


28 x3

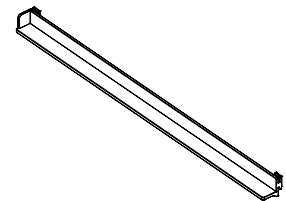


29 x3

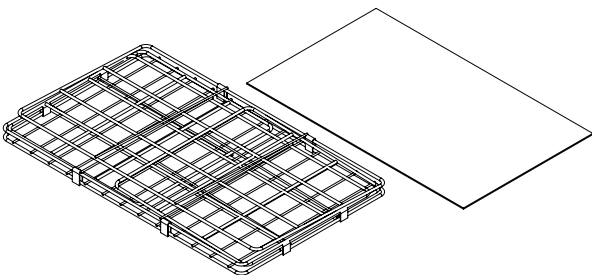

30 x2

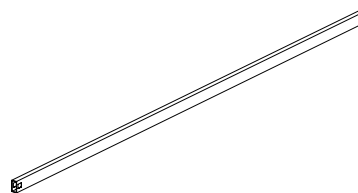


31 x10

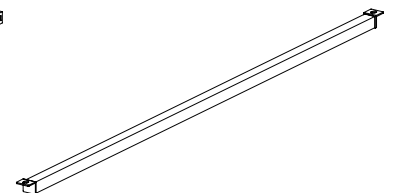

32 x3


Assembly Instruction



A

M8*55


X8+1



B

M6*55

X2+1



C

M6*40

X16+1



D

M6*32

X6+1



E

M6*20

X28+2



F

M6*32

X15+1



G

M3


X1



H

M4

X2



J

X8+1



K

M4*10

X6+1



L

M6*28

X26+1



M


X3+1



N

M5

X1



O

M6*45

X16+1



P

X3+1



Q

M6*18


X8+1



R

M6*10

X8+1



S

X8



T

X3



U

M6*25

X9+2



V


M5*40

X6+1



W

X3




X

X2



Y

X1



Z

X2




A1

X2+1



A2


X1



Remote control

A3

X1




Power cord

A4

X1

Assembly Instruction

LED light strip electronic accessories list

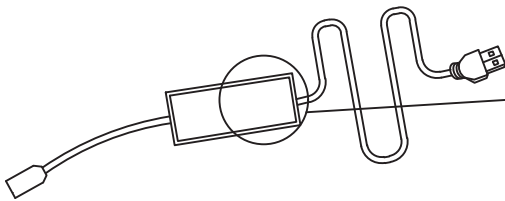

x1

Power cord




There is a two-dimensional code at the position of the power line. Scanning can download the APP for the control light

Assembly Instruction

Note:


1. Should be assembled on flat ground to keep balance.
2. Before completing the installation, do not tighten the screws.

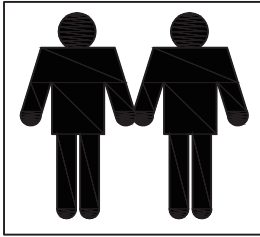

It needs at least two people to install !!



Before starting the assembly, you must read the whole manual and follow the instructions

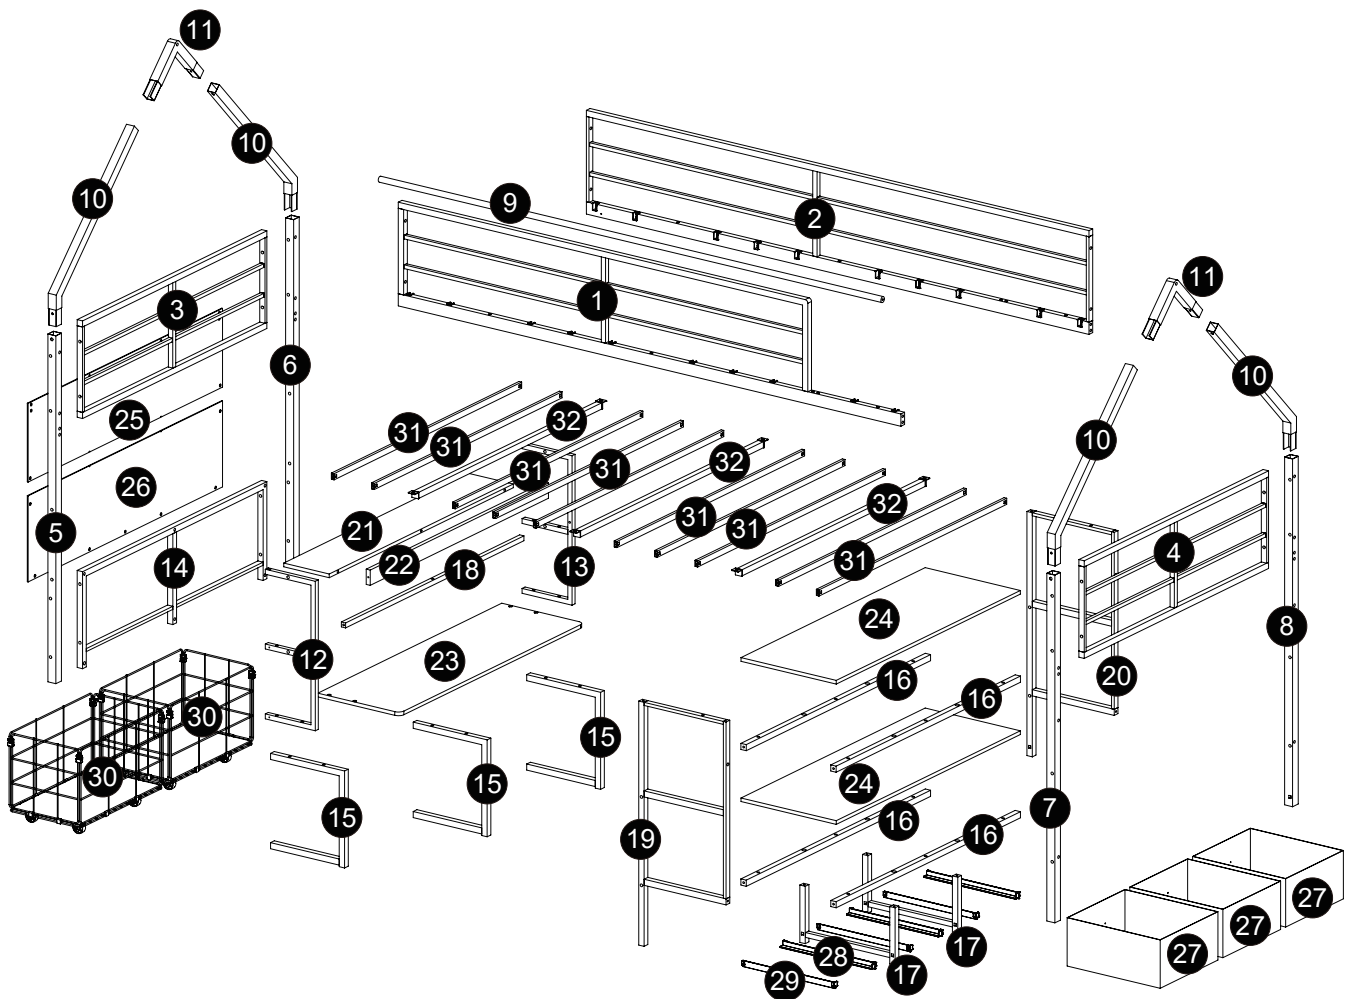

Assembly Instruction

1




Be careful not to overtighten the screws.


E M6*20



F M6*32



H M4

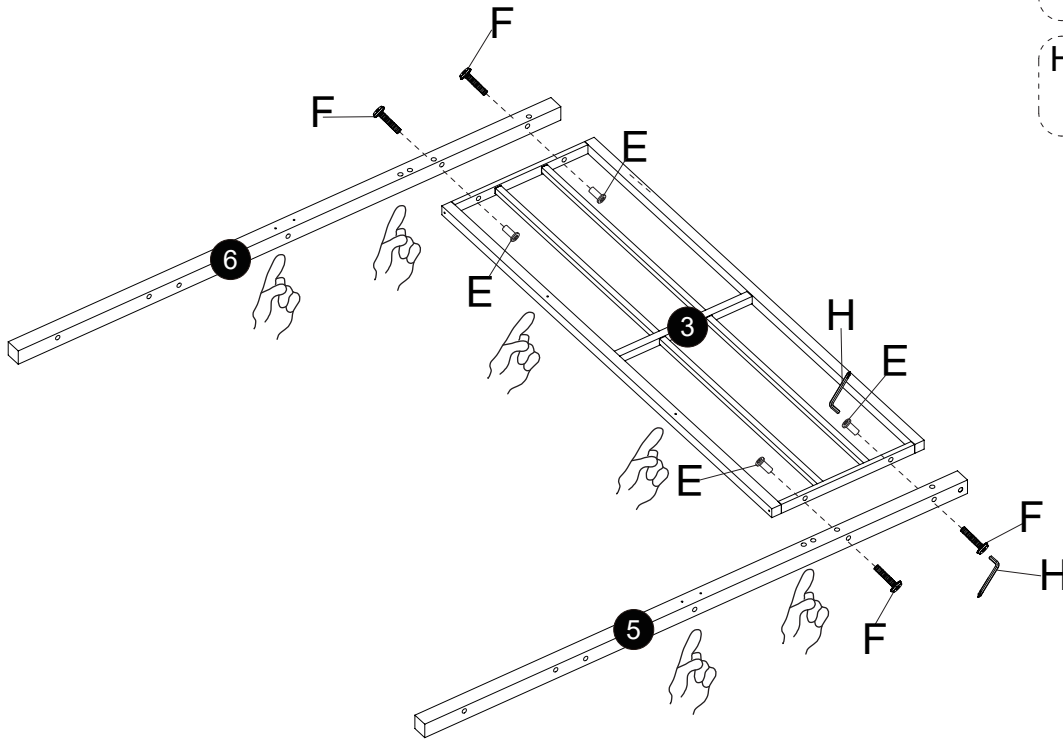


2

R M6*10



H M4

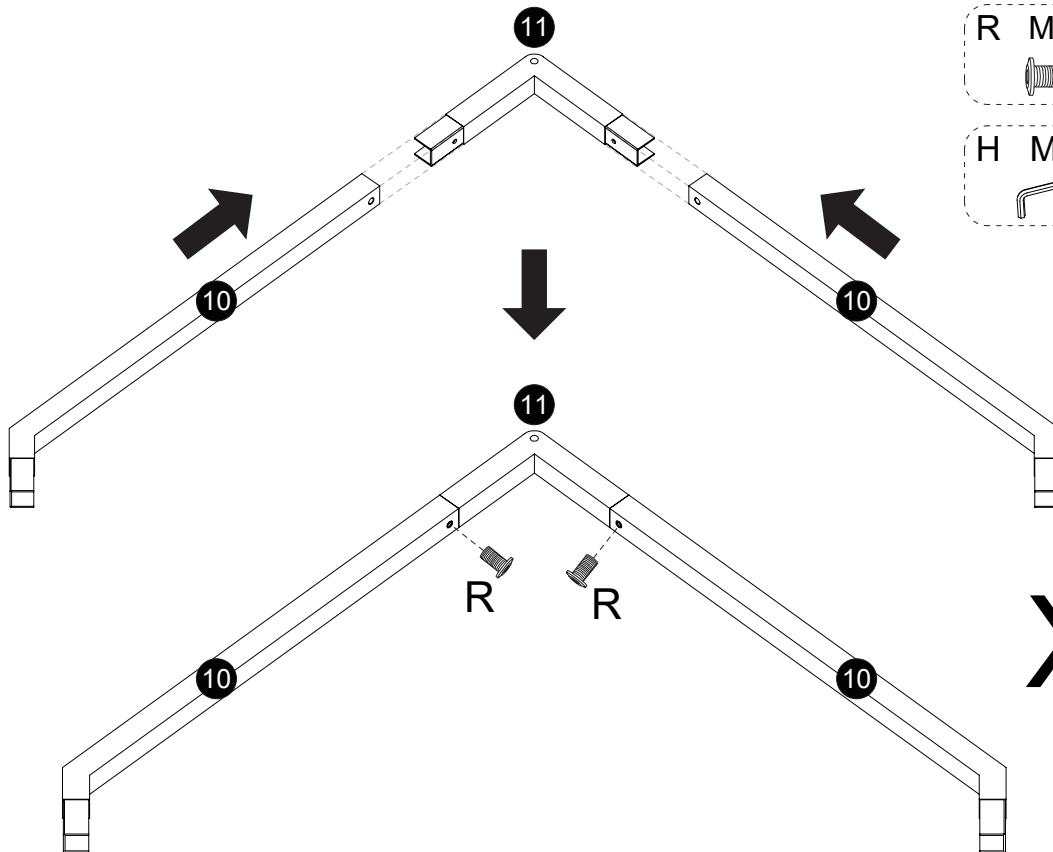

Assembly Instruction

5



Be careful not to overtighten the screws.

E M6*20



X1

F M6*32




X1

O M6*45



X1

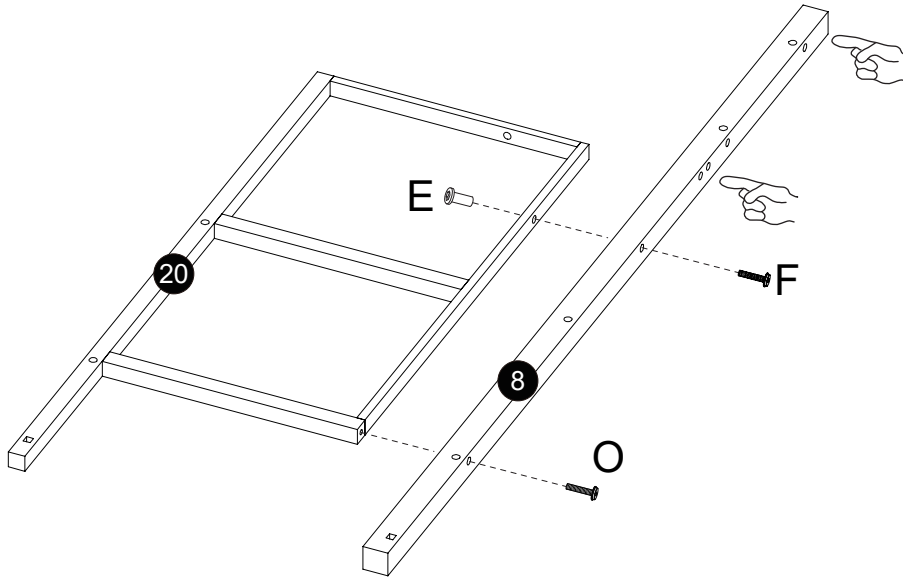


6

A M8*55



X2

B M6*55




X1

E M6*20




X2

F M6*32




X1

O M6*45




X1

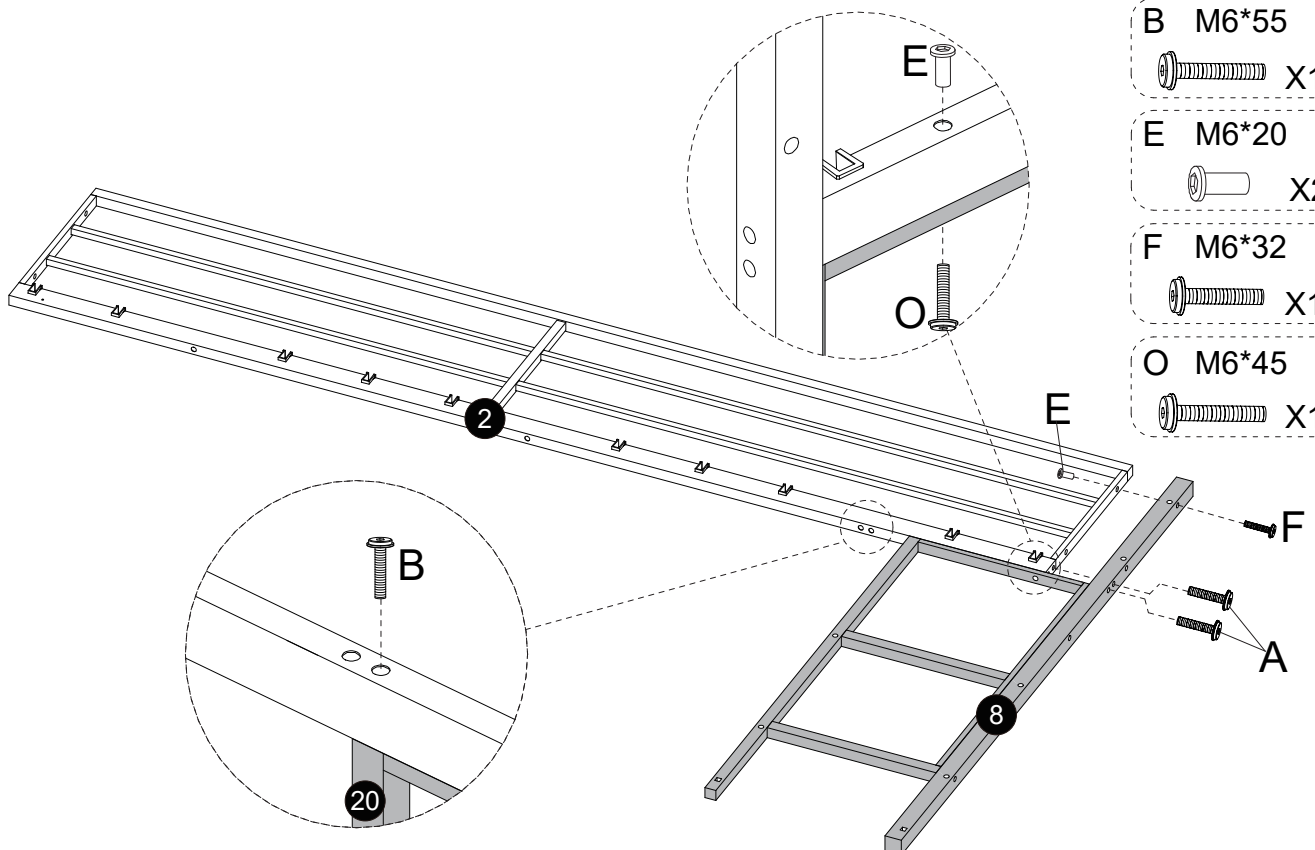

Assembly Instruction

7

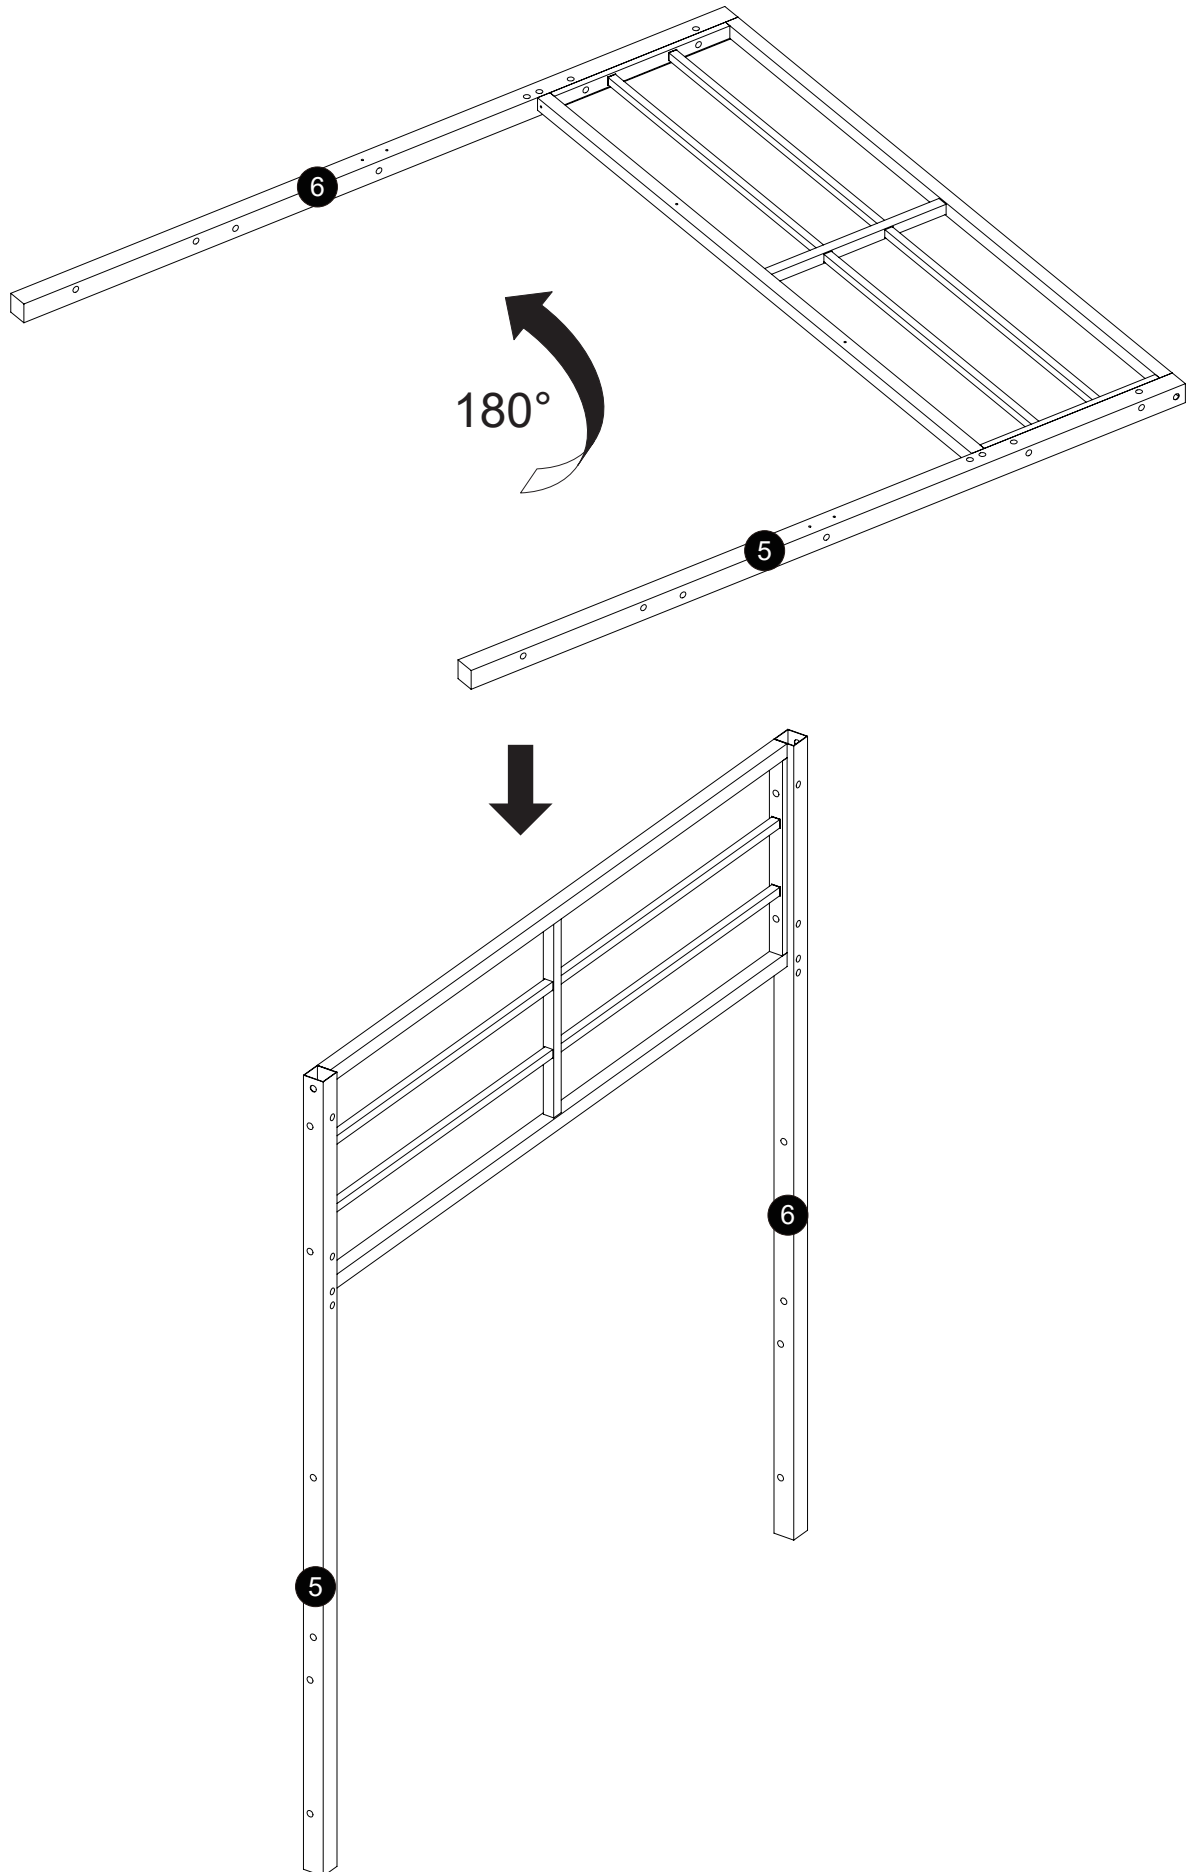


Assembly Instruction

8



Note the orientation of parts (5) and (6).

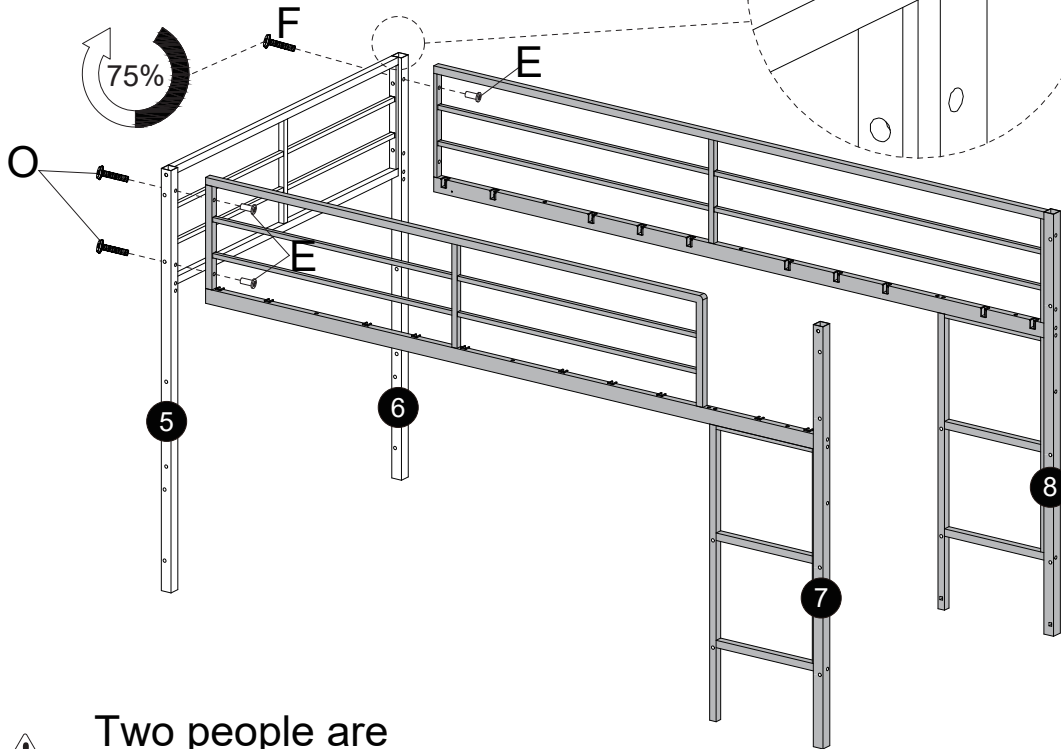

E M6*20



F M6*32




O M6*45



Two people are required to install.

9

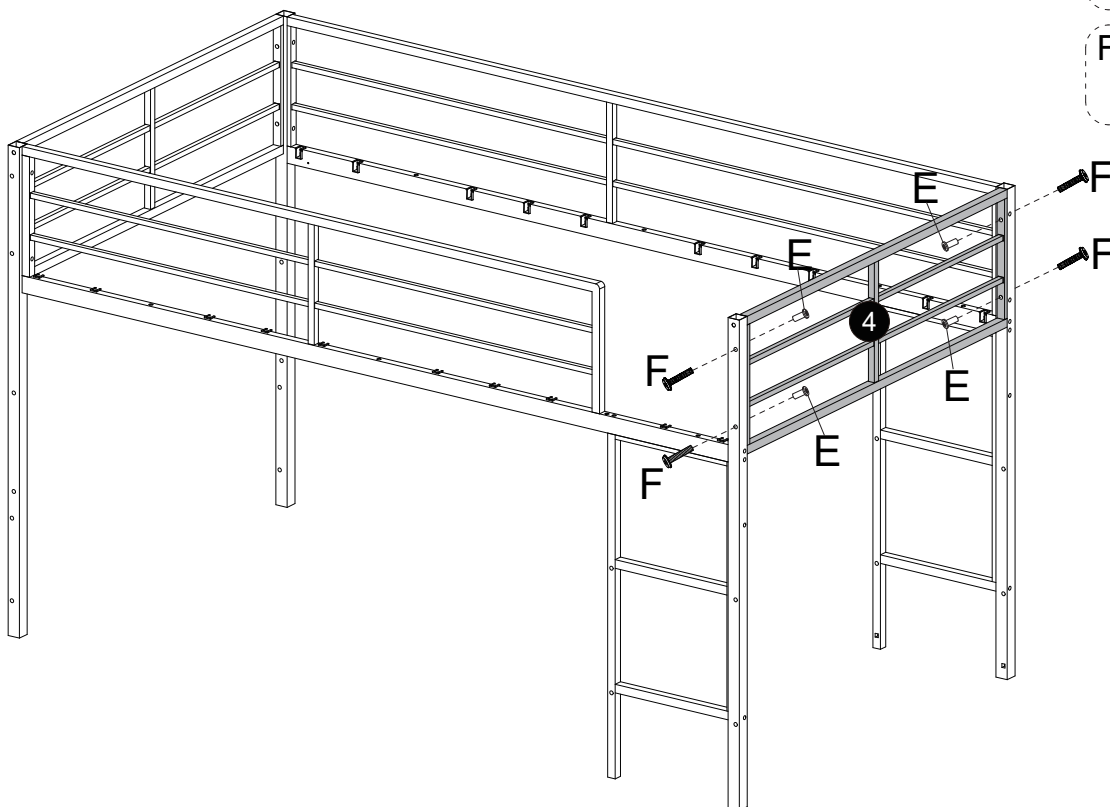

E M6*20





F M6*32




Assembly Instruction

10

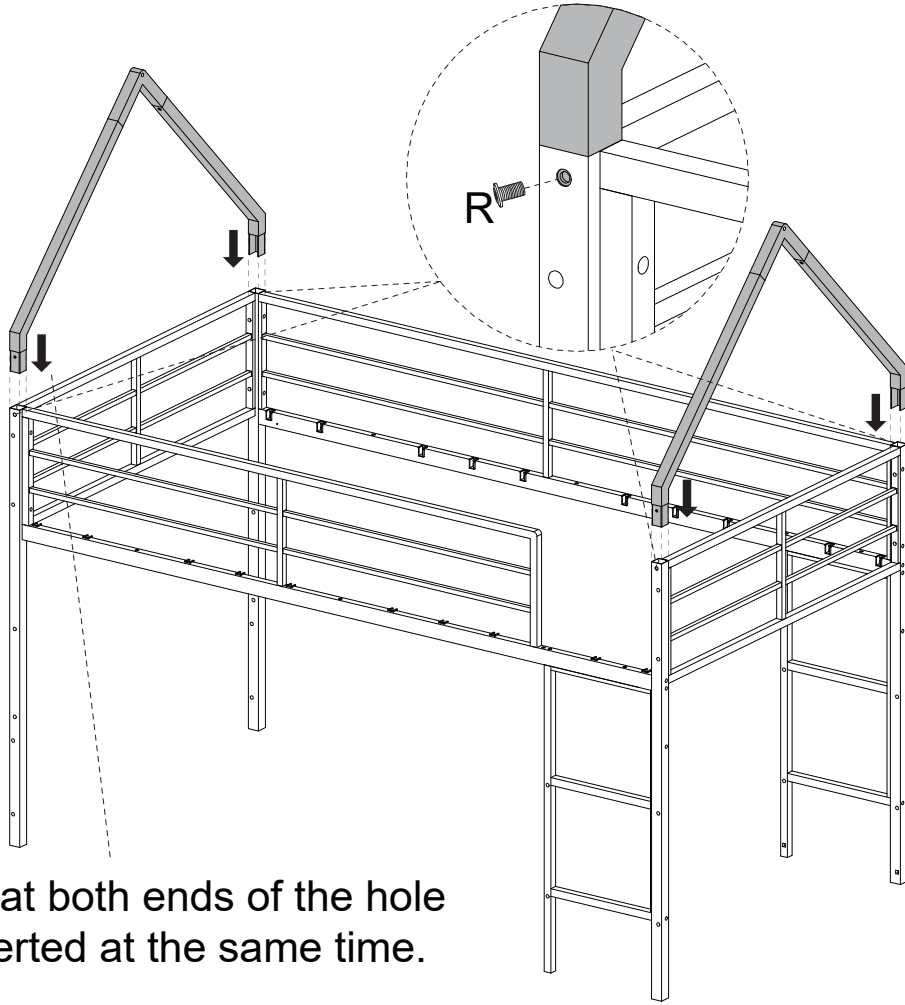



R M6*10
 X4

H M4
 X1

Note that both ends of the hole are inserted at the same time.

11

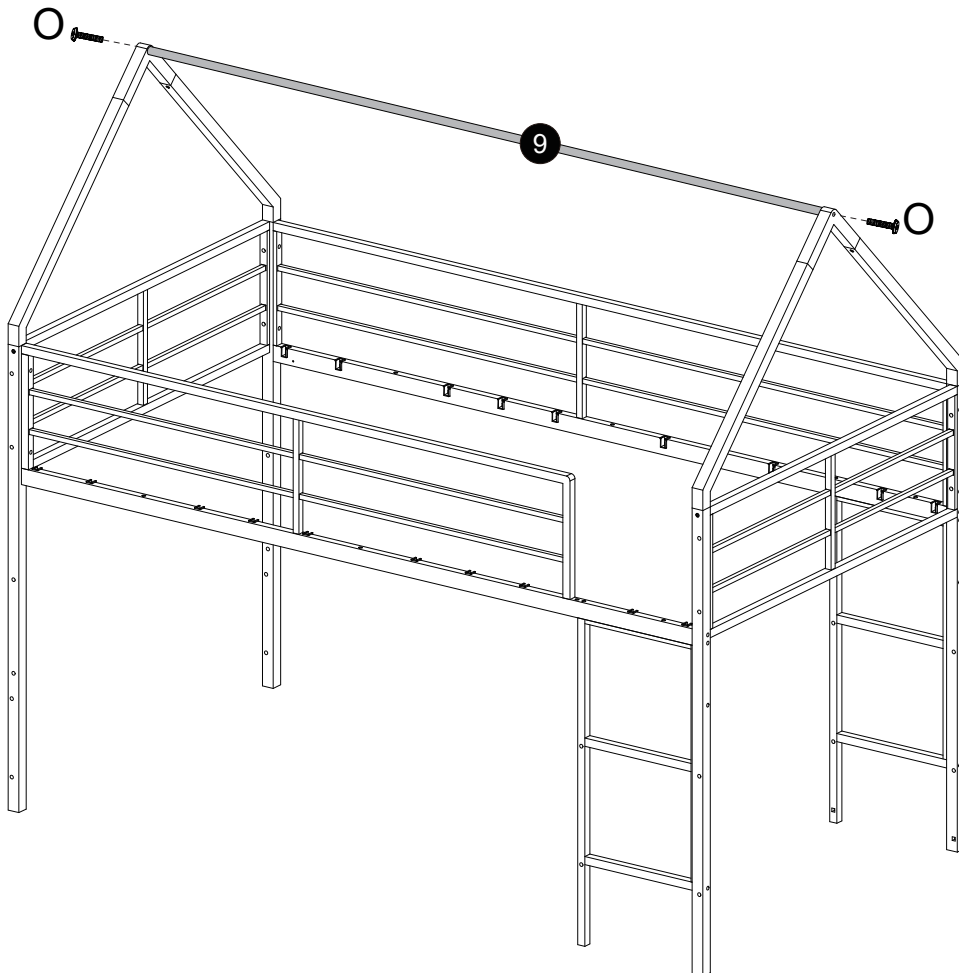

O M6*45
 X2


Assembly Instruction

12

The large hole of component (16) is facing forward.

L M6*28

X4

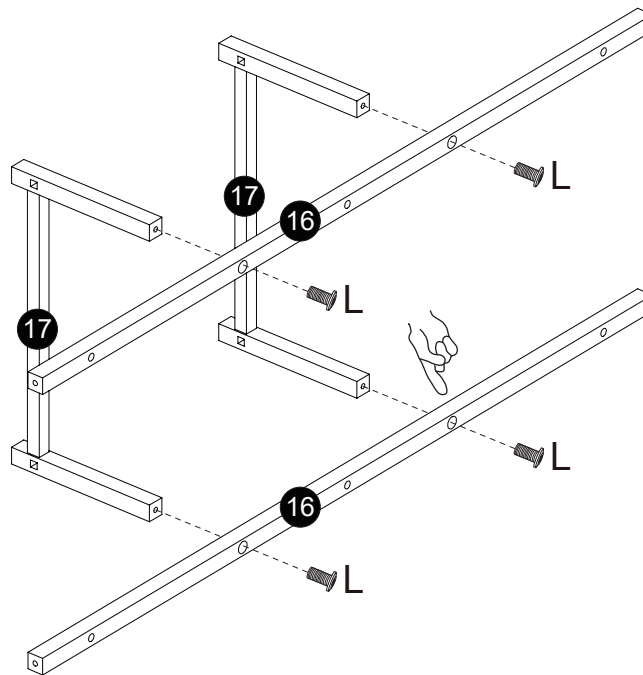

Pay attention to the alignment and re-locking of parts (16) and (17) when assembling to prevent the lock from being crooked.

13


The large hole of component (16) is facing upwards.

C M6*40

X4

O M6*45


X4

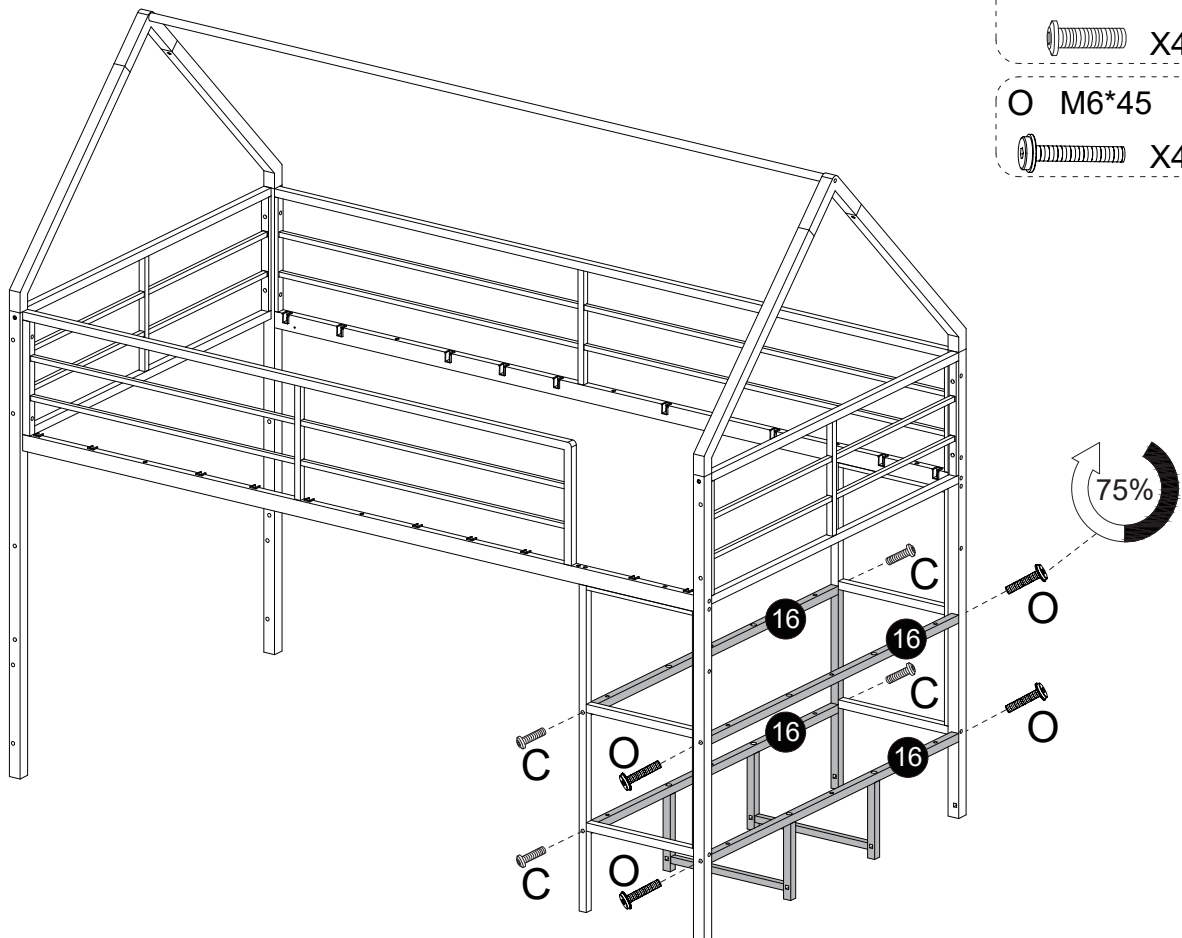


Assembly Instruction



14

C M6*40
 X3

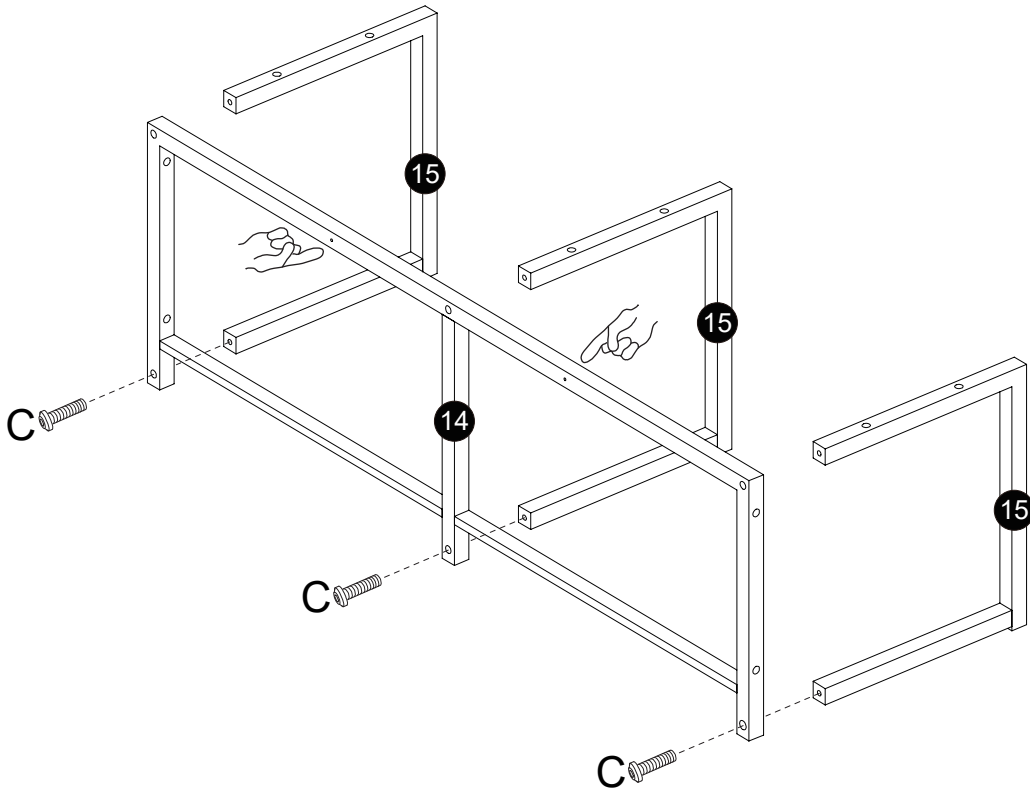

15


L M6*28
 X6

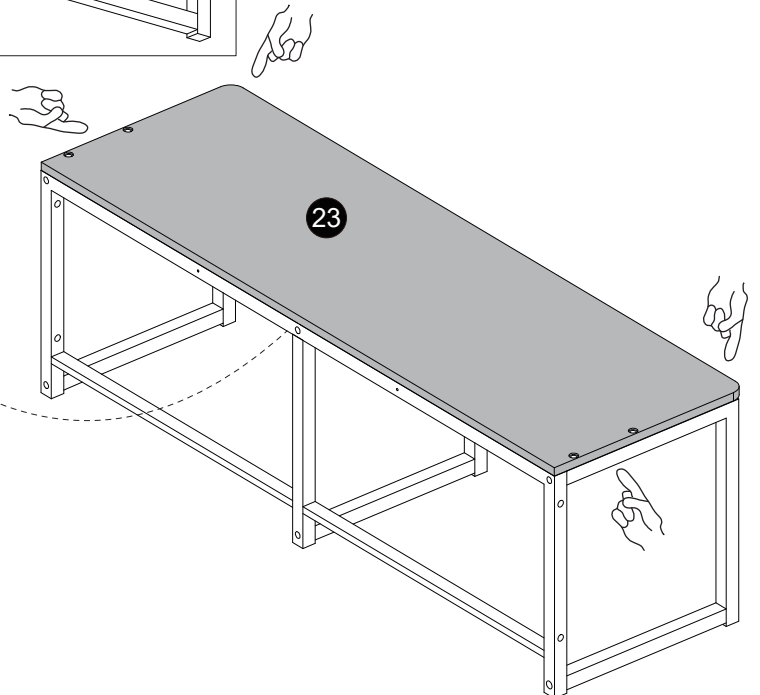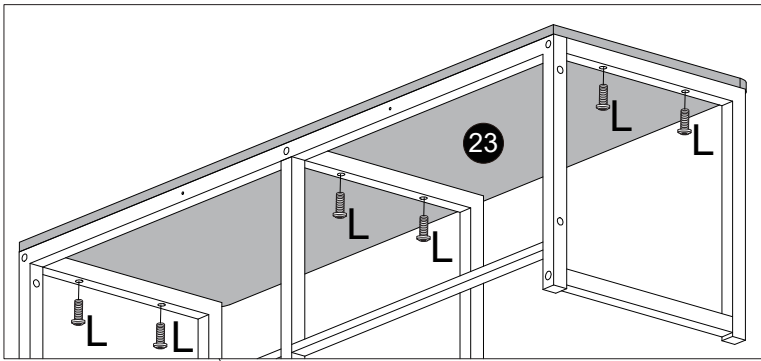

Assembly Instruction

16


- E M6*20 X4
- O M6*45 X4

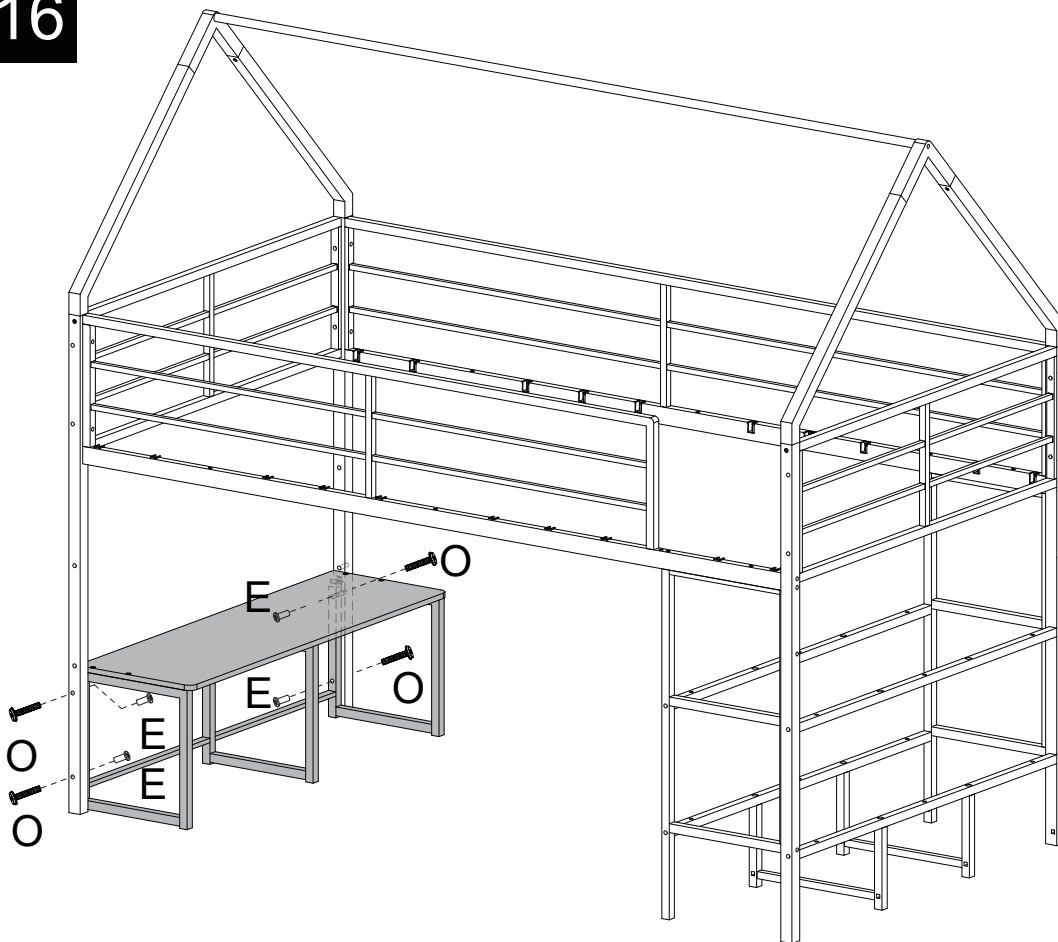



17

Note that when assembling parts (12) and (13), the iron frame is first aligned with the hole and then locked.

- C M6*40 X2
- L M6*28 X2
- U M6*25 X2

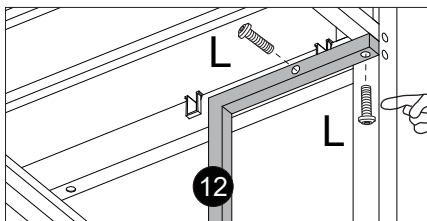

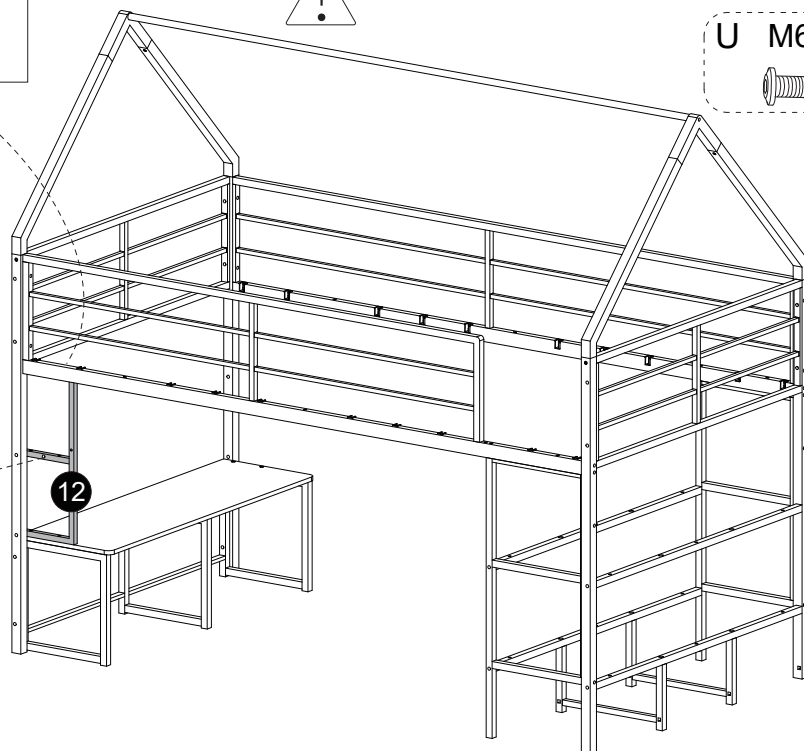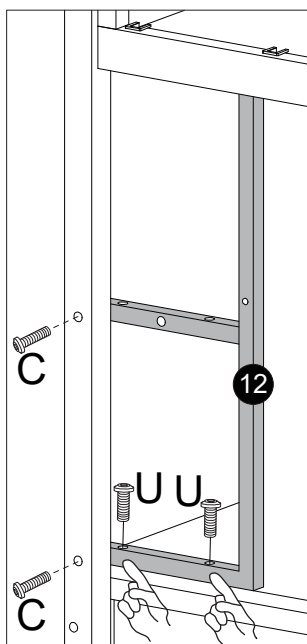


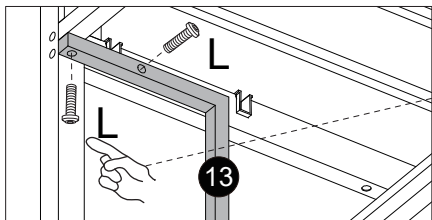
Lock this screw first.





Assembly Instruction

18 Note that when assembling parts (12) and (13), the iron frame is first aligned with the hole and then locked.

- C M6*40  X2
- L M6*28  X2
- U M6*25  X2




Lock this screw firstked.

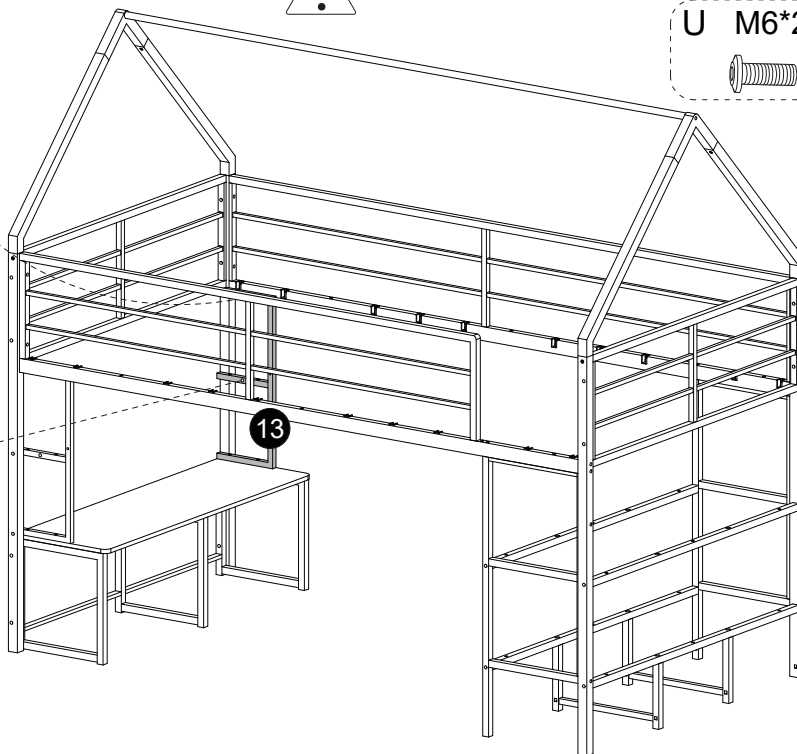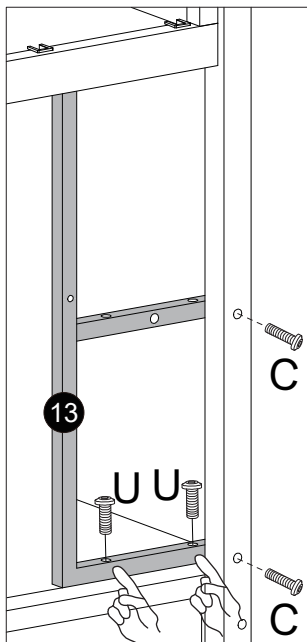

19

- C M6*40  X2

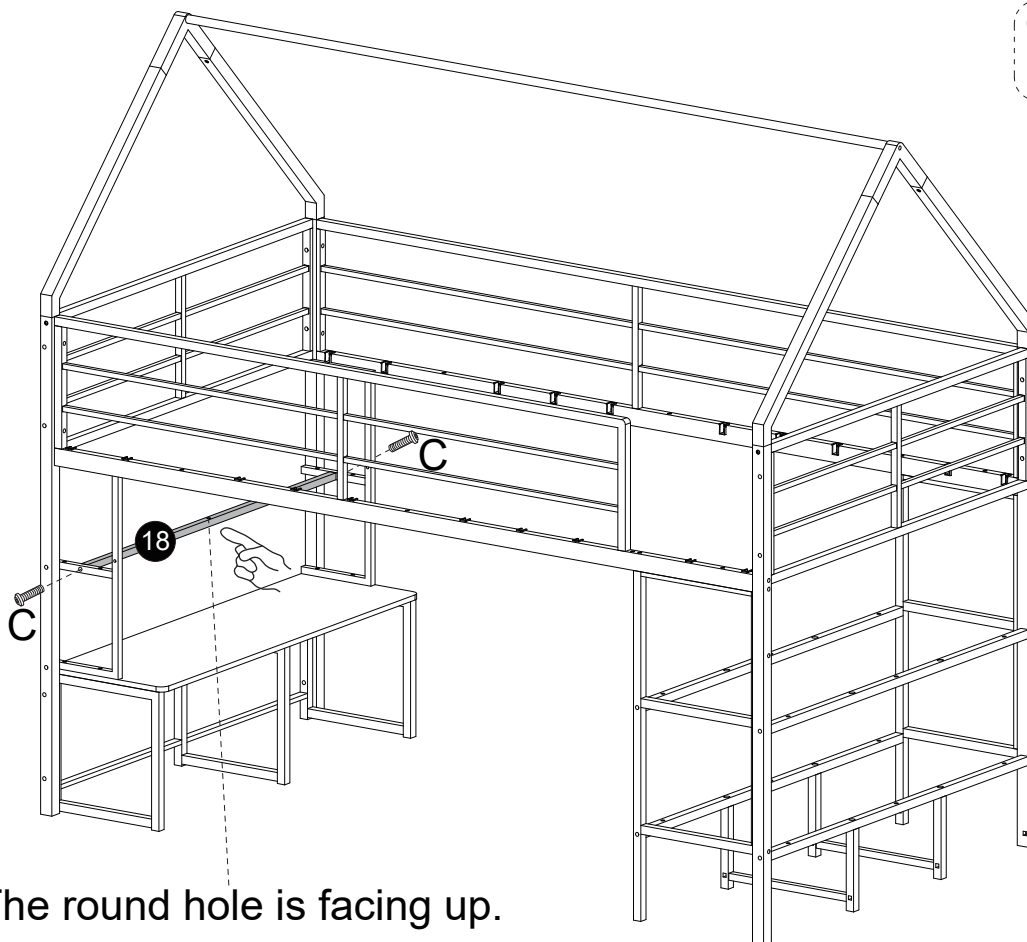




The round hole is facing up.

Assembly Instruction





20



Be careful not to overtighten the screws.

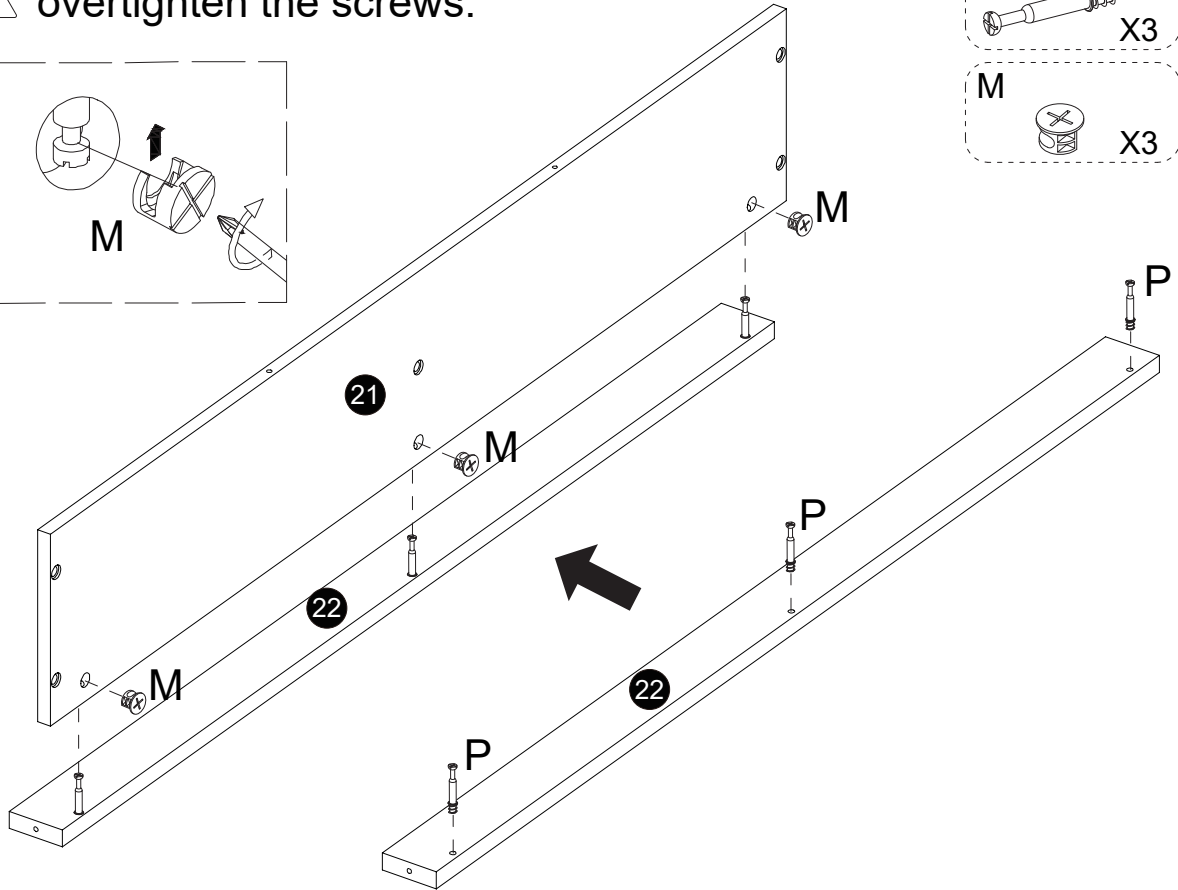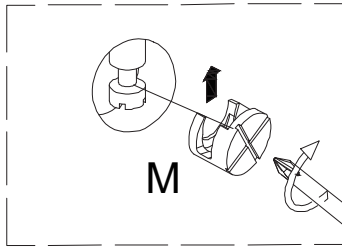



21

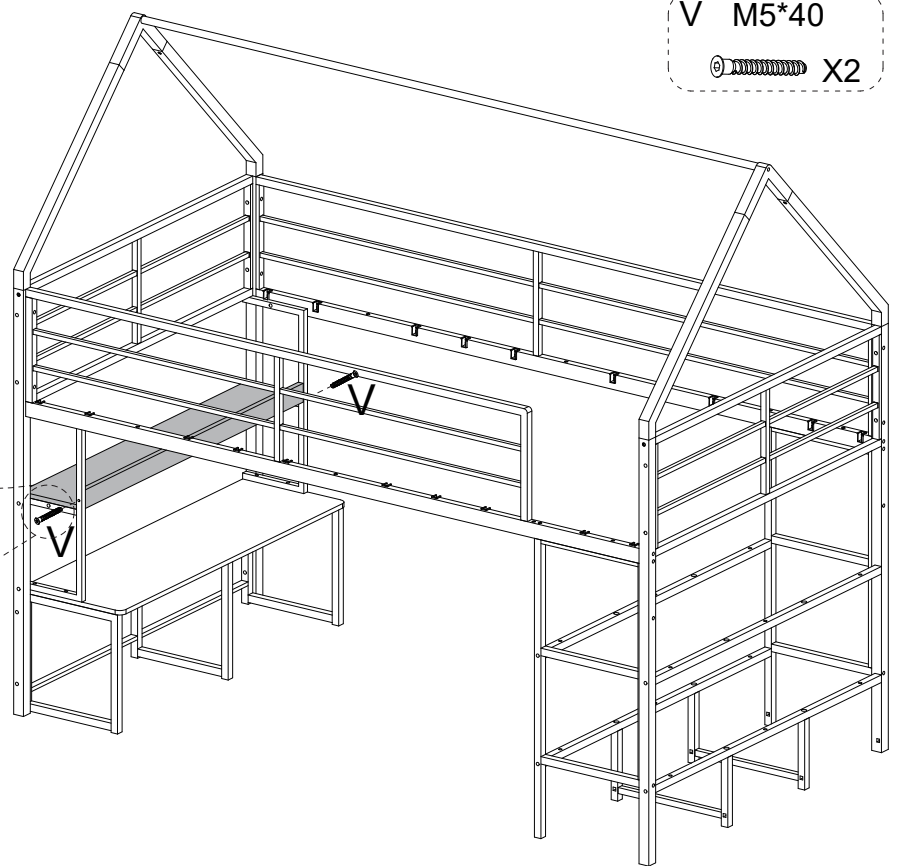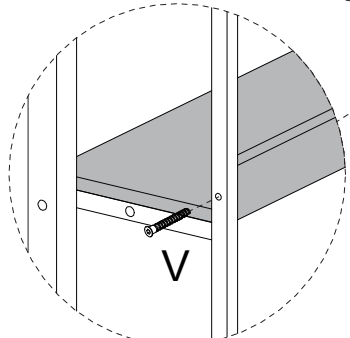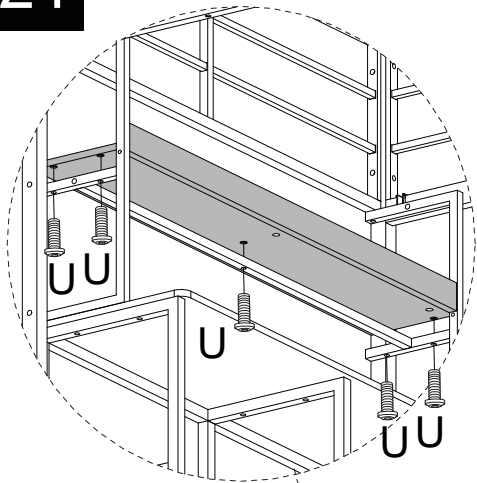



Assembly Instruction

22



A M8*55
 X4



Q M6*18
 X4

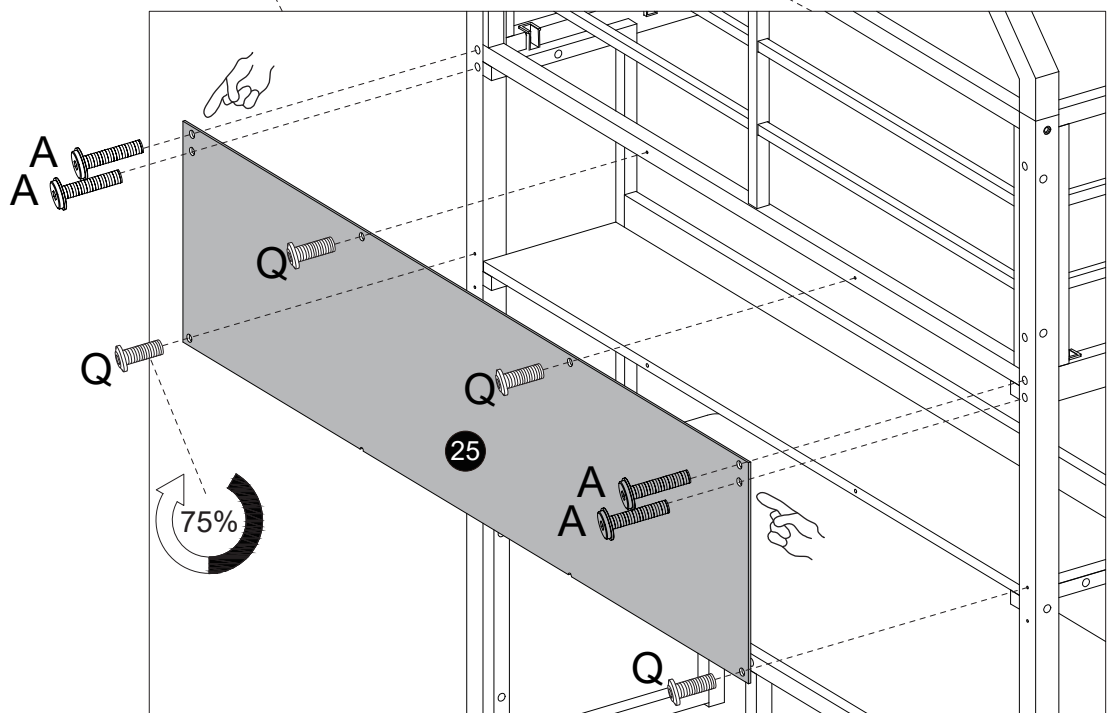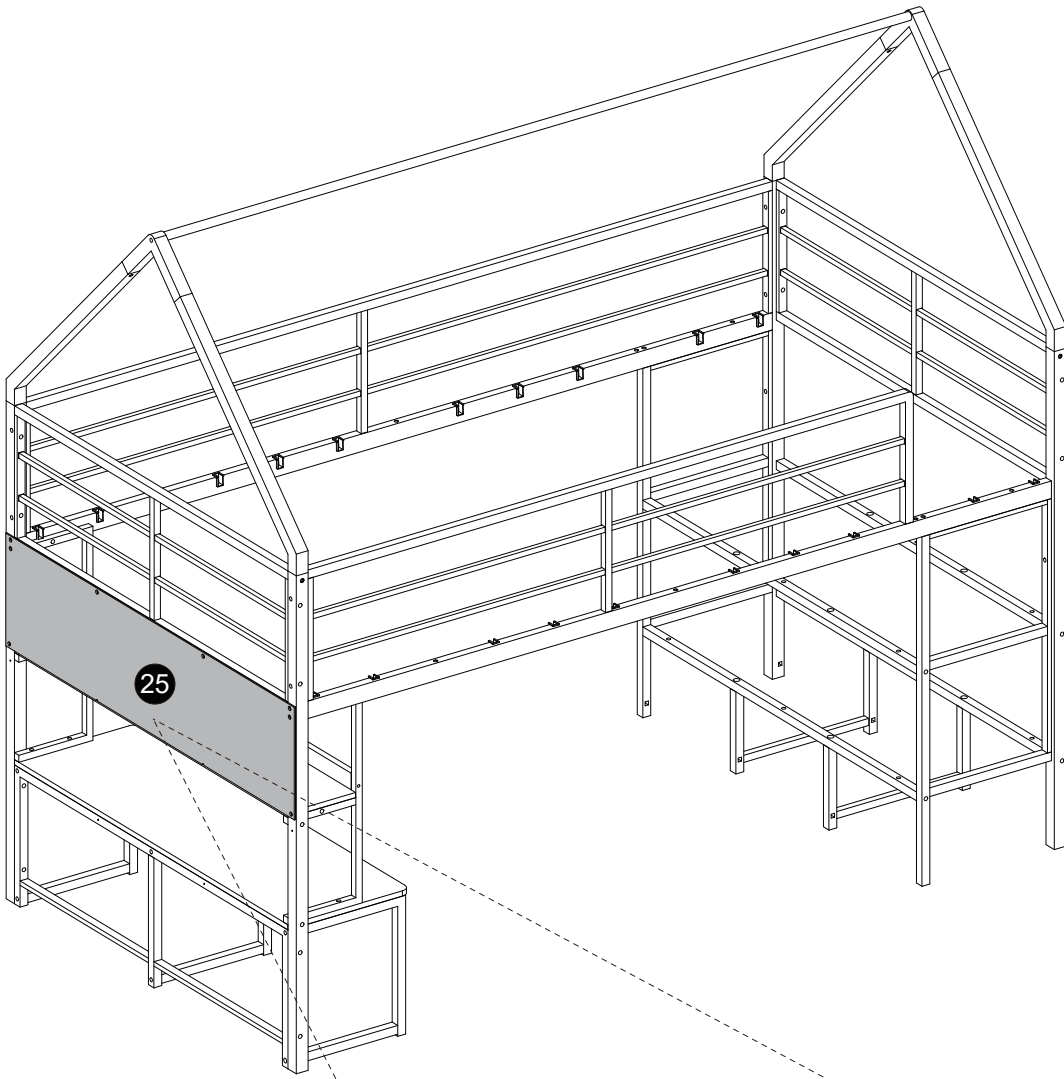

Assembly Instruction

23

- C M6*40
 X3
- Q M6*18
 X4




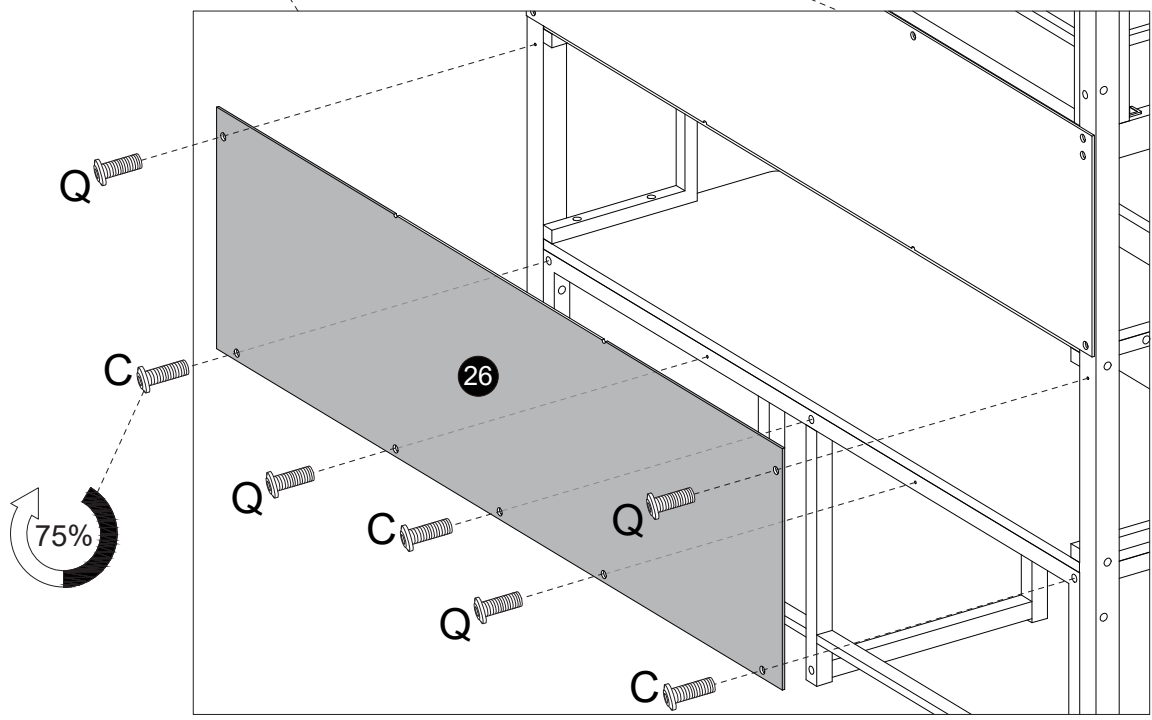
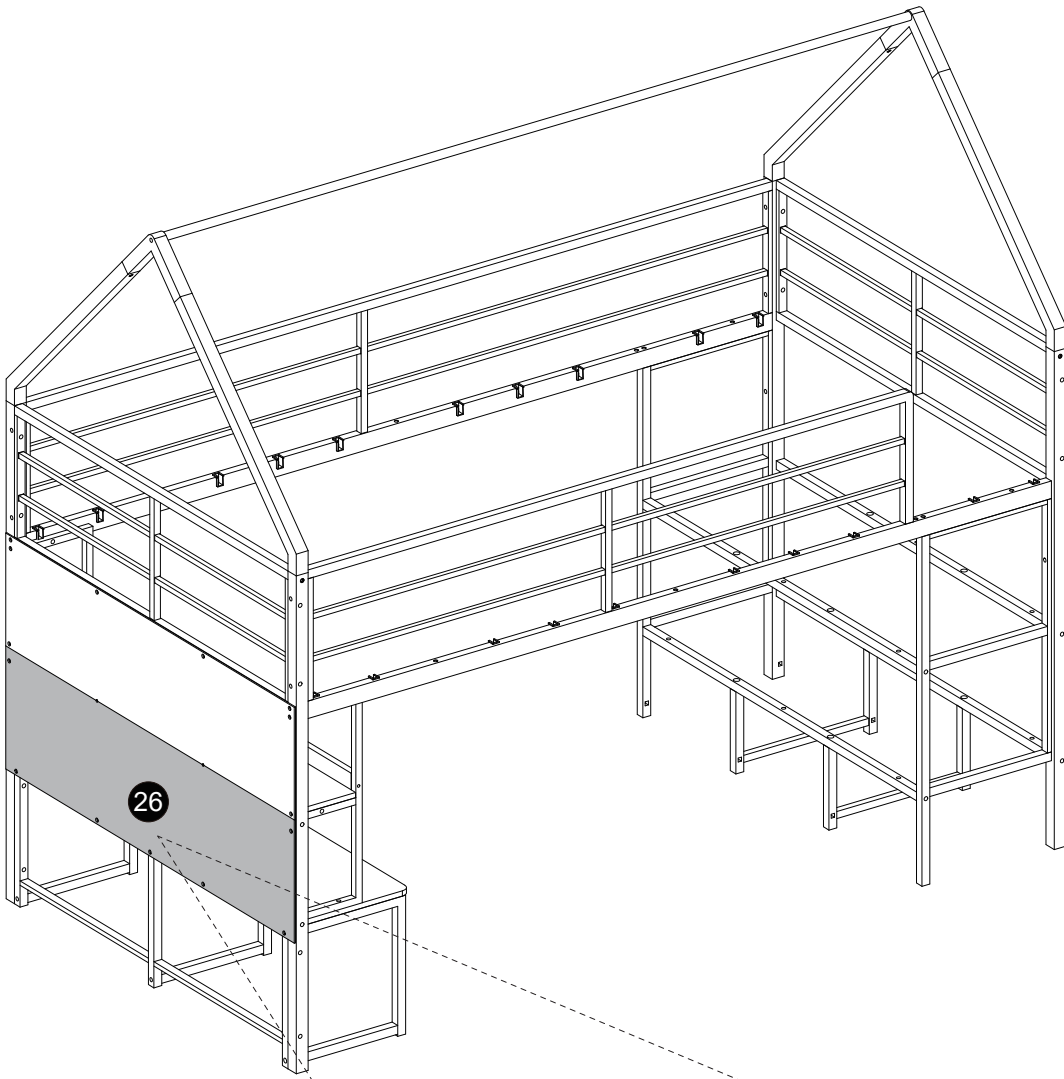


Assembly Instruction

24

V M5*40 X2



A1 X2

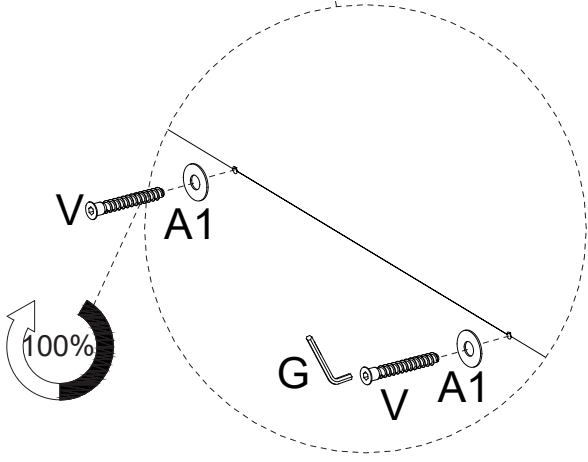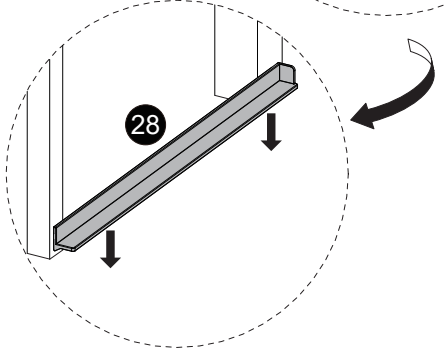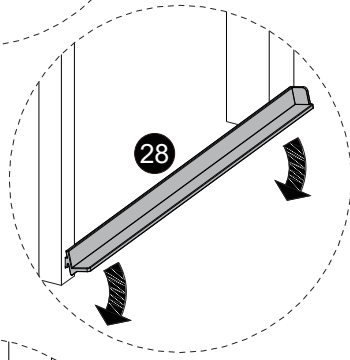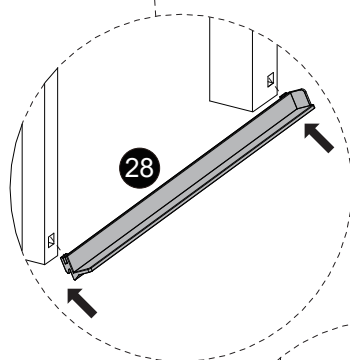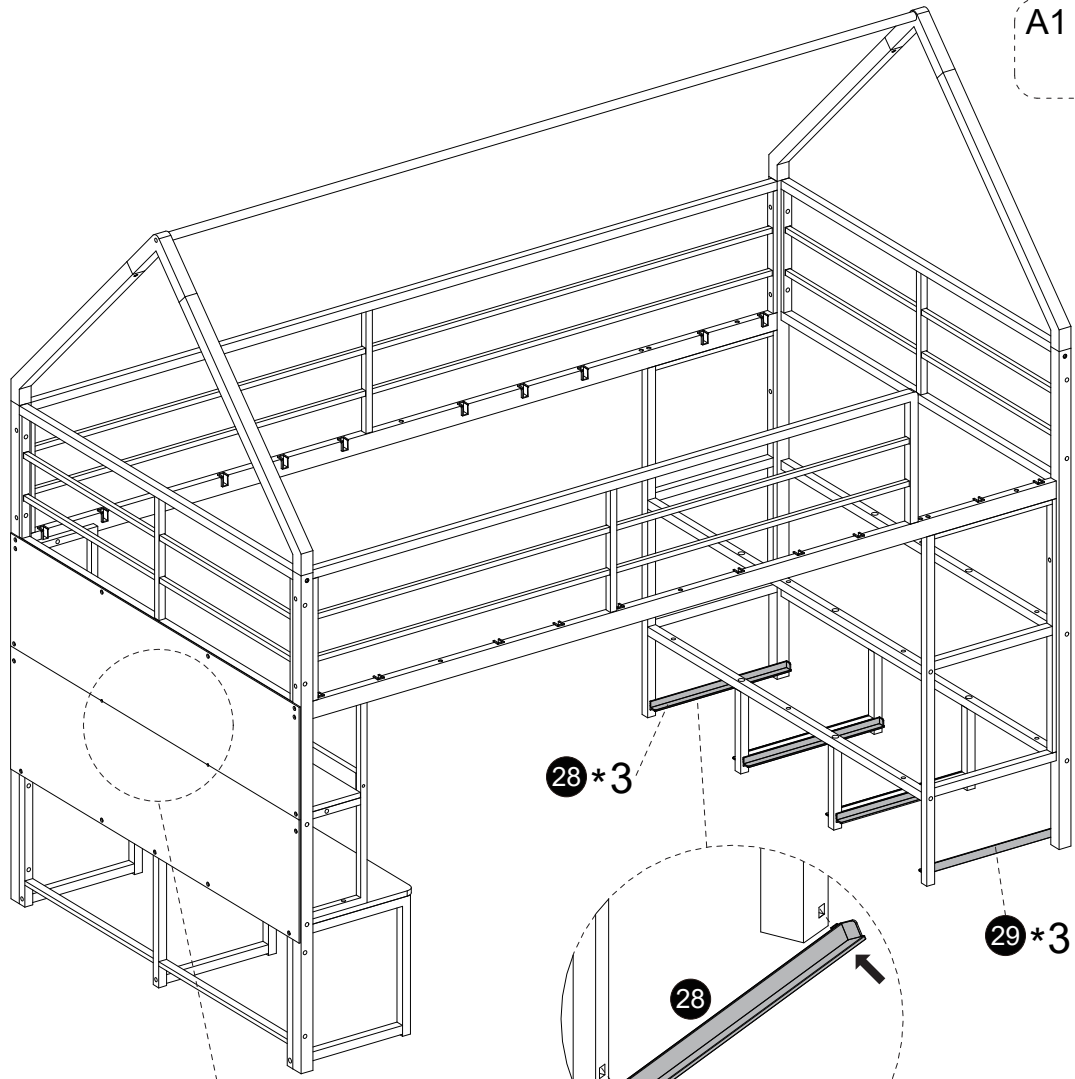

Assembly Instruction

25



L M6*28
X12

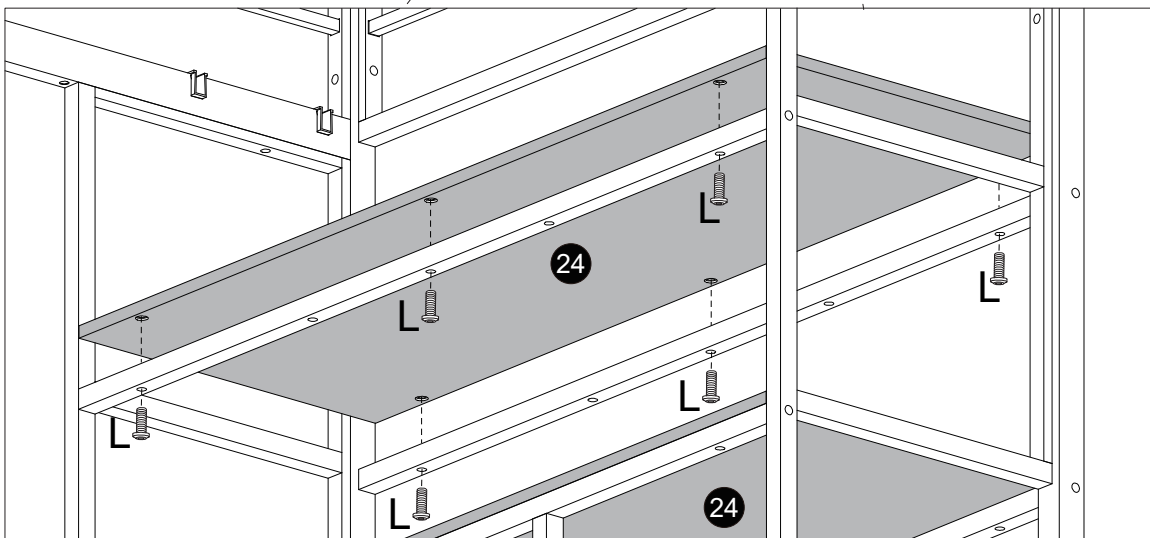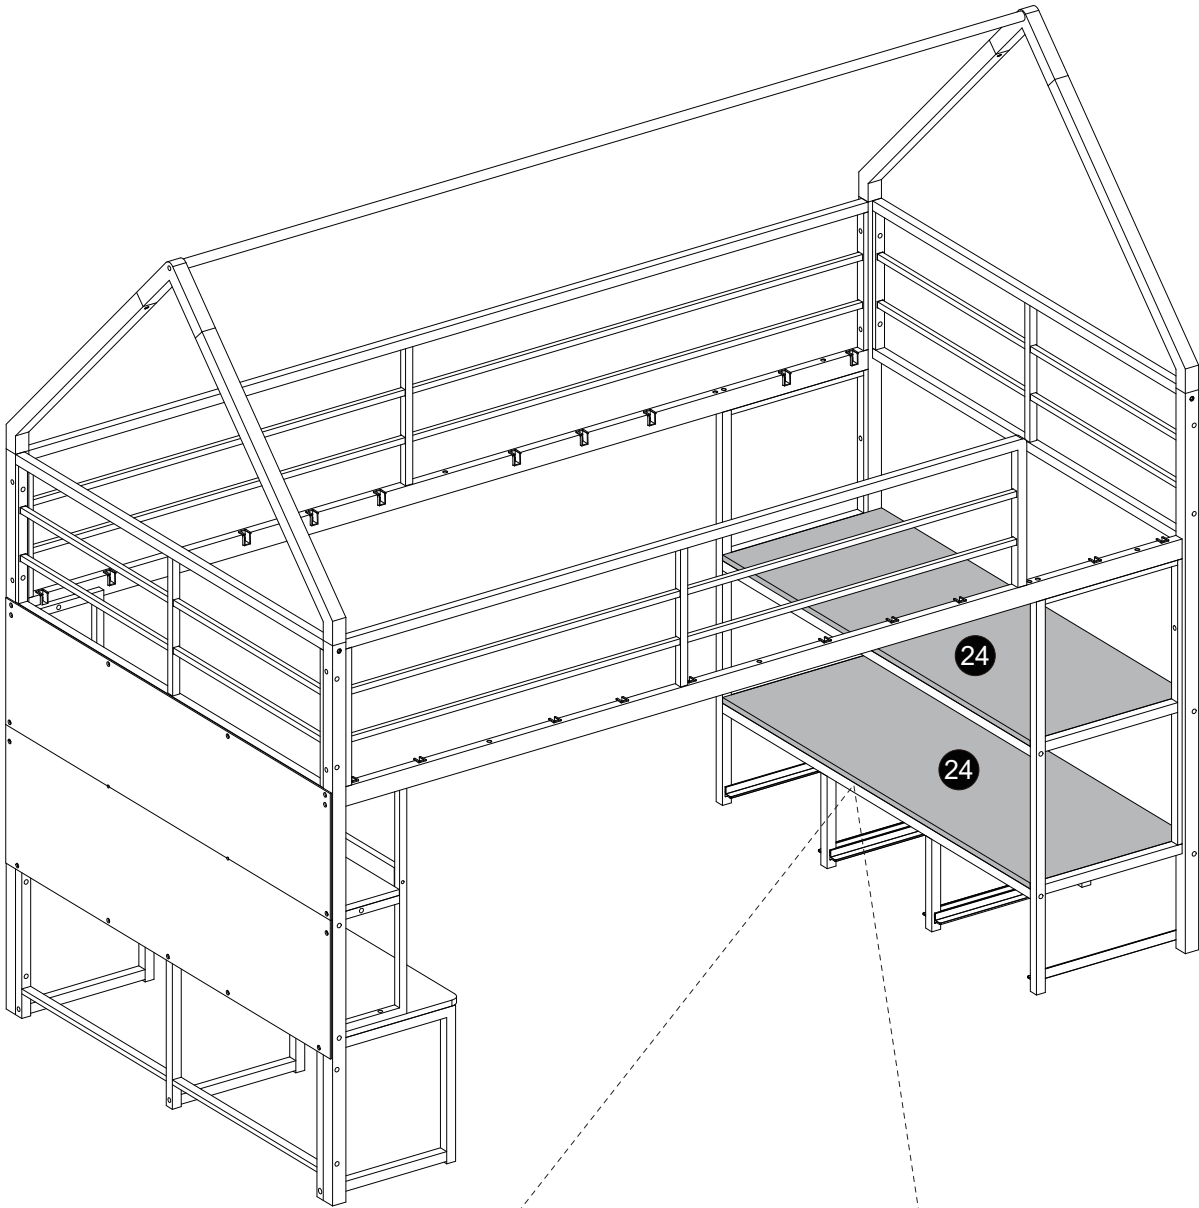


Assembly Instruction

26


- K M4*10 X6
- W X3

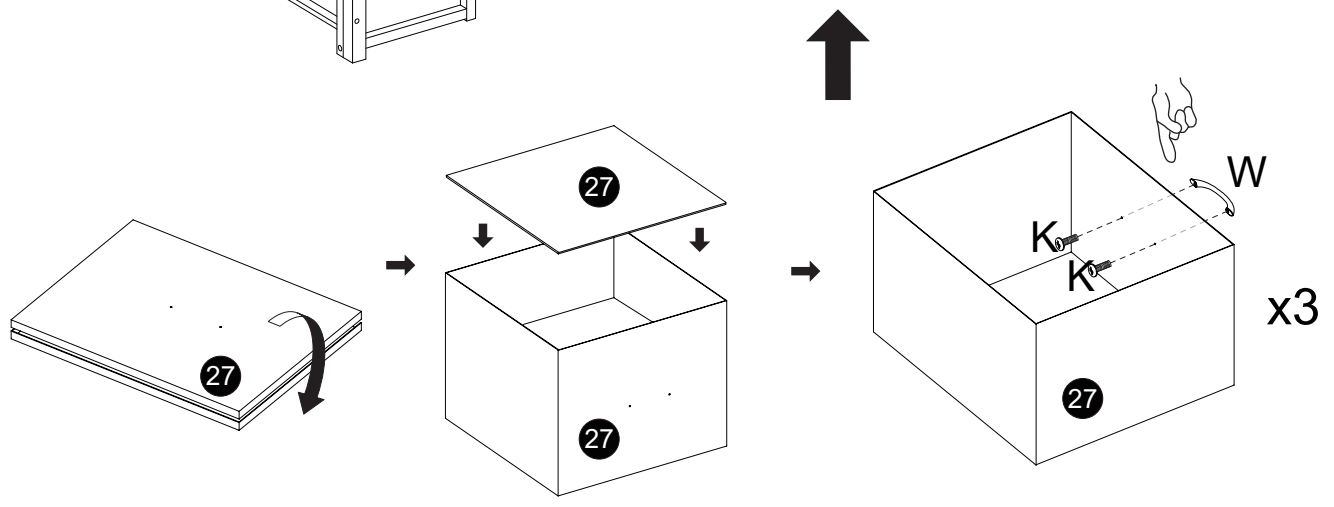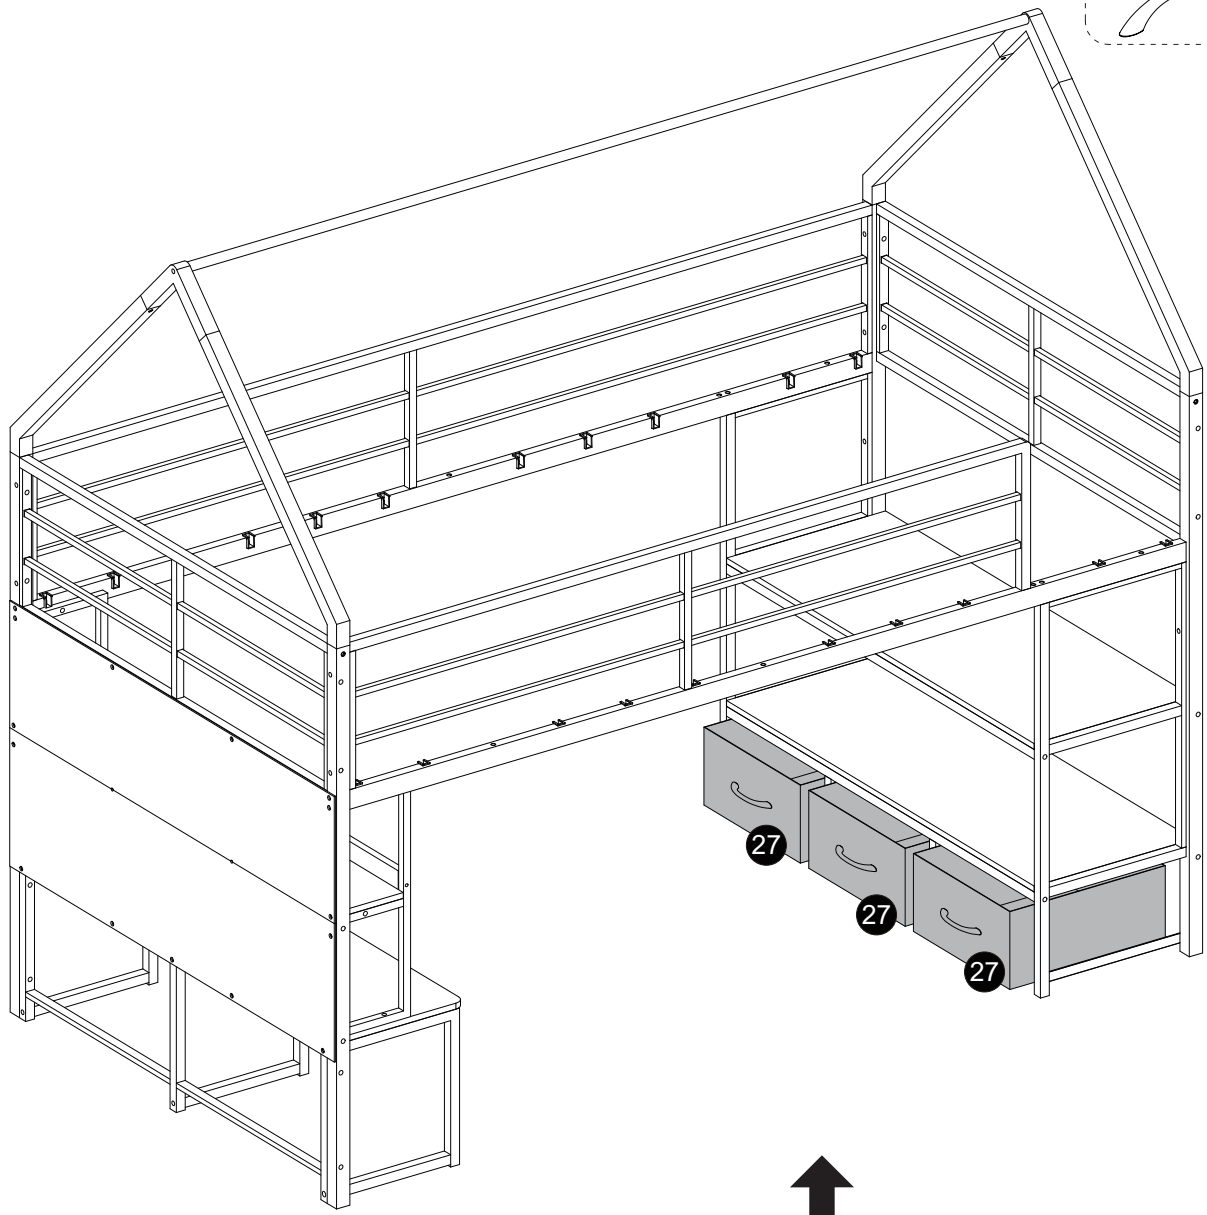


 Be careful not to overtighten the screws.

Assembly Instruction

27

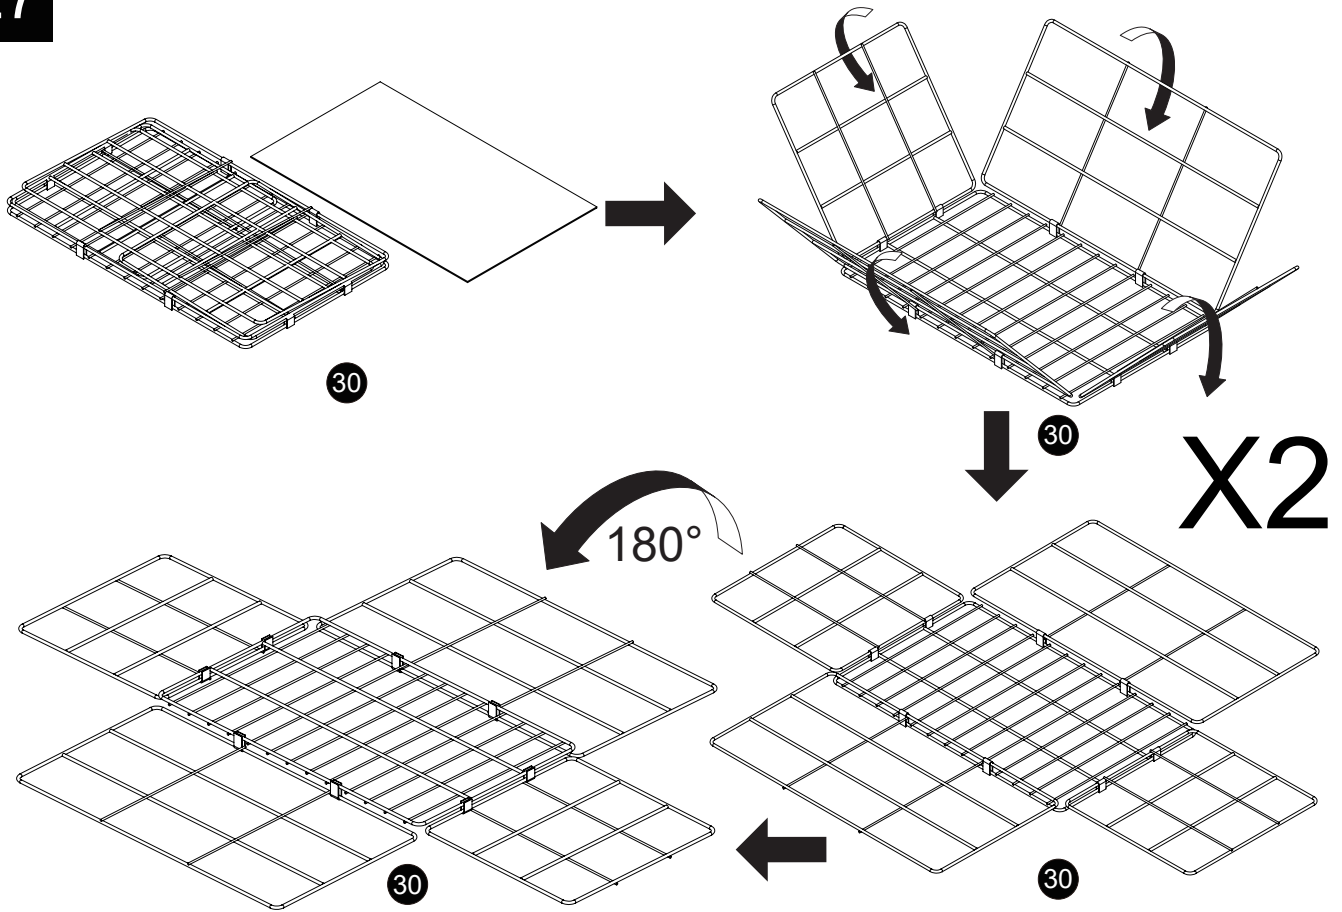


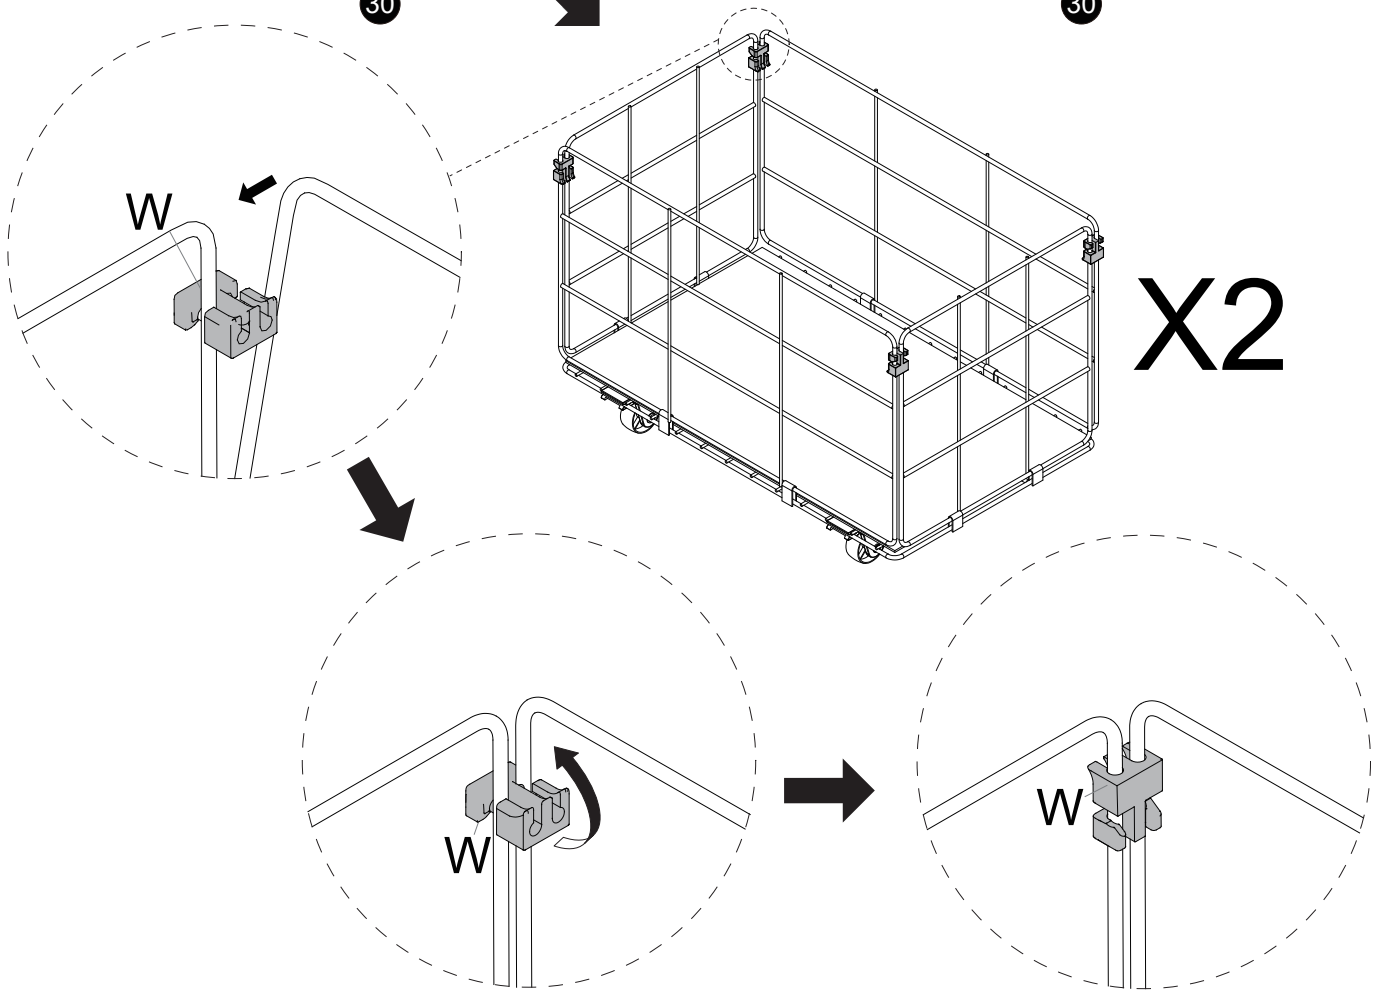
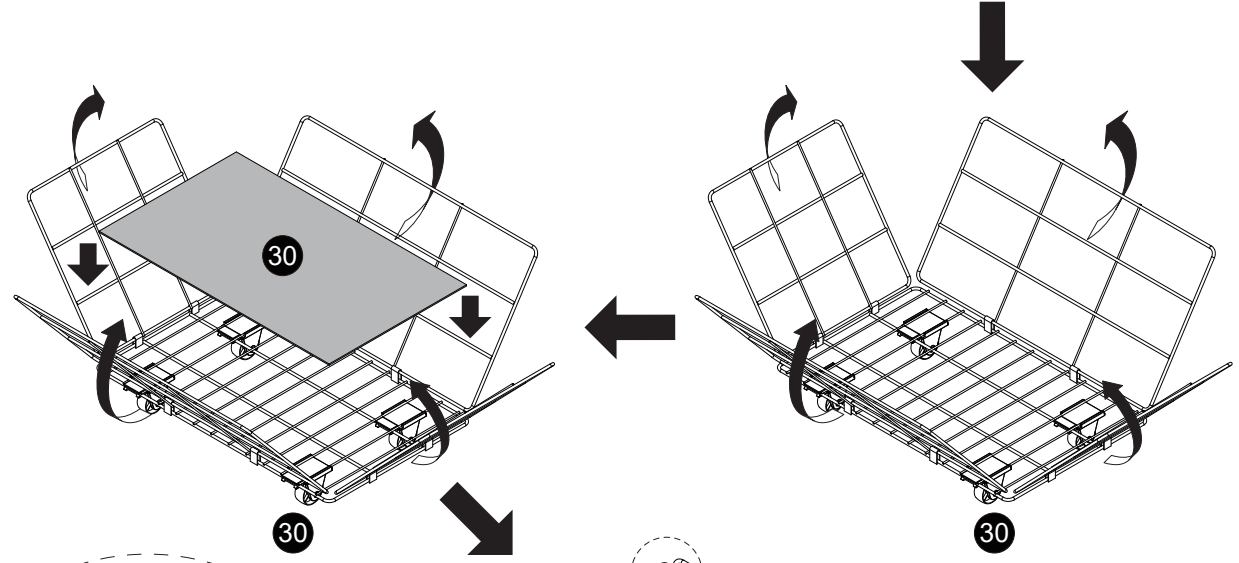
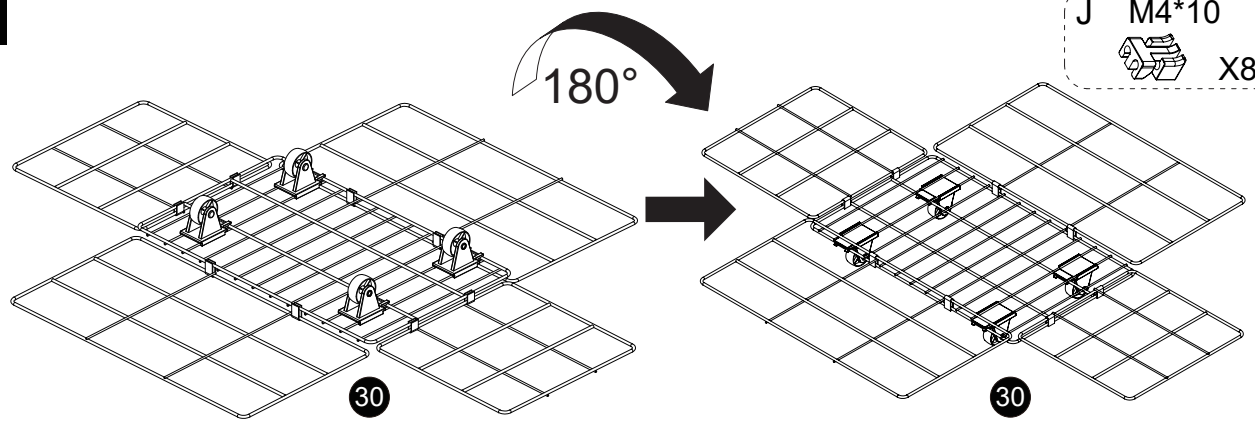
28

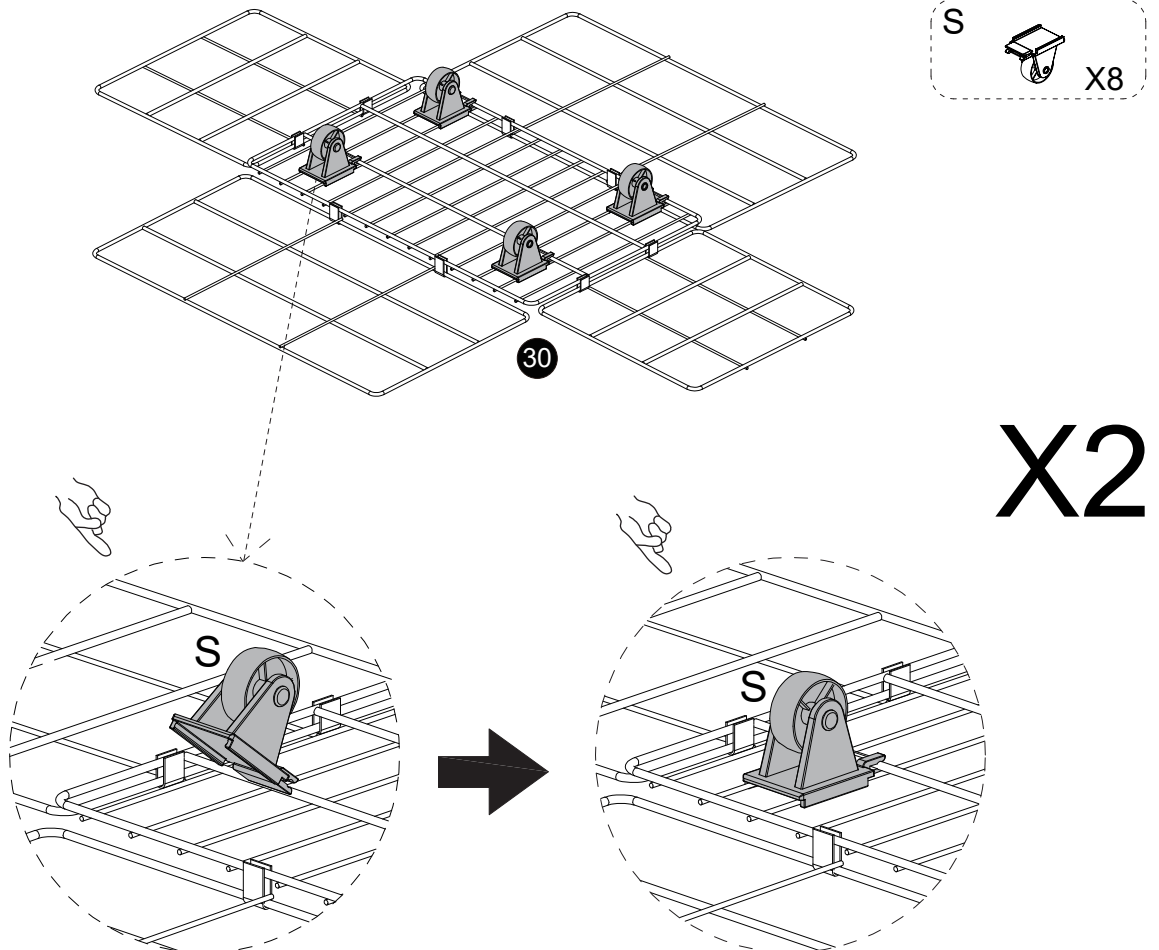

Assembly Instruction


29

J M4*10
 X8




Assembly Instruction

30


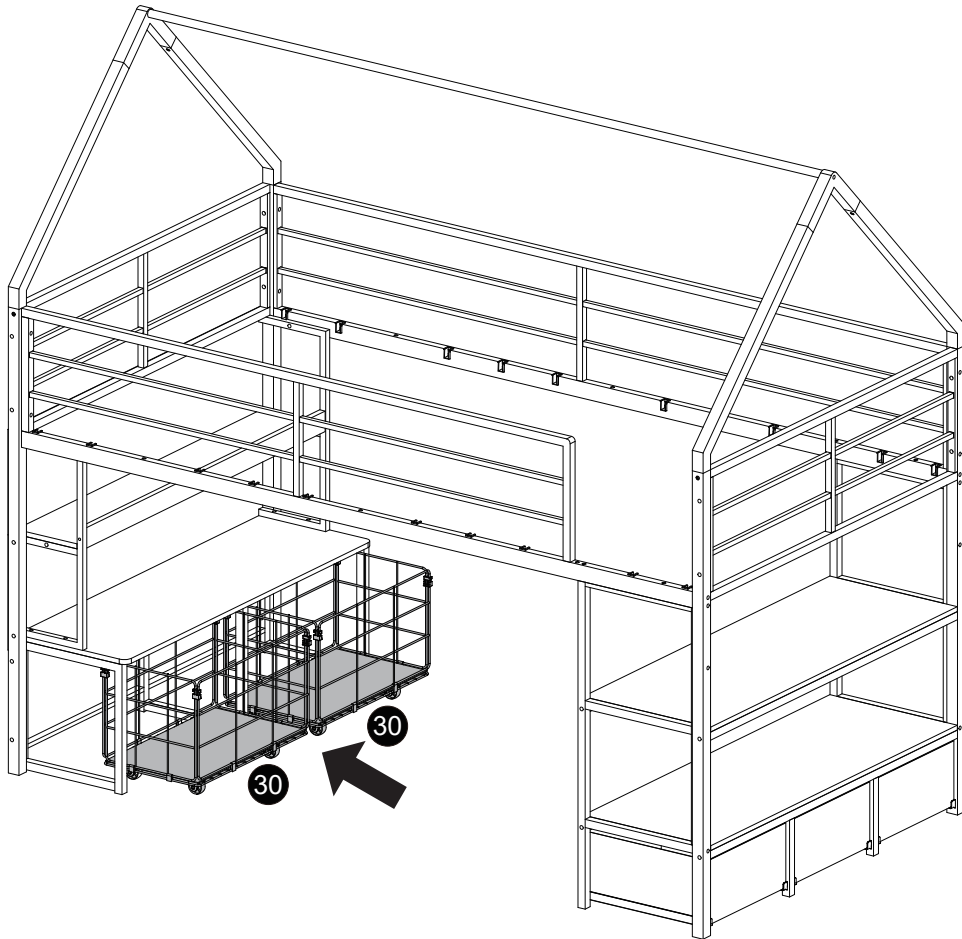


31

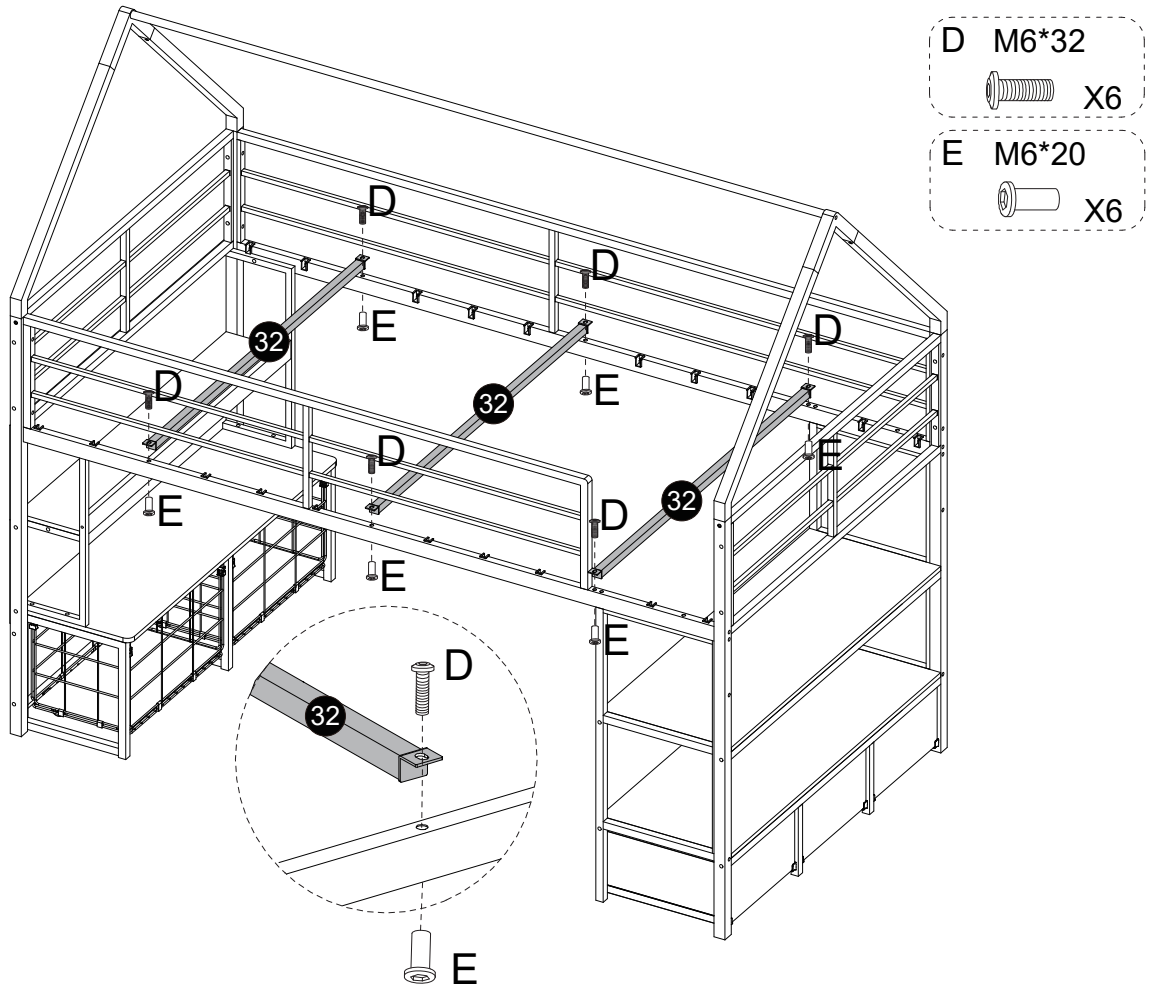


Assembly Instruction

34

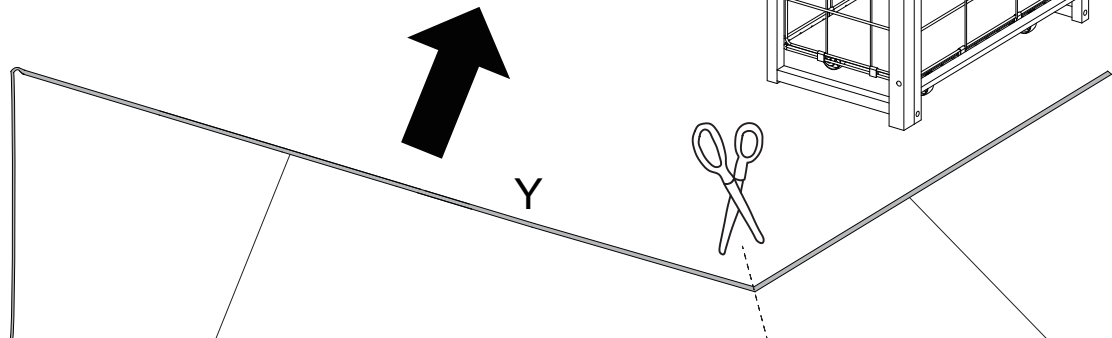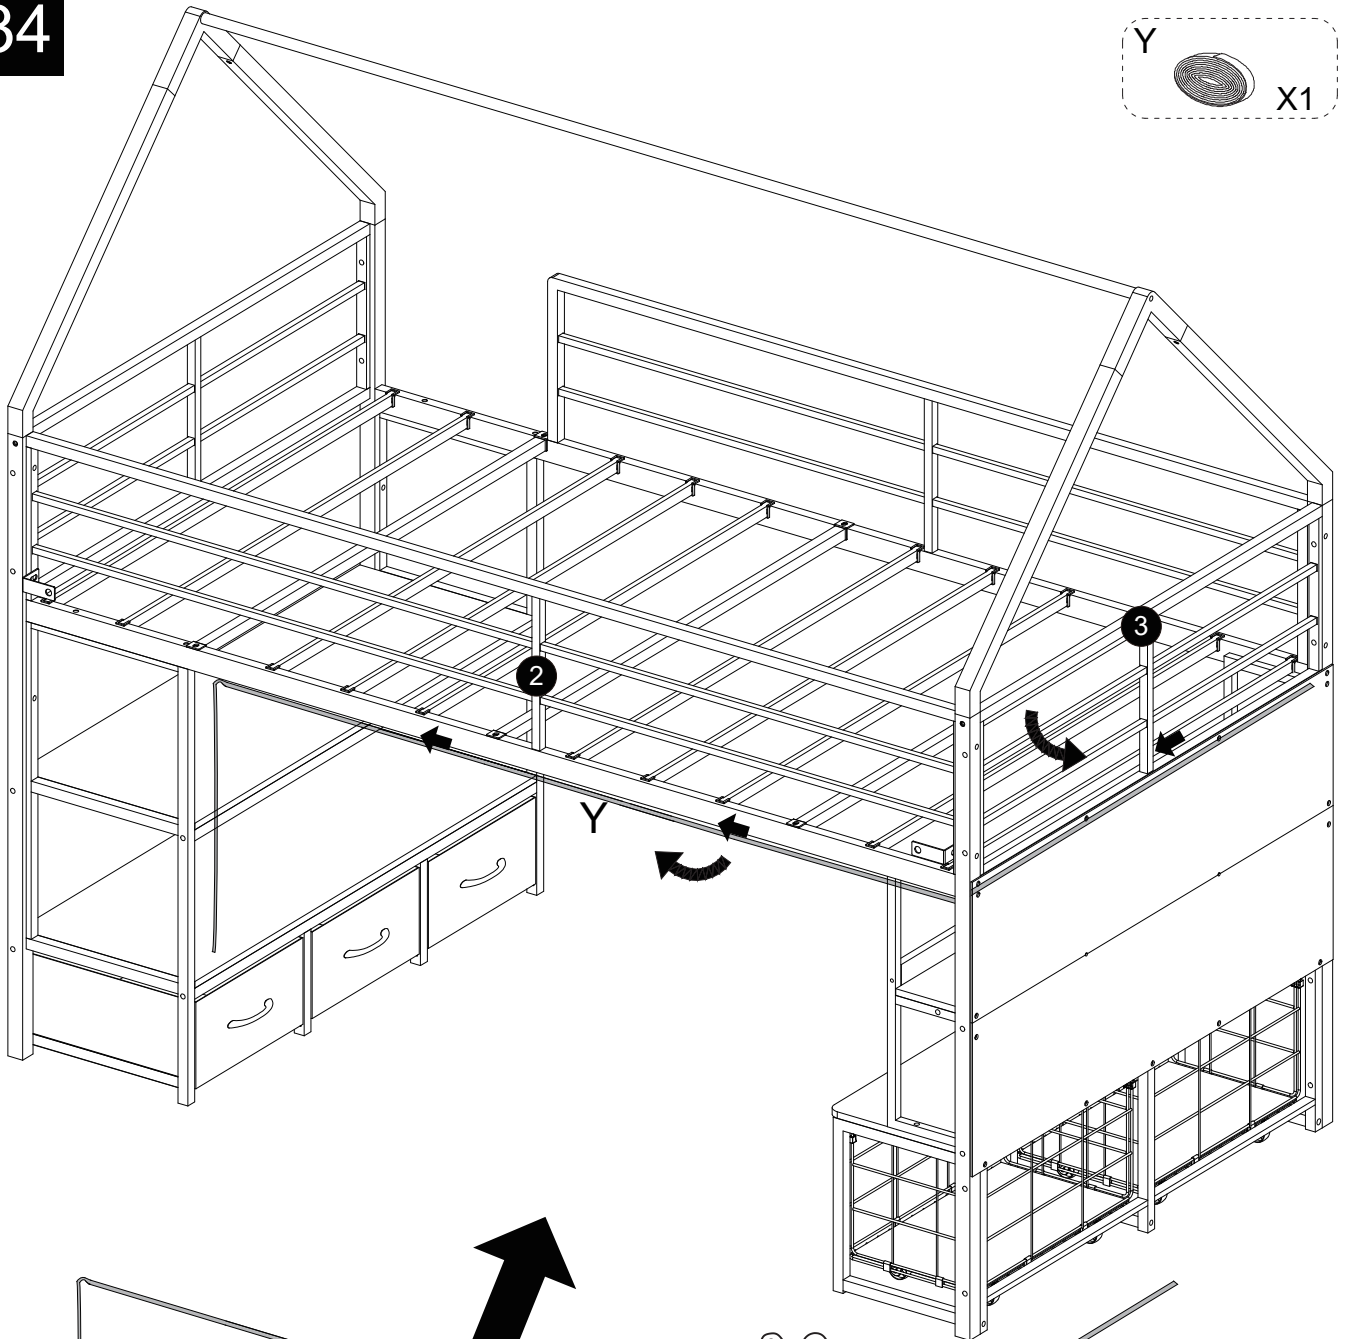


! Stick this part of the Velcro onto the bottom surface of component 2.

! Stick this part of the Velcro onto the bottom surface of inner component 3.

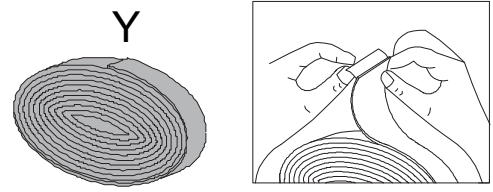


Assembly Instruction



35

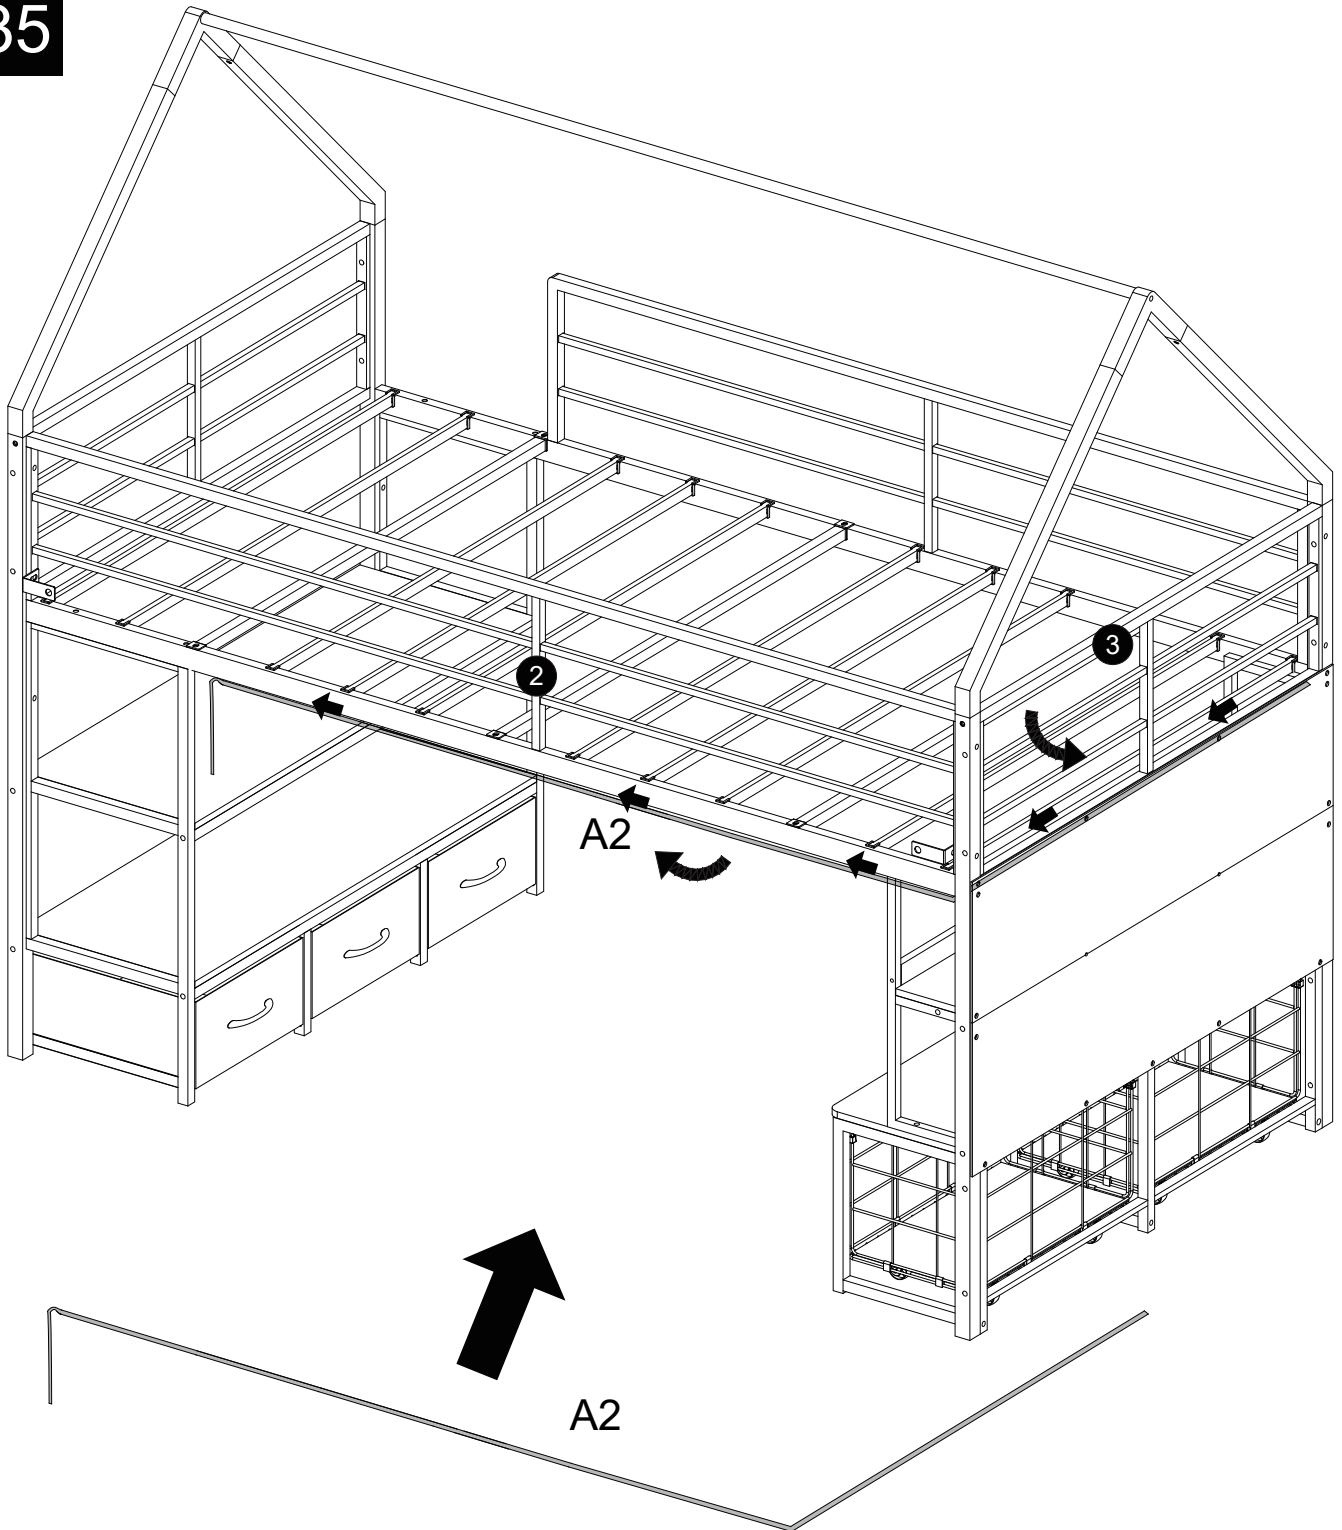

Stick component (A2) onto the two Velcro strips from the previous step.

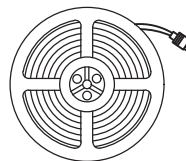


A2 light strip
1PC

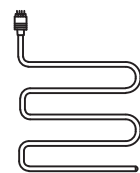



light strip

Assembly Instruction

36

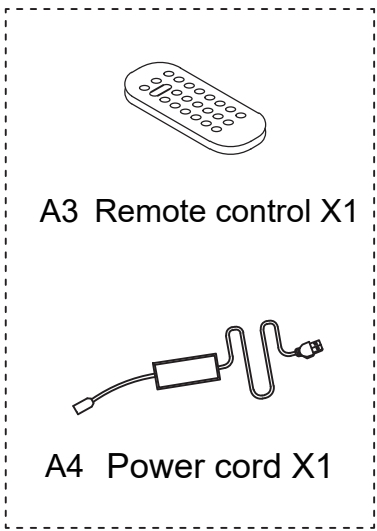


Please loosen the tie and tie it onto the iron pipe. As shown in the figure.

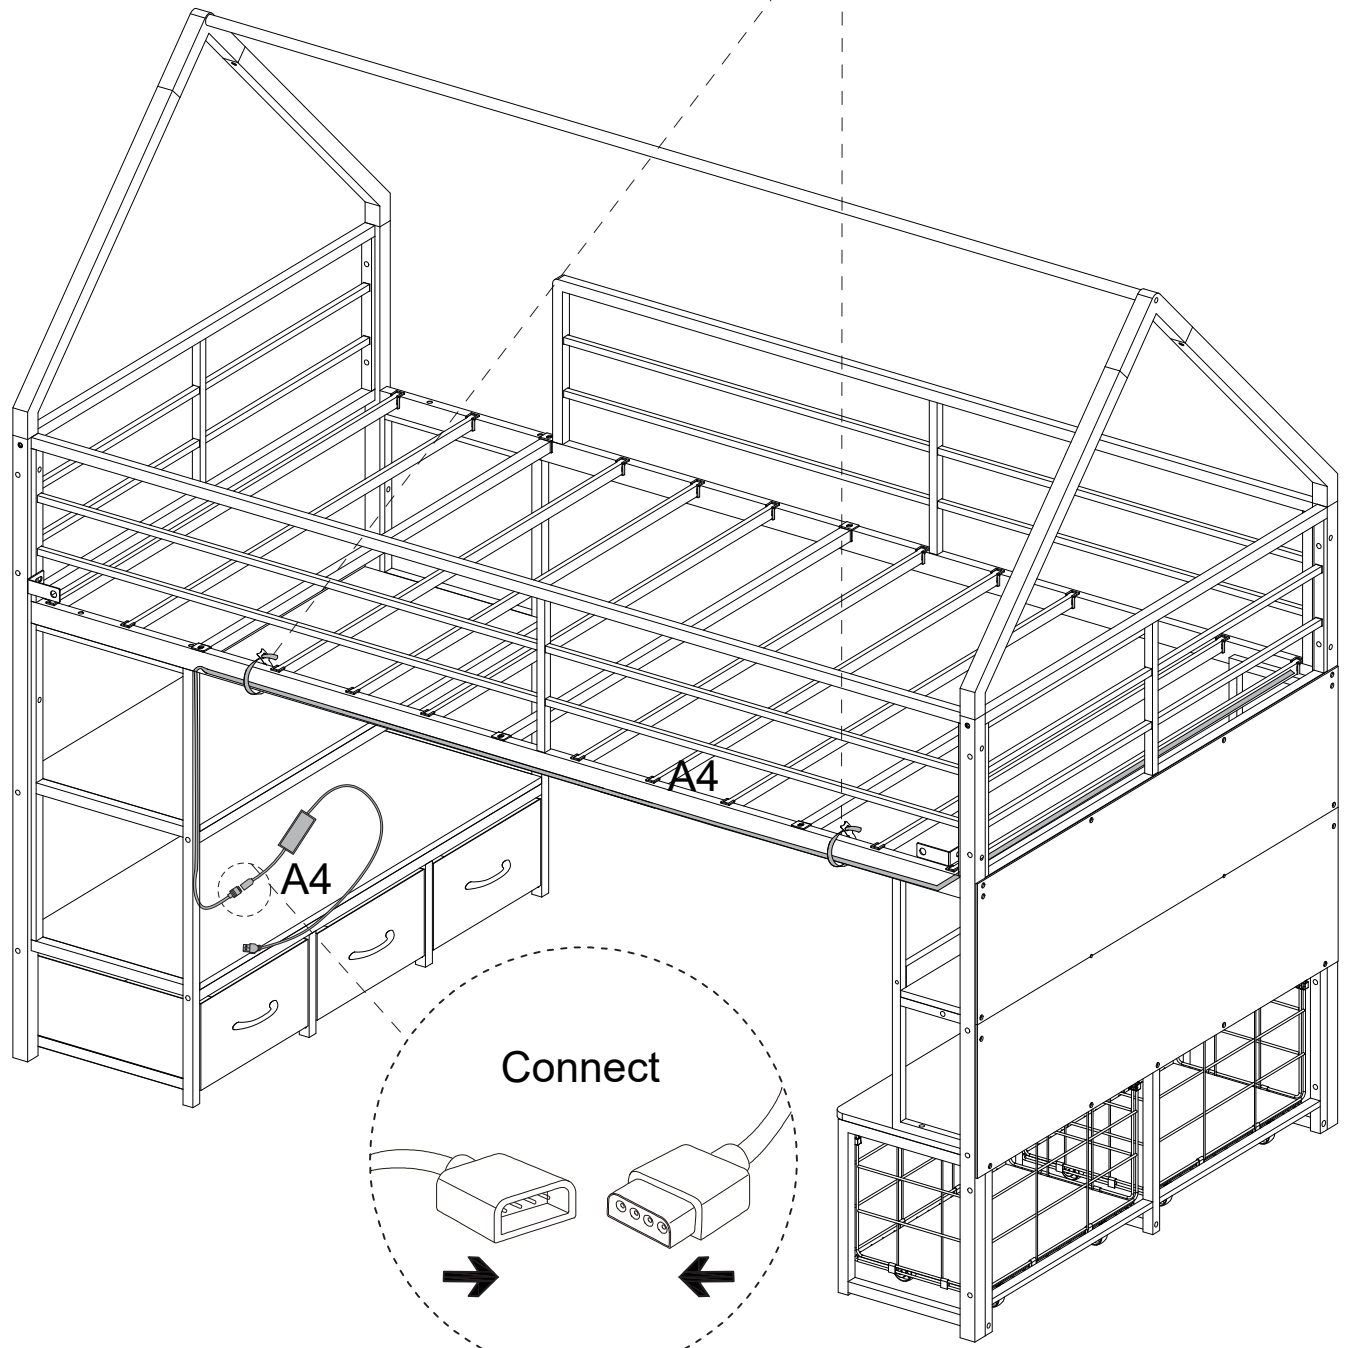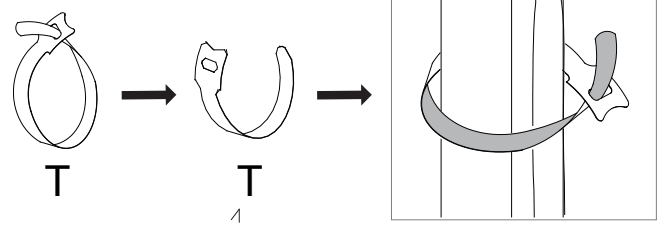

Assembly Instruction


37

T X1

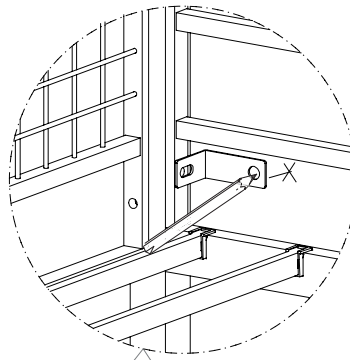


wall

wall

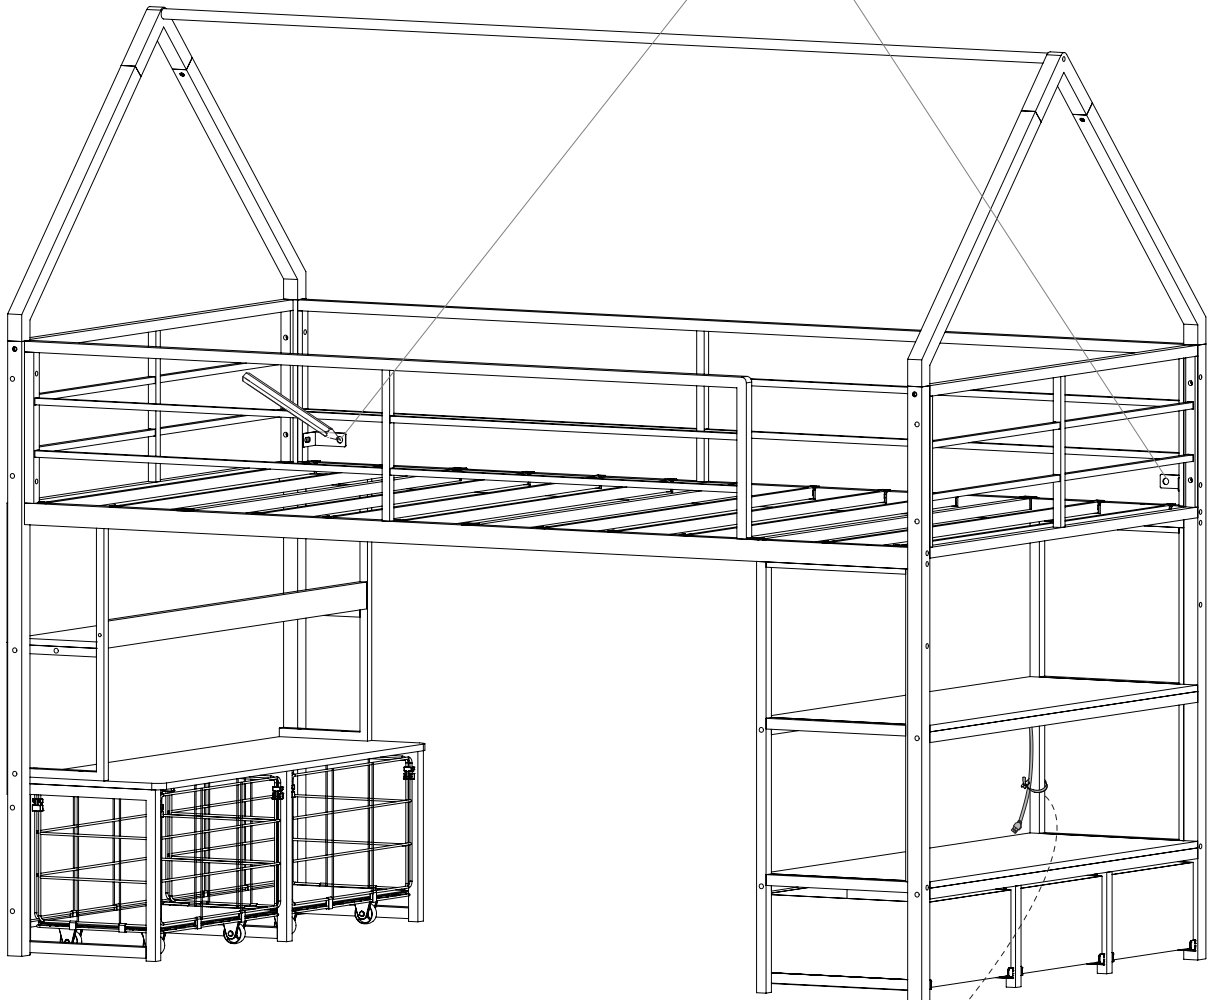


Please loosen the tie and tie it onto the iron pipe. As shown in the figure.

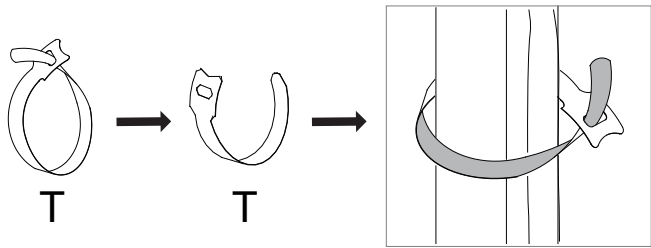

Assembly Instruction

38

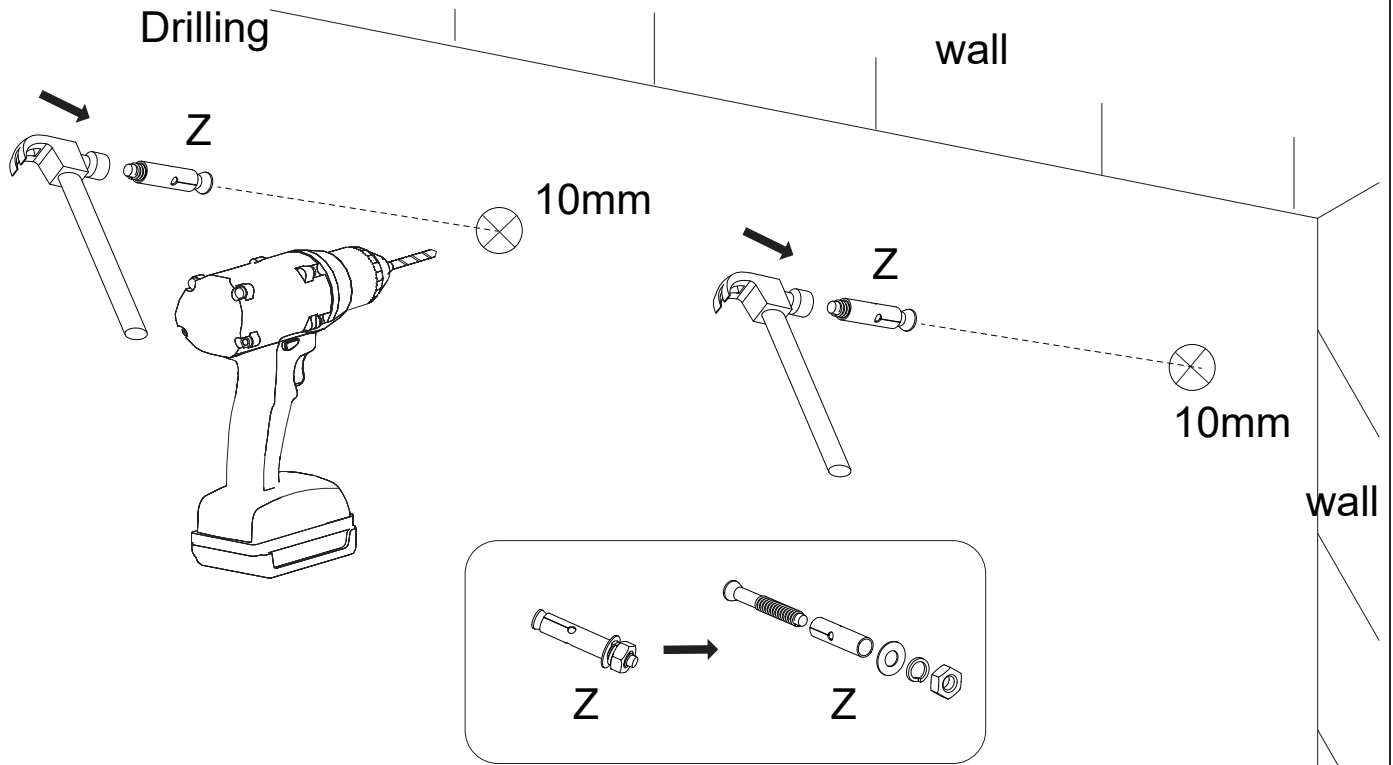

Please lock the expansion screw onto the wall.

39

