

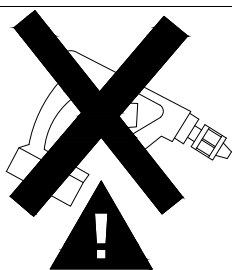


ASSEMBLY INSTRUCTION

COAT HOOK

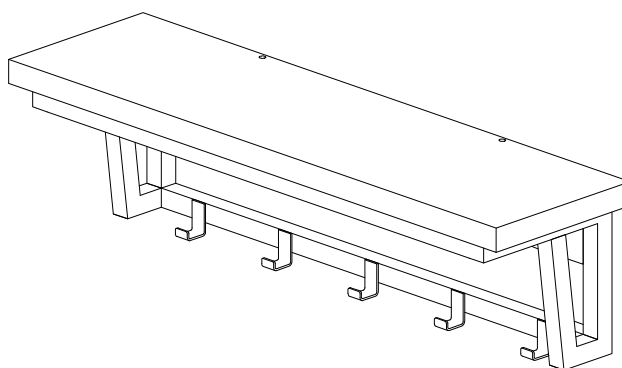


. Use of power tool to assemble this product will invalidate any claim and damage this product making it unsafe !!!
. Please assemble on a clean soft surface to avoid damage.

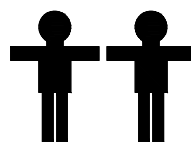


30 minutes

Part list-Claremont Coat Hook

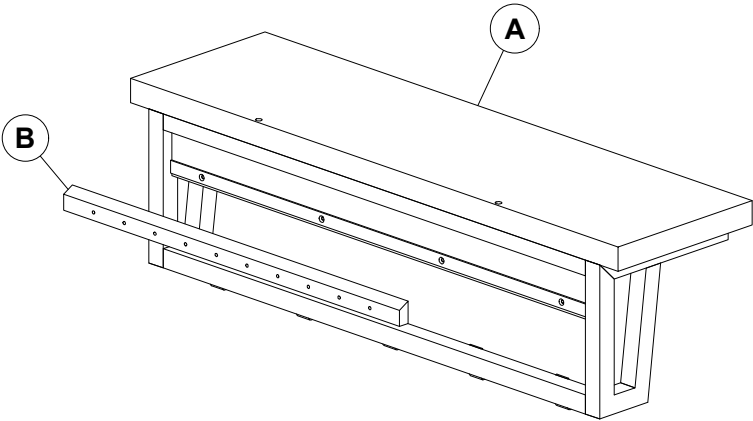

Identifying the hardware-Identify the hardware using the illustrations below


C



04

4x60MM SCREW


D




04


DRYWALL EZ ANCHOR

Step 01

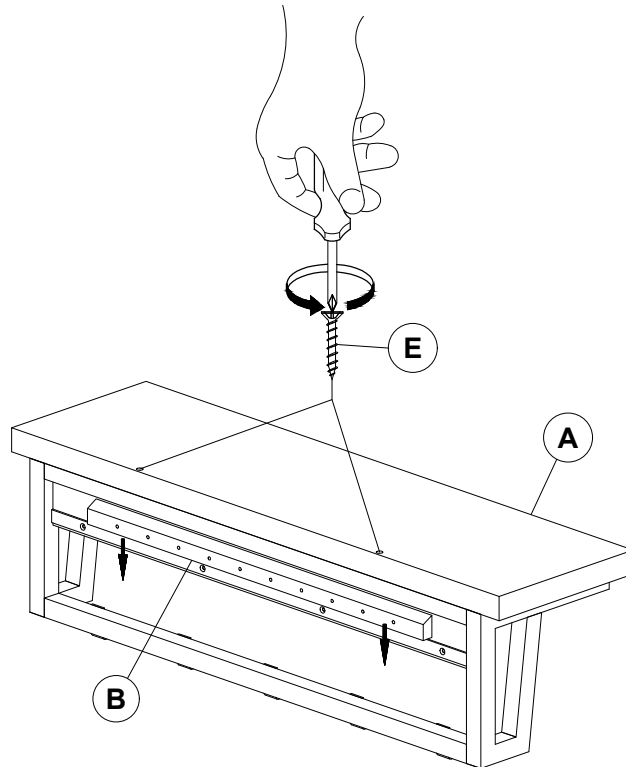


Step 02

C  **04**
4x60MM SCREW

D  **04**
DRYWALL EZ ANCHOR

For the best results, secure cleat to stud in wall. If you are not able to secure cleat to stud in wall, use EZ Anchors.

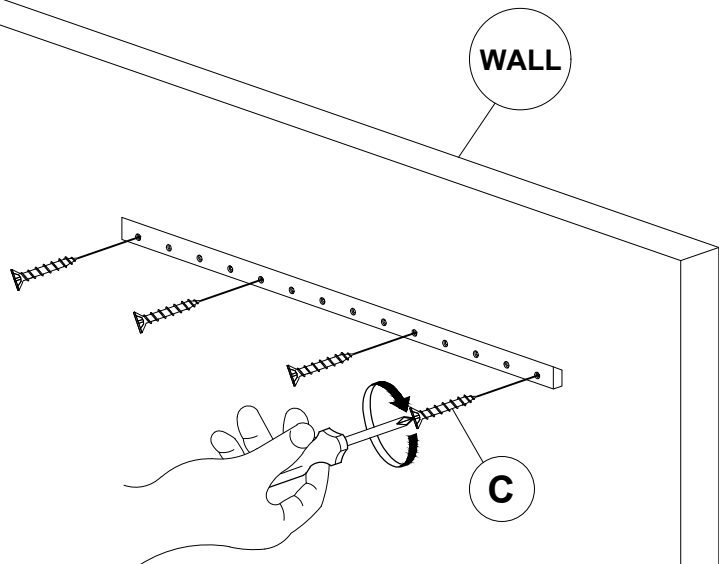

Step 03

