
STORAGE CABINET

User Manual

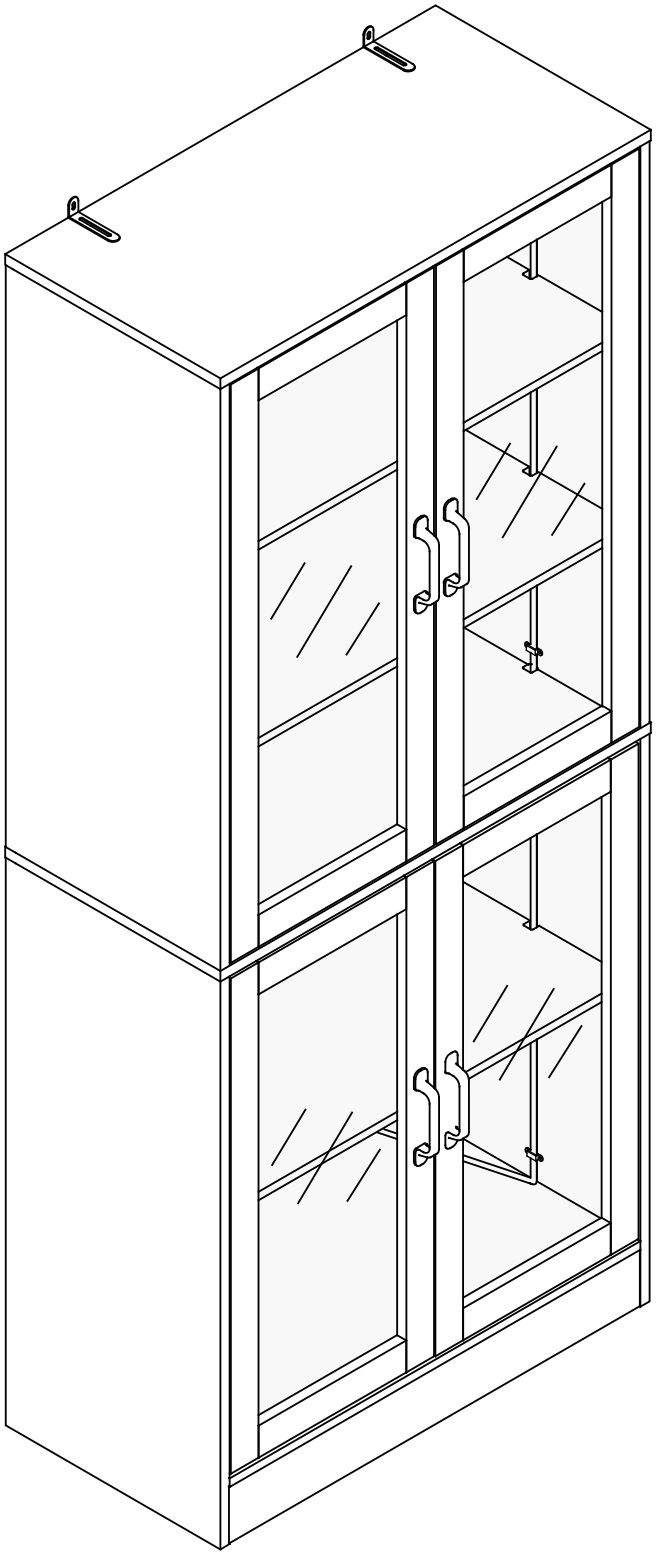

Made in China

For a Hassle-Free installation

1. Ensure you have received all cartons and familiarize yourself with the workload. Make sure there are enough helping hands to assist you, and that you have allocated the time required to assemble your new product.

2. Make sure you have cleared enough space in your home for the assembly. We recommend protecting your floor with a mat or cardboard to avoid scratches during the assembly process.

3. Read instructions carefully and check no parts are missing.

4. Lay out all hardware on a soft surface so you can easily identify them.

5. Carefully identify all components according to the labeled alphabet to ensure that the parts are in the correct place.

6. Install your new product carefully following the instructions. Don't skip ahead!

* If any parts are missing or damaged, we will gladly ship you replacement parts free of charge. Please contact us order ID and the Store Name of your purchase, we'realways here to help :)

WARNING

Serious or fatal injury may occur from unexpected assembly or use.

1.During the assembly process, keep all parts away from babies or children.

2.Always securely fix this product to the wall. Make sure the wall area to be drilled is free from hidden electrical wires, water and gas pipes.


3.Use of tip-over restraints may only reduce, but not eliminate the risk of tip-over.

4.Unless specially designed to accommodate, do not set heavy objects on top of this product.













5.Place the heaviest items on the lowest shelf.

6.Never allow children to climb or bang on drawers, doors or shelves.






PANEL LAYOUT

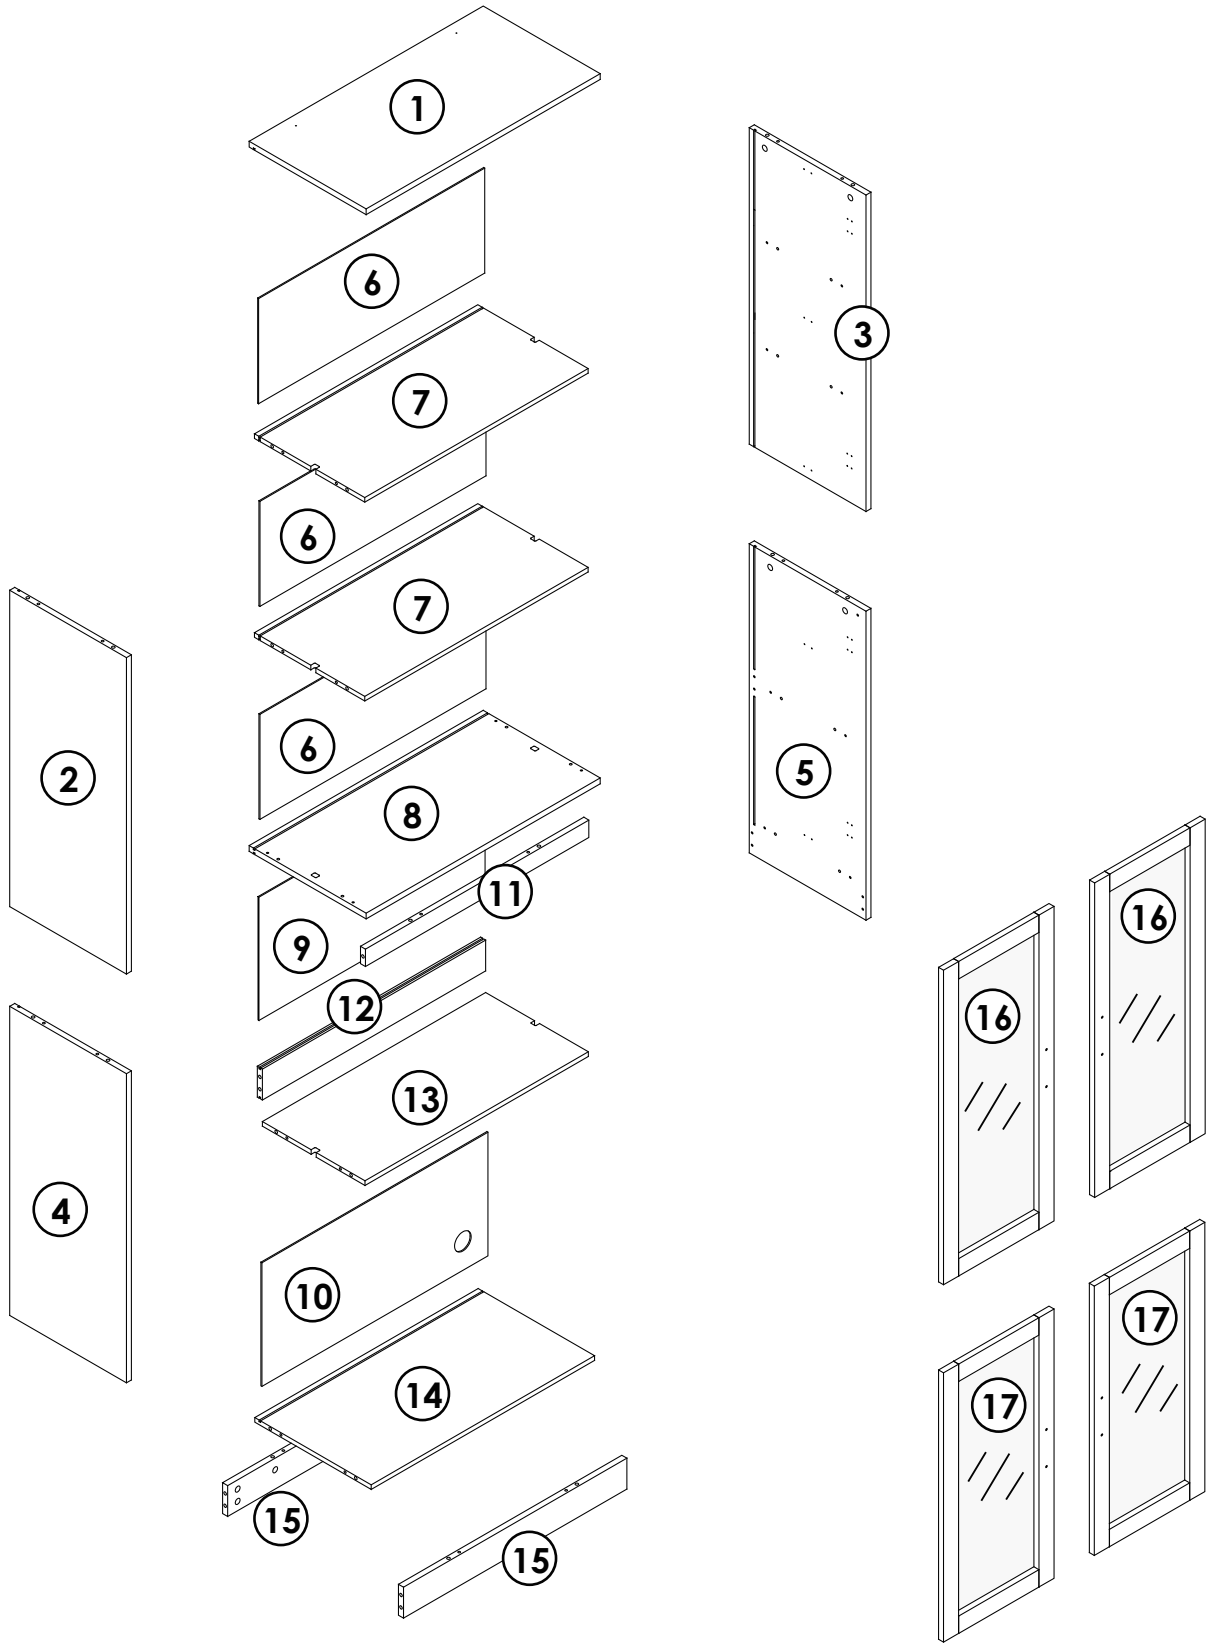


PARTS LIST




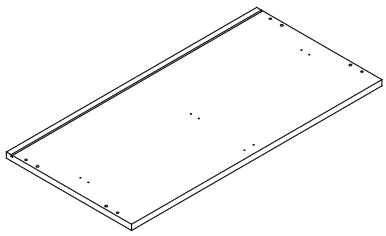
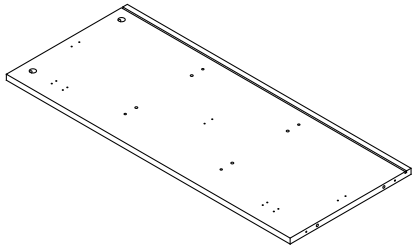
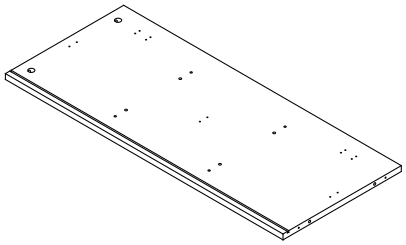
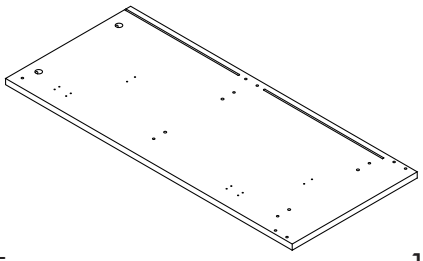
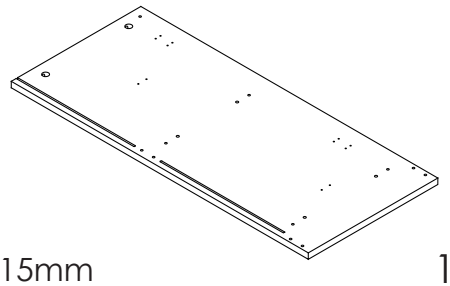
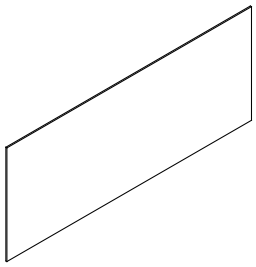
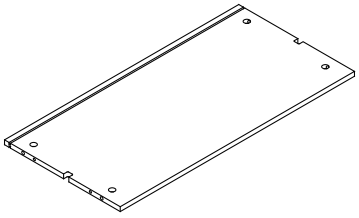
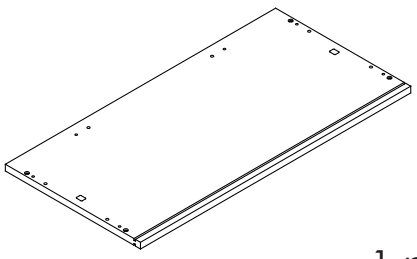
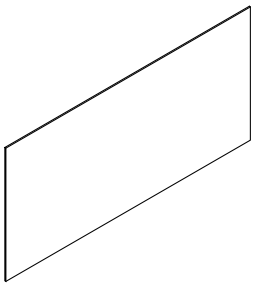
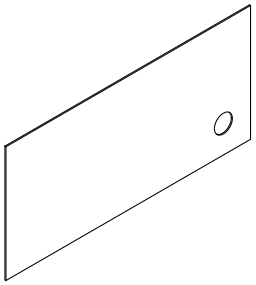
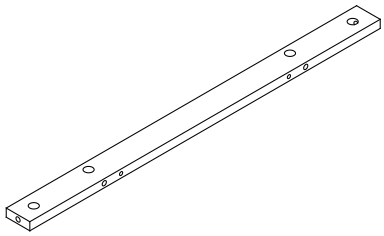
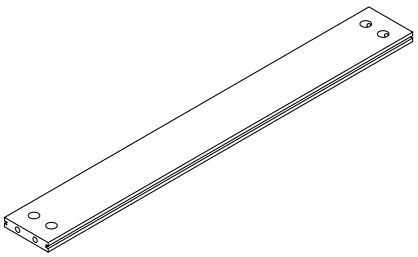
1  699*349*15mm 1 pc	**2**  819*348*15mm 1 pc
3  819*348*15mm 1 pc	**4**  799*348*15mm 1 pc
5  799*348*15mm 1 pc	**6**  676*272*3mm 3 pcs
7  668*329*12mm 2 pcs	**8**  699*349*15mm 1 pc
9  676*319*3mm 1 pc	**10**  676*319*3mm 1 pc
11  668*43*15mm 1 pc	**12**  668*79*15mm 1 pc

PARTS LIST

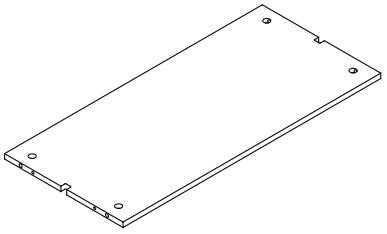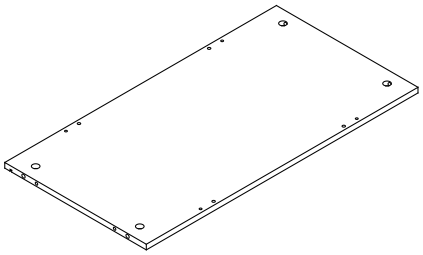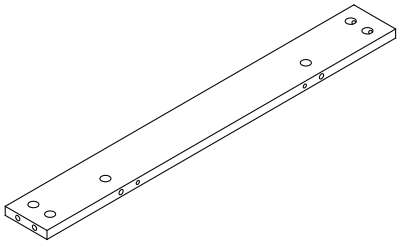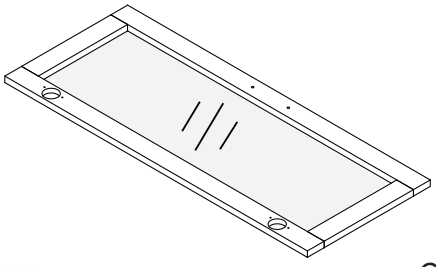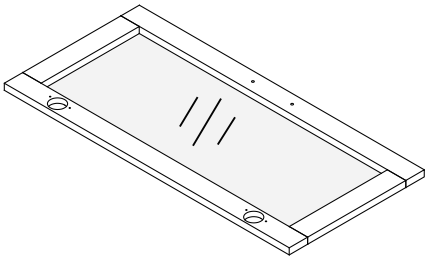13  668*306*12mm 1 pc	**14**  668*347*15mm 1 pc
15  668*79*15mm 2 pcs	**16**  812*329*15mm 2 pcs
17  696*323*15mm 2 pcs	


HARDWARE LIST

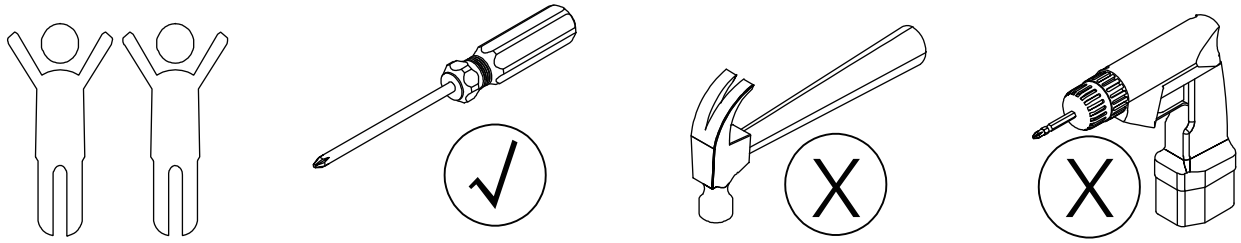

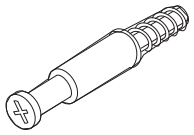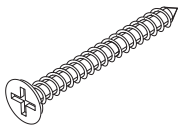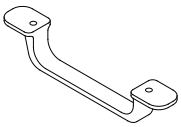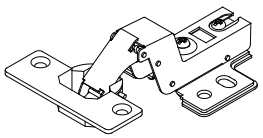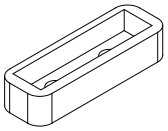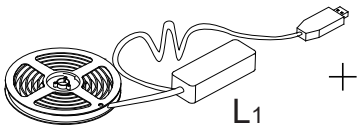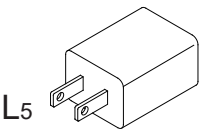
A  Ø6*35mm 44 pcs	**B**  Ø15*10mm 44 pcs	**C**  Ø6*30mm 34 pcs	**D**  Ø4*40mm 6 pcs
E  Ø3.5*12mm 48 pcs	**F**  130*23mm  Ø4*18mm 4 pcs	**G**  110*62*25mm 8 pcs	**H**  Ø3*16mm 22 pcs
I  38*13mm  Ø3*12mm 1 pc	**J**  J1 +  J2 +  J3 73*25mm Ø4*12mm Ø30*8mm 2 pcs	**M**  Ø10*1.5mm 2 pcs	
L  L1 +  L2 x13 +  L3 x26 Φ2.5x10mm +  L4 +  L5 1 pc			

ASSEMBLY STEPS


CAM BOLT INSTALLATION AS BELOW:





Cam bolt




Connecting piece

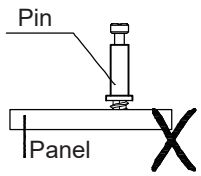

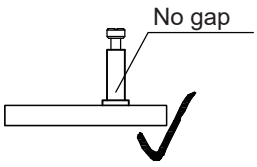


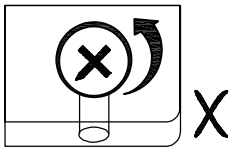



Rotate connecting piece if found in the position illustrated above.

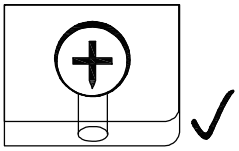


Correct orientation to receive bolts.

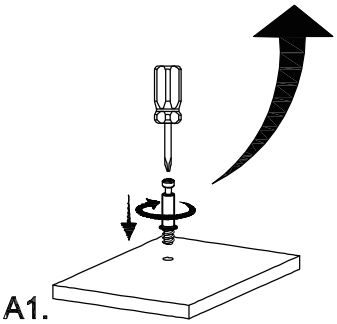

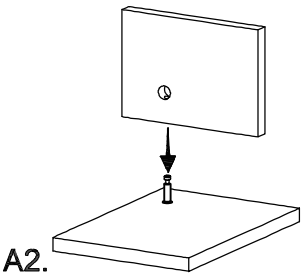


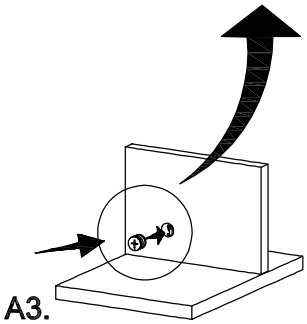


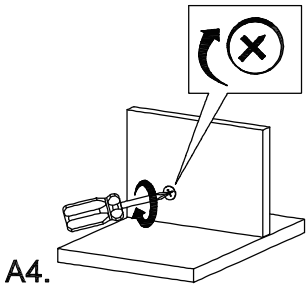

1


YOU WILL NEED	
A x8	

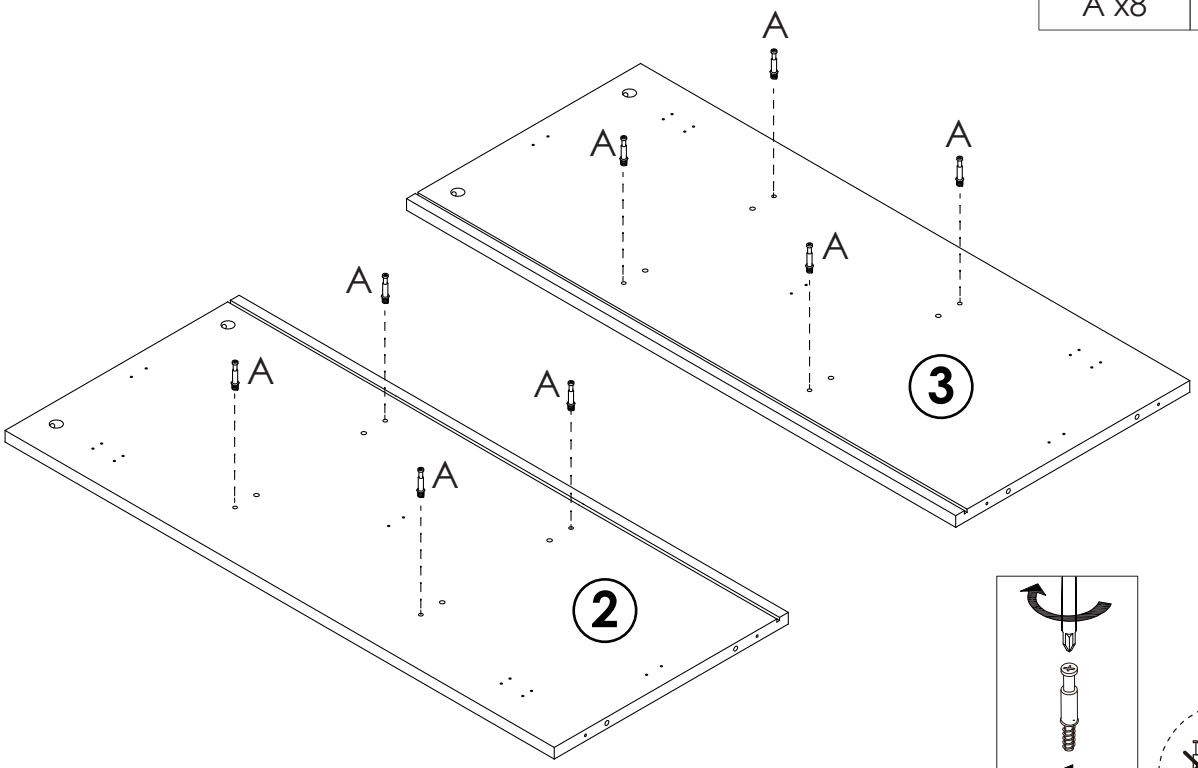


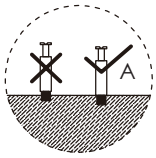

2


YOU WILL NEED	
C x4	B x4

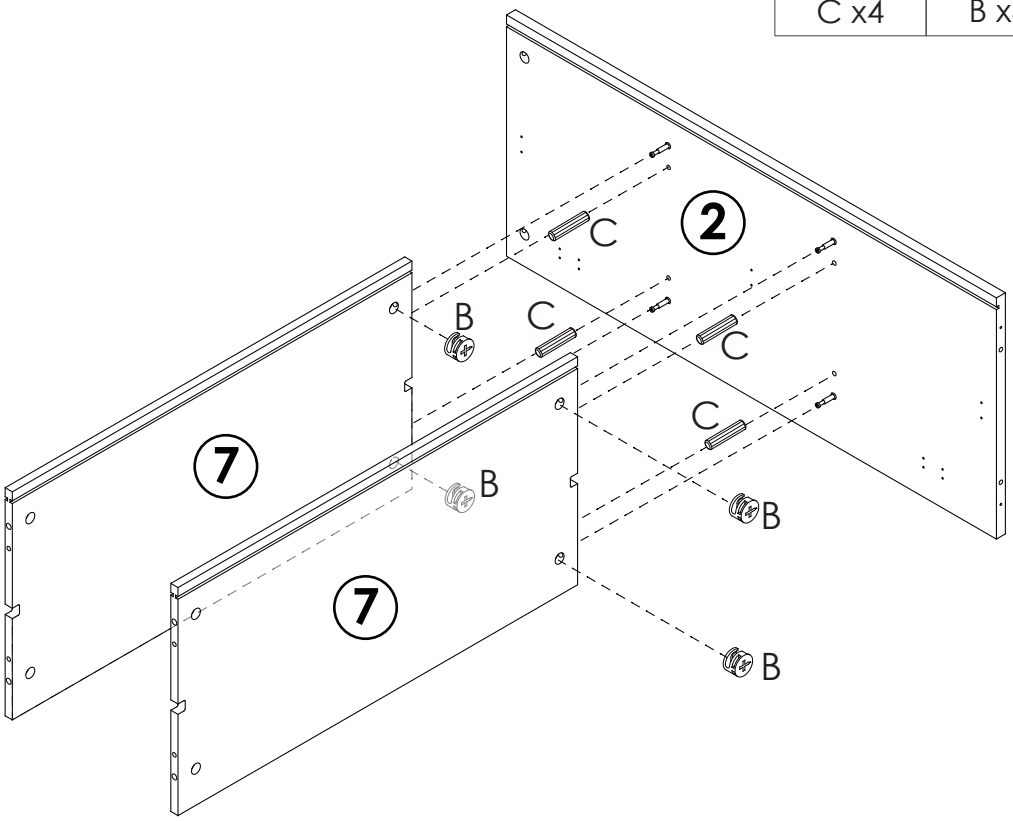

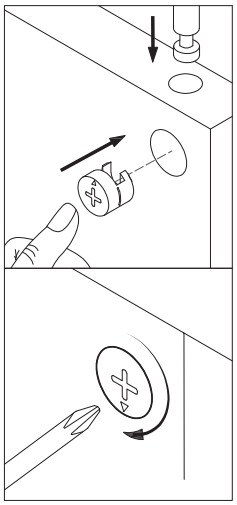


3

The thin backplate must be fully installed intothe slot or it will prevent proper installation.

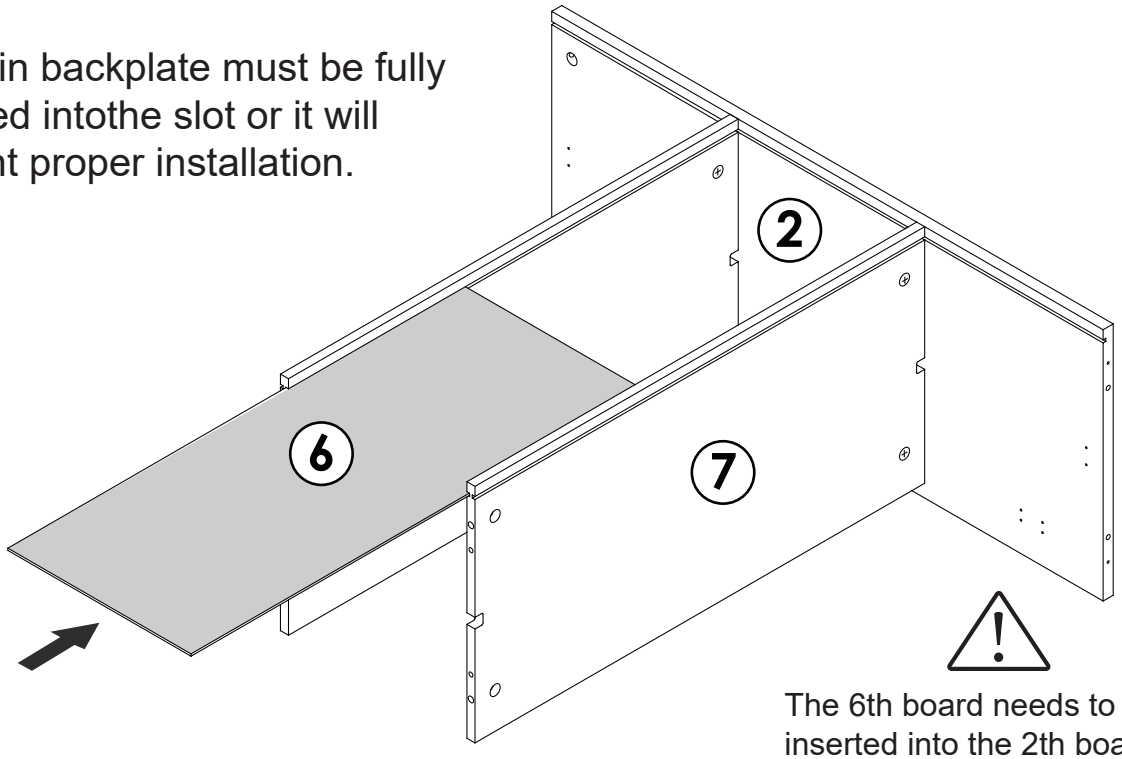

The 6th board needs to be fully inserted into the 2th board

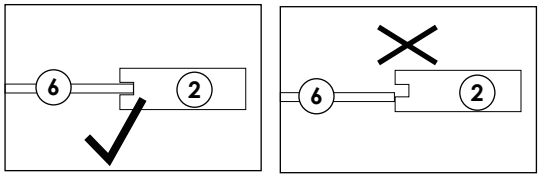



FLIP

4


YOU WILL NEED	
C x4	B x4

The thin backplate must be fully installed intothe slot or it will prevent proper installation.

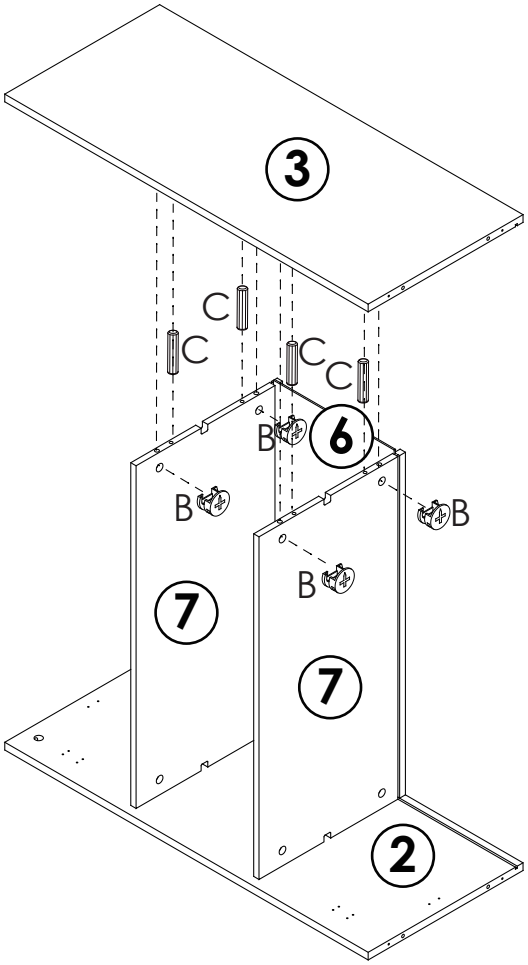

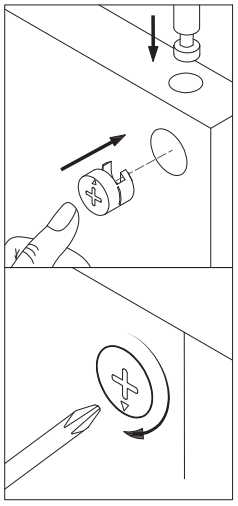


The 6th board needs to be fully inserted into the 3th board

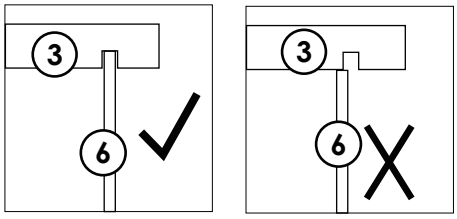


5

The thin backplate must be fully installed intothe slot or it will prevent proper installation.

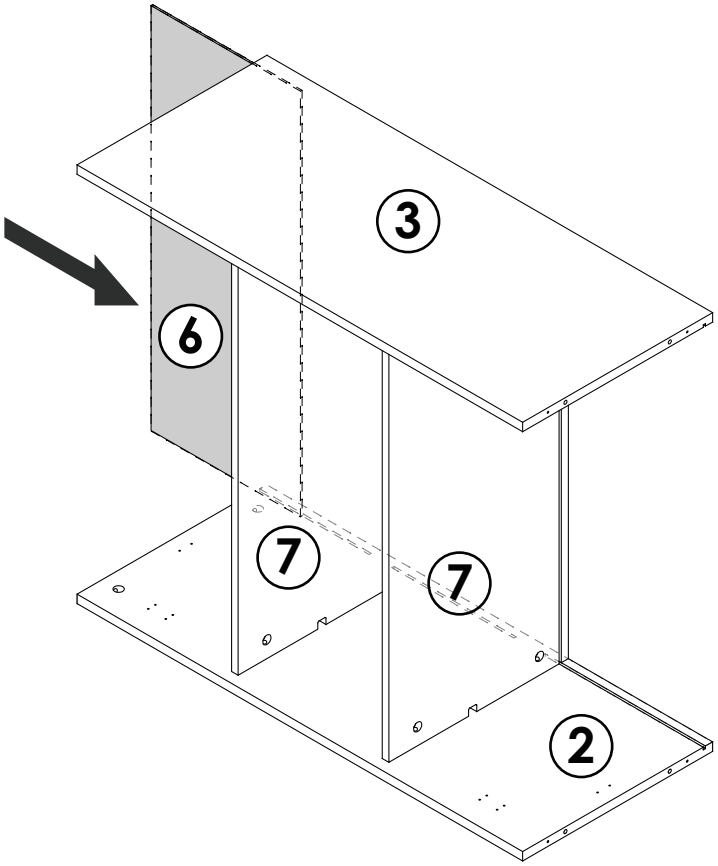



The 6th board needs to be fully inserted into the 7th board

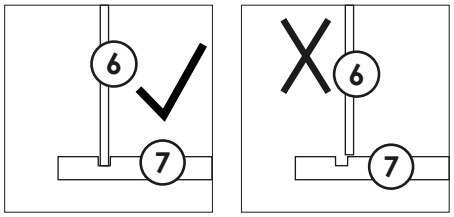



6

YOU WILL NEED	
A x4	I x1

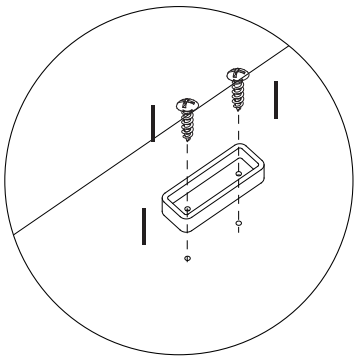

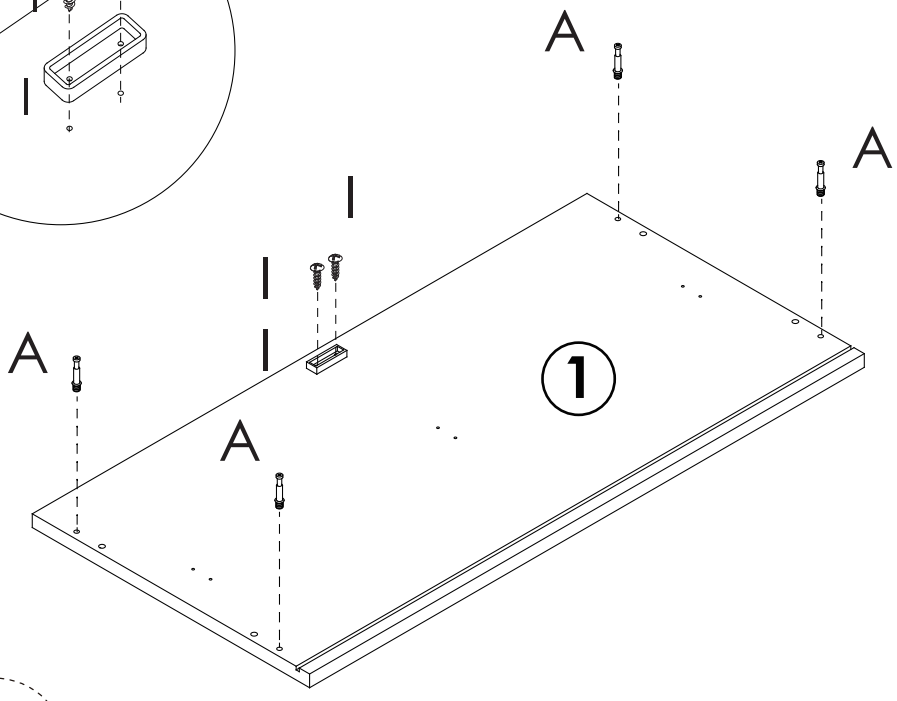


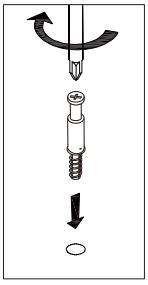


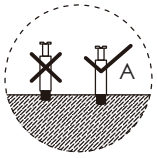

7


YOU WILL NEED	
C x4	B x4

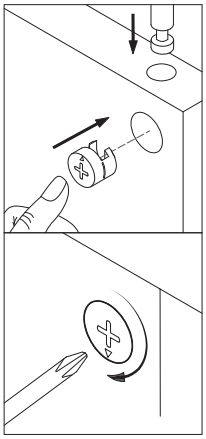

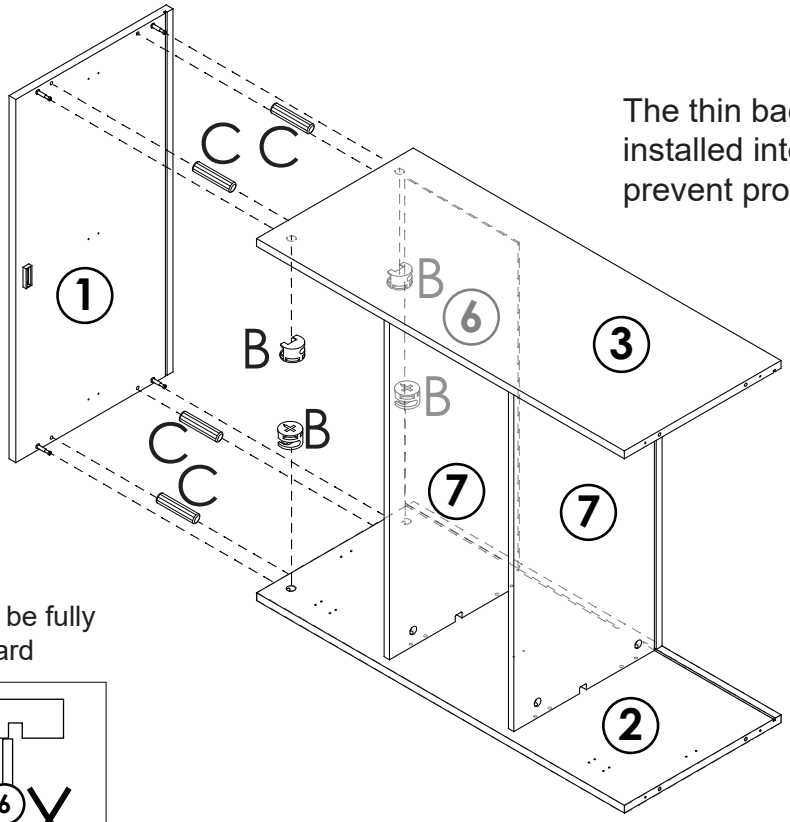

The thin backplate must be fully installed intothe slot or it will prevent proper installation.


The 6th board needs to be fully inserted into the 1th board

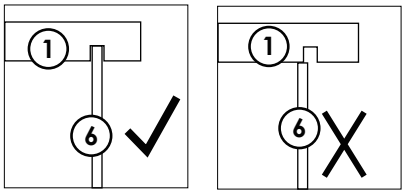


FLIP

8

The thin backplate must be fully installed intothe slot or it will prevent proper installation.

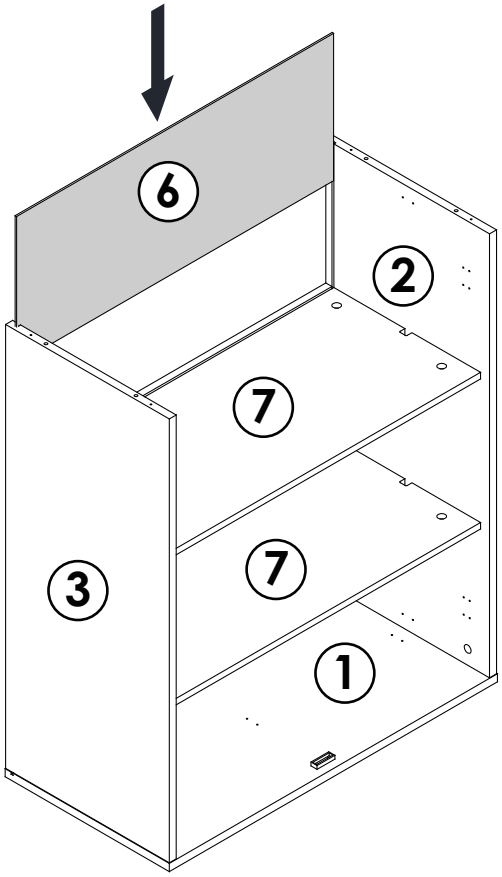


The 6th board needs to be fully inserted into the 7th board

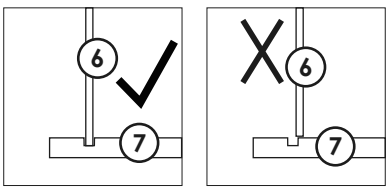


9

YOU WILL NEED	
C x4	D x4

The thin backplate must be fully installed intothe slot or it will prevent proper installation.

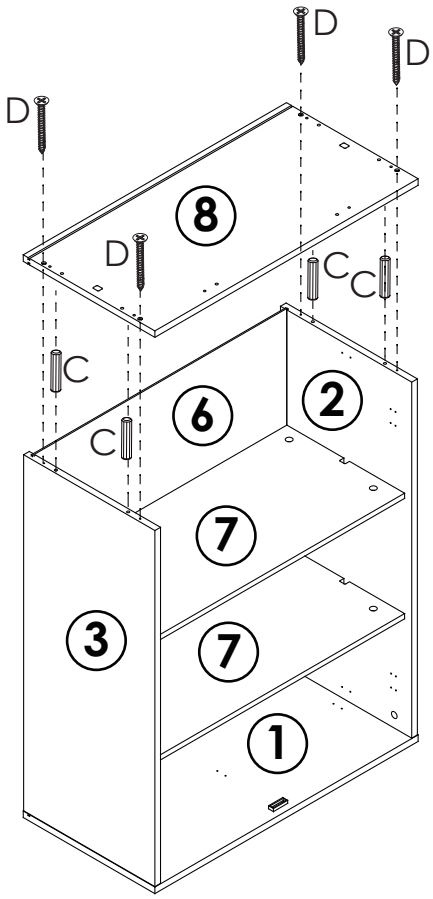



The 6th board needs to be fully inserted into the 8th board

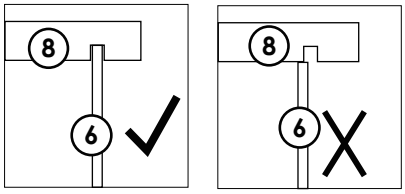


10

YOU WILL NEED	
A x6	

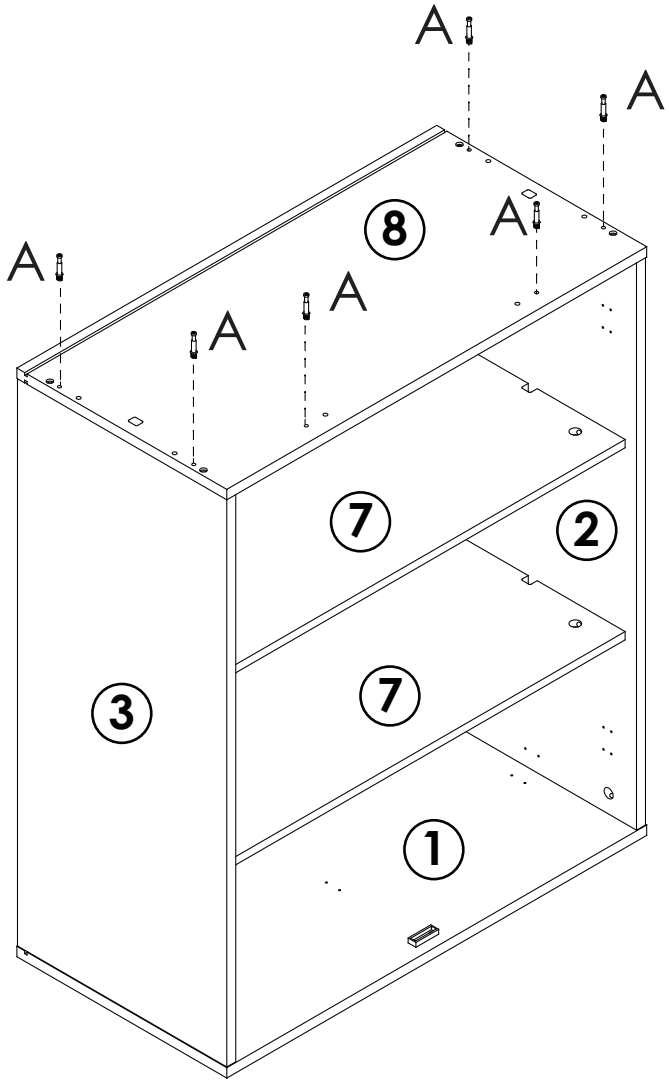


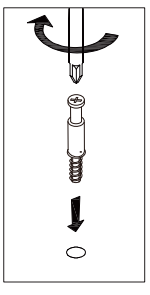


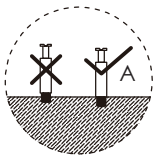

11


YOU WILL NEED	
A x22	

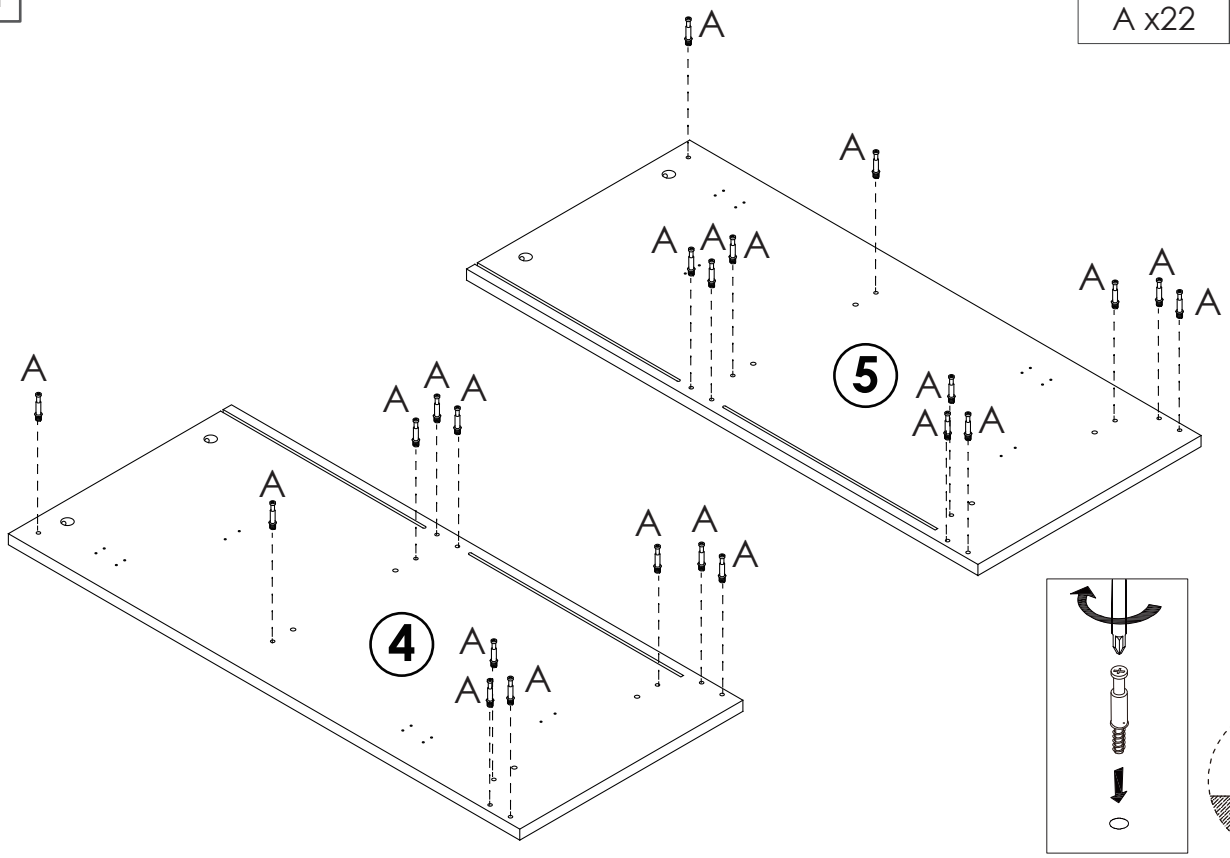


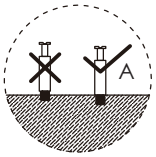

12


YOU WILL NEED	
A x4	

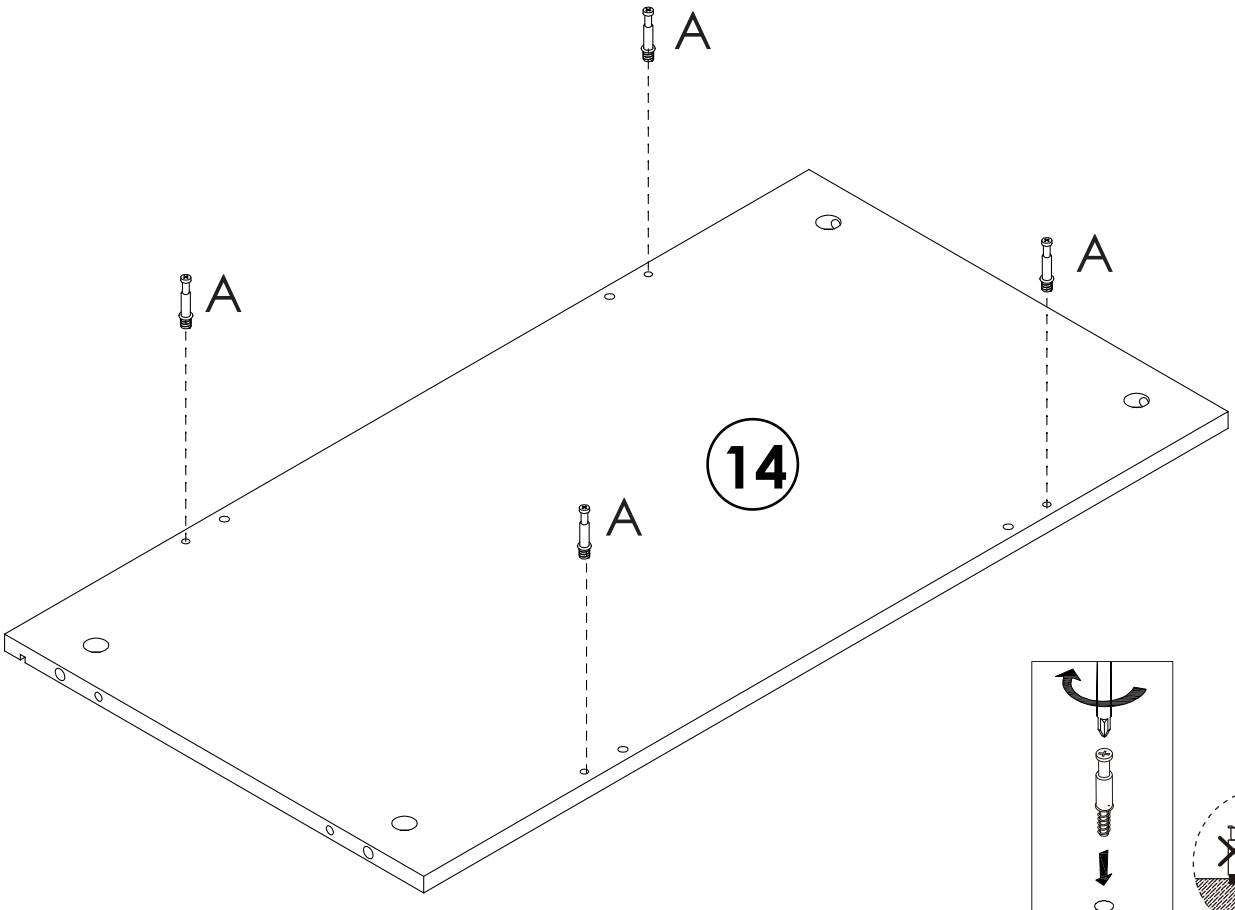


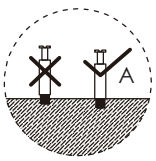

13


YOU WILL NEED	
C x4	B x4

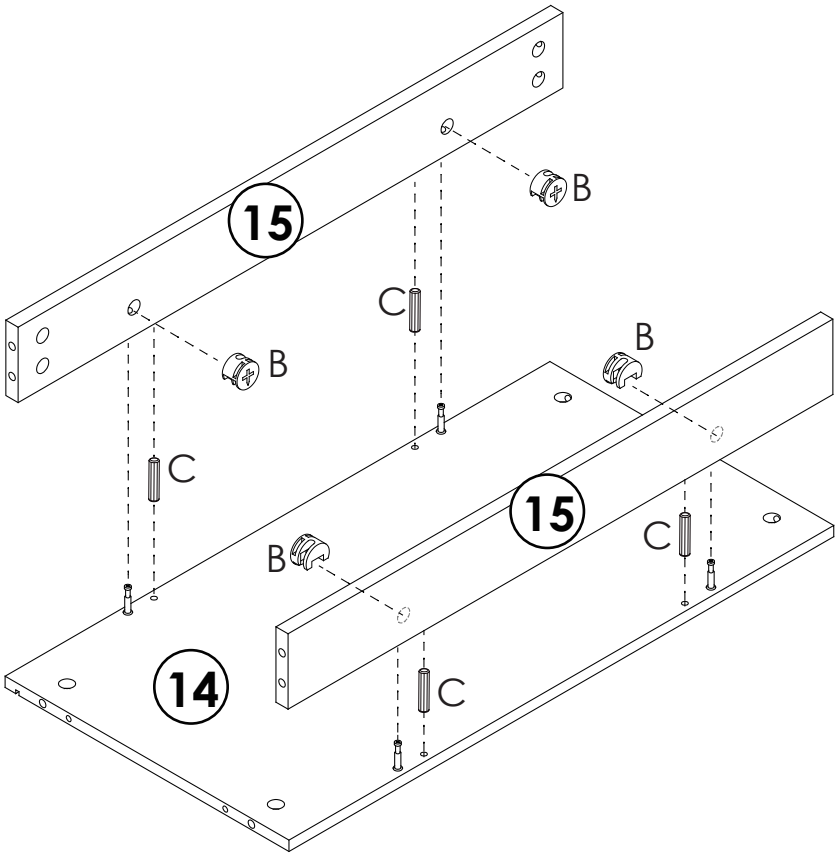


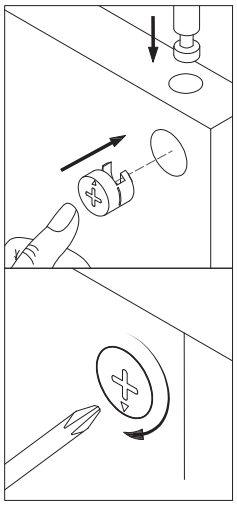

14


YOU WILL NEED	
C x4	B x9

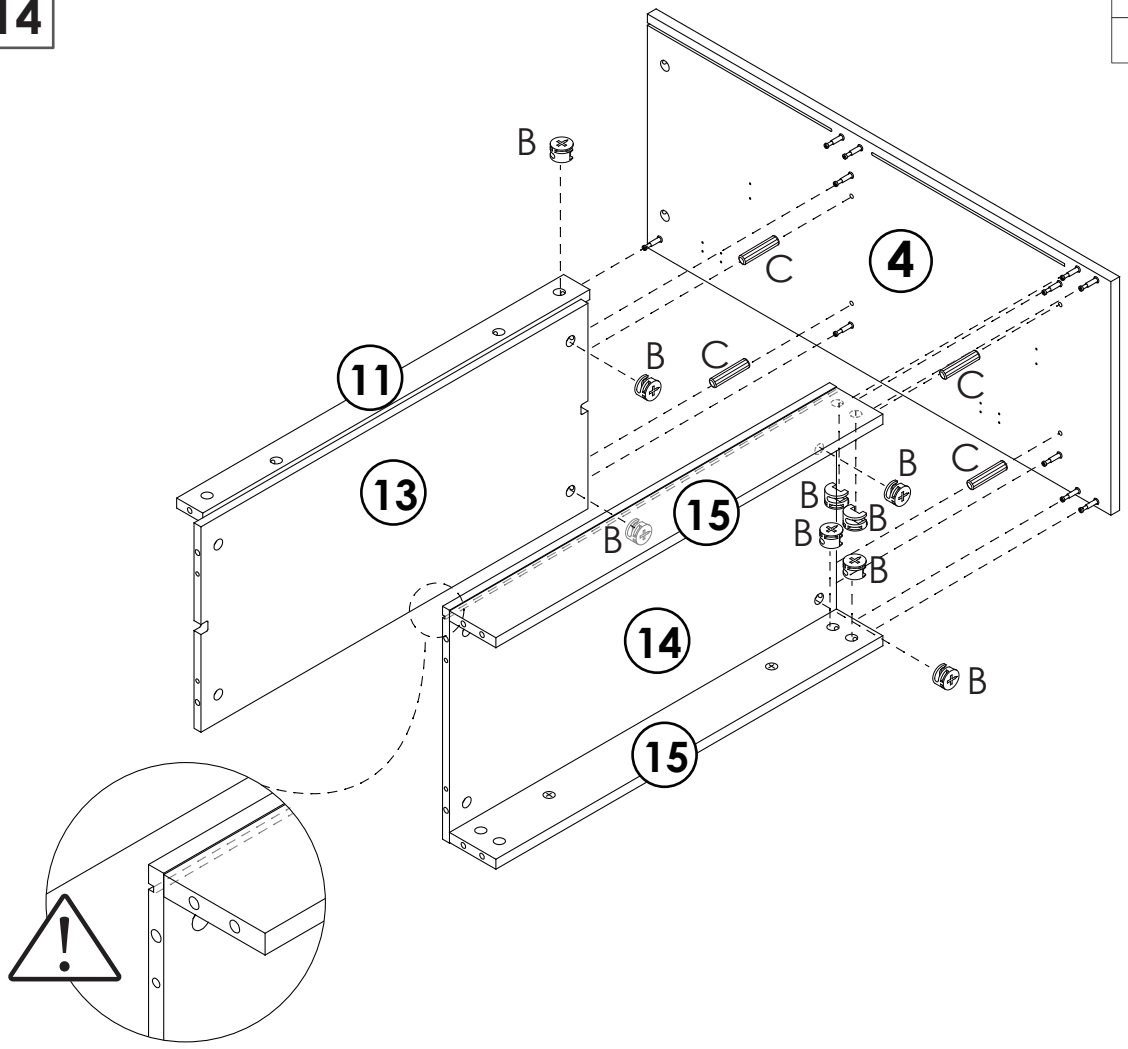


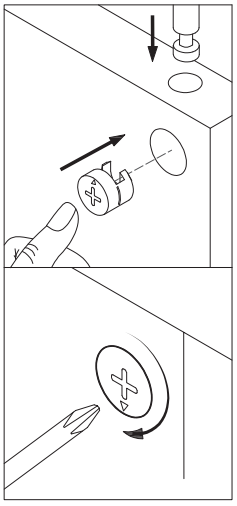

15


YOU WILL NEED	
B x2	

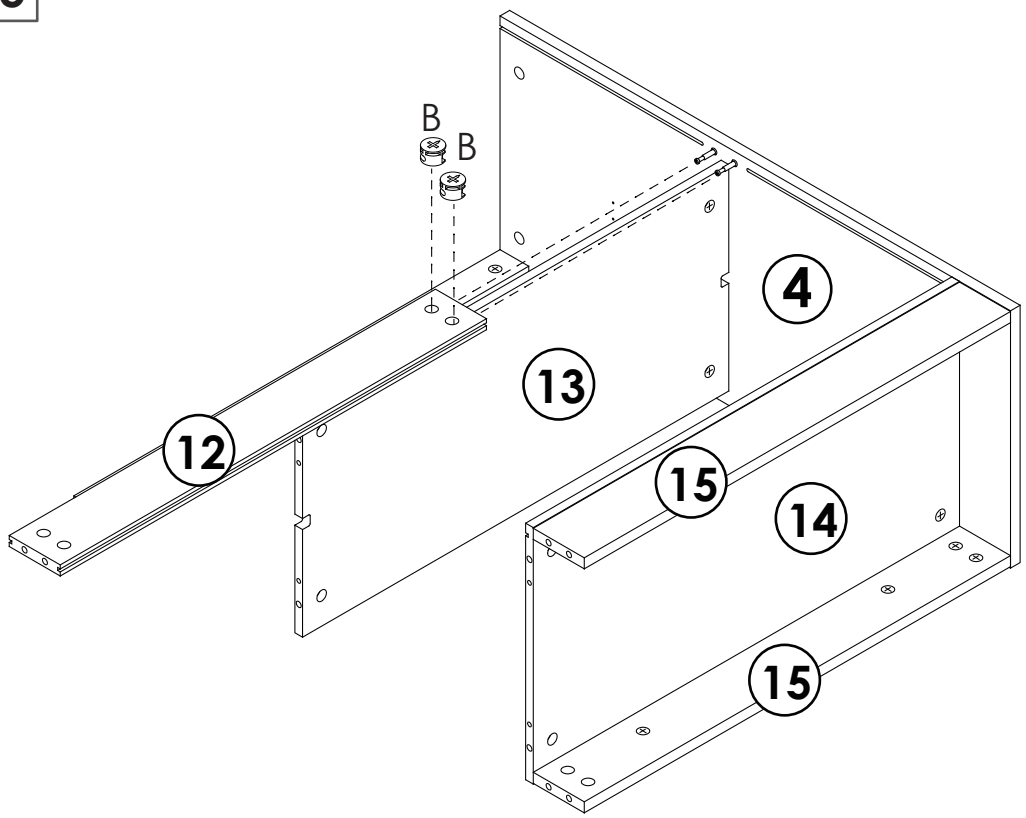

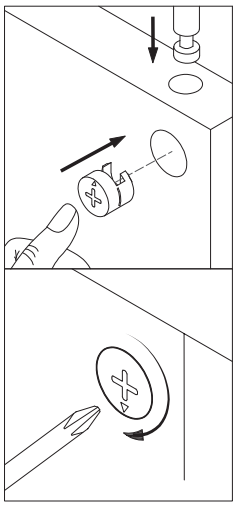



16

The thin backplate must be fully installed intothe slot or it will prevent proper installation.

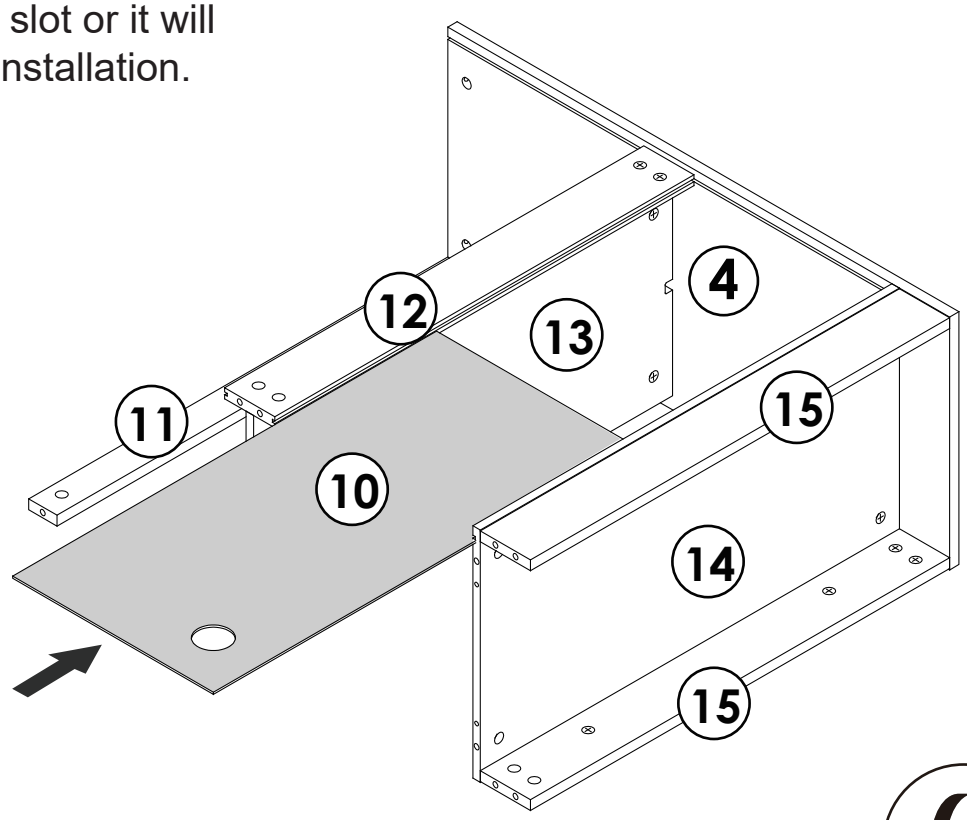

The 10th board needs to be fully inserted into the 4th board

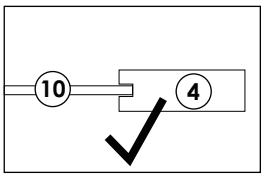

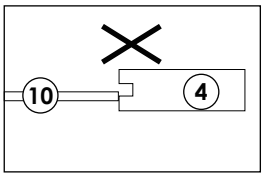





17


YOU WILL NEED	
C x4	B x11

The thin backplate must be fully installed intothe slot or it will prevent proper installation.

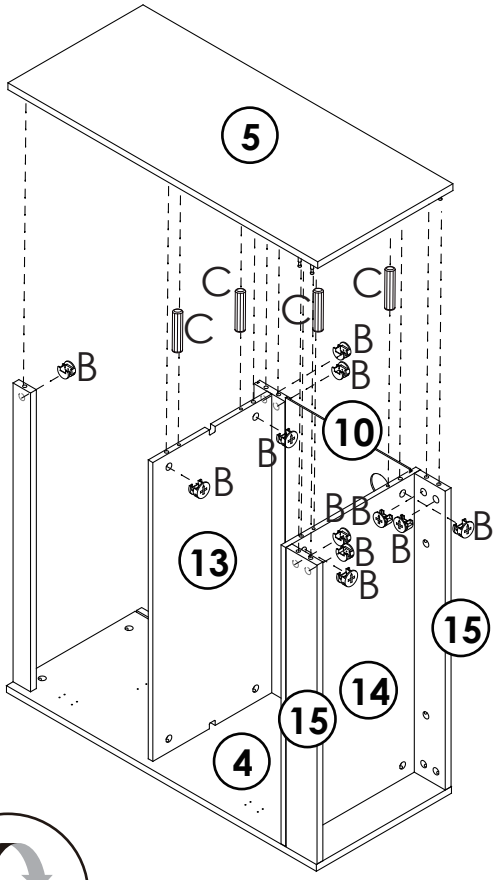

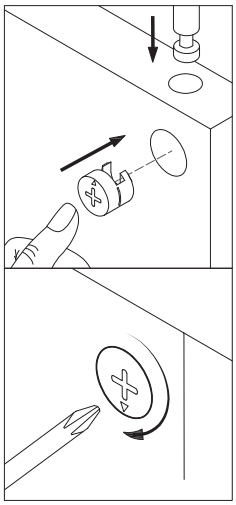


The 10th board needs to be fully inserted into the 5th board

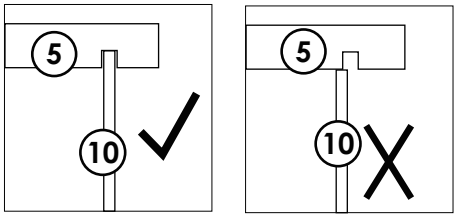


FLIP

18

The thin backplate must be fully installed intothe slot or it will prevent proper installation.

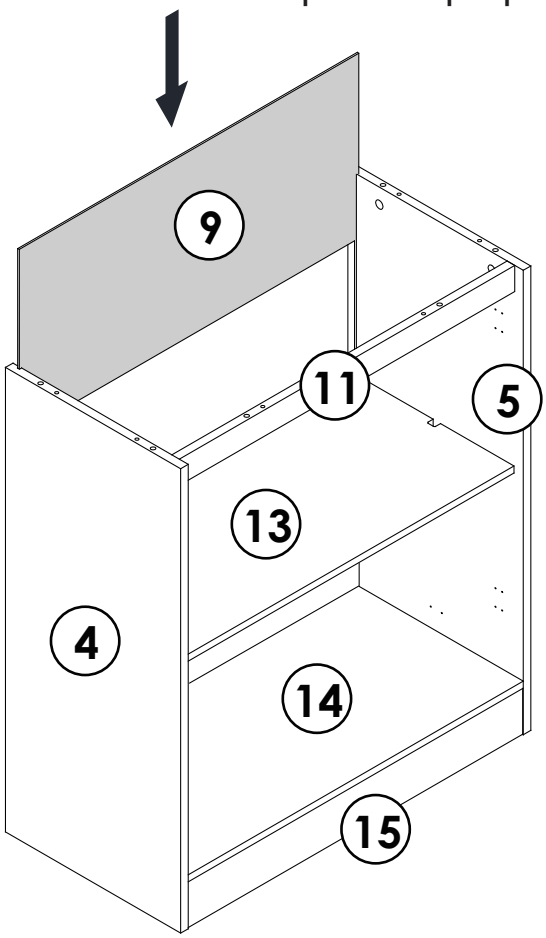


The 9th board needs to be fully inserted into the 12th board

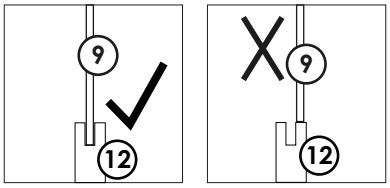



19

YOU WILL NEED	
C x6	B x6

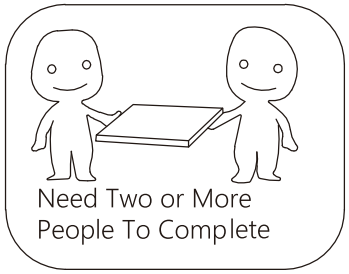


The thin backplate must be fully installed intothe slot or it will prevent proper installation.

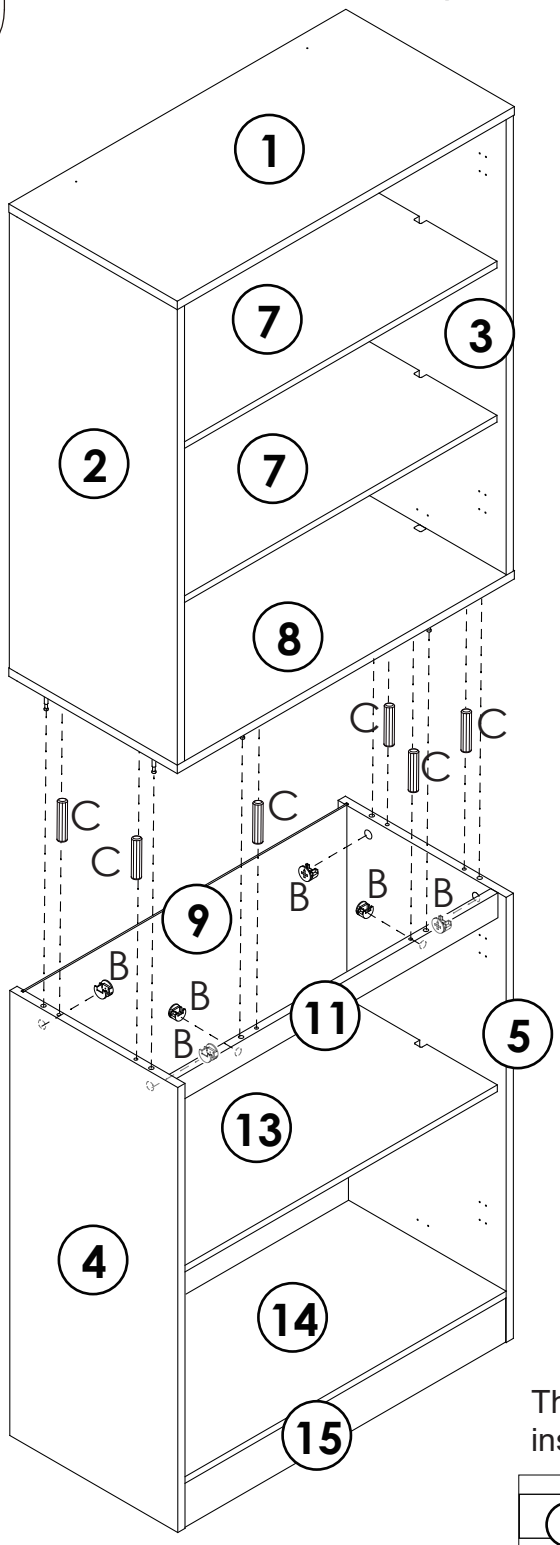

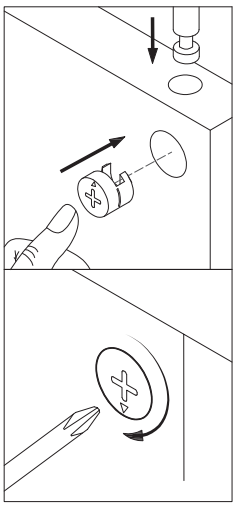


The 9th board needs to be fully inserted into the 8th board

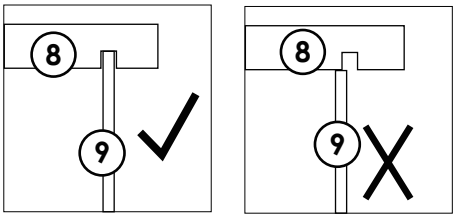


20

YOU WILL NEED	
L x1	

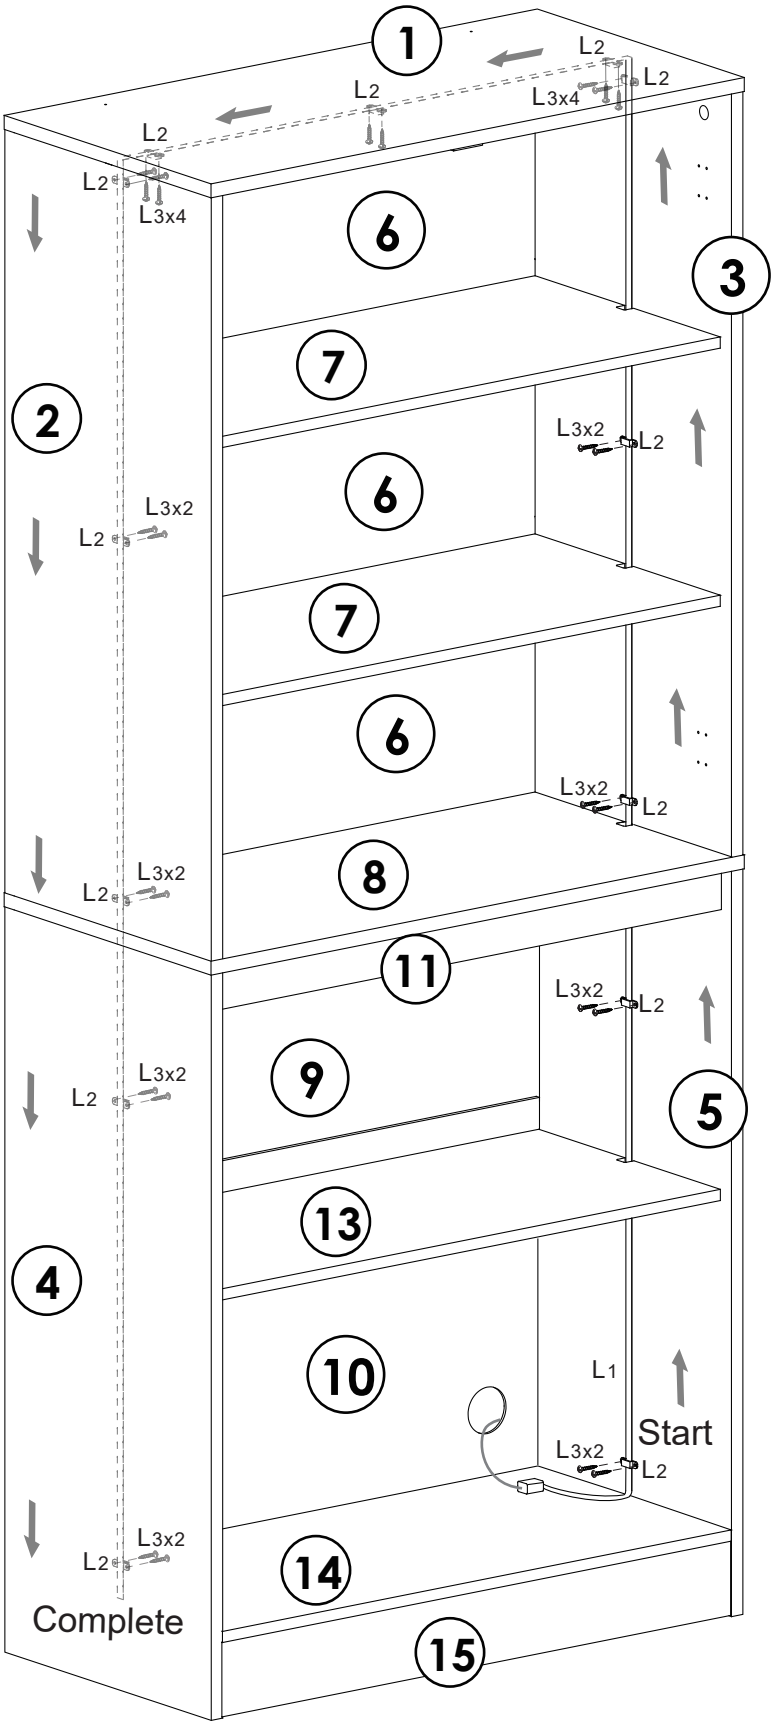


STEP 1

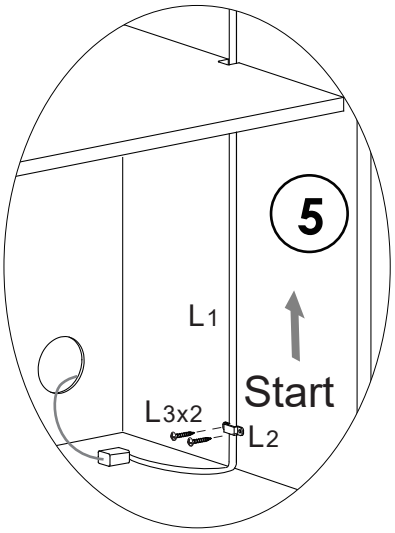


Pass the LED light strip through the pre-drilled holes in all layers following the direction indicated by the arrow in the diagram.

STEP 2

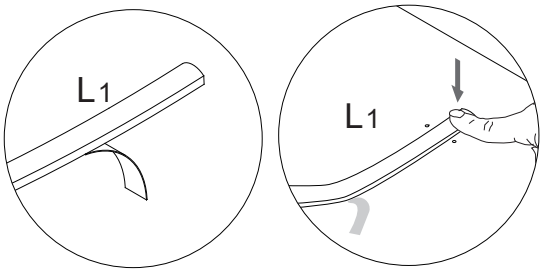


Gradually peel off the adhesive backing of the LED light strip and secure it in the middle of the pre-positioned nail holes on the side wall.

STEP 3

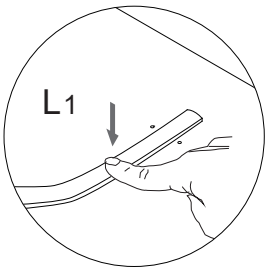

Use buckles to further secure the LED light strip.


STEP 4

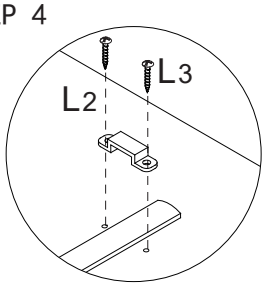


Install thirteen fixed buckles

21

YOU WILL NEED	
H x22	

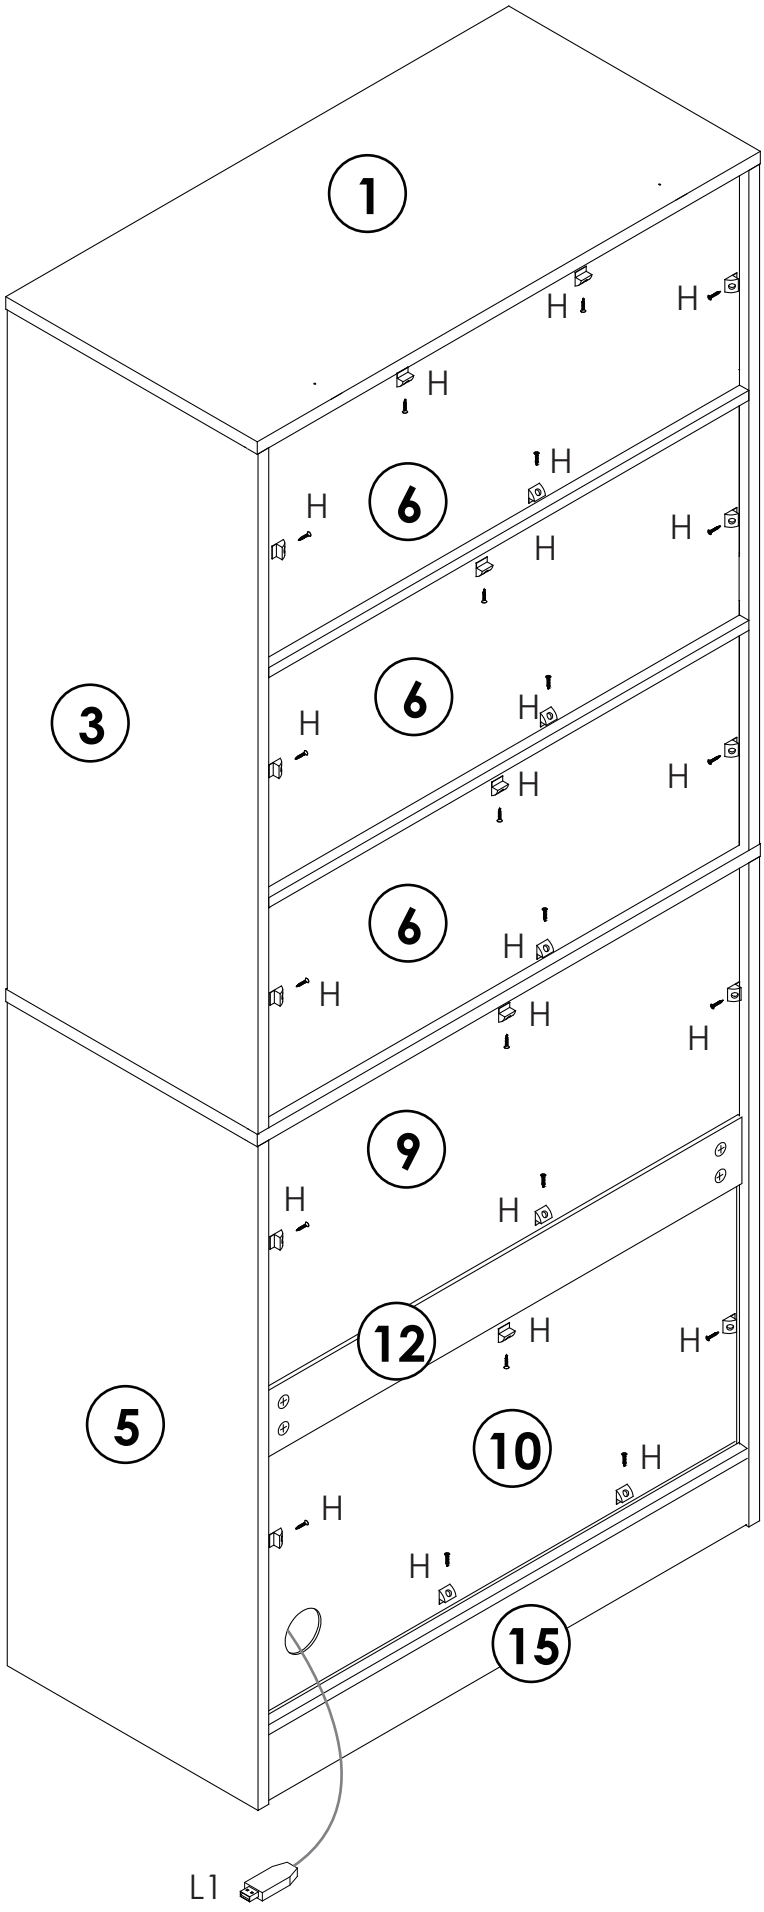

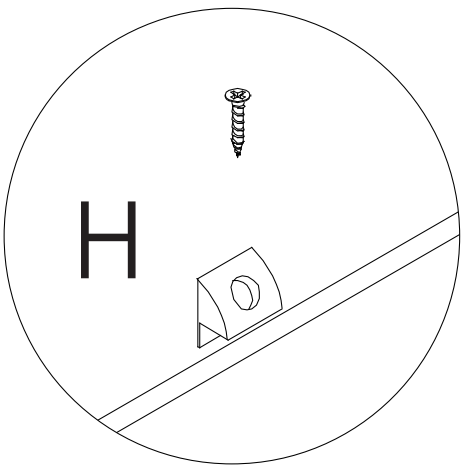


22

YOU WILL NEED			
J1 x2	J2 x2	J3 x2	D x2


⚠ DANGER

To prevent furniture from toppling attach, mount, boor otherwise secure to walls and floors.Do not place unstable furniture near where children plAn anchor kit suitable for plaster walls is included withthis item. If you require a different kit consult your nearhardware store.


Note: Toppling preventer must be installed otherwise there is a risk of tipping

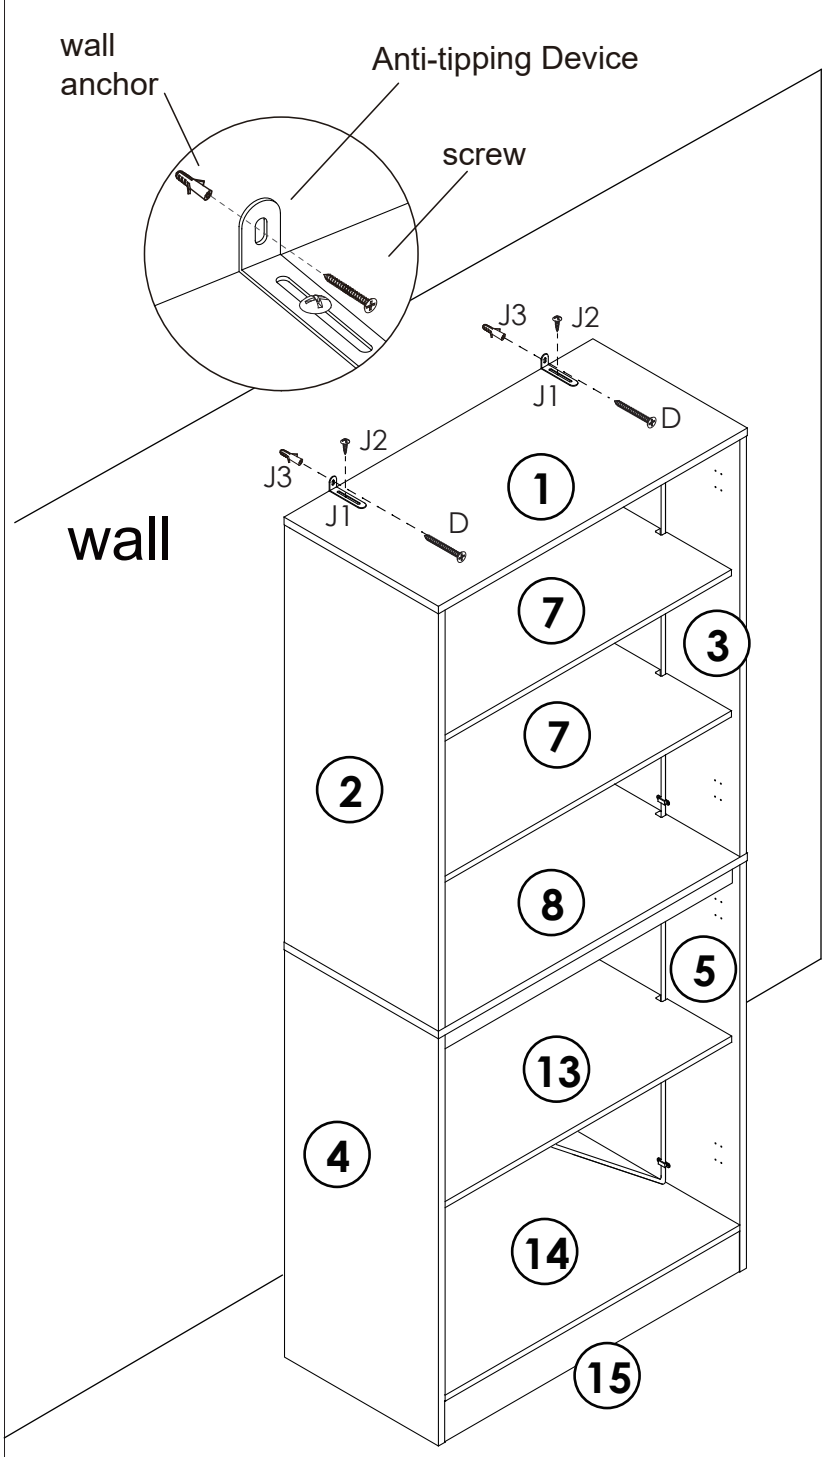


step1

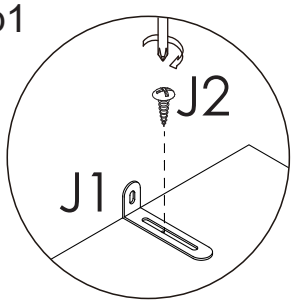


step2

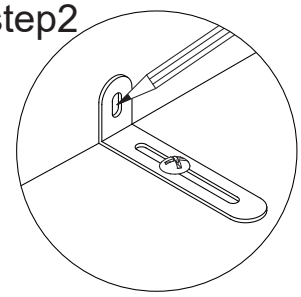


step3

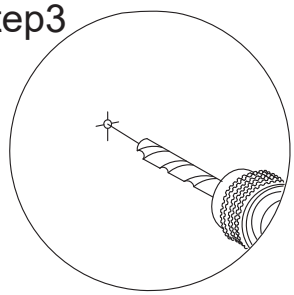

step4

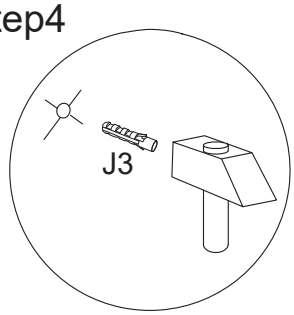


step5

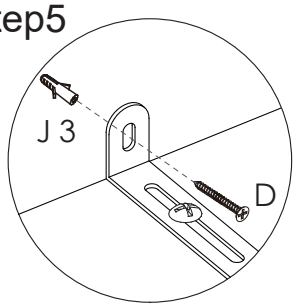

23


YOU WILL NEED		
G x4	E x8	F x2

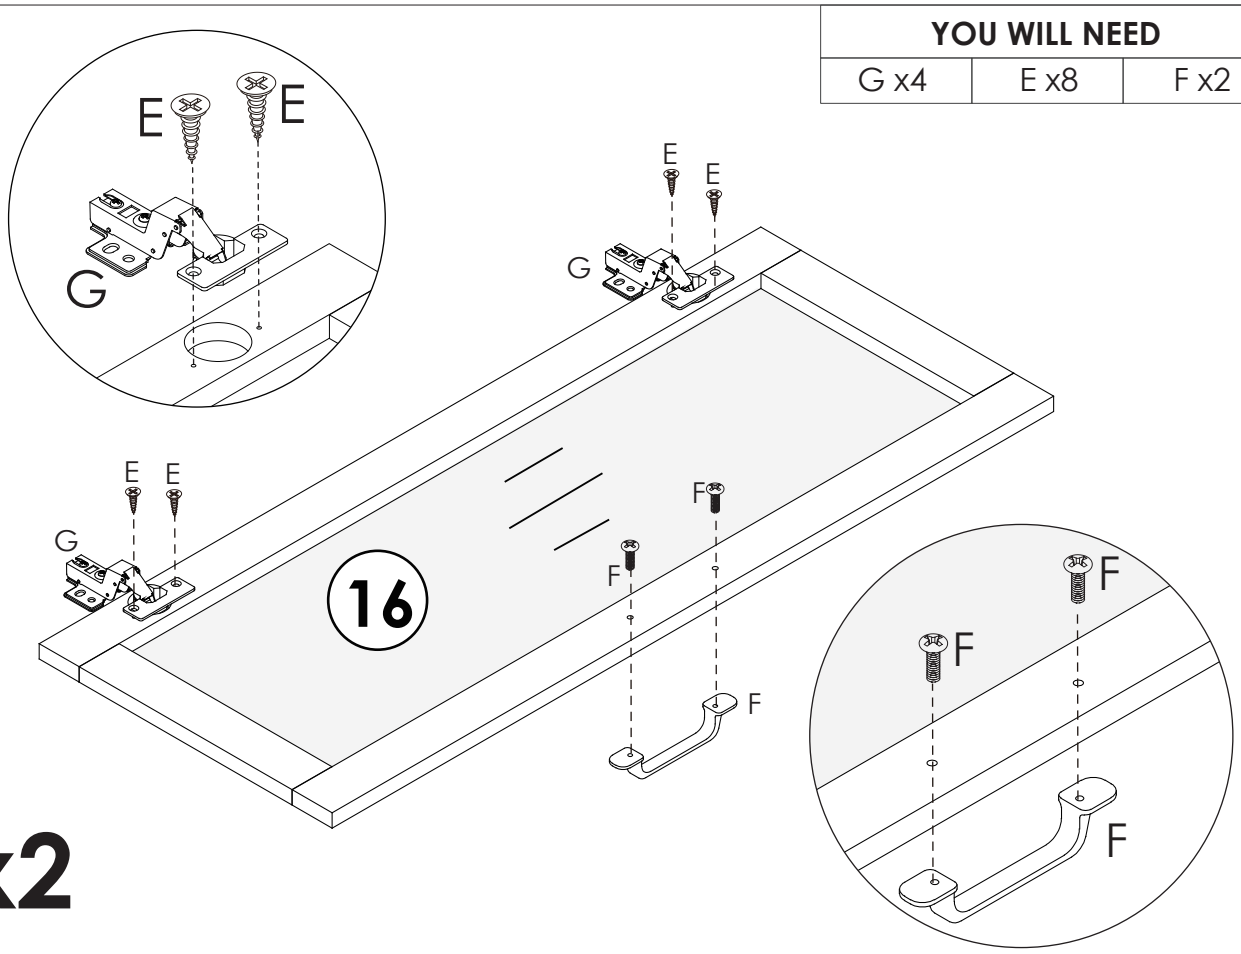

x2

24

YOU WILL NEED		
G x4	E x8	F x2

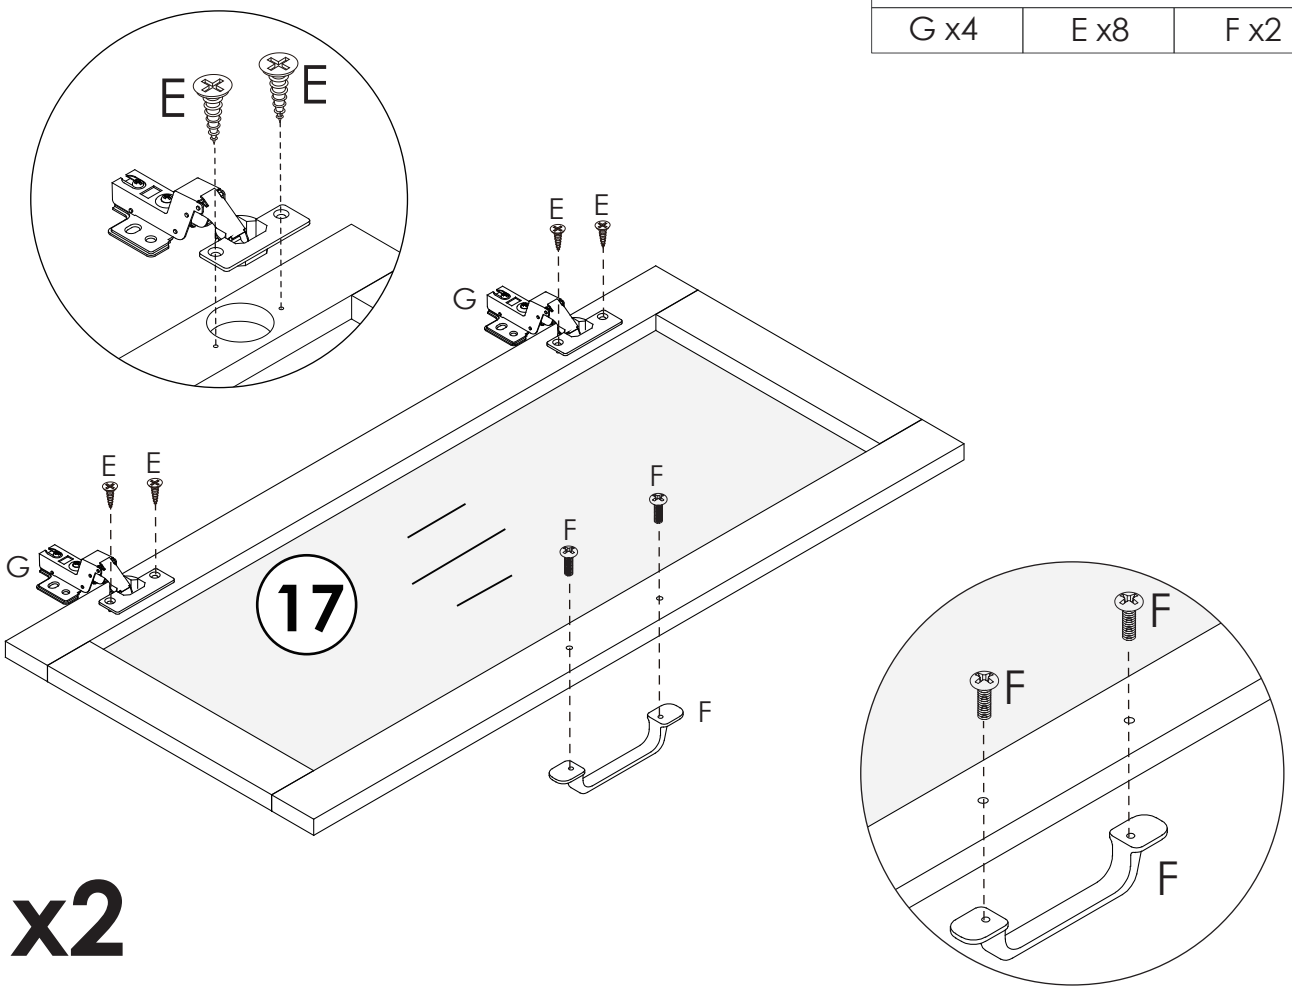


x2

25

YOU WILL NEED	
E x32	

Note: Install the screws in the oval holes first and adjust the door gap before tightening the round fixing screws.

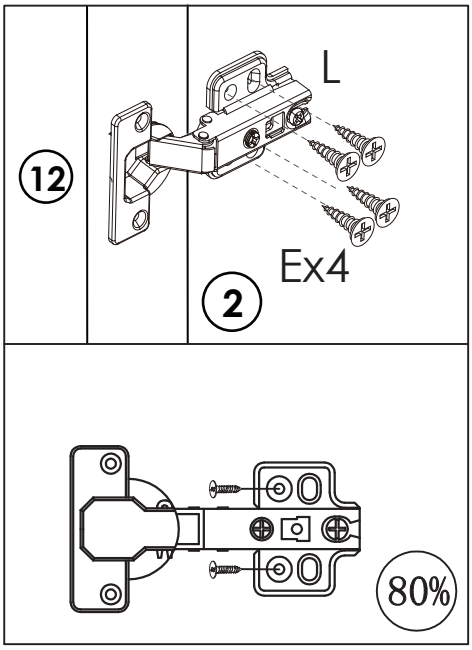


Step 1: Do not tighten the round fixing screws yet.


Step 2: Install and tighten the screws in the oval holes.


Step 3: If the door gap needs adjustment,align it now while the screws are still loose.

Step 4: Once the door is properly positioned, tighten all screws firmly.

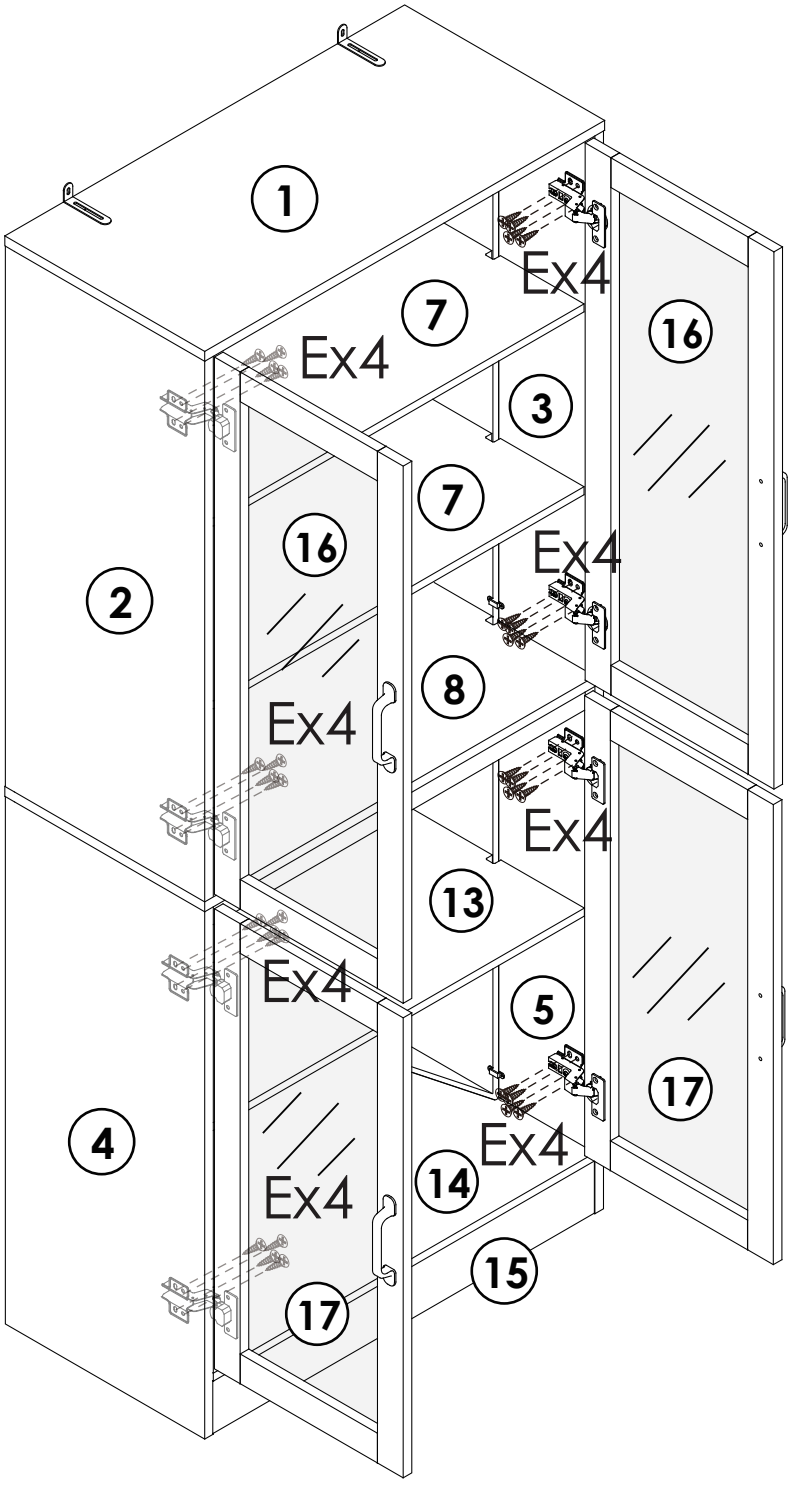



NOTE :If you notice that the cabinet doors are not properly aligned, such as significant gaps or vertical or horizontal misalignment, please adhere to the following adjustment instructions.

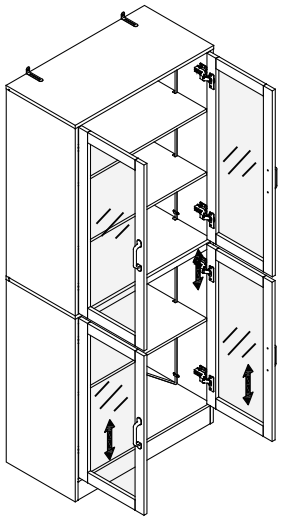

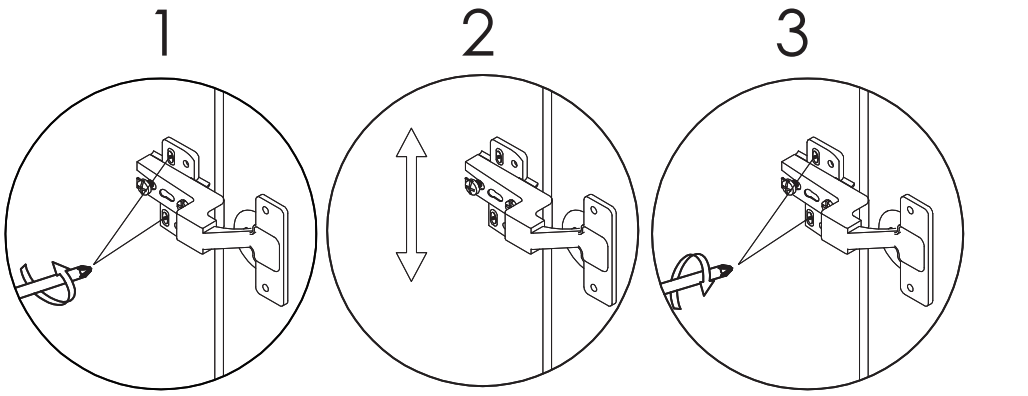



lose these 2 screws | move hinge up/down | tighten these 2 screws again

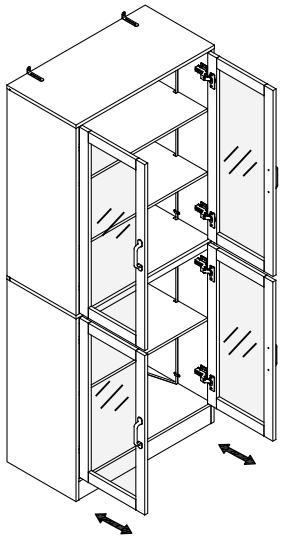

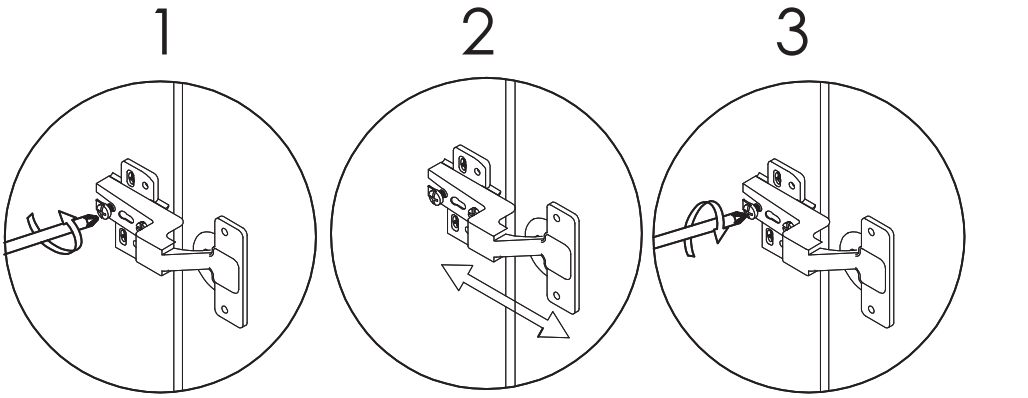

lose these screws | shift hinge in/out | tighten this screw again

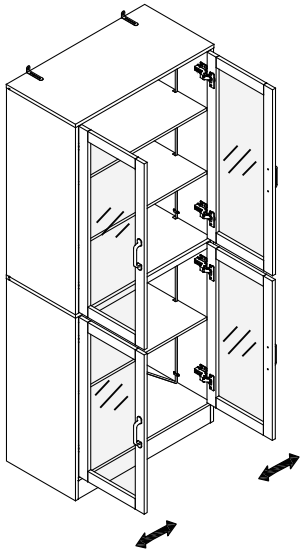

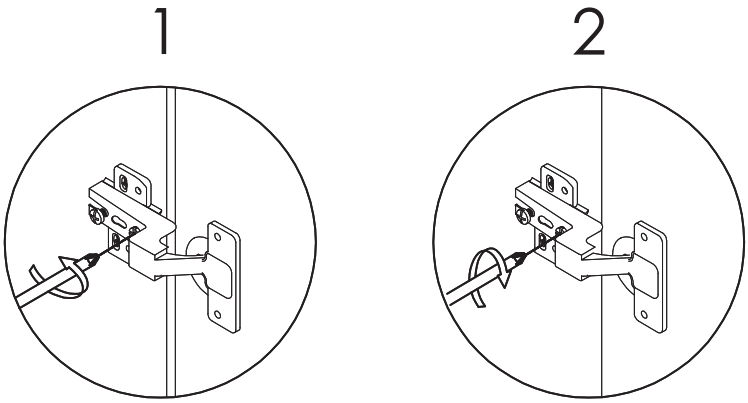


lose this screw would get hinge/door closer to side board


tighten this screw would get hinge/door away from side board

27

YOU WILL NEED	
L5 x1	M x2

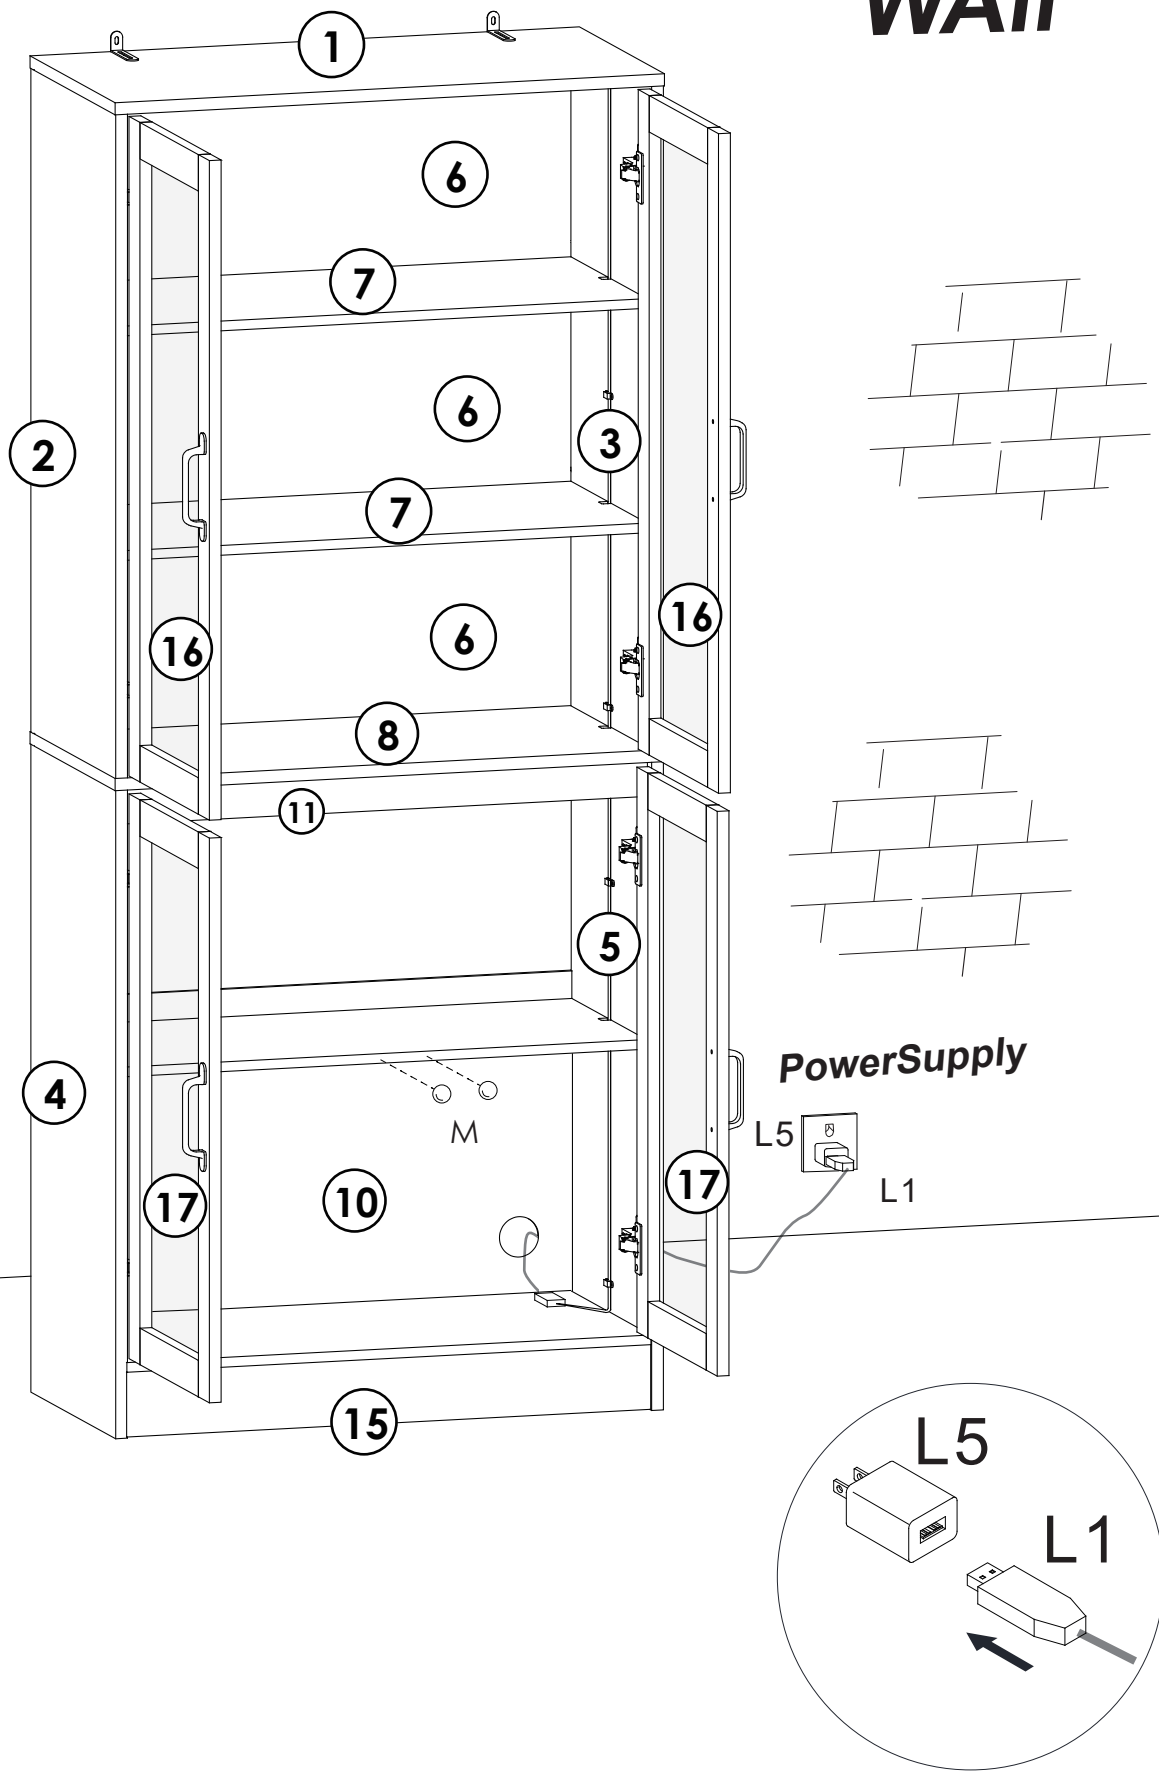

28

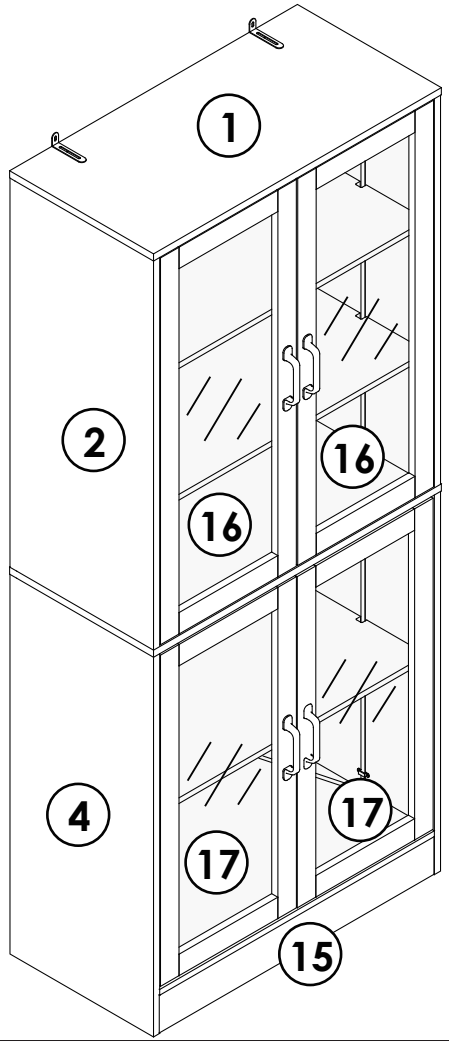

⚠ WARNING





Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

Made in China

