


Installation & Assembly

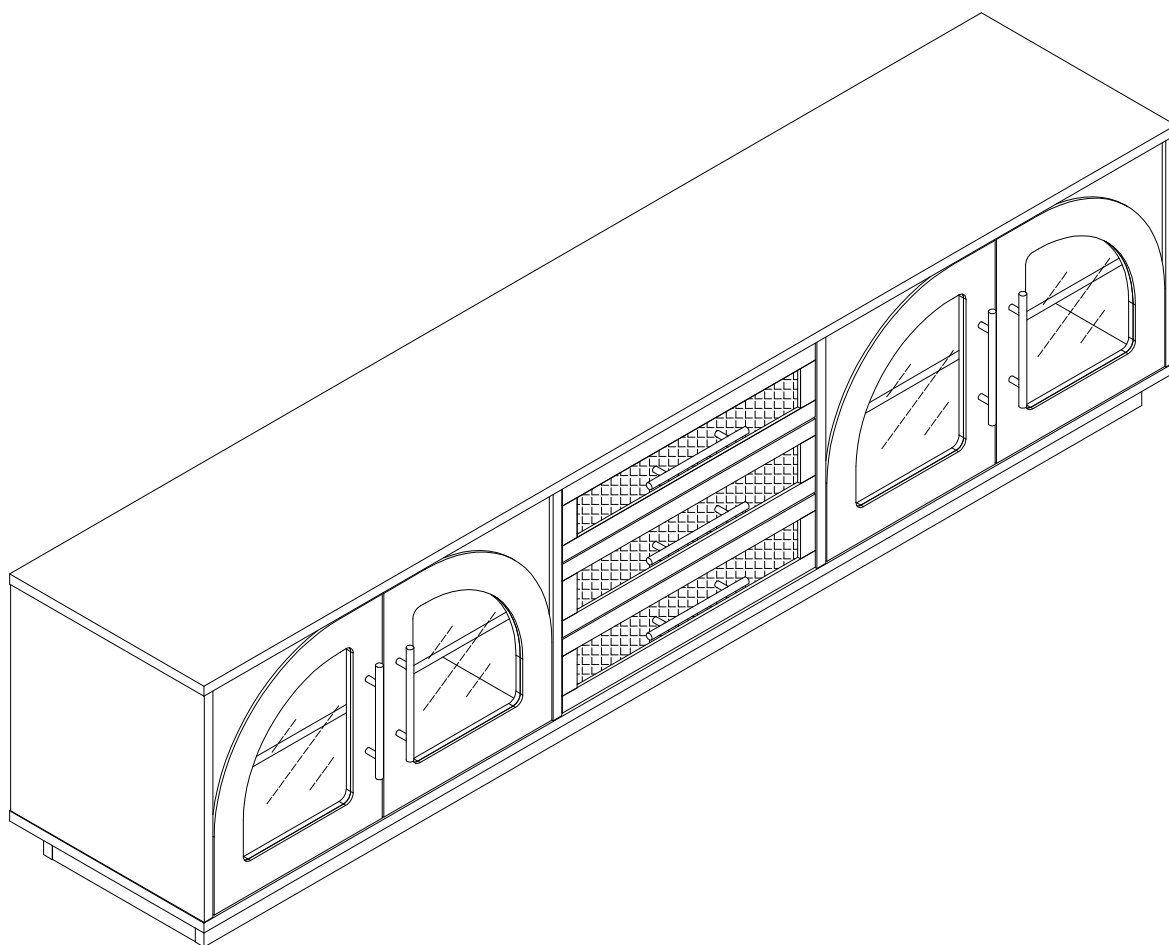

Tips: Do not throw away packing materials until assembly is complete for small parts may come loose inside the carton during shipment. If parts are missing, please contact us. Assemble this item on a soft surface, such as carpet to protect the finish.

Before You Start

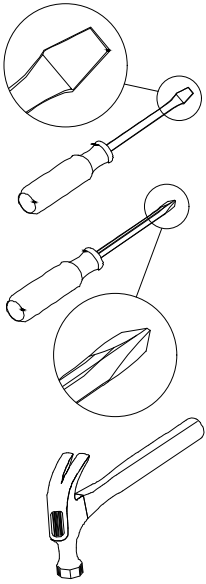

Read through each step carefully and follow the proper order

Separate and count all your parts and hardware

Give yourself enough room for the assembly process

Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer


Caution: If using a power drill or power screwdriver for screwing, please be aware of to slow down and stop when screw is tight. Failure to do so may result in stripping the screw. Assembly speed can be increased by using electric screwdriver

Helpful Hints















PEOPLE NEEDED FOR ASSEMBLY: 1-2

- Open your item in the area you plan to keep it to avoid excessive heavy lifting.
- Identify, sort and count the parts before attempting assembly.
- Compression dowels are lightly tapped in with a hammer.
- Slides are labeled with an R (right) and L (left) for proper placement.
- Make sure to always face the point on the top of the Cam Lock towards the outer edge.
- If there is a back panel in the package, please install it to make sure your unit is complete and sturdy.
- Please fix all the screws provided for the back panel which can enhance product stability. If it is difficult to fix it when tightening, it can be fixed with the help of a hammer and then tightened.
- Do NOT use harsh chemicals or abrasive cleaners on this item.
- Never push, pull, or drag your furniture.

PARTS LIST

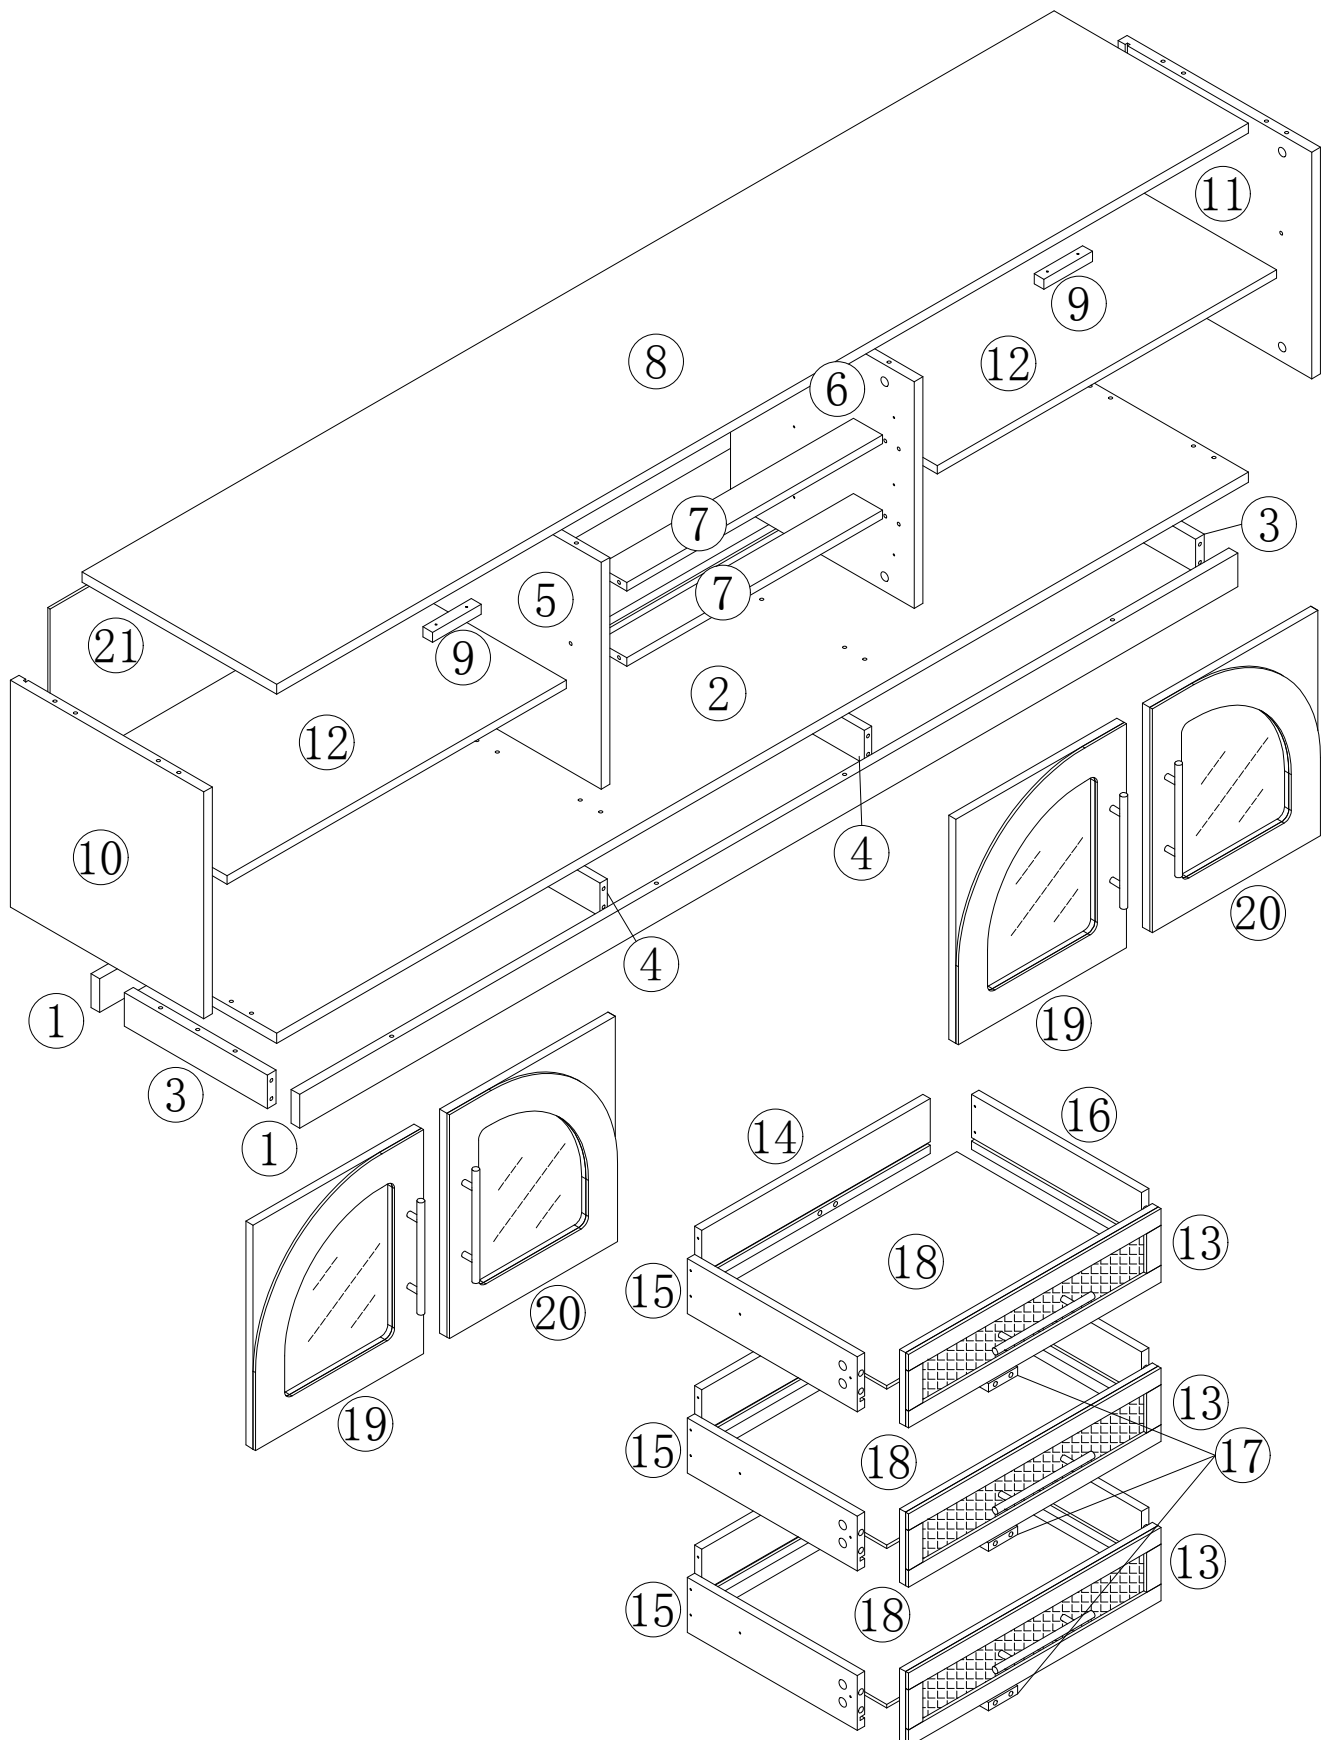


PARTS LIST

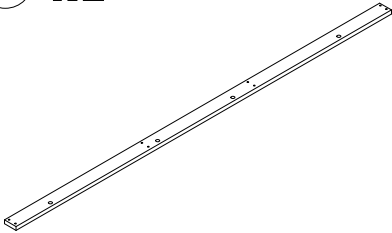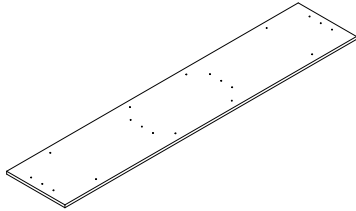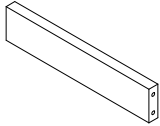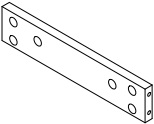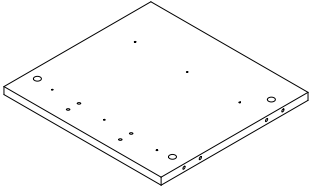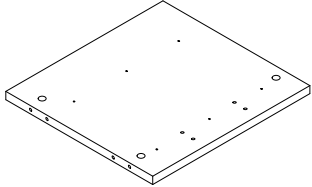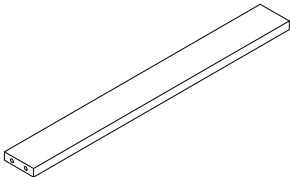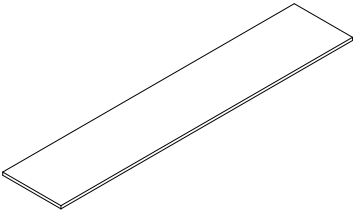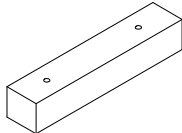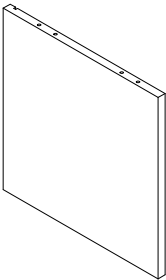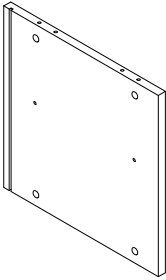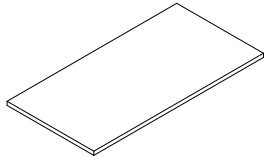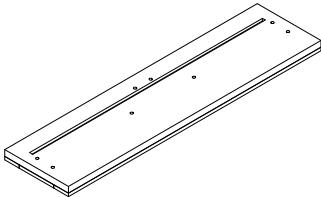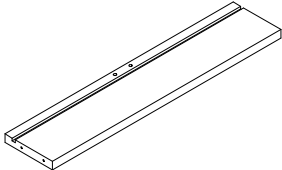① x2  2-1	② x1  2-1	③ x2  2-1
④ x2  2-1	⑤ x1  2-1	⑥ x1  2-1
⑦ x2  2-2	⑧ x1  2-1	⑨ x2  2-2
⑩ x1  2-1	⑪ x1  2-1	⑫ x2  2-2
⑬ x3  2-2	⑭ x3  2-2	⑮ x3  2-2

PARTS LIST		
------------	--	--

①⑥ x3




2-2

①⑦ x3




2-1

①⑧ x3

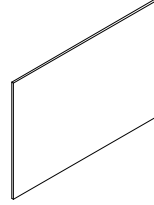


2-2

①⑨ x2

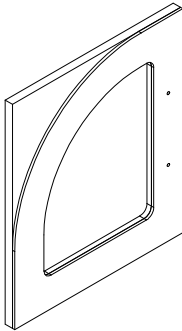


2-2

②⑦ x2

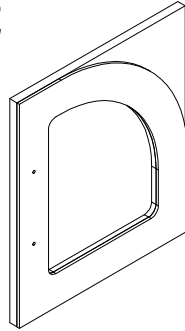













2-2

②① x1






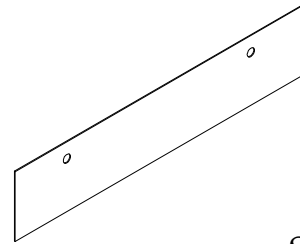


2-1

PARTS LIST

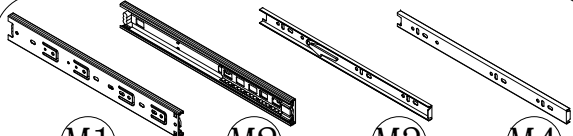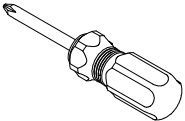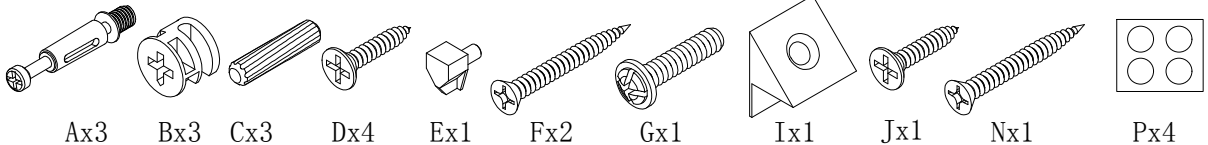
 $\Phi 6*40\text{mm}$ (A) x80	 $\Phi 15*12\text{mm}$ (B) x80	 $\Phi 8*40\text{mm}$ (C) x20	 $\Phi 3.5*14\text{mm}$ (D) x84
 (E) x8	 $\Phi 3.5*40\text{mm}$ (F) x12	 $\Phi 4*20\text{mm}$ (G) x14	 (H) x7
 (I) x10	 $\Phi 3.5*12\text{mm}$ (J) x10	 (K) x8	 (L) x2
 (M) x3	 $\Phi 3.5*30\text{mm}$ (N) x4	 (O) x1	
 (P) x30			
 Ax3 Bx3 Cx3 Dx4 Ex1 Fx2 Gx1 Ix1 Jx1 Nx1 Px4 Backup Pack x1			

PARTS LIST

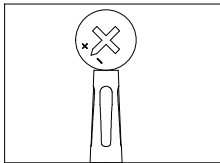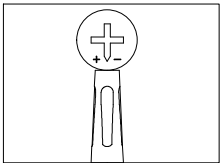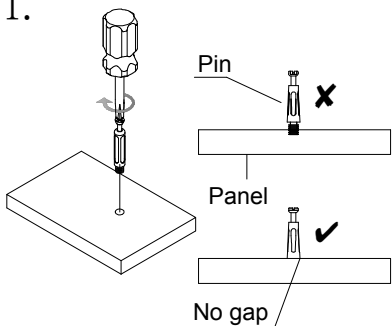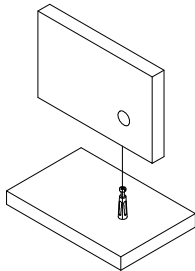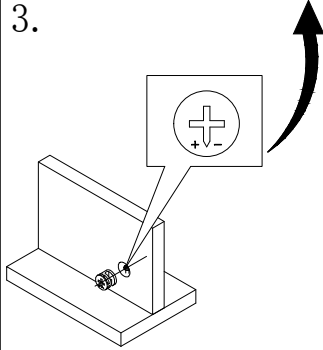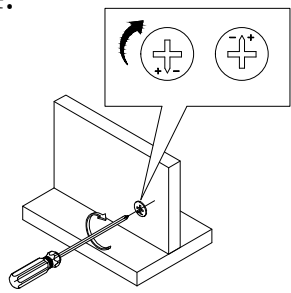
 Bolt	 X	 ✓	
 Connecting piece	Adjust connecting piece direction until it is properly lined up with the hole.	Insert bolt when connecting piece direction is properly lined up.	
1. 	2. 	3. 	4. 

PARTS LIST

left

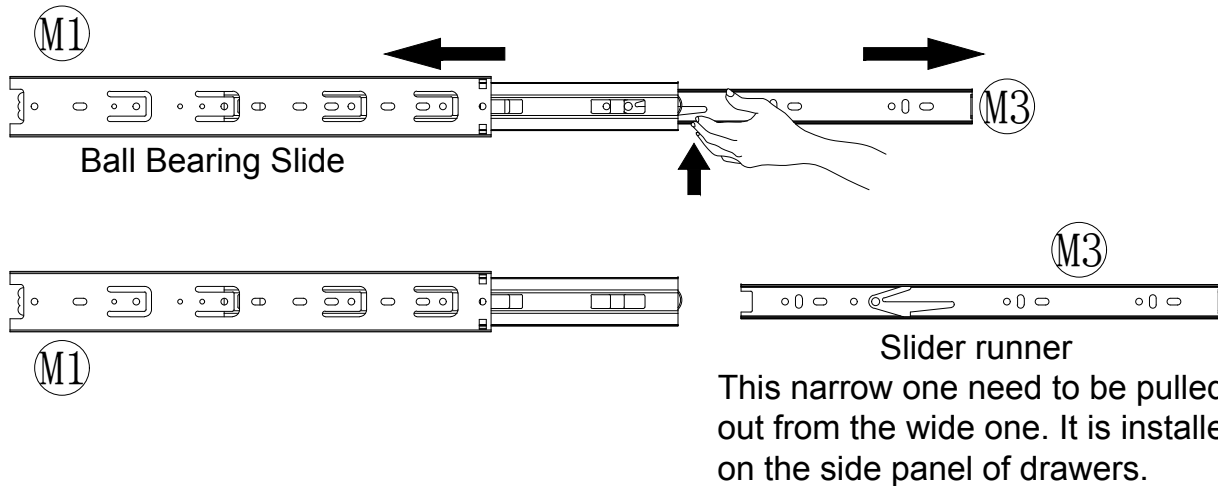

right

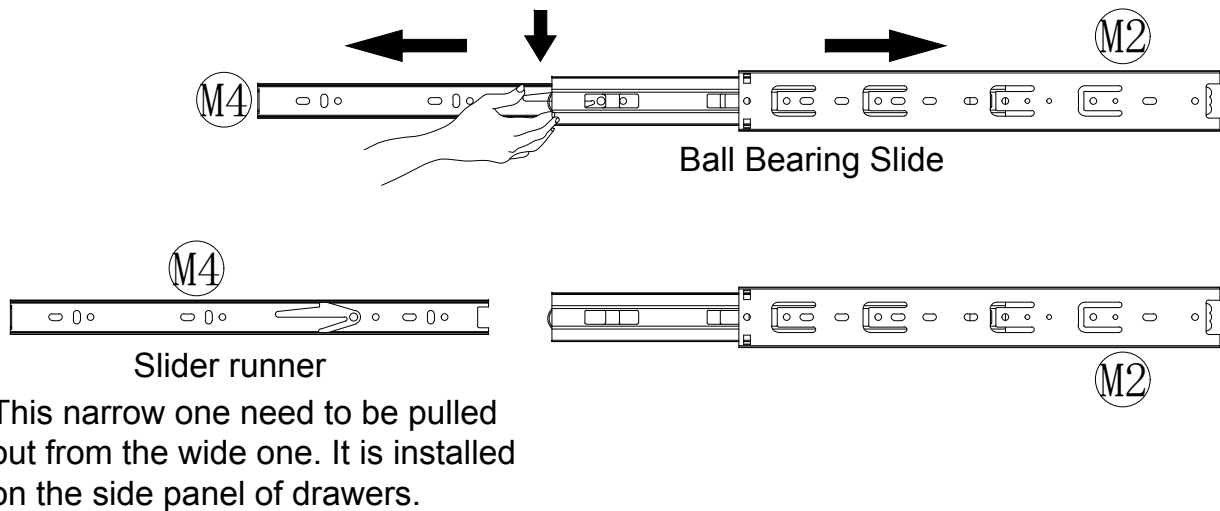


1. One set of guide rail should be four parts.
2. Two wide guide rails are installed on the side panel of the cabinet.
3. Two narrow guide rails are installed on the side panel of drawers.



Attention:

Take care when installing the slide rails as they have been pre-lubricated


Step 1

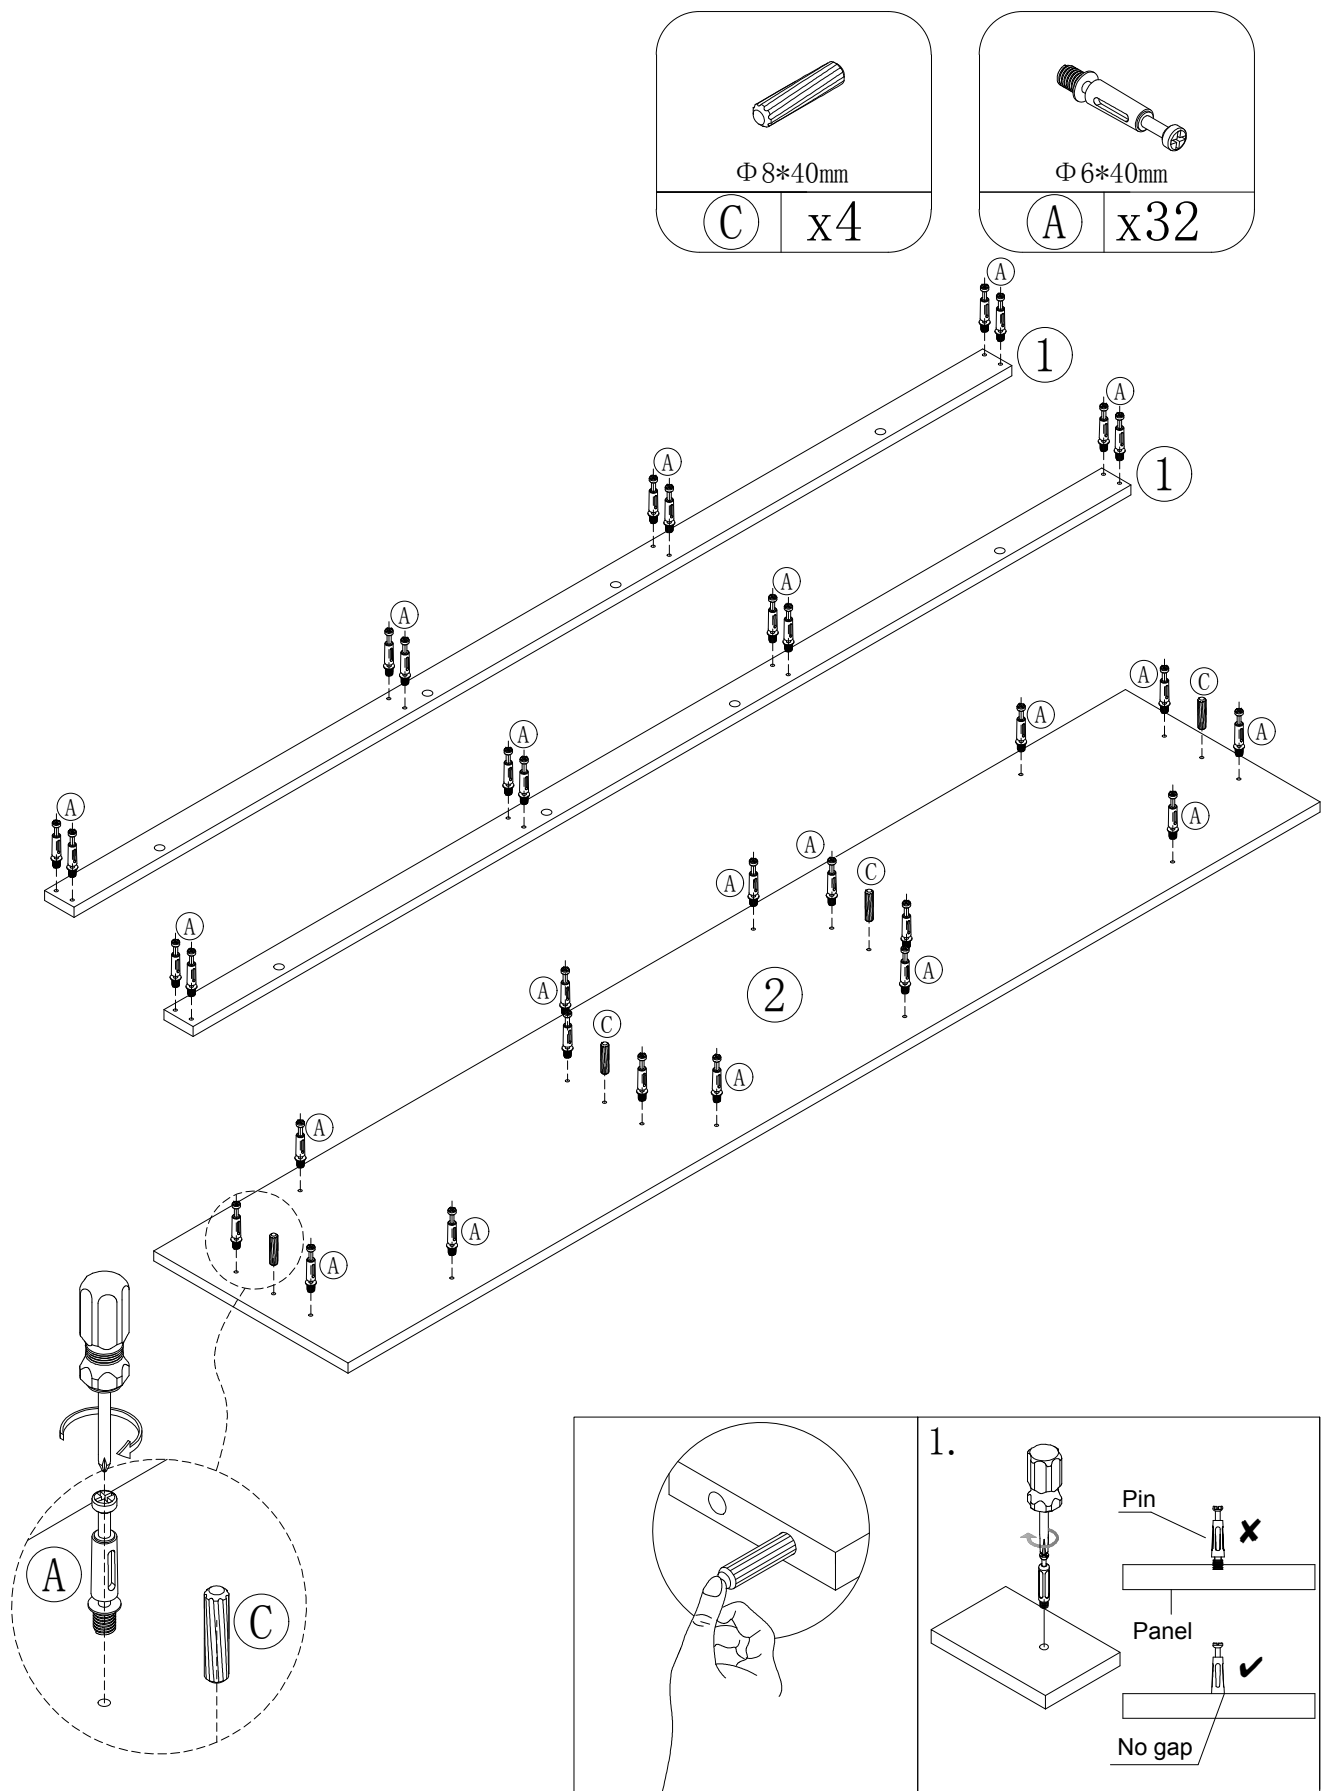





Step 2

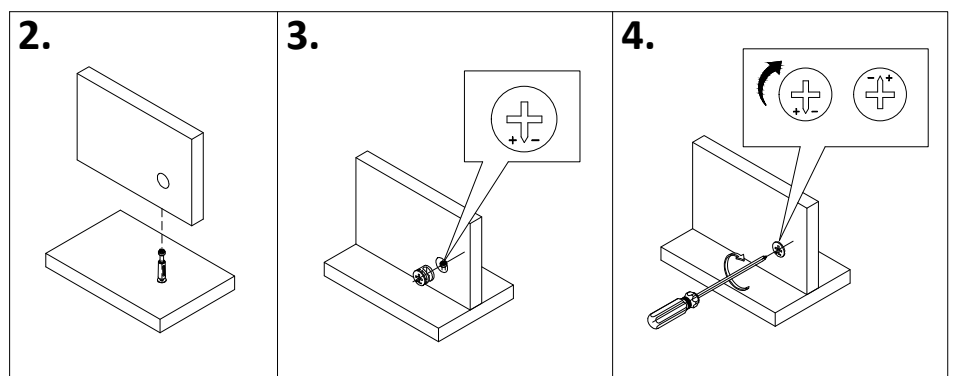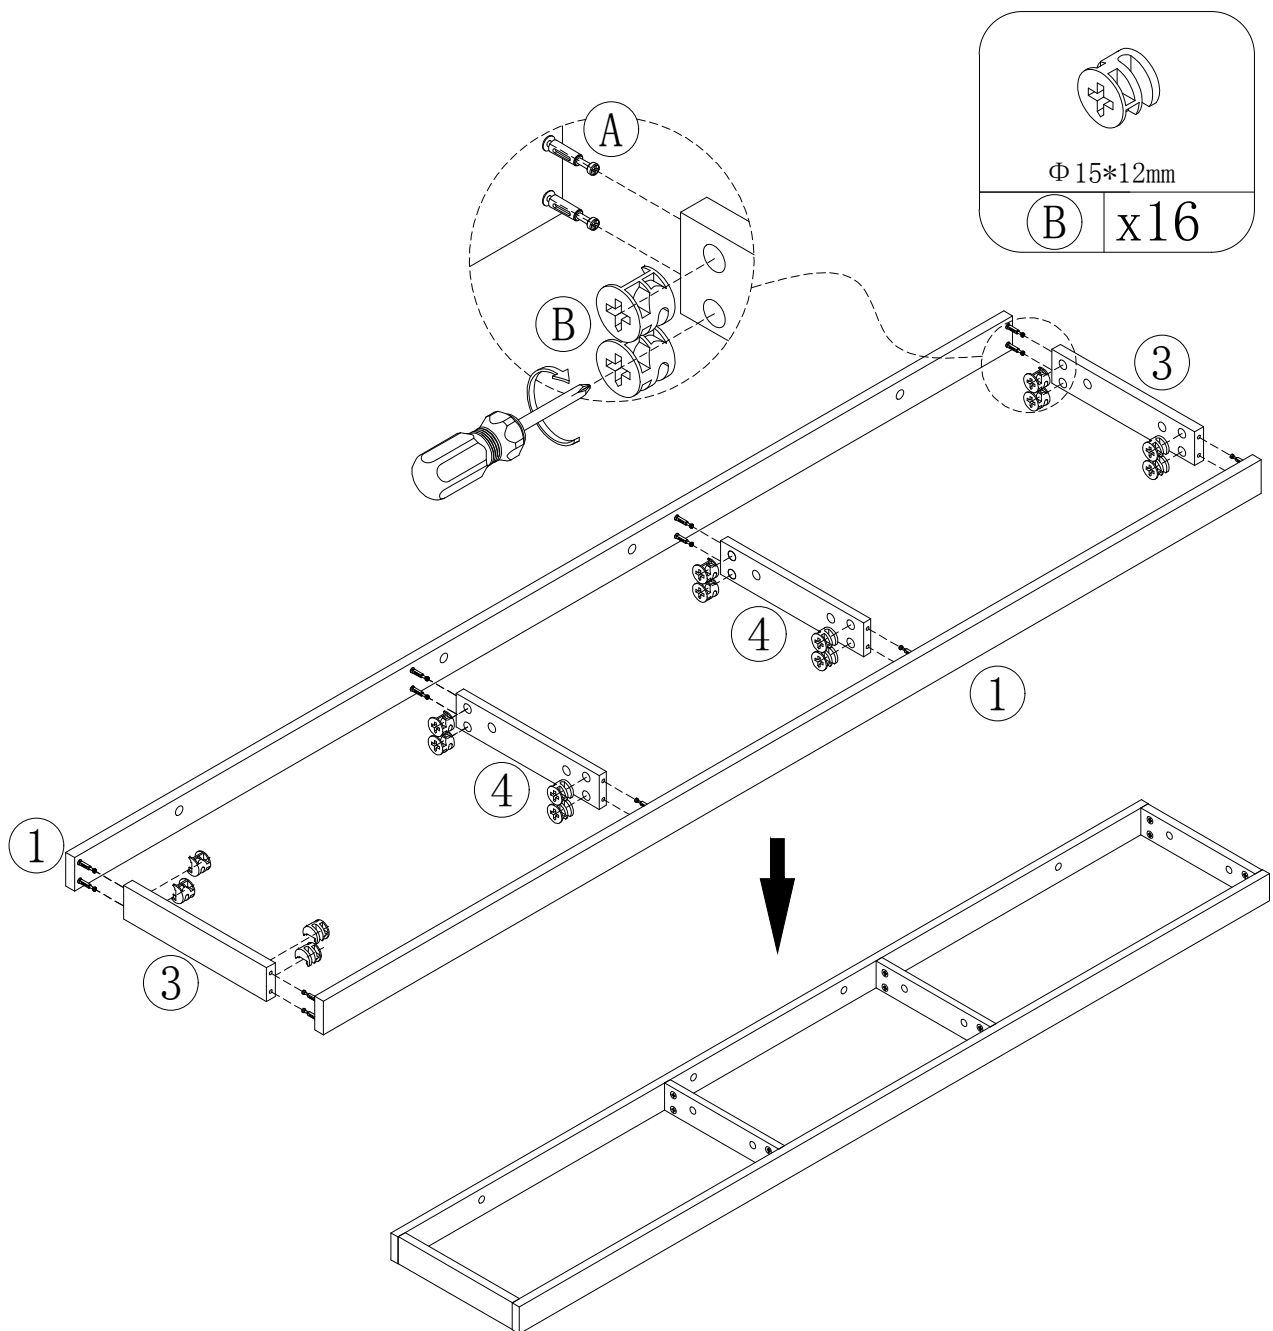

Step 3

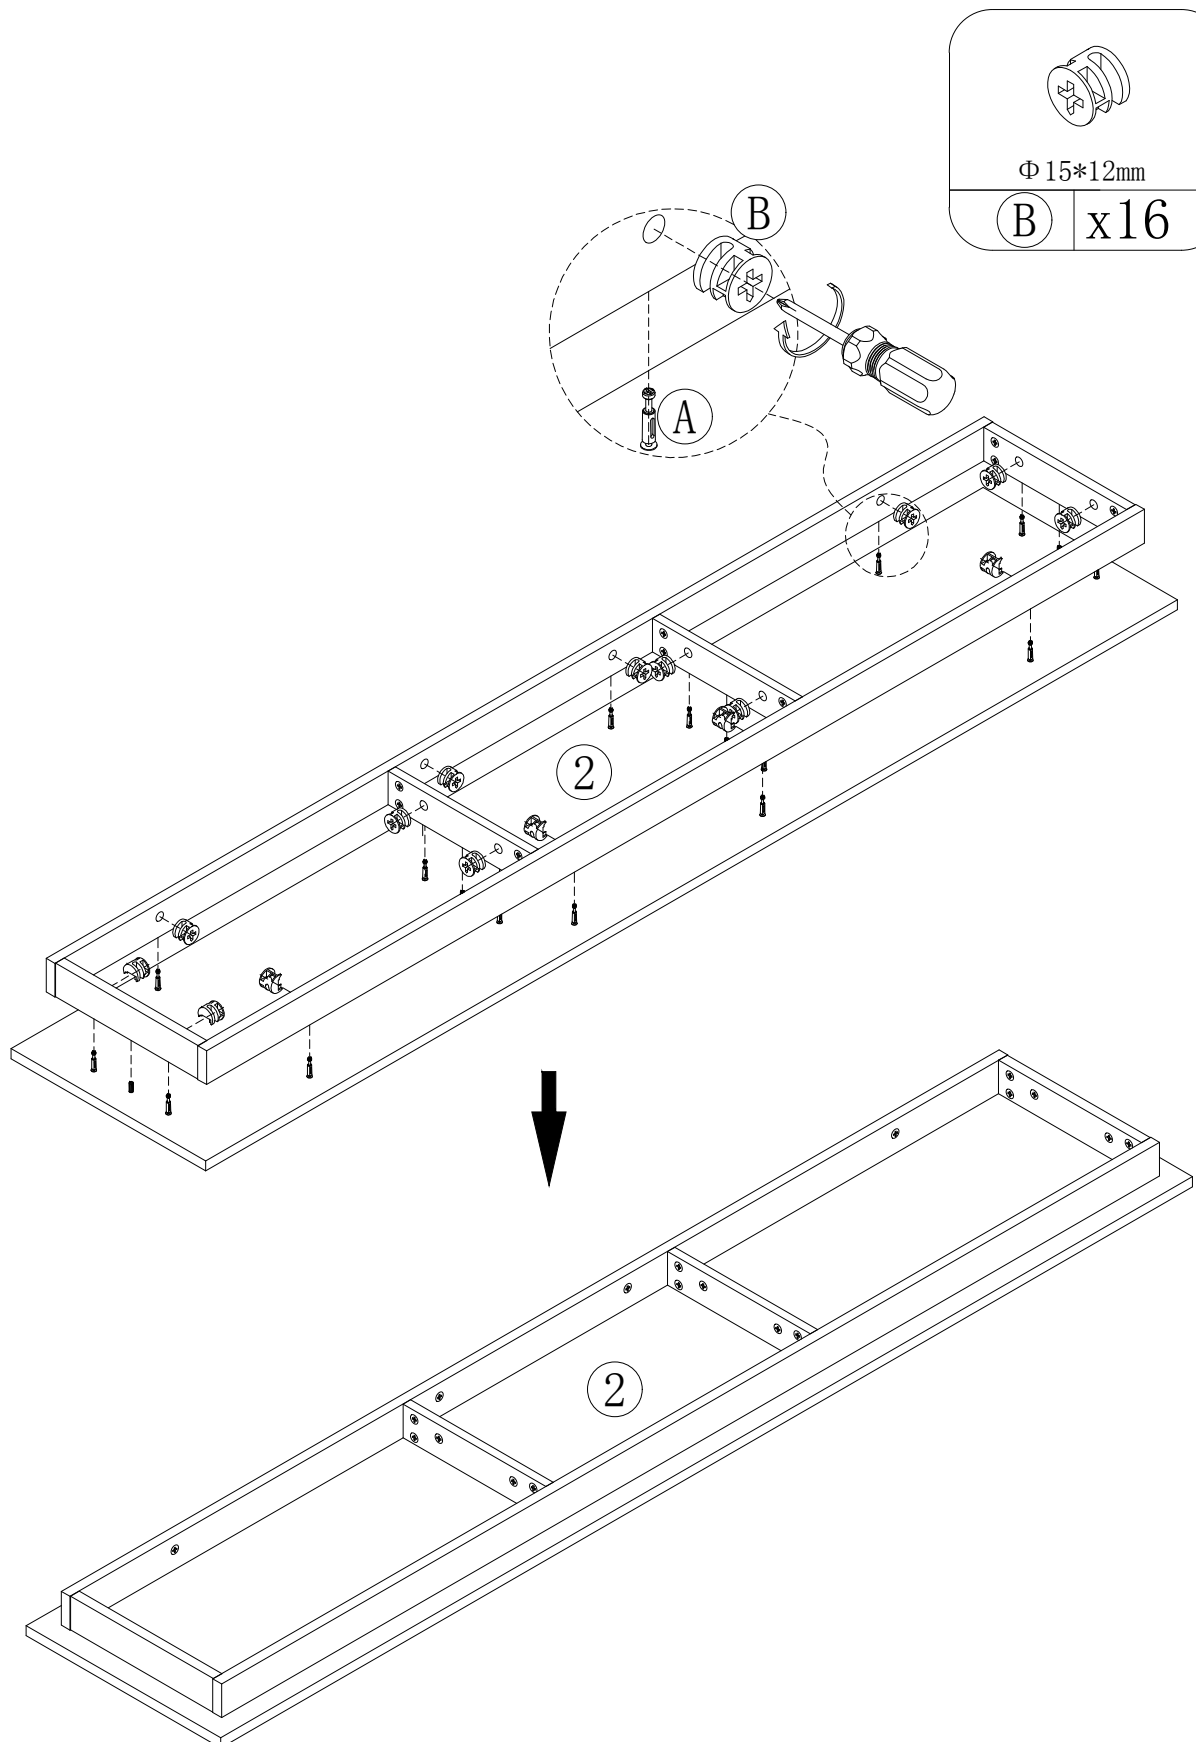


Step 4

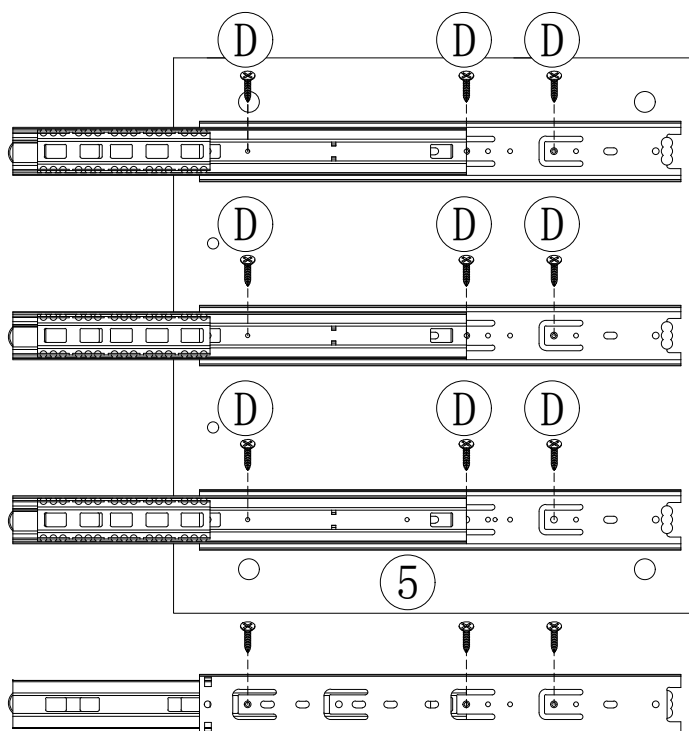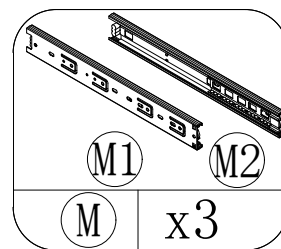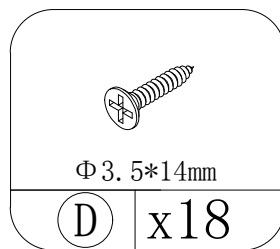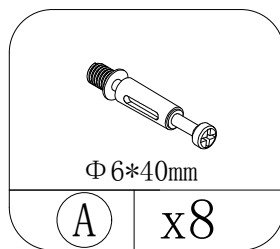



Front

(M1)


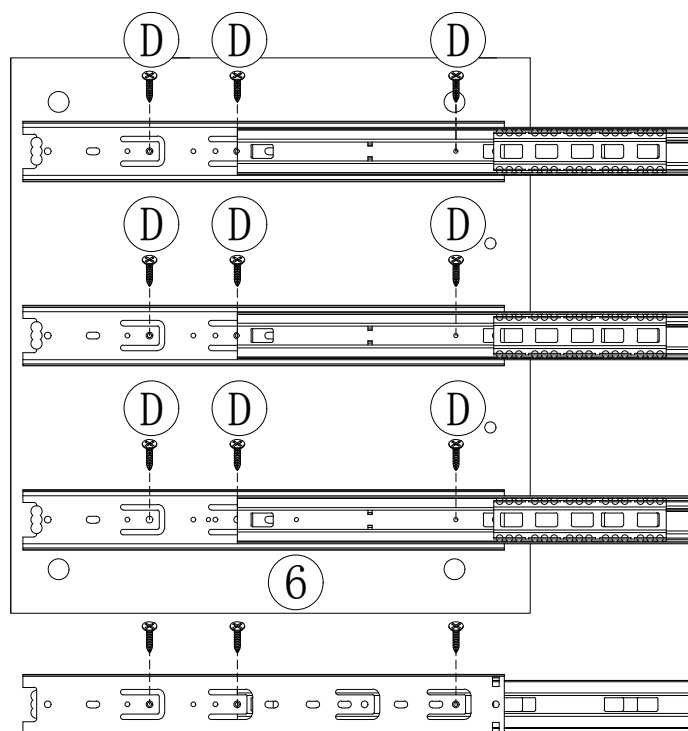


(M2)


Front

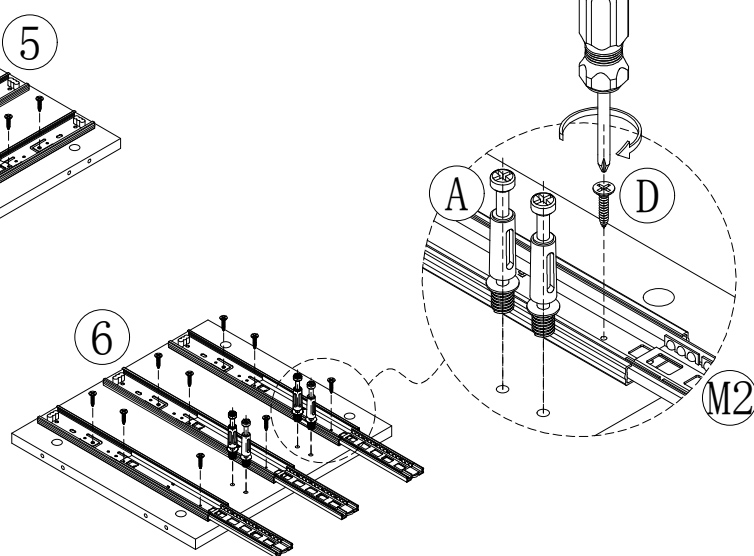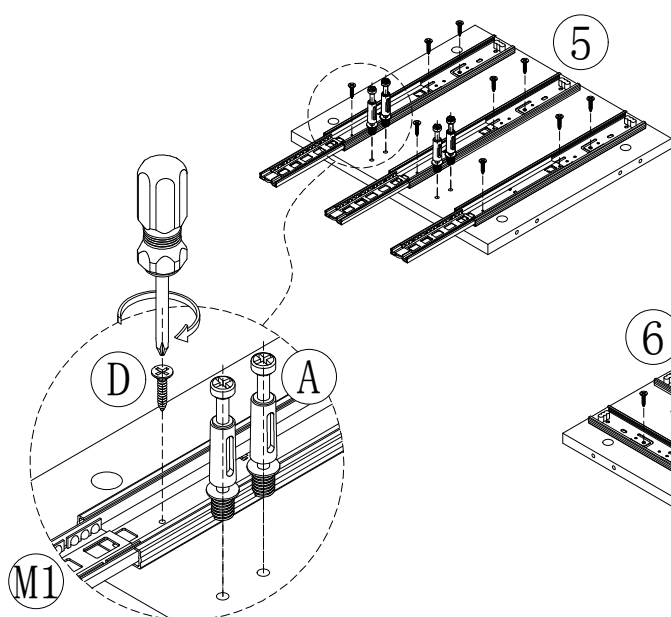


Step 5

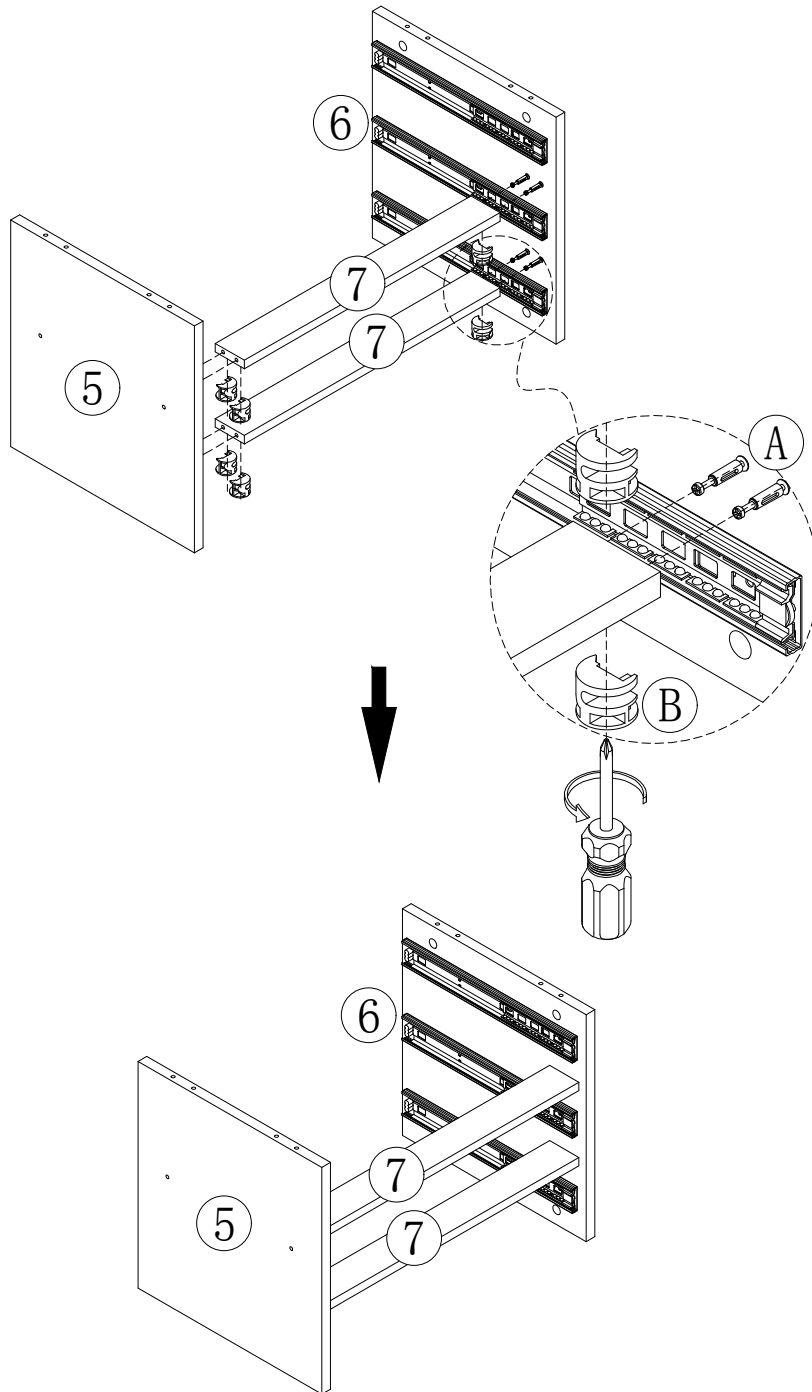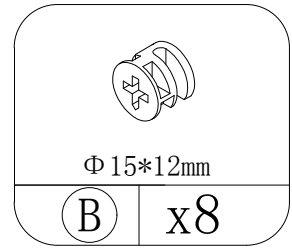


Step 6

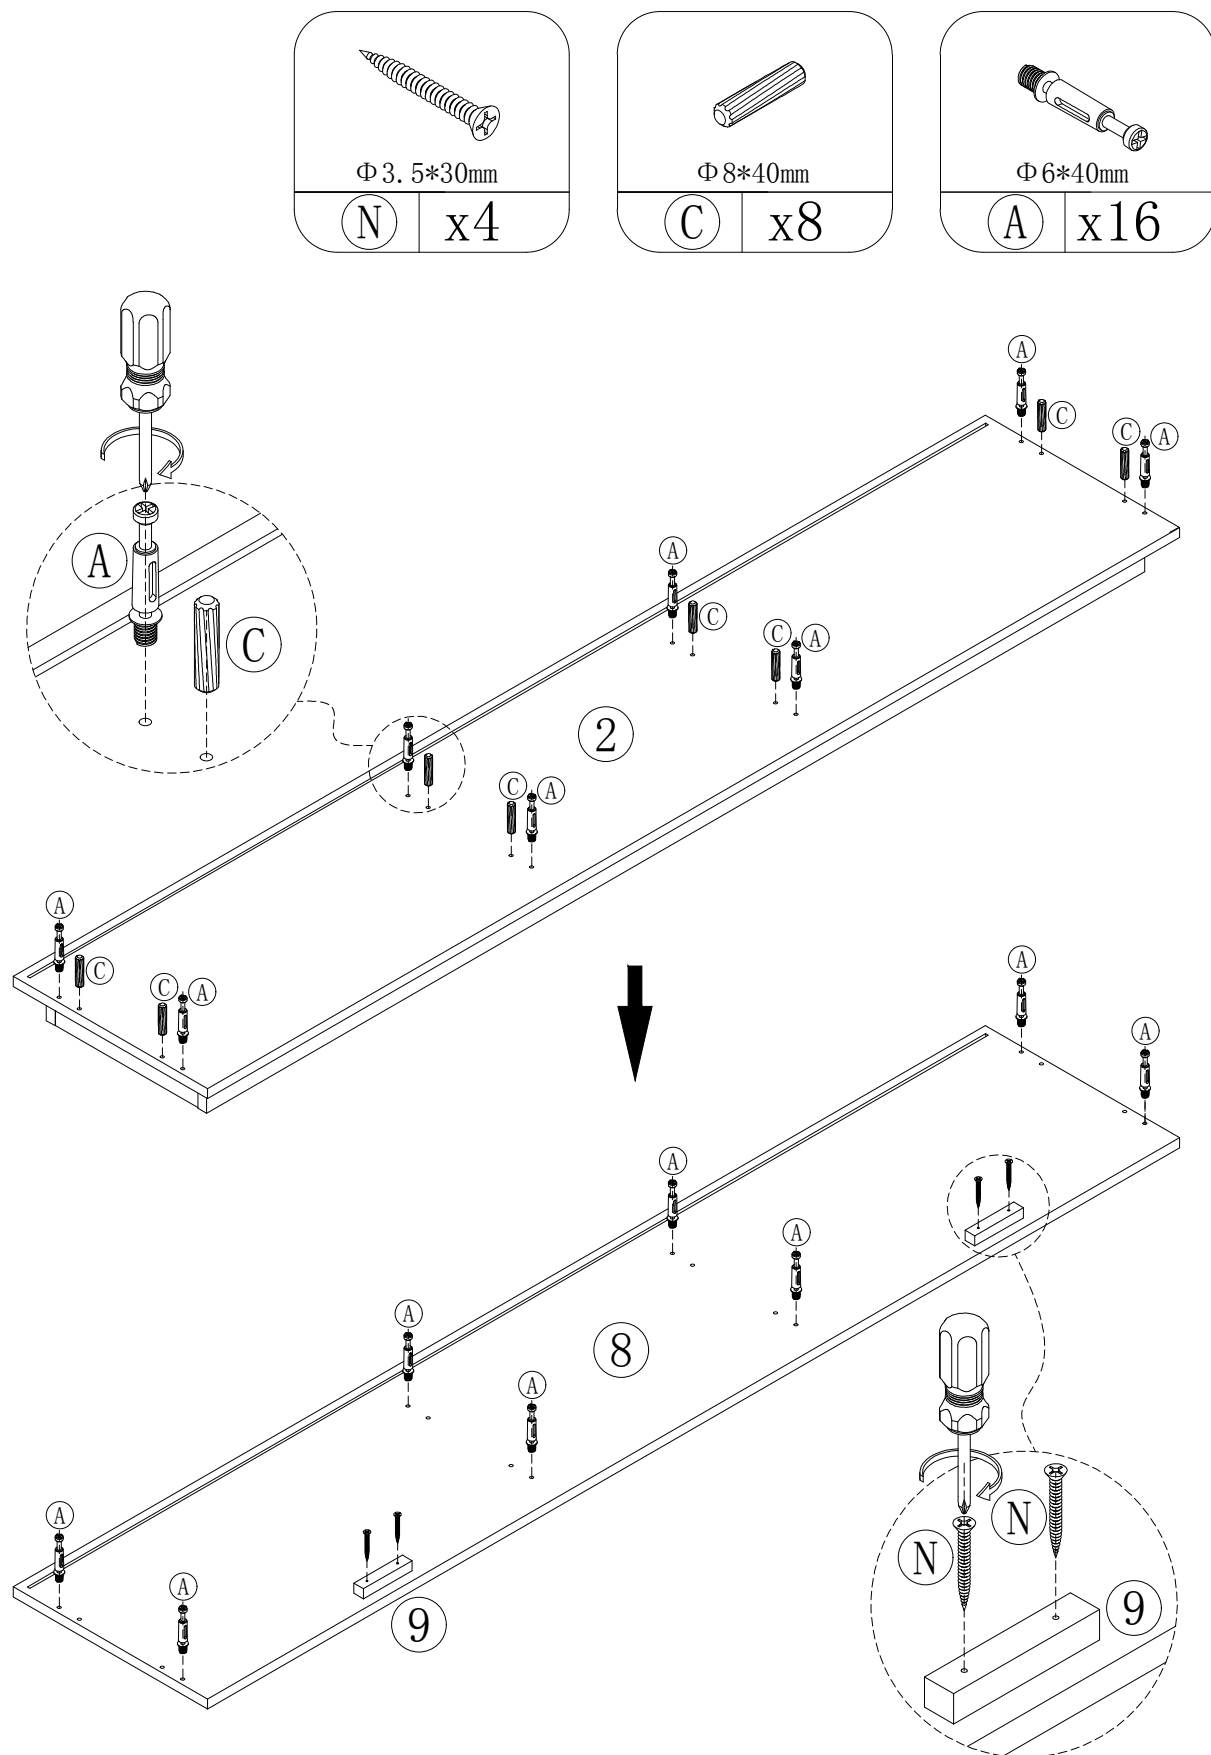

Step 7


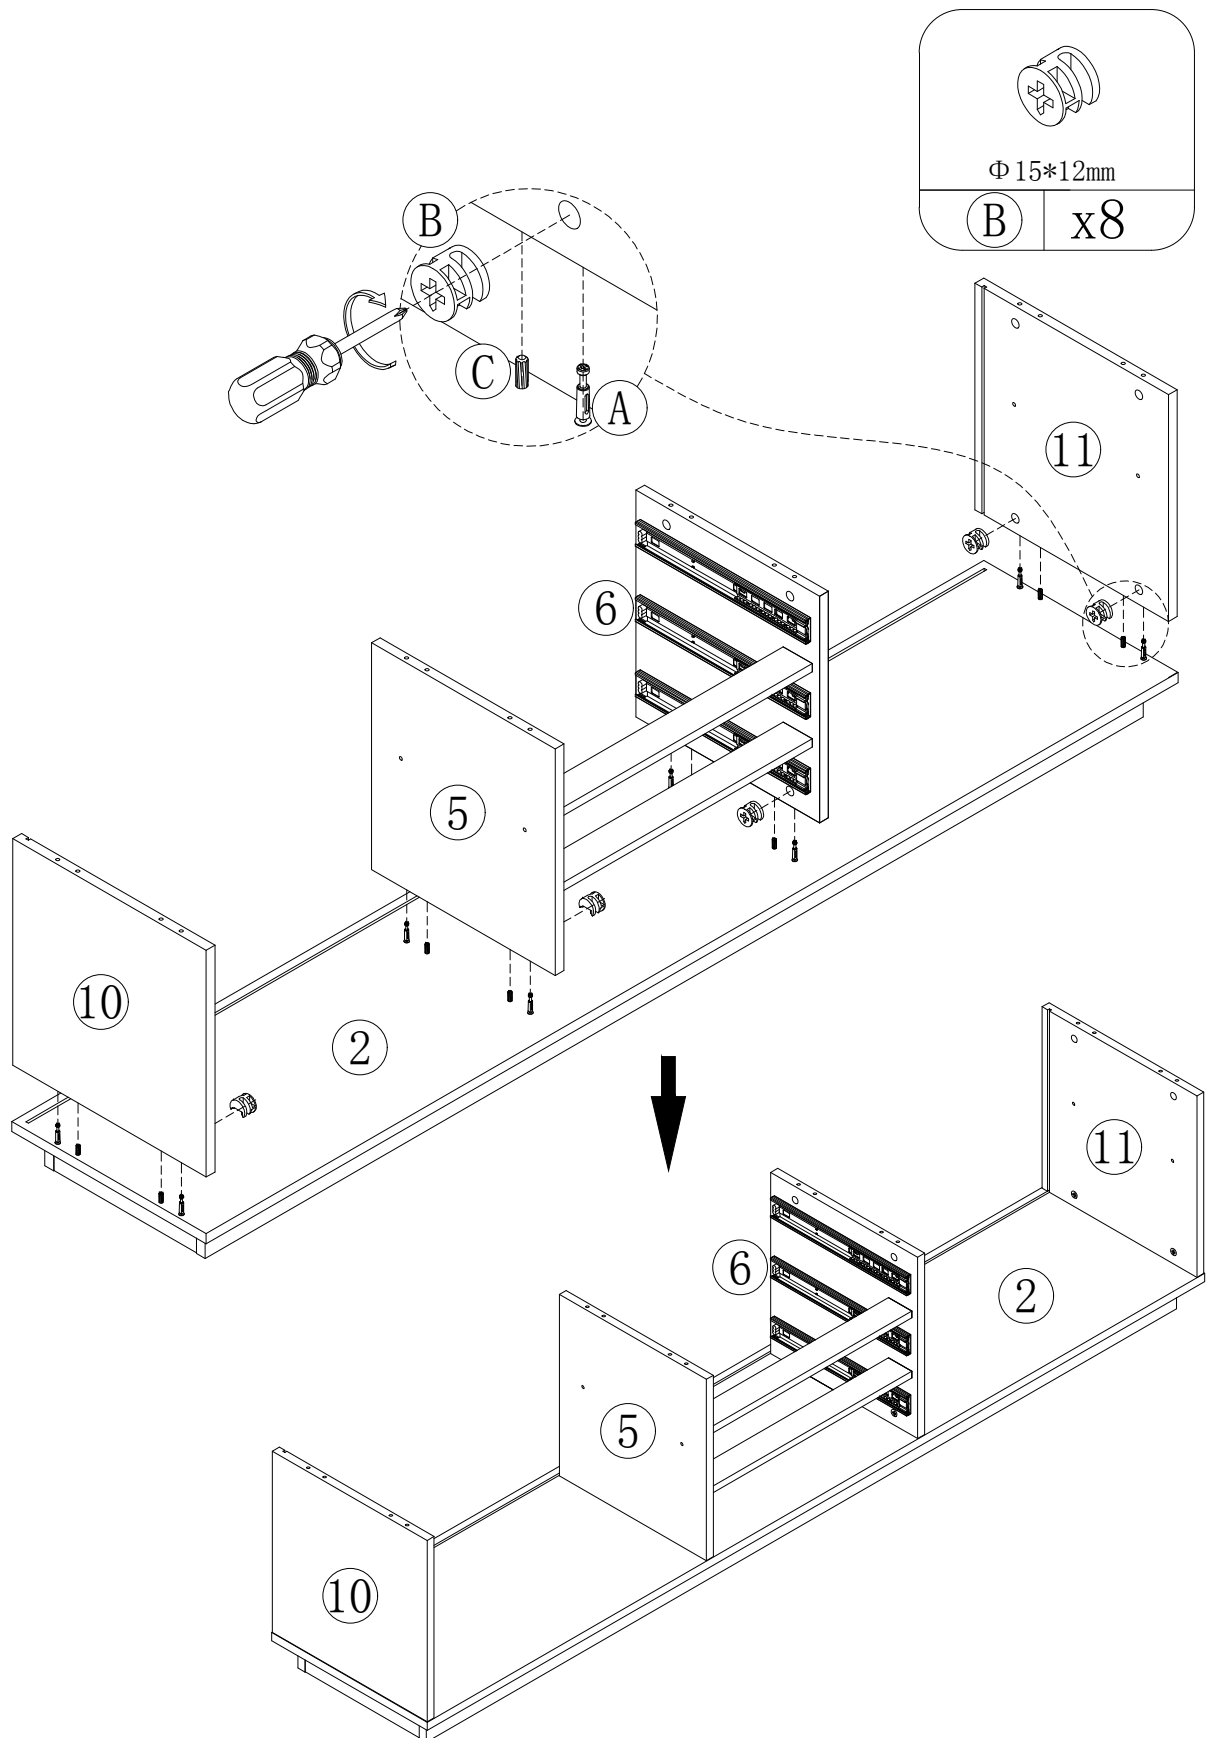


Step 8

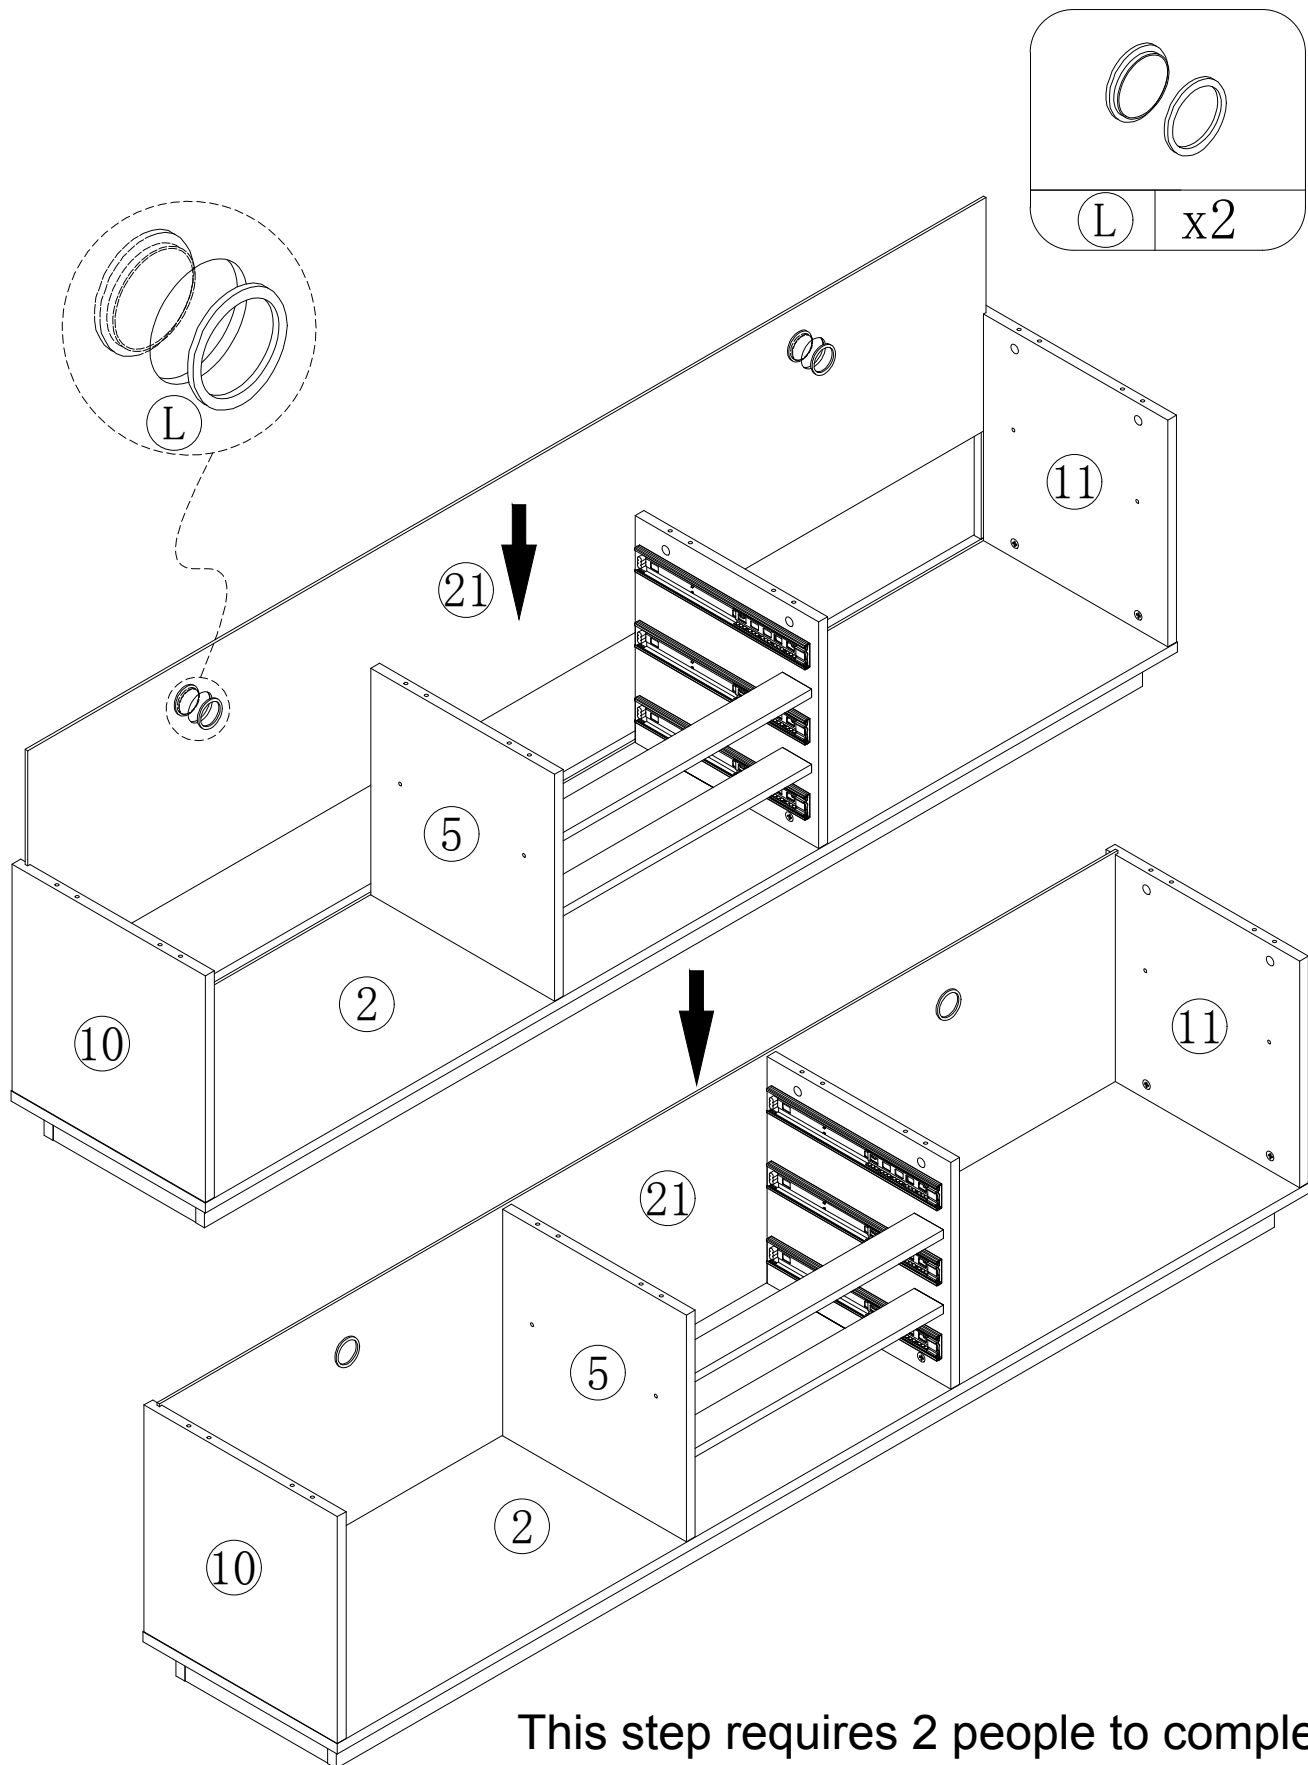




Step 9

Notice: First, assemble the shelf ⑫, and then assemble the top plate ⑧.

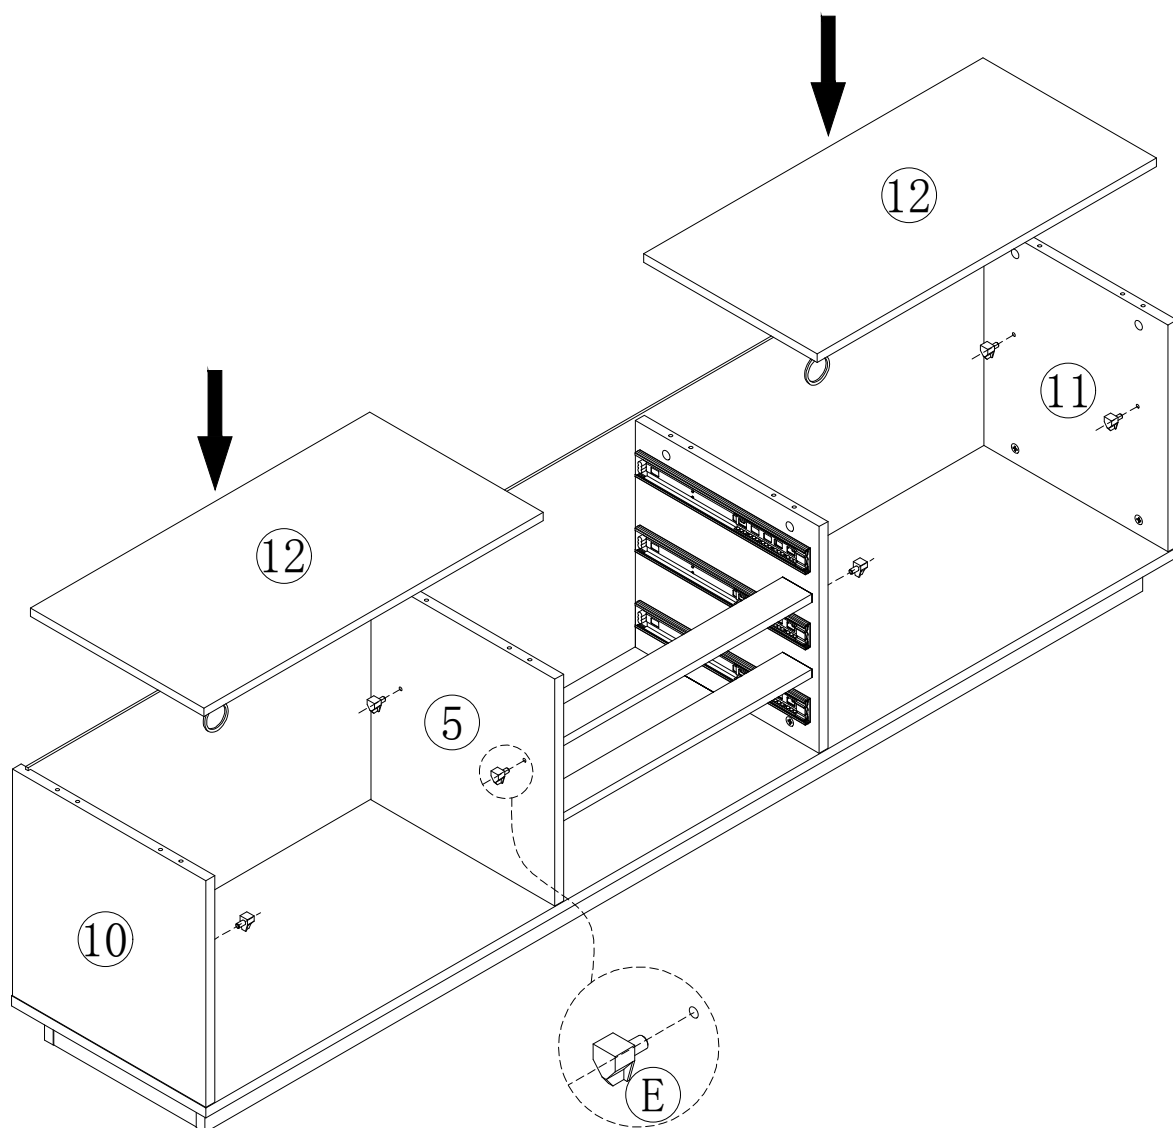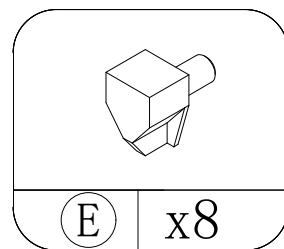


Step 10

This step requires 2 people to complete.

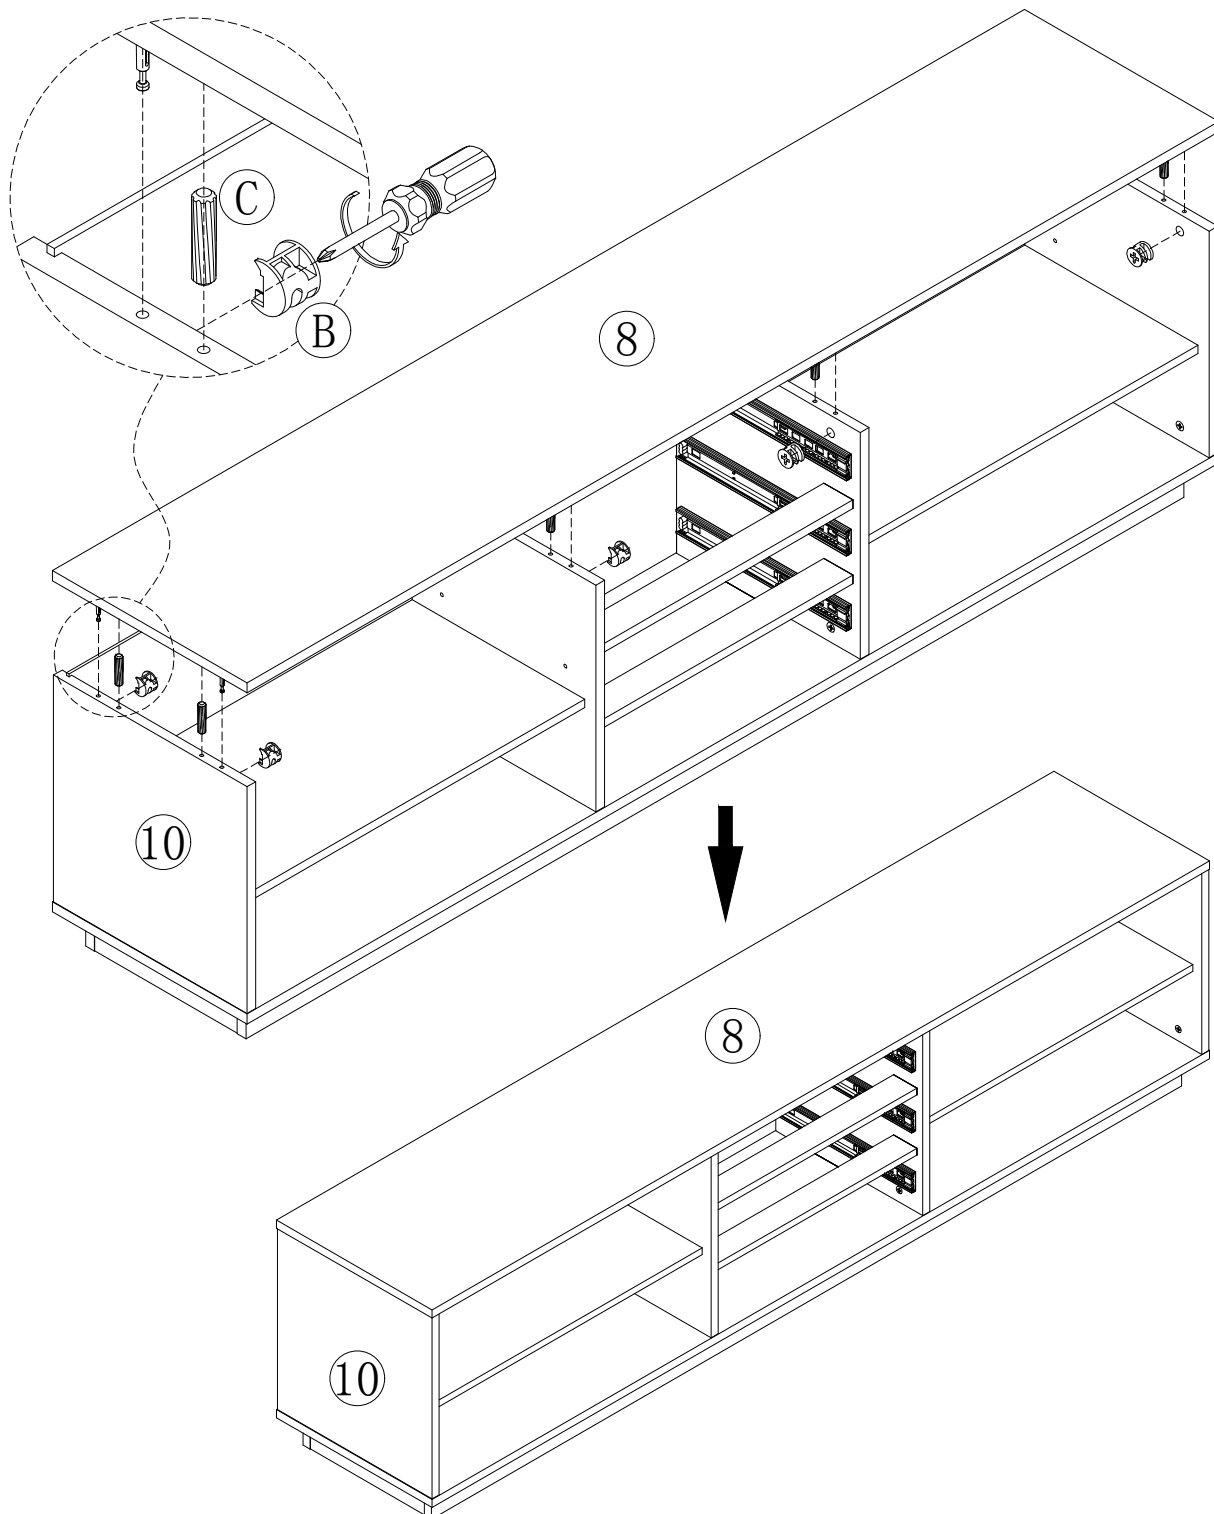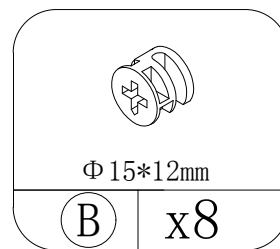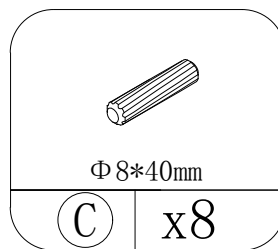


Step 11

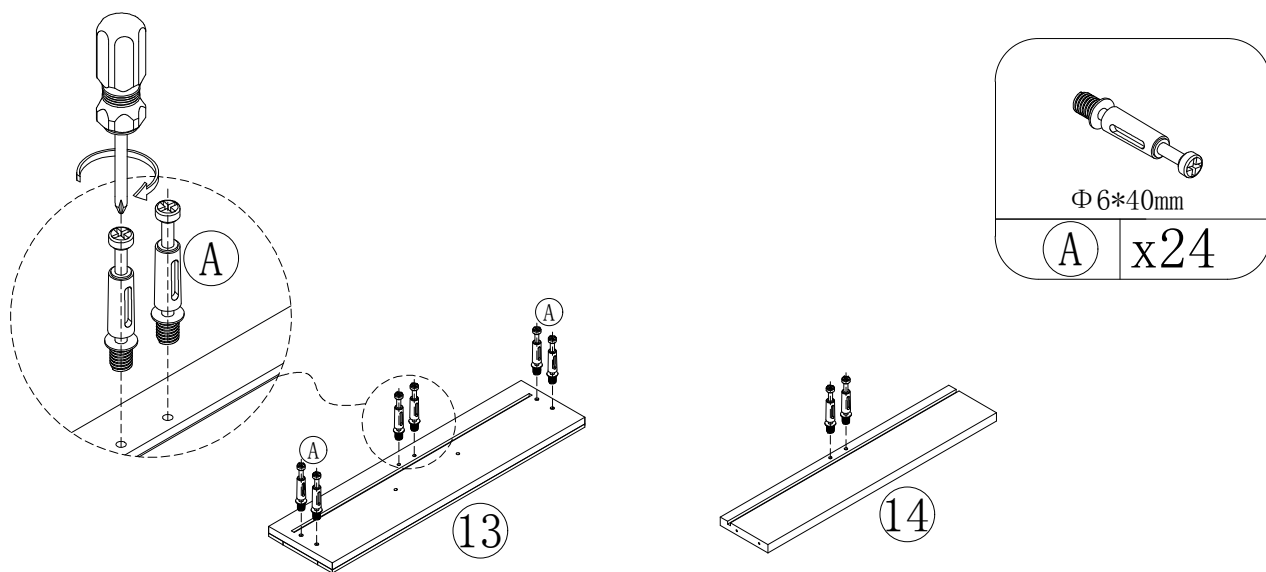


X3



Step 12

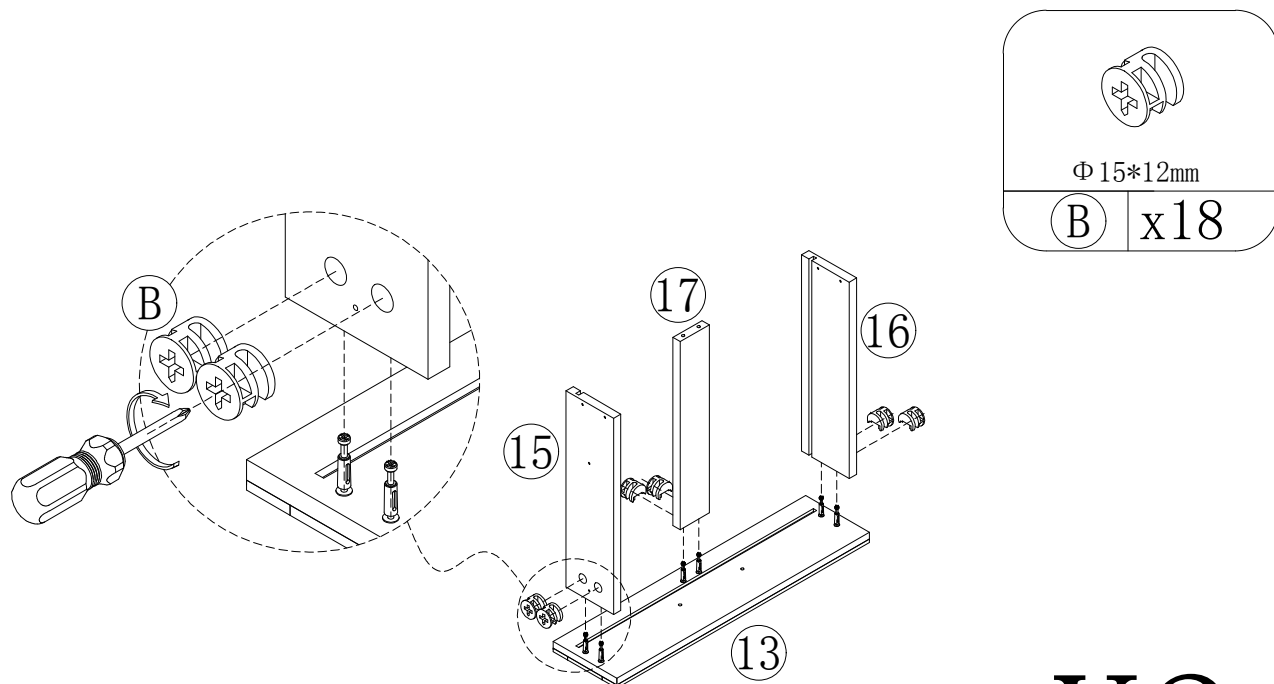

X3



Step 13

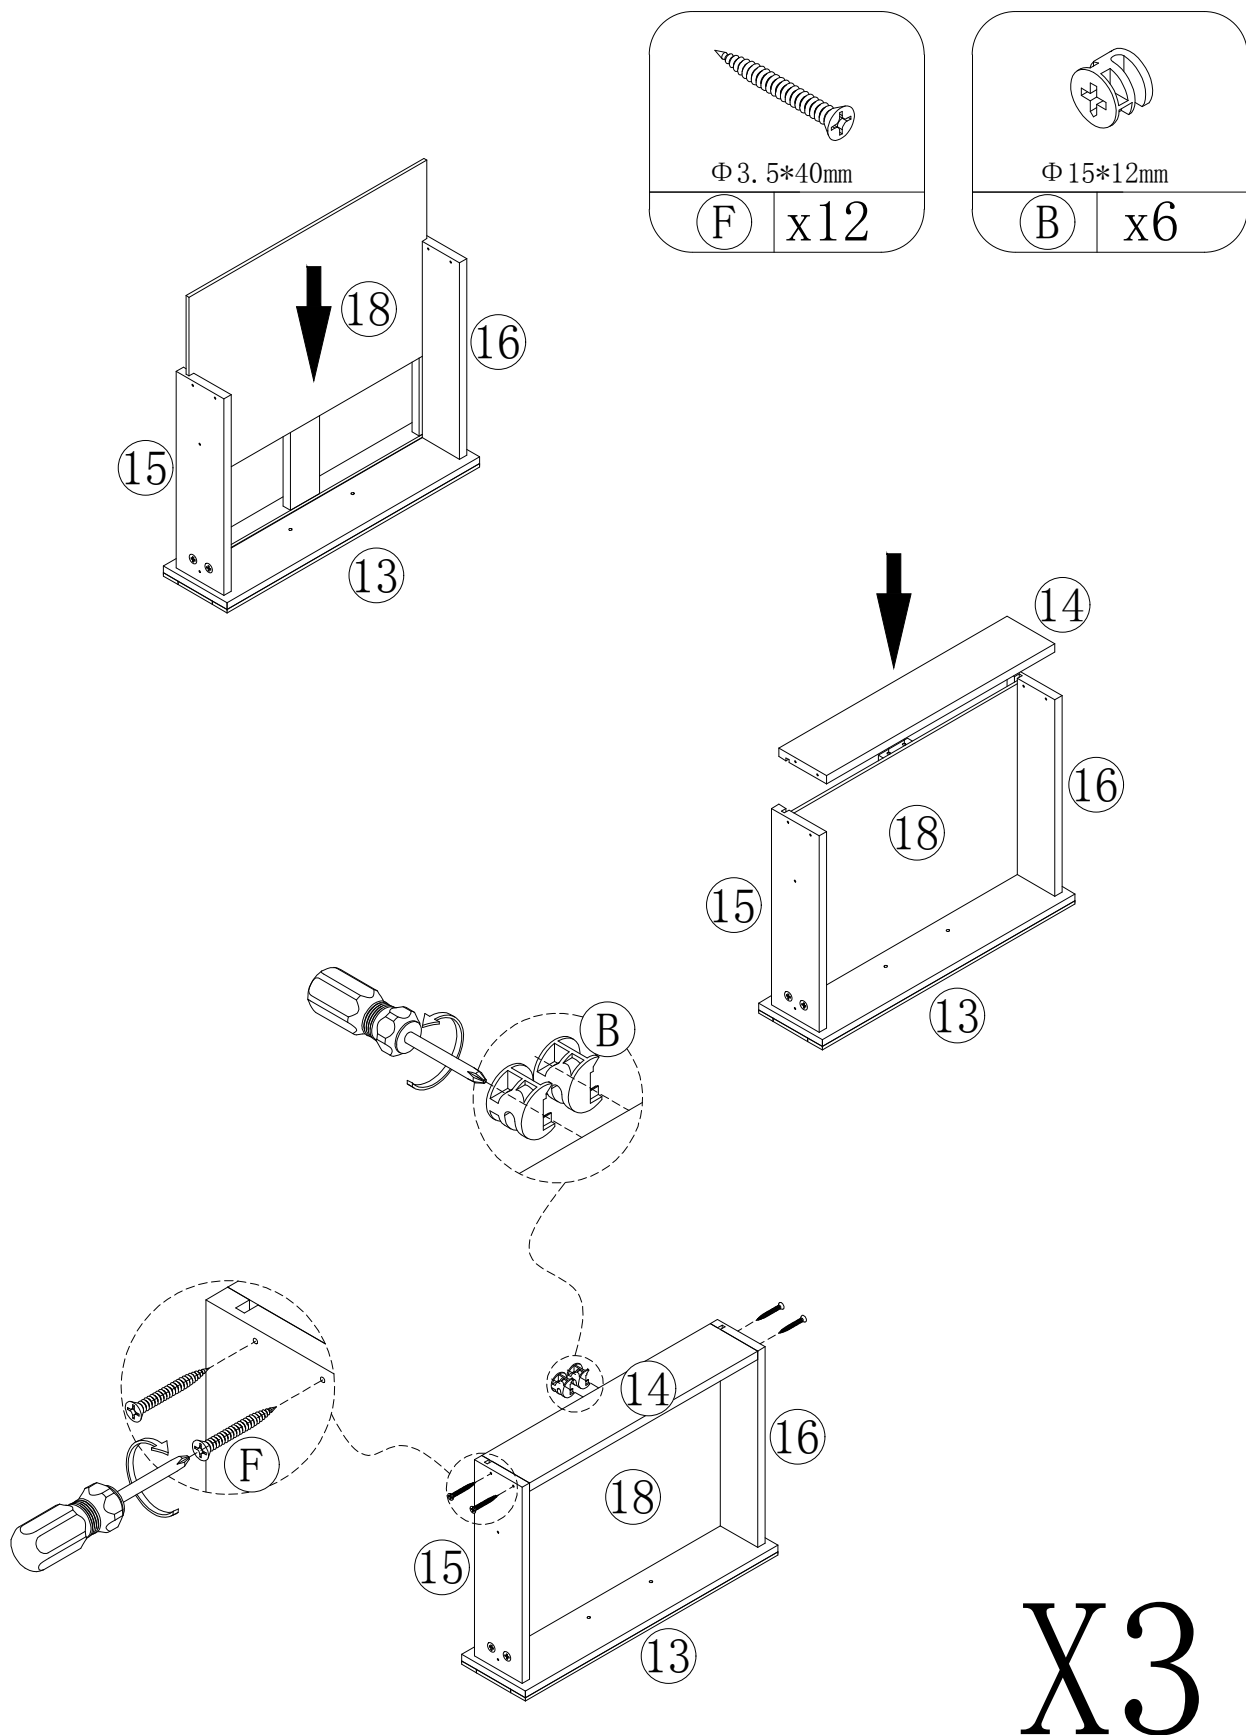

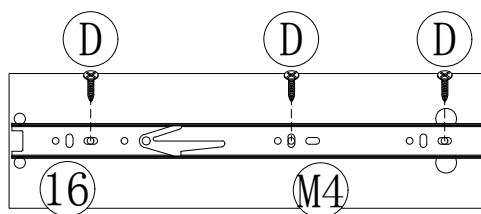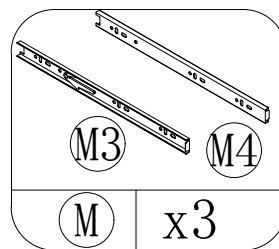


Step 15

Move the sliders to the front end of rail before sliding the drawer into place.

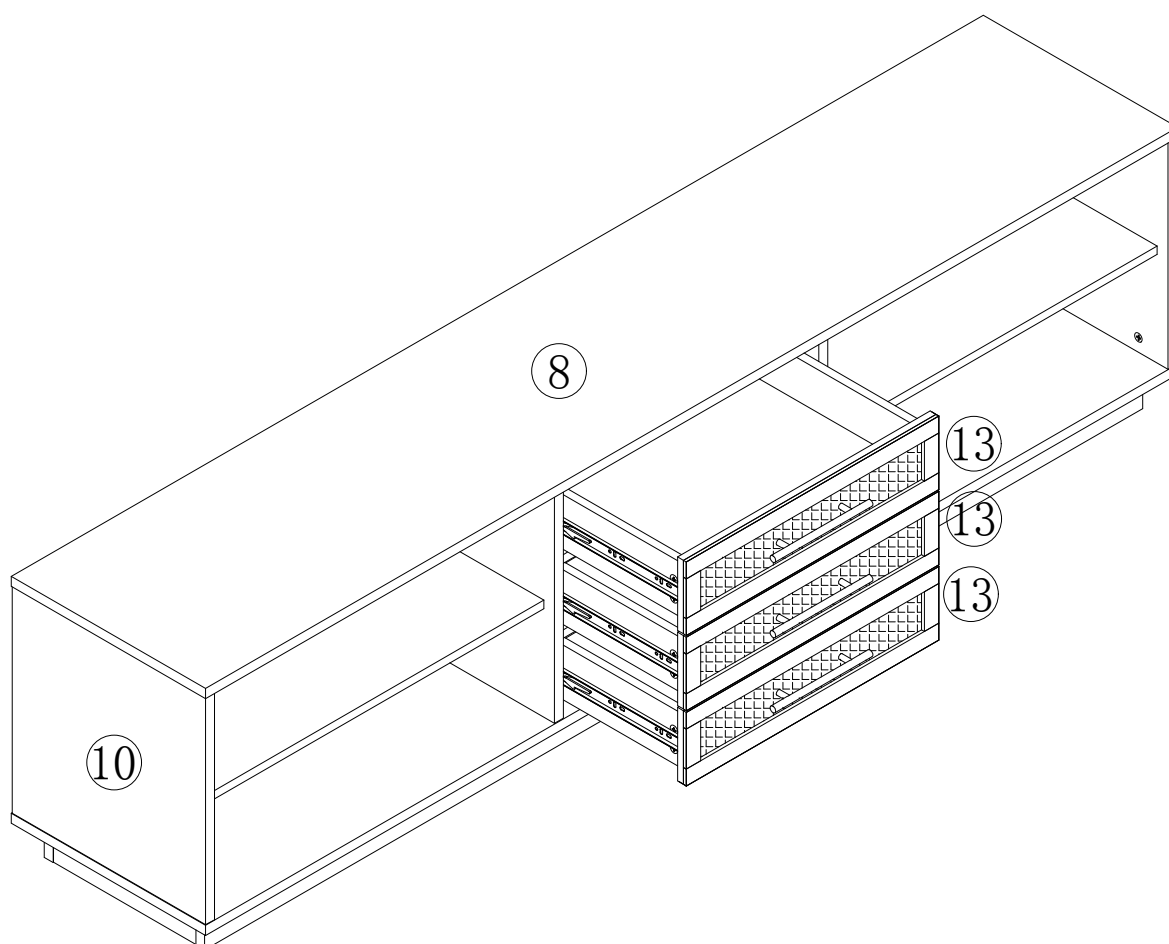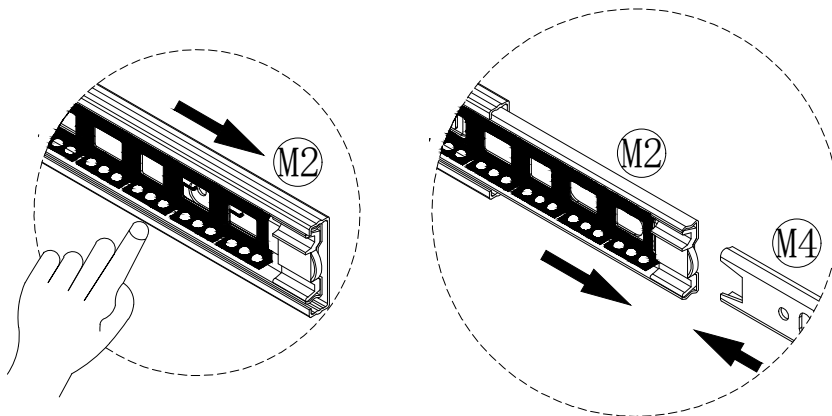


Step 16

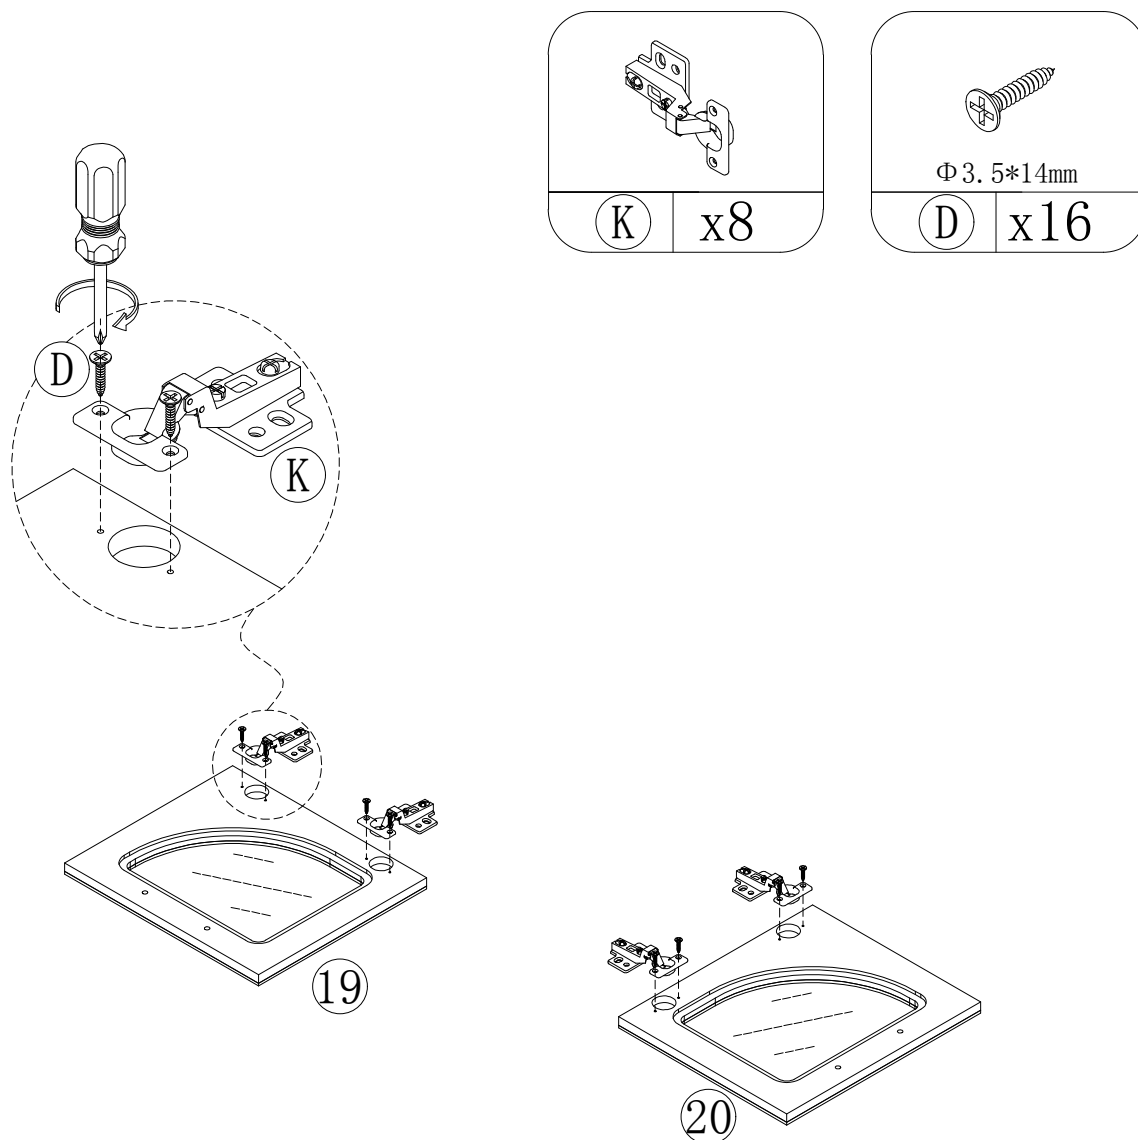


X2

Note: Before installing the door hinges, please carefully read the installation precautions on P24 first, and then go on with the installation.


Hinge Adjustment Diagram

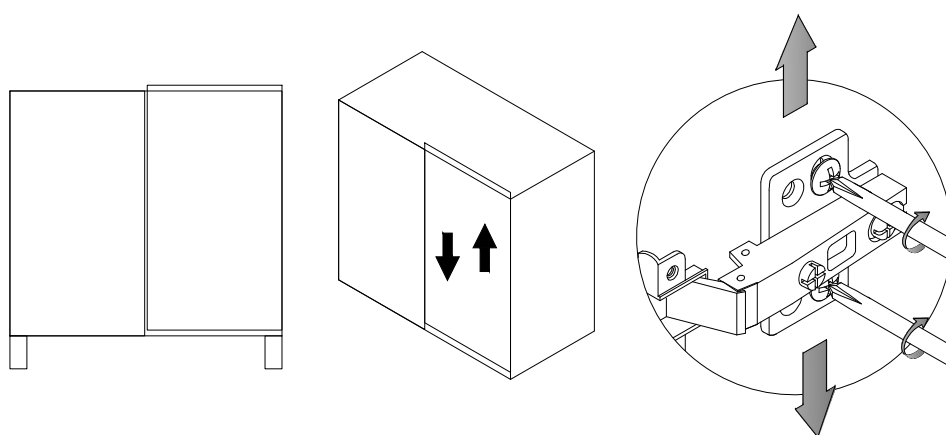

If the door shows the unevenness as shown in the picture on the left (with the upper and lower parts not being level), you can adjust it by loosening and tightening these two screws on the hinge.




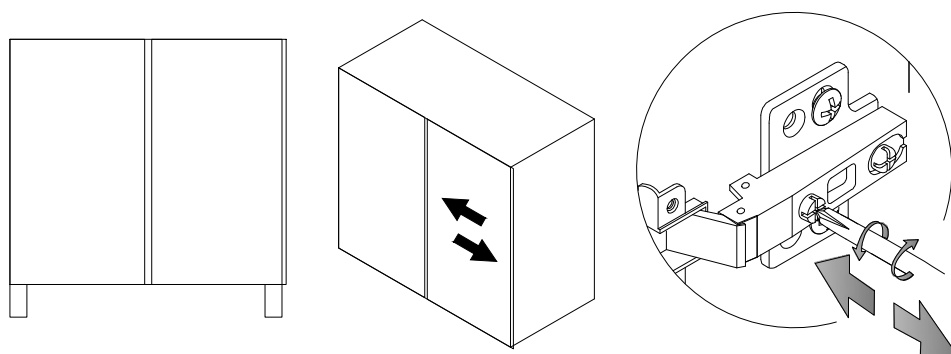


If there is a large gap in the door as shown in the picture on the left, you can adjust it by loosening this screw at the front of the hinge.



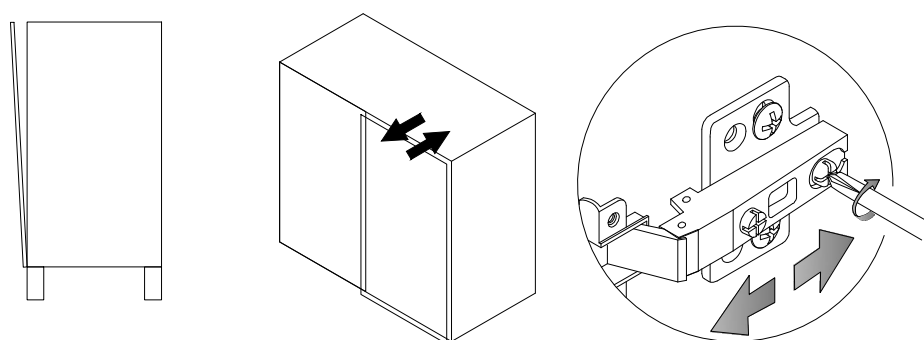


If the door does not close tightly as shown in the left picture (i.e., if it is not closed properly both at the front and the back), you can adjust it by loosening and then tightening this screw at the back of the hinge.

Step 17

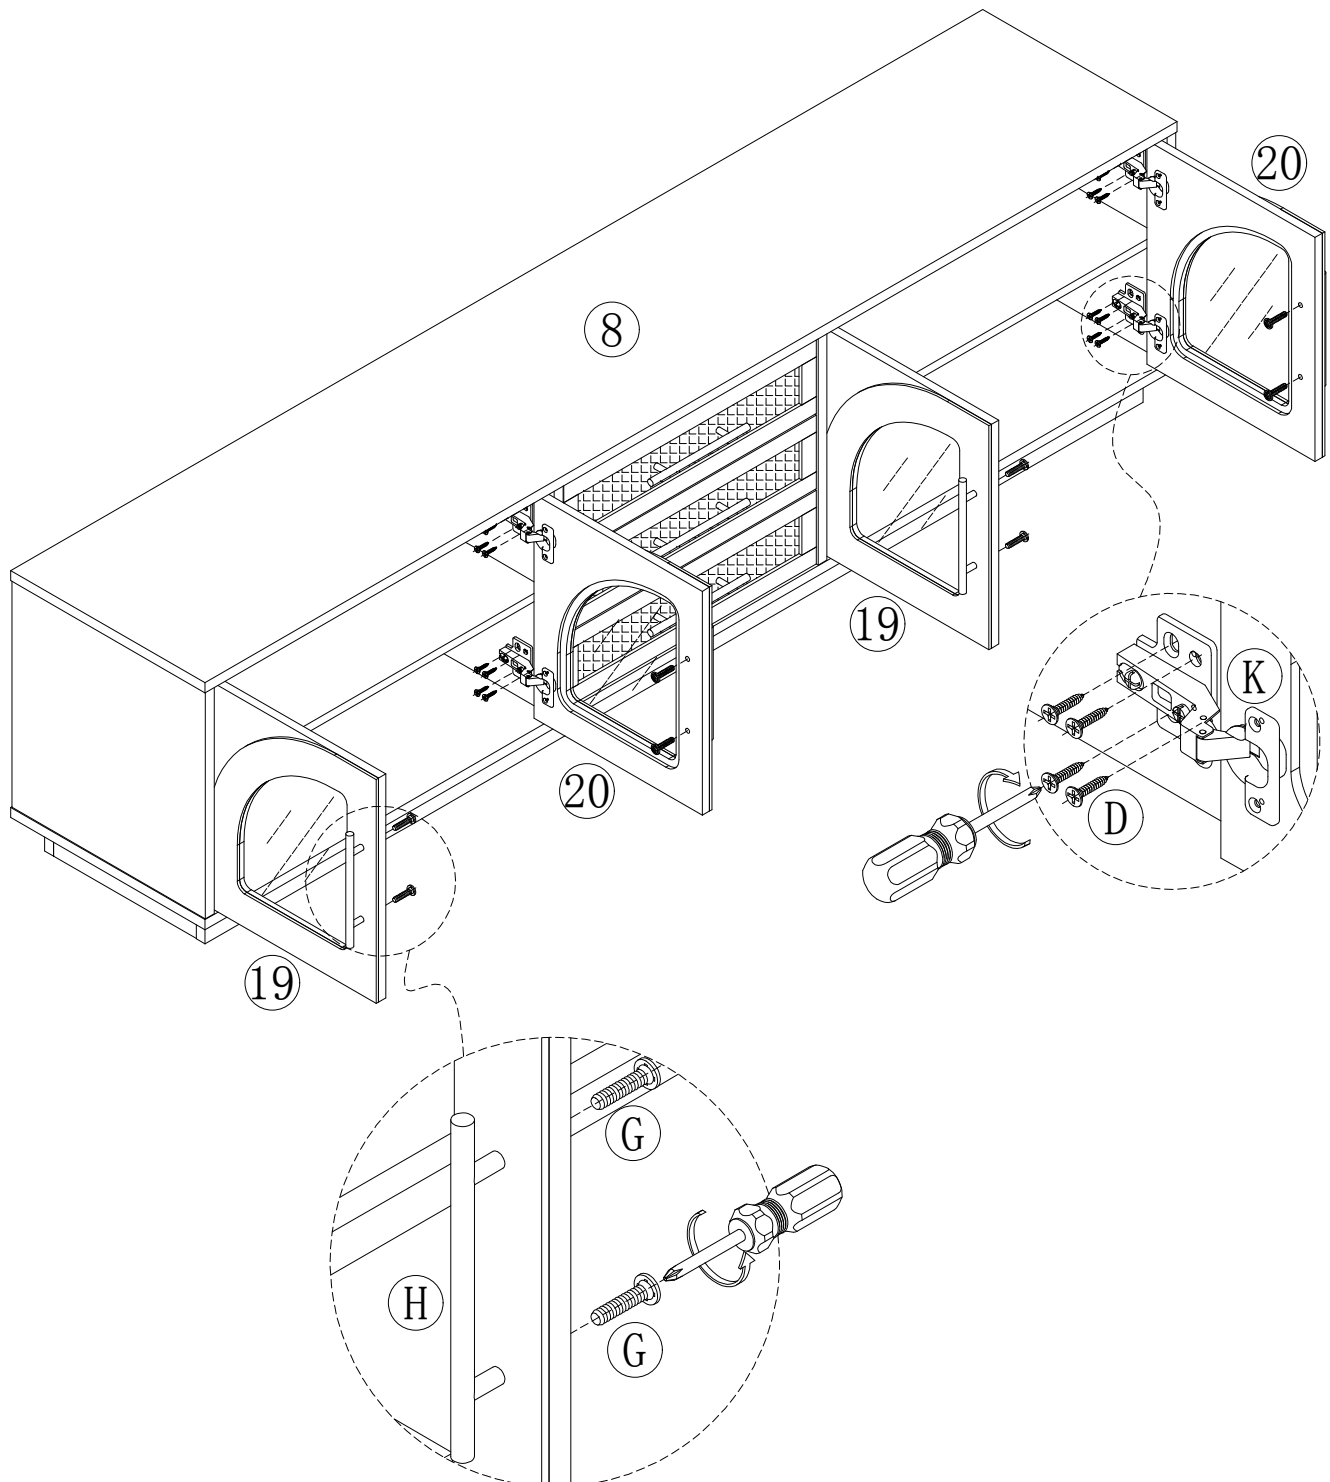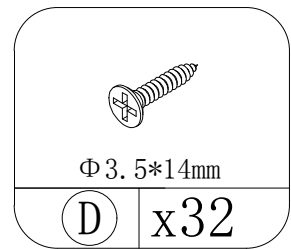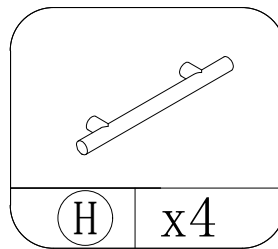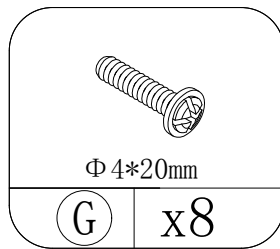

Step 18

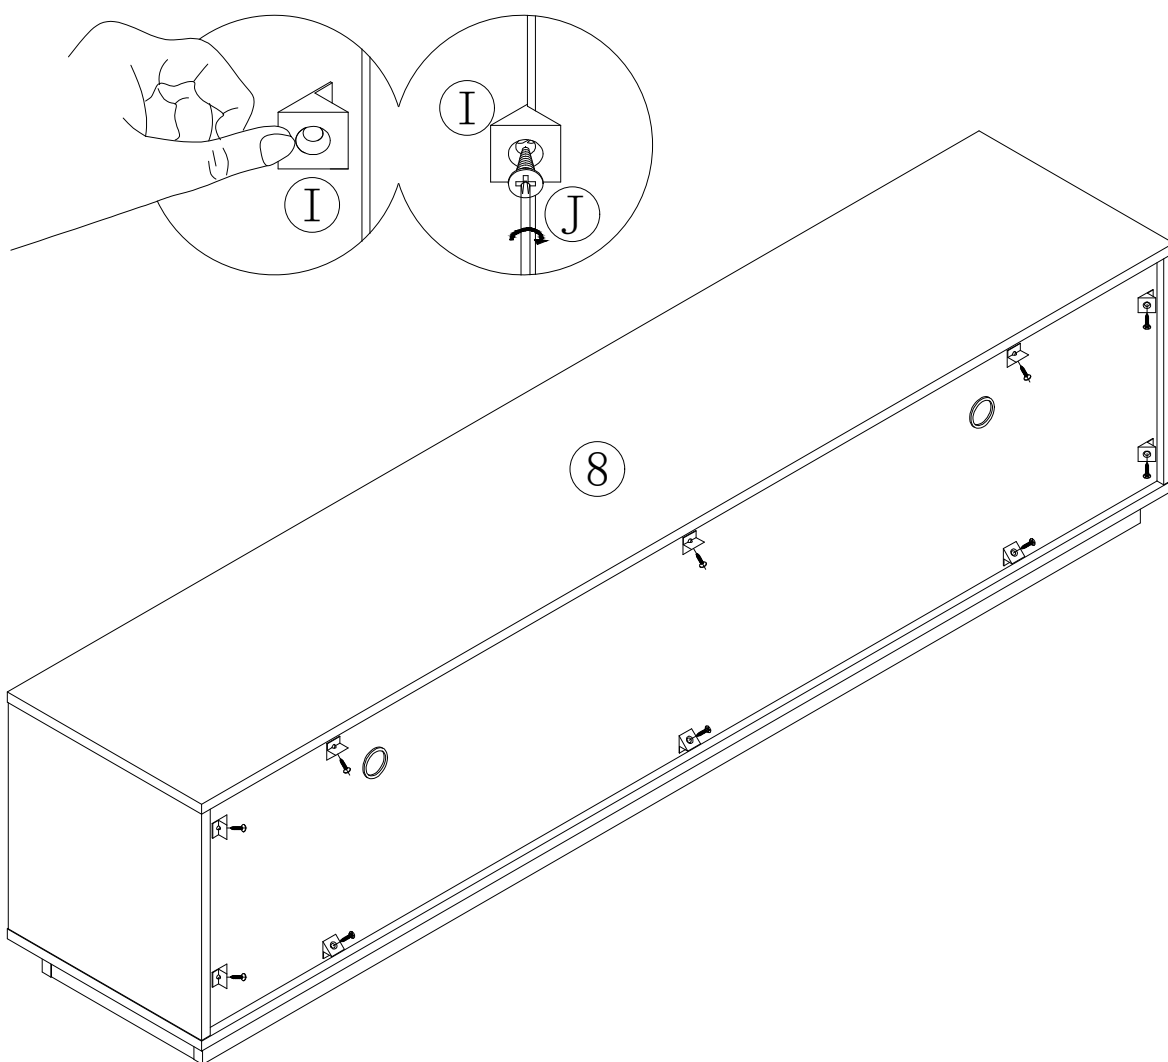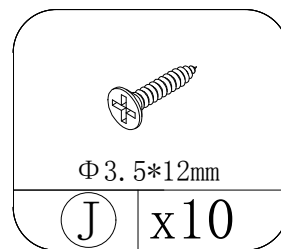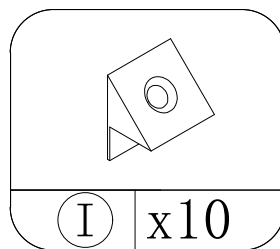

Step 19

