

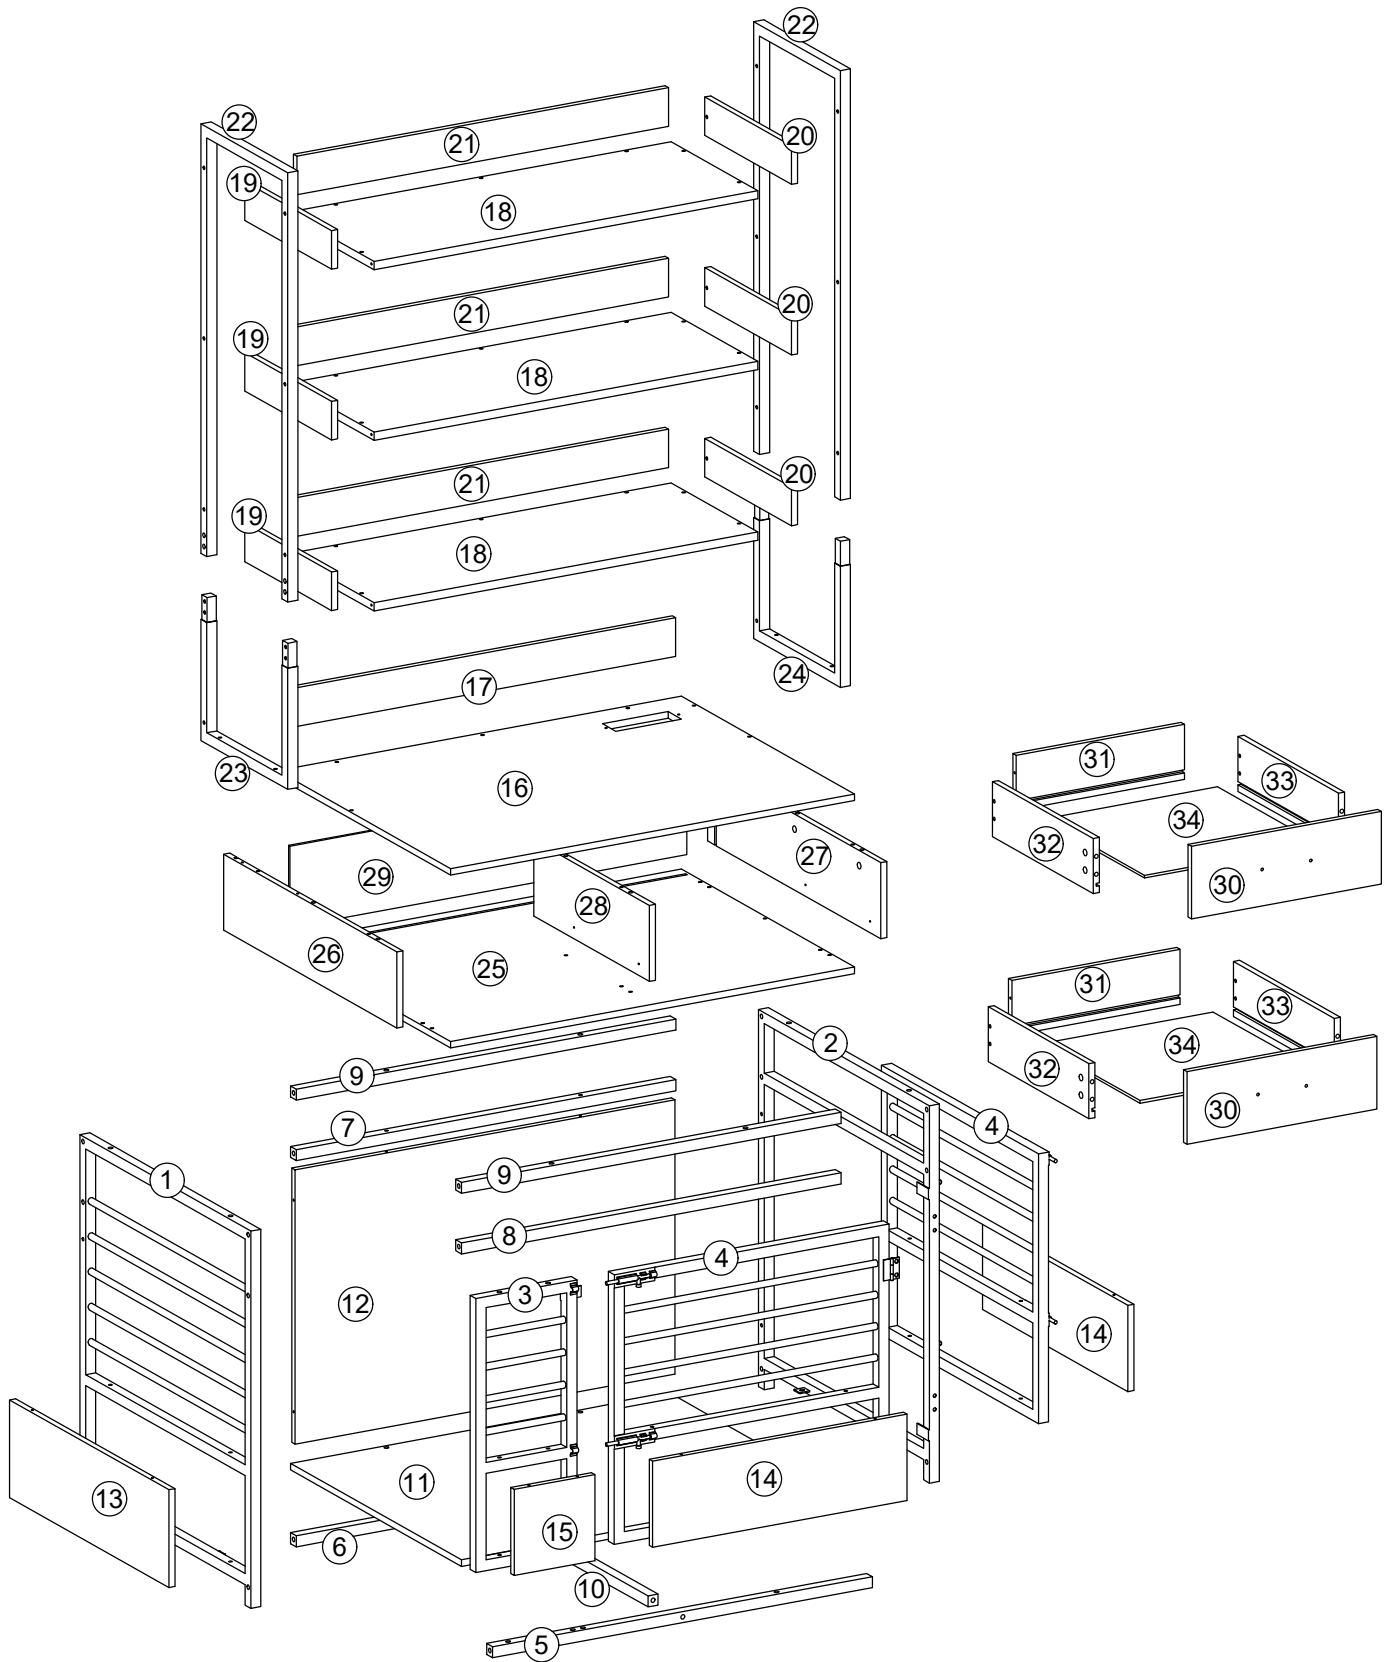
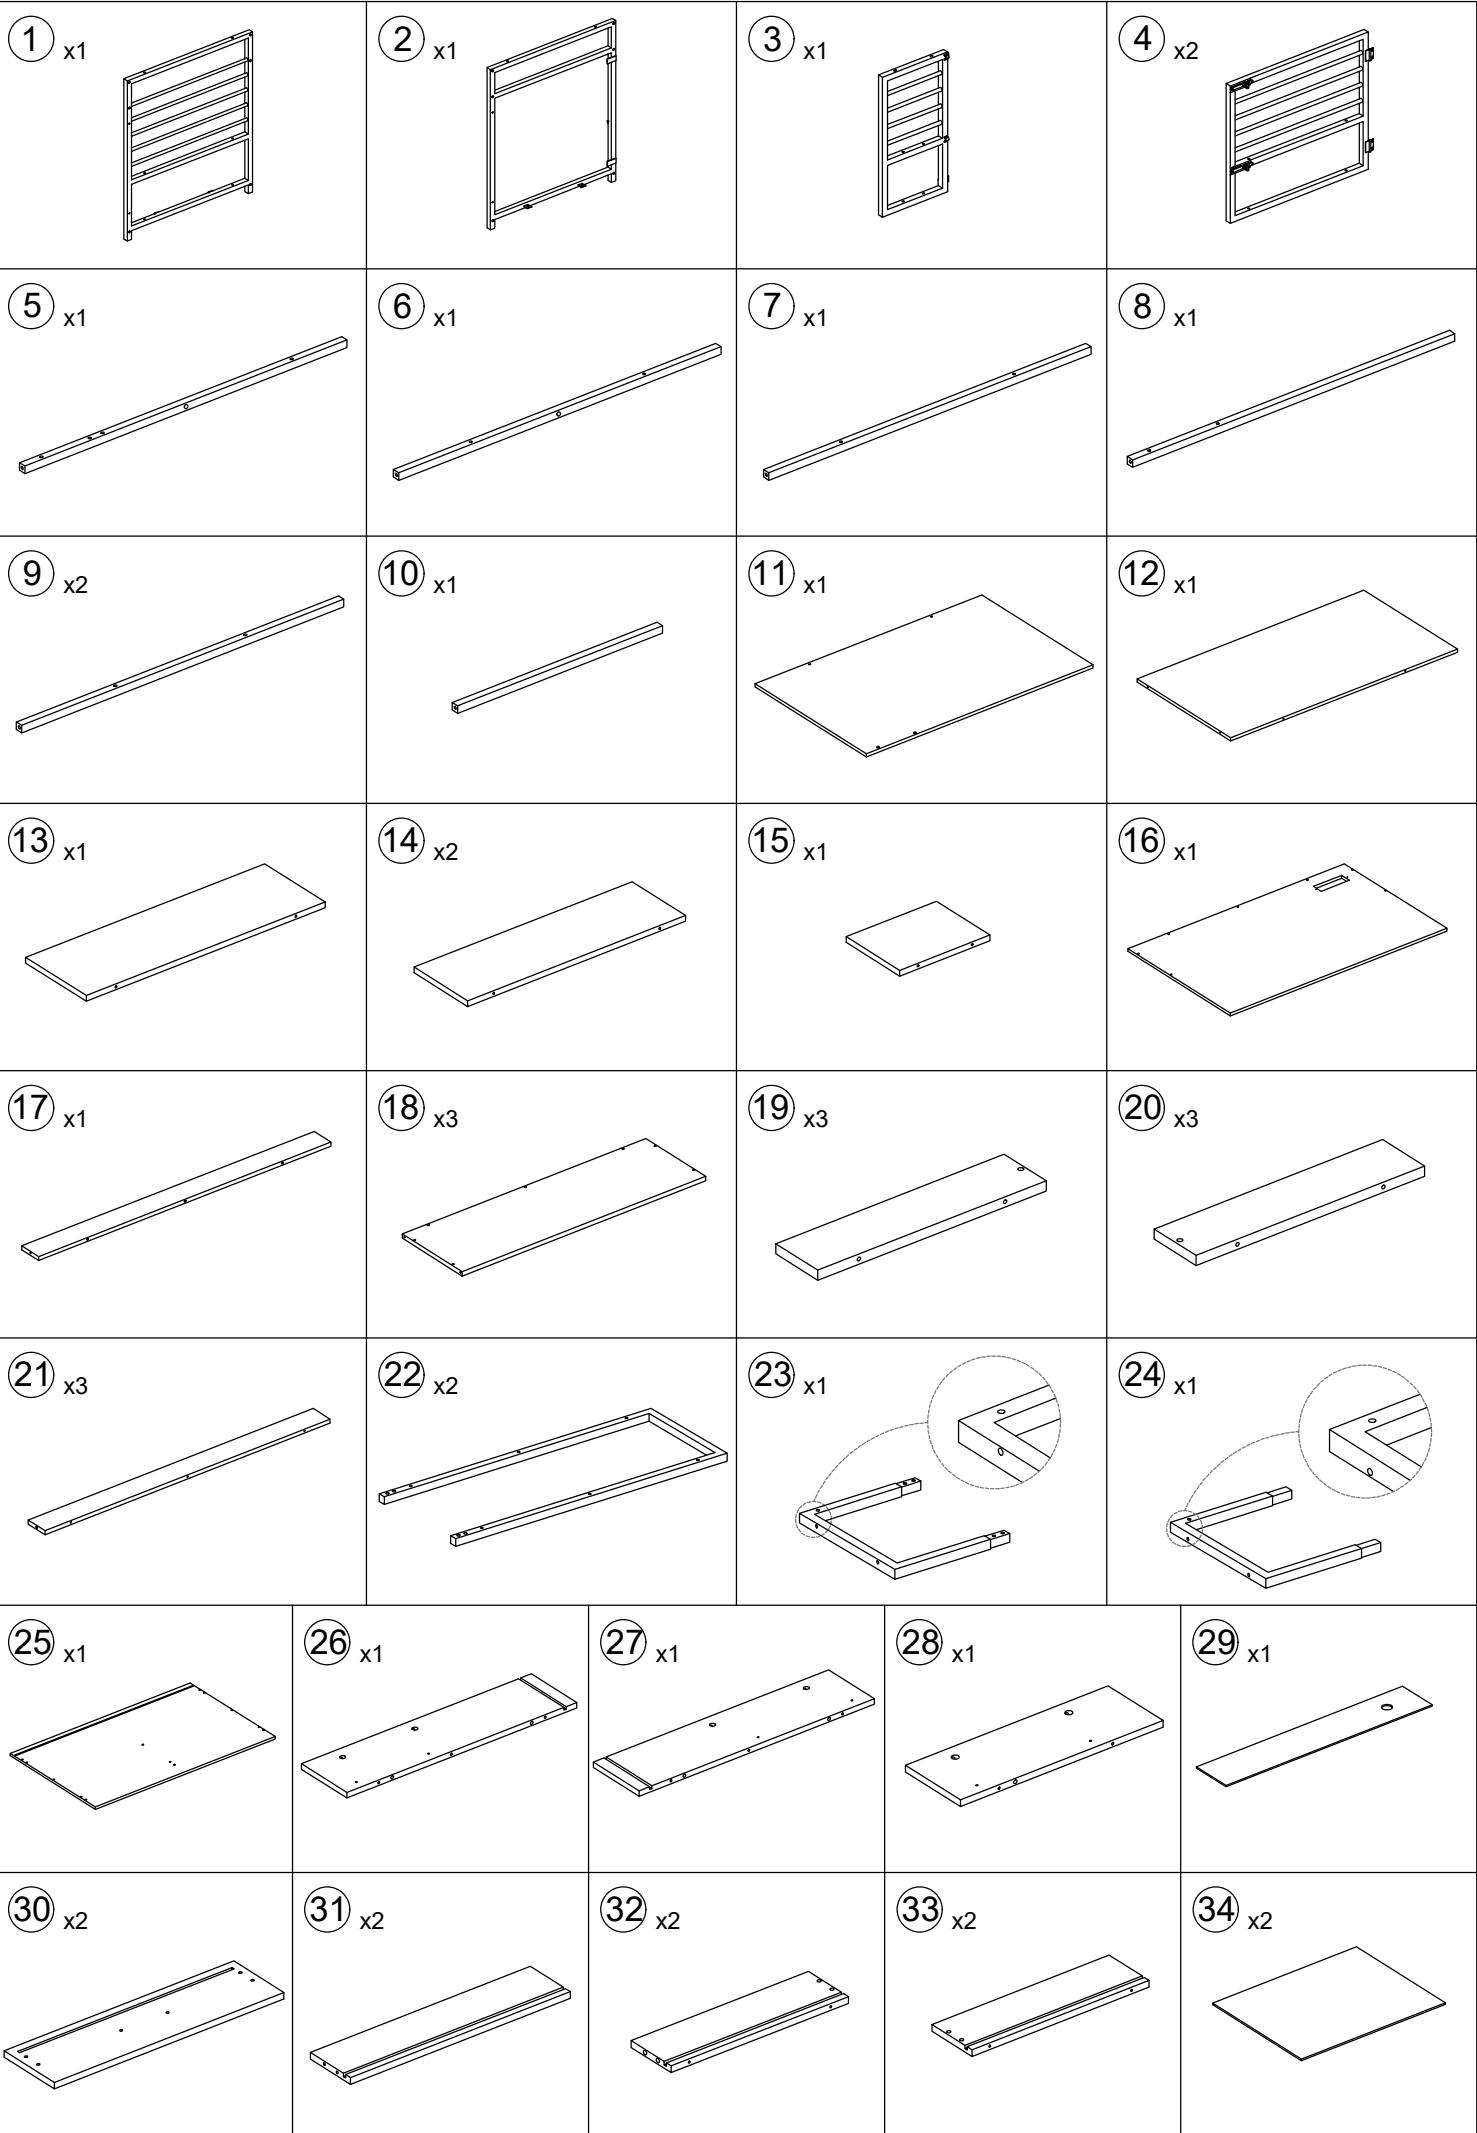



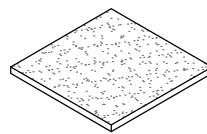




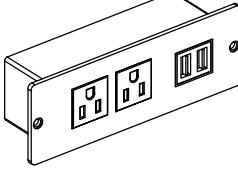




"IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY"






A x 16+1  M6x45	B x 12+1  M6x28	C x 20+2  M6x10	D x 74+2  Ø5x40
E x 6+1  Ø5x50	F x 4  M6x25	G x 4+2 	H x 18+2  Ø6x35
I x 2  M4x10	J x 14+1  Ø12  Ø6x35	K x 2+1  3.5x12	L x 14+1  3.0x12
M x 2   M4x16	N x 2  350mm	O x 1 	P x 2   
TOOL			
 3mm			
 4mm			
			

STEP 1

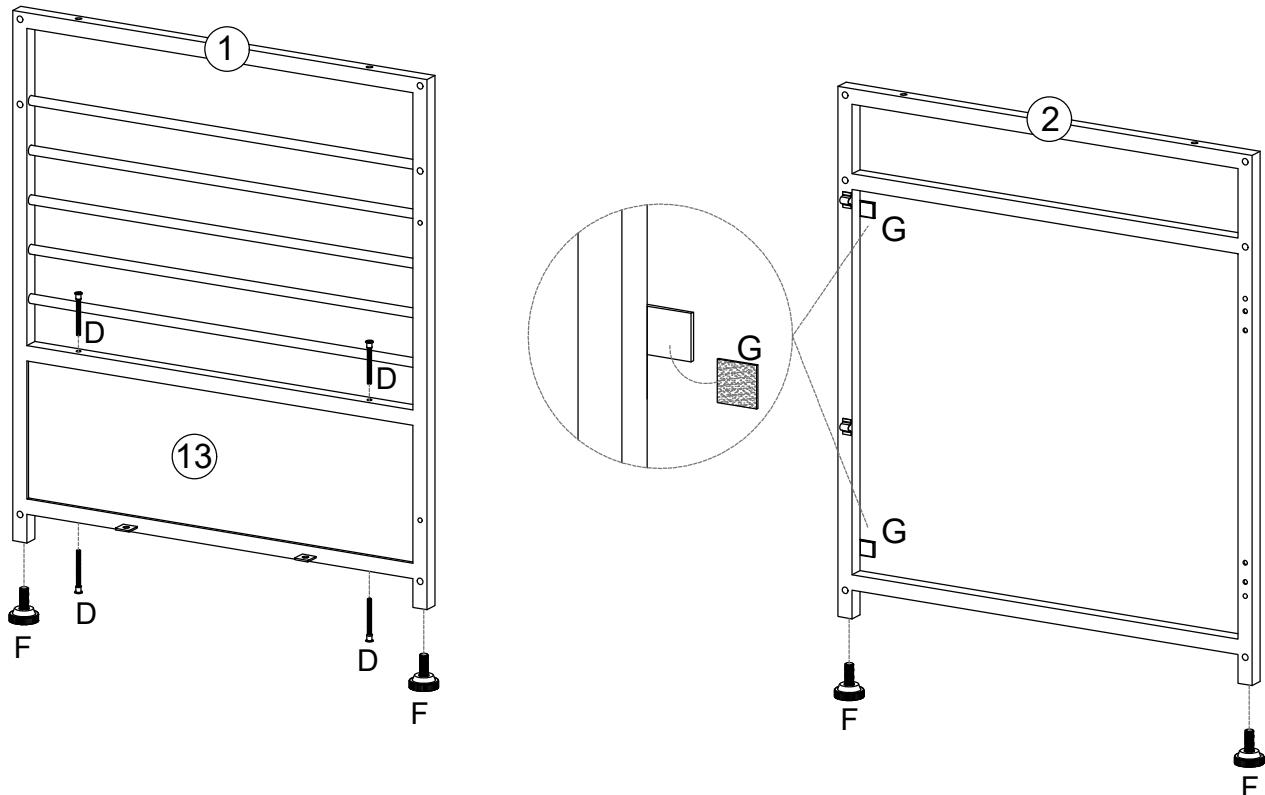


	3mm		G		F		x4		D		x4
--	-----	--	---	--	---	--	----	--	---	--	----

STEP 2

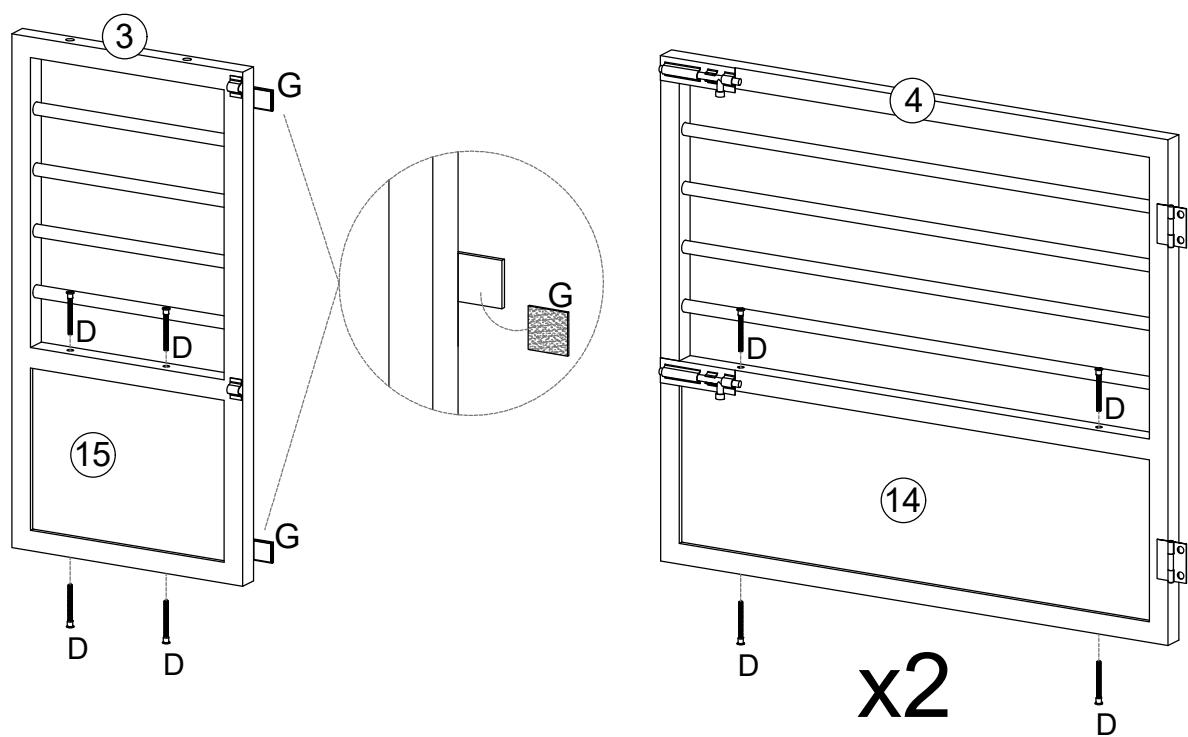


	3mm		G		F		D		x12
--	-----	--	---	--	---	--	---	--	-----


STEP 3

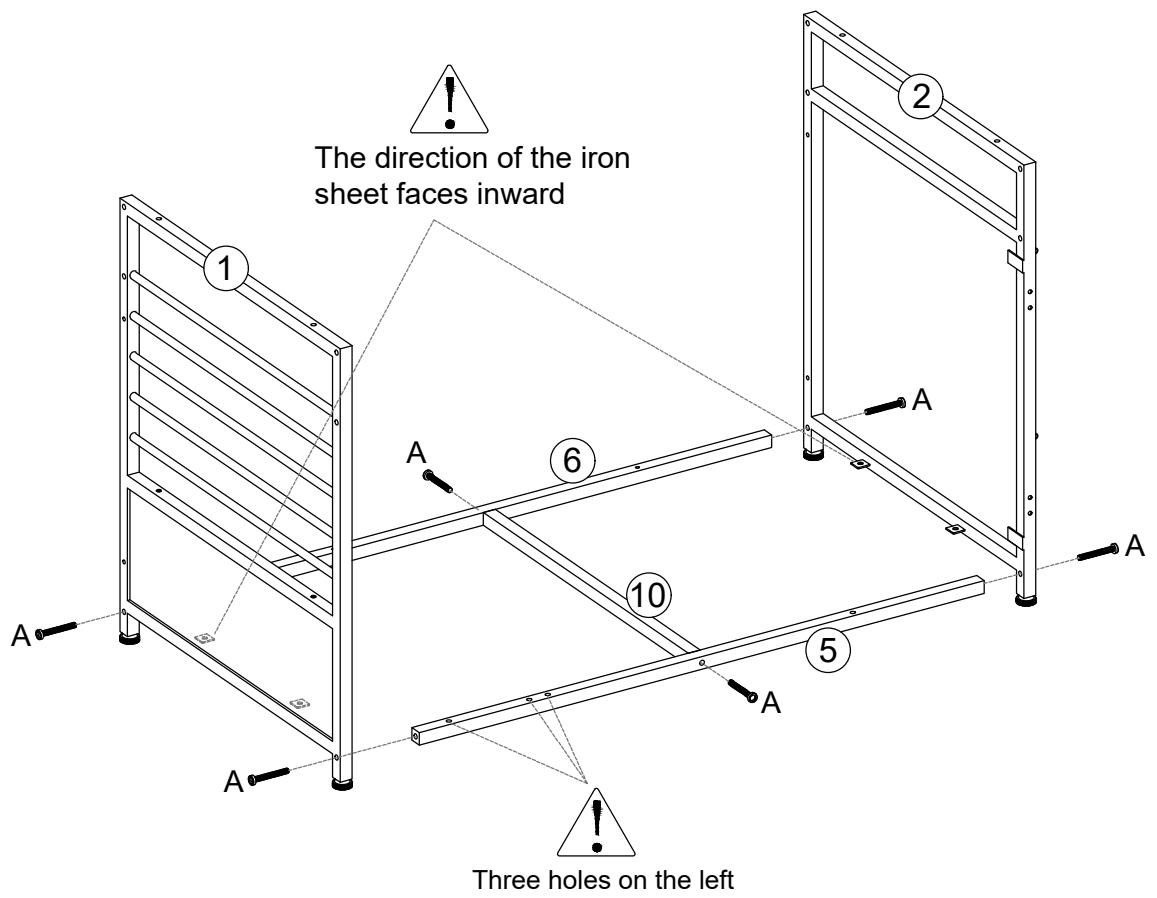

STEP 4

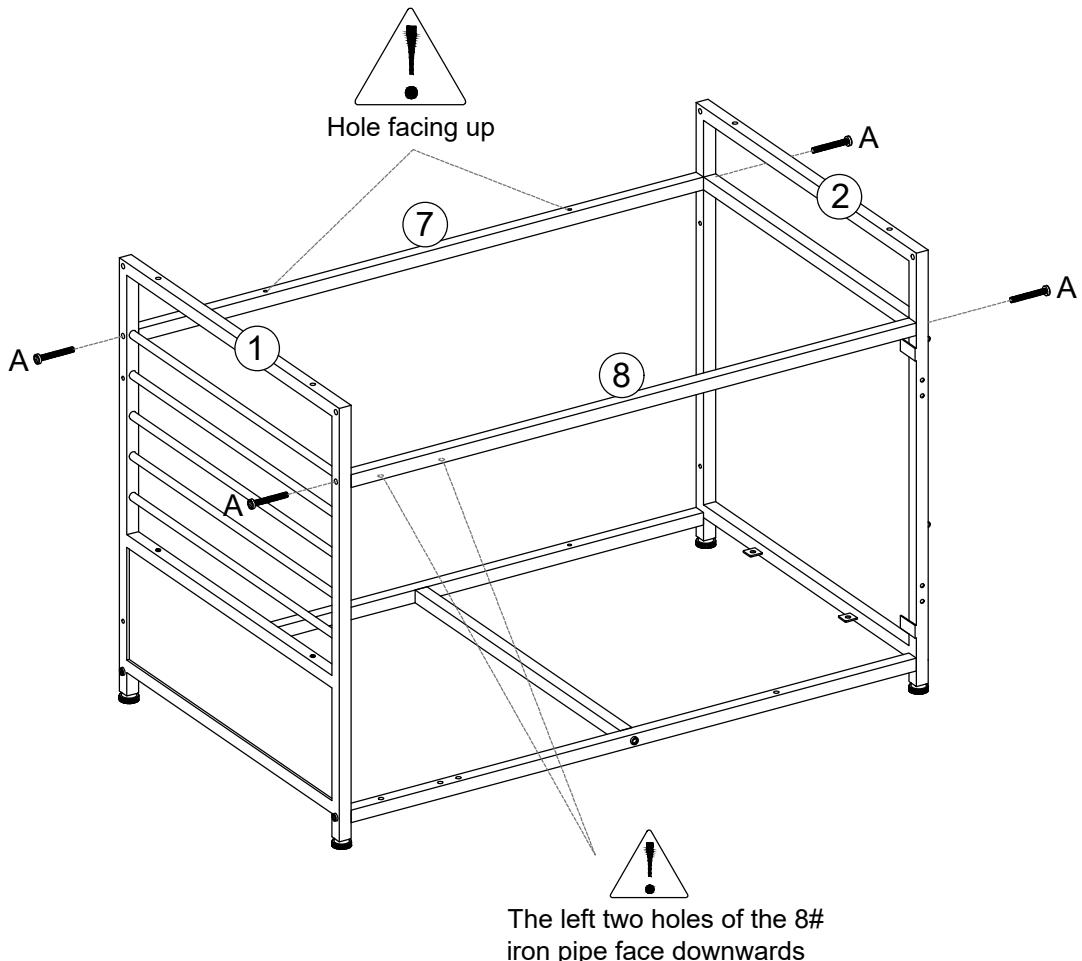


STEP 5

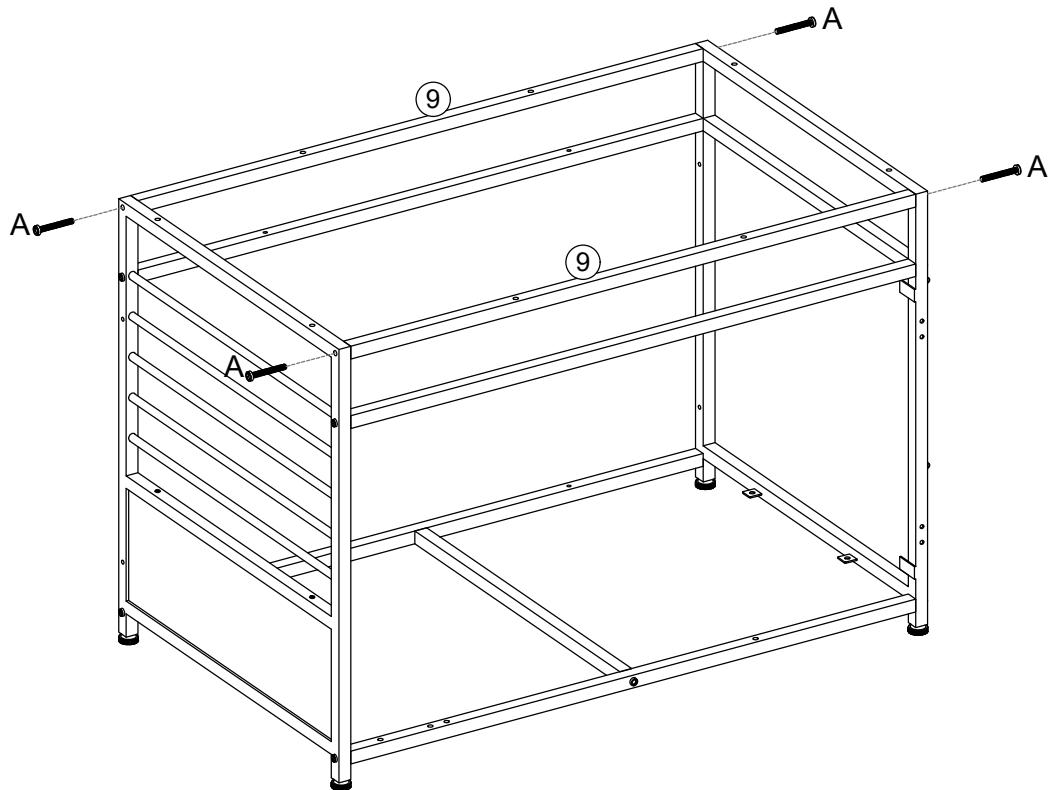

[Icon] 4mm A [Icon] x4


STEP 6

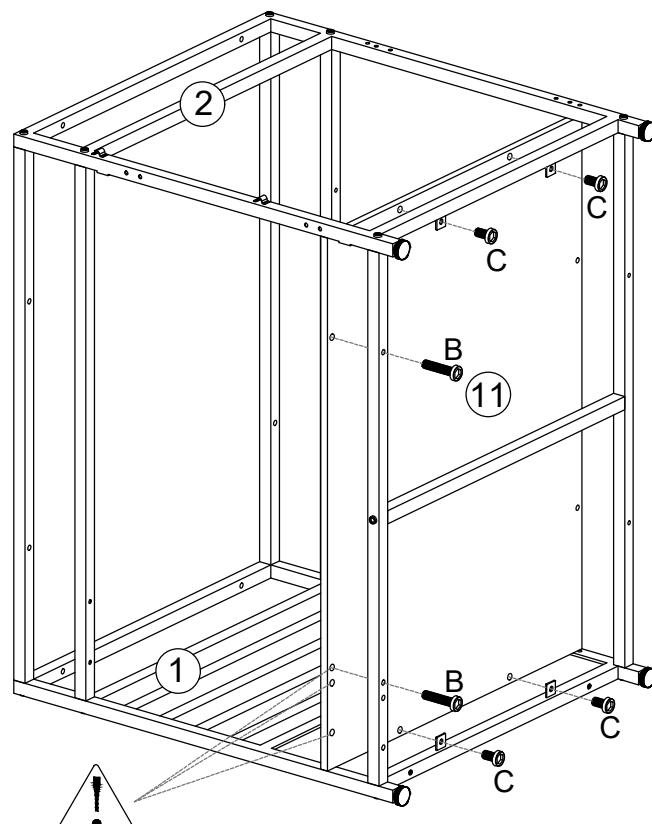


Three holes on the left

[Icon] 4mm B [Icon] x2 C [Icon] x4


STEP 7

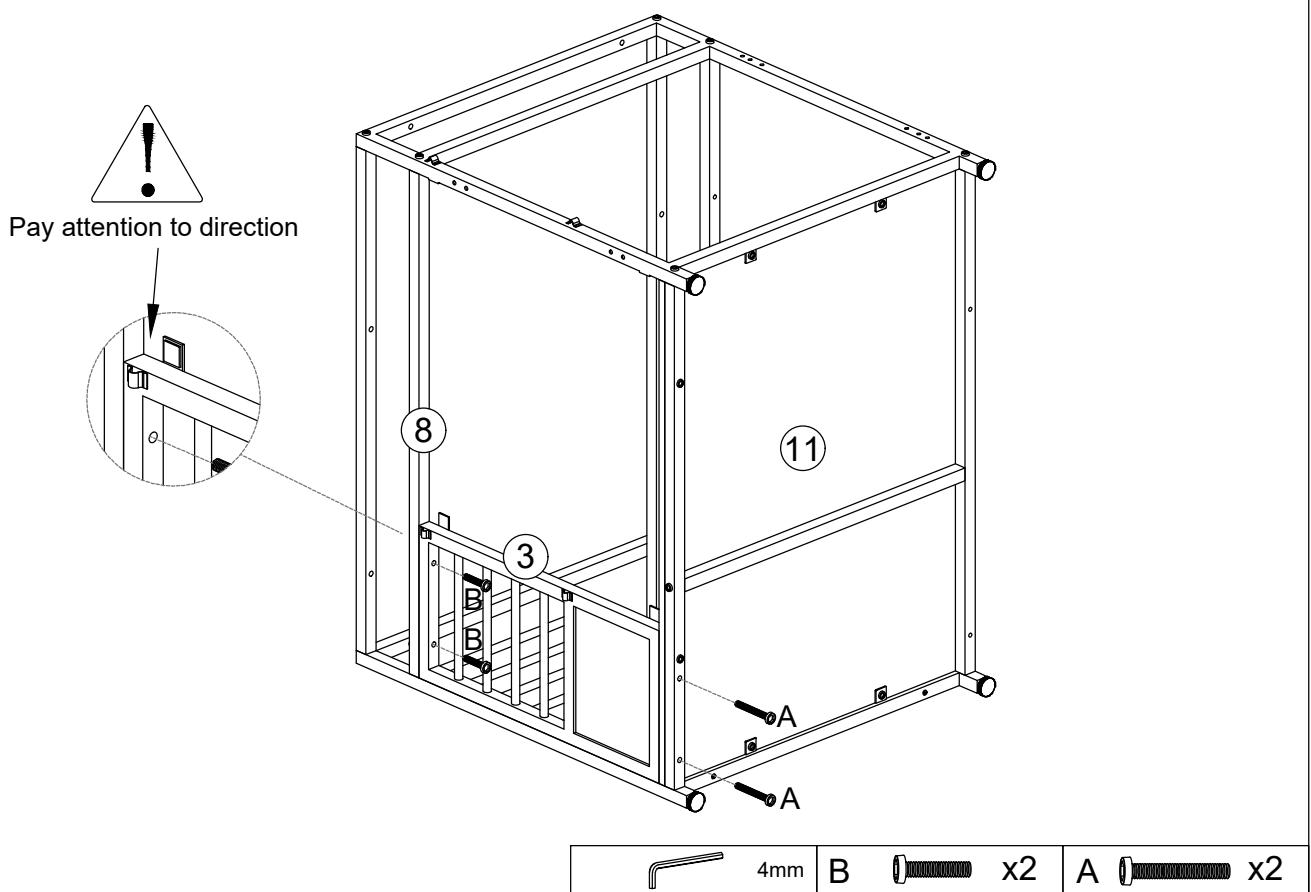

STEP 8

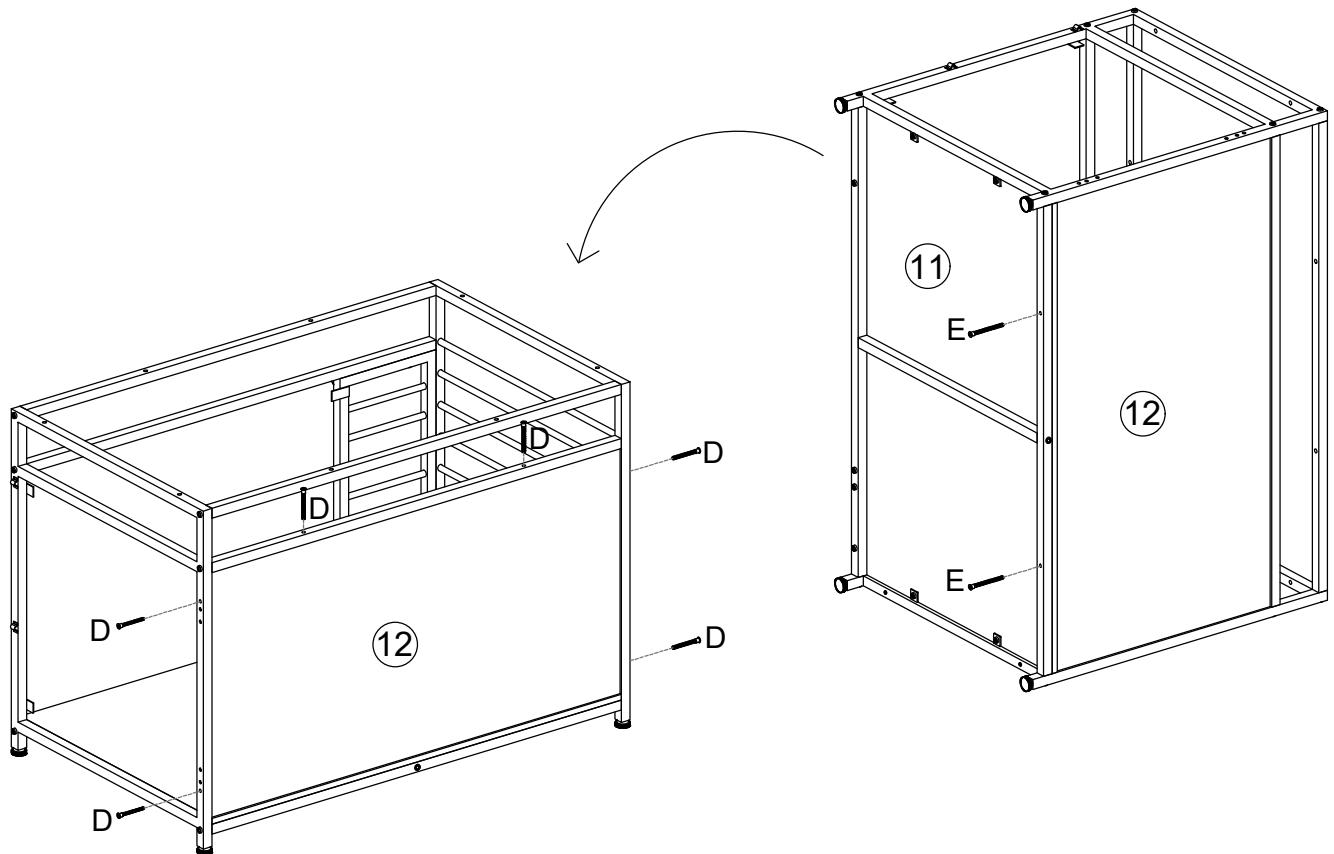


STEP 9

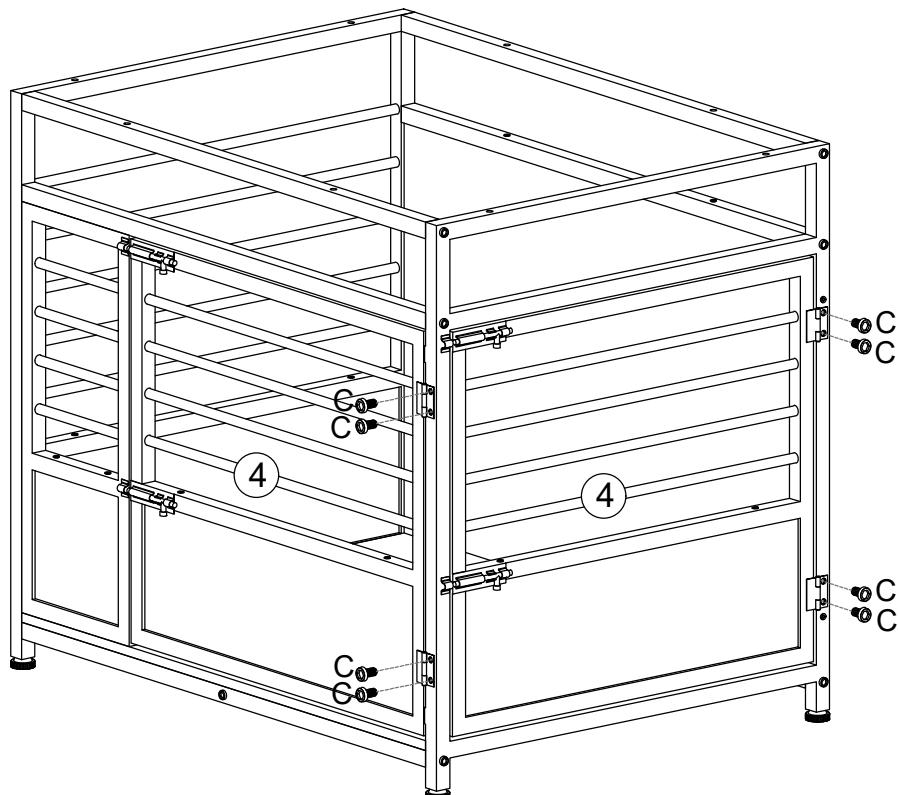


4mm C x8

STEP 10

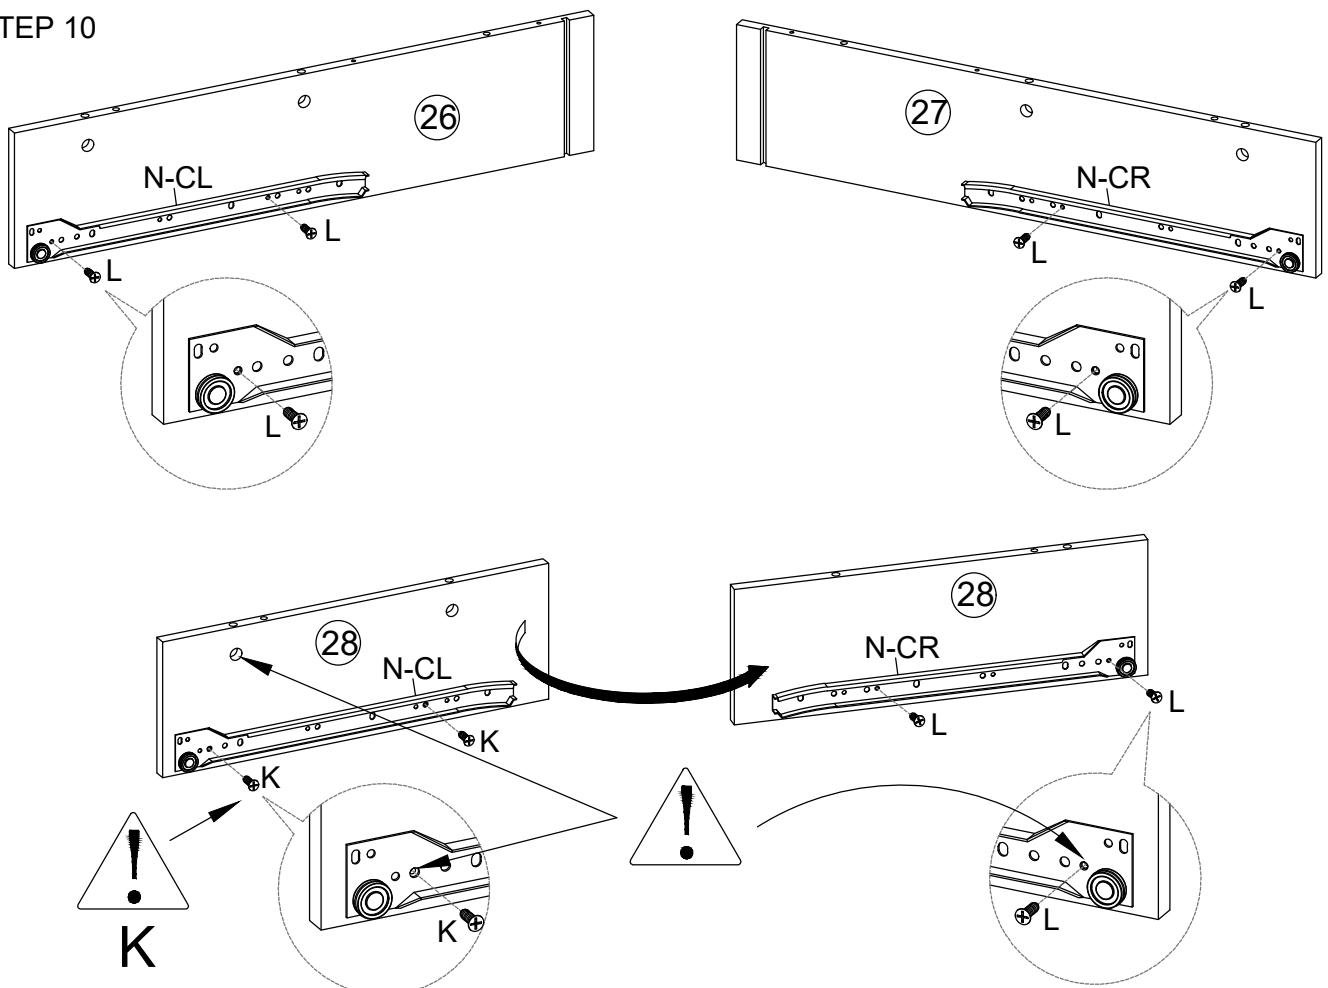


N x2 K x2 L x6

STEP 11

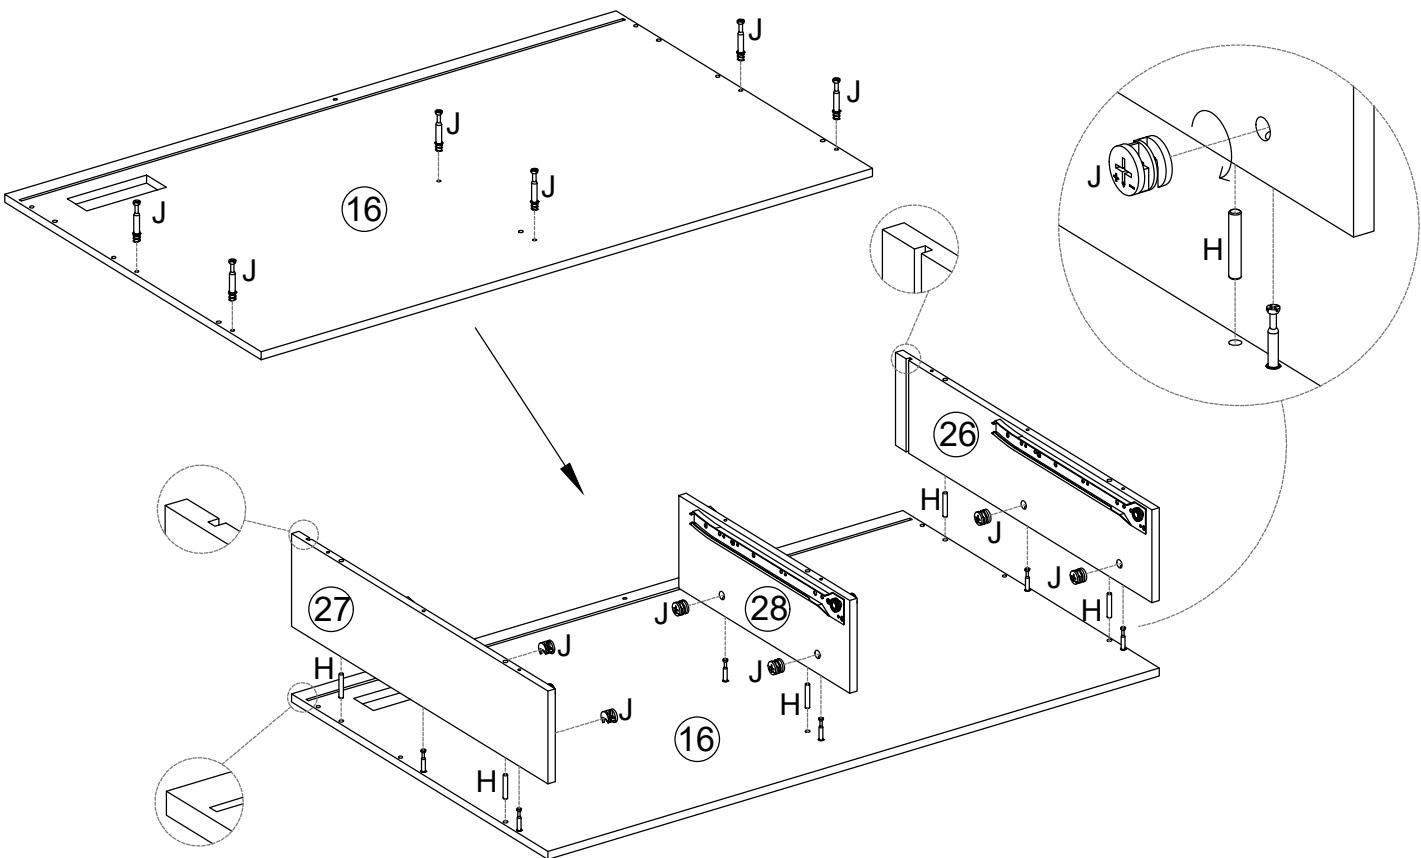


J x6 **H** x5

STEP 12

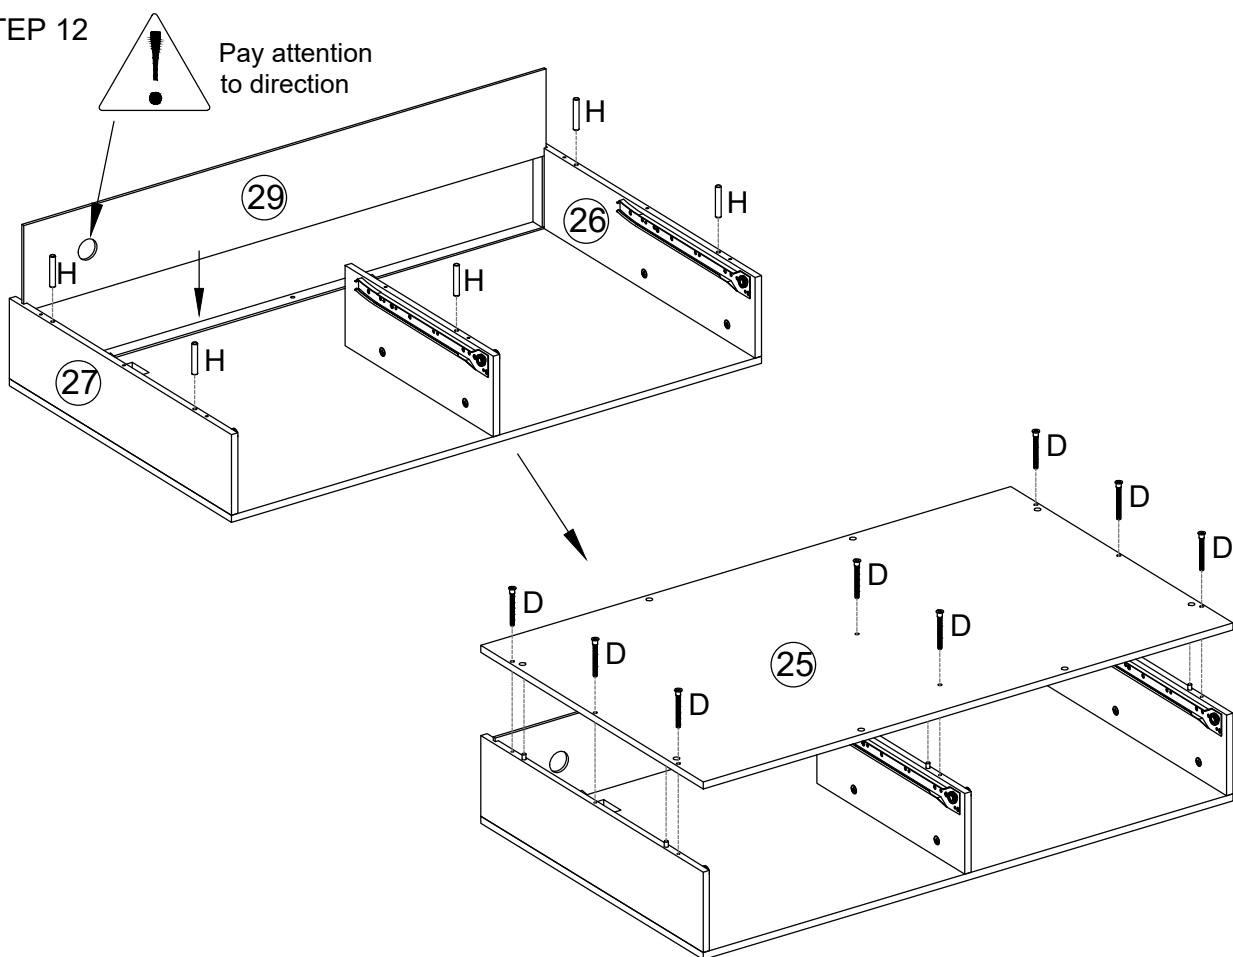


3mm **D** x8 **H** x5

STEP 13

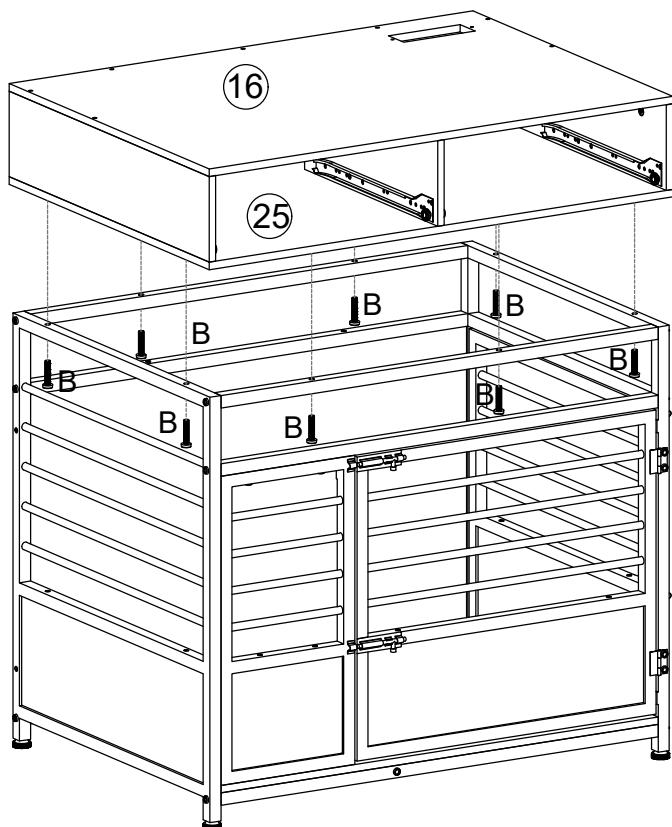


4mm B x8

STEP 14

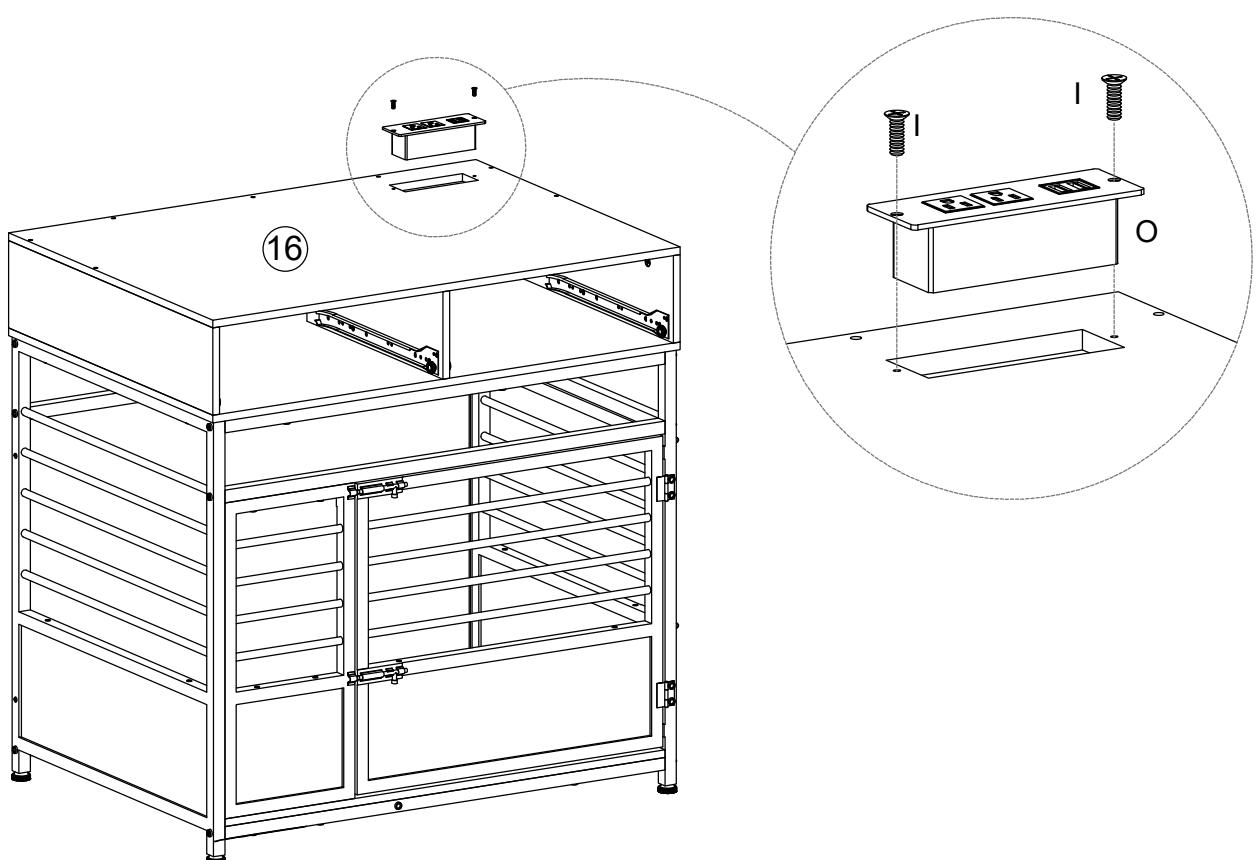


x1 I x2

STEP 15

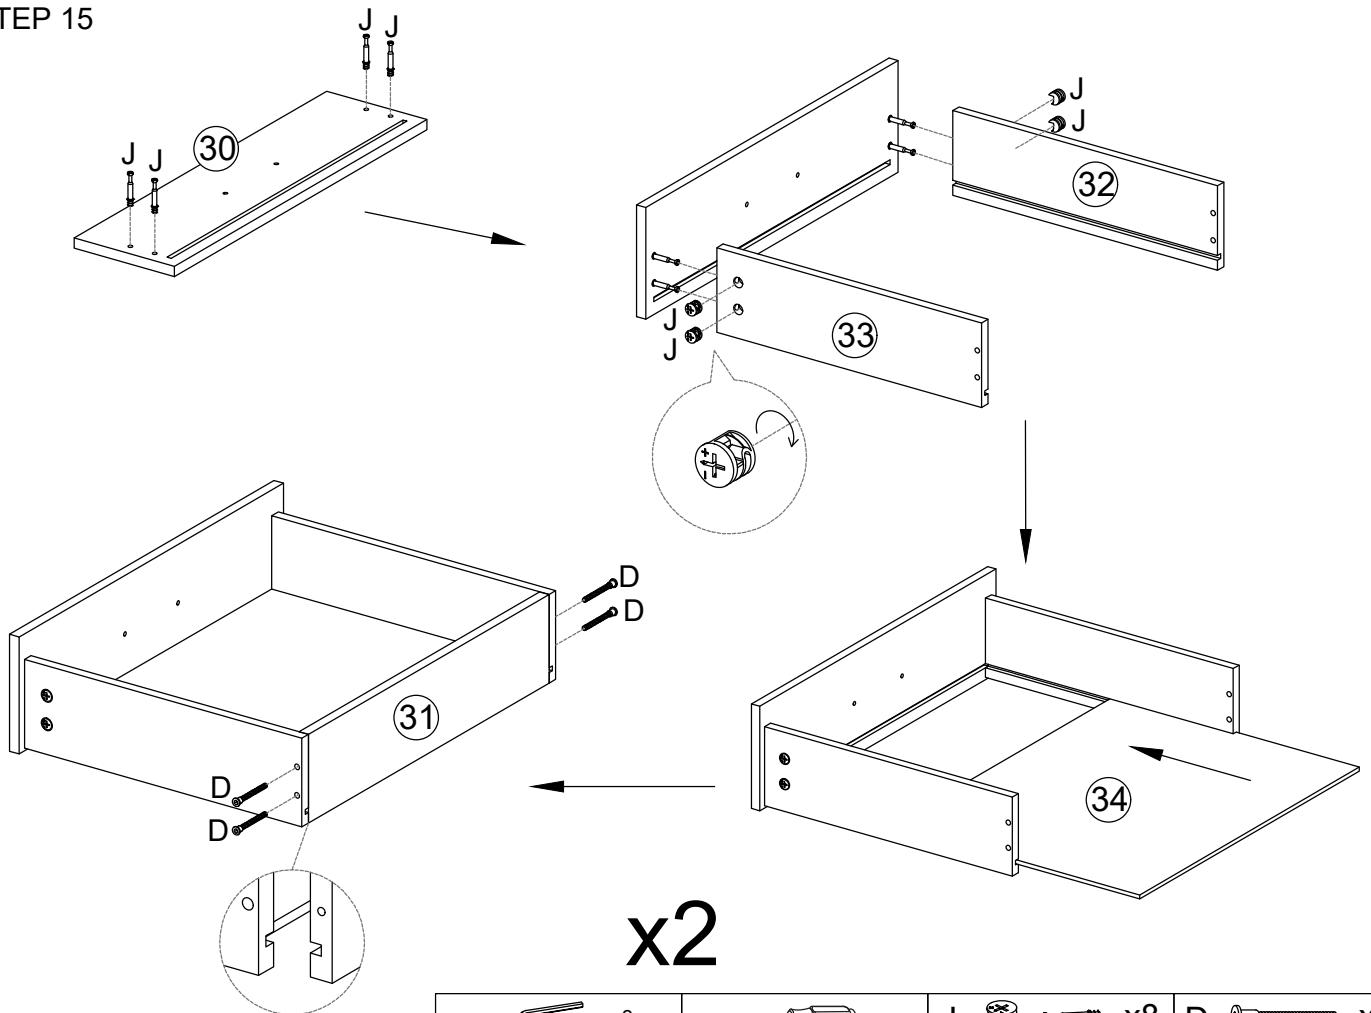


STEP 16

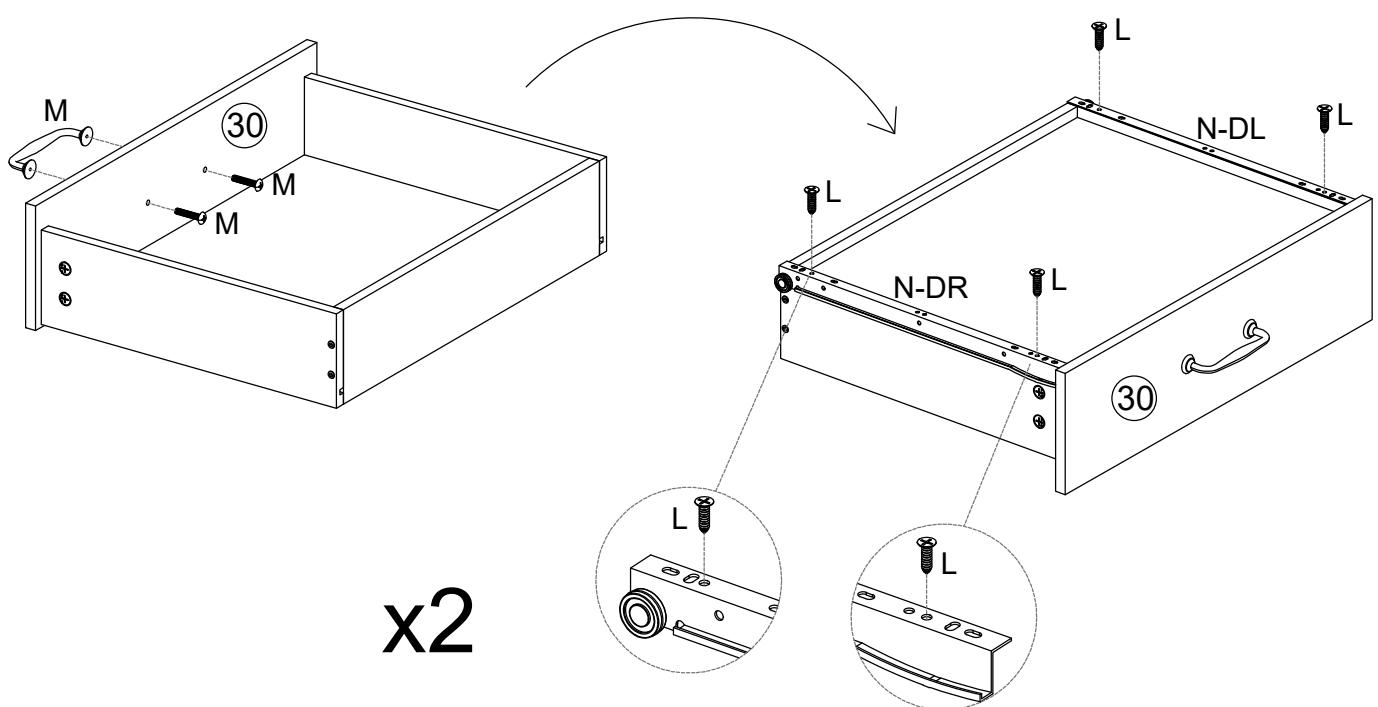


	L	x8	N		x2	M		x2
--	---	----	---	--	----	---	--	----

STEP 17

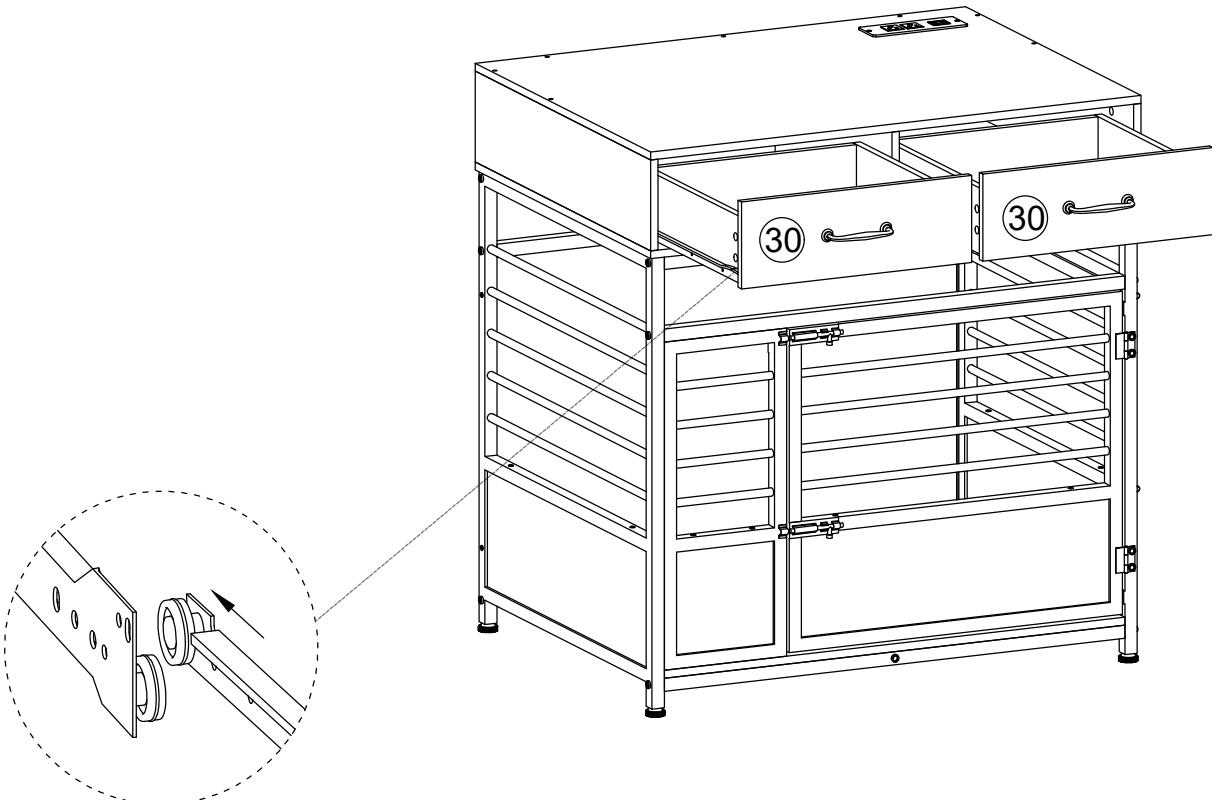


STEP 18

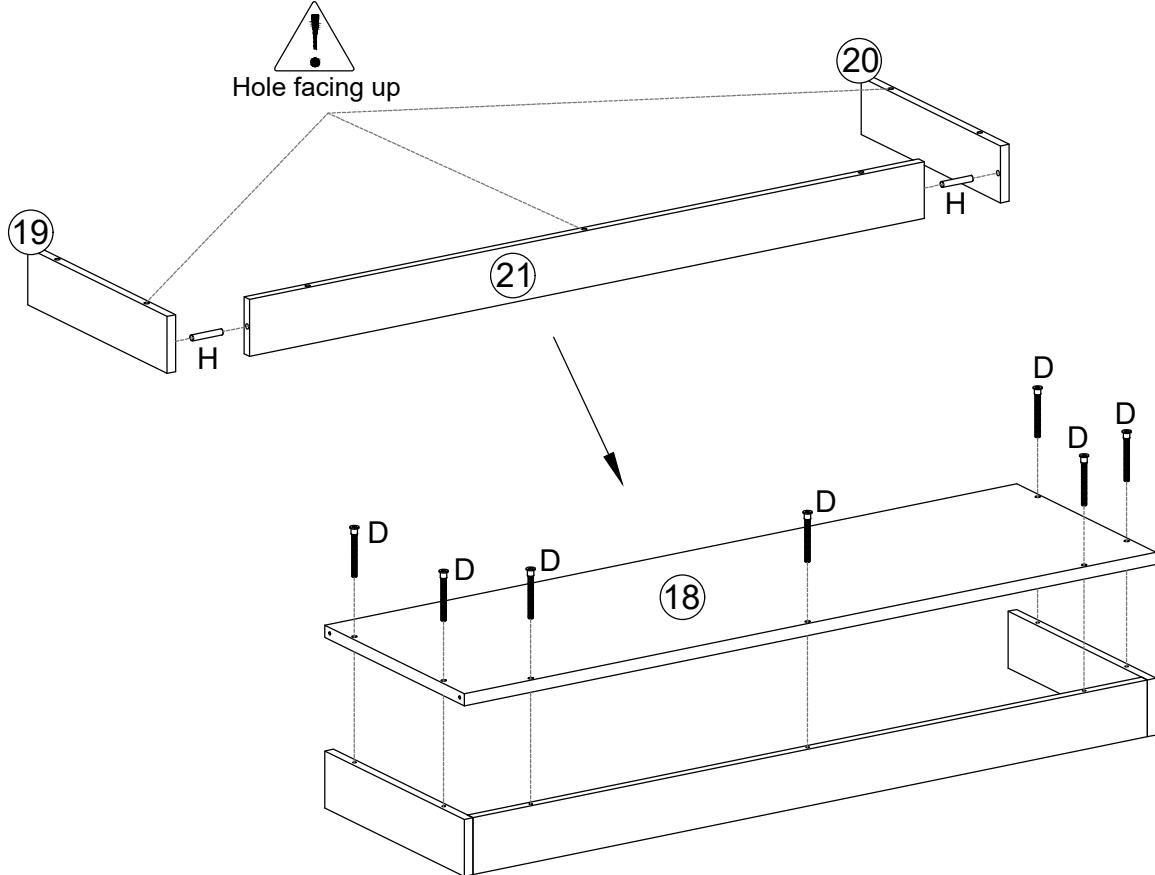

x3


3mm D x21 H x6

STEP 19

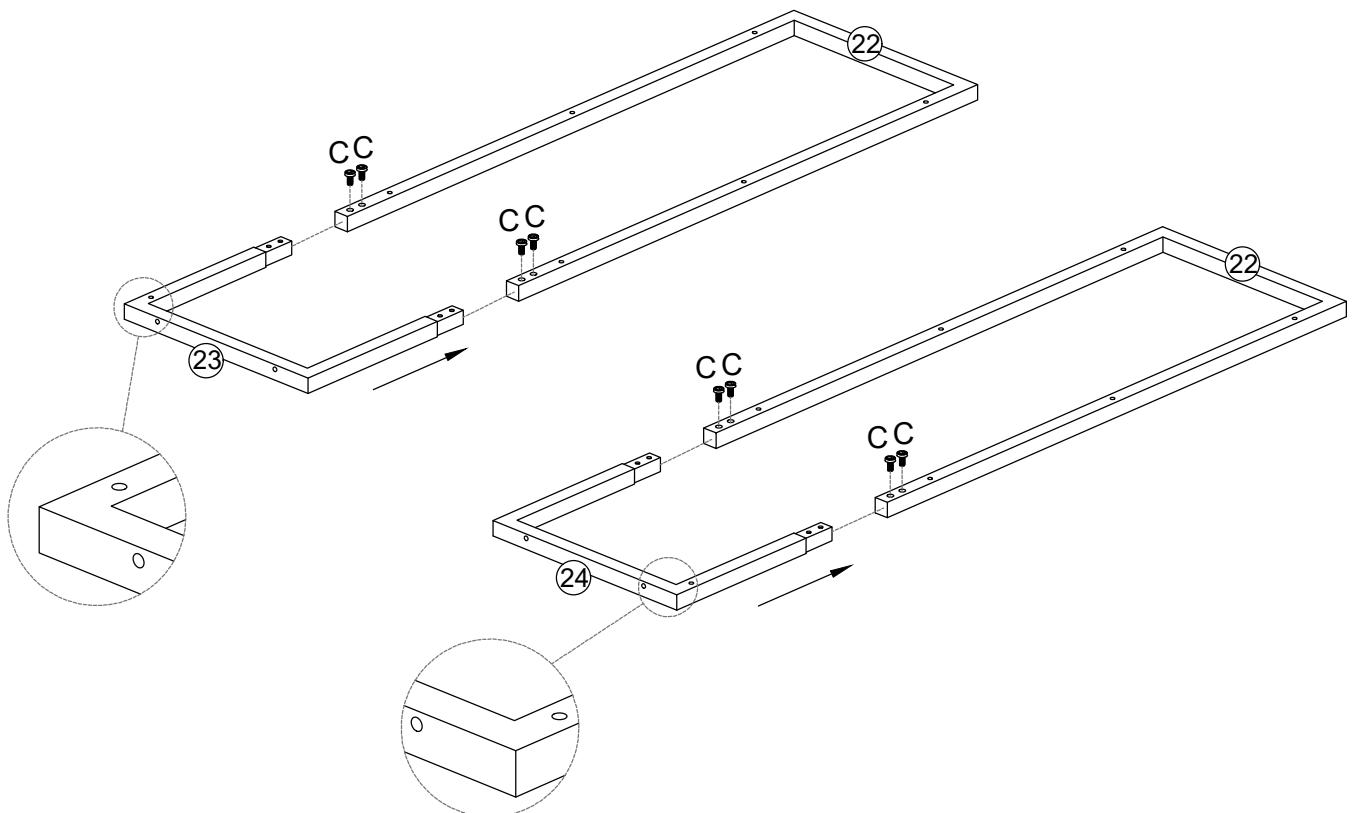

4mm C x8


STEP 20

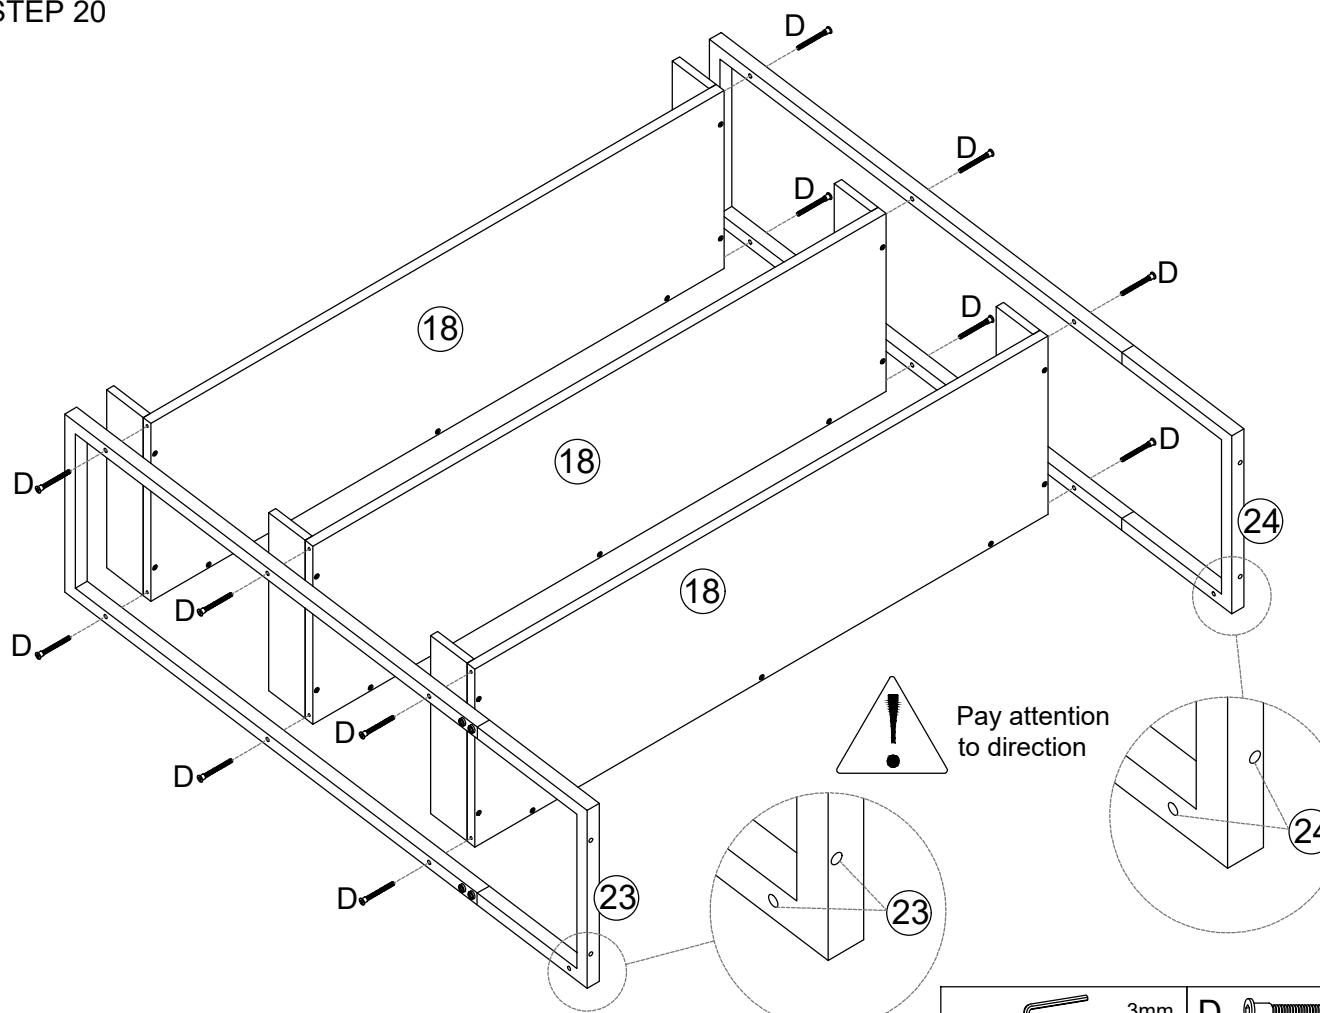

Pay attention
to direction


3mm D x12

STEP 21

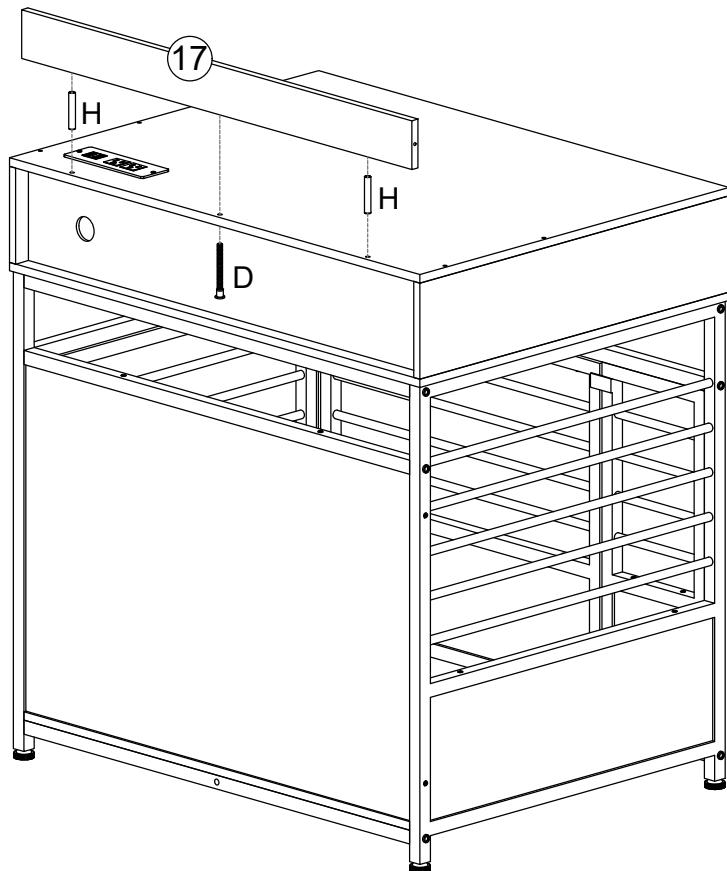

3mm D x1 H x2

STEP 22

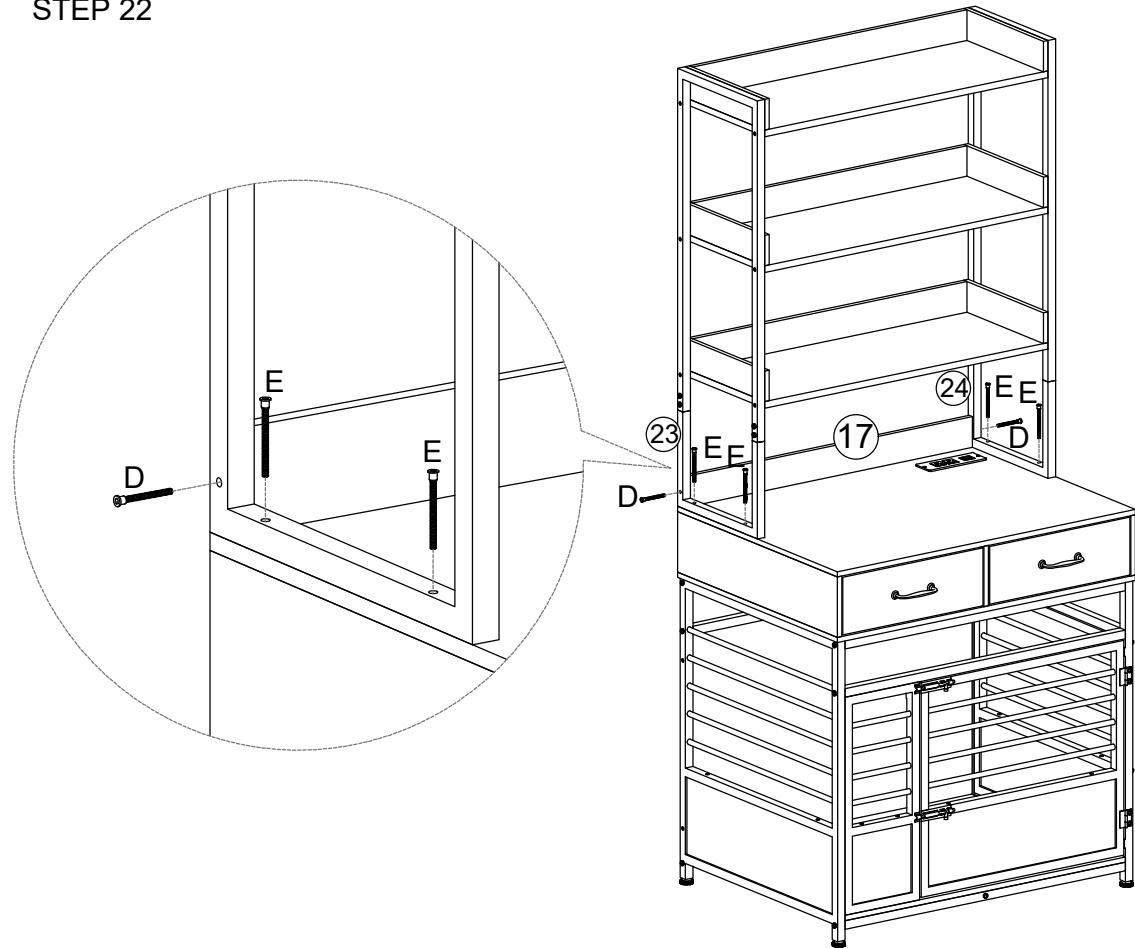


3mm E x4 D x2

STEP 23



Attention: For safety and stability, we suggest you have to secure the anti-tip accessories to the wall to prevent tipping, injury, and property damage.

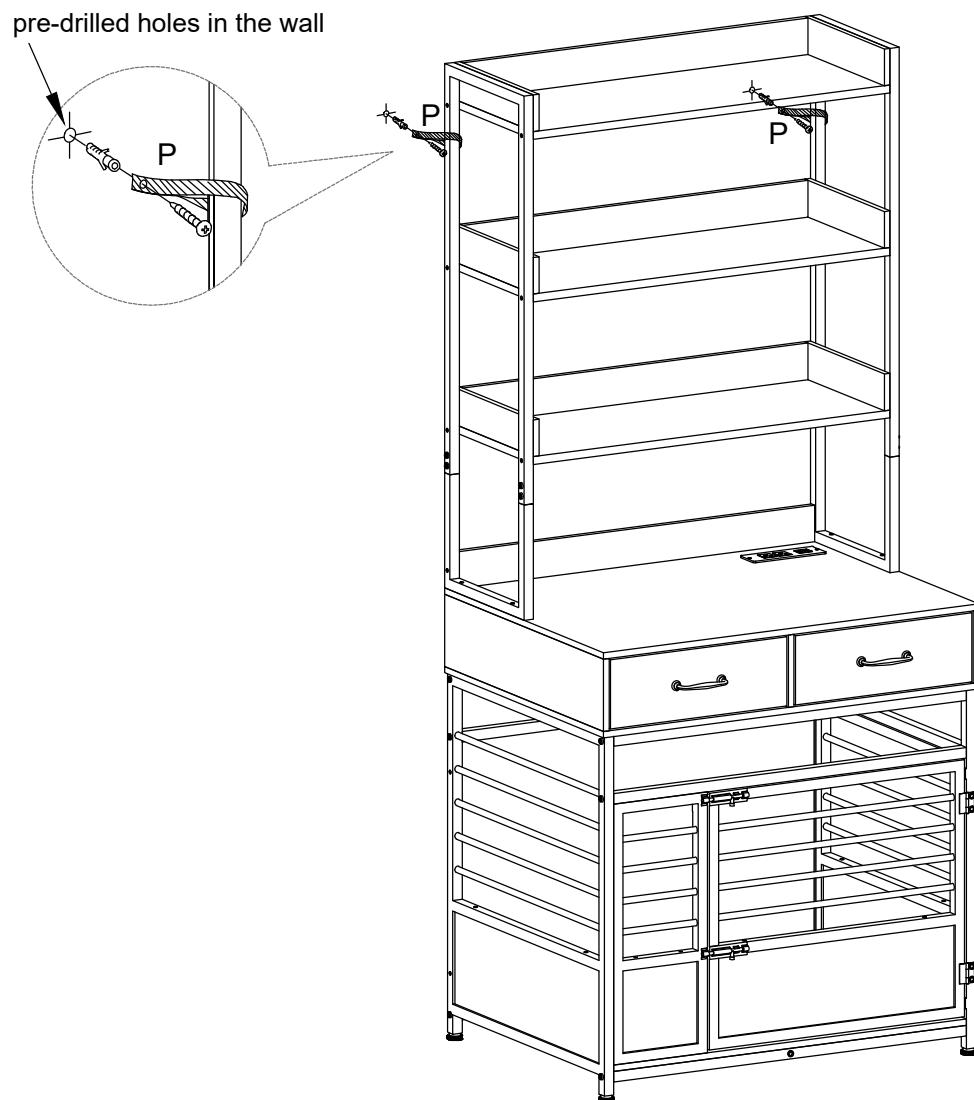

Installation Completed

P		x2
---	--	----